



An Oshkosh Corporation Company



www.Discount-Equipment.com

Service & Maintenance Manual


Model 260MRT

PVC 1910

31215866

November 22, 2019 - Rev A

 ANSI



PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter your information to help us locate the right manual or parts for your machine.

* Brand:

* Model:

* Serial:

* Part Number:

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in the information below to help us locate the right part for your machine.

| | |
|---------------|----------------------|
| Manufacturer: | <input type="text"/> |
| Model: | <input type="text"/> |
| Serial: | <input type="text"/> |
| Part Number: | <input type="text"/> |
| Description: | <input type="text"/> |
| Quantity: | <input type="text"/> |
| Notes: | <input type="text"/> |

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION A. INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS

GENERAL

This section contains the general safety precautions which must be observed during maintenance of the mobile elevating work platform. It is of utmost importance that maintenance personnel pay strict attention to these warnings and precautions to avoid possible injury to themselves or others, or damage to the equipment. A maintenance program must be followed to ensure that the machine is safe to operate.

⚠ WARNING

MODIFICATION OR ALTERATION OF A MOBILE ELEVATING WORK PLATFORM SHALL BE MADE ONLY WITH WRITTEN PERMISSION FROM THE MANUFACTURER.

The specific precautions to be observed during maintenance are inserted at the appropriate point in the manual. These precautions are, for the most part, those that apply when servicing hydraulic and larger machine component parts.

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

⚠ WARNING

SINCE THE MACHINE MANUFACTURER HAS NO DIRECT CONTROL OVER THE FIELD INSPECTION AND MAINTENANCE, SAFETY IN THIS AREA RESPONSIBILITY OF THE OWNER/OPERATOR.

HYDRAULIC SYSTEM SAFETY

It should be noted that the machines hydraulic systems operate at extremely high potentially dangerous pressures. Every effort should be made to relieve any system pressure prior to disconnecting or removing any portion of the system.



MAINTENANCE

⚠ WARNING

FAILURE TO COMPLY WITH SAFETY PRECAUTIONS LISTED IN THIS SECTION COULD RESULT IN MACHINE DAMAGE, PERSONNEL INJURY OR DEATH AND IS A SAFETY VIOLATION.

- USE ONLY REPLACEMENT PARTS OR COMPONENTS THAT ARE APPROVED BY JLG. TO BE CONSIDERED APPROVED, REPLACEMENT PARTS OR COMPONENTS MUST BE IDENTICAL OR EQUIVALENT TO ORIGINAL PARTS OR COMPONENTS.
- NO SMOKING IS MANDATORY. NEVER REFUEL DURING ELECTRICAL STORMS. ENSURE THAT FUEL CAP IS CLOSED AND SECURE AT ALL OTHER TIMES.
- REMOVE ALL RINGS, WATCHES AND JEWELRY WHEN PERFORMING ANY MAINTENANCE.
- DO NOT WEAR LONG HAIR UNRESTRAINED, OR LOOSE-FITTING CLOTHING AND NECKTIES WHICH ARE APT TO BECOME CAUGHT ON OR ENTANGLED IN EQUIPMENT.
- OBSERVE AND OBEY ALL WARNINGS AND CAUTIONS ON MACHINE AND IN SERVICE MANUAL.
- KEEP OIL, GREASE, WATER, ETC. WIPED FROM STANDING SURFACES AND HAND HOLDS.
- USE CAUTION WHEN CHECKING A HOT, PRESSURIZED COOLANT SYSTEM.
- NEVER WORK UNDER AN ELEVATED SCISSOR UNTIL PLATFORM HAS BEEN SAFELY RESTRAINED FROM ANY MOVEMENT BY BLOCKING OR OVERHEAD SLING, OR SAFETY PROP HAS BEEN ENGAGED.
- BEFORE MAKING ADJUSTMENTS, LUBRICATING OR PERFORMING ANY OTHER MAINTENANCE, SHUT OFF ALL POWER CONTROLS.
- BATTERY SHOULD ALWAYS BE DISCONNECTED DURING REPLACEMENT OF ELECTRICAL COMPONENTS.
- KEEP ALL SUPPORT EQUIPMENT AND ATTACHMENTS STOWED IN THEIR PROPER PLACE.
- USE ONLY APPROVED, NONFLAMMABLE CLEANING SOLVENTS.

REVISION LOG

Original Issue

A - November 22, 2019

TABLE OF CONTENTS

| SUBJECT - SECTION, PARAGRAPH | PAGE NO. |
|--|----------|
| SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS | |
| A General | A-1 |
| Hydraulic System Safety | A-1 |
| Maintenance | A-1 |
| SECTION 1 - SPECIFICATIONS | |
| 1.1 Operating Specifications | 1-1 |
| 1.2 Capacities | 1-1 |
| 1.3 Component Data | 1-1 |
| Engine | 1-1 |
| Tires | 1-2 |
| Pumps | 1-2 |
| Steer/Drive System | 1-2 |
| Hydraulic Filter - Inline | 1-2 |
| Torque Requirement | 1-2 |
| 1.4 Lubrication | 1-2 |
| Hydraulic Oil | 1-2 |
| 1.5 Lubrication Specifications | 1-3 |
| 1.6 Cylinder Specifications | 1-3 |
| 1.7 Pressure Settings | 1-3 |
| 1.8 Limit Switches | 1-4 |
| 1.9 Major Component Weights | 1-4 |
| 1.10 Critical Stability Weights | 1-4 |
| 1.11 Serial Number Locations | 1-5 |
| 1.12 ThreadLocking Compound | 1-8 |
| 1.13 Torque Charts | 1-9 |
| SAE Fastener Torque Chart | 1-9 |
| SAE Fastener Torque Chart (Continued) | 1-10 |
| SAE Fastener Torque Chart (Continued) | 1-11 |
| SAE Fastener Torque Chart (Continued) | 1-12 |
| SAE Fastener Torque Chart (Continued) | 1-13 |
| SAE Fastener Torque Chart (Continued) | 1-14 |
| Metric Fastener Torque Chart | 1-15 |
| Metric Fastener Torque Chart (Continued) | 1-16 |
| Metric Fastener Torque Chart (Continued) | 1-17 |
| Metric Fastener Torque Chart (Continued) | 1-18 |
| SECTION 2 - PROCEDURES | |
| 2.1 Machine Preparation, Inspection And Maintenance | 2-1 |
| General | 2-1 |
| Preparation, Inspection and Maintenance | 2-1 |
| Pre-Start Inspection | 2-1 |
| Pre-Delivery Inspection and Frequent Inspection | 2-1 |
| Annual Machine Inspection | 2-1 |
| Preventative Maintenance | 2-1 |

TABLE OF CONTENTS

| | | |
|------|---|------|
| 2.2 | Servicing And Maintenance Guidelines..... | 2-3 |
| | General | 2-3 |
| | Safety and Workmanship | 2-3 |
| | Cleanliness | 2-3 |
| | Components Removal and Installation | 2-3 |
| | Component Disassembly and Reassembly..... | 2-3 |
| | Pressure-Fit Parts | 2-4 |
| | Bearings | 2-4 |
| | Gaskets | 2-4 |
| | Bolt Usage and Torque Application | 2-4 |
| | Hydraulic Lines and Electrical Wiring | 2-4 |
| | Hydraulic System | 2-4 |
| | Lubrication..... | 2-4 |
| | Batteries | 2-4 |
| | Lubrication and Servicing..... | 2-4 |
| 2.3 | Preventive Maintenance and Inspection Schedule | 2-5 |
| 2.4 | Lubrication Information | 2-9 |
| | Hydraulic System | 2-9 |
| | Hydraulic Oil | 2-9 |
| | Changing Hydraulic Oil | 2-9 |
| | Lubrication Specifications | 2-9 |
| 2.5 | Throttle Actuator Adjustment..... | 2-10 |
| | Air Gap Setting | 2-10 |
| | Diagnosis of Actuator..... | 2-11 |
| | Adjustment of the Actuator | 2-12 |
| | Adjustment Verification of Actuator..... | 2-13 |
| 2.6 | Cylinders - Theory of Operation | 2-14 |
| 2.7 | Valves - Theory of Operation | 2-14 |
| | Solenoid Control Valves (Bang-Bang) | 2-14 |
| | Proportional Control Valves..... | 2-14 |
| | Relief Valves..... | 2-14 |
| | Crossover Relief Valves | 2-14 |
| 2.8 | Component Functional Description..... | 2-15 |
| | Hydraulic Pump | 2-15 |
| | Lift Cylinder Counterbalance/Manual Descent Valve | 2-15 |
| 2.9 | Wear Pads..... | 2-15 |
| | Sliding Pads | 2-15 |
| 2.10 | Cylinder Checking Procedures | 2-15 |
| | Cylinder w/o Counterbalance Valves - Steer Cylinder | 2-15 |
| | Cylinders w/Single Counterbalance Valves - Lift Cylinder..... | 2-16 |
| 2.11 | Lift Cylinder Removal and Installation | 2-16 |
| | Removal | 2-16 |
| | Installation | 2-17 |
| 2.12 | Cylinder Repair | 2-21 |
| | Disassembly..... | 2-21 |
| | Cleaning and Inspection | 2-22 |
| | Assembly | 2-23 |
| 2.13 | Steer Cylinder Repair | 2-26 |
| | Removal | 2-26 |
| | Disassembly..... | 2-26 |
| | Cleaning and Inspection | 2-26 |
| | Assembly | 2-27 |
| | Installation | 2-27 |
| 2.14 | Limit Switch Adjustment..... | 2-30 |
| | Platform Limit Switch..... | 2-30 |

| | | |
|------|---|------|
| 2.15 | Pressure Setting Procedures | 2-30 |
| | Main Pressure Adjustment | 2-30 |
| | Lift Relief Adjustments | 2-30 |
| | Steer Relief Adjustment | 2-30 |
| | Leveling Jack Relief Adjustment | 2-30 |
| | Main Valve Components | 2-31 |
| | Leveling Jacks Directional Valve | 2-32 |
| 2.16 | Drive Pump Start-up Procedure | 2-33 |
| 2.17 | Automatic Choke - Field Adjustment (DF-750) | 2-34 |
| | Inspection | 2-34 |
| | Adjustments | 2-34 |
| | Reassembly | 2-34 |
| | Diesel Engine | 2-34 |
| 2.18 | Joystick Controller | 2-35 |
| 2.19 | Tilt Sensor | 2-36 |
| | Tilt Sensor, JLG PN 400021: | 2-36 |
| 2.20 | Calibrations | 2-37 |
| | Tilt Sensor Calibration: | 2-37 |
| | Joystick Calibration(Software 1.5 and Higher) | 2-38 |
| 2.21 | Electronic Control System | 2-39 |
| | Hand Held Analyzer | 2-39 |
| | To Connect the Hand Held Analyzer | 2-39 |
| | Using the Analyzer | 2-40 |
| | Changing the Access Level of the Hand Held Analyzer | 2-41 |
| | Adjusting Parameters Using the Hand Held Analyzer | 2-42 |
| | Machine Setup | 2-42 |
| 2.22 | Flash Codes and Descriptions | 2-43 |
| 2.23 | Machine Model Adjustment | 2-50 |
| 2.24 | Machine Configuration Programming Information | 2-51 |

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

| | | |
|-----|---|------|
| 3.1 | General | 3-1 |
| 3.2 | Multimeter Basics | 3-1 |
| | Grounding | 3-1 |
| | Backprobing | 3-1 |
| | Min/Max | 3-1 |
| | Polarity | 3-1 |
| | Scale | 3-1 |
| | Voltage Measurement | 3-2 |
| | Resistance Measurement | 3-2 |
| | Continuity Measurement | 3-3 |
| | Current Measurement | 3-3 |
| | Continuity Measurement Over Long Distances | 3-4 |
| | Requirements: | 3-4 |
| | Procedure | 3-4 |
| 3.3 | Applying Silicone Dielectric Compound To Amp Connectors | 3-5 |
| | Assembly | 3-6 |
| | Disassembly | 3-7 |
| | Wedge Lock | 3-7 |
| | Service - Voltage Reading | 3-8 |
| 3.4 | Working With Deutsch Connectors | 3-9 |
| | DT/DTP Series Assembly | 3-9 |
| | DT/DTP Series Disassembly | 3-9 |
| | HD30/HDP20 Series Assembly | 3-10 |
| | HD30/HDP20 Series Disassembly | 3-10 |

TABLE OF CONTENTS

| | | |
|-----|---|------|
| 3.5 | Switches | 3-11 |
| | Basic check | 3-11 |
| | Limit Switches | 3-11 |
| | Automatic Switches | 3-12 |
| | Switch Wiring - Low Side, High Side | 3-12 |
| 3.6 | Troubleshooting | 3-12 |
| | General | 3-12 |
| | Troubleshooting Information | 3-12 |
| | Hydraulic Circuit Checks | 3-12 |
| 3.7 | Electrical Schematics | 3-22 |

LIST OF FIGURES

| FIGURE NO. | TITLE | PAGE NO. |
|------------|--|----------|
| 1-1. | Serial Number Location | 1-5 |
| 1-2. | Lubrication Diagram | 1-6 |
| 1-3. | Operating Temperature Specifications - Kubota | 1-7 |
| 2-1. | Throttle Assembly and Linkages | 2-10 |
| 2-2. | Air Gap Setting | 2-10 |
| 2-4. | Adjustment Verification of Actuator | 2-13 |
| 2-5. | Arms and Platform Positioning and Support, Cylinder Repair | 2-18 |
| 2-6. | Lift Cylinder Removal - Cylinder Support | 2-19 |
| 2-7. | Lift Cylinder | 2-20 |
| 2-8. | Cylinder Barrel Support | 2-21 |
| 2-9. | Capscrew Removal | 2-21 |
| 2-10. | Cylinder Rod Support | 2-21 |
| 2-11. | Tapered Bushing Removal | 2-22 |
| 2-12. | Rod Seal Installation | 2-23 |
| 2-13. | Wiper Seal Installation | 2-23 |
| 2-14. | Installation of Head Seal Kit | 2-23 |
| 2-15. | Piston Seal Kit Installation | 2-24 |
| 2-16. | Tapered Bushing Installation | 2-24 |
| 2-17. | Seating the Tapered Bearing | 2-24 |
| 2-18. | Poly-Pak Piston Seal Installation | 2-25 |
| 2-19. | Rod Assembly Installation | 2-25 |
| 2-20. | Steer Cylinder Assembly | 2-28 |
| 2-21. | Leveling Jack Assembly | 2-29 |
| 2-22. | Valve Components | 2-31 |
| 2-23. | Leveling Jacks Directional Valve | 2-32 |
| 2-24. | Automatic Choke Adjustment (DF-750) | 2-34 |
| 2-25. | Tilt Sensor Location | 2-36 |
| 2-26. | Tilt Sensor Removal | 2-36 |
| 2-27. | Hand Held Analyzer | 2-39 |
| 2-28. | Analyzer Flow Chart - Sheet 1 of 5 (Version P1.14) | 2-45 |
| 2-29. | Analyzer Flow Chart - Sheet 2 of 5 (Version P1.14) | 2-46 |
| 2-30. | Analyzer Flow Chart - Sheet 3 of 5 (Version P1.14) | 2-47 |
| 2-31. | Analyzer Flow Chart - Sheet 4 of 5 (Version P1.14) | 2-48 |
| 2-32. | Analyzer Flow Chart - Sheet 5 of 5 (Version P1.14) | 2-49 |
| 3-1. | Voltage Measurement (DC) | 3-2 |
| 3-2. | Resistance Measurement | 3-2 |
| 3-3. | Continuity Measurement | 3-3 |
| 3-4. | Current Measurement (DC) | 3-3 |
| 3-5. | AMP Connector | 3-5 |
| 3-6. | Connector Assembly (1 of 4) | 3-6 |
| 3-7. | Connector Assembly (2 of 4) | 3-6 |
| 3-8. | Connector Assembly (3 of 4) | 3-6 |
| 3-9. | Connector Assembly (4 of 4) | 3-6 |
| 3-10. | Connector Disassembly | 3-7 |
| 3-11. | Connector Installation | 3-8 |
| 3-12. | DT/DTP Contact Installation | 3-9 |
| 3-13. | DT/DTP Contact Removal | 3-9 |
| 3-14. | HD/HDP Contact Installation | 3-10 |
| 3-15. | HD/HDP Locking Contacts Into Position | 3-10 |
| 3-16. | HD/HDP Contact Removal | 3-10 |
| 3-17. | HD/HDP Unlocking Contacts | 3-10 |
| 3-18. | Electrical Schematic - Sheet 1 of 4 | 3-22 |
| 3-19. | Electrical Schematic - Sheet 2 of 4 | 3-23 |
| 3-20. | Electrical Schematic - Sheet 3 of 4 | 3-24 |

LIST OF FIGURES

| | | |
|-------|--|------|
| 3-21. | Electrical Schematic - Sheet 4 of 4 | 3-25 |
| 3-22. | Electrical Schematic - (Generator) - Sheet 1 of 4..... | 3-26 |
| 3-23. | Electrical Schematic - (Generator) - Sheet 2 of 4..... | 3-27 |
| 3-24. | Electrical Schematic - (Generator) - Sheet 3 of 4..... | 3-28 |
| 3-25. | Electrical Schematic - (Generator) - Sheet 4 of 4..... | 3-29 |
| 3-26. | Electrical Components Installation - Sheet 1 | 3-30 |
| 3-27. | Electrical Components Installation - Sheet 2..... | 3-31 |
| 3-28. | Hydraulic Schematic..... | 3-32 |
| 3-29. | Hydraulic Diagram (Generator)..... | 3-33 |
| 3-30. | Hydraulic Diagram (Leveling Jacks) | 3-34 |

LIST OF TABLES

| TABLE NO. | TITLE | PAGE NO. |
|-----------|---|----------|
| 1-1 | WG752-E3 Kubota Gasoline/LP | 1-1 |
| 1-2 | D1005 Kubota Diesel..... | 1-2 |
| 1-3 | Mobilfluid 424..... | 1-2 |
| 1-4 | Mobil DTE 10 Excel 32..... | 1-3 |
| 1-5 | UCon Hydrolube HP-5046..... | 1-3 |
| 1-6 | Mobil EAL 224 H..... | 1-3 |
| 1-7 | Exxon Univis HVI 26 (Arctic)..... | 1-3 |
| 1-8 | Lubrication Chart..... | 1-6 |
| 2-1 | Inspection and Maintenance..... | 2-2 |
| 2-2 | Preventive Maintenance and Safety Inspection..... | 2-6 |
| 2-3 | Cylinder Component Torque Specifications..... | 2-25 |
| 2-4 | Holding Valve Torque Specifications..... | 2-25 |
| 2-5 | Leveling Jacks Directional Valve Torque Specs..... | 2-32 |
| 2-6 | Joystick Specifications..... | 2-35 |
| 2-7 | Joystick Plug Loading Chart..... | 2-35 |
| 2-8 | Tilt Sensor Harness..... | 2-36 |
| 2-9 | Help Messages and Flash Codes - Software P1.14..... | 2-43 |
| 2-10 | Machine Model Adjustment..... | 2-50 |
| 2-11 | Machine Configuration Programming Information - Software Version P1.14..... | 2-51 |
| 3-1 | Elevation System Troubleshooting..... | 3-13 |
| 3-2 | Chassis Troubleshooting..... | 3-15 |
| 3-3 | Hydraulic System Troubleshooting..... | 3-18 |
| 3-4 | Electrical System Troubleshooting..... | 3-19 |

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter your information to search for manuals and parts.

* Brand:

* Model:

* Serial:

* Part Number:

SEARCH

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in the following information:

Manufacturer:

Model:

Description:

Quantity:

Part Number:

Part Name:

Part Description:

Part Category:

Part Location:

Part Status:

Part Condition:

Part Material:

Part Color:

Part Weight:

Part Dimensions:

Part Price:

Part Notes:

Submit

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on once of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION 1. SPECIFICATIONS

1.1 OPERATING SPECIFICATIONS

| | |
|---|----------------------------------|
| Gross Machine Weight (Approximate) | 8160 lb (3701 kg) |
| Machine Height: | |
| Fully Elevated | 26 ft (8 m) |
| Stowed | 7.8 ft (2.4 m) |
| Platform Height (Platform Stowed) | |
| Standard | 4 ft (1.28 m) |
| Long Leveling Jacks Option (Australia Only) | 4.2 ft (1.31 m) |
| Platform Railing Height | 45.7 in. (1.1 m) |
| Platform Dimensions (Extension Retracted) | 5.5 x 8.5 ft (1.6 x 2.6 m) |
| Platform Dimensions (Extension Extended) | 5.5 ft x 12.5 ft (1.6 x 3.8 m) |
| Platform Capacity | |
| ANSI | 1250 lb (568 kg) |
| CE/AUS | 1256 lb (570 kg) |
| Platform Extension Capacity | |
| ANSI | 300 lb (136 kg) |
| CE/AUS | 308 lb (140 kg) |
| Max Travel Speed | 2.8 mph (4.5 km/h) |
| Max Stowed Travel Grade: | |
| Gradeability | 35% (19°) |
| Slideslope | 8.75% (5°) |
| Max Slope: | |
| Side to Side | 3° |
| Fore & Aft | 5° |
| Long Leveling Jacks Option (AUS Only) | 6° |
| Turning Radius: | |
| Inside | 6.9 ft (2.13 m) |
| Outside | 12.69 ft (3.87 m) |
| Lift Speed: (no load) | |
| Dual Fuel: | |
| Up | 25-29 sec |
| Down | 21-27 sec |
| Diesel: | |
| Up | 32-34 sec |
| Down | 21-27 sec |
| Max Tire Load | 2600 lb (1180 kg) |
| Max Ground Bearing Pressure | 33 psi (2.3 kg/cm ²) |
| Max Hydraulic system Pressure | 3300 psi (234 bar) |
| Electrical System Voltage | 12V |
| Wheelbase | 78 in. (2 m) |
| Maximum Drive Speed | 3.5 mph (5.6 km/h) |
| Elevation Switch Height (Drive speed slow) | 90 - 96 in (2.3 - 2.4 m) |
| Ground Clearance | 8 in. (20.3 cm) |
| Max Windspeed | 28 mph (12.5 m/s) |

| | |
|----------------------------------|----------------|
| Max Horizontal Manual Side Force | |
| ANSI | 187 lb (832 N) |
| CE/AUS | 90 lb (400 N) |
| Number of Persons | 2 |

1.2 CAPACITIES

| | |
|--------------------|------------------|
| Fuel Tank | 7.2 gal (27.2 L) |
| Hydraulic Oil Tank | 15 gal (56.8 L) |
| Engine Crankcase: | |
| Gasoline Engine | 3.4 qts (3.25 L) |
| Diesel Engine | 5.39 qts (5.1 L) |
| Engine Coolant: | |
| Gasoline Engine | 0.61 gal (2.3 L) |
| Diesel Engine | 1.5 gal (5.7 L) |

1.3 COMPONENT DATA

Engine

Table 1-1. WG752-GL-E3 Kubota Gasoline/LP

| Emissions | CARB, EPA Phase 3 |
|-------------------------|--|
| Type | Gasoline-87 Octane minimum -Ethanol/Gas Mix -10% maximum -Methanol/Gas Mix -5% maximum -LP (Liquid Petroleum) |
| Number of Cylinders | 3 |
| Max Output Power | |
| Gas | 24.8 HP (18.5 kW) @ 3600 rpm |
| LP | 23.8 HP (17.7 kW) @ 3600 rpm |
| Low RPM Set | 1500 rpm |
| High RPM Set | 3600 rpm |
| Max Output Torque | |
| Gas | 40.5 ft.lb. (54.9 Nm) @ 2400 rpm |
| LP | 38.3 ft.lb. (52.0 Nm) @ 2400 rpm |
| Max Output Power | |
| Gas | 18.5 Hp (24.8 kW) @ 3600 rpm |
| LP | 17.7 Hp (23.8 kW) @ 3600 rpm |
| Engine Oil Capacity | 0.86 gal (3.25 L) |
| Engine Coolant Capacity | 0.61 gal (2.3 L) |
| Starter Rating | 12V, 0.7 kW |
| Alternator | 12V, 40 Amp |
| Fuel Consumption: | |
| Low RPM | 1.3 gph (4.9 Lph) |
| High RPM | 2.4 gph (9 Lph) |

Table 1-2. D1005 Kubota Diesel

| | |
|---------------------|---|
| Emissions | CARB, EPA Tier 4 Final and EU Stage V |
| Fuel Type | Diesel: -Low Sulfur (<500 ppm) -Ultra Low Sulfur (15 ppm) (Required to meet Stage V) -Up to 5% biodiesel |
| Number of Cylinders | 3 |
| Engine Oil Capacity | 1.35 gal (5.1 L) |
| Gross Power | 24.8 Hp (18.5 Kw) @ 3000 rpm |
| Gross Torque | 46.3 ft.lb. (62.8 Nm) @ 2200 rpm |
| Low RPM Set | 900 rpm |
| High RPM Set | 3220 rpm |
| Alternator | 12V, 40 Amp |
| Starter | 12V, 1.0 Kw |
| Fuel Consumption | 1.32 Lph (0.35 gph) |

Tires

| Description | (Standard) |
|-------------|------------|
| Size | 26x12-15 |
| Load Range | 8 Ply |
| Pressure | 55 psi |

Pumps

| Description | Drive Pump | Lift/Steer Pump |
|--------------|---|--|
| Type | Piston | Gear |
| Max Output | 22 gpm (83.3 lpm) @ 3000 rpm | 4.75 gpm (18 lpm) @ 3000 rpm |
| Displacement | 1.7 in ³ /rev (28 cm ³ /rev) | 0.36 in. ³ /rev (1.4 cm ³ /rev) |

Steer/Drive System

Toe-In - Adjust to ±1/4 inch (6.4 mm) overall

Drive Motor - Rexroth

Hydraulic Filter - Inline

Full flow paper filter (Cartridge type)

Torque Requirement

All wheel lug nuts should be torqued to 105 ft.lb (142 Nm) every 150 hours.

NOTE: When maintenance becomes necessary or a fastener has loosened, refer to the Torque Chart in this section to determine proper torque value.

1.4 LUBRICATION

Hydraulic Oil

NOTE: Hydraulic oils must have anti-wear qualities at least to API Service Classification GL-3, and sufficient chemical stability for mobile hydraulic system service. JLG Industries recommends Standard UTTO Fluid, which has an SAE viscosity of 10W-30 and a viscosity index of 152.

| HYDRAULIC SYSTEM OPERATING TEMPERATURE RANGE | SAE VISCOSITY GRADE |
|--|---------------------|
| 0°F to +23°F (-18°C - 5°C) | 10W |
| 0°F to +210°F (-18°C to +100°C) | 10W-20, 10W-30 |
| +50°F to +210°F (+10°C to +100°C) | 20W-20 |

NOTE: Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities.

Table 1-3. Mobilfluid 424

| SAE Grade | 10W-30 |
|-------------------------|---------------|
| ISO | 55 |
| Gravity, API | 29.0 |
| Density, Lb/Gal. 60°F | 7.35 |
| Pour Point, Max | -46°F (-43°C) |
| Flash Point, Min. | 442°F (228°C) |
| Viscosity | |
| Brookfield, cP at -18°C | 2700 |
| at 40°C | 55 cSt |
| at 100°C | 9.3 cSt |
| Viscosity Index | 152 |

Table 1-4. Mobil DTE 10 Excel 32

| ISO Viscosity Grade | #32 |
|---------------------|----------------|
| Specific Gravity | 0.877 |
| Pour Point, Max | -129°F (-54°C) |
| Flash Point, Min. | 482°F (250°C) |
| Viscosity | |
| at 40°C | 32.7 cSt |
| at 100°C | 6.63 cSt |
| cp at -30°F | 6200 |
| Viscosity Index | 164 |

Table 1-5. UCon Hydrolube HP-5046

| pH | 9.1 |
|---------------------------|-----------------|
| Specific Gravity, 20/20°F | 1.082 |
| Pour Point, °C (°F) | <-50 (<58) |
| Appearance | Red Liquid |
| Viscosity | |
| at 0°C (32°F) | 340cST(1600SUS) |
| at 40°C (104°F) | 46cST(215SUS) |
| at 65°C (150°F) | 22cST(106SUS) |
| Viscosity Index | 170 |

Table 1-6. Mobil EAL 224 H

| Type | Biodegradable Vegetable |
|---------------------|--------------------------|
| ISO Viscosity Grade | 32/46 |
| Specific Gravity | 0.922 |
| Pour Point | -25°F (-32°C) |
| Flash Point | 428°F (220°C) |
| Operating Temp. | 0 to 180°F (-17 to 82°C) |
| Viscosity | |
| at 40°C | 37 cSt |
| at 100°C | 8.4 cSt |
| Viscosity Index | 213 |

Table 1-7. Exxon Univis HVI 26 (Arctic)

| Specific Gravity | 0.89 |
|------------------|--|
| Pour Point | -76°F (-60°C) |
| Flash Point | 217°F (103°C) |
| Viscosity | |
| at 40°C | 25.8 cSt |
| at 100°C | 9.3 cSt |
| Viscosity Index | 376 |
| NOTE: | <i>Mobil/Exxon recommends this oil be checked on a yearly basis for viscosity.</i> |

1.5 LUBRICATION SPECIFICATIONS

| KEY | SPECIFICATIONS |
|------|---|
| MPG | Multipurpose Grease having a minimum dripping point of 350°F. Excellent water resistance and adhesive qualities, and being of extreme pressure type. (Timken OK 40 pounds minimum.) |
| EPGL | Extreme Pressure Gear Lube (oil) meeting API service classification GL-5 or MIL-Spec MIL-L-2105. |
| EO | Engine (crankcase) Oil. Gas - API SF/SG class, MIL-L-2104. Diesel - API CC/CD class, MIL-L-2104B/MIL-L-2104C. |
| HO | Hydraulic Oil. API service classification GL-3, e.g. Mobil 424. |

1.6 CYLINDER SPECIFICATIONS

| Description | Bore | Stroke | Rod Dia. |
|----------------|-----------------------|----------------------|----------------------|
| Lift Cylinder | 4.00 in. (10.2 cm) | 47 in. (119.4 cm) | 2.50 in. (6.4 cm) |
| Steer Cylinder | 2.00 in. (5.1 cm) | 7.84 in. (20 cm) | 1.12 in. (2.8 cm) |

1.7 PRESSURE SETTINGS

| | |
|----------------------|---------------------------------------|
| Main Relief | 3300 psi ± 50 psi (234 bar ± 3.4 bar) |
| Steer Relief - Left | 2300 psi (159 bar) |
| Steer Relief - Right | 1700 psi (117 bar) |
| Lift Up Relief | 2300 psi (159 bar) |
| Leveling Jack Relief | 2500 psi (207 bar) |

1.8 LIMIT SWITCHES

The machine is equipped with the following limit switches:

Tilt Alarm - Illuminates a light on the platform and sounds an alarm when the machine is 3° side to side or 5° fore and aft.

High Drive Cut-Out - High drive speed is cut out when the platform is raised above the stowed position.

Max Drive Height - The drive function is cut out when the platform is raised by 7.5 - 8 ft (2.3 - 2.4 m).

1.9 MAJOR COMPONENT WEIGHTS

| Component | Weight |
|---------------------------------------|----------------------|
| Platform | 650lb (295 kg) |
| Platform and Extension | 1000 lb (454 kg) |
| Manual Platform Extension | 350lb (159 kg) |
| Arm Assembly (Includes Lift Cylinder) | 2040 lb (925 kg) |
| Chassis - w/Standard Tires | 4120 lb (1869 kg) |

1.10 CRITICAL STABILITY WEIGHTS



DO NOT REPLACE ITEMS CRITICAL TO STABILITY, SUCH AS ENGINES, AXLES OR TIRES, WITH ITEMS OF DIFFERENT WEIGHT OR SPECIFICATION. DO NOT MODIFY UNIT IN ANY WAY TO AFFECT STABILITY.

| Component | Weight |
|---|--------------------|
| Tire and Wheel Assembly - FF (each) | 152lb (69 kg) |
| Kubota Gas/DF Engine (Dry with flywheel and housing) | 136lb (61.7 kg) |
| Kubota Diesel Engine (Dry with flywheel and housing) | 256lb (116 kg) |

1.11 SERIAL NUMBER LOCATIONS

For machine identification, a serial number plate is affixed to the machine. The plate is located on the rear center of the machine frame (See Figure 1-1.), just below the middle step of the ladder. In addition, if the serial number plate is damaged or missing, the machine serial number is stamped on the right front frame rail, adjacent to the scissor arms.

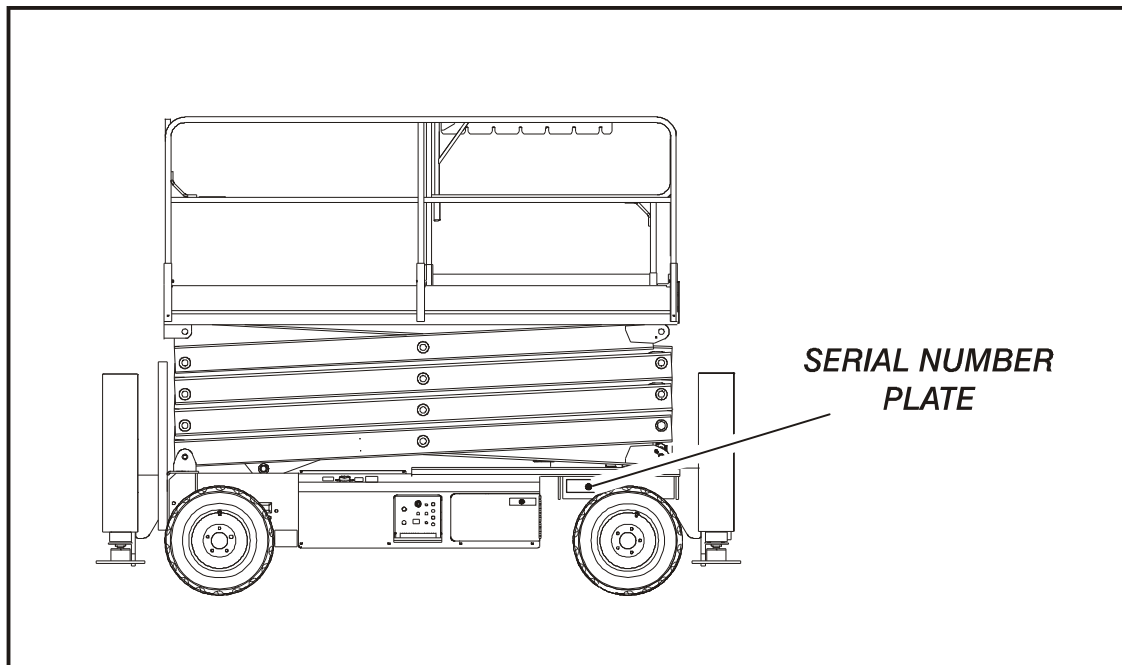


Figure 1-1. Serial Number Location

SECTION 1 - SPECIFICATIONS

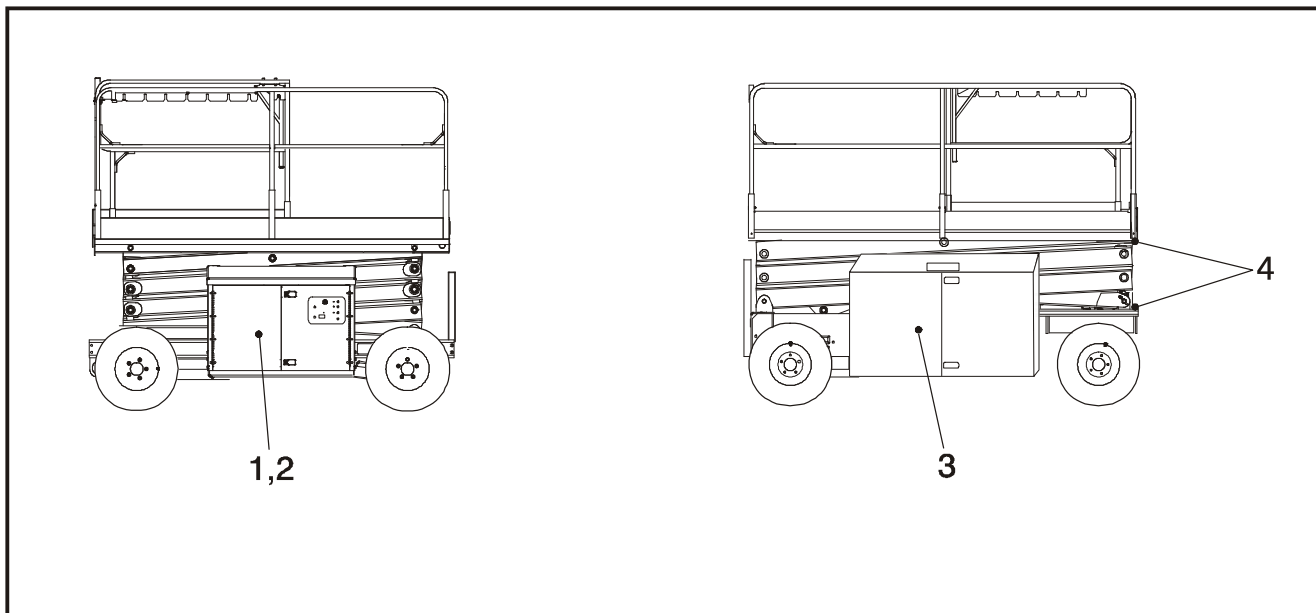


Figure 1-2. Lubrication Diagram

Table 1-8. Lubrication Chart

| INDEX NO | COMPONENT | NUMBER/TYPE LUBE POINTS | LUBE METHOD | INTERVAL HOURS |
|----------|---|--|--|-----------------------------------|
| 1 | Hydraulic Oil Reservoir | Fill Cap/Drain Plug | HO - Check HO Level HO - Change HO | 10/500 |
| 2 | Hydraulic Filter Element | N/A | Initial Change -50 Hours | 250 |
| 3 | Engine Crankcase, Engine Oil Filter, Engine Fuel Filter, Engine Fuel Filter (Kubota DF752) | Fill Cap/Drain Plug, Filter Element, Filter Element, Filter Element | Check Engine Oil Level, Initial Change - 50 Hours, Check & Clean every 100 hrs, Check & Clean every 100 hrs | 10/100, 200, 400, Yearly |
| 4 | Rail Slides | N/A | MPG - Brush | 100 |

KEY TO LUBRICANTS:

MPG - Multi-purpose Grease

EPGL - Extreme Pressure Gear Lube

HO - Hydraulic Oil (Standard UTTO Fluid)



TO AVOID PERSONAL INJURY, USE SAFETY PROP FOR ALL MAINTENANCE REQUIRING PLATFORM TO BE ELEVATED.

NOTE: Be sure to lubricate like items on each side.

Recommended lubricating intervals are based on machine operations under normal conditions. For machines used in multi-shift operations and/or exposed to hostile environments or conditions, lubrication frequencies must be increased accordingly.

NOTE: Operate hydraulic functions through one complete cycle before checking hydraulic oil level in tank. Oil should be visible in ADD sight window on hydraulic tank. If oil is not visible, add oil until oil is visible in both ADD and FULL sight windows on tank. Do not overfill tank.

Any time the pump coupling is removed, coat splines of coupling with Texaco Code 1912 grease prior to assembly.

OPERATING TEMPERATURE SPECIFICATION - KUBOTA (GAS [*] & DIESEL[#])

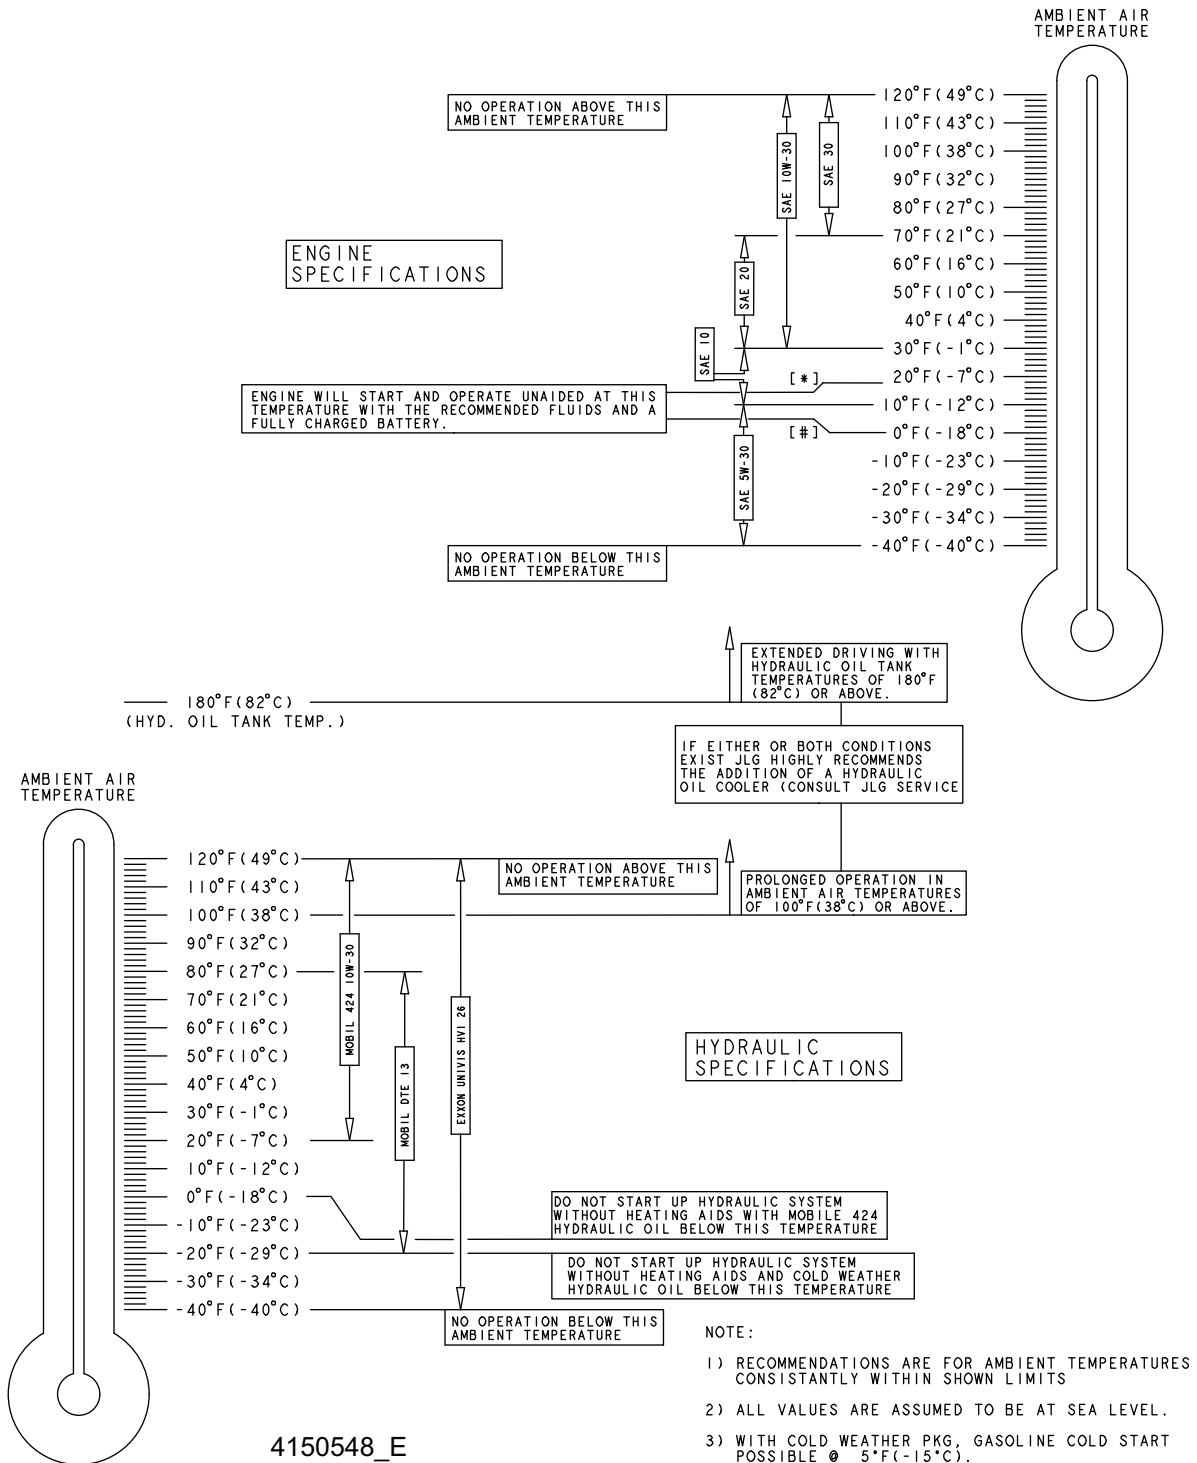


Figure 1-3. Operating Temperature Specifications - Kubota

SECTION 1 - SPECIFICATIONS

1.12 THREADLOCKING COMPOUND

| JLGN | Loctite® | ND Industries | Description |
|------------|----------|-----------------|------------------------------|
| 0100011 | 242™ | Vibra-TITE™ 121 | Medium Strength (Blue) |
| 1001095650 | 243™ | Vibra-TITE™ 122 | Medium Strength (Blue) |
| 0100019 | 271™ | Vibra-TITE™ 140 | High Strength (Red) |
| 0100071 | 262™ | Vibra-TITE™ 131 | Medium - High Strength (Red) |

NOTE: Loctite® 243™ can be substituted in place of Loctite® 242™. Vibra-TITE™ 122 can be substituted in place of Vibra-TITE™ 121.

1.13 TORQUE CHARTS

SAE Fastener Torque Chart

| Values for Zinc Yellow Chromate Fasteners (Ref 4150707) | | | | | | | | | | | | |
|---|-----|-----------|---------------------|------------|--------------|--------------|-------------------|--------------|--|--------------|---|--------------|
| SAE GRADE 5 BOLTS & GRADE 2 NUTS | | | | | | | | | | | | |
| Size | TPI | Bolt Dia | Tensile Stress Area | Clamp Load | Torque (Dry) | | Torque Lubricated | | Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) | | Torque (Loctite® 262™ or Vibra-TITE™ 111) | |
| | | | | | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| 4 | 40 | 0.1120 | 0.00604 | 380 | 8 | 0.9 | 6 | 0.7 | | | | |
| | 48 | 0.1120 | 0.00661 | 420 | 9 | 1.0 | 7 | 0.8 | | | | |
| 6 | 32 | 0.1380 | 0.00909 | 580 | 16 | 1.8 | 12 | 1.4 | | | | |
| | 40 | 0.1380 | 0.01015 | 610 | 18 | 2.0 | 13 | 1.5 | | | | |
| 8 | 32 | 0.1640 | 0.01400 | 900 | 30 | 3.4 | 22 | 2.5 | | | | |
| | 36 | 0.1640 | 0.01474 | 940 | 31 | 3.5 | 23 | 2.6 | | | | |
| 10 | 24 | 0.1900 | 0.01750 | 1120 | 43 | 4.8 | 32 | 3.5 | | | | |
| | 32 | 0.1900 | 0.02000 | 1285 | 49 | 5.5 | 36 | 4 | | | | |
| 1/4 | 20 | 0.2500 | 0.0318 | 2020 | 96 | 10.8 | 75 | 9 | 105 | 12 | | |
| | 28 | 0.2500 | 0.0364 | 2320 | 120 | 13.5 | 86 | 10 | 135 | 15 | | |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 5/16 | 18 | 0.3125 | 0.0524 | 3340 | 17 | 23 | 13 | 18 | 19 | 26 | 16 | 22 |
| | 24 | 0.3125 | 0.0580 | 3700 | 19 | 26 | 14 | 19 | 21 | 29 | 17 | 23 |
| 3/8 | 16 | 0.3750 | 0.0775 | 4940 | 30 | 41 | 23 | 31 | 35 | 48 | 28 | 38 |
| | 24 | 0.3750 | 0.0878 | 5600 | 35 | 47 | 25 | 34 | 40 | 54 | 32 | 43 |
| 7/16 | 14 | 0.4375 | 0.1063 | 6800 | 50 | 68 | 35 | 47 | 55 | 75 | 45 | 61 |
| | 20 | 0.4375 | 0.1187 | 7550 | 55 | 75 | 40 | 54 | 60 | 82 | 50 | 68 |
| 1/2 | 13 | 0.5000 | 0.1419 | 9050 | 75 | 102 | 55 | 75 | 85 | 116 | 68 | 92 |
| | 20 | 0.5000 | 0.1599 | 10700 | 90 | 122 | 65 | 88 | 100 | 136 | 80 | 108 |
| 9/16 | 12 | 0.5625 | 0.1820 | 11600 | 110 | 149 | 80 | 108 | 120 | 163 | 98 | 133 |
| | 18 | 0.5625 | 0.2030 | 12950 | 120 | 163 | 90 | 122 | 135 | 184 | 109 | 148 |
| 5/8 | 11 | 0.6250 | 0.2260 | 14400 | 150 | 203 | 110 | 149 | 165 | 224 | 135 | 183 |
| | 18 | 0.6250 | 0.2560 | 16300 | 170 | 230 | 130 | 176 | 190 | 258 | 153 | 207 |
| 3/4 | 10 | 0.7500 | 0.3340 | 21300 | 260 | 353 | 200 | 271 | 285 | 388 | 240 | 325 |
| | 16 | 0.7500 | 0.3730 | 23800 | 300 | 407 | 220 | 298 | 330 | 449 | 268 | 363 |
| 7/8 | 9 | 0.8750 | 0.4620 | 29400 | 430 | 583 | 320 | 434 | 475 | 646 | 386 | 523 |
| | 14 | 0.8750 | 0.5090 | 32400 | 470 | 637 | 350 | 475 | 520 | 707 | 425 | 576 |
| 1 | 8 | 1.0000 | 0.6060 | 38600 | 640 | 868 | 480 | 651 | 675 | 918 | 579 | 785 |
| | 12 | 1.0000 | 0.6630 | 42200 | 700 | 949 | 530 | 719 | 735 | 1000 | 633 | 858 |
| 1 1/8 | 7 | 1.1250 | 0.7630 | 42300 | 800 | 1085 | 600 | 813 | 840 | 1142 | 714 | 968 |
| | 12 | 1.1250 | 0.8560 | 47500 | 880 | 1193 | 660 | 895 | 925 | 1258 | 802 | 1087 |
| 1 1/4 | 7 | 1.2500 | 0.9690 | 53800 | 1120 | 1518 | 840 | 1139 | 1175 | 1598 | 1009 | 1368 |
| | 12 | 1.2500 | 1.0730 | 59600 | 1240 | 1681 | 920 | 1247 | 1300 | 1768 | 1118 | 1516 |
| 1 3/8 | 6 | 1.3750 | 1.1550 | 64100 | 1460 | 1979 | 1100 | 1491 | 1525 | 2074 | 1322 | 1792 |
| | 12 | 1.3750 | 1.3150 | 73000 | 1680 | 2278 | 1260 | 1708 | 1750 | 2380 | 1506 | 2042 |
| 1 1/2 | 6 | 1.5000 | 1.4050 | 78000 | 1940 | 2630 | 1460 | 1979 | 2025 | 2754 | 1755 | 2379 |
| | 12 | 1.5000 | 1.5800 | 87700 | 2200 | 2983 | 1640 | 2224 | 2300 | 3128 | 1974 | 2676 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER

5000059K

SECTION 1 - SPECIFICATIONS

SAE Fastener Torque Chart (Continued)

| Values for Zinc Yellow Chromate Fasteners (Ref 4150707) | | | | | | | | | | |
|---|-----|----------|---------------------|------------|--|-------|--|-------|---|-------|
| SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS* | | | | | | | | | | |
| Size | TPI | Bolt Dia | Tensile Stress Area | Clamp Load | Torque (Dry or Loctite® 263) K=0.20 | | Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.18 | | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 | |
| | | | | | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 4 | 40 | 0.1120 | 0.00604 | | | | | | | |
| | 48 | 0.1120 | 0.00661 | | | | | | | |
| 6 | 32 | 0.1380 | 0.00909 | | | | | | | |
| | 40 | 0.1380 | 0.01015 | | | | | | | |
| 8 | 32 | 0.1640 | 0.01400 | | | | | | | |
| | 36 | 0.1640 | 0.01474 | 1320 | 43 | 5 | | | | |
| 10 | 24 | 0.1900 | 0.01750 | 1580 | 60 | 7 | | | | |
| | 32 | 0.1900 | 0.02000 | 1800 | 68 | 8 | | | | |
| 1/4 | 20 | 0.2500 | 0.0318 | 2860 | 143 | 16 | 129 | 15 | | |
| | 28 | 0.2500 | 0.0364 | 3280 | 164 | 19 | 148 | 17 | | |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 5/16 | 18 | 0.3125 | 0.0524 | 4720 | 25 | 35 | 20 | 25 | 20 | 25 |
| | 24 | 0.3125 | 0.0580 | 5220 | 25 | 35 | 25 | 35 | 20 | 25 |
| 3/8 | 16 | 0.3750 | 0.0775 | 7000 | 45 | 60 | 40 | 55 | 35 | 50 |
| | 24 | 0.3750 | 0.0878 | 7900 | 50 | 70 | 45 | 60 | 35 | 50 |
| 7/16 | 14 | 0.4375 | 0.1063 | 9550 | 70 | 95 | 65 | 90 | 50 | 70 |
| | 20 | 0.4375 | 0.1187 | 10700 | 80 | 110 | 70 | 95 | 60 | 80 |
| 1/2 | 13 | 0.5000 | 0.1419 | 12750 | 105 | 145 | 95 | 130 | 80 | 110 |
| | 20 | 0.5000 | 0.1599 | 14400 | 120 | 165 | 110 | 150 | 90 | 120 |
| 9/16 | 12 | 0.5625 | 0.1820 | 16400 | 155 | 210 | 140 | 190 | 115 | 155 |
| | 18 | 0.5625 | 0.2030 | 18250 | 170 | 230 | 155 | 210 | 130 | 175 |
| 5/8 | 11 | 0.6250 | 0.2260 | 20350 | 210 | 285 | 190 | 260 | 160 | 220 |
| | 18 | 0.6250 | 0.2560 | 23000 | 240 | 325 | 215 | 290 | 180 | 245 |
| 3/4 | 10 | 0.7500 | 0.3340 | 30100 | 375 | 510 | 340 | 460 | 280 | 380 |
| | 16 | 0.7500 | 0.3730 | 33600 | 420 | 570 | 380 | 515 | 315 | 430 |
| 7/8 | 9 | 0.8750 | 0.4620 | 41600 | 605 | 825 | 545 | 740 | 455 | 620 |
| | 14 | 0.8750 | 0.5090 | 45800 | 670 | 910 | 600 | 815 | 500 | 680 |
| 1 | 8 | 1.0000 | 0.6060 | 51500 | 860 | 1170 | 770 | 1045 | 645 | 875 |
| | 12 | 1.0000 | 0.6630 | 59700 | 995 | 1355 | 895 | 1215 | 745 | 1015 |
| 1 1/8 | 7 | 1.1250 | 0.7630 | 68700 | 1290 | 1755 | 1160 | 1580 | 965 | 1310 |
| | 12 | 1.1250 | 0.8560 | 77000 | 1445 | 1965 | 1300 | 1770 | 1085 | 1475 |
| 1 1/4 | 7 | 1.2500 | 0.9690 | 87200 | 1815 | 2470 | 1635 | 2225 | 1365 | 1855 |
| | 12 | 1.2500 | 1.0730 | 96600 | 2015 | 2740 | 1810 | 2460 | 1510 | 2055 |
| 1 3/8 | 6 | 1.3750 | 1.1550 | 104000 | 2385 | 3245 | 2145 | 2915 | 1785 | 2430 |
| | 12 | 1.3750 | 1.3150 | 118100 | 2705 | 3680 | 2435 | 3310 | 2030 | 2760 |
| 1 1/2 | 6 | 1.5000 | 1.4050 | 126500 | 3165 | 4305 | 2845 | 3870 | 2370 | 3225 |
| | 12 | 1.5000 | 1.5800 | 142200 | 3555 | 4835 | 3200 | 4350 | 2665 | 3625 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

5000059K

SAE Fastener Torque Chart (Continued)

| Values for Magni Coating Fasteners (Ref 4150701) | | | | | | | | | | |
|--|-----|----------|---------------------|------------|------------------------|-------|--|-------|---|-------|
| SAE GRADE 5 BOLTS & GRADE 2 NUTS | | | | | | | | | | |
| Size | TPI | Bolt Dia | Tensile Stress Area | Clamp Load | Torque (Dry) K=0.17 | | Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.16 | | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 | |
| | | | | | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| | | In | Sq In | LB | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| 4 | 40 | 0.1120 | 0.00604 | 380 | 7 | 0.8 | | | | |
| | 48 | 0.1120 | 0.00661 | 420 | 8 | 0.9 | | | | |
| 6 | 32 | 0.1380 | 0.00909 | 580 | 14 | 1.5 | | | | |
| | 40 | 0.1380 | 0.01015 | 610 | 14 | 1.6 | | | | |
| 8 | 32 | 0.1640 | 0.01400 | 900 | 25 | 2.8 | | | | |
| | 36 | 0.1640 | 0.01474 | 940 | 26 | 2.9 | | | | |
| 10 | 24 | 0.1900 | 0.01750 | 1120 | 36 | 4.1 | | | | |
| | 32 | 0.1900 | 0.02000 | 1285 | 42 | 4.7 | | | | |
| 1/4 | 20 | 0.2500 | 0.0318 | 2020 | 86 | 9.7 | 80 | 9 | | |
| | 28 | 0.2500 | 0.0364 | 2320 | 99 | 11.1 | 95 | 11 | | |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 5/16 | 18 | 0.3125 | 0.0524 | 3340 | 15 | 20 | 14 | 19 | 15 | 20 |
| | 24 | 0.3125 | 0.0580 | 3700 | 15 | 20 | 15 | 21 | 15 | 20 |
| 3/8 | 16 | 0.3750 | 0.0775 | 4940 | 25 | 35 | 25 | 34 | 25 | 34 |
| | 24 | 0.3750 | 0.0878 | 5600 | 30 | 40 | 28 | 38 | 25 | 34 |
| 7/16 | 14 | 0.4375 | 0.1063 | 6800 | 40 | 55 | 40 | 54 | 35 | 48 |
| | 20 | 0.4375 | 0.1187 | 7550 | 45 | 60 | 44 | 60 | 40 | 54 |
| 1/2 | 13 | 0.5000 | 0.1419 | 9050 | 65 | 90 | 60 | 82 | 55 | 75 |
| | 20 | 0.5000 | 0.1599 | 10700 | 75 | 100 | 71 | 97 | 65 | 88 |
| 9/16 | 12 | 0.5625 | 0.1820 | 11600 | 90 | 120 | 87 | 118 | 80 | 109 |
| | 18 | 0.5625 | 0.2030 | 12950 | 105 | 145 | 97 | 132 | 90 | 122 |
| 5/8 | 11 | 0.6250 | 0.2260 | 14400 | 130 | 175 | 120 | 163 | 115 | 156 |
| | 18 | 0.6250 | 0.2560 | 16300 | 145 | 195 | 136 | 185 | 125 | 170 |
| 3/4 | 10 | 0.7500 | 0.3340 | 21300 | 225 | 305 | 213 | 290 | 200 | 272 |
| | 16 | 0.7500 | 0.3730 | 23800 | 255 | 345 | 238 | 324 | 225 | 306 |
| 7/8 | 9 | 0.8750 | 0.4620 | 29400 | 365 | 495 | 343 | 466 | 320 | 435 |
| | 14 | 0.8750 | 0.5090 | 32400 | 400 | 545 | 378 | 514 | 355 | 483 |
| 1 | 8 | 1.0000 | 0.6060 | 38600 | 545 | 740 | 515 | 700 | 480 | 653 |
| | 12 | 1.0000 | 0.6630 | 42200 | 600 | 815 | 563 | 765 | 530 | 721 |
| 1 1/8 | 7 | 1.1250 | 0.7630 | 42300 | 675 | 920 | 635 | 863 | 595 | 809 |
| | 12 | 1.1250 | 0.8560 | 47500 | 755 | 1025 | 713 | 969 | 670 | 911 |
| 1 1/4 | 7 | 1.2500 | 0.9690 | 53800 | 955 | 1300 | 897 | 1219 | 840 | 1142 |
| | 12 | 1.2500 | 1.0730 | 59600 | 1055 | 1435 | 993 | 1351 | 930 | 1265 |
| 1 3/8 | 6 | 1.3750 | 1.1550 | 64100 | 1250 | 1700 | 1175 | 1598 | 1100 | 1496 |
| | 12 | 1.3750 | 1.3150 | 73000 | 1420 | 1930 | 1338 | 1820 | 1255 | 1707 |
| 1 1/2 | 6 | 1.5000 | 1.4050 | 78000 | 1660 | 2260 | 1560 | 2122 | 1465 | 1992 |
| | 12 | 1.5000 | 1.5800 | 87700 | 1865 | 2535 | 1754 | 2385 | 1645 | 2237 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER

5000059K

SECTION 1 - SPECIFICATIONS

SAE Fastener Torque Chart (Continued)

| Values for Magni Coating Fasteners (Ref 4150701) | | | | | | | | | | |
|--|-----|----------|---------------------|------------|--|-------|--|-------|---|-------|
| SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS* | | | | | | | | | | |
| Size | TPI | Bolt Dia | Tensile Stress Area | Clamp Load | Torque (Dry or Loctite® 263) K=0.17 | | Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.16 | | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 | |
| | | | | | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| | | In | Sq In | LB | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| 4 | 40 | 0.1120 | 0.00604 | | | | | | | |
| | 48 | 0.1120 | 0.00661 | | | | | | | |
| 6 | 32 | 0.1380 | 0.00909 | | | | | | | |
| | 40 | 0.1380 | 0.01015 | | | | | | | |
| 8 | 32 | 0.1640 | 0.01400 | | | | | | | |
| | 36 | 0.1640 | 0.01474 | 1320 | 37 | 4 | | | | |
| 10 | 24 | 0.1900 | 0.01750 | 1580 | 51 | 6 | | | | |
| | 32 | 0.1900 | 0.02000 | 1800 | 58 | 7 | | | | |
| 1/4 | 20 | 0.2500 | 0.0318 | 2860 | 122 | 14 | 114 | 13 | | |
| | 28 | 0.2500 | 0.0364 | 3280 | 139 | 16 | 131 | 15 | | |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 5/16 | 18 | 0.3125 | 0.0524 | 4720 | 20 | 25 | 20 | 25 | 20 | 25 |
| | 24 | 0.3125 | 0.0580 | 5220 | 25 | 35 | 20 | 25 | 20 | 25 |
| 3/8 | 16 | 0.3750 | 0.0775 | 7000 | 35 | 50 | 35 | 50 | 35 | 50 |
| | 24 | 0.3750 | 0.0878 | 7900 | 40 | 55 | 40 | 55 | 35 | 50 |
| 7/16 | 14 | 0.4375 | 0.1063 | 9550 | 60 | 80 | 55 | 75 | 50 | 70 |
| | 20 | 0.4375 | 0.1187 | 10700 | 65 | 90 | 60 | 80 | 60 | 80 |
| 1/2 | 13 | 0.5000 | 0.1419 | 12750 | 90 | 120 | 85 | 115 | 80 | 110 |
| | 20 | 0.5000 | 0.1599 | 14400 | 100 | 135 | 95 | 130 | 90 | 120 |
| 9/16 | 12 | 0.5625 | 0.1820 | 16400 | 130 | 175 | 125 | 170 | 115 | 155 |
| | 18 | 0.5625 | 0.2030 | 18250 | 145 | 195 | 135 | 185 | 130 | 175 |
| 5/8 | 11 | 0.6250 | 0.2260 | 20350 | 180 | 245 | 170 | 230 | 160 | 220 |
| | 18 | 0.6250 | 0.2560 | 23000 | 205 | 280 | 190 | 260 | 180 | 245 |
| 3/4 | 10 | 0.7500 | 0.3340 | 30100 | 320 | 435 | 300 | 410 | 280 | 380 |
| | 16 | 0.7500 | 0.3730 | 33600 | 355 | 485 | 335 | 455 | 315 | 430 |
| 7/8 | 9 | 0.8750 | 0.4620 | 41600 | 515 | 700 | 485 | 660 | 455 | 620 |
| | 14 | 0.8750 | 0.5090 | 45800 | 570 | 775 | 535 | 730 | 500 | 680 |
| 1 | 8 | 1.0000 | 0.6060 | 51500 | 730 | 995 | 685 | 930 | 645 | 875 |
| | 12 | 1.0000 | 0.6630 | 59700 | 845 | 1150 | 795 | 1080 | 745 | 1015 |
| 1 1/8 | 7 | 1.1250 | 0.7630 | 68700 | 1095 | 1490 | 1030 | 1400 | 965 | 1310 |
| | 12 | 1.1250 | 0.8560 | 77000 | 1225 | 1665 | 1155 | 1570 | 1085 | 1475 |
| 1 1/4 | 7 | 1.2500 | 0.9690 | 87200 | 1545 | 2100 | 1455 | 1980 | 1365 | 1855 |
| | 12 | 1.2500 | 1.0730 | 96600 | 1710 | 2325 | 1610 | 2190 | 1510 | 2055 |
| 1 3/8 | 6 | 1.3750 | 1.1550 | 104000 | 2025 | 2755 | 1905 | 2590 | 1785 | 2430 |
| | 12 | 1.3750 | 1.3150 | 118100 | 2300 | 3130 | 2165 | 2945 | 2030 | 2760 |
| 1 1/2 | 6 | 1.5000 | 1.4050 | 126500 | 2690 | 3660 | 2530 | 3440 | 2370 | 3225 |
| | 12 | 1.5000 | 1.5800 | 142200 | 3020 | 4105 | 2845 | 3870 | 2665 | 3625 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

5000059K

SAE Fastener Torque Chart (Continued)

| Values for Magni Coating Fasteners (Ref 4150701) | | | | | | | | | | |
|--|-----|----------|---------------------|--------------------------|------------------------|-------|---|-------|---|-------|
| SOCKET HEAD CAPSCREWS | | | | | | | | | | |
| Size | TPI | Bolt Dia | Tensile Stress Area | Clamp Load See Note 4 | Torque (Dry) K=0.17 | | Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) or Precoat® 85 K=0.16 | | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 | |
| | | | | | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 4 | 40 | 0.1120 | 0.00604 | | | | | | | |
| | 48 | 0.1120 | 0.00661 | | | | | | | |
| 6 | 32 | 0.1380 | 0.00909 | | | | | | | |
| | 40 | 0.1380 | 0.01015 | | | | | | | |
| 8 | 32 | 0.1640 | 0.01400 | | | | | | | |
| | 36 | 0.1640 | 0.01474 | | | | | | | |
| 10 | 24 | 0.1900 | 0.01750 | | | | | | | |
| | 32 | 0.1900 | 0.02000 | | | | | | | |
| 1/4 | 20 | 0.2500 | 0.0318 | 2860 | 122 | 14 | 114 | 13 | | |
| | 28 | 0.2500 | 0.0364 | 3280 | 139 | 16 | 131 | 15 | | |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 5/16 | 18 | 0.3125 | 0.0524 | 4720 | 20 | 25 | 20 | 25 | 20 | 25 |
| | 24 | 0.3125 | 0.0580 | 5220 | 25 | 35 | 20 | 25 | 20 | 25 |
| 3/8 | 16 | 0.3750 | 0.0775 | 7000 | 35 | 50 | 35 | 50 | 35 | 50 |
| | 24 | 0.3750 | 0.0878 | 7900 | 40 | 55 | 40 | 55 | 35 | 50 |
| 7/16 | 14 | 0.4375 | 0.1063 | 9550 | 60 | 80 | 55 | 75 | 50 | 70 |
| | 20 | 0.4375 | 0.1187 | 10700 | 65 | 90 | 60 | 80 | 60 | 80 |
| 1/2 | 13 | 0.5000 | 0.1419 | 12750 | 90 | 120 | 85 | 115 | 80 | 110 |
| | 20 | 0.5000 | 0.1599 | 14400 | 100 | 135 | 95 | 130 | 90 | 120 |
| 9/16 | 12 | 0.5625 | 0.1820 | 16400 | 130 | 175 | 125 | 170 | 115 | 155 |
| | 18 | 0.5625 | 0.2030 | 18250 | 145 | 195 | 135 | 185 | 130 | 175 |
| 5/8 | 11 | 0.6250 | 0.2260 | 20350 | 180 | 245 | 170 | 230 | 160 | 220 |
| | 18 | 0.6250 | 0.2560 | 23000 | 205 | 280 | 190 | 260 | 180 | 245 |
| 3/4 | 10 | 0.7500 | 0.3340 | 30100 | 320 | 435 | 300 | 415 | 280 | 380 |
| | 16 | 0.7500 | 0.3730 | 33600 | 355 | 485 | 335 | 455 | 315 | 430 |
| 7/8 | 9 | 0.8750 | 0.4620 | 41600 | 515 | 700 | 485 | 660 | 455 | 620 |
| | 14 | 0.8750 | 0.5090 | 45800 | 570 | 775 | 535 | 730 | 500 | 680 |
| 1 | 8 | 1.0000 | 0.6060 | 51500 | 730 | 995 | 685 | 930 | 645 | 875 |
| | 12 | 1.0000 | 0.6630 | 59700 | 845 | 1150 | 795 | 1080 | 745 | 1015 |
| 1 1/8 | 7 | 1.1250 | 0.7630 | 68700 | 1095 | 1490 | 1030 | 1400 | 965 | 1310 |
| | 12 | 1.1250 | 0.8560 | 77000 | 1225 | 1665 | 1155 | 1570 | 1085 | 1475 |
| 1 1/4 | 7 | 1.2500 | 0.9690 | 87200 | 1545 | 2100 | 1455 | 1980 | 1365 | 1855 |
| | 12 | 1.2500 | 1.0730 | 96600 | 1710 | 2325 | 1610 | 2190 | 1510 | 2055 |
| 1 3/8 | 6 | 1.3750 | 1.1550 | 104000 | 2025 | 2755 | 1905 | 2590 | 1785 | 2430 |
| | 12 | 1.3750 | 1.3150 | 118100 | 2300 | 3130 | 2165 | 2945 | 2030 | 2760 |
| 1 1/2 | 6 | 1.5000 | 1.4050 | 126500 | 2690 | 3660 | 2530 | 3440 | 2370 | 3225 |
| | 12 | 1.5000 | 1.5800 | 142200 | 3020 | 4105 | 2845 | 3870 | 2665 | 3625 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER
4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

5000059K

SECTION 1 - SPECIFICATIONS

SAE Fastener Torque Chart (Continued)

| Values for Zinc Yellow Chromate Fasteners (Ref 4150707)* | | | | | | | | | | |
|--|-----|----------|---------------------|-----------------------|---------------------|-------|--|-------|--|-------|
| SOCKET HEAD CAPSCREWS | | | | | | | | | | |
| Size | TPI | Bolt Dia | Tensile Stress Area | Clamp Load See Note 4 | Torque (Dry) K=0.17 | | Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) or Precoat® 85 K=0.16 | | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 | |
| | | | | | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| | | In | Sq In | LB | IN-LB | [N.m] | IN-LB | [N.m] | IN-LB | [N.m] |
| 4 | 40 | 0.1120 | 0.00604 | | | | | | | |
| | 48 | 0.1120 | 0.00661 | | | | | | | |
| 6 | 32 | 0.1380 | 0.00909 | | | | | | | |
| | 40 | 0.1380 | 0.01015 | | | | | | | |
| 8 | 32 | 0.1640 | 0.01400 | | | | | | | |
| | 36 | 0.1640 | 0.01474 | | | | | | | |
| 10 | 24 | 0.1900 | 0.01750 | | | | | | | |
| | 32 | 0.1900 | 0.02000 | | | | | | | |
| 1/4 | 20 | 0.2500 | 0.0318 | 2860 | 122 | 14 | 114 | 13 | | |
| | 28 | 0.2500 | 0.0364 | 3280 | 139 | 16 | 131 | 15 | | |
| | | In | Sq In | LB | FT-LB | [N.m] | FT-LB | [N.m] | FT-LB | [N.m] |
| 5/16 | 18 | 0.3125 | 0.0524 | 4720 | 20 | 25 | 20 | 25 | 20 | 25 |
| | 24 | 0.3125 | 0.0580 | 5220 | 25 | 35 | 20 | 25 | 20 | 25 |
| 3/8 | 16 | 0.3750 | 0.0775 | 7000 | 35 | 50 | 35 | 50 | 35 | 50 |
| | 24 | 0.3750 | 0.0878 | 7900 | 40 | 55 | 40 | 55 | 35 | 50 |
| 7/16 | 14 | 0.4375 | 0.1063 | 9550 | 60 | 80 | 55 | 75 | 50 | 70 |
| | 20 | 0.4375 | 0.1187 | 10700 | 65 | 90 | 60 | 80 | 60 | 80 |
| 1/2 | 13 | 0.5000 | 0.1419 | 12750 | 90 | 120 | 85 | 115 | 80 | 110 |
| | 20 | 0.5000 | 0.1599 | 14400 | 100 | 135 | 95 | 130 | 90 | 120 |
| 9/16 | 12 | 0.5625 | 0.1820 | 16400 | 130 | 175 | 125 | 170 | 115 | 155 |
| | 18 | 0.5625 | 0.2030 | 18250 | 145 | 195 | 135 | 185 | 130 | 175 |
| 5/8 | 11 | 0.6250 | 0.2260 | 20350 | 180 | 245 | 170 | 230 | 160 | 220 |
| | 18 | 0.6250 | 0.2560 | 23000 | 205 | 280 | 190 | 260 | 180 | 245 |
| 3/4 | 10 | 0.7500 | 0.3340 | 30100 | 320 | 435 | 300 | 415 | 280 | 380 |
| | 16 | 0.7500 | 0.3730 | 33600 | 355 | 485 | 335 | 455 | 315 | 430 |
| 7/8 | 9 | 0.8750 | 0.4620 | 41600 | 515 | 700 | 485 | 660 | 455 | 620 |
| | 14 | 0.8750 | 0.5090 | 45800 | 570 | 775 | 535 | 730 | 500 | 680 |
| 1 | 8 | 1.0000 | 0.6060 | 51500 | 730 | 995 | 685 | 930 | 645 | 875 |
| | 12 | 1.0000 | 0.6630 | 59700 | 845 | 1150 | 795 | 1080 | 745 | 1015 |
| 1 1/8 | 7 | 1.1250 | 0.7630 | 68700 | 1095 | 1490 | 1030 | 1400 | 965 | 1310 |
| | 12 | 1.1250 | 0.8560 | 77000 | 1225 | 1665 | 1155 | 1570 | 1085 | 1475 |
| 1 1/4 | 7 | 1.2500 | 0.9690 | 87200 | 1545 | 2100 | 1455 | 1980 | 1365 | 1855 |
| | 12 | 1.2500 | 1.0730 | 96600 | 1710 | 2325 | 1610 | 2190 | 1510 | 2055 |
| 1 3/8 | 6 | 1.3750 | 1.1550 | 104000 | 2025 | 2755 | 1905 | 2590 | 1785 | 2430 |
| | 12 | 1.3750 | 1.3150 | 118100 | 2300 | 3130 | 2165 | 2945 | 2030 | 2760 |
| 1 1/2 | 6 | 1.5000 | 1.4050 | 126500 | 2690 | 3660 | 2530 | 3440 | 2370 | 3225 |
| | 12 | 1.5000 | 1.5800 | 142200 | 3020 | 4105 | 2845 | 3870 | 2665 | 3625 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS 5000059K
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Metric Fastener Torque Chart

| Values for Zinc Yellow Chromate Fasteners (Ref 4150707)* | | | | | | | |
|--|-------|---------------------|--------------------------|----------------------------------|---------------|---|--|
| CLASS 8.8 METRIC (HEX/SOCKET HEAD) BOLTS CLASS 8 METRIC NUTS | | | | | | | |
| Size | Pitch | Tensile Stress Area | Clamp Load See Note 4 | Torque (Dry or Loctite® 263™) | Torque (Lube) | Torque (Loctite® 262™ or 271™ or Vibra-TITE™ 131) | Torque (Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 141) |
| | | Sq mm | KN | [N.m] | | [N.m] | [N.m] |
| 3 | 0.5 | 5.03 | 2.19 | 1.3 | 1.0 | 1.2 | 1.4 |
| 3.5 | 0.6 | 6.78 | 2.95 | 2.1 | 1.6 | 1.9 | 2.3 |
| 4 | 0.7 | 8.78 | 3.82 | 3.1 | 2.3 | 2.8 | 3.4 |
| 5 | 0.8 | 14.20 | 6.18 | 6.2 | 4.6 | 5.6 | 6.8 |
| 6 | 1 | 20.10 | 8.74 | 11 | 7.9 | 9.4 | 12 |
| 7 | 1 | 28.90 | 12.6 | 18 | 13 | 16 | 19 |
| 8 | 1.25 | 36.60 | 15.9 | 26 | 19 | 23 | 28 |
| 10 | 1.5 | 58.00 | 25.2 | 50 | 38 | 45 | 55 |
| 12 | 1.75 | 84.30 | 36.7 | 88 | 66 | 79 | 97 |
| 14 | 2 | 115 | 50.0 | 140 | 105 | 126 | 154 |
| 16 | 2 | 157 | 68.3 | 219 | 164 | 197 | 241 |
| 18 | 2.5 | 192 | 83.5 | 301 | 226 | 271 | 331 |
| 20 | 2.5 | 245 | 106.5 | 426 | 320 | 383 | 469 |
| 22 | 2.5 | 303 | 132.0 | 581 | 436 | 523 | 639 |
| 24 | 3 | 353 | 153.5 | 737 | 553 | 663 | 811 |
| 27 | 3 | 459 | 199.5 | 1080 | 810 | 970 | 1130 |
| 30 | 3.5 | 561 | 244.0 | 1460 | 1100 | 1320 | 1530 |
| 33 | 3.5 | 694 | 302.0 | 1990 | 1490 | 1790 | 2090 |
| 36 | 4 | 817 | 355.5 | 2560 | 1920 | 2300 | 2690 |
| 42 | 4.5 | 1120 | 487.0 | 4090 | 3070 | 3680 | 4290 |

NOTES:

1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER
4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

5000059K

SECTION 1 - SPECIFICATIONS

Metric Fastener Torque Chart (Continued)

| Values for Zinc Yellow Chromate Fasteners (Ref 4150707)* | | | | | | |
|---|-------|---------------------|-----------------------|--------------------------------------|---|--|
| CLASS 10.9 METRIC (HEX HEAD) BOLTS, CLASS 10 METRIC NUTS CLASS 12.9 SOCKET HEAD CAPSCREWS M3 - M5* | | | | | | |
| Size | Pitch | Tensile Stress Area | Clamp Load See Note 4 | Torque (Dry or Loctite® 263™) K=0.20 | Torque (Lube or Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.18 | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 |
| | | Sq mm | KN | [N.m] | [N.m] | [N.m] |
| 3 | 0.5 | 5.03 | 3.13 | | | |
| 3.5 | 0.6 | 6.78 | 4.22 | | | |
| 4 | 0.7 | 8.78 | 5.47 | | | |
| 5 | 0.8 | 14.20 | 8.85 | | | |
| 6 | 1 | 20.10 | 12.5 | | | |
| 7 | 1 | 28.90 | 18.0 | 25 | 23 | 19 |
| 8 | 1.25 | 36.60 | 22.8 | 37 | 33 | 27 |
| 10 | 1.5 | 58.00 | 36.1 | 70 | 65 | 55 |
| 12 | 1.75 | 84.30 | 52.5 | 125 | 115 | 95 |
| 14 | 2 | 115 | 71.6 | 200 | 180 | 150 |
| 16 | 2 | 157 | 97.8 | 315 | 280 | 235 |
| 18 | 2.5 | 192 | 119.5 | 430 | 385 | 325 |
| 20 | 2.5 | 245 | 152.5 | 610 | 550 | 460 |
| 22 | 2.5 | 303 | 189.0 | 830 | 750 | 625 |
| 24 | 3 | 353 | 222.0 | 1065 | 960 | 800 |
| 27 | 3 | 459 | 286.0 | 1545 | 1390 | 1160 |
| 30 | 3.5 | 561 | 349.5 | 2095 | 1885 | 1575 |
| 33 | 3.5 | 694 | 432.5 | 2855 | 2570 | 2140 |
| 36 | 4 | 817 | 509.0 | 3665 | 3300 | 2750 |
| 42 | 4.5 | 1120 | 698.0 | 5865 | 5275 | 4395 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS 5000059K
2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER
4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Metric Fastener Torque Chart (Continued)

| Values for Magni Coated Fasteners (Ref 4150701)* | | | | | | |
|--|-------|---------------------|--------------------------|--|--|---|
| CLASS 8.8 METRIC (HEX/SOCKET HEAD) BOLTS CLASS 8 METRIC NUTS | | | | | | |
| Size | Pitch | Tensile Stress Area | Clamp Load See Note 4 | Torque (Dry or Loctite® 263™) K=0.17 | Torque (Lube or Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.16 | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 |
| | | Sq mm | KN | [N.m] | [N.m] | [N.m] |
| 3 | 0.5 | 5.03 | 2.19 | 1.1 | 1.1 | 1.0 |
| 3.5 | 0.6 | 6.78 | 2.95 | 1.8 | 1.7 | 1.5 |
| 4 | 0.7 | 8.78 | 3.82 | 2.6 | 2.4 | 2.3 |
| 5 | 0.8 | 14.20 | 6.18 | 5.3 | 4.9 | 4.6 |
| 6 | 1 | 20.10 | 8.74 | 9 | 8.4 | 7.9 |
| 7 | 1 | 28.90 | 12.6 | 15 | 14 | 13 |
| 8 | 1.25 | 36.60 | 15.9 | 22 | 20 | 19 |
| 10 | 1.5 | 58.00 | 25.2 | 43 | 40 | 38 |
| 12 | 1.75 | 84.30 | 36.7 | 75 | 70 | 66 |
| 14 | 2 | 115 | 50.0 | 119 | 110 | 105 |
| 16 | 2 | 157 | 68.3 | 186 | 175 | 165 |
| 18 | 2.5 | 192 | 83.5 | 256 | 240 | 225 |
| 20 | 2.5 | 245 | 106.5 | 362 | 340 | 320 |
| 22 | 2.5 | 303 | 132.0 | 494 | 465 | 435 |
| 24 | 3 | 353 | 153.5 | 627 | 590 | 555 |
| 27 | 3 | 459 | 199.5 | 916 | 860 | 810 |
| 30 | 3.5 | 561 | 244.0 | 1245 | 1170 | 1100 |
| 33 | 3.5 | 694 | 302.0 | 1694 | 1595 | 1495 |
| 36 | 4 | 817 | 355.5 | 2176 | 2050 | 1920 |
| 42 | 4.5 | 1120 | 487.0 | 3477 | 3275 | 3070 |

NOTES:

1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER
4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

5000059K

SECTION 1 - SPECIFICATIONS

Metric Fastener Torque Chart (Continued)

| Values for Magni Coated Fasteners (Ref 4150701)* | | | | | | |
|--|-------|------------------------|--------------------------|--|--|---|
| CLASS 10.9 METRIC (HEX HEAD) BOLTS CLASS 10 METRIC NUTS, CLASS 12.9 SOCKET HEAD CAPSCREWS M6 AND ABOVE* | | | | | | |
| Size | Pitch | Tensile Stress Area | Clamp Load See Note 4 | Torque (Dry or Loctite® 263™) K=0.17 | Torque (Lube or Loctite® 242™ or 271™ or Vibra-TITE™ 111 or 140) K=0.18 | Torque (Loctite® 262™ or Vibra-TITE™ 131) K=0.15 |
| | | Sq mm | KN | [N.m] | [N.m] | [N.m] |
| 3 | 0.5 | 5.03 | 3.13 | | | |
| 3.5 | 0.6 | 6.78 | 4.22 | | | |
| 4 | 0.7 | 8.78 | 5.47 | | | |
| 5 | 0.8 | 14.20 | 8.85 | | | |
| 6 | 1 | 20.10 | 12.5 | 13 | 12 | 11 |
| 7 | 1 | 28.90 | 18.0 | 21 | 20 | 19 |
| 8 | 1.25 | 36.60 | 22.8 | 31 | 29 | 27 |
| 10 | 1.5 | 58.00 | 36.1 | 61 | 58 | 55 |
| 12 | 1.75 | 84.30 | 52.5 | 105 | 100 | 95 |
| 14 | 2 | 115 | 71.6 | 170 | 160 | 150 |
| 16 | 2 | 157 | 97.8 | 265 | 250 | 235 |
| 18 | 2.5 | 192 | 119.5 | 365 | 345 | 325 |
| 20 | 2.5 | 245 | 152.5 | 520 | 490 | 460 |
| 22 | 2.5 | 303 | 189.0 | 705 | 665 | 625 |
| 24 | 3 | 353 | 222.0 | 905 | 850 | 800 |
| 27 | 3 | 459 | 286.0 | 1315 | 1235 | 1160 |
| 30 | 3.5 | 561 | 349.5 | 1780 | 1680 | 1575 |
| 33 | 3.5 | 694 | 432.5 | 2425 | 2285 | 2140 |
| 36 | 4 | 817 | 509.0 | 3115 | 2930 | 2750 |
| 42 | 4.5 | 1120 | 698.0 | 4985 | 4690 | 4395 |

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS 5000059K
2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
3. * ASSEMBLY USES HARDENED WASHER
4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS.
IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter your information to search for manuals and parts.

* Brand:

* Model:

* Serial:

* Part Number:

SEARCH

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in the information below to request help.

Manufacturer:

Model:

Description:

Quantity:

Part Number:

Part Name:

Part Description:

Part Category:

Part Location:

Part Status:

Part Date:

Part Price:

Part Weight:

Part Length:

Part Width:

Part Height:

Part Depth:

Part Diameter:

Part Thickness:

Part Material:

Part Color:

Part Finish:

Part Coating:

Part Treatment:

Part Condition:

Part Location:

Part Status:

Part Date:

Part Price:

Part Weight:

Part Length:

Part Width:

Part Height:

Part Depth:

Part Diameter:

Part Thickness:

Part Material:

Part Color:

Part Finish:

Part Coating:

Part Treatment:

Part Condition:

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on once of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION 2. PROCEDURES

2.1 MACHINE PREPARATION, INSPECTION AND MAINTENANCE

General

This section provides the necessary information needed by those personnel that are responsible to place the machine in operation readiness and maintain its safe operating condition. For maximum service life and safe operation, ensure that all the necessary inspections and maintenance have been completed before placing the machine into service. With proper care, maintenance and inspections performed per JLG's recommendations with any and all discrepancies corrected, this product will be fit for continued use.

Preparation, Inspection and Maintenance

It is important to establish and conform to a comprehensive inspection and preventive maintenance program. The following table outlines the periodic machine inspections and maintenance recommended by JLG Industries, Inc. Consult your national, regional, or local regulations for further requirements for Mobile Elevating Work Platform (MEWP). The frequency of inspection and maintenance must be increased as environment, severity and frequency of usage requires.

Pre-Start Inspection

It is the User's or Operator's primary responsibility to perform a Pre-Start Inspection of the machine prior to use daily or at each change of operator. Reference the Operation and Safety Manual for completion procedures for the Pre-Start Inspection. The Operation and Safety Manual must be read in its entirety and understood prior to performing the Pre-Start Inspection.

Pre-Delivery Inspection and Frequent Inspection

The Pre-Delivery Inspection and Frequent Inspection shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

The Pre-Delivery Inspection and Frequent Inspection procedures are performed in the same manner, but at different times. The Pre-Delivery Inspection shall be performed prior to each sale, lease, or rental delivery. The Frequent Inspection shall be accomplished for each machine in service for 3 months or 150 hours (whichever comes first); out of service for a period of more than 3 months; or when purchased used. The frequency of this inspection must be increased as environment, severity and frequency of usage requires.

Reference the JLG Pre-Delivery and Frequent Inspection Form and the Inspection and Preventative Maintenance Schedule for items requiring inspection during the performance of these inspections. Reference the appropriate areas of this manual for servicing and maintenance procedures.

Annual Machine Inspection

JLG recommends that the Annual Machine Inspection be performed by a Factory-Trained Service Technician on an annual basis, no later than thirteen (13) months from the date of the prior Annual Machine Inspection. JLG Industries, Inc. recognizes a Factory-Trained Service Technician as a person who has successfully completed the JLG Service Training School for the subject JLG product model. Reference the machine Service and Maintenance Manual and appropriate JLG inspection form for performance of this inspection.

Reference the JLG Annual Machine Inspection Form and the Inspection and Preventative Maintenance Schedule for items requiring inspection during the performance of this inspection. Reference the appropriate areas of this manual for servicing and maintenance procedures.

For the purpose of receiving safety-related bulletins, it is important that JLG Industries, Inc. has updated ownership information for each machine. When performing each Annual Machine Inspection, notify JLG Industries, Inc. of the current machine ownership.

Preventative Maintenance

In conjunction with the specified inspections, maintenance shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

Reference the Preventative Maintenance Schedule and the appropriate areas of this manual for servicing and maintenance procedures. The frequency of service and maintenance must be increased as environment, severity and frequency of usage requires.

SECTION 2 - PROCEDURES

Table 2-1. Inspection and Maintenance

| Type | Frequency | Primary Responsibility | Service Qualification | Reference |
|--|--|------------------------|--|---|
| Pre-Start Inspection | Prior to use each day; or At each Operator change. | User or Operator | User or Operator | Operation and Safety Manual |
| Pre-Delivery Inspection | Prior to each sale, lease, or rental delivery. | Owner, Dealer, or User | Qualified JLG Mechanic | Service and Maintenance Manual and applicable JLG inspection form. |
| Frequent Inspection | In service for 3 months or 150 hours, whichever comes first; or Out of service for a period of more than 3 months; or purchased used. | Owner, Dealer, or User | Qualified JLG Mechanic | Service and Maintenance Manual and applicable JLG inspection form. |
| Annual Machine Inspec- tion | Annually, no later than 13 months from the date of the prior inspection. | Owner, Dealer, or User | Factory Trained Service Technician (Recommended) | Service and Maintenance Manual and applicable JLG inspection form. |
| Preventive Maintenance | At intervals as specified in the Service and Mainte- nance Manual. | Owner, Dealer, or User | Qualified JLG Mechanic | Service and Maintenance Manual |
| NOTE: Inspection forms are available from JLG. Use the Service and Maintenance Manual to perform inspections. | | | | |

2.2 SERVICING AND MAINTENANCE GUIDELINES

General

The following information is provided to assist you in the use and application of servicing and maintenance procedures contained in this chapter.

Safety and Workmanship

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

Cleanliness

1. The most important single item in preserving the long service life of a machine is to keep dirt and foreign materials out of the vital components. Precautions have been taken to safeguard against this. Shields, covers, seals, and filters are provided to keep air, fuel, and oil supplies clean; however, these items must be maintained on a scheduled basis in order to function properly.
2. At any time when air, fuel, or oil lines are disconnected, clear adjacent areas as well as the openings and fittings themselves. As soon as a line or component is disconnected, cap or cover all openings to prevent entry of foreign matter.
3. Clean and inspect all parts during servicing or maintenance, and assure that all passages and openings are unobstructed. Cover all parts to keep them clean. Be sure all parts are clean before they are installed. New parts should remain in their containers until they are ready to be used.

Components Removal and Installation

1. Use adjustable lifting devices, whenever possible, if mechanical assistance is required. All slings (chains, cables, etc.) should be parallel to each other and as near perpendicular as possible to top of part being lifted.
2. Should it be necessary to remove a component on an angle, keep in mind that the capacity of an eyebolt or similar bracket lessens, as the angle between the supporting structure and the component becomes less than 90°.
3. If a part resists removal, check to see whether all nuts, bolts, cables, brackets, wiring, etc., have been removed and that no adjacent parts are interfering.

Component Disassembly and Reassembly

When disassembling or reassembling a component, complete the procedural steps in sequence. Do not partially disassemble or assemble one part, then start on another. Always recheck your work to assure that nothing has been overlooked. Do not make any adjustments, other than those recommended, without obtaining proper approval.

Pressure-Fit Parts

When assembling pressure-fit parts, use an “anti-seize” or molybdenum disulfide base compound to lubricate the mating surface.

Bearings

1. When a bearing is removed, cover it to keep out dirt and abrasives. Clean bearings in nonflammable cleaning solvent and allow to drip dry. Compressed air can be used but do not spin the bearing.
2. Discard bearings if the races and balls (or rollers) are pitted, scored, or burned.
3. If a bearing is found to be serviceable, apply a light coat of oil and wrap it in clean (waxed) paper. Do not unwrap reusable or new bearings until they are ready to install.
4. Lubricate new or used serviceable bearings before installation. When pressing a bearing into a retainer or bore, apply pressure to the outer race. If the bearing is to be installed on a shaft, apply pressure to the inner race.

Gaskets

Check that holes in gaskets align with openings in the mating parts. If it becomes necessary to hand-fabricate a gasket, use gasket material or stock of equivalent material and thickness. Be sure to cut holes in the right location, as blank gaskets can cause serious system damage.

Bolt Usage and Torque Application

1. Use bolts of proper length. A bolt which is too long will bottom before the head is tight against its related part. If a bolt is too short, there will not be enough thread area to engage and hold the part properly. When replacing bolts, use only those having the same specifications of the original, or one which is equivalent.
2. Unless specific torque requirements are given within the text, standard torque values should be used on heat-treated bolts, studs, and steel nuts, in accordance with recommended shop practices.

Hydraulic Lines and Electrical Wiring

Clearly mark or tag hydraulic lines and electrical wiring, as well as their receptacles, when disconnecting or removing them from the unit. This will assure that they are correctly reinstalled.

Hydraulic System

1. Keep the system clean. If evidence of metal or rubber particles is found in the hydraulic system, drain and flush the entire system.
2. Disassemble and reassemble parts on clean work surface. Clean all metal parts with non-flammable cleaning solvent. Lubricate components, as required, to aid assembly.

Lubrication

Service applicable components with the amount, type, and grade of lubricant recommended in this manual, at the specified intervals. When recommended lubricants are not available, consult your local supplier for an equivalent that meets or exceeds the specifications listed.

Batteries

Clean batteries, using a non-metallic brush and a solution of baking soda and water. Rinse with clean water. After cleaning, thoroughly dry batteries and coat terminals with an anti-corrosion compound.

Lubrication and Servicing

Components and assemblies requiring lubrication and servicing are shown in Section 1.

2.3 PREVENTIVE MAINTENANCE AND INSPECTION SCHEDULE

The preventive maintenance and inspection checks are listed and defined in the following table. This table is divided into two basic parts, the "AREA" to be inspected and the "INTERVAL" at which the inspection is to take place. Under the "AREA" portion of the table, the various systems along with the components that make up that system are listed. The "INTERVAL" portion of the table is divided into two columns representing the various inspection time periods. The numbers listed within the interval column represent the applicable inspection code for which that component is to be checked.

The checks and services listed in this schedule are not intended to replace any local or regional regulations that may pertain to this type of equipment nor should the lists be considered as all inclusive. Variances in interval times may occur due to climate and/or conditions and depending on the location and use of the machine.

NOTICE

JLG INDUSTRIES REQUIRES THAT A COMPLETE ANNUAL INSPECTION BE PERFORMED IN ACCORDANCE WITH THE "ANNUAL MACHINE INSPECTION REPORT" FORM.

NOTE: *This machine requires periodic safety and maintenance inspections by a qualified JLG mechanic. Notify JLG dealer if inspection is overdue.*

The inspection and maintenance code numbers are as follows:

1. Check for proper and secure installation.
2. Check for visible damage and legibility.
3. Check for proper fluid level.
4. Check for any structural damage; cracked or broken welds; bent or warped surfaces.
5. Check for leakage.
6. Check for presence of excessive dirt or foreign material.
7. Check for proper operation and freedom of movement.
8. Check for excessive wear or damage.
9. Check for proper tightness and adjustment.
10. Drain, clean and refill.
11. Check for proper operation while pump/motor is running.
12. Check for proper lubrication.
13. Check for evidence of scratches, nicks or rust and for straightness of rod.
14. Check for condition of element; replace as necessary.
15. Check for proper inflation.
16. Check Inspection Decal for current inspection stamp.
17. Decals installed and legible.

SECTION 2 - PROCEDURES

Table 2-2. Preventive Maintenance and Safety Inspection

| AREA | Inspections | |
|--|---|---|
| | Pre-Delivery ¹ or Frequent ² Inspection (Quarterly) | Annual ³ (Yearly) Inspection |
| Scissor Arms | | |
| Scissor arms | 1,2 | 1,2 |
| Safety prop | 1,3 | 1,3 |
| Nuts, bolts, shafts, shields, bearings and locking devices | 1,2 | 1,2 |
| Cylinder/Pivot pins and attaching hardware | 1,2 | 1,2 |
| Platform Assembly | | |
| Platform | 1 | 1 |
| Platform Gate Assembly | 1,3 | 1,3 |
| Extension Deck and Locks | 1,3 | 1,3 |
| Guard rails and floor | 1,2 | 1,2 |
| Platform roll pins and fold down rails | 1 | 1 |
| Lanyard Anchorage Point | 1,2,6 | 1,2,6 |
| Chassis Assembly | | |
| Wheel rim nuts | 1 ⁵⁰ | 1 ⁵⁰ |
| Tires | 1,2 | 1,2 |
| Oscillating axle and lock nut | 3 | 3 |
| Steer, Drive and axle components | 1,2,3 | 1,2,3 |
| Levelling jacks and stabilizers | 3 | 3 |
| Hydraulic tray, battery, engine compartment covers | 1,3 | 1,3 |
| Static Strap | 1 | 1 |
| Pot Hole Protection system | 1,2,3 | 1,2,3 |
| Side-Compartment Door Installation | 1,3,5 | 1,3,5 |
| Drive Motors | 1,4,5 | 1,4,5 |
| Platform Ladder | 1,5 | 1,5 |
| Drive Brakes | 1,5 | 1,5 |
| Drive Hubs | 1,5 | 1,5 |
| Engine Mounts | 1 | 1 |
| Engine Oil | 3 | 3 |
| Exhaust System | 1,3 | 1,3 |
| Sliding Wear Pads** | 1,2,5,7 | 1,2,5,7 |
| Fuel Tank | 1,4 | 1,4 |
| Function/Controls | | |
| Control levers, switches, gauges and instruments | 3,5 | 3,5 |
| Detents properly lock, Control enclosure and protective boots/guards | 1,3 | 1,3 |
| Emergency stop switches at ground and platform | 3 | 3 |
| Lift, drive and speed cut-outs | 3 | 3 |
| Auxiliary power system | 3 | 3 |
| Function enable system | 3 | 3 |
| Brakes | 1,3,9 | 1,3,9 |

Table 2-2. Preventive Maintenance and Safety Inspection

| AREA | Inspections | |
|---|---|---|
| | Pre-Delivery ¹ or Frequent ² Inspection (Quarterly) | Annual ³ (Yearly) Inspection |
| Machine functions | 3 | 3 |
| Joystick/toggle return to neutral/off when released | 1,3 | 1,3 |
| Power System | | |
| Engine Idle, Throttle and RPM | 1,3,7 | 1,3,7 |
| Engine Fluids: Oil | 4 | 4 |
| Engine Fluids: Coolant | 1,4,7 | 1,4,7 |
| Air Filter | 1,5 | 1,5 |
| Fuel Filter(s) | 1,5 | 1,5 |
| Exhaust System | 1,3 | 1,3 |
| Batteries | 1,4 | 1,4 |
| Battery Fluid | 4 | 4 |
| Battery Charger | 1 | 3 |
| Hydraulic/Electric System | | |
| Hydraulic cylinders | 2,4,5 | 2,4,5 |
| Pumps, oil lines and reservoir | 1,2,4 | 3 |
| Hydraulic filter | 4,5,7 | 4,5,7 |
| Hydraulic tank, cap, breather and vent | 3,4,5 | 3,4,5 |
| Hydraulic fitting | 1,4 | 1,4 |
| Electrical Connections | 1,2 | 1,2 |
| Switches, gauges, horn and lights | 3 | 3 |
| Switches and controls | 1,3 | 1,3 |
| All hydraulic pressures | 3 | 3 |
| Hydraulic Fluid | 4 | 4 |
| General | | |
| No unauthorized modification or additions | 9 | 9 |
| Paint and overall appearance | 5 | 5 |
| Operation and safety manual | 9 | 9 |
| General Structural Condition and Welds | 2 | 2 |
| Grease and lubrication specification | 9 | 9 |
| Function test of all system | 9 | 9 |
| Notify JLG change in machine ownership | 9 | 9 |
| ANSI Manual of Responsibilities and AEM Safety Manual in Storage Box (ANSI and ANSI Export only) | 9 | 9 |
| Capacity Decals | 9 | 9 |
| All decals/placards | 9 | 9 |
| Annual machine inspection | 9 | 9 |
| Safety publication | 9 | 9 |
| All fasteners, pins, shields and covers | 1,2 | 1,2 |

SECTION 2 - PROCEDURES

Table 2-2. Preventive Maintenance and Safety Inspection

| AREA | Inspections | |
|--|---|---|
| | Pre-Delivery ¹ or Frequent ² Inspection (Quarterly) | Annual ³ (Yearly) Inspection |
| <p>Footnotes:</p> <p>¹ Prior to each sale, lease, or delivery</p> <p>² In service for 3 months; Out of service for 3 months or more; Purchased used</p> <p>³ Annually, no later than 13 months from the date of the prior inspection, Includes all daily and quarterly inspections, mandated by regulating body</p> <p>⁵⁰ Indicates a 50 hour interval required to perform task after initial use of machine. This only occurs once in machine life</p> <p>** Refer to Operatoion Manual for machine specific instructions</p> | | |
| <p>Performance Codes:</p> <p>1 - Check for proper and secure: installation, adjustment, or torque</p> <p>2 - Visual inspection for damage: (cracks, corrosion, abrasions, distortion, excessive wear, broken welds, gouges, chafing and threads showing)</p> <p>3 - Proper operation</p> <p>4 - Check for proper sealing, signs of leakage and fluid level</p> <p>5 - Clean and free of debris</p> <p>6 - Decals installed and legible</p> <p>7 - Check for proper tolerances, routing, and lubrication</p> <p>8 - Fully Charged</p> <p>9 - Verify/Perform</p> | | |

2.4 LUBRICATION INFORMATION

Hydraulic System

1. The primary enemy of a hydraulic system is contamination. Contaminants enter the system by various means, e.g., using inadequate hydraulic oil, allowing moisture, grease, filings, sealing components, sand, etc., to enter when performing maintenance, or by permitting the pump to cavitate due to insufficient system warm-up or leaks in the pump supply (suction) lines.
2. The design and manufacturing tolerances of the component working parts are very close, therefore, even the smallest amount of dirt or foreign matter entering a system can cause wear or damage to the components and generally results in faulty operation. Every precaution must be taken to keep hydraulic oil clean, including reserve oil in storage. Hydraulic system filters should be checked, cleaned, and/or replaced as necessary, at the specified intervals required in the Lubrication Chart in Section 1 and the Preventive Maintenance and Inspection Chart in this section. Always examine filters for evidence of metal particles.
3. Cloudy oils indicate a high moisture content which permits organic growth, resulting in oxidation or corrosion. If this condition occurs, the system must be drained, flushed, and refilled with clean oil.
4. It is not advisable to mix oils of different brands or types, except as recommended, as they may not contain the same required additives or be of comparable viscosities. Good grade mineral oils, with viscosities suited to the ambient temperatures in which the machine is operating, are recommended for use.

NOTE: *Metal particles may appear in the oil or filters of new machines due to the wear-in of meshing components.*

Hydraulic Oil

1. Refer to Section 1 for recommendations for viscosity ranges.
2. JLG recommends Standard UTTO Fluid, which has an SAE viscosity of 10W-30 and a viscosity index of 152.

NOTE: *Start-up of hydraulic system with oil temperatures below -15°F (-26°C) is not recommended. If it is necessary to start the system in a sub-zero environment, it will be necessary to heat the oil with a low density, 100VAC heater to a minimum temperature of -15°F (-26°C).*

3. The only exception to the above is to drain and fill the system with Premium Hydraulic Fluid. This will allow start up at temperatures down to -20°F (-29°C). However, use of this oil will give poor performance at temperatures above 120°F (49°C). Systems using Premium Hydraulic Fluid should not be operated at temperatures above 200°F (94°C) under any condition.

Changing Hydraulic Oil

1. Use of any of the recommended crankcase or hydraulic oils eliminates the need for changing the oil on a regular basis. However, filter elements must be changed after the first 50 hours of operation and every 300 hours thereafter. If it is necessary to change the oil, use only those oils meeting or exceeding the specifications appearing in this manual. If unable to obtain the same type of oil supplied with the machine, consult local supplier for assistance in selecting the proper equivalent. Avoid mixing petroleum and synthetic base oils. JLG Industries recommends changing the hydraulic oil every two years.
2. Use every precaution to keep the hydraulic oil clean. If the oil must be poured from the original container into another, be sure to clean all possible contaminants from the service container. Always clean the mesh element of the filter and replace the cartridge any time the system oil is changed.
3. While the unit is shut down, a good preventive maintenance measure is to make a thorough inspection of all hydraulic components, lines, fittings, etc., as well as a functional check of each system, before placing the machine back in service.

Lubrication Specifications

Specified lubricants, as recommended by the component manufacturers, are always the best choice, however, multi-purpose greases usually have the qualities which meet a variety of single purpose grease requirements. Should any question arise regarding the use of greases in maintenance stock, consult your local supplier for evaluation.

2.5 THROTTLE ACTUATOR ADJUSTMENT

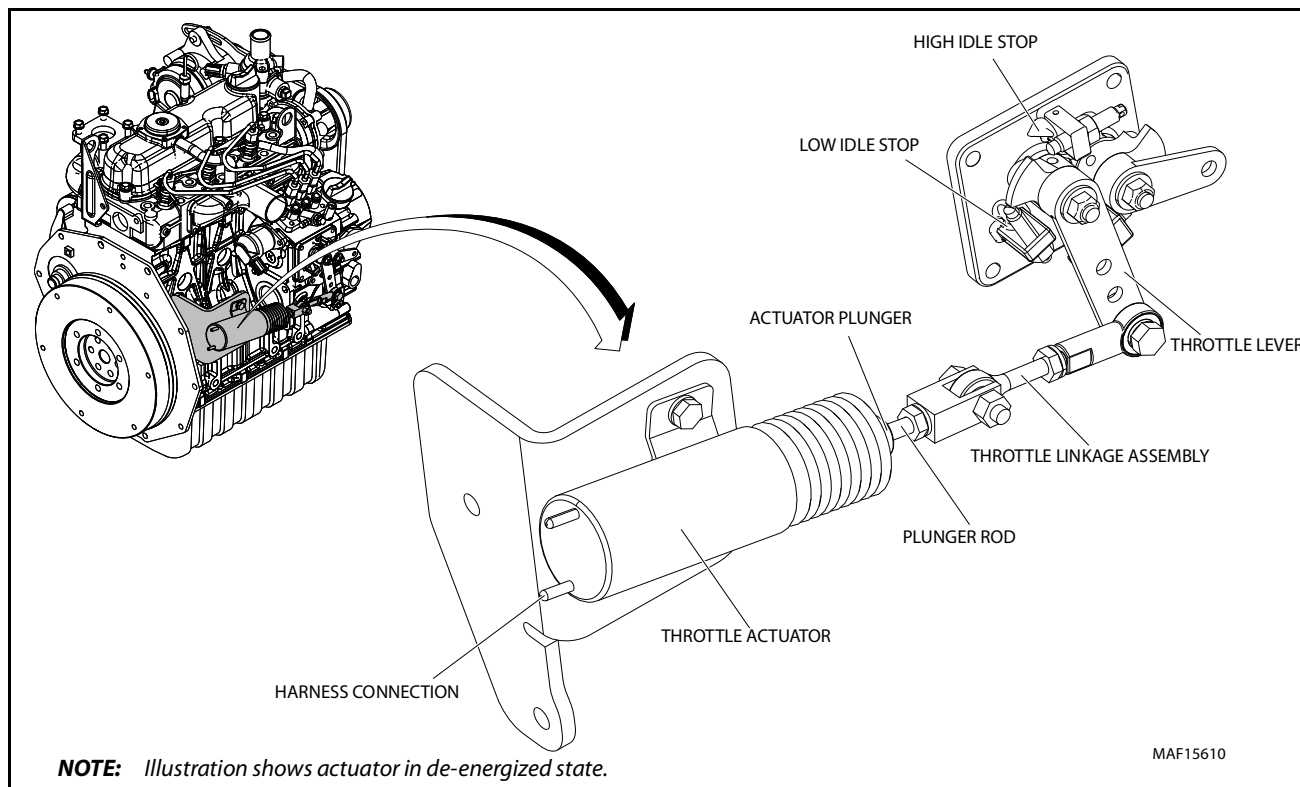


Figure 2-1. Throttle Assembly and Linkages

Air Gap Setting

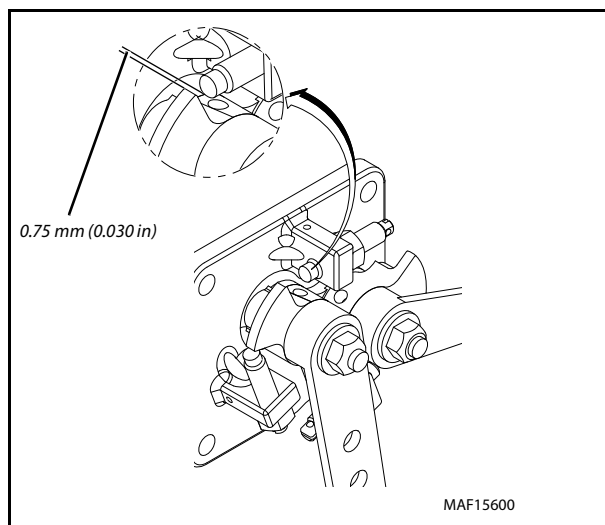


Figure 2-2. Air Gap Setting

AIR GAP SETTING PROCEDURE

1. The distance between the throttle arm and the high idle stop must be 0.75 mm (0.030 in) when the actuator is energized.


NOTE: When the actuator solenoid is energized, the actuator plunger must be fully seated to prevent coil burnout.

Diagnosis of Actuator

The common failure modes that are found in the actuator are as follows.

| Description | Item Check List | Action |
|---|---|---|
| Throttle actuator plunger or rod separation | Inspect the actuator. Check if the plunger and threaded rod have separated or if the threaded rod spins in the plunger. | Replace the actuator |
| Ground fault | Make sure that the actuator harness is not damaged. | Replace the harness if damage is found. |
| | Inspect the ground wire connection. | If necessary remove the ground or chassis connection and clean the paint or oil from the connection location. |
| Blown fuse | Examine the respective 30 Amp fuse to confirm if it is still good. Blown fuse can indicate coil burnout. | If the fuse has been overloaded/ burned-out, replace the respective fuses. |
| Throttle actuator coil burnout | Coil burnout will result if the plunger is not able to fully retract or if the machine switches between high idle and low idle multiple times in less than a minute. | If the actuator coil is burned-out, replace the actuator |
| | The actuator coil becomes burned-out due to the following reasons: <ul style="list-style-type: none"> • Repeated blown fuses • The distance between the throttle arm and high idle stop is not maintained as 0.75 mm (0.030 in) • If the resistance in de-energized state and energized state is outside limit | |

Adjustment of the Actuator

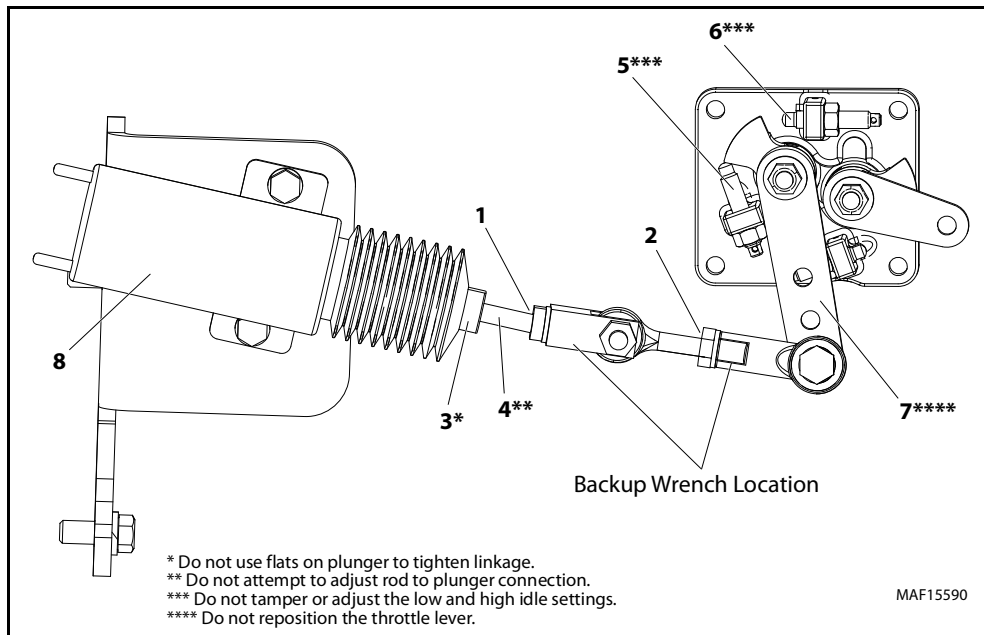

- | | |
|----------------------------------|----------------------|
| 1. Clevis Adjustment Connection | 5. Low Idle Stop |
| 2. Eyebolt Adjustment Connection | 6. High Idle Stop |
| 3. Actuator Plunger | 7. Throttle Lever |
| 4. Plunger Rod | 8. Throttle Actuator |

ADJUSTMENT OF THE ACTUATOR PROCEDURE

1. Adjust the nuts at the clevis connection or at the eye bolt connection to maintain the proper air gap between the throttle arm and the high idle stop, if necessary.

NOTE: Make sure that the plunger rod does not rub the eyebolt.

2. Make sure that the linkage and clevis is correctly adjusted before tightening of linkage assembly.
3. Use lockwasher and jam nut to tighten the linkage assembly.

Adjustment Verification of Actuator

1. Measure the plunger travel distance from energized to de-energized position. The travel distance must not be more than 1 in.
2. Verify plunger moves freely without binding.
3. If binding occurs, check the plunger rod. It should not come into contact with the eye bolt. Also verify the spacer is installed on the correct side of lever arm.
4. Use digital multimeter to measure de-energized state (0 to 1 ohms) and energized state (14 to 17 ohms) of actuator.

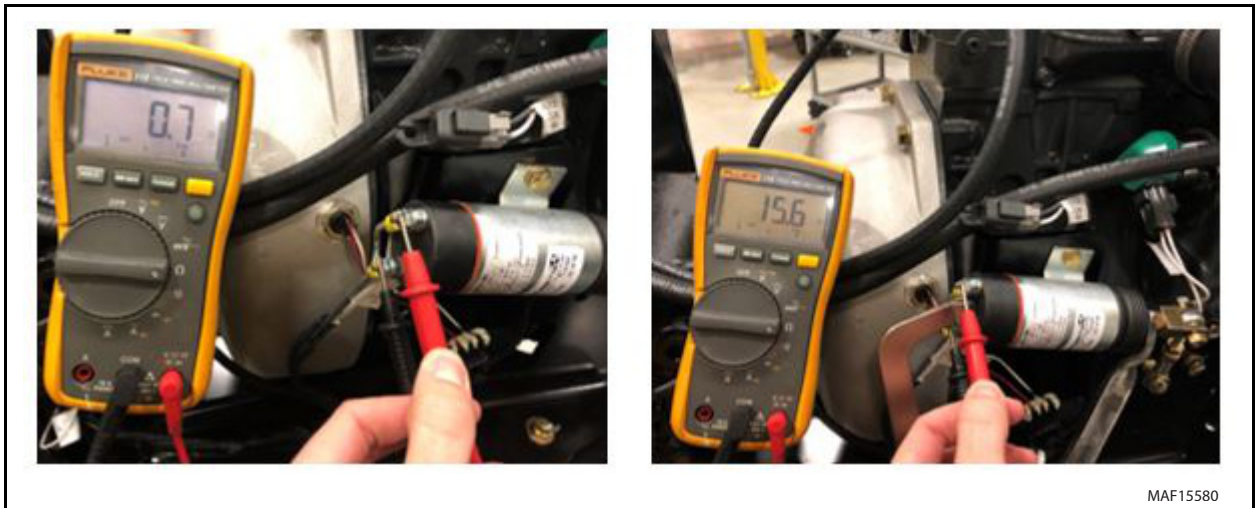


Figure 2-4. Adjustment Verification of Actuator

2.6 CYLINDERS - THEORY OF OPERATION

Cylinders are of the double acting type. The Lift and Steer systems incorporate double acting cylinders. A double acting cylinder is one that requires oil flow to operate the cylinder rod in both directions. Directing oil (by actuating the corresponding control valve to the piston side of the cylinder) forces the piston to travel toward the rod end of the barrel, extending the cylinder rod (piston attached to rod). When the oil flow is stopped, movement of the rod will stop. By directing oil to the rod side of the cylinder, the piston will be forced in the opposite direction and the cylinder rod will retract.

A holding valve is used in the Lift circuit to prevent retraction of the cylinder rod should a hydraulic line rupture or a leak develop between the cylinder and its related control valve.

2.7 VALVES - THEORY OF OPERATION

Solenoid Control Valves (Bang-Bang)

Control valves used are four-way three-position solenoid valves of the sliding spool design. When a circuit is activated and the control valve solenoid energizes, the spool is shifted and the corresponding work port opens to permit oil flow to the component in the selected circuit, with the opposite work port opening to reservoir. Once the circuit is deactivated (control returned to neutral), the valve spool returns to neutral (center) and oil flow is then directed through the valve body and returns to reservoir. A typical control valve consists of the valve body, sliding spool, and two solenoid assemblies. The spool is machine fitted in the bore of the valve body. Lands on the spool divide the bore into various chambers, which, when the spool is shifted, align with corresponding ports in the valve body open to common flow. At the same time other ports would be blocked to flow. The spool is spring-loaded to center position, therefore when the control is released, the spool automatically returns to neutral, prohibiting any flow through the circuit.

Proportional Control Valves

The proportional control valves provide a power output matching that required by the load. A small line connected to a load sensing port feeds load pressure back to a sequence valve. The sequence valve senses the difference between the load and pump outlet pressure, and varies the pump displacement to keep the difference constant. This differential pressure is applied across the valve's meter-in spool, with the effect that pump flow is determined by the degree of spool opening, independent of load pressure. Return lines are connected together, simplifying routing of return flow and to help reduce cavitation. Load sensing lines connect through shuttle valves to feed the highest load signal back to the sequence valve. Integral actuator port relief valves, anti-cavitation check valves, and load check valves are standard.

Relief Valves

Main relief valves are installed at various points within the hydraulic system to protect associated systems and components against excessive pressure. Excessive pressure can be developed when a cylinder reaches its limit of travel and the flow of pressurized fluid continues from the system control. The relief valve provides an alternate path for the continuing flow from the pump, thus preventing rupture of the cylinder, hydraulic line or fitting. Complete failure of the system pump is also avoided by relieving circuit pressure. The relief valve is installed in the circuit between the pump outlet (pressure line) and the cylinder of the circuit, generally as an integral part of the system valve bank. Relief pressures are set slightly higher than the load requirement, with the valve diverting excess pump delivery back to the reservoir when operating pressure of the component is reached.

Crossover Relief Valves

Crossover relief valves are used in circuits where the actuator requires an operating pressure lower than that supplied to the system. When the circuit is activated and the required pressure at the actuator is developed, the crossover relief diverts excess pump flow to the reservoir. Individual, integral reliefs are provided for each side of the circuit.

2.8 COMPONENT FUNCTIONAL DESCRIPTION

Hydraulic Pump

The machine is equipped with two hydraulic pumps, a function pump and a drive pump. The function pump is a single-section gear pump that controls the lift and steer functions and provides a maximum output of 4.75 gpm (18 lpm). The drive pump is a single-section piston pump that controls the drive function and provides an output of 22 gpm (83.3 lpm).

Lift Cylinder Counterbalance/Manual Descent Valve

The lift cylinder counterbalance/manual descent valve is located on top of the lift cylinder. The counterbalance valve is used to hold the platform in place when raised. A cable is connected to the valve which, when pulled, manually opens the lift down port and allows the platform to be lowered in the event hydraulic power is lost.

2.9 WEAR PADS

Sliding Pads

The original thickness of the sliding pads is 2 inches (51 mm). Replace sliding pads when worn to 1.875 inches (48 mm).

2.10 CYLINDER CHECKING PROCEDURES

NOTE: Cylinder checks must be performed any time a cylinder component is replaced or when improper system operation is suspected.

Cylinder w/o Counterbalance Valves - Steer Cylinder

NOTICE

OPERATE FUNCTIONS FROM GROUND CONTROL STATION ONLY. DO NOT FULLY EXTEND CYLINDER TO END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

1. Using all applicable safety precautions, activate motor and fully extend cylinder to be checked. Shut down motor.
2. Carefully disconnect hydraulic hose from retract port of cylinder. There will be initial weeping of hydraulic fluid which can be caught in a suitable container. After the initial discharge, there should be no further leakage from the retract port.
3. Activate motor and activate cylinder extend function. Check retract port for leakage.
4. If cylinder leakage is 6-8 drops per minute or more, piston seals are defective and must be replaced. If cylinder retract port leakage is less than 6-8 drops per minute, carefully reconnect hose to retract port and retract cylinder.
5. With cylinder fully retracted, shut down motor and carefully disconnect hydraulic hose from cylinder extend port.
6. Activate motor and activate cylinder retract function. Check extend port for leakage.
7. If cylinder leakage is 6-8 drops per minute or more, piston seals are defective and must be replaced. If extend port leakage is less than 6-8 drops per minute, carefully reconnect hose to extend port, then activate cylinder through one complete cycle and check for leaks.

Cylinders w/Single Counterbalance Valves - Lift Cylinder

NOTICE

OPERATE ALL FUNCTIONS FROM GROUND CONTROL STATION ONLY.

1. Using all applicable safety precautions, activate hydraulic system.

WARNING

WHEN WORKING ON THE LIFT CYLINDER, RAISE THE PLATFORM COMPLETELY AND SUPPORT THE PLATFORM USING A SUITABLE OVERHEAD LIFTING DEVICE. DO NOT FULLY EXTEND LIFT CYLINDER TO END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Raise platform completely then retract cylinder slightly to avoid trapping pressure. Place a suitable overhead lifting device approximately 1 inch (2.5 cm) below the platform.
3. Shut down hydraulic system and allow machine to sit for 10-15 minutes. Carefully remove hydraulic hoses from cylinder port block.
4. There will be initial weeping of hydraulic fluid, which can be caught in a suitable container. After the initial discharge, there should not be any further leakage from the ports. If leakage continues at a rate of 6-8 drops per minute or more, the counterbalance valve is defective and must be replaced.
5. If no repairs are necessary or when repairs have been made, carefully reconnect hydraulic hoses to the appropriate ports.
6. Remove lifting device from platform, activate hydraulic system and run cylinder through one complete cycle to check for leaks.

2.11 LIFT CYLINDER REMOVAL AND INSTALLATION

WARNING

NEVER WORK UNDER AN ELEVATED PLATFORM UNTIL IT HAS BEEN RESTRAINED FROM MOVEMENT WITH SAFETY PROPS, BLOCKING OR OVERHEAD SLINGS.

Removal

1. Place the machine on a flat and level surface with enough overhead clearance to raise the platform. Start the motor and raise the platform enough to rotate the scissor arm safety prop into position, lower the arms onto the prop. Shut down the engine and attach a suitable overhead lifting device to the platform for added support. (See Figure 2-5.)
2. Using a suitable lifting device capable of lifting 160 lb (73 kg), place a strap/sling around the lift cylinder barrel to support it when the upper and lower attach pins are removed in the following steps. (See Figure 2-6.)
3. Remove the bolt and lock nut securing the cylinder rod attach pin to the upper inner arm assembly. Using a suitable brass drift, drive out the rod end attach pin from the arm assembly.
4. Start the motor and retract the lift cylinder rod completely by using the ground control - platform lift down switch. Shut machine down.
5. Tag and disconnect the lift cylinder hydraulic lines, then cap the lines and ports.
6. Disconnect the manual descent cable from the side of the cylinder valve block.
7. Move the previously installed lift cylinder support strap, or add a new strap, to balance the cylinder when removing the lower attach pin.
8. Remove the bolt and lock nut securing the barrel end attach pin to the lower arm assembly. Using a suitable brass drift, drive out the barrel end attach pin from the arm assembly.
9. Using the lifting device, carefully maneuver the cylinder from the scissor lift and place in a suitable work area.

Installation

1. Install lift cylinder in place using suitable lifting straps, aligning barrel end attach pin mounting holes on lower arm assembly.
2. Using a suitable drift, drive the barrel end attach pin through the mounting holes in the lift cylinder and the lower arm assembly. Secure in place with the bolt and a new locknut.
3. Remove cylinder port plugs and hydraulic line caps and correctly attach lines to cylinder ports. Reconnect the manual descent cable to the valve block.
4. Extend the cylinder rod until the attach pin hole aligns with those in the upper arm assembly. Using a suitable drift, drive the cylinder rod attach pin through the aligned holes, taking care to align the pin retaining hole with the hole in arm assembly. Secure the pin in place with the bolt and a new locknut.
5. Lower platform to stowed position and shut down motor. Check hydraulic fluid level and adjust accordingly



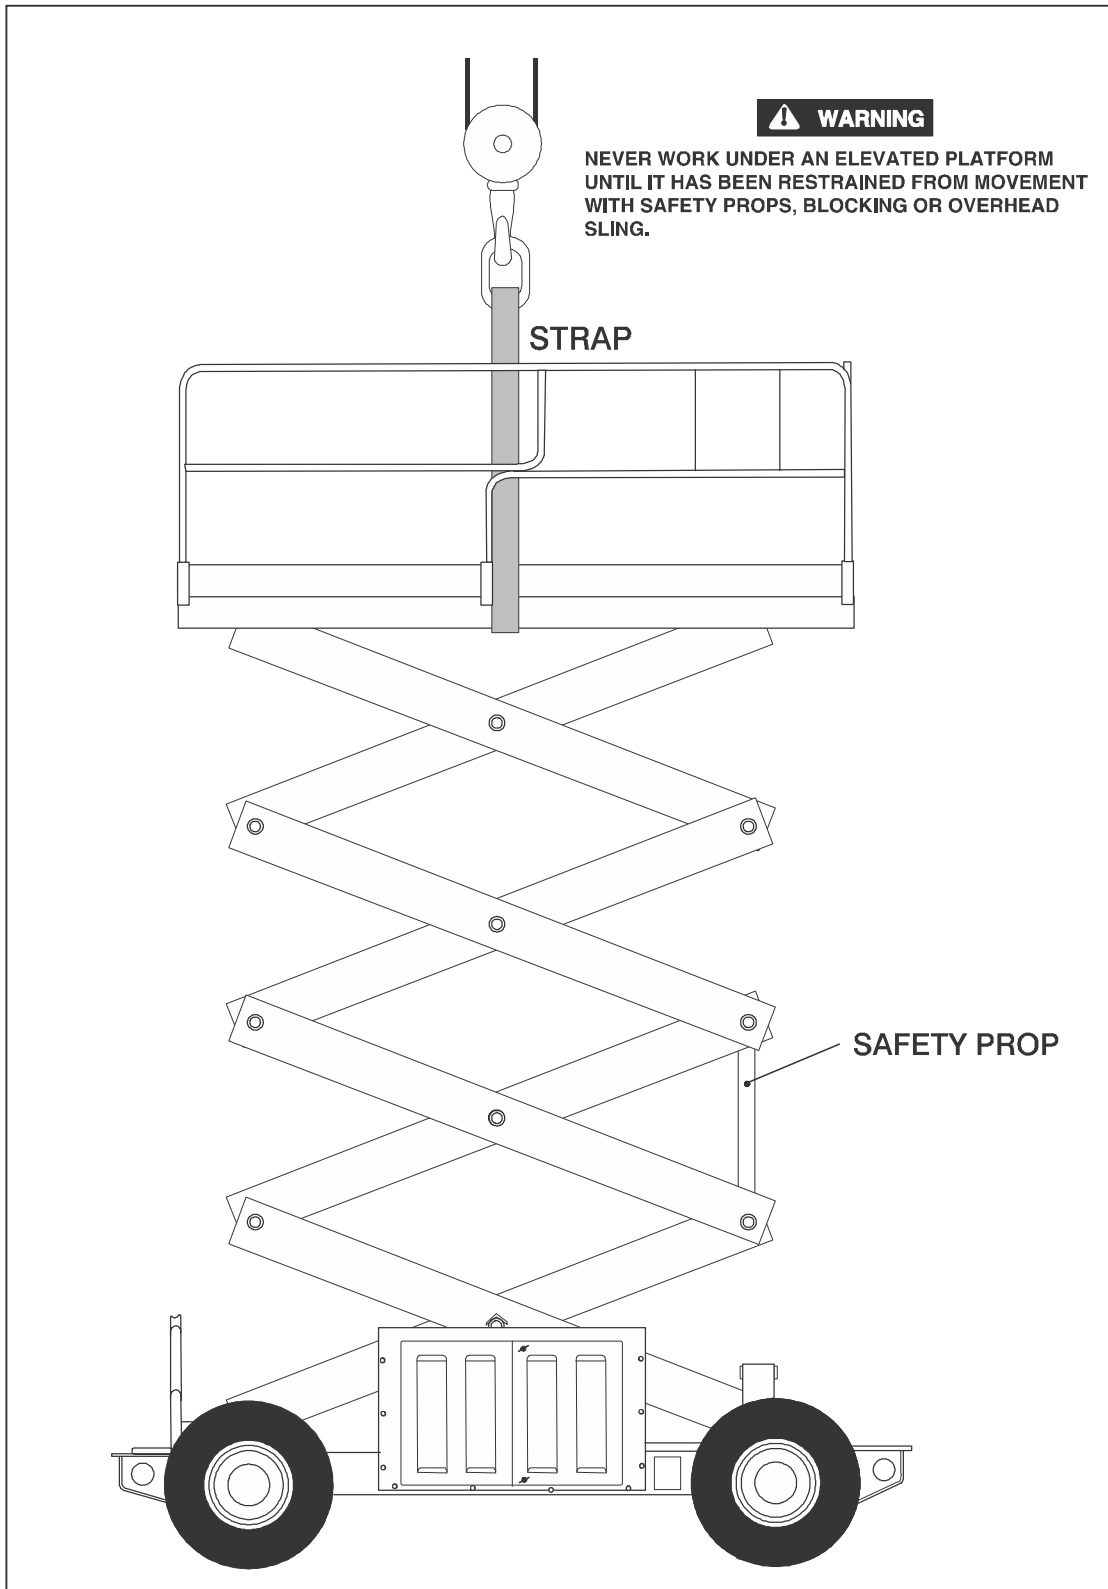


Figure 2-5. Arms and Platform Positioning and Support, Cylinder Repair

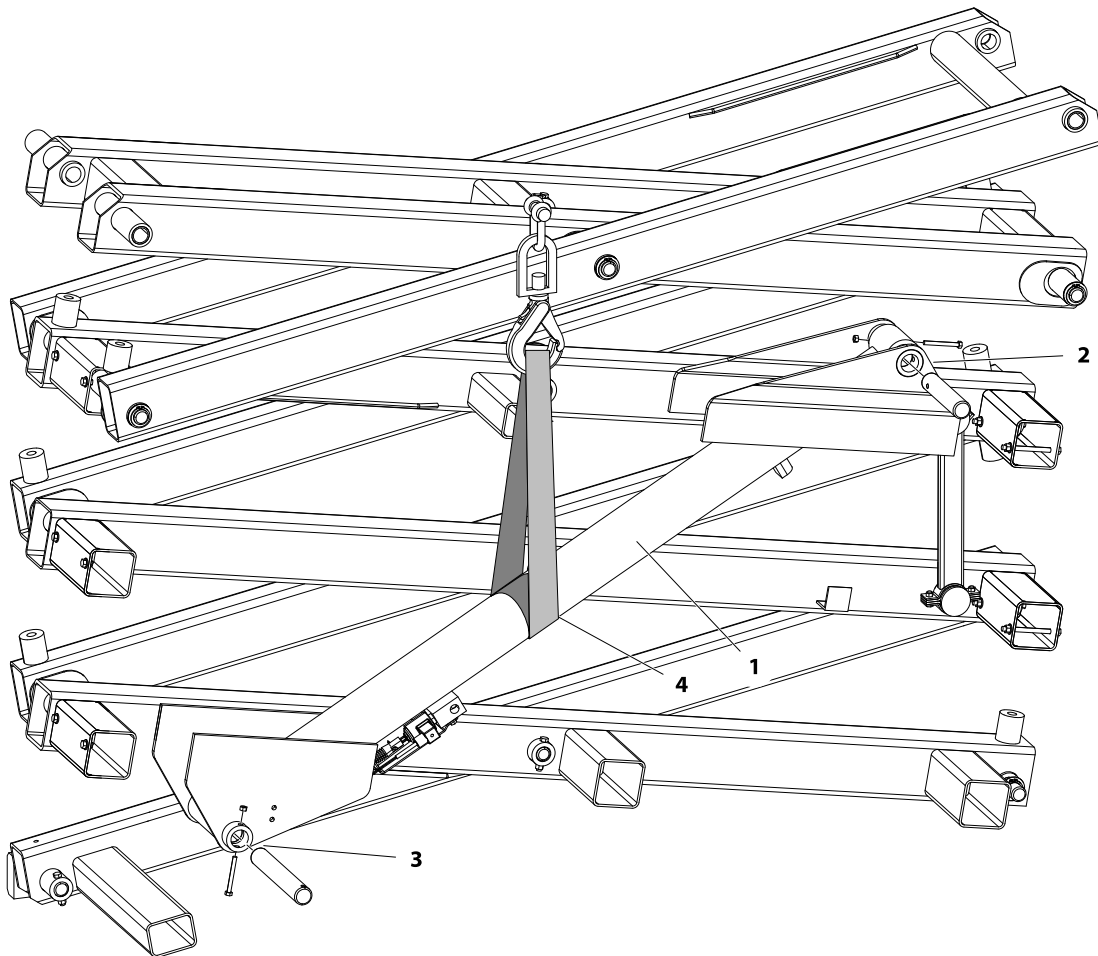

- 1. Lift Cylinder
- 2. Upper Attach Pin, Bolt and Locking Nut
- 3. Lower Attach Pin, Bolt and Locking Nut
- 4. Overhead Lifting Hook with Sling/Strap

Figure 2-6. Lift Cylinder Removal - Cylinder Support

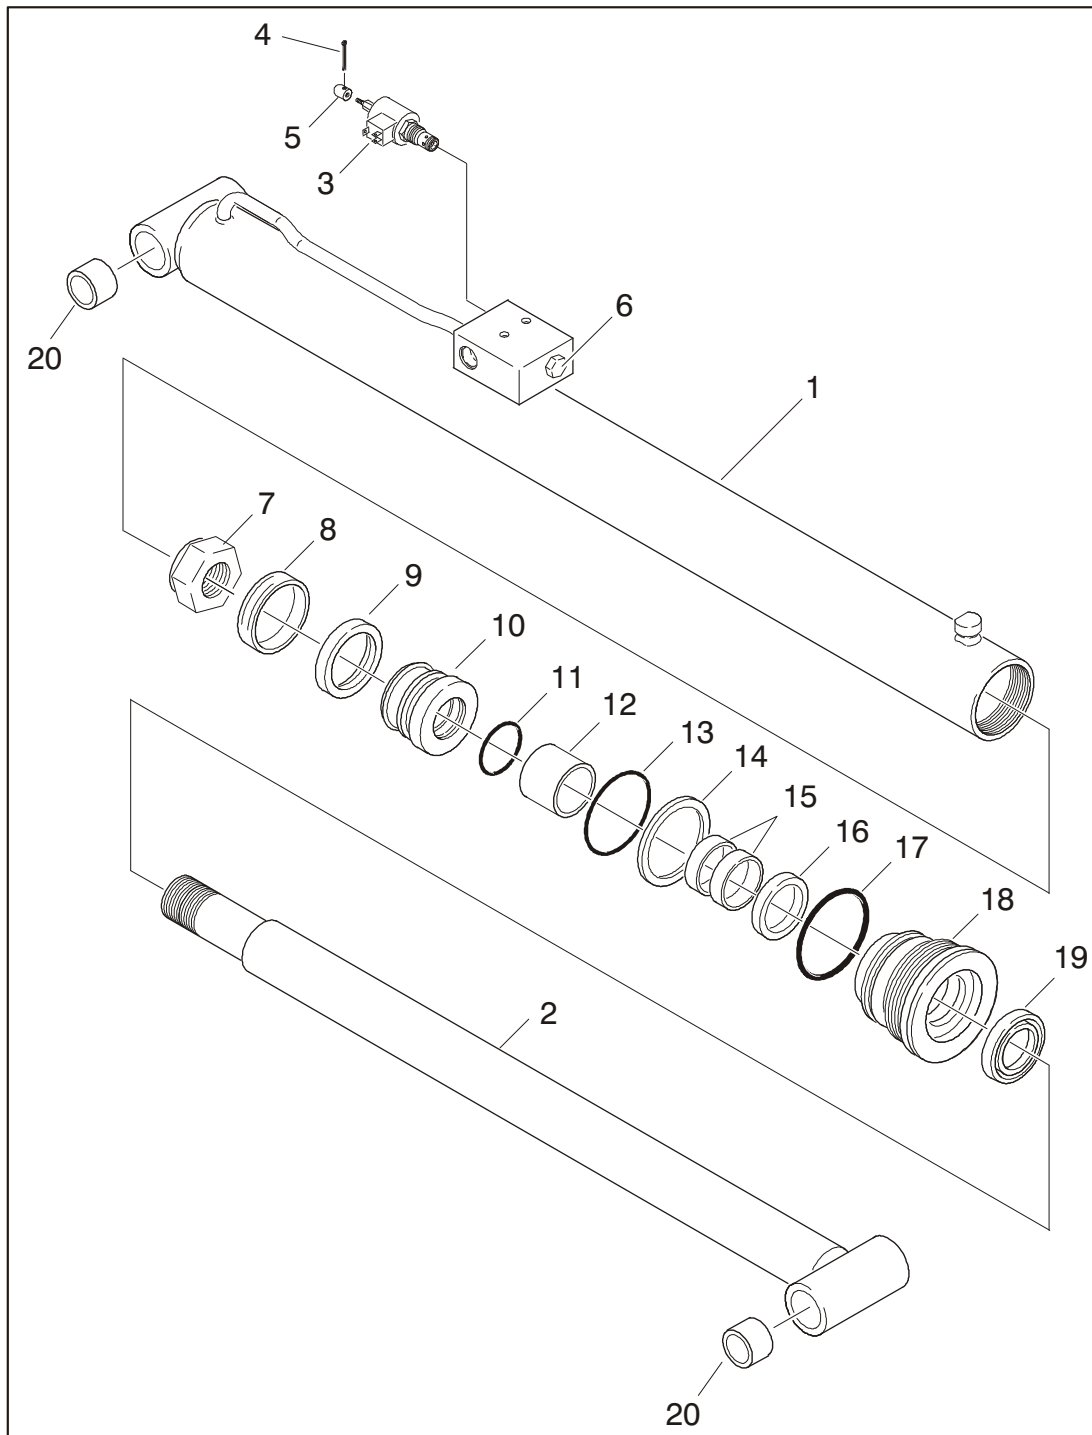

- | | | | |
|-------------------|---------------------------|-----------------|-------------|
| 1. Barrel | 6. Restrictor/Check Valve | 11. O-Ring | 16. Seal |
| 2. Rod | 7. Locknut | 12. Spacer | 17. O-Ring |
| 3. Solenoid Valve | 8. Wear Ring | 13. O-Ring | 18. Head |
| 4. Cotter Pin | 9. Seal | 14. Backup Ring | 19. Wiper |
| 5. Cable Adaptor | 10. Piston | 15. Wear Ring | 20. Bushing |

Figure 2-7. Lift Cylinder

2.12 CYLINDER REPAIR

Disassembly

NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

NOTICE

DO NOT FULLY EXTEND CYLINDER TO END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if necessary.
3. If applicable, remove the cartridge-type holding valve and fittings from the cylinder port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

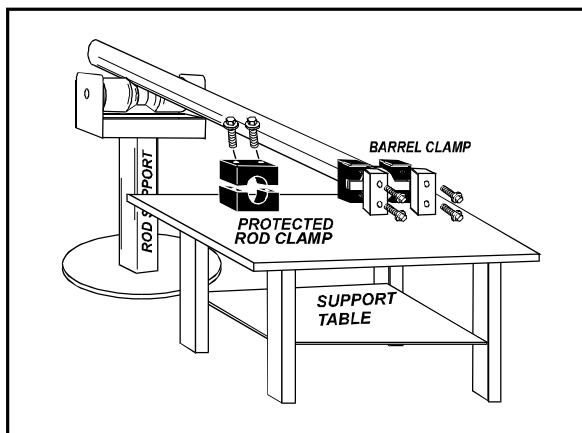


Figure 2-8. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

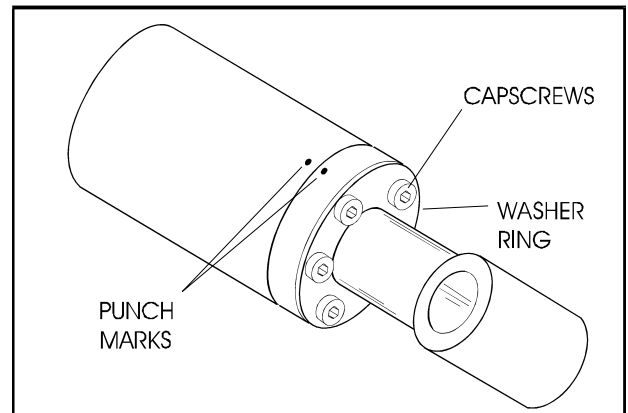


Figure 2-9. Capscrew Removal

6. Using a spanner wrench, loosen the end cap or head retainer, and remove from cylinder barrel.
7. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

8. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.

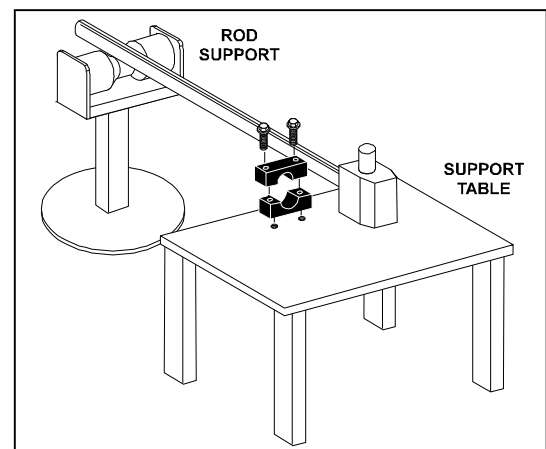


Figure 2-10. Cylinder Rod Support

9. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
10. Loosen and remove the capscrew(s), if applicable, which attach the tapered bushing to the piston.

SECTION 2 - PROCEDURES

11. Insert the capscrew(s) in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrew(s) until the bushing is loose on the piston.
12. Remove the bushing from the piston.

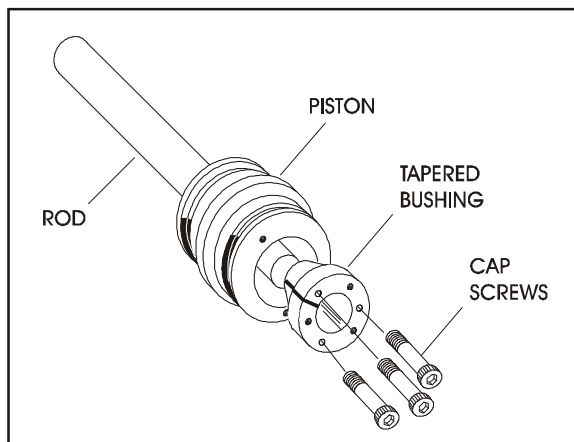


Figure 2-11. Tapered Bushing Removal

13. Screw the piston CCW, by hand, and remove the piston from cylinder rod.
14. Remove and discard the piston o-rings, seal rings, and backup rings.
15. Remove piston spacer, if applicable, from the rod.
16. Remove the rod from the holding fixture. Remove the cylinder head gland and retainer plate, if applicable. Discard the o-rings, backup rings, rod seals, and wiper seals.
8. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
9. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
10. Inspect threaded portion of head for damage. Dress threads as necessary.
11. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
12. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
13. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
 - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
 - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
 - c. Lubricate inside of the steel bushing with WD40 prior to bearing installation.
 - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.
14. Inspect travel limiting collar or spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
15. If applicable, inspect port block fittings and holding valve. Replace as necessary.
16. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
17. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

Cleaning and Inspection

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect threaded portion of barrel for damage. Dress threads as necessary.
6. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
7. Inspect threaded portion of piston for damage. Dress threads as necessary.

Assembly

NOTE: Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

Apply a light film of hydraulic oil to all components prior to assembly.

1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

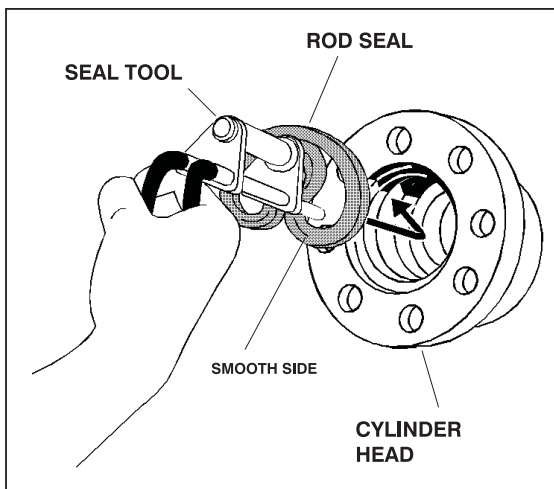


Figure 2-12. Rod Seal Installation

NOTICE

WHEN INSTALLING "POLY-PAK" PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO WIPER SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

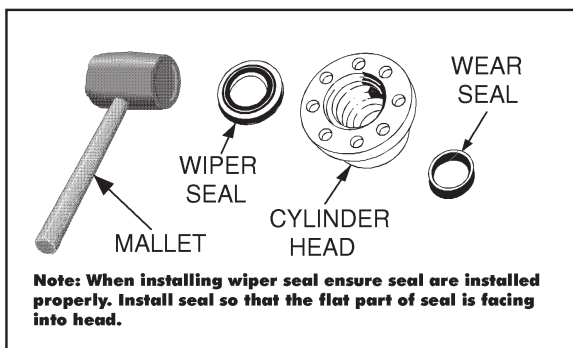


Figure 2-13. Wiper Seal Installation

3. Place a new o-ring and backup seal in the applicable outside diameter groove of the cylinder head.

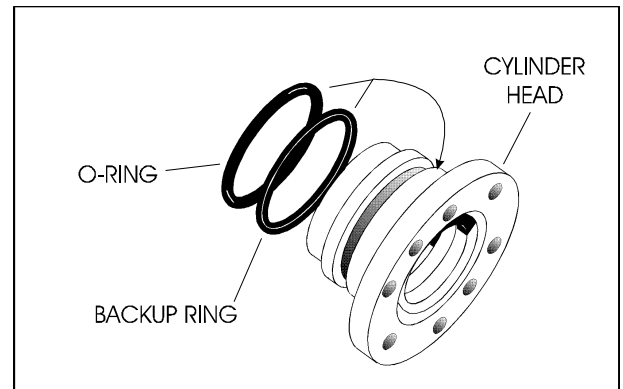


Figure 2-14. Installation of Head Seal Kit

4. Install washer ring onto rod, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Carefully slide the piston spacer on the rod.
6. If applicable, correctly place new o-ring in the inner piston diameter groove. (The backup ring side facing the O-ring is grooved.)
7. If applicable, correctly place new seals and guide lock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal.)

NOTE: The backup rings for the solid seal have a radius on one side. This side faces the solid seal. (See magnified insert in Figure 2-15.) The split of seals and backup rings are to be positioned so as not to be in alignment with each other.

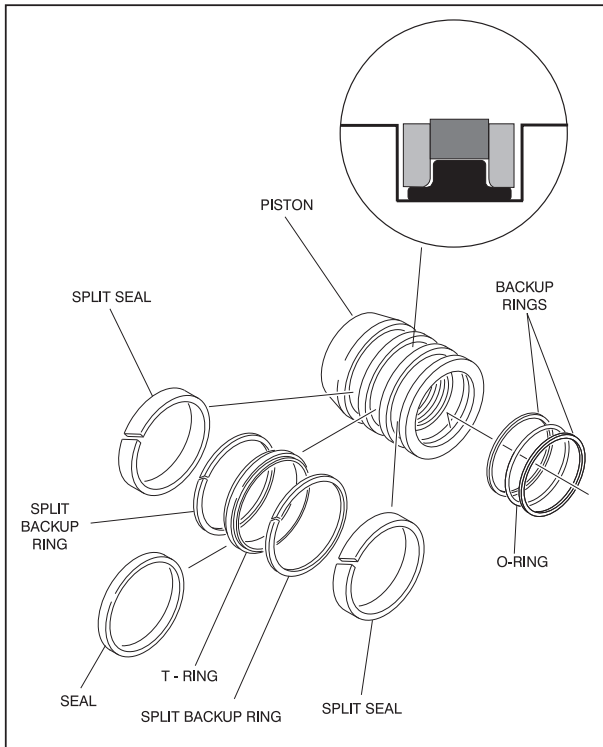


Figure 2-15. Piston Seal Kit Installation

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
9. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and backup rings are not damaged or dislodged.
10. Thread piston onto rod until it abuts the spacer end and install the tapered bushing.

NOTE: When installing the tapered bushing, piston and mating end of rod must be free of oil.

11. Assemble the tapered bushing loosely into the piston and insert JLG capscrews (not vendor capscrews) through the drilled holes in the bushing and into the tapped holes in the piston.

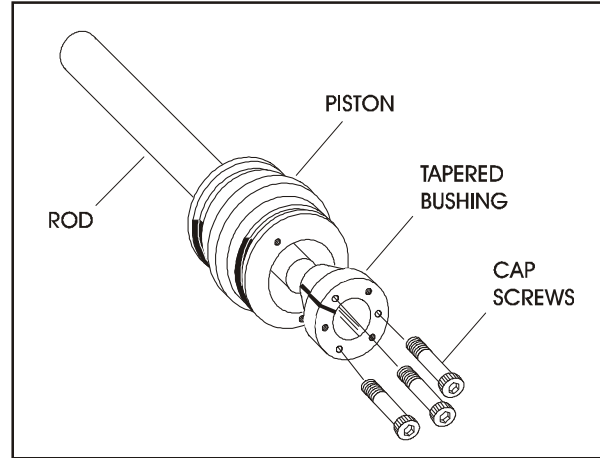


Figure 2-16. Tapered Bushing Installation

12. Tighten the capscrews evenly and progressively in rotation to the specified torque value. (See Table 2-3, Cylinder Component Torque Specifications.)
13. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
 - a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
 - b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

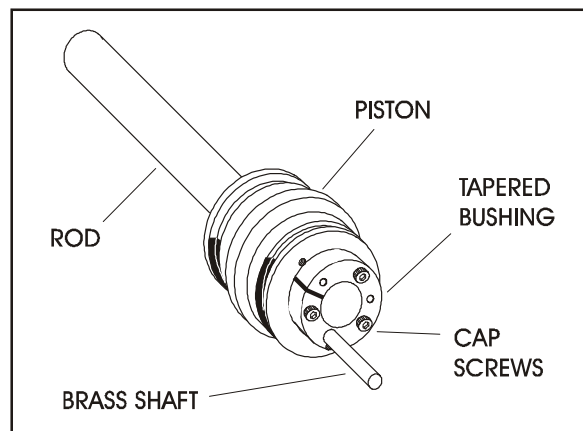


Figure 2-17. Seating the Tapered Bearing

14. Re torque the capscrews evenly and progressively in rotation to the specified torque value spec.
15. Remove the cylinder rod from the holding fixture.

- Place new guide locks and seals in the applicable outside diameter grooves of the cylinder piston. (See Figure 2-15., Piston Seal Kit Installation)

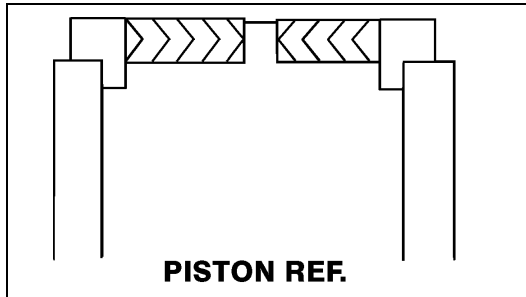


Figure 2-18. Poly-Pak Piston Seal Installation

- Position the cylinder barrel in a suitable holding fixture.

NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

- With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
- Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.
- Secure the cylinder head gland using the washer ring and socket head bolts.

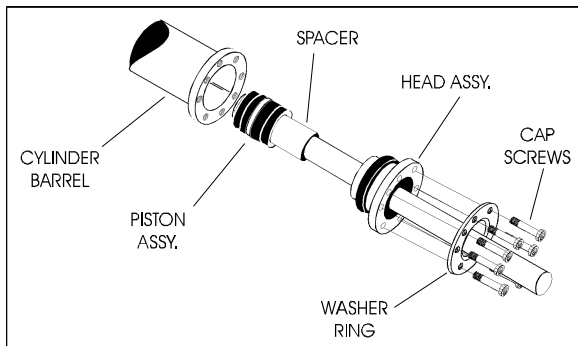


Figure 2-19. Rod Assembly Installation

- After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the reinstallation of any holding valve or valves.

- If applicable, install the cartridge-type holding valve and fittings in the rod port block, using new o-rings as applicable. (See Table 2-3, Cylinder Component Torque Specifications).

CAUTION

IF THE CYLINDER IS TO BE TESTED PRIOR TO INSTALLATION ON THE MACHINE, EXTREME CARE SHOULD BE USED TO INSURE THAT THE OUTER END OF THE ROD IS SUPPORTED. USE EITHER A TRAVELING OVERHEAD HOIST, FORK-LIFT, OR OTHER MEANS TO SUPPORT THE OVERHANGING WEIGHT OF THE EXTENDING ROD.

- If applicable, install the cartridge-type holding valve and fittings in the port block using new o-rings as applicable. (See Table 2-4, Holding Valve Torque Specifications).

Table 2-3. Cylinder Component Torque Specifications

| Component | Torque Value (w/Loctite) |
|--|--------------------------|
| Tapered Bushing Retaining Screws - Lift Cylinder | 80 ft lbs (108 Nm) |
| Head Retaining Screws - Lift Cylinder | 9 ft lbs (12 Nm) |

Table 2-4. Holding Valve Torque Specifications

| Description | Torque Value |
|-------------------------------------|---------------------------------|
| Sun - 7/8 hex M20 x 1.5 thds | 30 - 35 ft lbs (41 - 48 Nm) |
| Sun - 1-1/8 hex 1 - 14 UNS thds | 45 - 50 ft lbs (61 - 68 Nm) |
| Sun - 1-1/4 hex M36 x 2 thds | 150 - 153 ft lbs (204 - 207 Nm) |
| Racine - 1-1/8 hex 1-1/16 - 12 thds | 50 - 55 ft lbs (68 - 75 Nm) |
| Racine - 1-3/8 hex 1-3/16 - 12 thds | 75 - 80 ft lbs (102 - 109 Nm) |
| Racine - 1-7/8 hex 1-5/8 - 12 thds | 100 - 110 ft lbs (136 - 149 Nm) |

2.13 STEER CYLINDER REPAIR

Removal

Before beginning this procedure, ensure that the parking brake is engaged and the rear wheels are chocked.

1. Tag and disconnect the hydraulic lines to the steer cylinder, then cap the steer cylinder hydraulic lines and ports.
2. At each steer spindle, remove the bolt and lock nut securing the steer cylinder to the spindle.
3. When the steer cylinder is disconnected from the steer spindles, turn each wheel by hand to give clearance to remove the steer cylinder from the front axle.
4. Carefully lift the steer cylinder until the cylinder mounting block clears the mounting slot in the bottom of the axle, then slowly remove the cylinder from the axle and place it in a suitable work area.

Disassembly

NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Place the cylinder barrel into a suitable holding fixture.
2. Using a suitable chain wrench, carefully remove the cylinder head retainer from one end of the cylinder barrel.
3. Attach a suitable pulling device to one end of the cylinder rod.

NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, SPACER, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

4. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.
5. Using a suitable chain wrench, carefully remove the remaining cylinder head retainer from the opposite end of the cylinder barrel. Remove the head and remove and discard the wiper, rod seal, O-ring and wear ring.
6. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture.
7. Carefully remove the head from the cylinder rod and remove and discard the wiper, rod seal, o-ring and wear ring.
8. Carefully remove the spacers from the cylinder rod, then remove the retaining rings securing the piston in place on the cylinder rod. Discard the retaining rings.

9. Carefully remove the piston from the cylinder rod. Remove and discard the T-seal and o-ring.
10. Remove the cylinder rod from the holding fixture.

Cleaning and Inspection

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress the rod with Scotch Brite or equivalent. Replace the rod if necessary.
3. Inspect the threaded portion of the rod for excessive damage. Dress the threads as necessary.
4. Inspect the inner surface of the cylinder barrel tube for scoring or other damage. Check the inside diameter for tapering or ovality. Replace the barrel if necessary.
5. Inspect the piston surface for damage, scoring and distortion. Dress the piston surface or replace the piston as necessary.
6. Inspect the seal and o-ring grooves in the piston for burrs and sharp edges. Dress applicable surfaces as necessary.
7. Inspect the inside diameter of the spacers and heads for scoring or other damage and for ovality and tapering. Replace as necessary.
8. Inspect the seal and o-ring grooves in the heads for burrs and sharp edges. Dress applicable surfaces as necessary.
9. Inspect the outside diameter of the spacers and heads for scoring or other damage and ovality and tapering. Replace as necessary.
10. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
11. Inspect the cam follower for wear or damage. Replace as necessary.

Assembly

NOTE: Prior to cylinder assembly, ensure that the proper cylinder seal kit is used.

Apply a light film of hydraulic oil to all components prior to assembly.

1. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture.
2. Place a new o-ring into the cylinder rod piston groove.
3. Place a new T-seal on the piston, then carefully install the piston the cylinder rod, ensuring that the o-ring in the rod groove is not damaged or dislodged. Secure the piston in place with two new retaining rings.
4. Carefully slide the spacers onto the cylinder rod.
5. Place a new wiper, rod seal, o-ring and wear ring on each of the two cylinder heads. Set the heads aside for later installation on the cylinder rod.
6. Remove the cylinder rod assembly from the holding fixture.
7. Position the cylinder barrel in a suitable holding fixture.

NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, PISTON AND HEADS. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

8. With the barrel clamped securely, and while adequately supporting the cylinder rod assembly, insert the cylinder rod assembly into the cylinder barrel. Ensure that the piston T-seal and o-ring are not damaged or dislodged.

9. Continue pushing the rod assembly into the cylinder barrel until the cylinder rod is approximately centered in the barrel.
10. Carefully install one of the cylinder heads on one end of the cylinder rod and push the head onto the rod until it is snug against the end of the cylinder barrel.
11. Install one of the cylinder head retainers on the end of the cylinder barrel and tighten with a suitable chain wrench.
12. Carefully install the remaining cylinder head on the opposite end of the cylinder rod and push the head onto the rod until it is snug against the end of the cylinder barrel.
13. Install the remaining cylinder head retainer on the end of the cylinder barrel and tighten with a suitable chain wrench.

Installation

1. Carefully install the steer cylinder assembly into the front axle. Align the cylinder mounting block on the barrel with the mounting slot in the bottom of the axle and lower the steer cylinder until the mounting block rests in the slot.
2. Turn the steer wheels to line up the mounting holes in the steer spindles and the steer cylinder ends. Secure each end of the steer cylinder with a bolt and lock nut.
3. Reconnect the hydraulic hoses to the applicable cylinder ports.


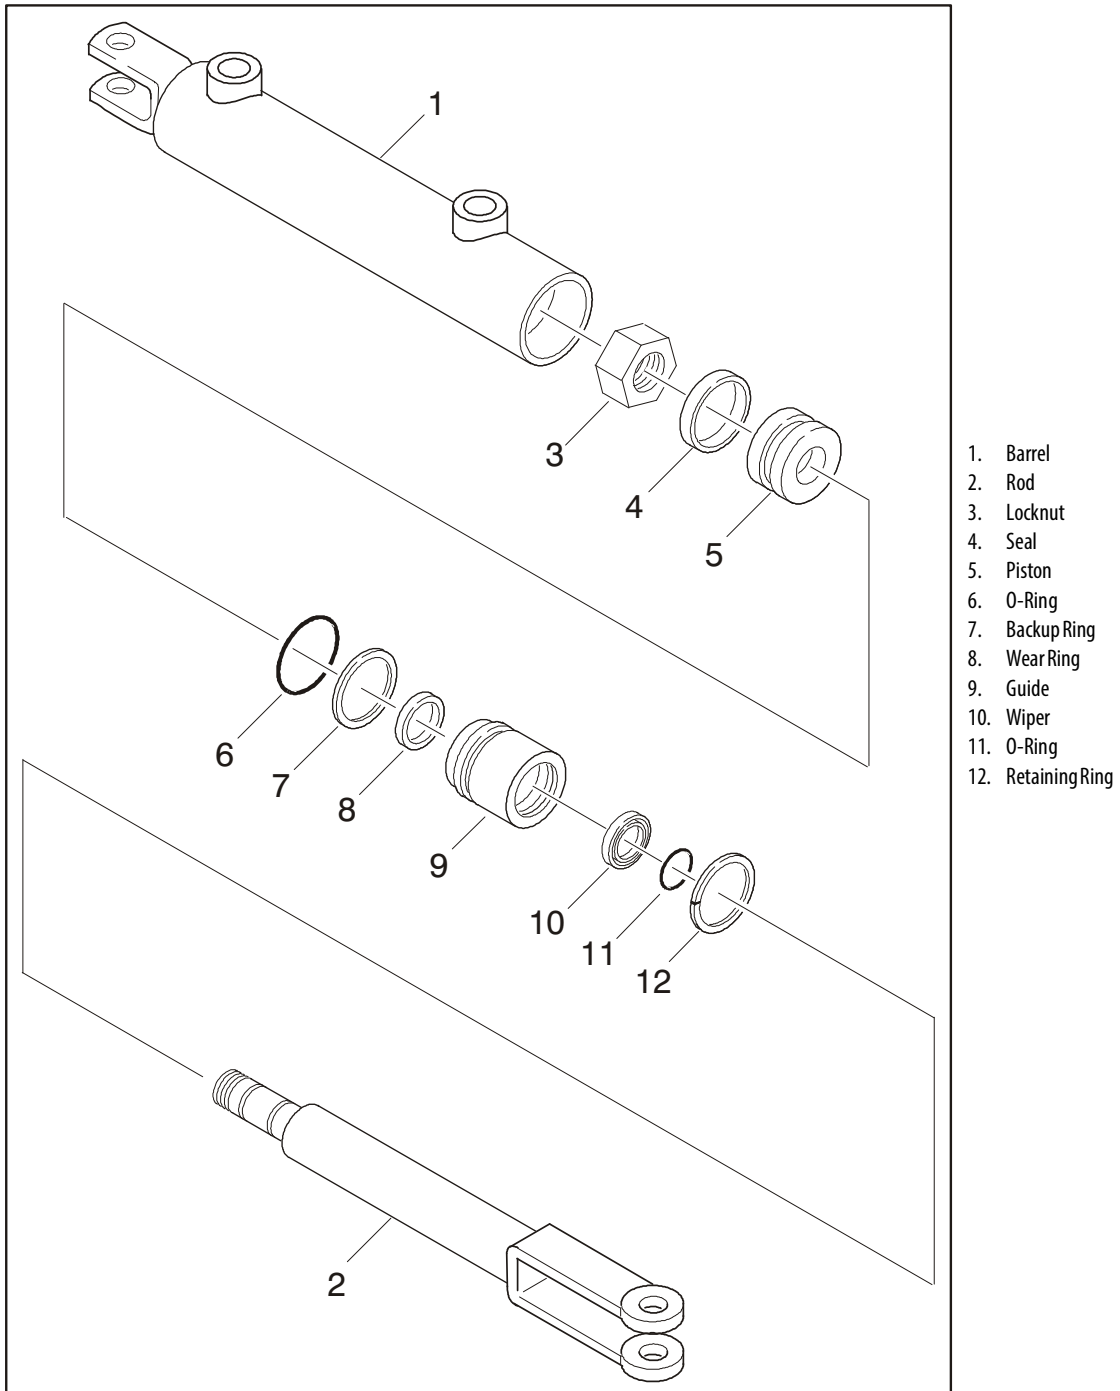


Figure 2-20. Steer Cylinder Assembly

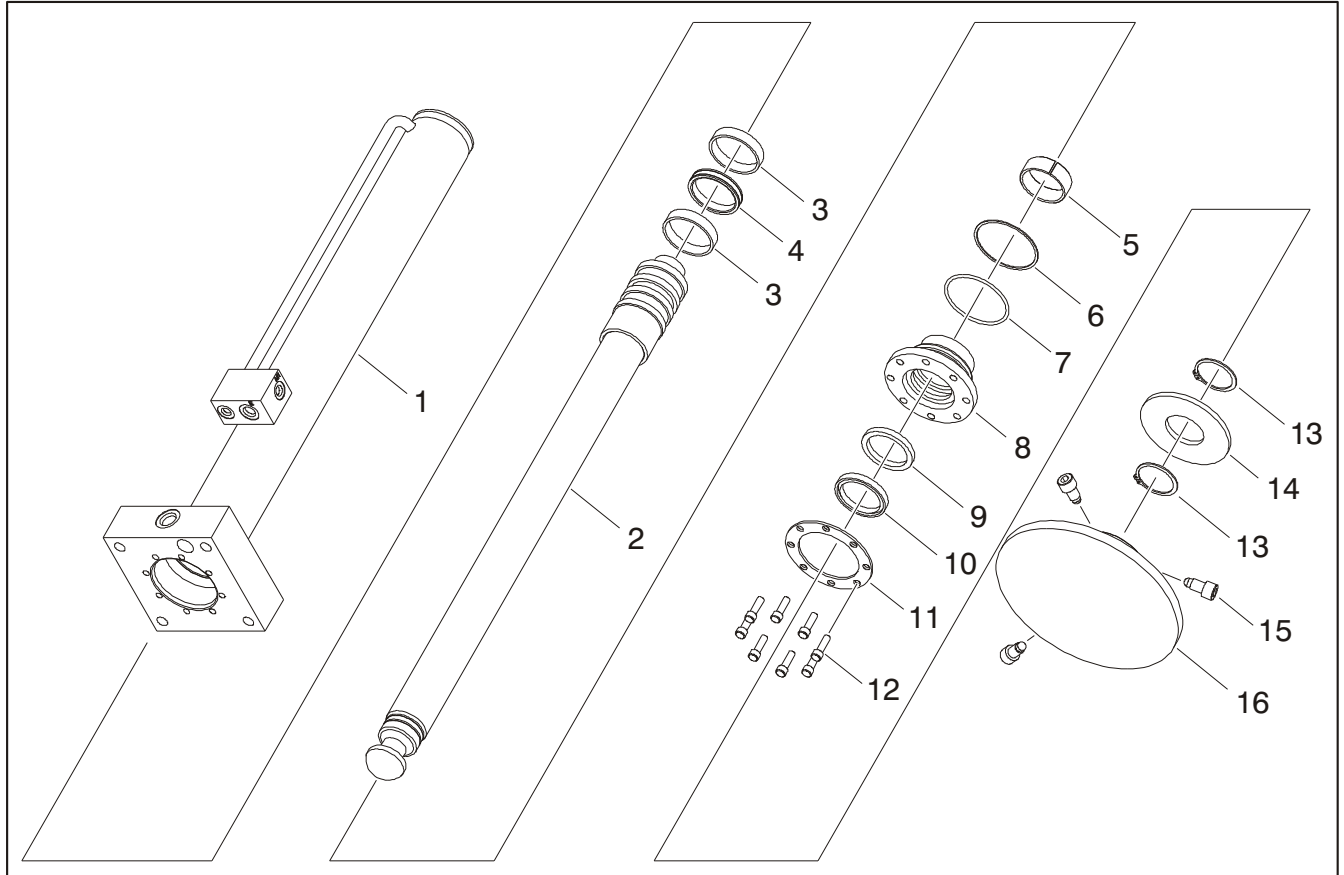

- | | | | |
|--------------|----------------|------------------|--------------------|
| 1. Barrel | 5. Wear Ring | 9. Polyseal | 13. Retaining Ring |
| 2. Rod | 6. O-Ring | 10. Wiper Seal | 14. Plate |
| 3. Wear Ring | 7. Backup Ring | 11. Washer Ring | 15. Screw, 1/2" |
| 4. Seal | 8. Head | 12. Screw, 5/16" | 16. Jack Pad |

Figure 2-21. Leveling Jack Assembly

2.14 LIMIT SWITCH ADJUSTMENT

Platform Limit Switch

The platform limit switch is located on the left side of the frame of the machine. When activated, the switch cuts out the High Drive function. Adjust the switch to activate when the platform is raised above the stowed position.

2.15 PRESSURE SETTING PROCEDURES

NOTE: *Make all pressure adjustments with the engine operating and the hydraulic oil at normal operating temperature. In addition, all functions must be operated from the platform control station in order to achieve full pump speed. It may be necessary to use an assistant to adjust the pressure settings while operating the functions from the platform control station.*

Main Pressure Adjustment

1. Install a pressure gauge at gauge port MP, located on the front upper right side of the valve body. The port is identified by a stamping on the valve body. Disconnect lift-up solenoid connector.
2. From the Ground control panel, activate the lift up function.
3. Bottom out the Lift Up function and adjust the main pressure to 3300 psi (228 bar). Reconnect lift-up solenoid connector.

Lift Relief Adjustments

1. Install a pressure gauge at gauge port MP, located on the front upper right side of the valve body. The port is identified by a stamping on the valve body.
2. From the platform control station, activate the Lift Up function by selecting the lift control switch and positioning the joystick to the up position.
3. Bottom out the Lift Up function and adjust the Lift Up relief to 2300 psi (159 bar).
4. Remove the pressure gauge from gauge port MP.


Steer Relief Adjustment

1. Install a pressure gauge at gauge port MP, located on the lower right side of the valve body. The port is identified by a stamping on the valve body.
2. Activate the Steer Right function and check Steer pressure. If necessary, adjust Steer pressure to 1700 psi (117 bar).
3. Activate the Steer Left function and check Steer pressure. If necessary, adjust Steer pressure to 2300 psi (159 bar).
4. Remove the pressure gauge from gauge port MP.

Leveling Jack Relief Adjustment

1. Refer to Figure 2-22., Main Valve Block.
2. Install a pressure gauge, 5000 psi (345 bar) or higher, at port MP on the main valve block. Start the engine and activate jack retract.
3. When all jacks are retracted the gauge should read 2500 psi (172 bar).
4. Adjust the relief valve located on the leveling jack directional valve (refer to Figure 2-23.) clockwise to increase, counterclockwise to decrease. (The relief valve is on the same face as the solenoid valves).
5. Remove the pressure gauge from gauge port MP.

Main Valve Components

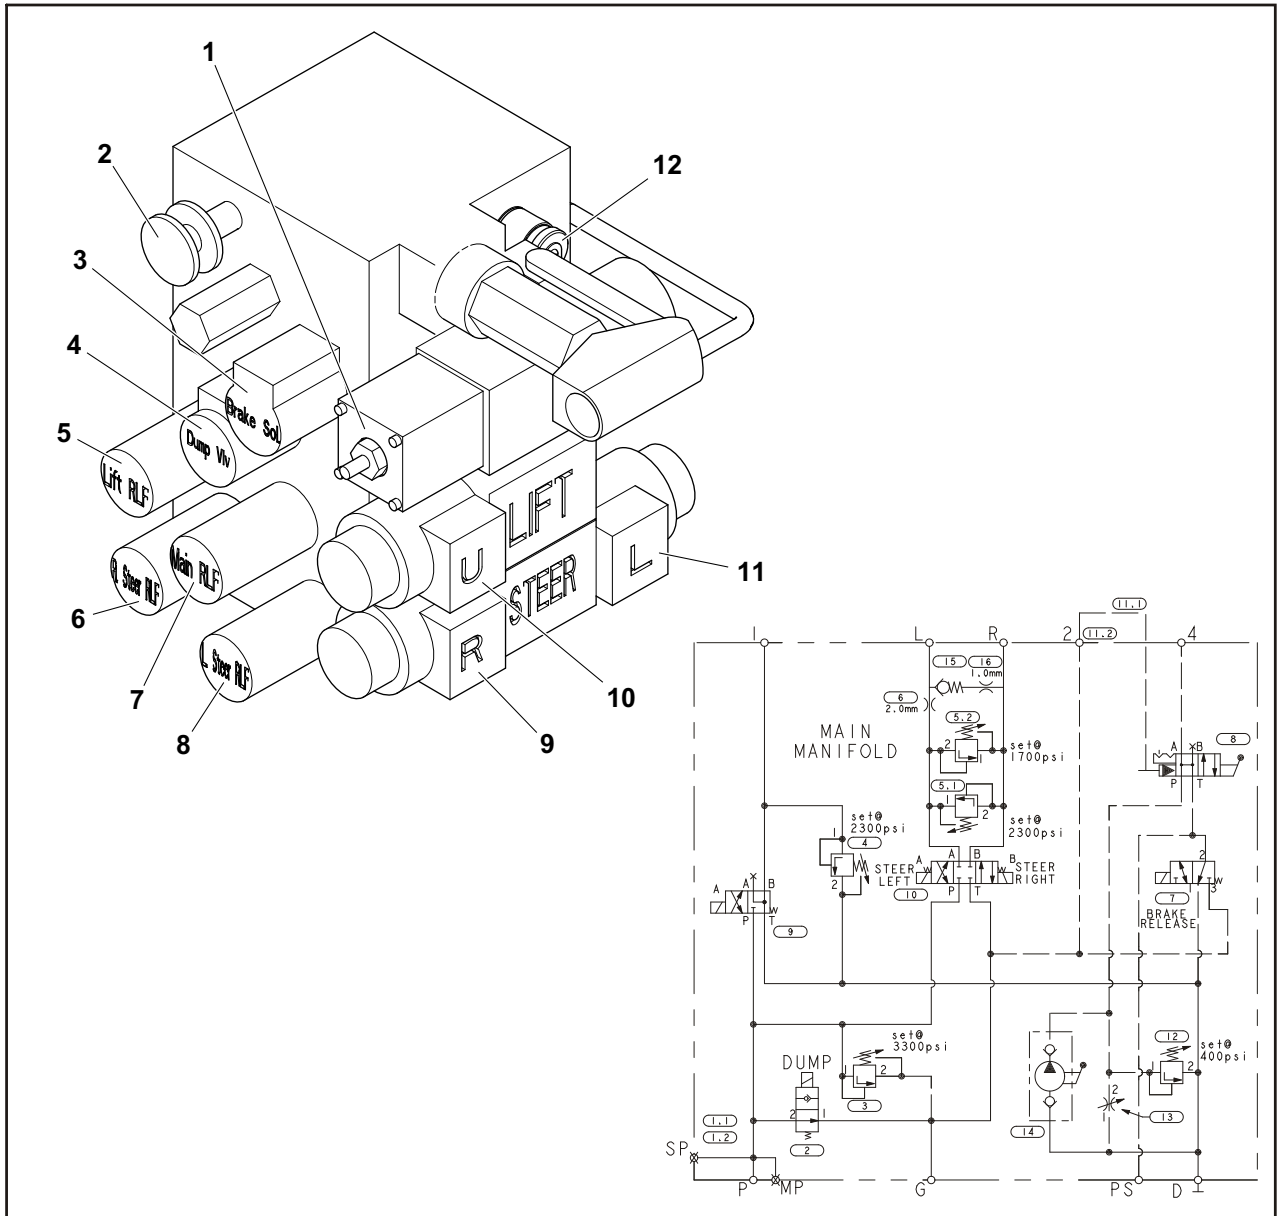

- | | | |
|------------------------------|-------------------------|---------------------------|
| 1. Tow Brake Release Acuator | 5. Lift Relief | 9. Steer Solenoid (Right) |
| 2. Valve Knob | 6. Steer Relief (Right) | 10. Lift Solenoid |
| 3. Brake Solenoid | 7. Main Relief | 11. Steer Solenoid (Left) |
| 4. Dump Valve | 8. Steer Relief (Left) | 12. MP |

Figure 2-22. Valve Components

Leveling Jacks Directional Valve

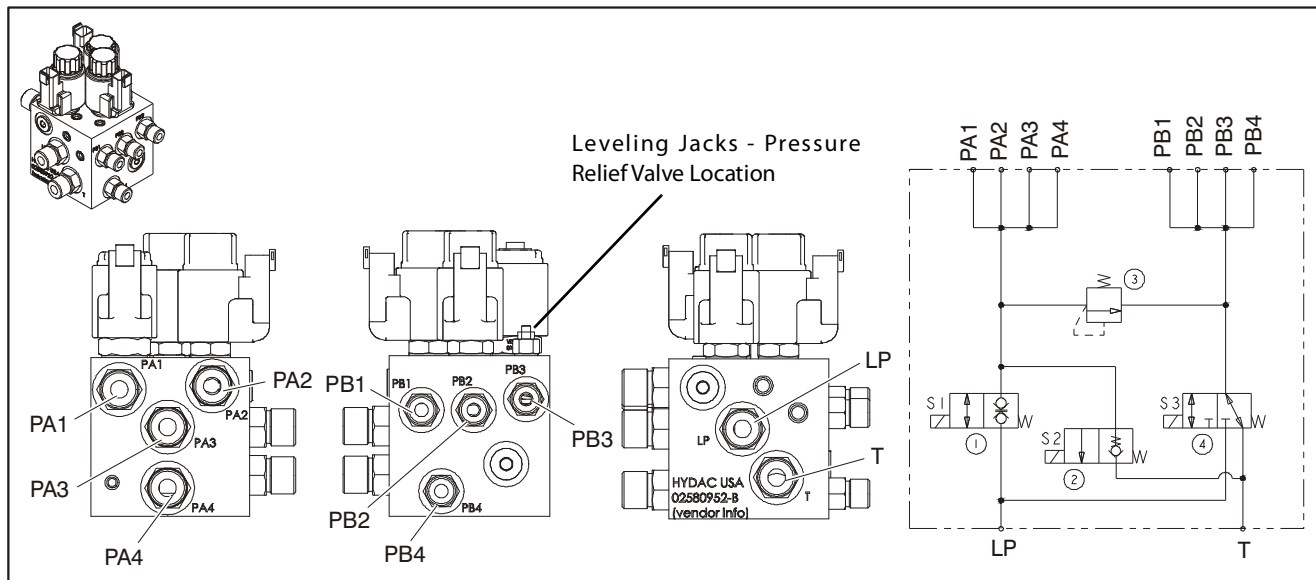


Figure 2-23. Leveling Jacks Directional Valve

Table 2-5. Leveling Jacks Directional Valve Torque Specs

| Item | Torque |
|------|---------------------|
| PA4 | 40 lb-ft (54 Nm) |
| PB4 | 23 lb-ft (31 Nm) |
| T | 40 lb-ft (54 Nm) |

2.16 DRIVE PUMP START-UP PROCEDURE

NOTICE

THE FOLLOWING PROCEDURE SHOULD ALWAYS BE PERFORMED WHEN STARTING A NEW PUMP OR WHEN RESTARTING AN INSTALLATION IN WHICH EITHER THE PUMP OR MOTOR HAVE BEEN REMOVED FROM THE SYSTEM.

THE FOLLOWING PROCEDURE SHOULD ALWAYS BE PERFORMED WHEN STARTING A NEW PUMP OR WHEN RESTARTING AN INSTALLATION IN WHICH EITHER THE PUMP OR MOTOR HAVE BEEN REMOVED FROM THE SYSTEM.

THE FOLLOWING PROCEDURE MAY REQUIRE THE MACHINE TO BE DISABLED (WHEELS RAISED OFF THE GROUND, DRIVE FUNCTION DISCONNECTED, ETC.) WHILE PERFORMING THE PROCEDURE IN ORDER TO PREVENT INJURY TO TECHNICIAN AND OTHER PERSONNEL. TAKE NECESSARY SAFETY PRECAUTIONS BEFORE MOVING THE MACHINE.

Prior to installing pump and/or motor, inspect unit(s) for damage incurred during shipping and handling. Make certain all system components (reservoir, hoses, valves, fittings, heat exchanger, etc.) are clean prior to filling with hydraulic fluid.

Fill reservoir with recommended hydraulic fluid, which should be passed through a 10 micron (nominal, no bypass) filter prior to entering the reservoir. The use of contaminated fluid will cause damage to components, which may result in unexpected machine movement.

The inlet line leading from the reservoir to the pump should be filled prior to start-up. Check inlet line for properly tightened fittings and make sure it is free of restrictions and air leaks.

Be certain to fill pump and/or motor housing with clean hydraulic fluid prior to start-up. Fill housing by pouring filtered oil into upper case drain port.

Install a 0 to 500 psi (0 to 35 bar) pressure gauge in the charge pressure gauge port to monitor charge pressure during start-up.

It is recommended that the external control input signal electrical connections be disconnected at the pump control until after initial start-up. This will allow the pump to remain in its neutral position.

“Jog” or slowly rotate prime mover until charge pressure starts to rise. Start prime mover and run at the lowest possible RPM until charge pressure has been established. Excess air may be bled from high pressure lines through high pressure gauge ports.

WARNING

DO NOT START PRIME MOVER UNLESS PUMP IS IN NEUTRAL POSITION (0 DEGREES SWASHPLATE ANGLE). TAKE PRECAUTIONS TO PREVENT MACHINE MOVEMENT IN CASE PUMP IS ACTUATED DURING INITIAL START-UP.

Once charge pressure has been established, increase speed to normal operating RPM. Charge pressure should be approximately 300 psi (20.7 bar) minimum. If charge pressure is incorrect, shut down and determine cause for improper pressure.

WARNING

INADEQUATE CHARGE PRESSURE WILL AFFECT THE OPERATOR'S ABILITY TO CONTROL THE MACHINE.

Shut down prime mover and connect external control input signal. Start prime mover, checking to be certain pump remains in neutral. With prime mover at normal operating speed, slowly check for forward and reverse machine operation.

Charge pressure should remain at 300 psi to 320 psi (20.7 bar to 22.1 bar) minimum during forward or reverse operation. Continue to cycle slowly between forward and reverse for at least five minutes.

Shut down prime mover, remove gauges, and plug ports. Check reservoir level and add fluid if necessary.

2.17 AUTOMATIC CHOKE - FIELD ADJUSTMENT (DF-750)

Inspection

NOTE: All automatic choke assemblies have been pre-set to operate between 20°F and 100°F with little or no adjustment. If the machine will be operated for prolonged use outside these temperature ranges, adjustments could be made to improve performance of the engine.

The machine will take time to warm up and you may experience low power or rough running for the first few minutes of operation or until the engine warms up. **LET THE ENGINE WARM UP.**

Make sure that the choke shaft operates freely and does not bind. This can be done without removing the air horn by rotating the bronze coupling with an eraser on a pencil or by removing the vacuum pull off line at the manifold and supply a small amount of vacuum to the hose. The choke rod should move freely using either method.

Adjustments

NOTE: If the choke rod is binding make sure the support bracket is straight

1. There are two adjustments Vertical (loosening the air horn nuts) and Horizontal (loosening the bracket to adaptor screws). These two adjustments should resolve any binding problem.
2. To adjust the choke at 70°F ambient, remove the air horn and reinstall the nut that holds the choke and support bracket securely making sure the choke moves freely.
3. Loosen the 3 top cover screws and rotate the top cover till the choke butterfly is closed with 1/32 in space between the plate and the wall of the carburetor.
4. If the ambient temperature is less than 70°F the top cover counter should be rotated CCW 1 mark for every 5°F less than 70°F.

5. If the ambient temperature is more than 70°F the top cover counter should be rotated CW 1 mark for every 5°F less than 70°F.

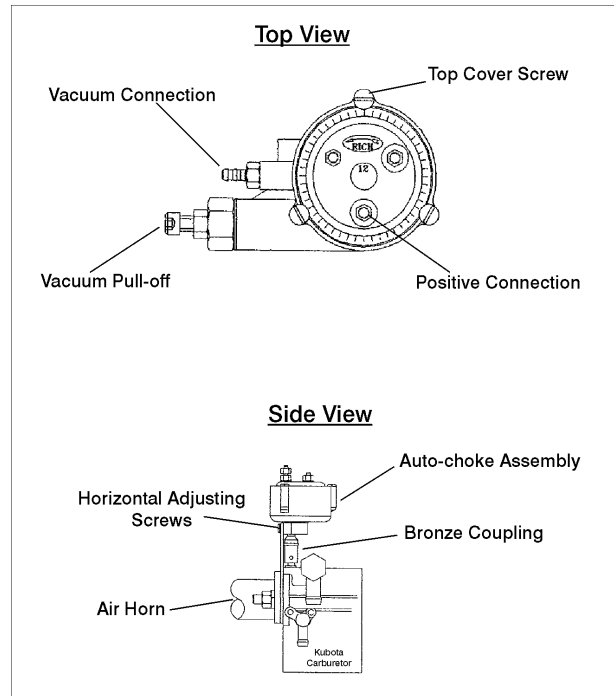


Figure 2-24. Automatic Choke Adjustment (DF-750)

Reassembly

Reassemble the air horn making sure the choke is not binding, test to insure that none of the settings have moved and the choke is not binding.

The vacuum pull off should be set such that when vacuum is applied to the choke system the choke butterfly is full open.

NOTE: If the machine starts and stalls immediately or if it is extremely cold, limiting the choke pull off to 75% to 90% may improve the performance of the machine. No adjustment is normally required.

Diesel Engine

NOTE: Never run the fuel tank dry. Diesel engines cannot be restarted after running out of fuel until the fuel system has been air-vented or 'bled' of air. See the Kubota Instruction Manual for the proper procedure.

2.18 JOYSTICK CONTROLLER

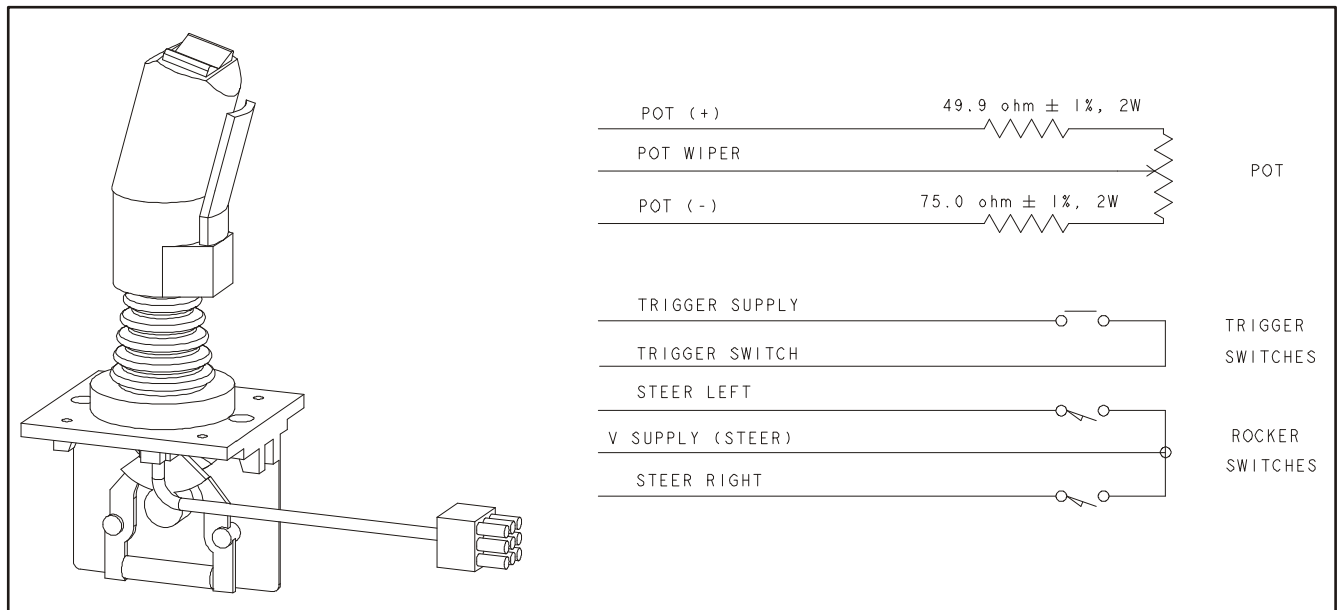


Table 2-6. Joystick Specifications


| | |
|-------------------------|----------------|
| Input Voltage | 5V |
| Centered Output Voltage | 4.25V to 2.60V |
| Reverse Voltage | 4.60V to 4.80V |
| Forward Voltage | 0.40V to 0.60V |

Table 2-7. Joystick Plug Loading Chart

| Terminal | Color | Function |
|----------|-------------|----------------|
| 1 | Yellow | Steer Right |
| 2 | Green | Steer Left |
| 3 | Brown | Pot Wiper |
| 4 | Red | Handle Common |
| 5 | N/A | Not Connected |
| 6 | White/Red | Pot (+) |
| 7 | Violet | Trigger Switch |
| 8 | Blue | Trigger Supply |
| 9 | White/Black | Pot (-) |

2.19 TILT SENSOR

Tilt Sensor, JLG PN 4000021:

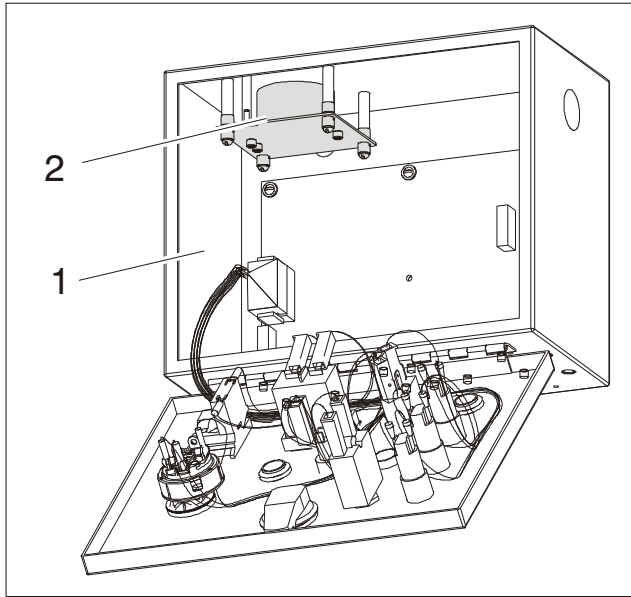

1. Ground Control Box
2. Tilt Sensor Assembly (JLG PN 1810140)


Figure 2-25. Tilt Sensor Location

TILT SENSOR REMOVAL:

NOTE: Refer to Figure 2-26, Tilt Sensor Removal for numbers in parenthesis.

1. Disconnect the batteries.
2. Open the Ground Control Box to gain access to the Tilt Sensor Assembly.
3. Remove the four Screws (3), Lockwashers (4), Standoff Insulators (5), and Washers (6) to remove the Tilt Sensor (1) and Sensor Mount (2) from the Ground Control Box.
4. The Tilt Sensor (1) can be removed from the Sensor Mount (2) by removing the three Screws (7).

NOTE: Follow the above procedures in reverse order when installing the tilt sensor assembly. After installing, be sure to calibrate the tilt sensor (refer to Section 2.20, Calibrations).

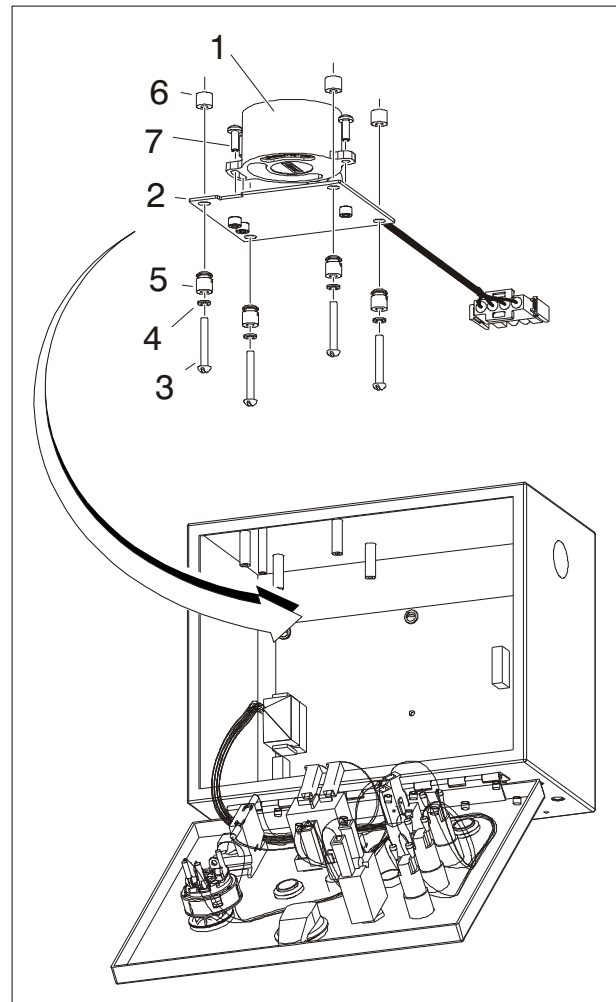

1. Tilt Sensor (JLG PN 4000021)
2. Sensor Mount
3. Screw, 6-32 x 1
4. Lockwasher
5. Standoff Insulator
6. Washer, 0.313 x 0.250 Nylon
7. Screw, M3.5 x 0.6 x 10

Figure 2-26. Tilt Sensor Removal

Table 2-8. Tilt Sensor Harness

| Wire Color | Function | Connector Pin |
|------------|----------|---------------|
| Red | VCC | 1 |
| Green | PWMX | 2 |
| White | PWMY | 3 |
| Black | Ground | 4 |


2.20 CALIBRATIONS

Refer "Changing the Access Level of the Hand Held Analyzer" to go to access level 1.

Tilt Sensor Calibration:

1. Drive the machine onto a measured level surface ($\pm 0.5^\circ$ for both x and y axis).
2. Using the Analyzer, go to MENU: CALIBRATION; TILT SENSOR. Press Enter. LEVEL VEHICLE will display. Press Enter again to calibrate.
3. Both axis' raw angles need to be within $\pm 5.0^\circ$, otherwise the machine is to unlevel and the software will prohibit calibration. Should this occur, attempt to dissect the three areas of error to find the primary contributor:
 - a. Machine mounting and/or grade:


With a digital level, measure the top of the Ground Control box for levelness. If unable to get a good reading, check the box's mounting surface for levelness.

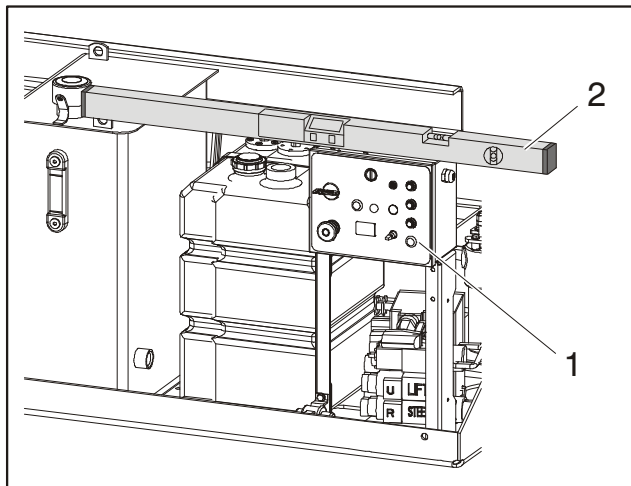

1. Ground Control Box
2. Digital Level

- b. Tilt sensor mounting on machine or wedged crooked in control box:

If the machine mounting/grade appears acceptable, open the Ground Control box carefully. Observe whether the tilt sensor is properly seated.

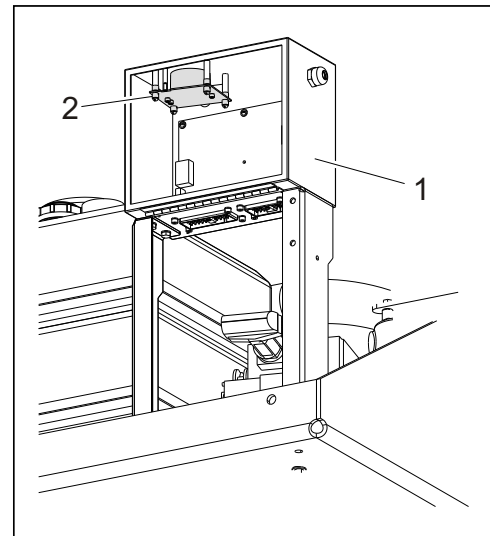

1. Ground Control Box
2. Tilt Sensor

- c. Tilt sensor has developed an offset shift:

Remove the tilt sensor from the Ground Control box, but keep both the tilt sensor and Ground Control box electrically connected. Level one axis of the tilt sensor and observe the raw reading (should be within $\pm 2.0^\circ$). Do the same for the other axis. If either axis is greater than $\pm 2.0^\circ$, replace the tilt sensor.

Some possible reasons that the tilt sensor will not calibrate are:

- a. The surface the machine is sitting on is off level by a few degrees (flat doesn't imply level; parking lots are often not level).
- b. The tilt sensor has failed one or both of the channels (X axis and Y axis).
- c. Tilt sensor has moisture intrusion that has shifted its output.
- d. Water and/or corrosion in the box has corrupted electrical connections or caused a tilt sensor or ground control board failure (observe any cracks in the box).
- e. The Ground Control Box, as mounted on the machine, does not allow the tilt sensor to be level.

For the following troubleshooting steps, a bubble level (smaller is better) will be needed and the machine must be on a level surface:

1. On the Analyzer, go to Diagnostics/System and read the tilt angle. If either angle reports $+20.0^\circ$, there is an electrical/electronic failure (tilt sensor, control board, electrical connections).
 - a. Open the Ground Control Box.
 - b. Disconnect the sensor and clean any corrosion off of the tilt sensor and control board connections.
 - c. Reassemble and test. If fault persists, replace tilt sensor.
2. If the Analyzer displays angles other than $+20.0^\circ$, attempt to calibrate. If machine will not calibrate, note the reason displayed on Analyzer:
 - a. SENSOR FAILURE – tilt sensor internal frequency is out of range (replace sensor).
 - b. NOT LEVEL - tilt sensor has either developed an offset or it is to unlevel as mounted on the machine.

Joystick Calibration (Software 1.5 and Higher)

Using the Analyzer, in Access Level 1, go to MENU: CALIBRATION: JOYSTICK and press ENTER.

1. Following the analyzer screen prompts:
 - a. Move the Joystick FORWARD and press ENTER.
 - b. Allow Joystick to be in CENTER position and press ENTER.
 - c. Move the Joystick REVERSE and press ENTER.
2. CAL COMPLETE or CAL FAILED will display on the analyzer.
3. Possible reasons if calibration failed:
 - a. The forward position must be a lower voltage than reverse position.
 - b. The difference between center and forward & center and reverse must be at least 1V.

2.21 ELECTRONIC CONTROL SYSTEM

Hand Held Analyzer

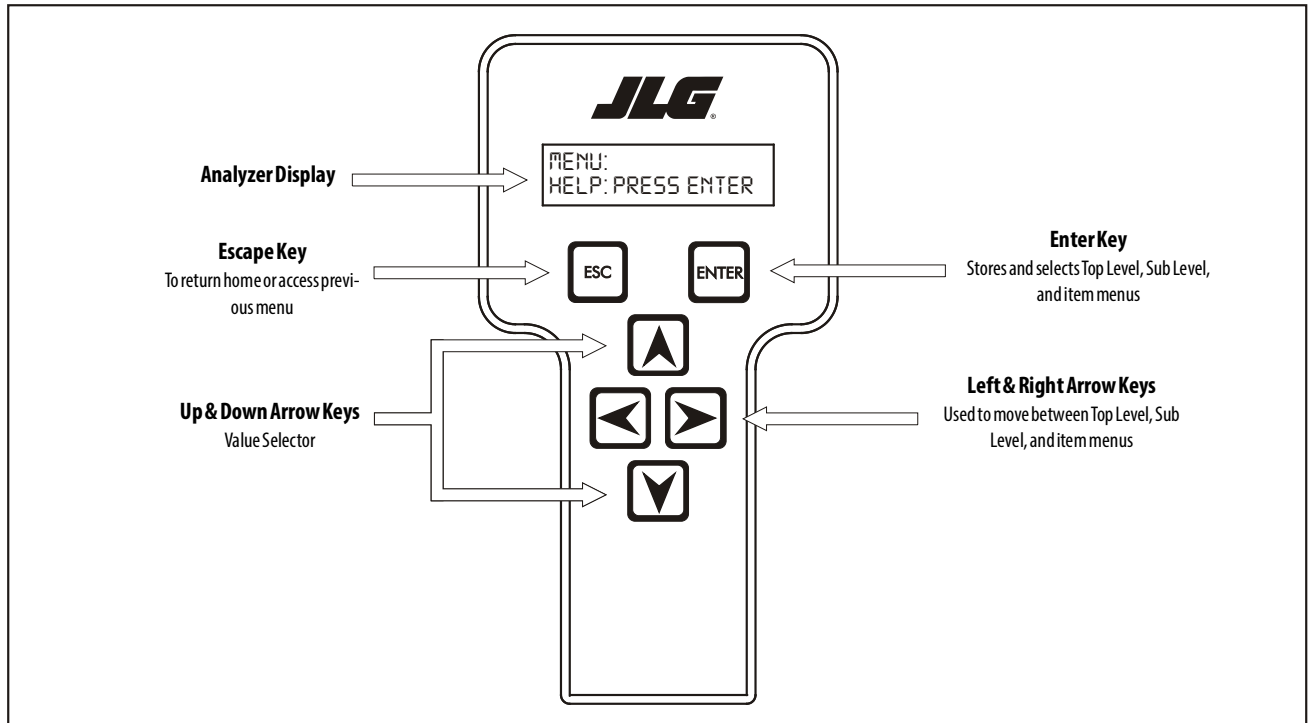


Figure 2-27. Hand Held Analyzer

To Connect the Hand Held Analyzer


1. Connect the four pin end of the cable supplied with the analyzer, to the top connection of the motor controller and connect the remaining end of the cable to the analyzer.

NOTE: The cable has a four pin connector at each end of the cable; the cable cannot be connected backwards.

2. Power up the Control System by turning the lower key to the platform position and pulling both emergency stop buttons on.

Using the Analyzer

With the machine power on and the analyzer connected properly, the analyzer will display the following:

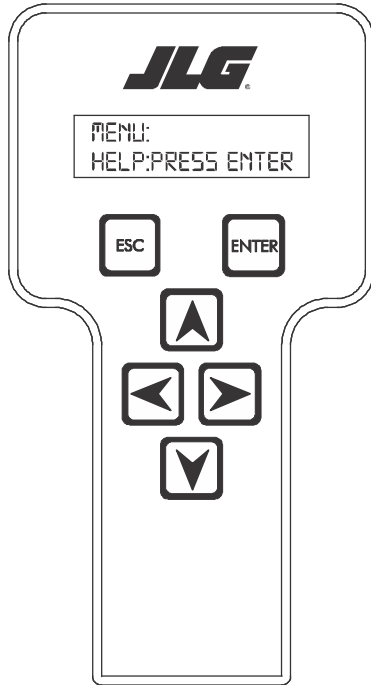

HELP:
PRESS ENTER


At this point, using the **RIGHT** and **LEFT** arrow keys, you can move between the top level menu items. To select a displayed menu item, press **ENTER**. To cancel a selected menu item, press **ESC**; then you will be able to scroll using the right and left arrow keys to select a different menu item.

The top level menus are as follows:

HELP
DIAGNOSTICS
ACTIVATE TESTS
ACCESS LEVEL
PERSONALITIES
MACHINE SETUP
LEVEL VEHICLE

If you press **ENTER**, at the **HELP:PRESS ENTER** display, and a fault is present during power up, the analyzer display will scroll the fault across the screen. If there was no fault detected during power up, the display will read: **HELP: EVERYTHING OK**

If **ENTER** is pressed again, the display moves to the following display:

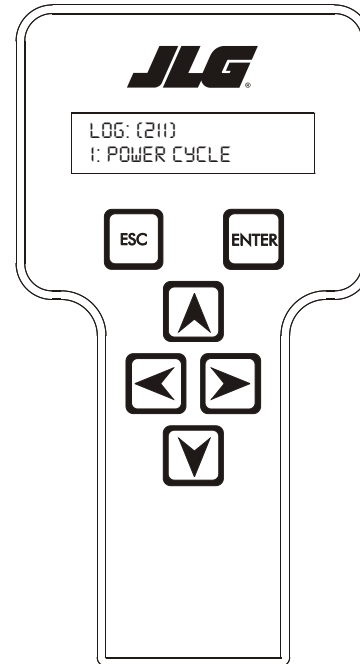

LOGGED HELP
1: STARTUP (2/1)

At this point, the analyzer will display the current fault, if any are present. You may scroll through the fault logs to view what the last 15 faults were. Use the right and left arrow keys to scroll through the fault logs. To return to the beginning, press **ESC** two times.


When a top level menu is selected, a new set of menu items may be offered; for example:

PLATFORM
DRIVE
LIFT SEL
SPEED SEL
HORN
ENGINE START
FUEL/GLOW
STEER LEFT
STEER RIGHT
JOYSTICK

Pressing **ENTER** with any of the above displayed menus, will display additional sub-menus within the selected menu. In some cases the next level is the parameter or information to be changed. Refer to the flow chart for what menus are available within the top level menus. You may only view the personality settings for selected menus while in access level 2. Remember, you may always cancel a selected menu item by pressing the **ESC** key.

Changing the Access Level of the Hand Held Analyzer

When the analyzer is first connected, you will be in access level 2 which enables you to only view most configuration settings which cannot be changed until you enter a password to advance to a lower level. This ensures that a setting cannot be accidentally altered. To change the access level, the correct password must be entered. To enter the password, scroll to the **ACCESS LEVEL** menu. For example:

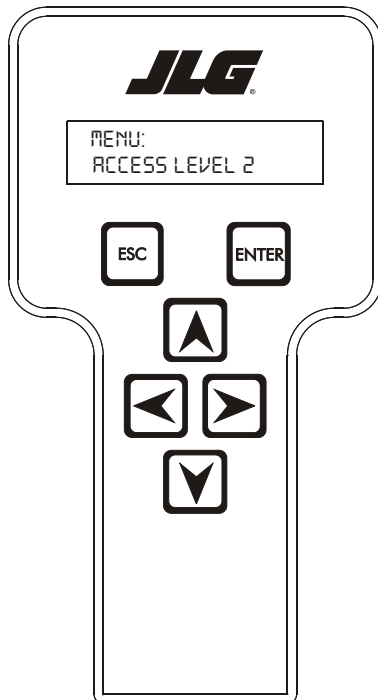

MENU:
ACCESS LEVEL 2

Press **ENTER** to select the **ACCESS LEVEL** menu.

Using the **UP** or **DOWN** arrow keys, enter the first digit of the password, 3.


Then using the **RIGHT** arrow key, position the cursor to the right one space to enter the second digit of the password.

Use the **UP** or **DOWN** arrow key to enter the second digit of the password which is 3.

Repeat this process until you have entered all five digits of the password which is **33271**.

Once the correct password is displayed, press **ENTER**.

The access level should display the following, if the password was entered correctly:

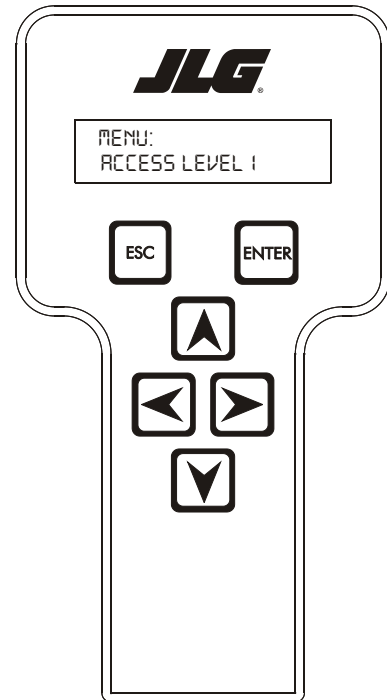


MENU:
ACCESS LEVEL 1

Repeat the above steps if the correct access level is not displayed or you can not adjust the personality settings.

Adjusting Parameters Using the Hand Held Analyzer

Once you have gained access to level 1, and a personality item is selected, press the UP or DOWN arrow keys to adjust its value, for example:

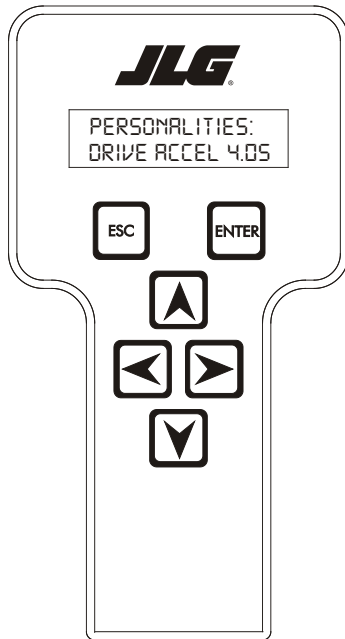

**PERSONALITIES:
DRIVE ACCEL 4.05**

There will be a minimum and maximum for the value to ensure efficient operation. The Value will not increase if the **UP** arrow is pressed when at the maximum value nor will the value decrease if the **DOWN** arrow is pressed and the value is at the minimum value for any particular personality. If the value does not change when pressing the up and down arrows, check the access level to ensure you are at access level 1.


Machine Setup

When a machine digit item is selected, press the **UP** or **DOWN** arrow keys to adjust its value, for example:

⚠ WARNING

FAILURE TO MAKE THE PROPER SETTINGS FOR THE PARTICULAR MACHINE CAN RESULT IN IMPROPER OPERATION.

CHANGING THESE SETTINGS MAY ADVERSELY AFFECT THE PERFORMANCE OF THE MACHINE.

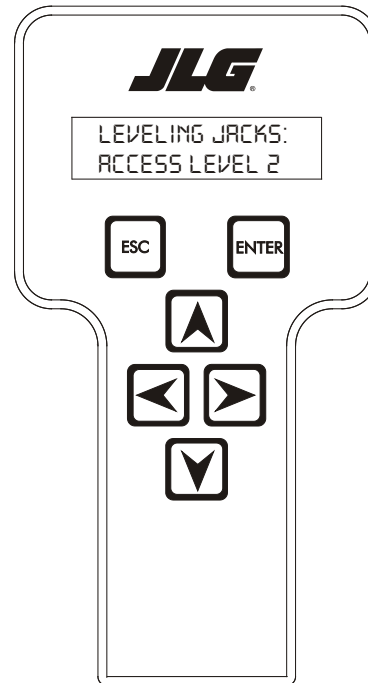

**LEVELING JACKS:
1=YES**

The effect of the machine digit value is displayed along with its value. The above display would be selected if the machine was equipped with a ground alarm and you wanted it to sound when driving. There are certain settings allowed to install optional features or select the machine model.

When selecting the machine model to match the size of the machine, the personality settings will return to default settings.

NOTE: Refer to the appropriate Machine Personality Settings Table, and the Machine Setup Table in the JLG Service Manual for the recommended factory settings.

Password 33271 will give you access to level 1, which will permit you to change all machine personality settings.

NOTICE

IT IS A GOOD PRACTICE TO AVOID PRESSURE-WASHING ELECTRICAL/ELECTRONIC COMPONENTS. SHOULD PRESSURE-WASHING BE UTILIZED TO WASH AREAS CONTAINING ELECTRICAL/ELECTRONIC COMPONENTS, JLG INDUSTRIES, INC. RECOMMENDS A MAXIMUM PRESSURE OF 750 PSI (52 BAR) AT A MINIMUM DISTANCE OF 12 INCHES (30.5 CM) AWAY FROM THESE COMPONENTS. IF ELECTRICAL/ELECTRONIC COMPONENTS ARE SPRAYED, SPRAYING MUST NOT BE DIRECT AND BE FOR BRIEF TIME PERIODS TO AVOID HEAVY SATURATION.

2.22 FLASH CODES AND DESCRIPTIONS


Table 2-9. Help Messages and Flash Codes - Software P1.14

| FLASH CODE | HELP MESSAGES AND FLASH CODES |
|---------------|---|
| No Flash Code | EVERYTHING OK |
| | GROUND MODE OK |
| | ALARM SOUNDING - TILTED & ABOVE ELEVATION Platform is elevated and the chassis is not level. |
| | DIFFERENT FUNCTION SELECTED & IGNORED A function (i.e. Drive, Lift, etc.) is active and the operator has selected another function. The system has ignored the new selection. |
| | DRIVING AT CUTBACK - ABOVE ELEVATION Platform is elevated and the machine is in the drive mode of operation. |
| | FUNCTION SELECTED BUT TRIGGER SWITCH OPEN A function (i.e. Drive, Lift, etc.) has been selected by the operator, but the trigger switch is not active (closed). |
| | JOYSTICK MOVED BUT NO FUNCTION SELECTED The joystick was moved out of the center position before a function was selected. |
| | DRIVE PREVENTED - ABOVE DRIVE CUTOFF HEIGHT Machine is elevated above the drive cutoff height. |
| 2-1 | STARTUP A new system power up has occurred since the last help message. |
| 2-2 | FUNCTIONS LOCKED OUT - SHORT TO PLATFORM ROW INPUT DETECTED Battery power has been detected on a row input (pins J1-8, J1-9, or J1-13). |
| | FUNCTION PROBLEM - DRIVE PERMANENTLY SELECTED Drive select switch in the platform control box closed at start up or for more than ten seconds. Release switch to clear fault. |
| | FUNCTION PROBLEM - LIFT PERMANENTLY SELECTED Lift select switch in the platform control box closed at start up or for more than ten seconds. Release switch to clear fault |
| | FUNCTION PROBLEM - O/R or L/J PERMANENTLY SELECTED An outrigger select switch in the platform control box closed at start up or for more than ten seconds. Release switch to clear fault |
| | FUNCTION PROBLEM - START PERMANENTLY SELECTED Start switch in the platform control box closed at start up. Release switch to clear fault |
| | FUNCTION PROBLEM - GLOW PLUG PERMANENTLY SELECTED Glow plug switch in the platform control box closed at start up. Release switch to clear fault |
| | FUNCTION PROBLEM - STEER LEFT PERMANENTLY SELECTED Steer left switch in the platform control box closed at start up. Release switch to clear fault |
| | FUNCTION PROBLEM - STEER RIGHT PERMANENTLY SELECTED Steer right switch in the platform control box closed at start up. Release switch to clear fault |
| | FUNCTION PROBLEM - HORN PERMANENTLY SELECTED Horn switch in platform control box closed at start up. Release switch to clear fault. |
| | FUNCTION PROBLEM - JOYSTICK CALIBRATION FAULTY The Personalities for the Joystick are improperly adjusted or a joystick calibration attempt failed. Re-adjust or recalibrate. |
| | JOYSTICK FAULTY - WIPER OUT OF RANGE The joystick wiper signal input is outside the acceptable voltage range. The wiper wire being off, the wiper wire shorted to battery power, or the wiper wire shorted to battery negative could cause this. |
| | JOYSTICK FAULTY - STEER SWITCHES ACTIVE TOGETHER Both the steer left and steer right inputs are closed at the same time. A short in the steer switch wiring or a failed steer switch can cause this. |
| | FUNCTION LOCKED OUT - JOYSTICK NOT CENTERED Selected function is not allowed because the joystick is not centered. Return joystick to center and reselect function. |

SECTION 2 - PROCEDURES

Table 2-9. Help Messages and Flash Codes - Software P1.14

| FLASH CODE | HELP MESSAGES AND FLASH CODES |
|------------|--|
| 2-2 | FUNCTION PROBLEM - JOYSTICK CALIBRATION FAULTY The Personalities for the Joystick are improperly adjusted or a joystick calibration attempt failed. Re-adjust or recalibrate |
| | FUNCTION PROBLEM - TRIGGER PERMANENTLY CLOSED Trigger switch in the platform control box closed at start up. Release switch to clear fault. |
| | TRIGGER CLOSED TOO LONG WHILE IN NEUTRAL Trigger switch in the platform control box closed for more than ten seconds while the joystick is in the neutral position. Release switch to clear fault. |
| 2-3 | FUNCTION PROBLEM - LIFT PERMANENTLY SELECTED Lift switch (up or down) in the ground control box closed at start up. Release switch to clear fault |
| | FUNCTION PROBLEM - START PERMANENTLY SELECTED Start switch in the ground control box closed at start up. Release switch to clear fault |
| | FUNCTION PROBLEM - GLOW PLUG PERMANENTLY SELECTED Glow plug switch in the ground control box closed at start up. Release switch to clear fault |
| | NO DATA FROM TILT SENSOR - NOT CONNECTED OR FAULTY No signal from the tilt switch. Check wiring and plug connections at the level sensor and at the ground control board. |
| 2-5 | DRIVE & LIFTUP PREVENTED - OSC AXLE NOT SET |
| | DRIVE & LIFTUP PREVENTED - FUNCTION CUTOFF ACTIVE |
| | ALL FUNCTIONS PREVENTED - FUNCTION CUTOFF ACTIVE |
| | PLATFORM OVERLOAD |
| | ELEV PROX PERMANENTLY CLOSED - CHECK PROX & CAM SWITCH ADJUSTMENT |
| | LEVEL PREVENTED - CHASSIS TILTED EXCESSIVELY |
| 2-6 | FRONT LEFT LEVELING JACK SHORT TO GROUND |
| | FRONT RIGHT LEVELING JACK SHORT TO GROUND |
| | REAR LEFT LEVELING JACK SHORT TO GROUND |
| | REAR RIGHT LEVELING JACK SHORT TO GROUND |
| | FRONT LEFT LEVELING JACK SHORT TO BATTERY |
| | FRONT RIGHT LEVELING JACK SHORT TO BATTERY |
| | REAR LEFT LEVELING JACK SHORT TO BATTERY |
| | REAR RIGHT LEVELING JACK SHORT TO BATTERY |
| 3-3 | OUTPUT ENERGIZED EXTERNALLY - CHECK WIRING |
| | OUTPUT SHORTED - CHECK WIRING |
| 4-4 | BATTERY VOLTAGE TOO LOW Battery voltage below 8.0V. Check battery and alternator. |
| | BATTERY VOLTAGE TOO HIGH Battery voltage above 16V. Check battery and alternator. |
| 5-5 | ENGINE SHUTDOWN – OVERSPEED The engine speed exceeded 4500 RPM for more than 2 seconds. Check throttle actuator for debris or interference, which prevents free movement of actuator. Recycle power to clear the fault and restart. |
| | ENGINE SHUTDOWN - OIL PRES / COOLANT TEMP The engine oil pressure was too low or the engine coolant temperature was too high for more than 10 seconds. Check engine fluid levels. Recycle power to clear fault and restart. |
| 6-6 | COMMUNICATION FAILURE: I/O MODULE |

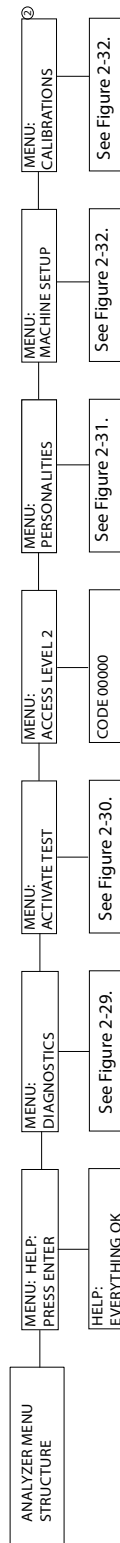

4170044-F
MAF03440F

Figure 2-28. Analyzer Flow Chart - Sheet 1 of 5 (Version P1.14)

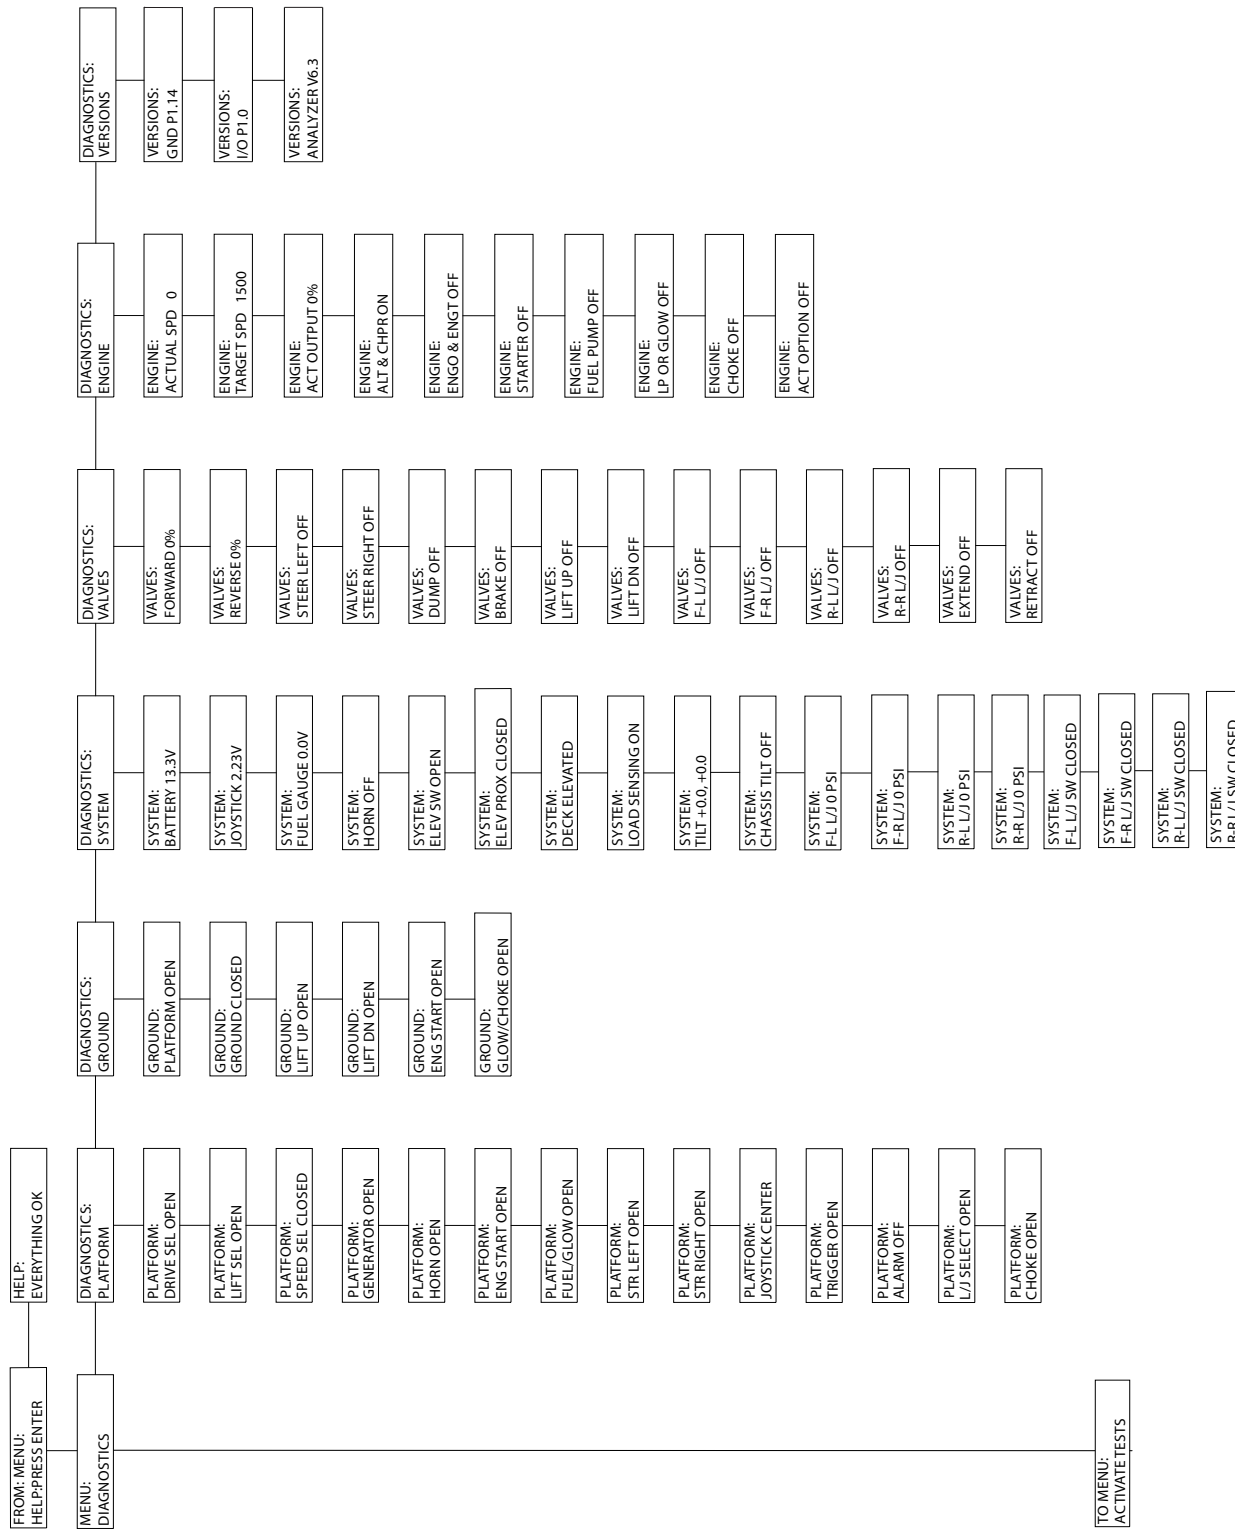


Figure 2-29. Analyzer Flow Chart - Sheet 2 of 5 (Version P1.14)


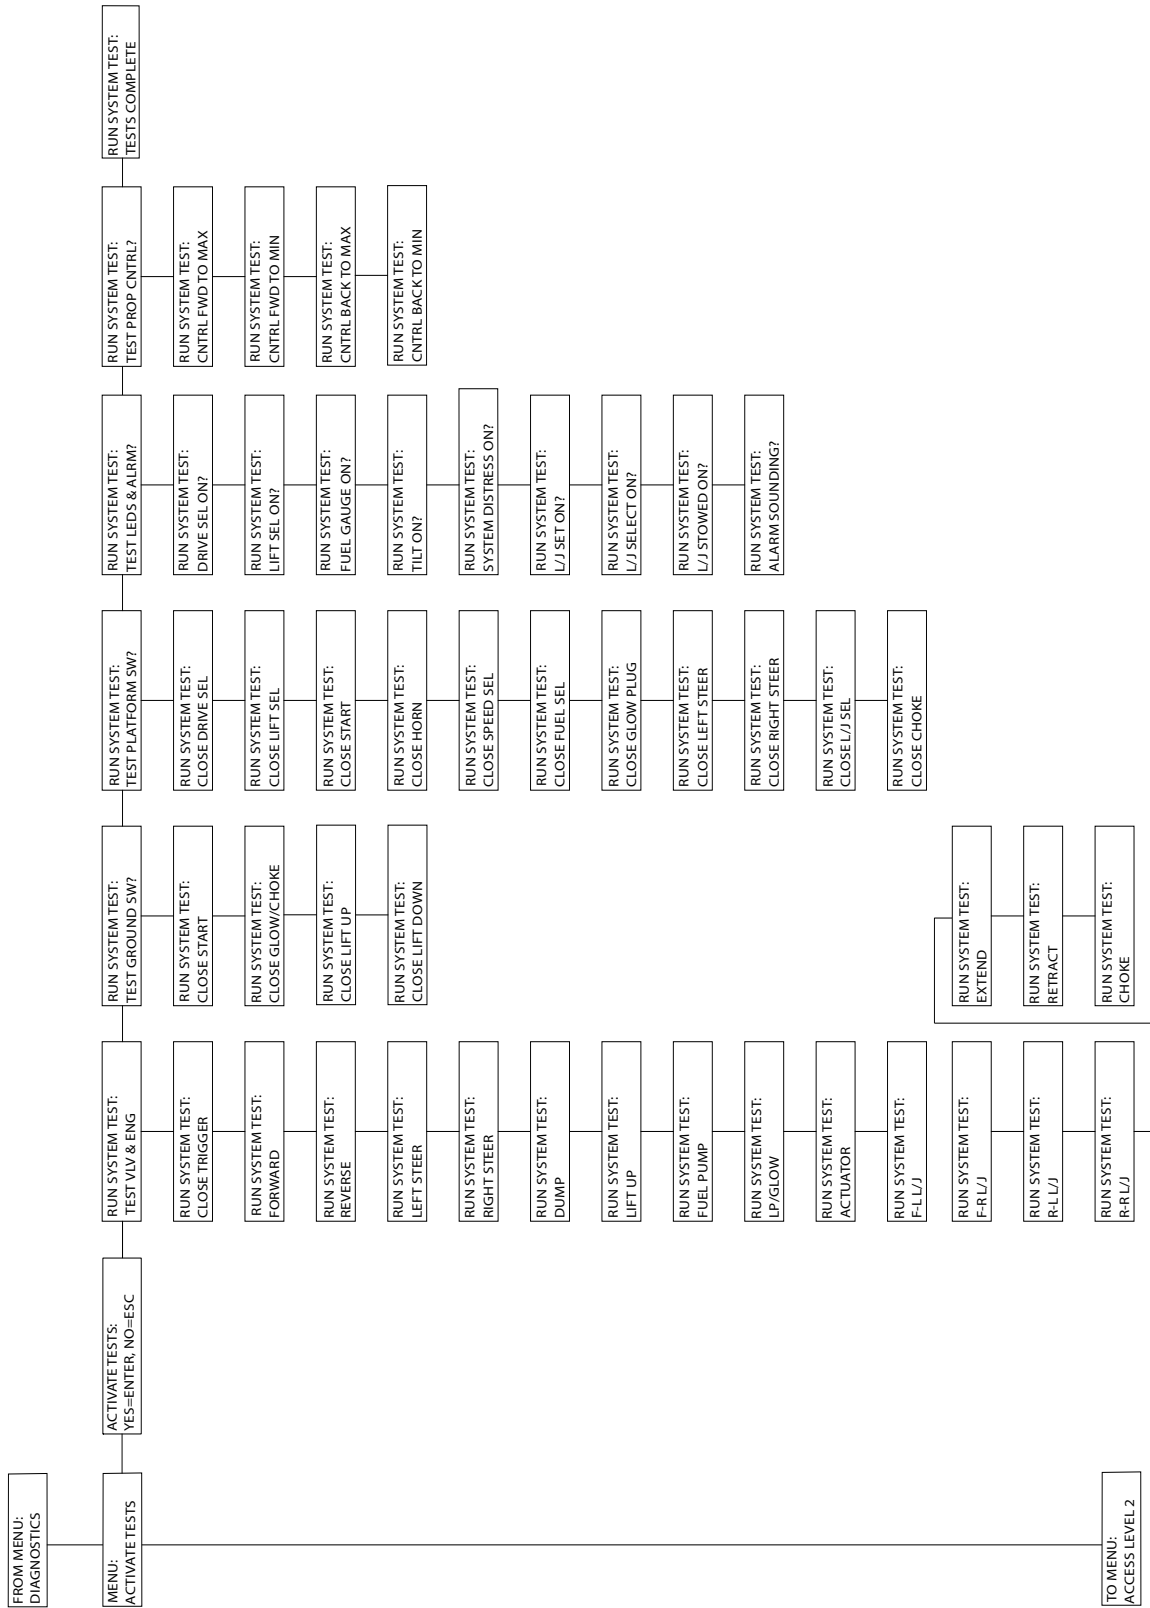


Figure 2-30. Analyzer Flow Chart - Sheet 3 of 5 (Version P1.14)

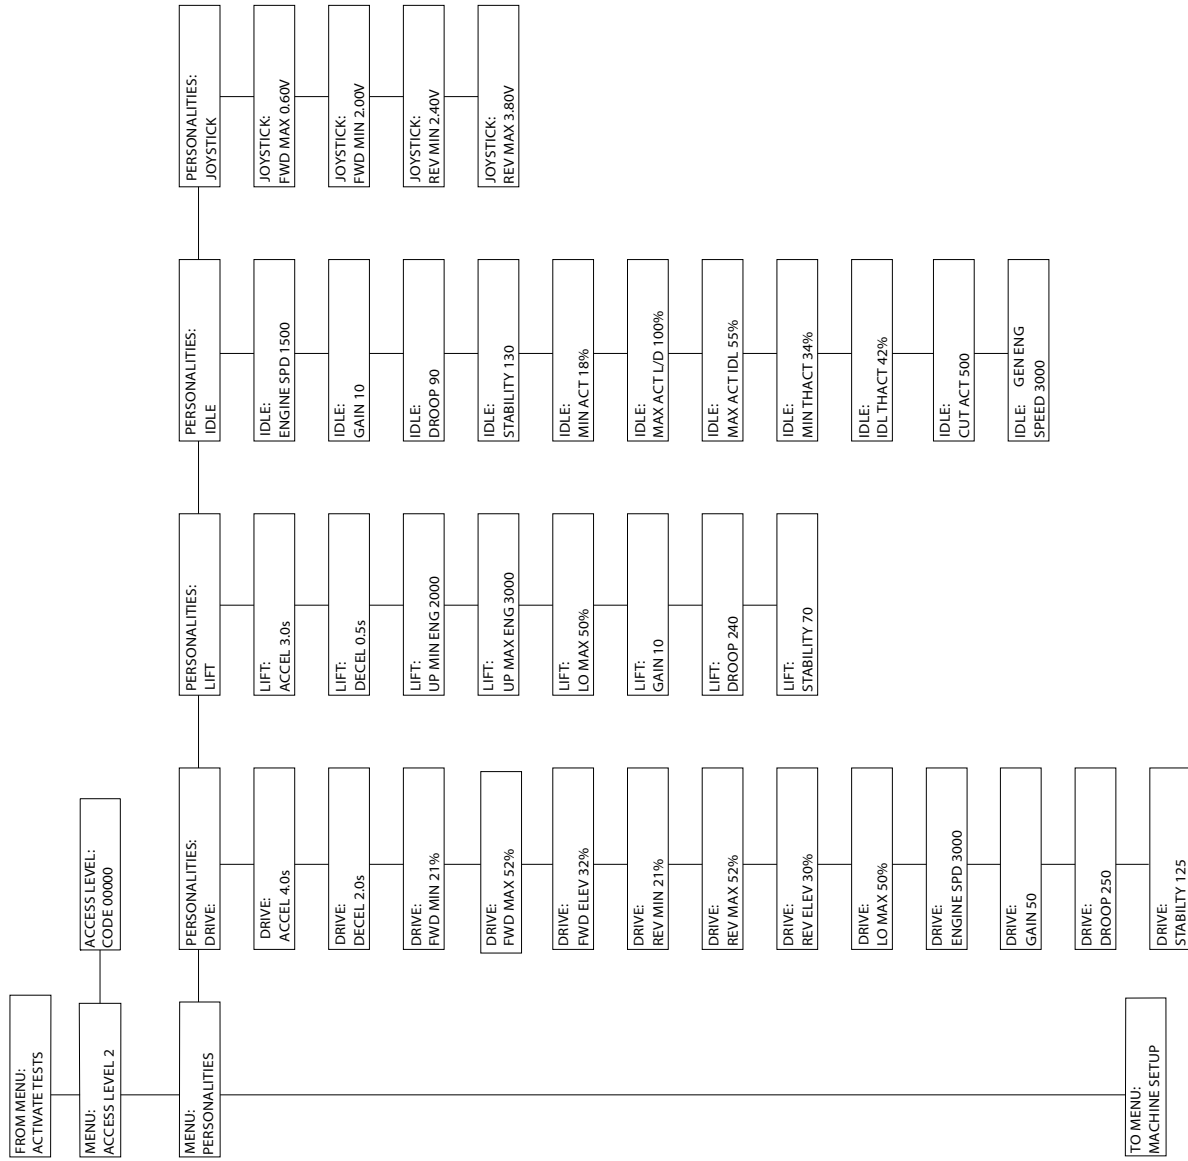

4170044-F
MAF03470F

Figure 2-31. Analyzer Flow Chart - Sheet 4 of 5 (Version P1.14)

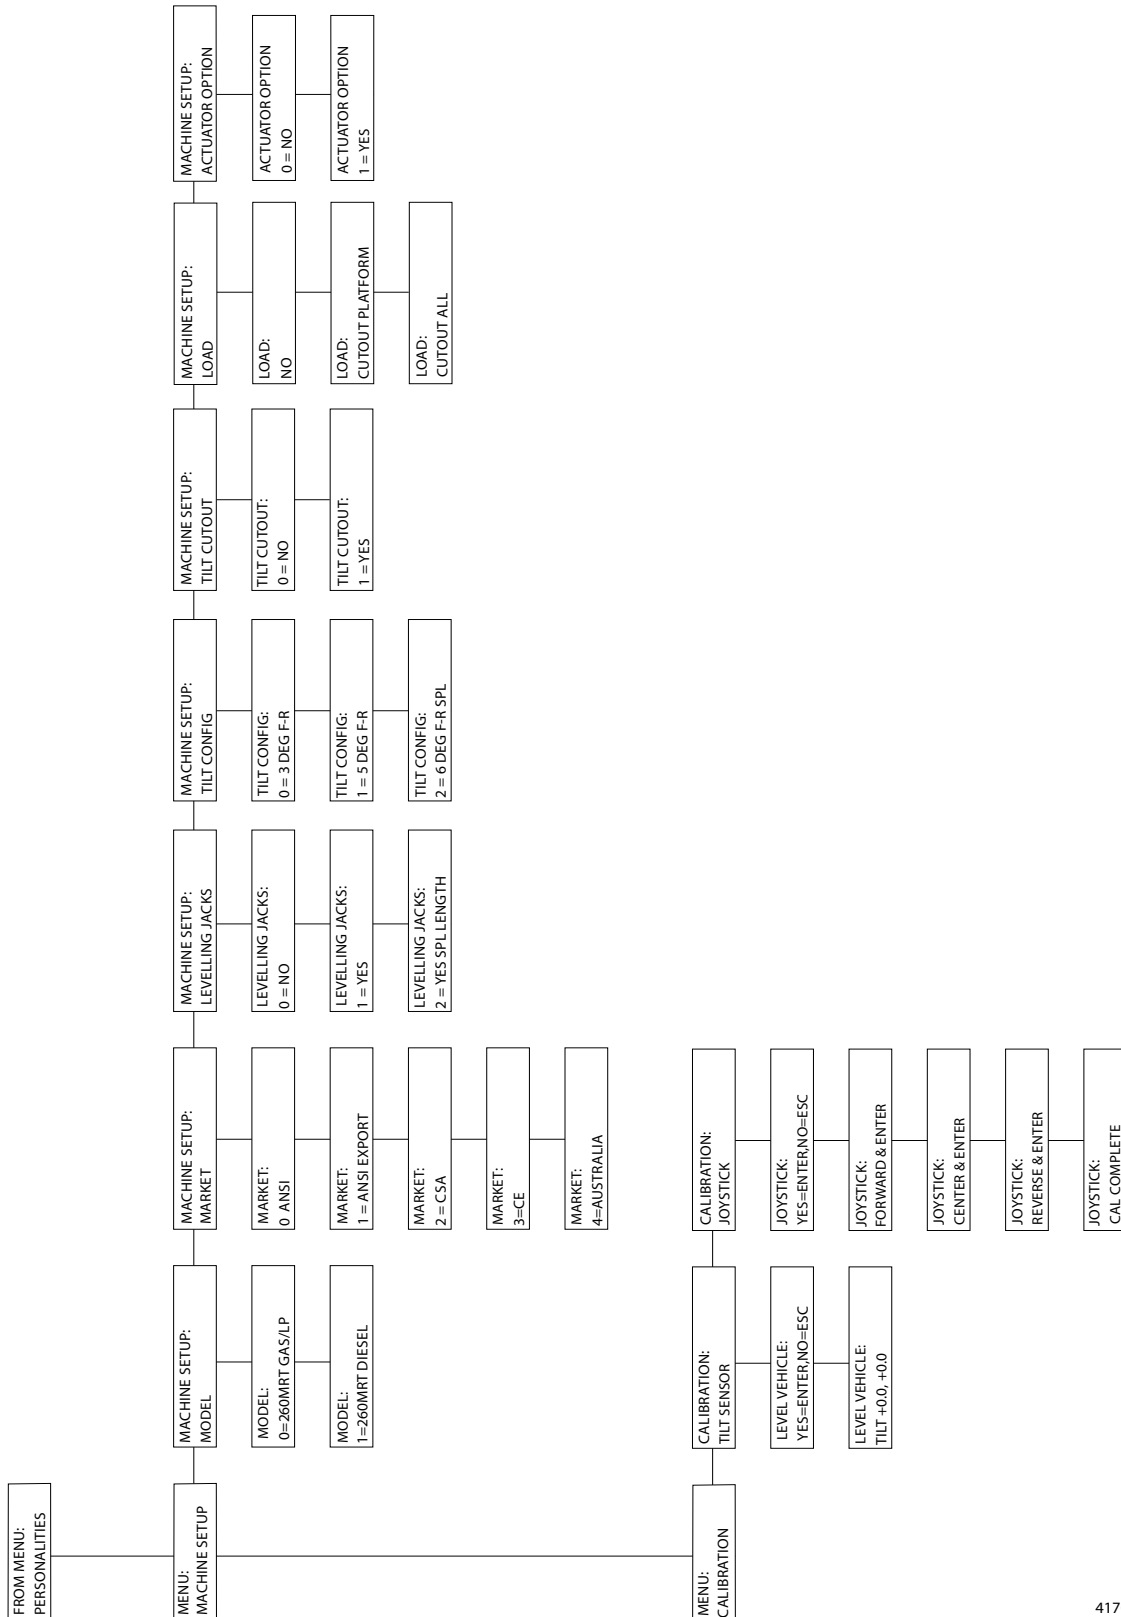


Figure 2-32. Analyzer Flow Chart - Sheet 5 of 5 (Version P1.14)

2.23 MACHINE MODEL ADJUSTMENT

Table 2-10. Machine Model Adjustment

| Adjustment | Adjustment range | Default Values - Gas | Default Values - Diesel |
|--------------|------------------|----------------------|-------------------------|
| DRIVE | | | |
| Accel | 1.0to 5.0sec | 4 | 4 |
| Decel | 1.0to 5.0sec | 2 | 2 |
| FWD MIN | 0 to 100% | 21 | 21 |
| FWD MAX | 0 to 100% | 52 | 52 |
| FWD ELEV | 0 to 35% | 32 | 32 |
| REV MIN | 0 to 100% | 21 | 21 |
| REV MAX | 0 to 100% | 52 | 52 |
| REV ELEV | 0 to 35% | 30 | 30 |
| LO MAX | 35 to 65% | 50 | 50 |
| ENGINE SPD | 2800 to 3600 RPM | 3600 | 3000 |
| GAIN | 0 to 999 | 180 | 50 |
| DROOP | 0 to 999 | 200 | 250 |
| STABILITY | 0 to 999 | 170 | 80 |
| LIFT | | | |
| Accel | 0.2TO 5.0 | 3 | 3 |
| Decel | 0.2TO 5.0 | 0.5 | 0.5 |
| UP MIN ENG | 1400TO 2200 RPM | 2000 | 1800 |
| UP MAX ENG | 2600 to 3600 RPM | 3600 | 3000 |
| LO MAX | 35 to 55% | 50 | 50 |
| GAIN | 0 to 999 | 150 | 5 |
| DROOP | 0 to 999 | 220 | 200 |
| STABILITY | 0 to 999 | 125 | 90 |
| IDLE | | | |
| ENGINE SPEED | 1200TO 1500 rpm | 1500 | 1500 |
| GAIN | 0 to 999 | 150 | 10 |
| DROOP | 0 to 999 | 250 | 90 |
| STABILITY | 0 to 999 | 100 | 130 |
| MIN ACT | 0TO 100% | 19 | 18 |
| MAX ACT L/D | 0TO 100% | 60 | 100 |
| MAX ACT IDLE | 0TO 100% | 55 | 55 |
| CUT ACT | 200TO 2800 RPM | 500 | 500 |
| GEN ENG SPD | 2000TO 3600RPM | 3000 | 3000 |

4150335B

2.24 MACHINE CONFIGURATION PROGRAMMING INFORMATION

1. The Model and Market configuration must be completed before any Personality settings can be changed.
2. The Leveling Jacks configuration must be set to YES for standard 260MRT equipped with leveling jacks (>325PSI set / <200 PSI unset). This configuration must be set YES SPL LENGTH for 260MRT with optional special length jacks (>200PSI set / <50 PSI unset).
3. The Tilt Configuration setting is assigned a default based on Market selection. This configuration must be set to 6 DEG F-R SPL for special option vehicles for Australia that are capable of +/-6° chassis tilt front to rear.

Table 2-11. Machine Configuration Programming Information - Software Version P1.14

| Configuration Digit | Number | Description | Market Default | | | | |
|---------------------|-----------------------|---|----------------|---|---|---|---|
| | | | 0 | 1 | 2 | 3 | 4 |
| (Model #) | 0 1 | 260MRT (Gas/LP) 260MRT (Diesel) | 0 | | | | |
| Market | 0 1 2 3 4 | ANSI ANSI EXPORT CSA CE AUSTRALIA | 0 | | | | |
| Leveling Jacks | 0 1 2 | No. Yes Yes Spl Length | 0 | | | | |
| Tilt Config | 0 1 2 | 3 Deg F-R 5 Deg F-R 6 Deg F-R Spl | 1 | 1 | 0 | 1 | 1 |
| Tilt Cutout | 0 1 | No Yes | 1 | 1 | 1 | 1 | 1 |
| Load | 0 1 2 | No Cutout Platform Cutout All | 1 | 1 | 1 | 1 | 1 |
| Actuator option | 0 1 | No Yes | 0 | | | | |

100113688-F

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter your information to search for manuals and parts.

* Brand:

* Model:

* Serial:

* Part Number:

SEARCH

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in the following information:

Manufacturer:

Model:

Description:

Quantity:

Part Number:

Part Name:

Part Description:

Part Location:

Part Condition:

Part Status:

Part Color:

Part Material:

Part Weight:

Part Dimensions:

Part Price:

Part Notes:

Submit

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on once of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION 3. GENERAL ELECTRICAL INFORMATION & SCHEMATICS

3.1 GENERAL

This section contains schematics to be used for locating and correcting most of the operating problems which may develop. If a problem should develop which is not presented in this section or which is not corrected by listed corrective actions, technically qualified guidance should be obtained before proceeding with any maintenance.

3.2 MULTIMETER BASICS

A wide variety of multimeters or Volt Ohm Meters (VOM) can be used for troubleshooting your equipment. A digital meter with reasonable accuracy (within 7%) is recommended for the measurements in these procedures. This section shows diagrams of a common, digital VOM configured for several different circuit measurements. Instructions for your VOM may vary. Please consult the meter operator's manual for more information.

Grounding

"Grounding the meter" means to take the black lead (which is connected to the COM (common) or negative port) and touch it to a good path to the negative side of the voltage source.

Backprobing

To "backprobe" means to take the measurement by accessing a connector's contact on the same side as the wires, the back of the connector. Readings can be done while maintaining circuit continuity this way. If the connector is the sealed type, great care must be taken to avoid damaging the seal around the wire. It is best to use probes or probe tips specifically designed for this technique, especially on sealed connectors. Whenever possible insert probes into the side of the connector such that the test also checks both terminals of the connection. It is possible to inspect a connection within a closed connector by backprobing both sides of a connector terminal and measuring resistance. Do this after giving each wire a gentle pull to ensure the wires are still attached to the contact and contacts are seated in the connector.

Min/Max

Use of the "Min/Max" recording feature of some meters can help when taking measurements of intermittent conditions while alone. For example, you can read the voltage applied to a solenoid when it is only operational while a switch, far from the solenoid and meter, is held down.

Polarity

Finding a negative voltage or current reading when expecting a positive reading frequently means the leads are reversed. Check what reading is expected, the location of the signal and that the leads are connected to the device under test correctly. Also check that the lead on the "COM" port goes to the ground or negative side of the signal and the lead on the other port goes to the positive side of the signal.

Scale

M = Mega = 1,000,000 * (Displayed Number)

k = kilo = 1,000 * (Displayed Number)

m = milli = (Displayed Number) / 1,000

μ = micro = (Displayed Number) / 1,000,000

Example: 1.2 k Ω = 1200 Ω

Example: 50 mA = 0.05 A

Voltage Measurement

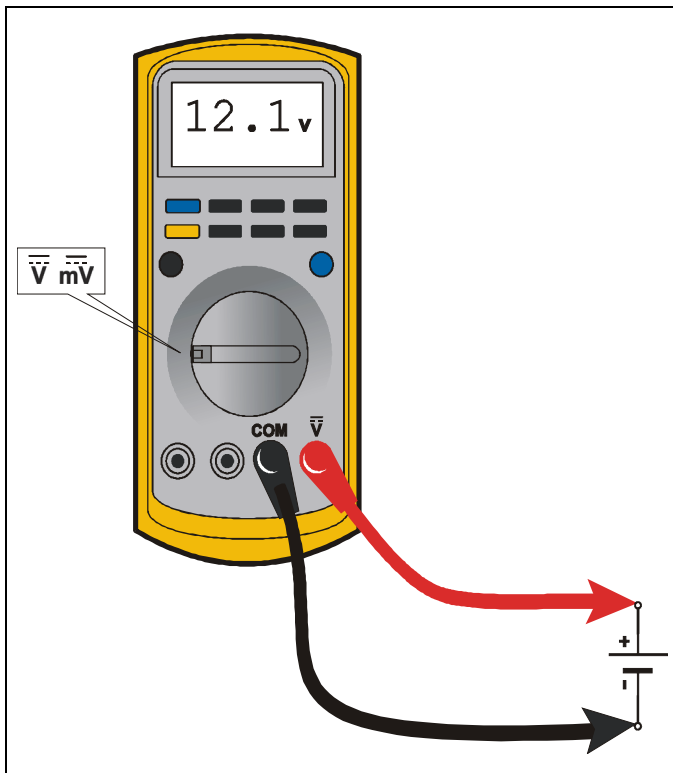


Figure 3-1. Voltage Measurement (DC)

- If meter is not auto ranging, set it to the correct range (See multimeter's operation manual)
- Use firm contact with meter leads

Resistance Measurement

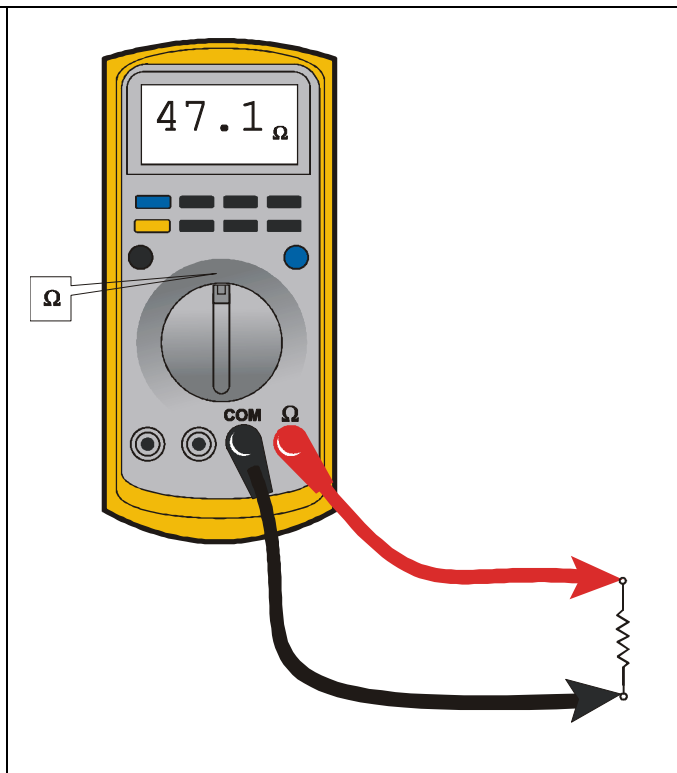
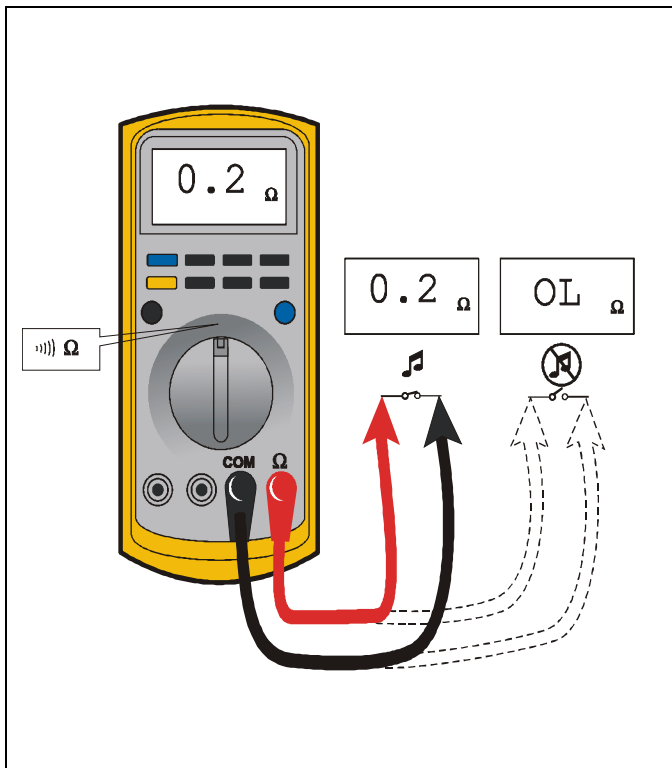
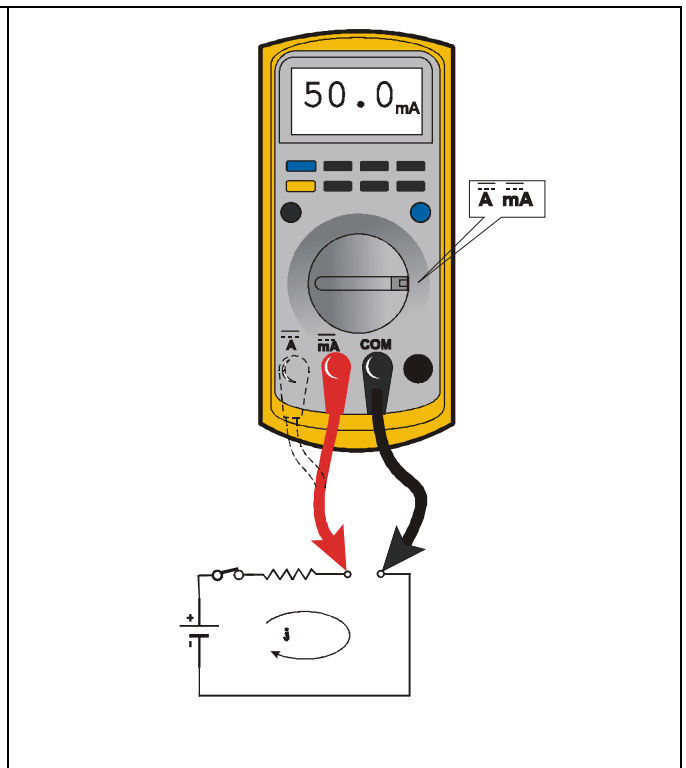


Figure 3-2. Resistance Measurement

- First test meter and leads by touching leads together. Resistance should read a short circuit (very low resistance)
- Circuit power must be turned OFF before testing resistance
- Disconnect component from circuit before testing
- If meter is not auto ranging, set it to the correct range (See multimeter's operation manual)
- Use firm contact with meter leads

Continuity Measurement**Figure 3-3. Continuity Measurement**

- Some meters require a separate button press to enable audible continuity testing
- Circuit power must be turned OFF before testing continuity
- Disconnect component from circuit before testing
- Use firm contact with meter leads
- First test meter and leads by touching leads together. Meter should produce an audible alarm, indicating continuity

Current Measurement**Figure 3-4. Current Measurement (DC)**

- Set up the meter for the expected current range
- Be sure to connect the meter leads to the correct jacks for the current range you have selected
- If meter is not auto ranging, set it to the correct range (See multi meter's operation manual)
- Use firm contact with meter leads

Continuity Measurement Over Long Distances

When trying to determine continuity of a harness or wire, longer than the reach of standard instrument leads, is possible to perform the check without excessively long leads. Using the other wires in the harness one can determine the condition of a particular wire in the harness.

Requirements:

- Harness with at least three separate wires including the wire under test.
- These wires must be able to be isolated from other wires, etc.
- Jumper or method to connect contacts on one side of harness.
- Meter that can measure resistance or continuity.

Procedure

Test multimeter leads resistance. Subtract this value from the measured resistance of the wires to get a more accurate measurement.

Consult the circuit schematic to determine which wires to use in addition to wire under test, here called wire #1 and wire #2, and how to isolate these wires. These wires should appear in the same connectors as the wire under test or are within reach of the jumper.

1. Disconnect all connections associated with the wire under test and the two additional wires. If harness is not completely isolated disconnect battery terminals also, as a precaution.
2. Measure continuity between all three wires, the wire under test, wire #1 and wire #2. These should be open. If not, repair the shorted wires or replace the harness.
3. On one side, jumper from contact of wire #1 and wire #2.

4. Measure continuity between wire #1 and wire #2. If there is continuity, both wires are good and can be used for this test. If there is not continuity, either wire could be bad. Check connections and measurement setup. Redo measurement. If still no continuity, repair wires or consult schematic for other wires to use for test.
5. Jumper from wire under test to wire #1.
6. Measure continuity. If there is continuity, the wire under test is good. Resistance of a wire increases as the length increases and as the diameter decreases.

One can find the continuity of two wires, here #1 and #2, at once by following steps 1 through 4. If there is a problem the third wire is used to troubleshoot the other wires. To find the problem, start at step 1 and use the entire procedure.

3.3 APPLYING SILICONE DIELECTRIC COMPOUND TO AMP CONNECTORS

Silicone Dielectric Compound must be used on the AMP connections for the following reasons:

- To prevent oxidation at the mechanical joint between male and female pins.
- To prevent electrical malfunction caused by low level conductivity between pins when wet.

Use the following procedure to apply Silicone Dielectric Compound to the electrical connectors.

1. To prevent oxidation and low level conductivity, silicone dielectric grease must be packed completely around

male and female pins on the inside of the connector after the mating of the housing to the header. This is easily achieved by using a syringe to fill the header with silicone dielectric compound, to a point just above the top of the male pins inside the header. When assembling the housing to the header, it is possible that the housing will become air locked, thus preventing the housing latch from engaging.

2. Pierce one of the unused wire seals to allow the trapped air inside the housing to escape.
3. Install a hole plug into this and/or any unused wire seal that has silicone dielectric compound escaping from it.

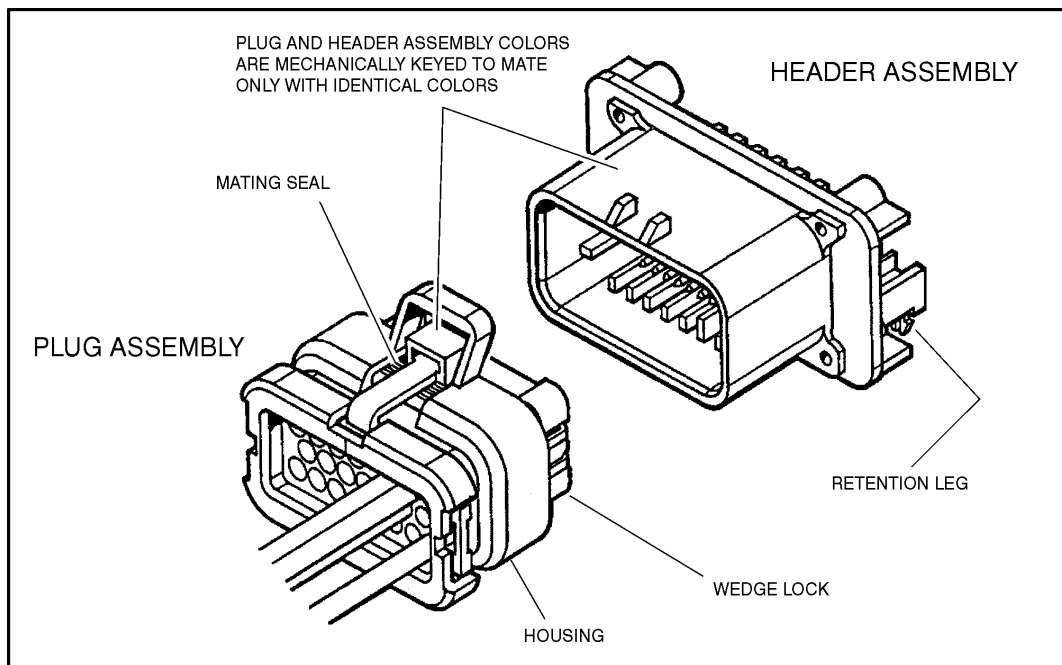


Figure 3-5. AMP Connector

Assembly

Check to be sure the wedge lock is in the open, or as-shipped, position (See Figure 3-6. Connector Assembly (1 of 4)). Proceed as follows:

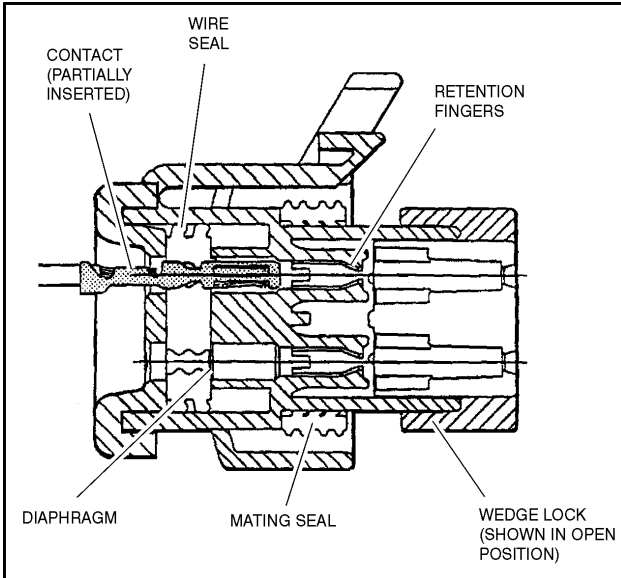


Figure 3-6. Connector Assembly (1 of 4)

1. To insert a contact, push it straight into the appropriate circuit cavity as far as it will go (See Figure 3-7. Connector Assembly (2 of 4)).
2. Pull back on the contact wire with a force of 1 or 2 lb to be sure the retention fingers are holding the contact (See Figure 3-7. Connector Assembly (2 of 4)).
3. After all required contacts have been inserted, the wedge lock must be closed to its locked position. Release the locking latches by squeezing them inward (See Figure 3-8. Connector Assembly (3 of 4)).
4. Slide the wedge lock into the housing until it is flush with the housing (See Figure 3-9. Connector Assembly (4 of 4)).

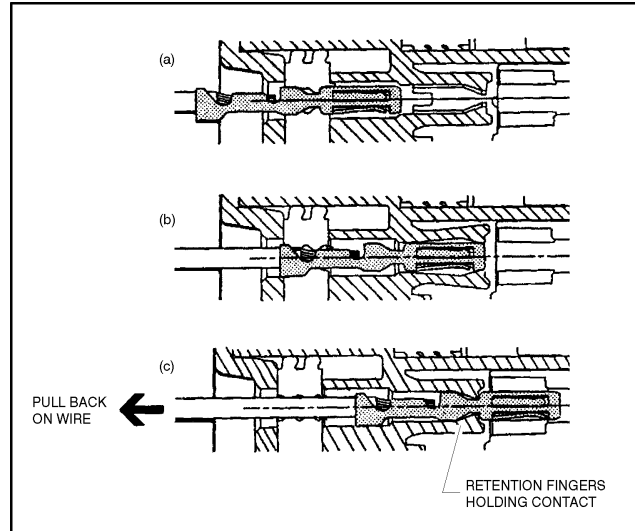


Figure 3-7. Connector Assembly (2 of 4)

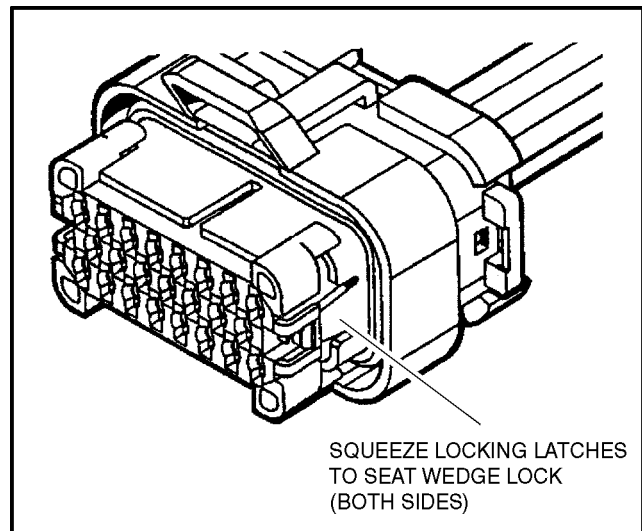


Figure 3-8. Connector Assembly (3 of 4)

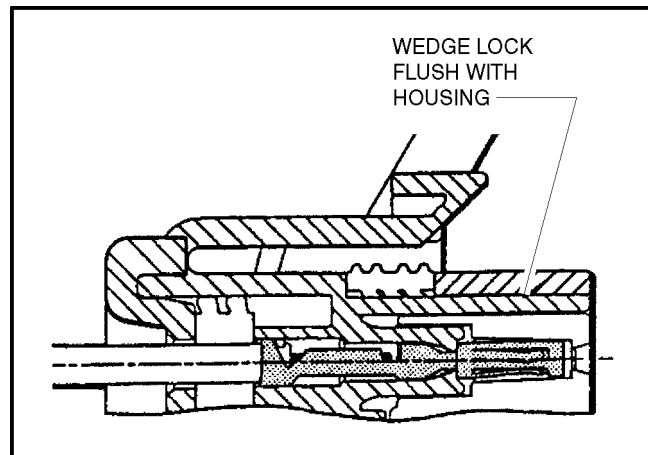


Figure 3-9. Connector Assembly (4 of 4)

Disassembly

1. Insert a 4.8 mm (3/16") wide screwdriver blade between the mating seal and one of the red wedge lock tabs.
2. Pry open the wedge lock to the open position.
3. While rotating the wire back and forth over a half turn (1/4 turn in each direction), gently pull the wire until the contact is removed.

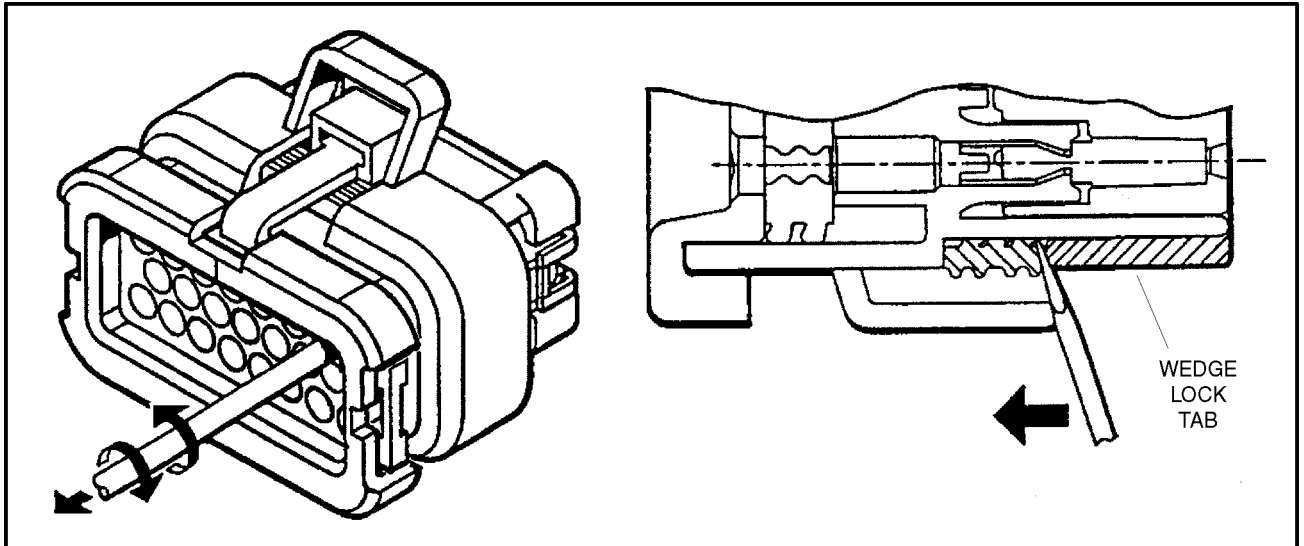


Figure 3-10. Connector Disassembly

NOTE: The wedge lock should never be removed from the housing for insertion or removal of the contacts.

Wedge Lock

The wedge lock has slotted openings in the forward, or mating end. These slots accommodate circuit testing in the field, by using a flat probe such as a pocket knife. DO NOT use a sharp point such as an ice pick.

Service - Voltage Reading

⚠ CAUTION

DO NOT PIERCE WIRE INSULATION TO TAKE VOLTAGE READINGS.

It has been common practice in electrical troubleshooting to probe wires by piercing the insulation with a sharp point. This

practice should be discouraged when dealing with the AMP-SEAL plug assembly, or any other sealed connector system. The resulting pinholes in the insulation will allow moisture to invade the system by traveling along the wire strands. This nullifies the effectiveness of the connector seals and could result in system failure.

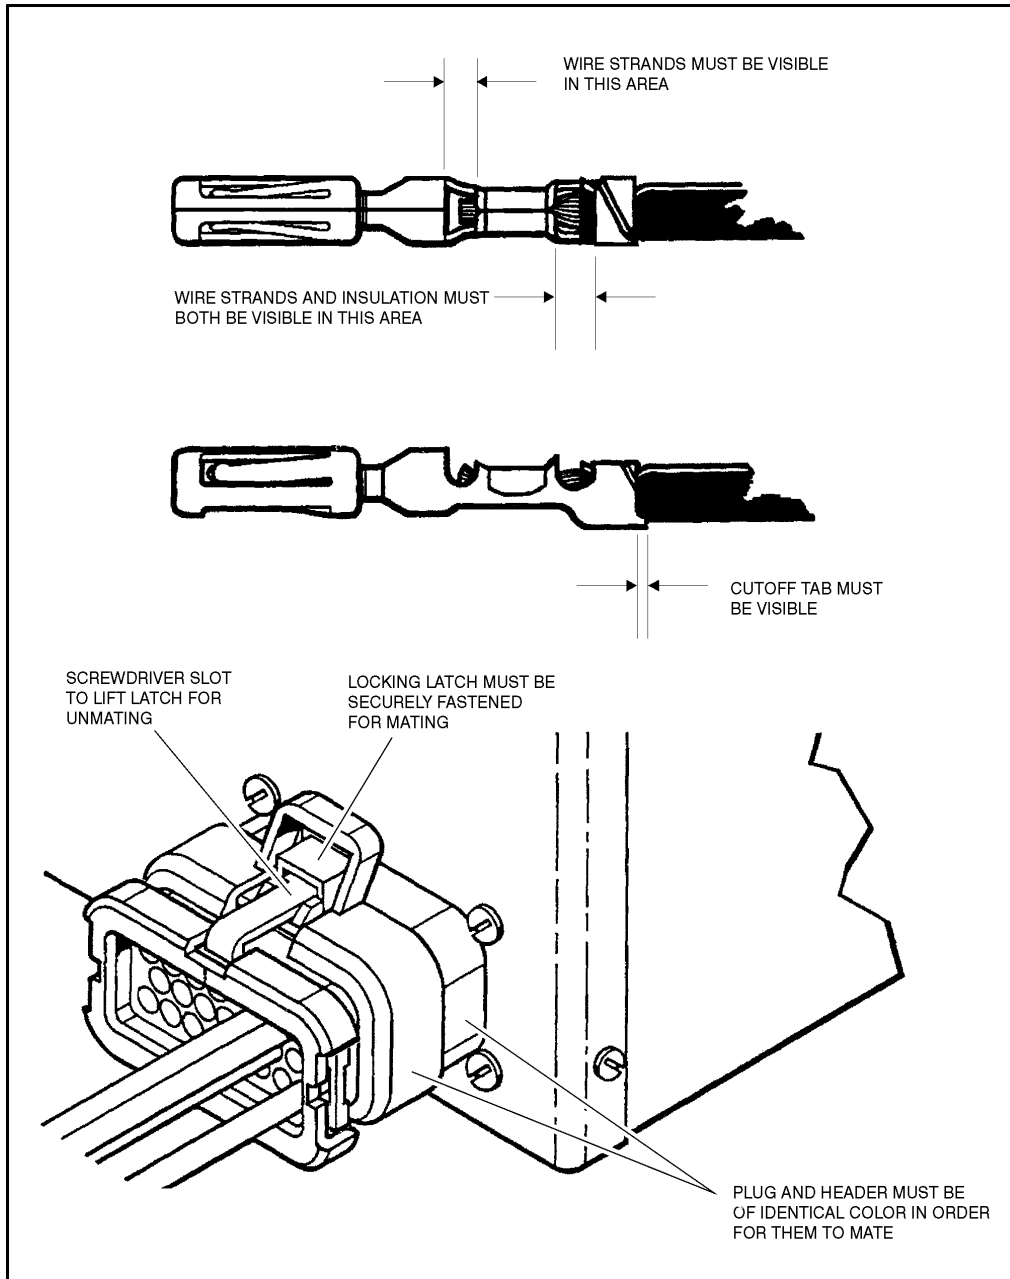


Figure 3-11. Connector Installation

3.4 WORKING WITH DEUTSCH CONNECTORS

DT/DTP Series Assembly

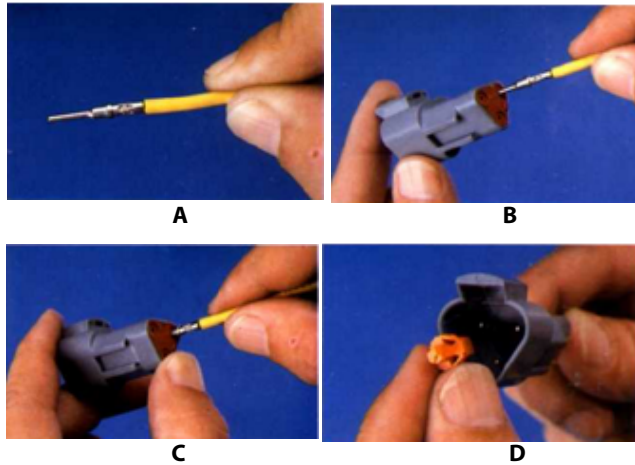


Figure 3-12. DT/DTP Contact Installation

1. Grasp crimped contact about 25mm behind the contact barrel.
2. Hold connector with rear grommet facing you.
3. Push contact straight into connector grommet until a click is felt. A slight tug will confirm that it is properly locked in place.
4. Once all contacts are in place, insert wedgelock with arrow pointing toward exterior locking mechanism. The wedgelock will snap into place. Rectangular wedges are not oriented. They may go in either way.

NOTE: The receptacle is shown - use the same procedure for plug.

DT/DTP Series Disassembly

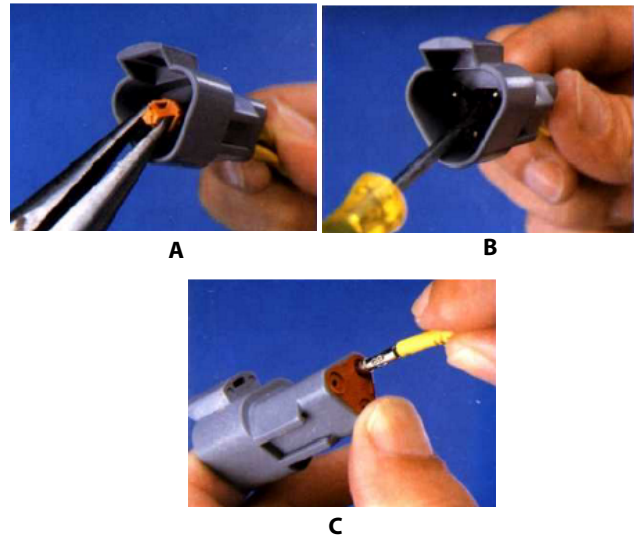


Figure 3-13. DT/DTP Contact Removal

1. Remove wedgelock using needlenose pliers or a hook shaped wire to pull wedge straight out.
2. To remove the contacts, gently pull wire backwards, while at the same time releasing the locking finger by moving it away from the contact with a screwdriver.
3. Hold the rear seal in place, as removing the contact may displace the seal.

HD30/HDP20 Series Assembly

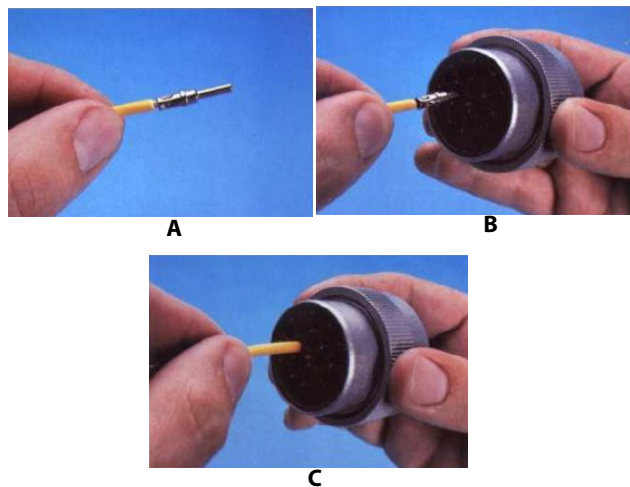


Figure 3-14. HD/HDP Contact Installation

1. Grasp contact about 25mm behind the contact crimp barrel.
2. Hold connector with rear grommet facing you.
3. Push contact straight into connector grommet until a positive stop is felt. A slight tug will confirm that it is properly locked in place.

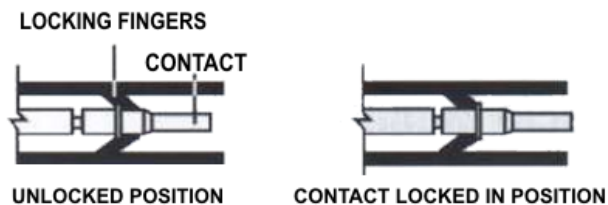


Figure 3-15. HD/HDP Locking Contacts Into Position

NOTE: For unused wire cavities, insert sealing plugs for full environmental sealing

HD30/HDP20 Series Disassembly

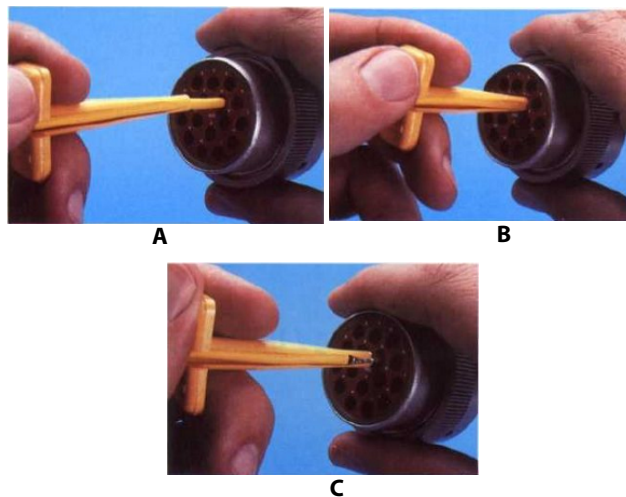


Figure 3-16. HD/HDP Contact Removal

1. With rear insert toward you, snap appropriate size extractor tool over the wire of contact to be removed.
2. Slide tool along into the insert cavity until it engages contact and resistance is felt.
3. Pull contact-wire assembly out of connector.

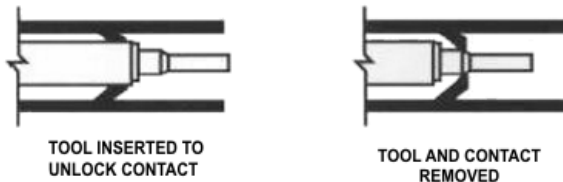


Figure 3-17. HD/HDP Unlocking Contacts

NOTE: Do Not twist or insert tool at an angle.

3.5 SWITCHES

Basic check

The following check determines if the switch is functioning properly, not the circuit in which the switch is placed. A switch is functioning properly when there is continuity between the correct terminals or contacts only when selected.

1. De-energize the circuit.
2. Isolate the switch from the rest of the circuit if possible. If not possible, keep in mind it may affect readings.
3. Access the terminals to the switch.
4. If the switch has two terminals:
 - a. Measure resistance across the terminals.
 - b. Change the switch position.
 - c. Measure resistance again with the leads in the same positions. If the meter was reading short, it should read an open. If the meter was reading open it should read short.
5. If the switch has more than two terminals, consult the schematic or switch diagram to determine what terminals will be connected. The test is similar to testing a switch with two terminals.
 - a. Place one meter lead on the common contact and the other on a different contact in the same circuit.
 - b. Cycle through all positions of the switch. The meter should read short only when the switch connects the two terminals and open otherwise.
 - c. If the switch has more than one common contact repeat the process for that circuit.

Limit Switches

Limit switches are used to control movement or indicate position. Mechanical limit switches are just like manually operated switches except that the moving object operates the switch. These switches can be tested the same way as a standard switch by manually operating the sensing arm.

Another type of limit switch used by JLG is the inductive proximity switch, also referred to as a "prox switch". Inductive proximity switches are actuated only by ferrous metal (metal that contains Iron, such as steel) near the switch. They do not require contact, and must be energized to actuate. These types of switches can be used to detect boom or platform position, for example. These switches have a sensing face where the switch can detect ferrous metal close to it. To find the sensing face, take note how the switch is mounted and how the mechanisms meet the switch. Test this type of switch as follows:

1. Remove prox switch from its mount.
2. Reconnect harness if it was disconnected for step a, and turn on machine.
3. Hold switch away from metal and observe switch state in the control system diagnostics using the Analyzer. See vehicle or control system documentation on how to do this.
4. Place sensing face of switch on the object to be sensed by the switch. If that is not available, use a piece of ferrous metal physically similar to it. The switch state in the control system diagnostics should change.
5. When reinstalling or replacing switch be sure to follow mounting instructions and properly set the gap between the switch and object sensed.

Automatic Switches

If the switch is actuated automatically, by temperature or pressure for example, find a way to manually actuate the switch to test it. Do this either by applying heat or pressure, for example, to the switch. These switches may need to be energized to actuate.

1. Connect instrumentation to monitor and/or control the parameter the switch is measuring.
2. Observe switch state in control system with the Analyzer. See vehicle or control system documentation on how to do this.
3. Operate system such that the switch actuates. This could be going over a certain pressure or temperature, for example. The state indicated in the control system should change.

Switch Wiring - Low Side, High Side

When controlling a load, a switch can be wired between the positive side of the power source and the load. This switch is called a "high side" switch. The switch supplies the power to the load. When a switch is wired between the negative side of the power source and the load, it is a "low side" switch. The switch provides the ground to the load.

A low side switch will allow voltage to be present on the load. No power is applied because the switch is stopping current flow. This voltage can be seen if the measurement is taken with one test lead on the load and the other on the battery negative side or grounded to the vehicle. What is actually being measured is the voltage drop across the switch. This could mislead a technician into thinking the load is receiving power but not operating. To produce an accurate picture of power or voltage applied to the load, measure voltage across the load's power terminals. Also, the technician can measure the voltage at both power terminals with respect to battery ground. The difference between those two measurements is the voltage applied to the load.

3.6 TROUBLESHOOTING

General

This section contains troubleshooting information to be used for locating and correcting most of the operating problems which may develop in the mobile elevating work platform. If a problem should develop which is not presented in this section or which is not corrected by listed corrective actions, technically qualified guidance should be obtained before proceeding with any maintenance.

Troubleshooting Information

The troubleshooting procedures applicable to the mobile elevating work platform are listed and defined in following troubleshooting tables.

Each malfunction within an individual group or system is followed by a listing of probable causes which will enable determination of the applicable remedial action. The probable causes and the remedial action should, where possible, be checked in the order listed in the tables.

It should be noted that there is no substitute for a thorough knowledge of the equipment and related systems.

It should be recognized that the majority of the problems arising in the machine will be centered in the hydraulic and electrical systems. For this reason, every effort has been made to ensure that all likely problems in these areas are given the fullest possible treatment. In the remaining machine groups, only those problems which are symptomatic of greater problems which have more than one probable cause and remedy are included. This means that problems for which the probable cause and remedy may be immediately obvious are not listed in this section.

The first rule for troubleshooting any circuit that is hydraulically operated and electrically controlled is to determine if the circuit is lacking hydraulic oil and electrical control power. This can be ascertained by overriding the bypass valve (mechanically or electrically) so that oil is available to the function valve, then overriding the function valve mechanically. If the function performs satisfactorily, the problem exists with the control circuit.

Hydraulic Circuit Checks

The first reference for improper function of a hydraulic system, where the cause is not immediately apparent, should be the Troubleshooting Chart. The best place to begin the problem analysis is at the power source (pump). Once it is determined that the pump is serviceable, then a systematic check of the circuit components, beginning with the control, would follow. For aid in troubleshooting, refer to the Illustrated Parts Manual for hydraulic diagrams of the various circuits.

Table 3-1. Elevation System Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|------------------------------------|---|---|
| Platform Elevation System | | |
| No Response to Lift Control | | |
| | Lift not performed within three seconds after lift function switch is selected. | Reselect lift function switch, then activate joystick within three seconds. |
| | Enable circuit not functioning properly. | Replace enable circuit card. |
| | Lift control switch inoperative. | Repair or replace control switch. |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| | Restricted or broken supply line on valve bank or pump. | Clean, repair or replace line. |
| | Control valve not functioning properly. | Repair or replace valve. |
| | Lift cylinder not functioning properly. | Repair or replace cylinder. |
| | Hydraulic pump not functioning properly. | Repair or replace pump. |
| Platform will not raise. | | |
| | Joystick not activated within three seconds after lift switch is activated. | Activate lift switch, then activate joystick within three seconds. |
| | Enable circuit not functioning properly. | Replace enable circuit card. |
| | Load capacity exceeded. (Personnel and/or equipment on platform). | Reduce load. (Refer to capacity placard). |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| | Restricted or broken hydraulic line or fitting. | Clean, repair, or replace line or fitting. |
| | Control valve not functioning properly. | Repair or replace valve. |
| | Lift cylinder not functioning properly. | Repair or replace lift cylinder. |
| | Engine does not respond when lift control switch is moved to up position. | Refer to Electrical System Troubleshooting - No response to control switch. |
| | No electrical signal being sent to lift up control valve cartridge. | Refer to Electrical System Troubleshooting - No response to control switch. |
| Platform will not lower | | |
| | Joystick not activated within three sec. after lift switch is activated. | Depress lift switch, then activate controller within three seconds. |
| | Enable circuit not functioning properly. | Replace enable circuit card. |
| | No electrical signal sent to lift down control valve cartridge. | Refer to Electrical System Troubleshooting - No response to control switch. |
| | Lift down control valve cartridge not functioning properly. | Repair or replace lift down control valve cartridge. |
| | Lift cylinder not functioning properly. | Repair or replace lift cylinder. |
| | Engine does not respond when lift switch is moved to down position. | Refer to Electrical System Troubleshooting - No response to control switch. |
| | No electrical signal being sent to lift down control valve. | Refer to Electrical System Troubleshooting - No response to control switch. |

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

Table 3-1. Elevation System Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|---|--|----------------------------------|
| Platform raises and lowers erratically | | |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| | Restricted or broken hydraulic line or fitting. | Clean, repair or replace line. |
| | Counterbalance valve on lift cyl. improperly adjusted or not functioning properly. | Replace valve. |
| | Control valve not functioning properly. | Repair or replace valve. |
| | Worn seals in lift cylinder. | Replace seals. |
| | Lift cylinder not functioning properly. | Repair or replace lift cylinder. |
| Platform drifts down | | |
| | Manual lowering valve not functioning properly. | Repair or replace valve. |
| | Worn seals in lift cylinder. | Replace seals. |
| | Holding valve on lift cylinder not functioning properly. | Repair or replace valve. |
| High Drive does not operate below horizontal | | |
| | Damaged wiring on limit switch. | Repair or replace wiring. |
| | Damaged limit switch. | Replace limit switch |
| | | |

Table 3-2. Chassis Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|---|--|---|
| Drive System | | |
| No response to drive controller | | |
| | Joystick not activated within three seconds after drive select switch is activated. | Activate drive select switch, then activate joystick within three seconds. |
| | Enable circuit not functioning properly. | Replace enable circuit card. |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| | Hydraulic pump not functioning properly. | Repair or replace pump. |
| | Restricted or broken pump supply line. | Clean, repair or replace line. |
| | Drive motor not functioning properly. | Repair or replace motor. |
| | Damaged wiring on drive controller. | Repair or replace wiring. |
| | Drive controller not functioning properly. | Repair or replace controller. |
| | Drive brake not releasing. | Determine cause and repair or replace brake. |
| Machine drives erratically | | |
| | Microcircuit on controller improperly adjusted. | Adjust microswitch on controller for proper operation. |
| Machine will not travel forward | | |
| | Joystick not activated within three seconds after drive switch is activated. | Activate drive switch, then activate joystick within three seconds. |
| | Enable circuit not functioning properly. | Replace enable circuit card. |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| | Restricted or broken hydraulic line or fitting. | Clean, repair or replace line or fitting. |
| | Control valve not functioning properly. | Repair or replace valve. |
| | Drive motor not functioning properly. | Repair or replace motor. |
| | Brake not functioning properly. | Repair or replace brake. |
| | Engine will not respond when enable switch is activated and drive controller is activated. | Refer to Electrical System Troubleshooting - No response to control switch. |
| | No electrical signal being sent to the drive valve cartridge. | Refer to Electrical System Troubleshooting - No response to control switch. |
| Machine will not travel in reverse | | |
| | See: Machine will not travel forward. | |

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

Table 3-2. Chassis Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|---|---|--|
| High-Speed Drive function does not operate | | |
| | Loose or damaged wiring between drive controller and High Speed switch. | Ensure proper connection of wires. Using suitable test meter, perform continuity test on wiring between switches. Repair or replace wires as necessary. |
| | Defective high speed control switch. | Replace high speed control switch. |
| | Loose or damaged wiring in control box wire harness. | Ensure proper connection of wires at the control switch. Using suitable test meter, perform continuity test on wires. Repair or replace harness as necessary. |
| | Loose or damaged wiring between platform and high speed solenoid. | Ensure proper connection of wires at the platform and at the high speed solenoid. Using suitable test meter, perform continuity test on wires. Repair or replace wires as necessary. |
| | High speed solenoid not functioning properly. | Replace solenoid. |
| | Loose or damaged wiring between high speed relay and high speed limit switch. | Ensure proper connection of wires between high speed relay and high speed limit switch. Using suitable test meter, perform continuity test on wires. Repair or replace wires as necessary. |
| | High speed limit switch not functioning properly. | Repair or replace limit switch. |
| | Loose or damaged wiring in valve wiring harness. | Ensure proper connection of wires at terminal strip. Using suitable test meter, perform continuity test on wires. Repair or replace wires as necessary. |
| Steering System | | |
| No response to steer control switch on controller | | |
| | Steerswitch on controller not functioning properly. | Repair or replace switch. |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| | Hydraulic system pressure too low. | Adjust pressure. |
| | Loose or damaged wiring on control switch or solenoid valve. | Ensure proper connection of wires at control switch or solenoid valve. Using suitable test meter, perform continuity test on wires. Repair or replace wires as necessary. |
| | Restricted or broken hydraulic line on valve bank or hydraulic pump. | Clean, repair or replace line. |
| | Control valve not functioning properly. | Repair or replace valve. |
| | Steer cylinder not functioning properly. | Repair or replace cylinder. |
| Machine hard to steer or steering is erratic | | |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| | Restricted or broken hydraulic line or fitting. | Clean, repair or replace line or fitting. |
| Machine hard to steer or steering is erratic (cont.) | | |
| | Lack of lubrication on steer components. | Lubricate steer components in accordance with Lubrication Chart. |
| | Restricted crossover relief valve. | Clean or replace valve. |
| | Steer system pressure low. | Adjust pressure. |
| | Bent steering linkage. | Repair or replace linkage as required. |
| | Hydraulic pump not functioning properly. | Repair or replace valve. |
| | Steer cylinder not functioning properly. | Repair or replace cylinder. |

Table 3-2. Chassis Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|---|--|---|
| Steering inoperative | | |
| | Steers switch on controller not functioning properly. | Repair or replace switch. |
| | Hydraulic system pressure too low. | Adjust pressure. |
| | Loose or damaged wiring on control switch or solenoid valve. | Ensure proper connection of wires at control switch or solenoid valve. Using suitable test meter, perform continuity test on wires. Repair or replace wires as necessary. |
| | Solenoid valve not functioning properly. | Repair or replace valve. |
| | Restricted or broken hydraulic line on valve bank or hydraulic pump. | Clean, repair or replace line. |
| | Relief valve improperly set or not functioning properly. | Reset, repair or replace valve as necessary. |
| | Steer cylinder not functioning properly. | Repair or replace cylinder. |
| Machine will not steer left or right | | |
| | Steers switch on controller not functioning properly. | Replace controller. |
| | Wiring on steer control switch is damaged. | Repair or replace wiring. |
| | Wiring on solenoid valve damaged. | Repair or replace wiring. |
| | Coil in solenoid damaged. | Replace coil. |
| | Bent cylinder rod. | Repair or replace cylinder. |
| | Damaged steer linkage. | Repair or replace steer linkage. |
| Machine wanders; steering not firm | | |
| | Crossover relief valve set too low or not functioning properly. | Reset, repair or replace valve as necessary. |
| | Steer linkage loose. | Tighten linkage. |
| | Spindle bushings badly worn. | Replace bushings. |

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

Table 3-3. Hydraulic System Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|--|---|--|
| Hydraulic System - General | | |
| Hydraulic Pump Noisy | | |
| | Air bubbles in oil. (Reservoir too low.) | Replenish oil as necessary. |
| | Oil filter dirty. | Clean and/or replace filter as necessary. |
| Pump cavitating. (Vacuum in pump due to oil starvation) | | |
| | Oil in reservoir low. | Replenish Oil as necessary. |
| | Restricted reservoir air vent. | Clean vent. |
| | Oil viscosity too high. | Drain system and replace with recommended oil. Refer to Hydraulic Oil. |
| System overheating | | |
| | Oil viscosity too high. | Drain system and replace with recommended oil. Refer to Hydraulic Oil. |
| | Main relief valve set too high. | Adjust relief valve to proper pressure. |
| | Hydraulic system oil low. | Replenish oil as necessary. |
| Pump not delivering oil | | |
| | Defective pump. | Repair or replace pump. |
| System pressure too low | | |
| | Main relief valve set too low. | Reset valve as required |
| | Hydraulic pump not functioning properly. | Repair or replace pump. |
| | Leak in component, line or fitting. | Repair or replace component, line or fitting. |
| | Scored valve spool; scored cylinder. | Replace valve; replace cylinder. |
| System(s) operate erratically | | |
| | Sticking or binding valve cartridge, piston rod, etc. | Clean, repair or replace components as necessary |
| | Hydraulic oil not at operating temperature. | Allow oil sufficient time to warm up. |

Table 3-4. Electrical System Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|--|---|--|
| Hand Controller | | |
| Valve will not function when handle is moved in either direction. | | |
| | Enable switch not activated. | Activate enable switch. |
| | Controller not activated within three seconds after enable switch is activated. | Activate enable switch, then activate controller within three seconds. |
| | Enable circuit not functioning properly. | Replace enable circuit card. |
| | No electrical power to handle. | Check electrical input to hand controller (12Volts). |
| | No electrical power to valve. | Check electrical output of printed circuit board and electrical signal at the valve. |
| | Improper ground. | Check for proper grounding of handle. |
| Control Switches | | |
| No response to a function control switch | | |
| | Enable switch not activated. | Activate enable switch. |
| | Control switch not activated within three seconds after enable switch is activated. | Activate enable switch, then activate control switch within three seconds. |
| | Enable circuit not functioning properly. | Replace enable circuit card. |
| | Applicable emergency stop switch not positioned properly. | Place applicable emergency stop switch to on. |
| | Power selector switch on ground control box not positioned properly. | Place power selector switch to platform or ground, as required. |
| | Circuit breaker open. | Determine and correct cause. Reset circuit breaker. |
| | No voltage present at emergency stop switch. | Check battery cable from battery to emergency stop switch for proper connection or damage. Repair or replace cable as necessary. |
| | EMERGENCY STOP switch not functioning properly. | Replace switch. |
| | No voltage supplied to engine start relay from emergency stop switch. | Check battery cable from emergency stop switch to start relay for proper connection or damage. Repair or replace cable as necessary. |
| | No voltage input at terminal strip. | Check wire from battery to terminal strip for proper connection or damage. Repair or replace wire as necessary. |
| | No voltage present at circuit breaker. | Check wire from terminal strip to circuit breaker for proper connection or damage. Repair or replace wire as necessary. |
| | Defective circuit breaker. | Replace circuit breaker. |
| | No voltage present at function control switch. | Check wiring from emergency stop switch to function control switch for proper connection or damage. Repair or replace wiring as necessary. |
| | Defective function control switch. | Replace function control switch. |

Table 3-4. Electrical System Troubleshooting

| TROUBLE | PROBABLE CAUSE | REMEDY |
|---|--|---|
| No response to a function control switch (cont.) | | |
| | No voltage present at applicable control valve coil. | Check applicable wire for proper connection at terminal strip, valve harness plug pin, valve harness receptacle pin and engine start relay. Using suitable test meter, perform continuity test on wire. Repair or replace wire or harness as necessary. |
| | No voltage supplied from terminal strip to engine start relay. | Check applicable wire for proper connection at terminal strip, valve harness plug pin, valve harness receptacle pin and engine start relay. Using suitable test meter, perform continuity test on wire. Repair or replace wire or harness as necessary. |
| | Defective engine start relay. | Replace engine start relay. |
| | No voltage supplied to engine from start relay. | Check battery cable from relay to engine for proper connection or damage. Repair or replace cable as necessary. |
| | No voltage present at applicable control valve coil. | Check applicable wire for proper connection at terminal strip, valve harness plug pin, valve harness receptacle pin and valve coil. Using suitable test meter, perform continuity check on wires. Repair or replace harness as necessary. |
| | NOTERMINAL STRIPS!!!!!! No voltage supplied from terminal strip to electric motor start relay. | Check applicable wire for proper connection at terminal strip, valve harness plug pin, valve harness receptacle pin and electric motor start relay. Using suitable test meter, perform continuity test on wire. Repair or replace wire as necessary. |
| | Defective electric motor start relay. | Replace electric motor start relay. |
| | No voltage supplied to motor from start relay. | Check battery cable from relay to motor for proper connection or damage. Repair or replace wire as necessary. |
| | Defective motor/pump assembly. | Replace motor/pump assembly. |

3.7 ELECTRICAL SCHEMATICS

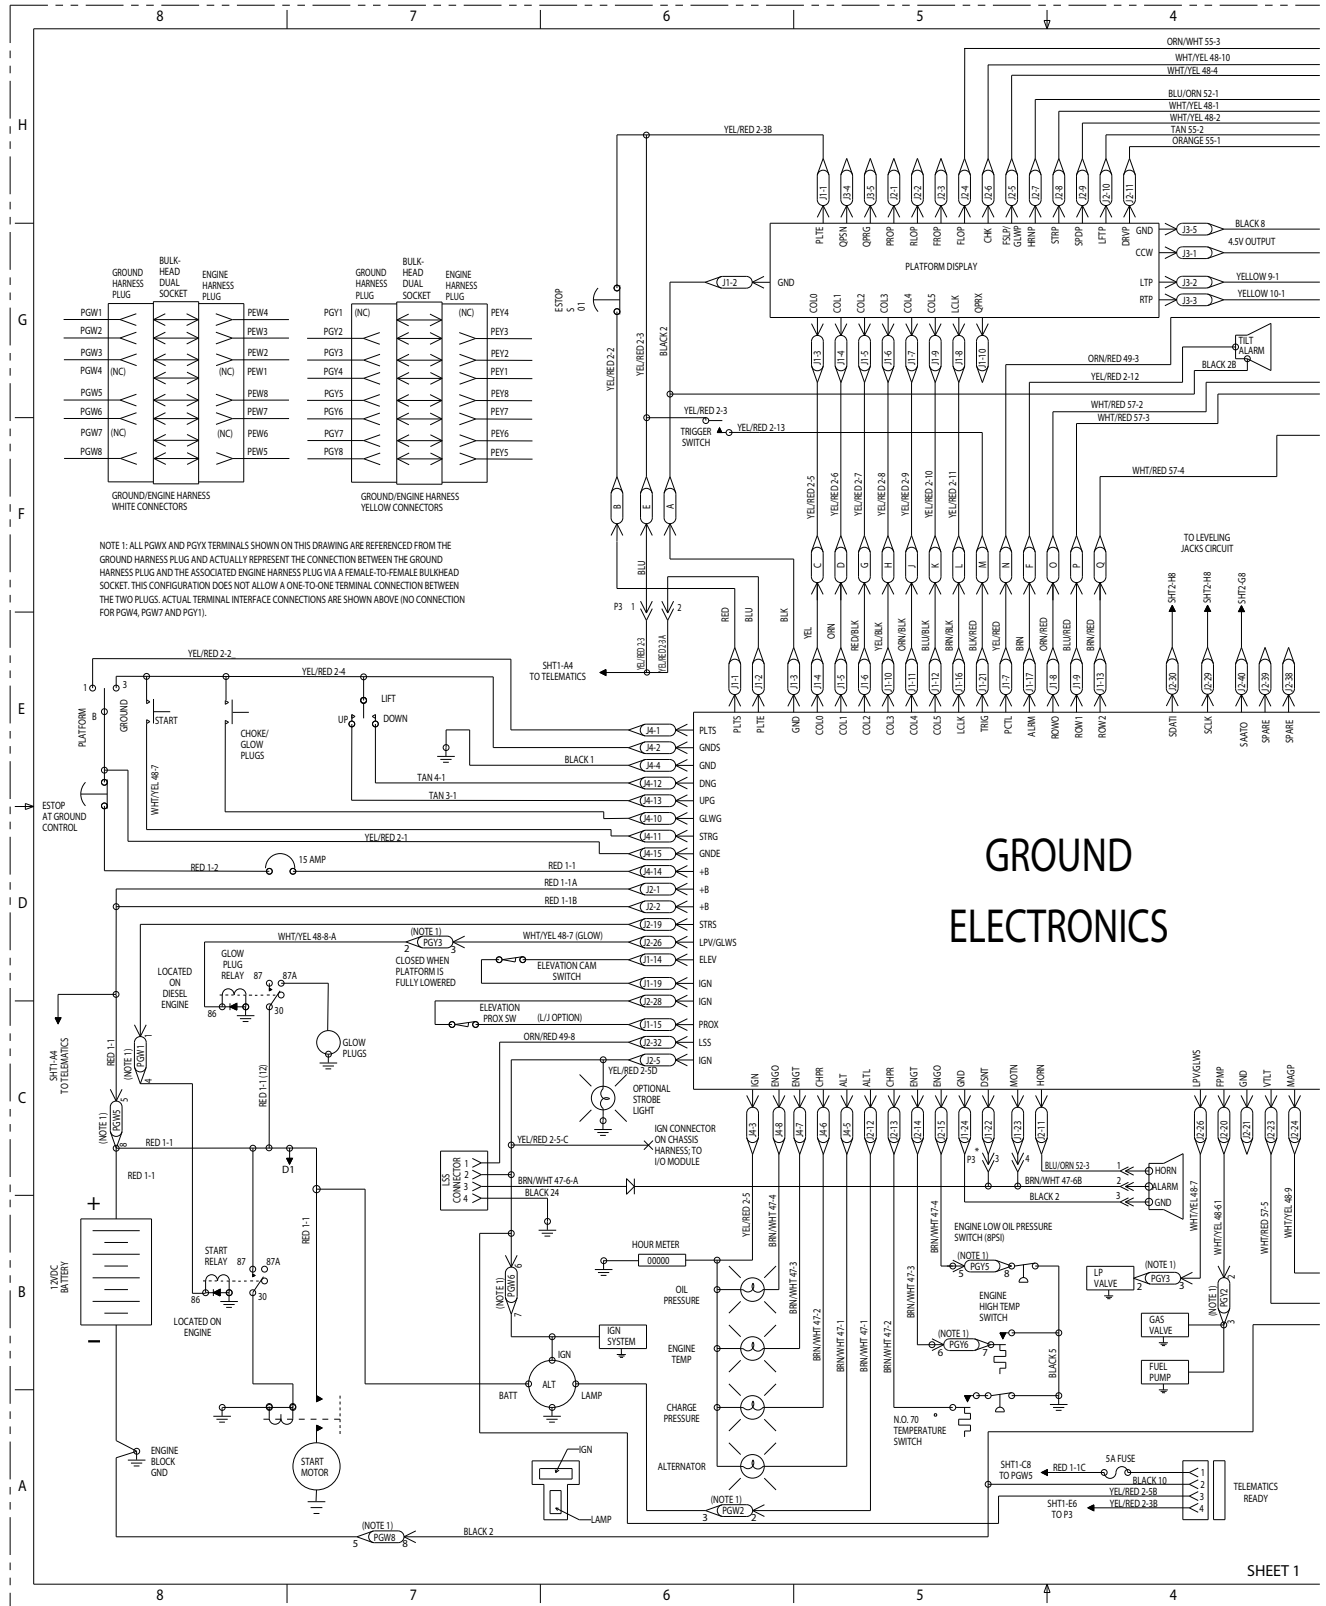


Figure 3-18. Electrical Schematic - Sheet 1 of 4

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

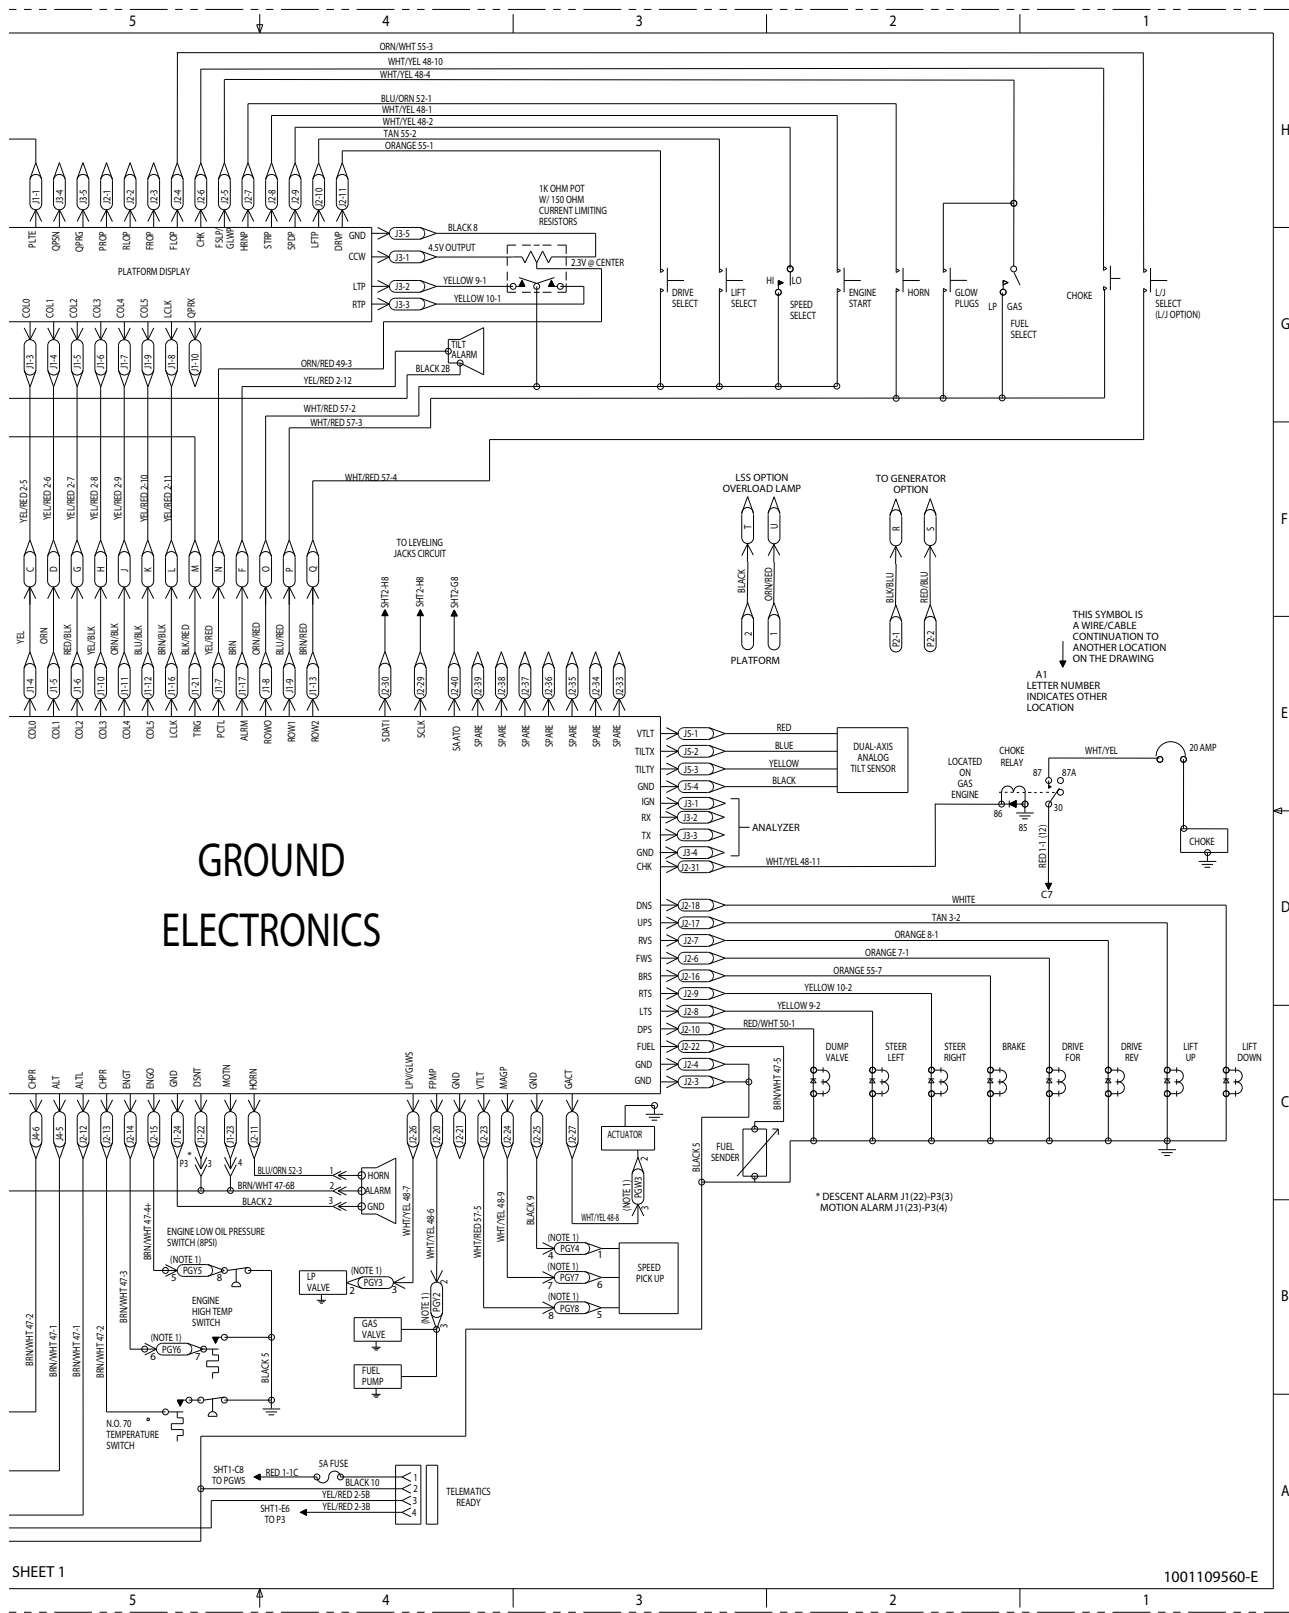


Figure 3-19. Electrical Schematic - Sheet 2 of 4

MAF03530

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS


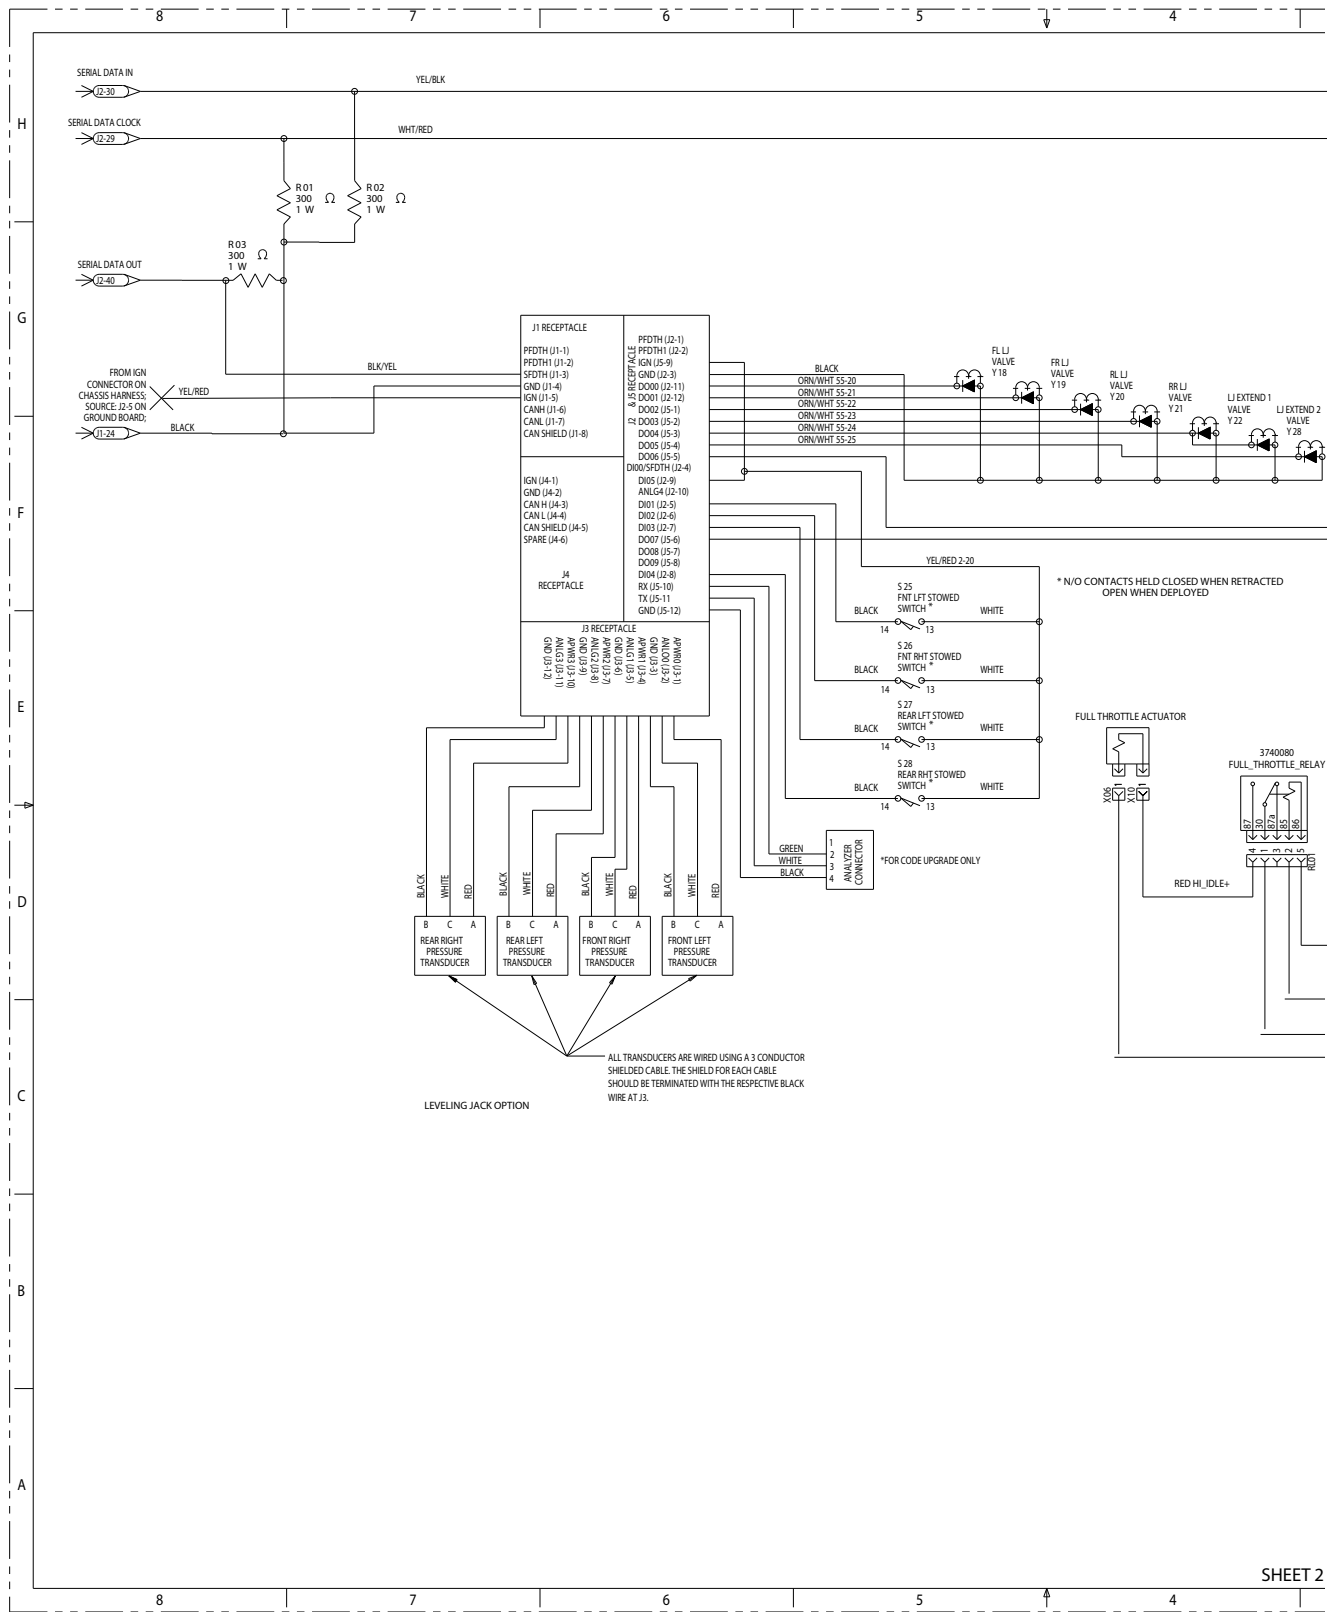


Figure 3-20. Electrical Schematic - Sheet 3 of 4

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

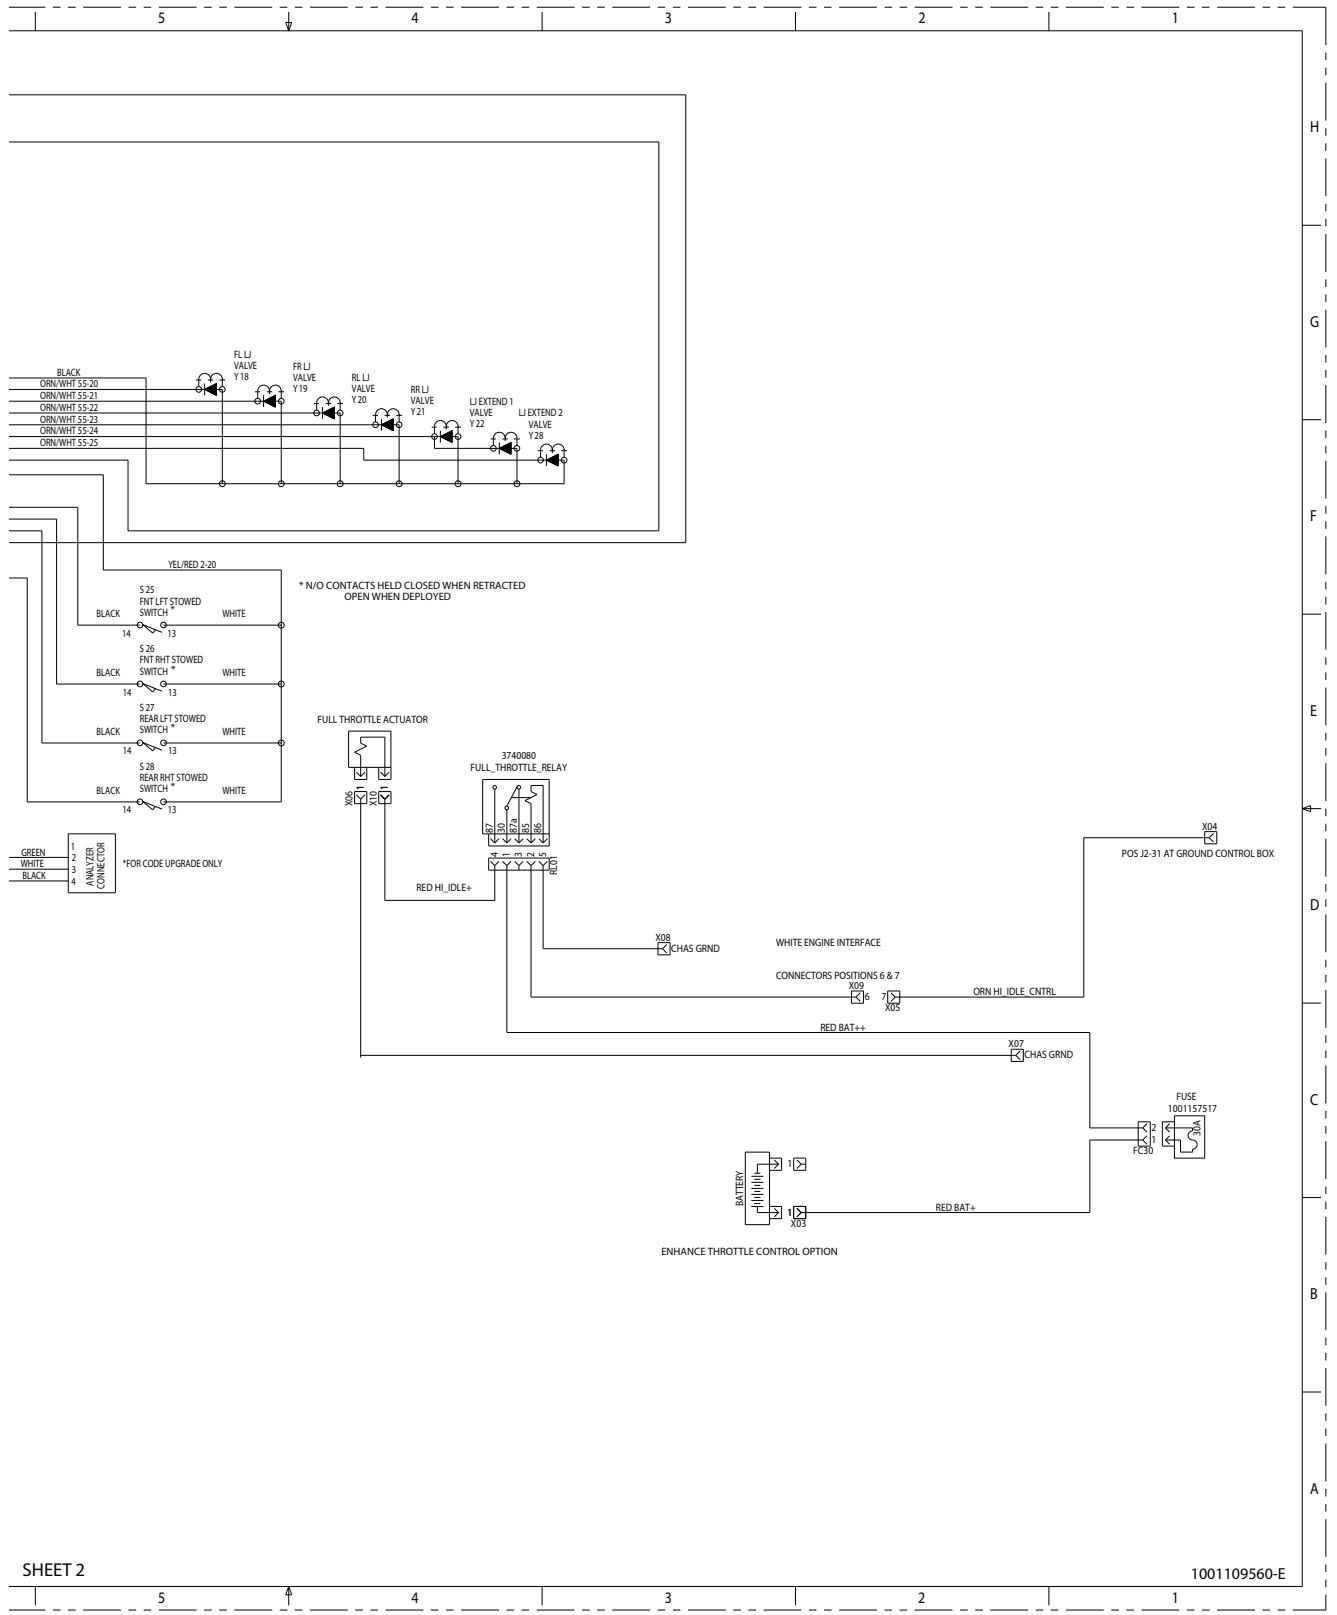

SHEET 2

1001109560-E

MAF03500

Figure 3-21. Electrical Schematic - Sheet 4 of 4

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

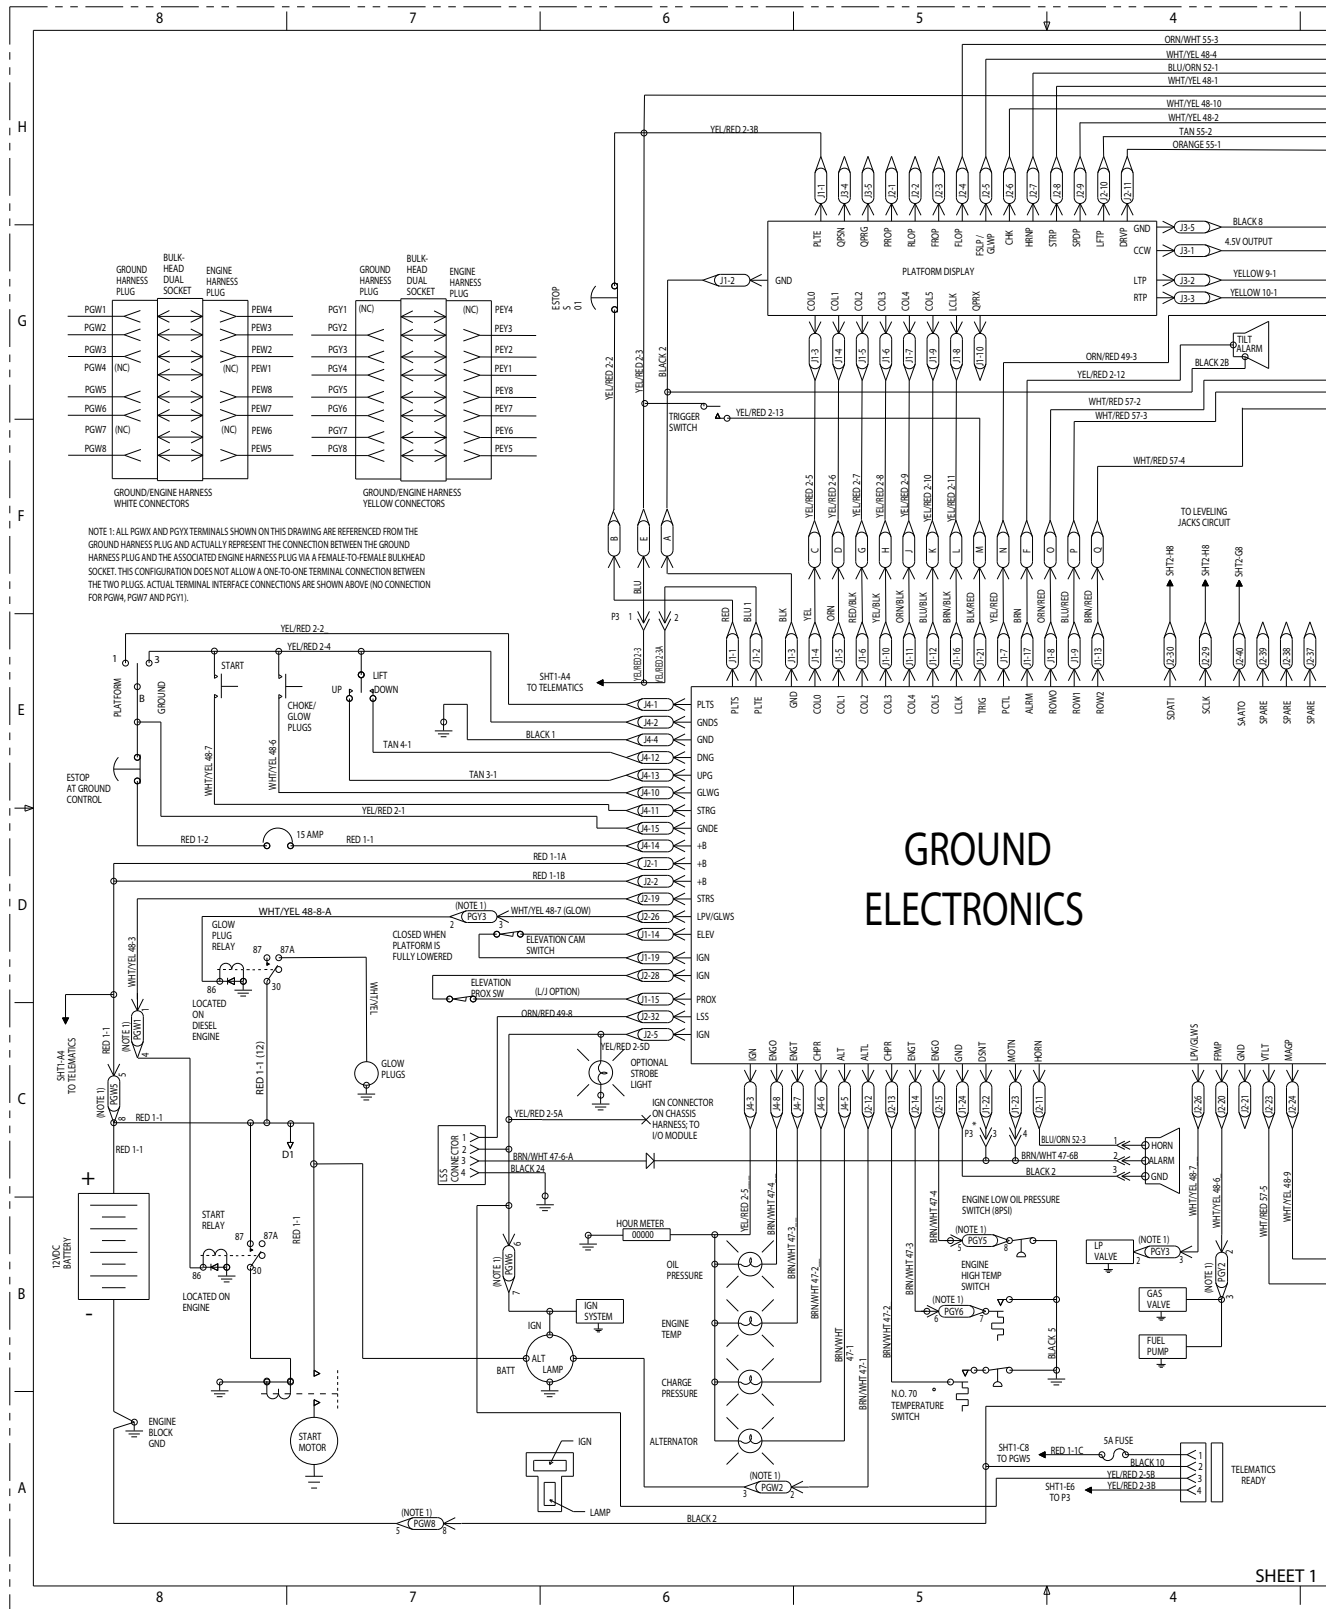


Figure 3-22. Electrical Schematic - (Generator) - Sheet 1 of 4

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

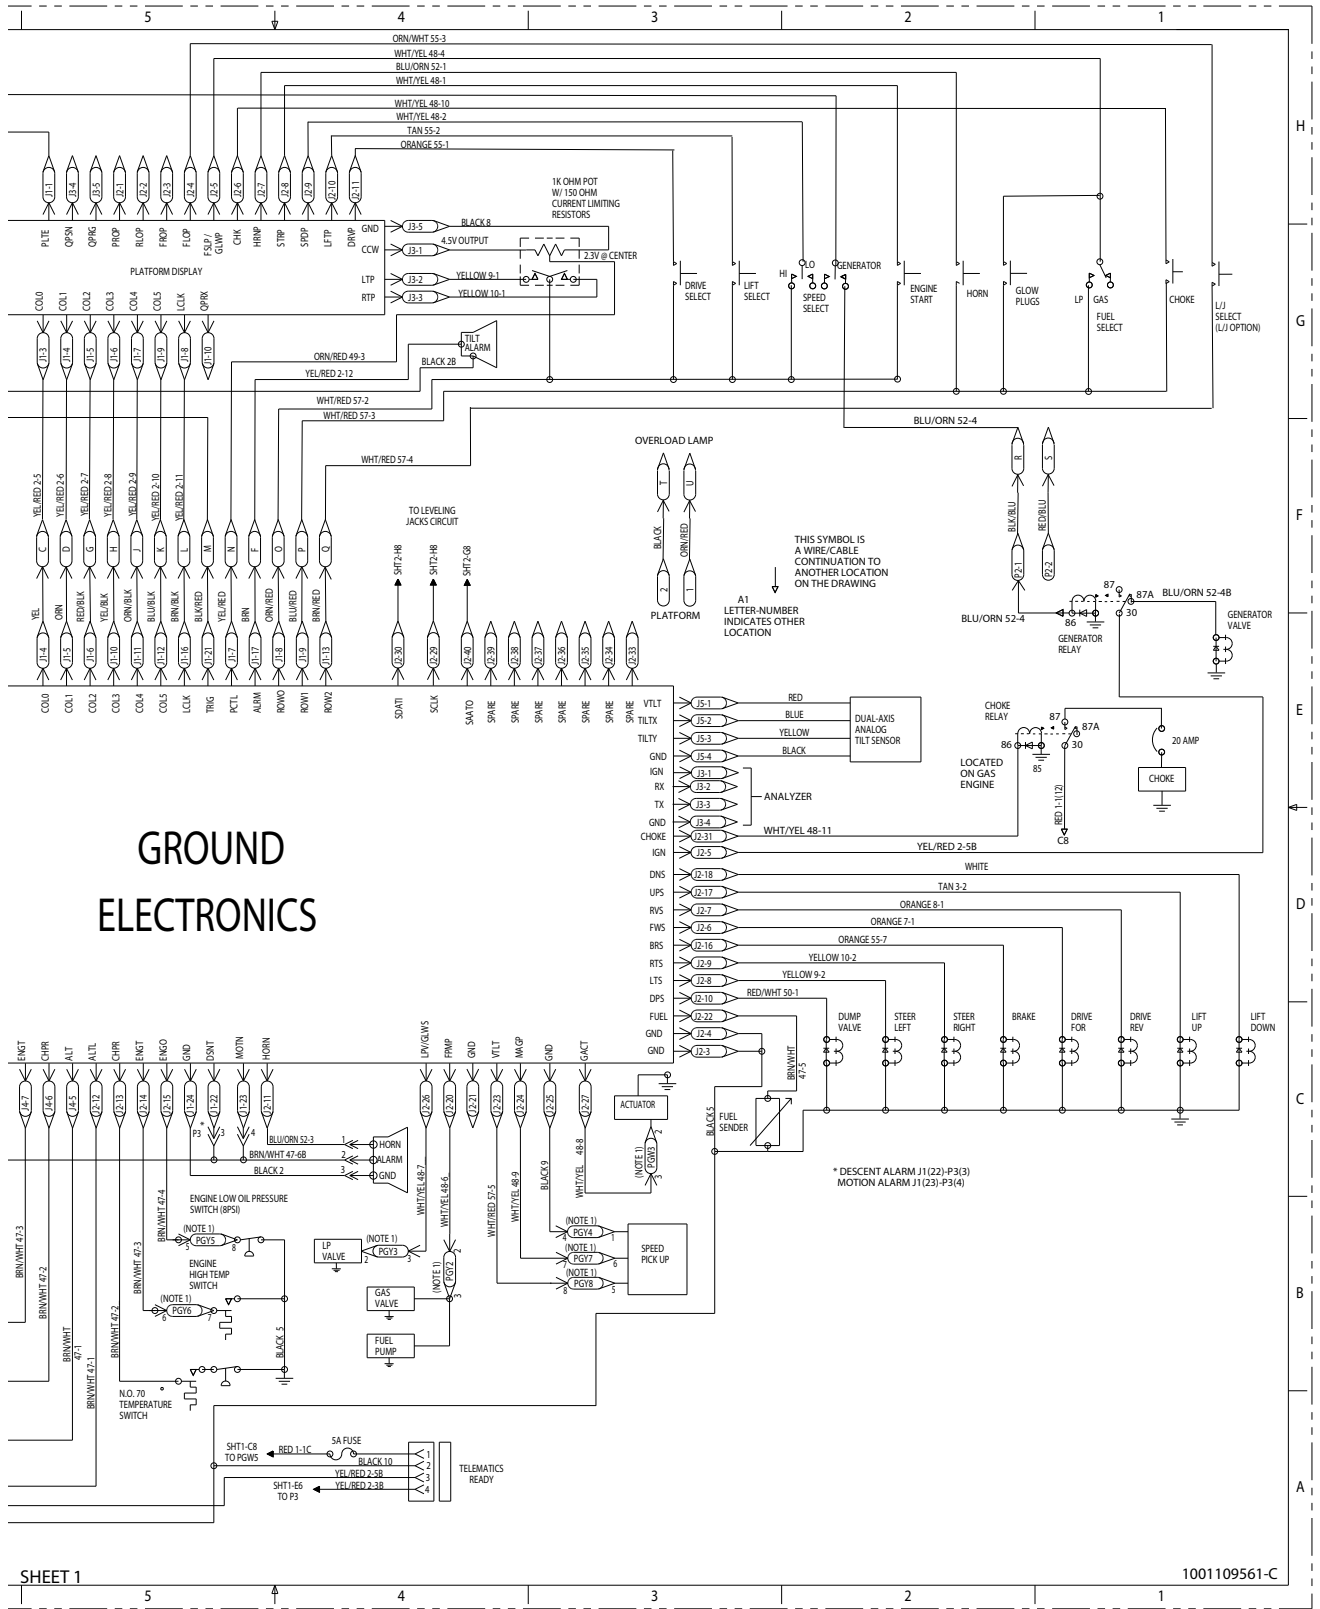


Figure 3-23. Electrical Schematic - (Generator) - Sheet 2 of 4

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS


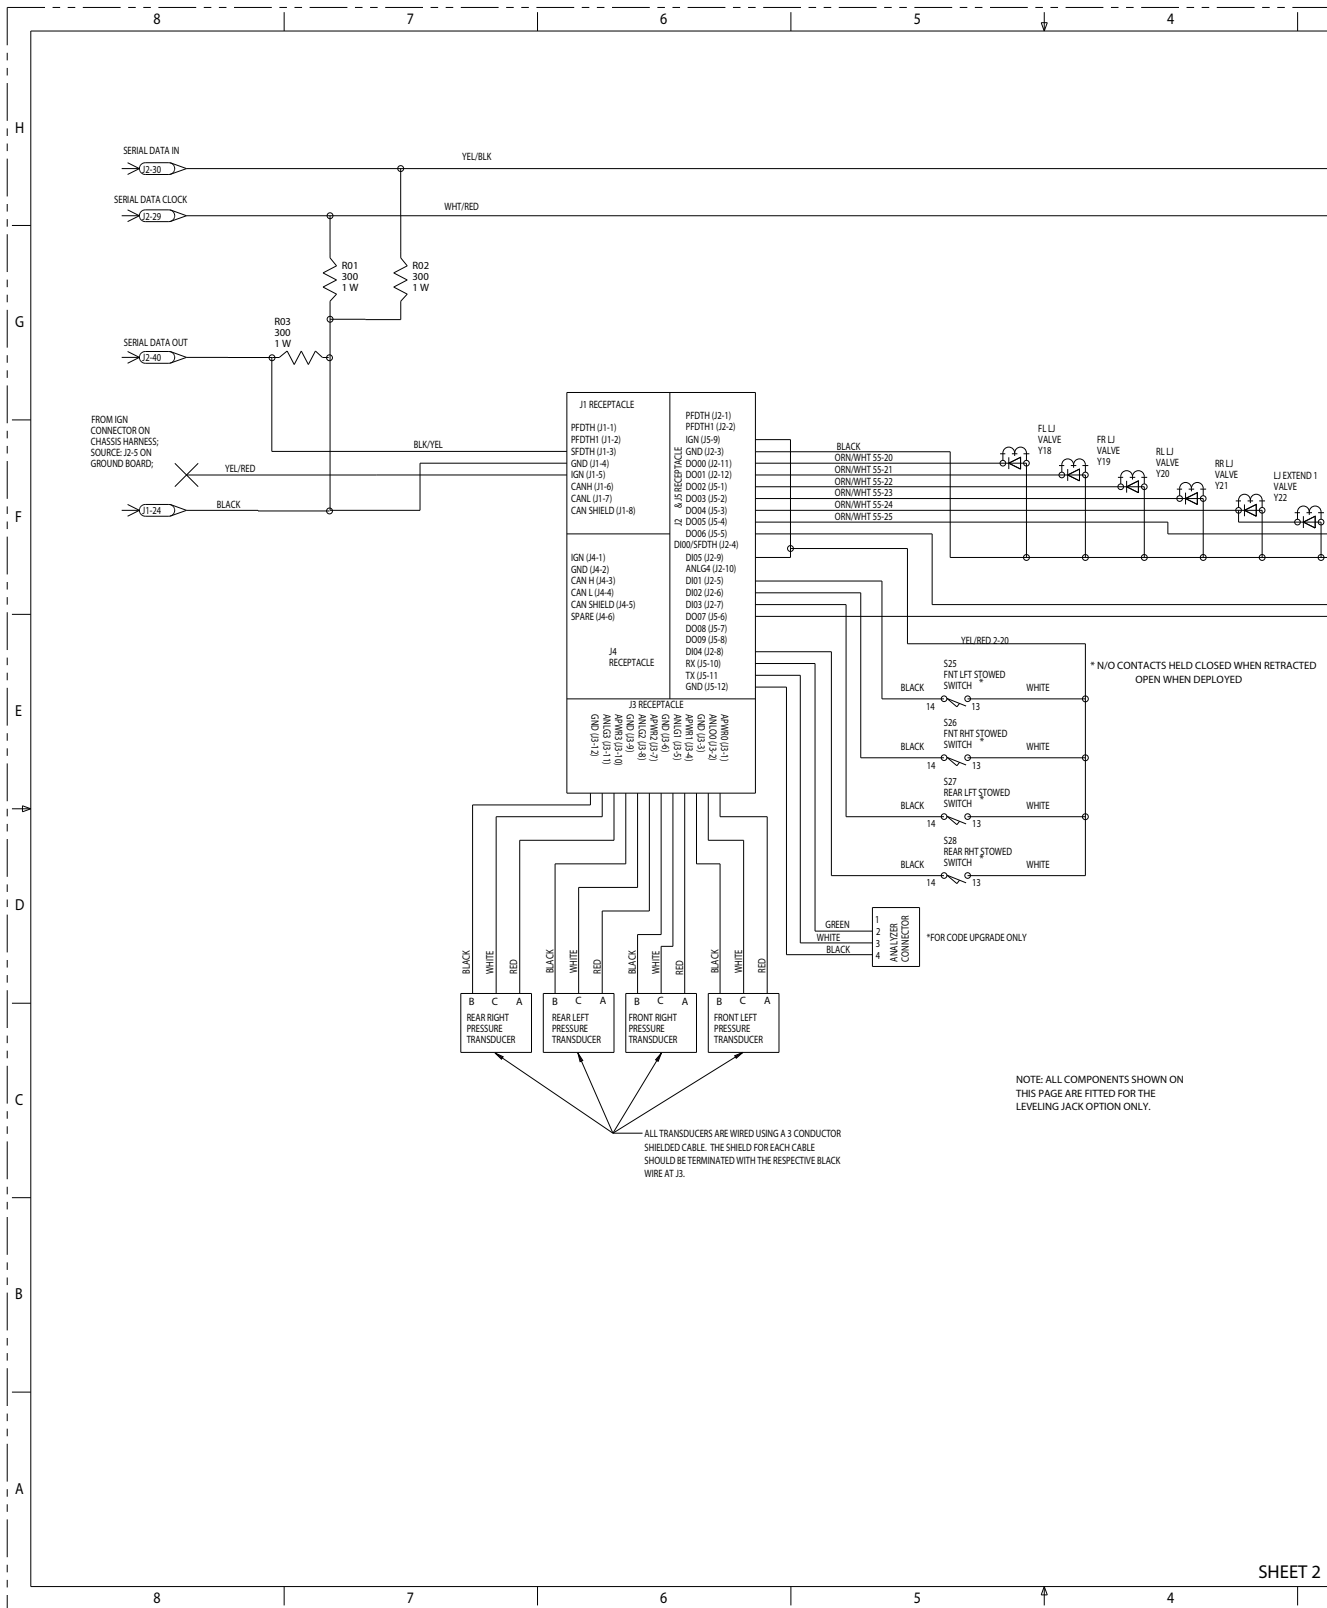


Figure 3-24. Electrical Schematic - (Generator) - Sheet 3 of 4

SECTION 3 - GENERAL ELECTRICAL INFORMATION & SCHEMATICS

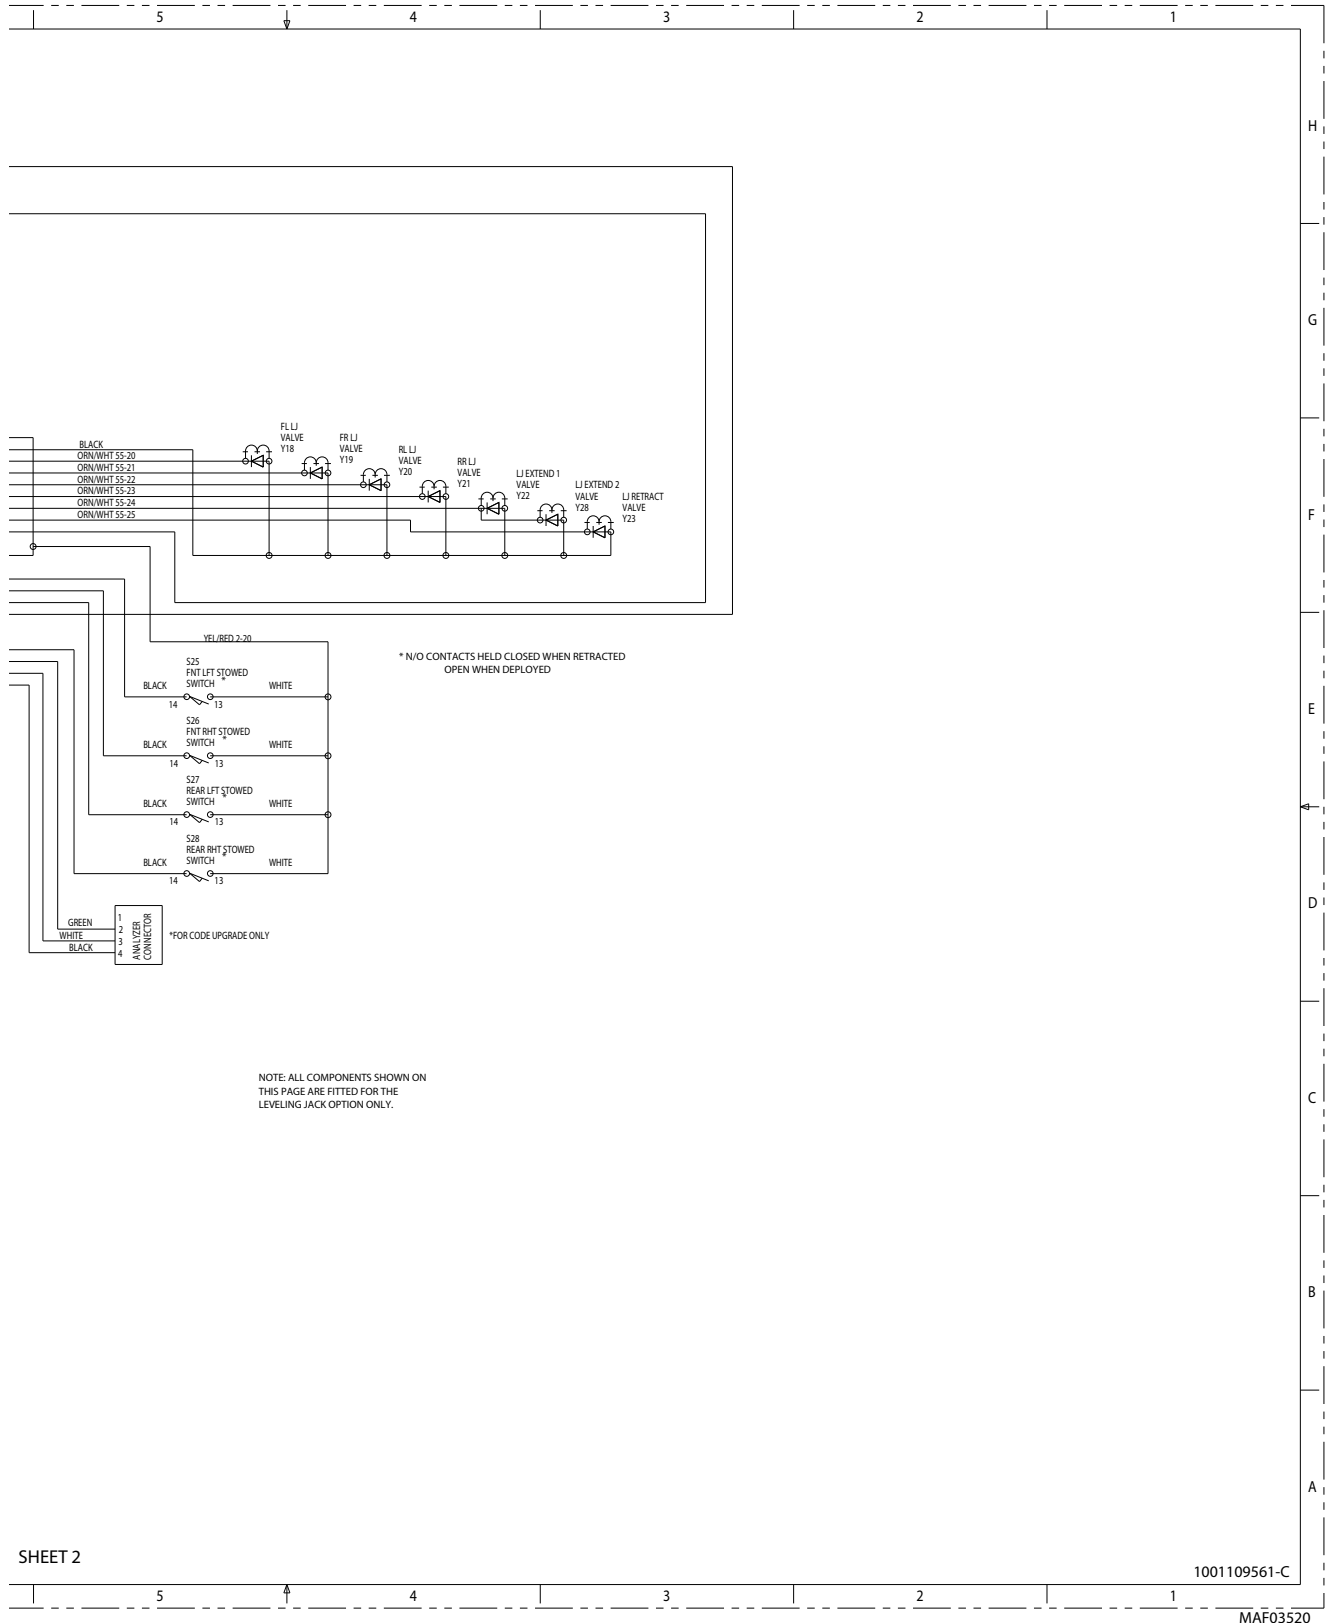

SHEET 2

1001109561-C

MAF03520

Figure 3-25. Electrical Schematic - (Generator) - Sheet 4 of 4

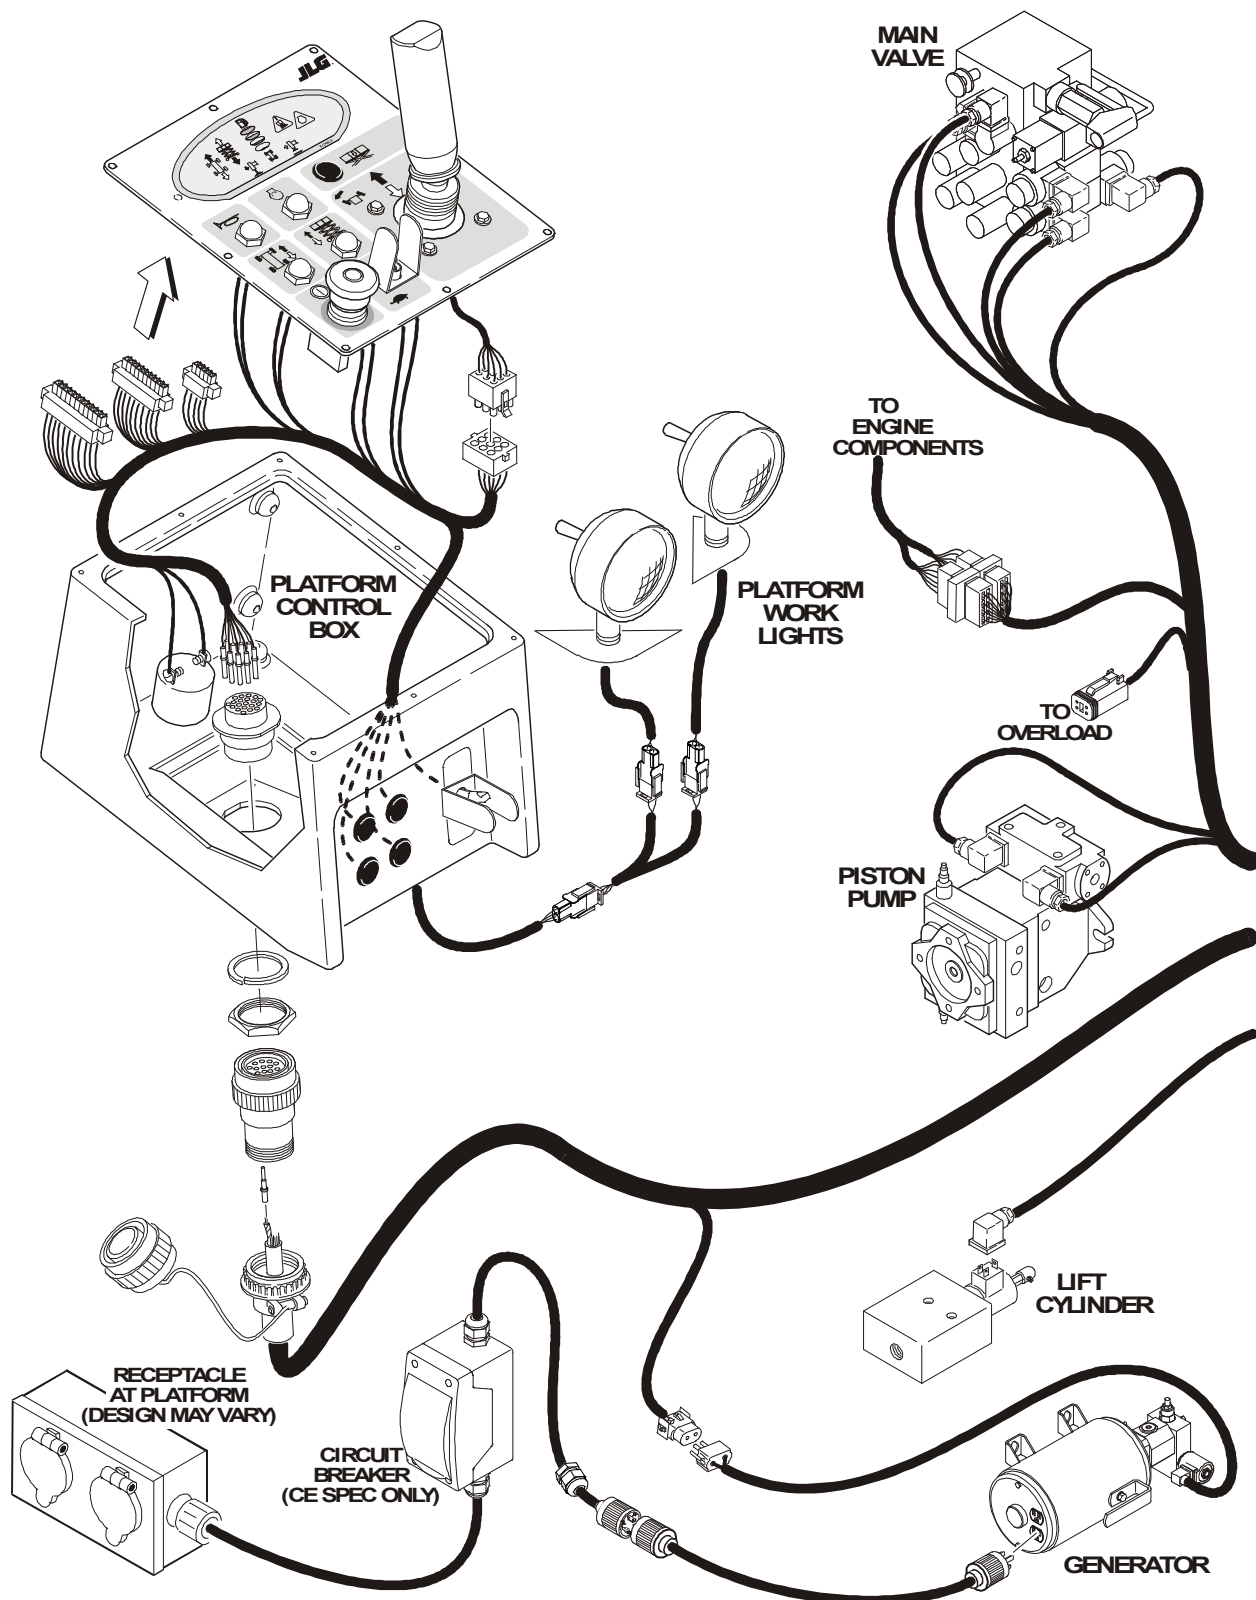


Figure 3-26. Electrical Components Installation - Sheet 1

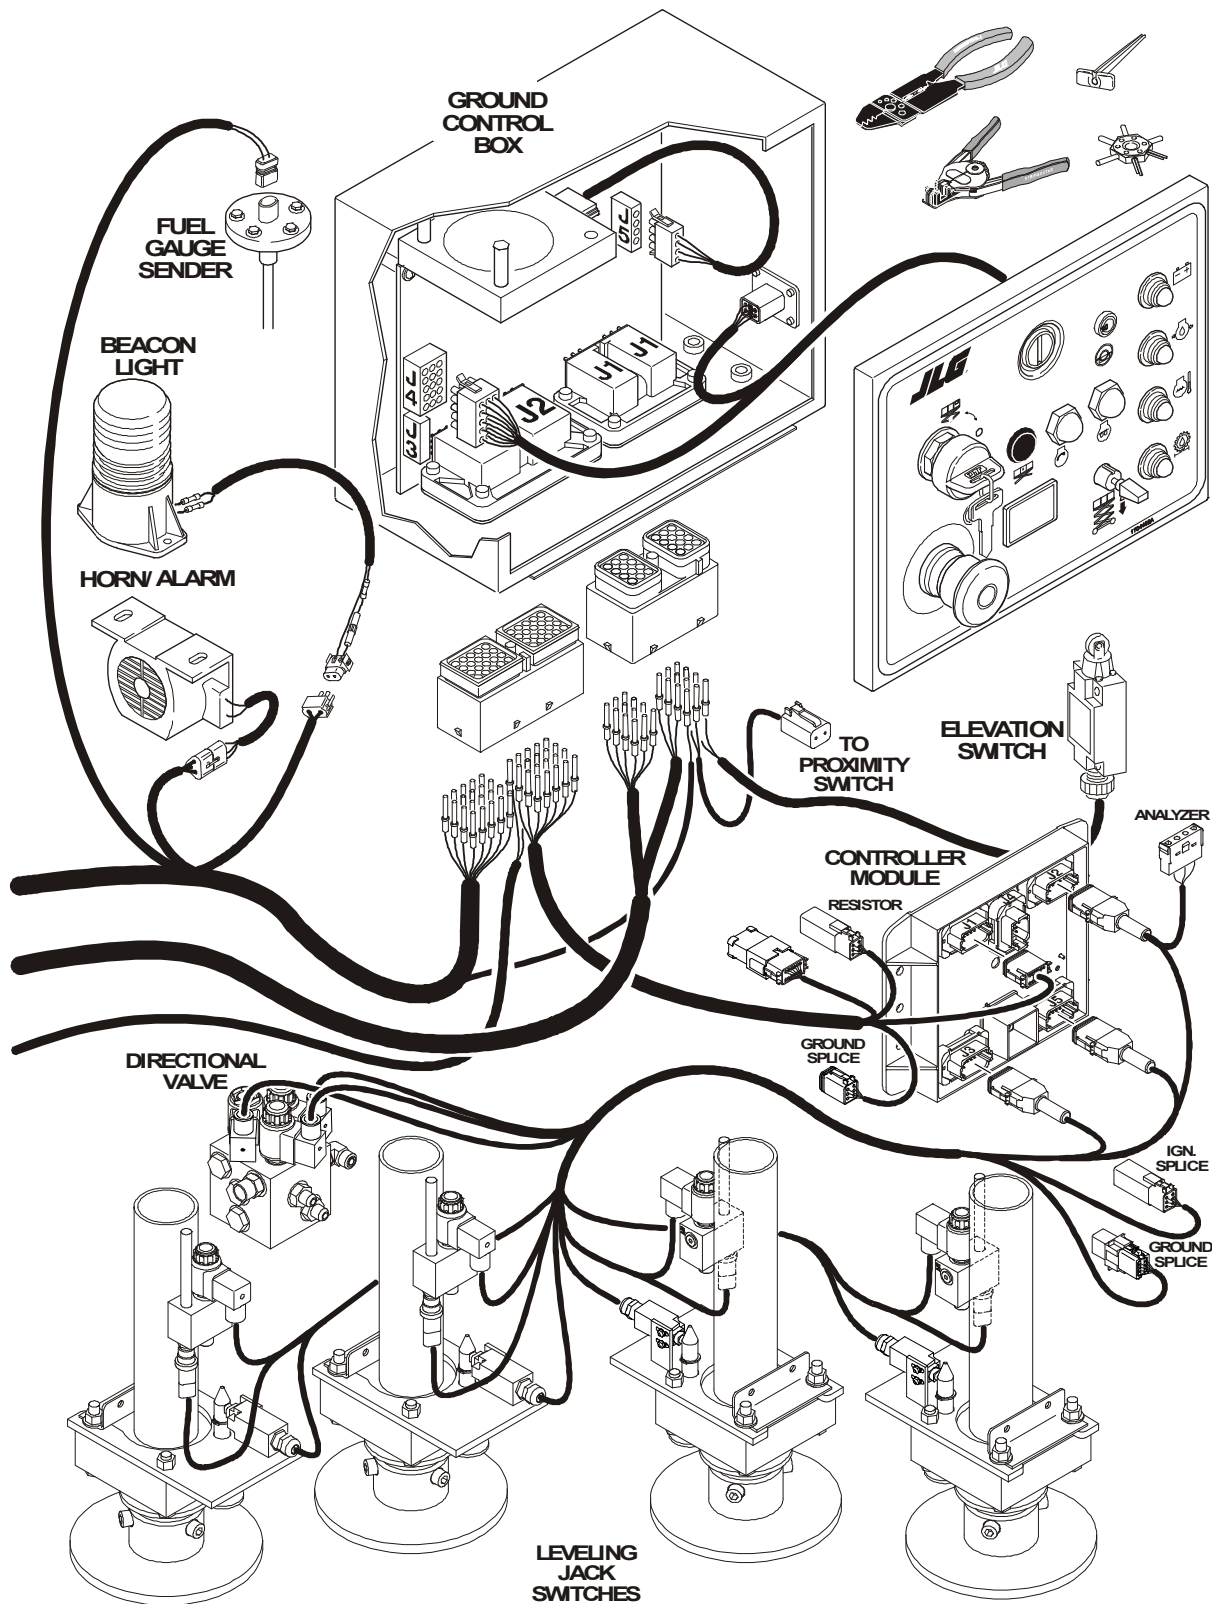


Figure 3-27. Electrical Components Installation - Sheet 2

2792717 D


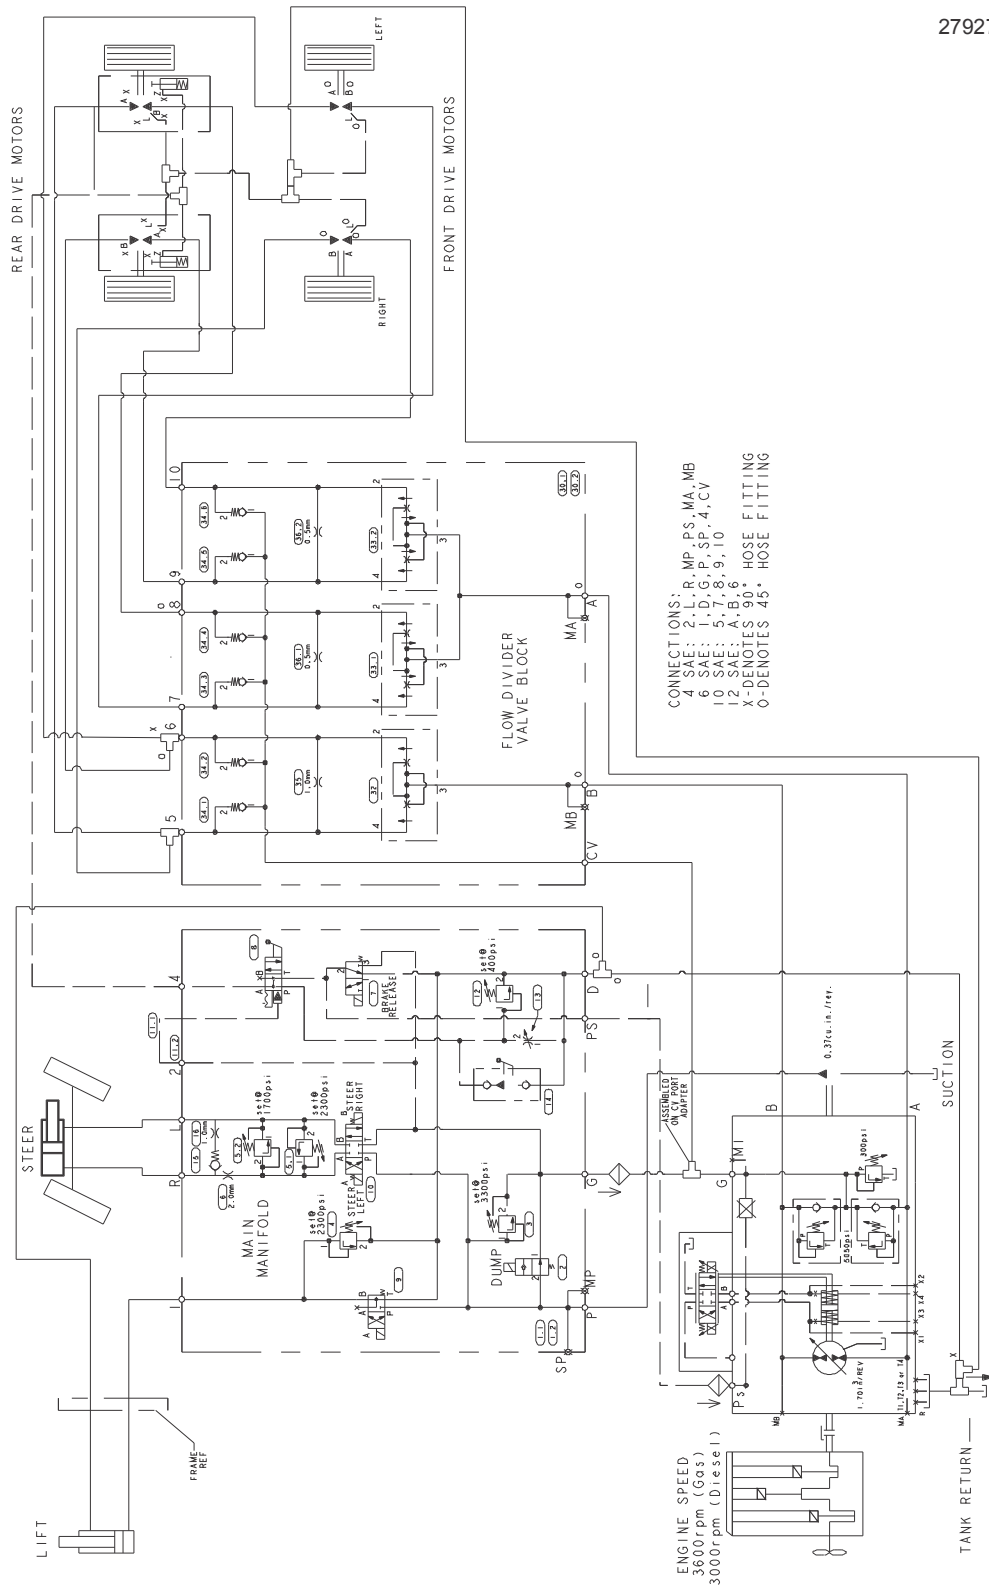


Figure 3-28. Hydraulic Schematic

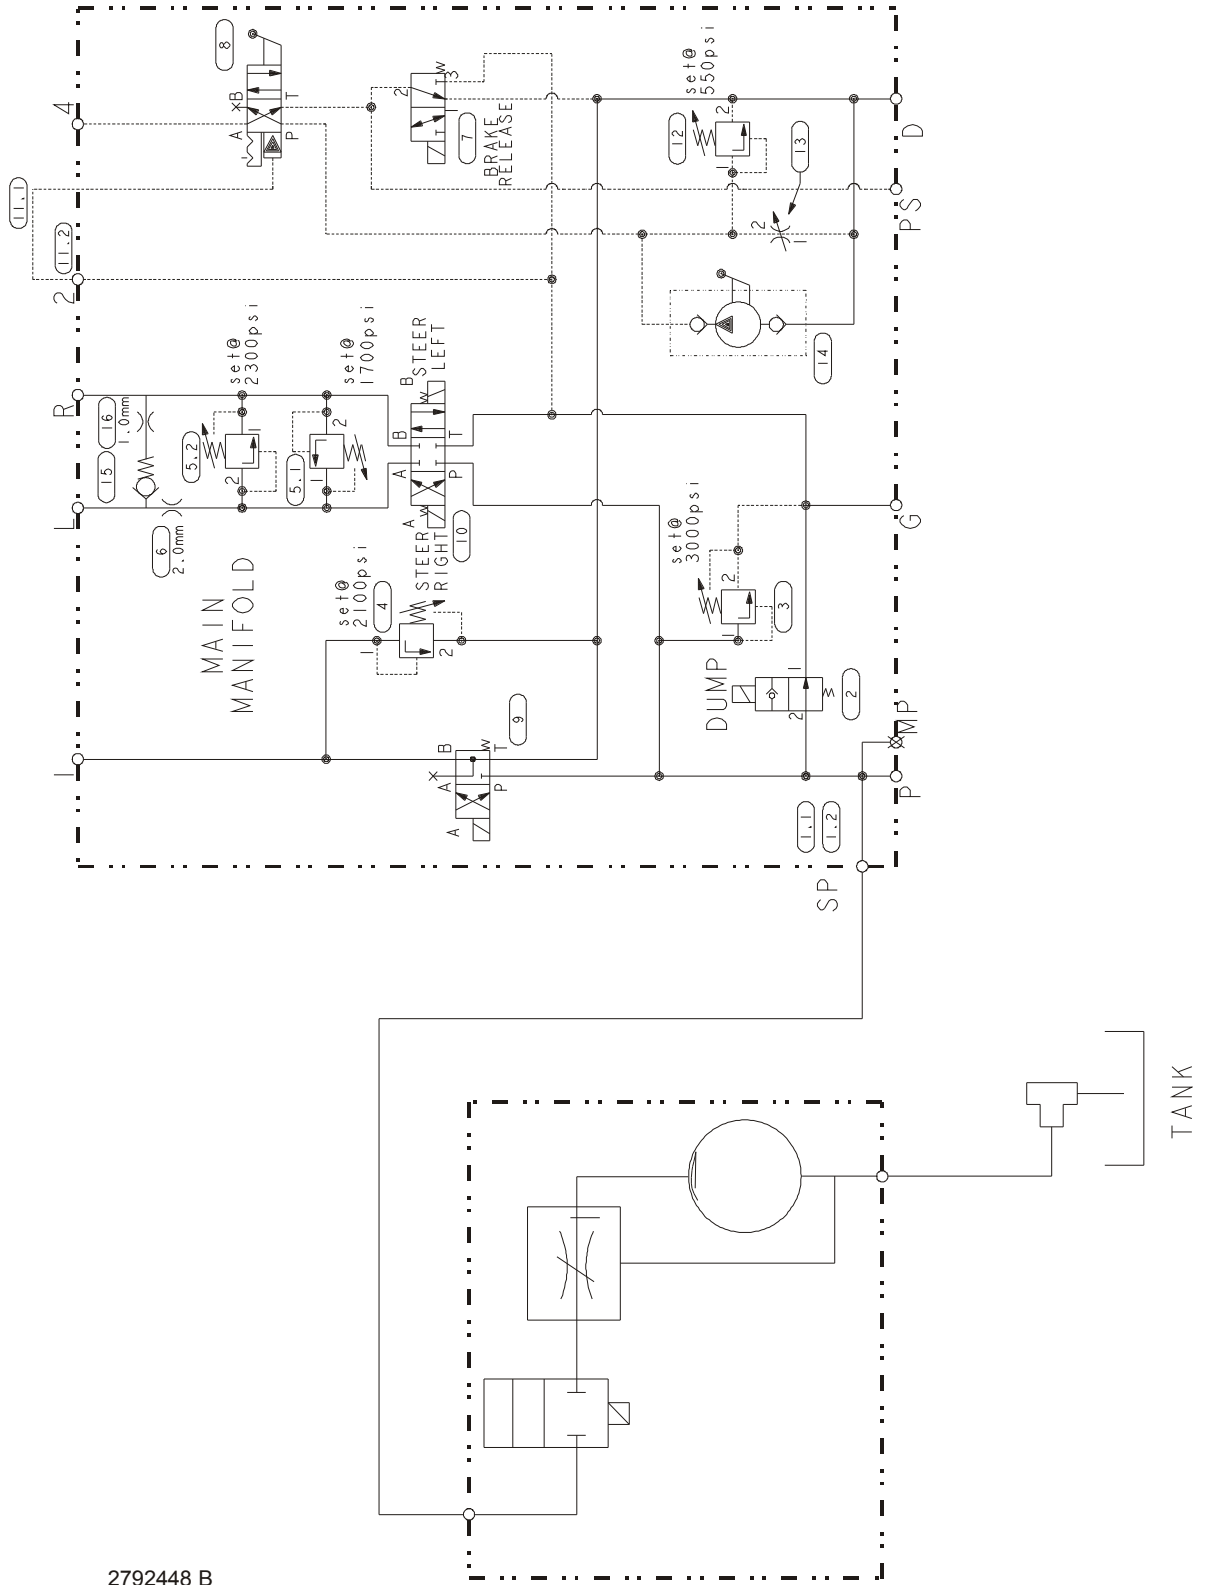

2792448 B

Figure 3-29. Hydraulic Diagram (Generator)

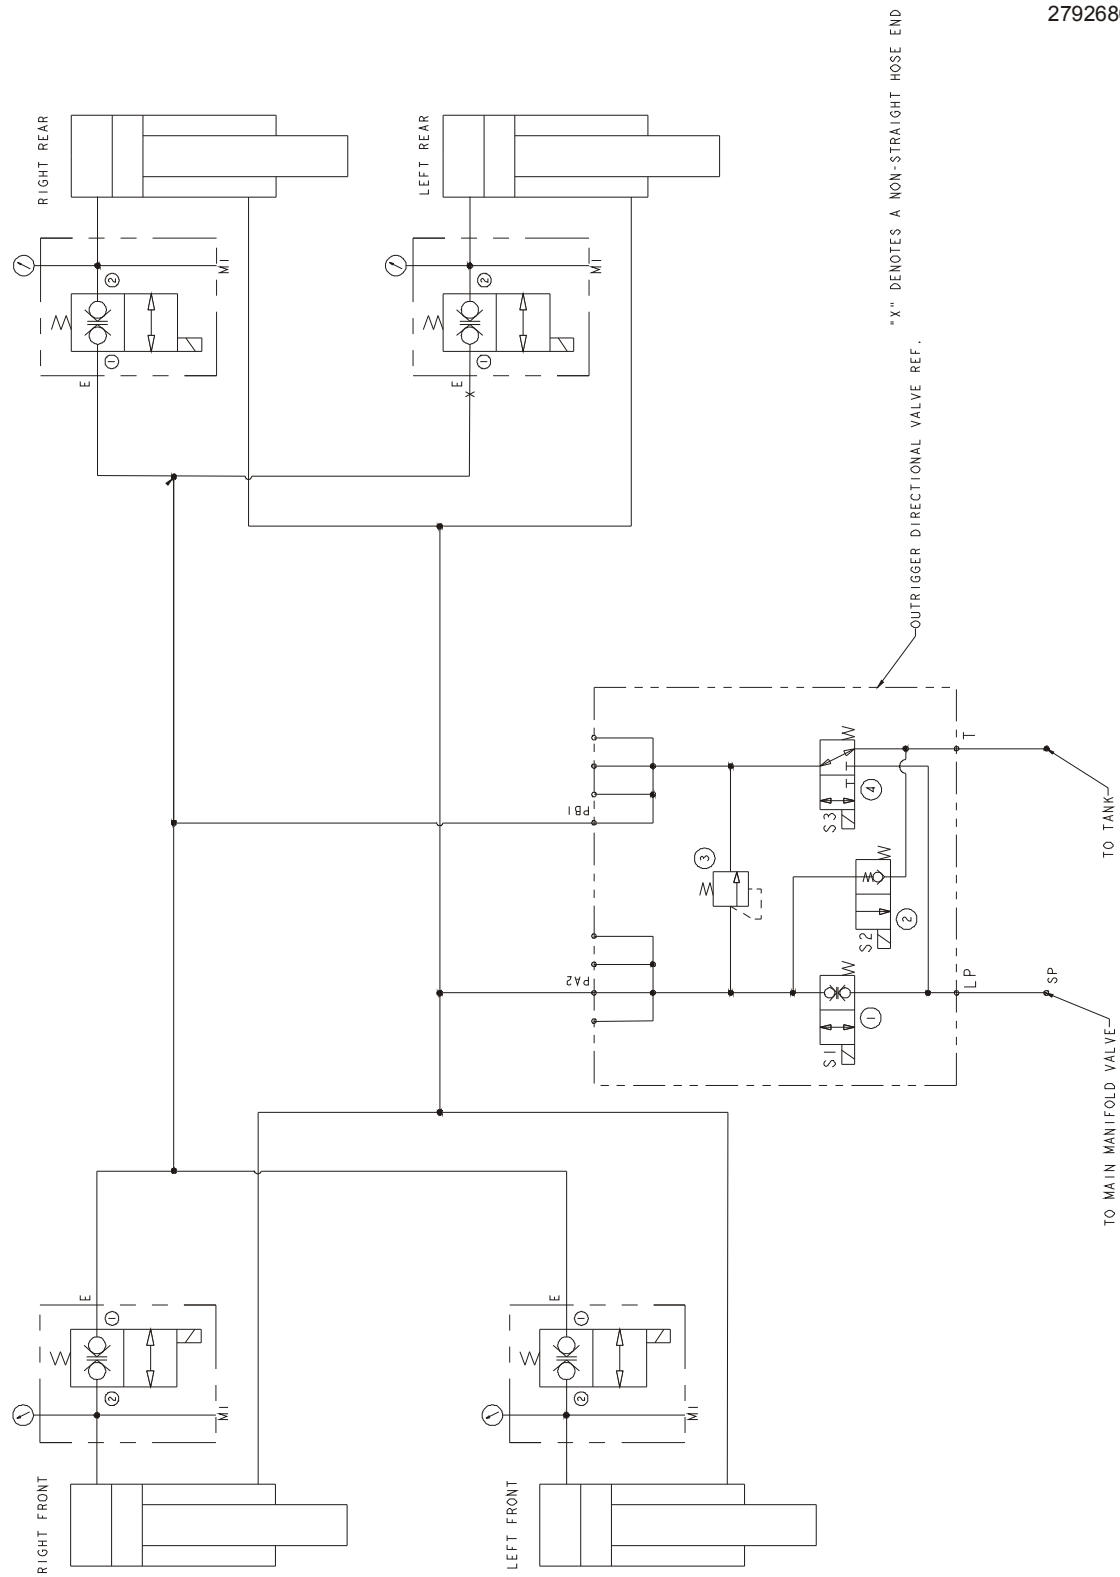


Figure 3-30. Hydraulic Diagram (Leveling Jacks)

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

A screenshot of the "Search Manuals" form. It includes fields for "Brand", "Model", "Serial", "Part Number", and "Category". There is a "Search" button at the bottom.

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

A screenshot of the "Parts Order Form". It is a form with multiple rows for entering part information, including fields for "Quantity", "Description", "Manufacturer", and "Part Number".

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

JLG[®]

An Oshkosh Corporation Company



www.Discount-Equipment.com