



An Oshkosh Corporation Company



www.Discount-Equipment.com

Operation and Safety Manual

Original Instructions - Keep this manual with the machine at all times.

Models

400SC

460SJC

PVC 2001



ANSI



MOL70

31215018

February 7, 2020 - Rev B

TO PURCHASE THIS PRODUCT PLEASE CONTACT US



**Equipment Financing and
Extended Warranties Available**



**Discount-Equipment.com is your online resource for
commercial and industrial quality parts and equipment sales.**

561-964-4949

visit us on line @ www.discount-equipment.com

Select an option below to find your Equipment

Search by Manufacturer

Search by Product Type

Request a Quote

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar



WARNING

Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information go to www.P65Warnings.ca.gov.

FOREWORD

The Mobile Elevating Work Platform (MEWP) models covered in this manual are designed and tested to meet or exceed various compliance standards. Please refer to the manufacturer's nameplate affixed to the subject MEWP for specific standard compliance information.

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

Refer to www.JLG.com for Warranty, Product Registration, and other machine-related documentation.

SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS



This is the Safety Alert Symbol. It is used to alert you to the potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death

DANGER

INDICATES AN IMMINENTLY HAZARDOUS SITUATION. IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE A RED BACKGROUND.

WARNING

INDICATES A POTENTIALLY HAZARDOUS SITUATION. IF NOT AVOIDED, COULD RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE AN ORANGE BACKGROUND.

CAUTION

INDICATES A POTENTIALLY HAZARDOUS SITUATION. IF NOT AVOIDED, MAY RESULT IN MINOR OR MODERATE INJURY. IT MAY ALSO ALERT AGAINST UNSAFE PRACTICES. THIS DECAL WILL HAVE A YELLOW BACKGROUND.

NOTICE

INDICATES INFORMATION OR A COMPANY POLICY THAT RELATES DIRECTLY OR INDIRECTLY TO THE SAFETY OF PERSONNEL OR PROTECTION OF PROPERTY.

⚠ WARNING

THIS PRODUCT MUST COMPLY WITH ALL SAFETY RELATED BULLETINS. CONTACT JLG INDUSTRIES, INC. OR THE LOCAL AUTHORIZED JLG REPRESENTATIVE FOR INFORMATION REGARDING SAFETY-RELATED BULLETINS WHICH MAY HAVE BEEN ISSUED FOR THIS PRODUCT.

NOTICE

JLG INDUSTRIES, INC. SENDS SAFETY RELATED BULLETINS TO THE OWNER OF RECORD OF THIS MACHINE. CONTACT JLG INDUSTRIES, INC. TO ENSURE THAT THE CURRENT OWNER RECORDS ARE UPDATED AND ACCURATE.

NOTICE

JLG INDUSTRIES, INC. MUST BE NOTIFIED IMMEDIATELY IN ALL INSTANCES WHERE JLG PRODUCTS HAVE BEEN INVOLVED IN AN ACCIDENT INVOLVING BODILY INJURY OR DEATH OR WHEN SUBSTANTIAL DAMAGE HAS OCCURRED TO PERSONAL PROPERTY OR THE JLG PRODUCT.

For:

- Accident Reporting
- Product Safety Publications
- Current Owner Updates
- Questions Regarding Product Safety
- Standards and Regulations Compliance Information
- Questions Regarding Special Product Applications
- Questions Regarding Product Modifications

Contact:

Product Safety and Reliability Department
JLG Industries, Inc.
13224 Fountainhead Plaza
Hagerstown, MD 21742
USA

or Your Local JLG Office
(See addresses on inside of manual cover)

In USA:

Toll Free: 877-JLG-SAFE (877-554-7233)

Outside USA:

Phone: 240-420-2661
Fax: 301-745-3713
E-mail: ProductSafety@JLG.com

REVISION LOG

Original Issue A - September 9, 2019
Revision B - February 7, 2020

To order go to Discount-Equipment.com

SECTION - 1 - SAFETY PRECAUTIONS

1.1 GENERAL 1-1

1.2 PRE-OPERATION 1-1

Operator Training and Knowledge 1-1

Workplace Inspection 1-2

Machine Inspection 1-3

1.3 OPERATION 1-3

General 1-3

Trip and Fall Hazards 1-4

Electrocution Hazards 1-5

Tipping Hazards 1-7

Crushing and Collision Hazards 1-10

1.4 TOWING, LIFTING, AND HAULING 1-11

1.5 MAINTENANCE 1-11

Maintenance Hazards 1-11

Battery Hazards 1-13

SECTION - 2 - USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION

2.1 PERSONNEL TRAINING 2-1

Operator Training 2-1

Training Supervision 2-1

Operator Responsibility 2-2

Machine Familiarization 2-2

2.2 PREPARATION, INSPECTION, AND MAINTENANCE 2-2

2.3 BASIC NOMENCLATURE 2-4

Pre-Start Inspection 2-5

2.4 WALK-AROUND INSPECTION 2-7

Function Check 2-10

SkyGuard Function Test 2-11

SECTION - 3 - MACHINE CONTROLS AND INDICATORS

3.1 GENERAL 3-1

3.2 CONTROLS AND INDICATORS 3-1

3.3 GROUND CONTROL CONSOLE 3-8

3.4 GROUND CONTROL INDICATOR PANEL 3-11

Ground Control Indicator Panel 3-12

Ground Control Console Display Gauge 3-14

3.5 PLATFORM CONTROL CONSOLE 3-17

Platform Console 3-18

3.6 PLATFORM CONTROL INDICATOR PANEL 3-22

SECTION - 4 - MACHINE OPERATION

4.1 DESCRIPTION 4-1

4.2 BOOM OPERATING CHARACTERISTICS AND LIMITATIONS 4-1

Capacities 4-1

Platform Load Sensing System (LSS) 4-2

Stability 4-2

4.7 ENGINE OPERATION 4-5

Starting Procedure 4-5

Shutdown Procedure 4-6

Fuel Reserve / Shut-Off System 4-7

4.4 DIESEL PARTICULATE FILTER (IF EQUIPPED) 4-8

Standstill Cleaning 4-8

TABLE OF CONTENTS

Maintenance Standstill Cleaning Initiation		4.8	LIFTING AND TIE DOWN.....	4-29
Methods.....	4-10		Lifting	4-29
Canceling Maintenance Standstill.....	4-10		Tie Down	4-29
Unsuccessful Cleaning Event.....	4-11			
DPF Filter Replacement due to Ash Load	4-11			
4.1 TRAVELING (DRIVING).....	4-16		SECTION - 5 - EMERGENCY PROCEDURES	
Machine Motion Hazard	4-17	5.1	GENERAL	5-1
Traveling Forward and Reverse	4-18	5.2	INCIDENT NOTIFICATION.....	5-1
Traveling on a Grade	4-22	5.3	EMERGENCY OPERATION	5-1
4.2 PLATFORM	4-22		Operator Unable to Control Machine.....	5-1
Platform Level Adjustment	4-22		Platform or Boom Caught Overhead	5-2
Platform Rotation	4-22	5.4	MACHINE SAFETY SYSTEM OVERRIDE (MSSO)	
4.3 BOOM.....	4-23		(IF EQUIPPED).....	5-2
Swinging the Boom	4-23			
Raising and Lowering the Main Boom	4-23		SECTION - 6 - ACCESSORIES	
Telescoping the Main Boom	4-24	6.1	FALL ARREST PLATFORM.....	6-3
Raising and Lowering the Jib (If Equipped)	4-24	6.2	PIPE RACKS	6-3
4.4 FUNCTION SPEED CONTROL	4-24		Safety Precautions.....	6-4
4.5 MACHINE SAFETY SYSTEM OVERRIDE (MSSO)			Preparation and Inspection.....	6-4
(IF EQUIPPED).....	4-24		Operation.....	6-4
4.6 SKYGUARD OPERATION	4-24	6.3	SKYGLAZIER™.....	6-5
SkyGuard	4-25		Capacity Specifications	6-5
SkyGuard - SkyLine	4-25		Safety Precautions.....	6-6
SkyGuard - SkyEye.....	4-25		Preparation and Inspection.....	6-6
SkyGuard Function Table	4-26		Operation.....	6-6
4.7 SHUT DOWN AND PARK.....	4-27	6.4	SKYPOWER™.....	6-7
Shut Down and Park.....	4-27		Generator Output	6-7
			Accessory Ratings	6-7
			Safety Precautions.....	6-8

Preparation and Inspection 6-8
 Operation 6-8
 6.5 SKYWELDER™ 6-9
 Generator Output 6-9
 Welding Accessories 6-9
 Accessory Ratings 6-10
 Safety Precautions 6-10
 Preparation and Inspection 6-11
 Operation 6-11
 6.6 SOFT TOUCH 6-11
 6.7 SKYSENSE™ 6-12
 Preparation and Inspection 6-12
 Operation 6-13
 SkySense Alarm 6-14
 Override Button 6-15
 SkySense Coverage Areas 6-15

- DEUTZ D2011 7-13
 7.4 OPERATOR MAINTENANCE AND LUBRICATION DIAGRAM -
 DEUTZ 2.9L47-14
 7.5 OPERATOR MAINTENANCE 7-15
 7.6 SUPPLEMENTAL INFORMATION 7-22

SECTION - 8 - INSPECTION AND REPAIR LOG

SECTION - 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

7.1 INTRODUCTION 7-1
 7.2 OPERATING SPECIFICATIONS 7-1
 Capacities 7-3
 Engine Data 7-3
 Hydraulic Oil 7-5
 Critical Stability Weights 7-8
 Serial Number Location 7-9
 7.3 OPERATION MAINTENANCE AND LUBRICATION DIAGRAM

2-1.	Daily Walk-Around Inspection - Sheet 1 of 2	2-7	Deutz.....	7-10
3-1.	Ground Control Console - 400SC without MSSO.....	3-2	7-3.	Hydraulic Oil Operation Chart - Sheet 1 of 2.....
3-1.	Ground Control Console - 400SC with MSSO	3-3	7-4.	Hydraulic Oil Operation Chart - Sheet 2 of 2.....
3-1.	Ground Control Console - 400SC with MSSO and DPF .	3-4		
3-1.	Ground Control Console - 460SJC without MSSO.....	3-5		
3-1.	Ground Control Console - 460SJC with MSSO	3-6		
3-1.	Ground Control Console - 460SJC with MSSO and DPF	3-7		
3-1.	Splash Screen.....	3-14		
3-2.	Diagnostic Screen.....	3-15		
3-3.	Engine Diagnostic Screen	3-15		
3-4.	Ground Control Console Display Gauge	3-16		
4-1.	Position of Least Forward Stability.....	4-3		
4-2.	Position of Least Backward Stability	4-4		
4-3.	Grade and Side Slopes	4-15		
4-4.	Machine Motion Hazard.....	4-17		
4-5.	Drive Function Operating Range Diagrams - Sheet 1 of 2.....	4-20		
4-6.	Drive Function Operating Range Diagrams - Sheet 2 of 2.....	4-21		
4-7.	Traveling on a Grade.....	4-22		
4-8.	Lifting and Tie Down Chart	4-28		
4-9.	Decal Location - Turntable - Sheet 1 of 3	4-30		
4-10.	Decal Location - Turntable - Sheet 2 of 3	4-31		
4-11.	Decal Location - Turntable - Sheet 3 of 3	4-32		
4-12.	Decal Location - Chassis.....	4-37		
6-1.	SkySense Platform Panel Indicators.....	6-14		
7-1.	Serial Number Location	7-9		
7-2.	Engine Operating Temperature Specifications -			

1-1	Minimum Approach Distances (M.A.D.)	1-6
1-2	Beaufort Scale (For Reference Only)	1-9
2-1	Inspection and Maintenance Table	2-3
4-1	Ash Load DPF Filter Replacement	4-12
4-2	Maintenance Standstill Cleaning	4-13
4-3	Standstill Cleaning: DPF Filled with Soot	4-14
4-4	Decal Legend - 400SC Turntable	4-33
4-5	Decal Legend - 460SJC Turntable	4-35
4-6	Decal Legend - 400SC & 460SJC Chassis	4-38
6-1	Available Accessories	6-1
6-2	Options/Accessories Relationship Table	6-2
7-1	Operating Specifications - 400SC	7-1
7-2	Operating Specifications - 460SJC	7-2
7-3	Capacities	7-3
7-4	Deutz D201 1L03	7-3
7-5	Deutz 2.9L4	7-4
7-6	Hydraulic Oil	7-5
7-7	Mobilfluid 424 Specs	7-5
7-8	Mobil DTE 13M Specs	7-6
7-9	UCon Hydrolube HP-50/46	7-6
7-10	Mobil EAL 224H Specs	7-7
7-11	Mobil EAL H 46 Specs	7-7
7-12	Exxon Univis HVI 26 Specs	7-8
7-13	Critical Stability Weights	7-8
7-14	Lubrication Specifications	7-15
8-1	Inspection and Repair Log	8-1

SECTION 1. SAFETY PRECAUTIONS

1.1 GENERAL

This section outlines the necessary precautions for proper and safe machine usage and maintenance. It is mandatory that a daily routine is established based on the content of this manual to promote proper machine usage. A maintenance program, using the information provided in this manual and the Service and Maintenance Manual, must also be established by a qualified person and must be followed to ensure that the machine is safe to operate.

The owner/user/operator/lessor/lessee of the machine must not accept operating responsibility until this manual has been read, training is accomplished, and operation of the machine has been completed under the supervision of an experienced and qualified operator.

This section contains the responsibilities of the owner, user, operator, lessor, and lessee concerning safety, training, inspection, maintenance, application, and operation. If there are any questions with regard to safety, training, inspection, maintenance, application, and operation, please contact JLG Industries, Inc. ("JLG").


WARNING

FAILURE TO COMPLY WITH SAFETY PRECAUTIONS LISTED IN THIS MANUAL COULD RESULT IN MACHINE DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

1.2 PRE-OPERATION

Operator Training and Knowledge

- Read, understand, and study the Operation and Safety Manual in its entirety before operating the machine. For clarification, questions, or additional information regarding any portions of this manual, contact JLG Industries, Inc.

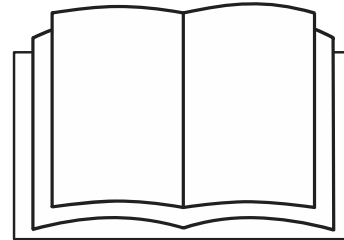

SECTION 1 - SAFETY PRECAUTIONS

- Only personnel who have received proper training regarding the inspection, application and operation of MEWPs (including recognition and avoiding hazards associated with their operation) shall be authorized to operate a MEWP.
- Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation.
- Read, understand, and obey all DANGERS, WARNINGS, CAUTIONS, and operating instructions on the machine and in this manual.
- Ensure that the machine is to be used in a manner which is within the scope of its intended application as determined by JLG.
- All operating personnel must have a thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground, and emergency descent controls.
- Read, understand, and obey all applicable employer, local, and governmental regulations as they pertain to your utilization and application of the machine.

Workplace Inspection

- Precautions to avoid all hazards in the work area must be taken by the user before and during operation of the machine.
- Do not operate or raise the platform from a position on trucks, trailers, railway cars, floating vessels, scaffolds or other equipment unless the application is approved in writing by JLG.
- Before operation, check work area for overhead hazards such as electric lines, bridge cranes, and other potential overhead obstructions.
- Check operating surfaces for holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards.
- Check the work area for hazardous locations. Do not operate the machine in hazardous environments unless approved for that purpose by JLG.
- Ensure that the ground conditions are adequate to support the maximum load indicated on the load decals located on the chassis adjacent to each track. Do not travel on unsupported surfaces.

Machine Inspection

- Do not operate this machine until the inspections and functional checks as specified in Section 2 of this manual have been performed.
- Do not operate this machine until it has been serviced and maintained according to the maintenance and inspection requirements as specified in the machine's Service and Maintenance Manual.
- Ensure all safety devices are operating properly. Modification of these devices is a safety violation.

WARNING

MODIFICATION OR ALTERATION OF A MEWP SHALL BE MADE ONLY WITH PRIOR WRITTEN PERMISSION FROM THE MANUFACTURER.

- Do not operate any machine on which the safety or instruction placards or decals are missing or illegible.
- Check the machine for modifications to original components. Ensure that any modifications have been approved by JLG.
- Avoid accumulation of debris on platform floor. Keep mud, oil, grease, and other slippery substances from footwear and platform floor.

1.3 OPERATION

General

- Machine operation requires your full attention. Bring the machine to a full stop before using any device, i.e. cell phones, two-way radios, etc. that will distract your attention from safely operating the machine.
- Do not use the machine for any purpose other than positioning personnel, their tools, and equipment.
- Before operation, the user must be familiar with the machine capabilities and operating characteristics of all functions.
- Never operate a malfunctioning machine. If a malfunction occurs, shut down the machine. Remove the unit from service and notify the proper authorities.
- Do not remove, modify, or disable any safety devices.
- Never slam a control switch or lever through neutral to an opposite direction. Always return switch to neutral and stop before moving the switch to the next function. Operate controls with slow and even pressure.
- Do not allow personnel to tamper with or operate the machine from the ground with personnel in the platform, except in an emergency.


SECTION 1 - SAFETY PRECAUTIONS

- Do not carry materials directly on platform railing unless approved by JLG.
- When two or more persons are in the platform, the operator shall be responsible for all machine operations.
- Always ensure that power tools are properly stowed and never left hanging by their cord from the platform work area.
- When driving, always position boom over rear axle in line with the direction of travel. Remember, if boom is over the front axle, steer and drive functions will be reversed.
- Do not assist a stuck or disabled machine by pushing or pulling except by pulling at the chassis tie-down lugs.
- Fully lower platform and shut off all power before leaving machine.
- Remove all rings, watches, and jewelry when operating machine. Do not wear loose fitting clothing or long hair unrestrained which may become caught or entangled in equipment.
- Persons under the influence of drugs or alcohol or who are subject to seizures, dizziness or loss of physical control must


- Hydraulic cylinders are subject to thermal expansion and contraction. This may result in changes to the platform position while the machine is stationary. Factors affecting thermal movement can include the length of time the machine will remain stationary, hydraulic oil temperature, ambient air temperature, and boom and platform position.

Trip and Fall Hazards

- Prior to operation, ensure all gates are closed and fastened in their proper position.
- During operation, occupants in the platform must wear a full body harness with a lanyard attached to an authorized lanyard anchorage point. Attach only one (1) lanyard per lanyard anchorage point.

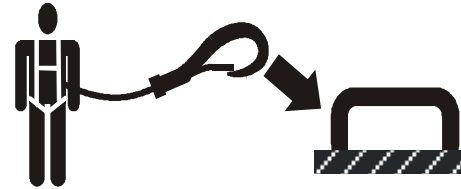


- Enter and exit only through gate area. Use extreme caution when entering or leaving platform. Ensure that the platform assembly is fully lowered. Face the platform when entering or leaving the platform. Always maintain “three point contact” with the machine, using two hands and one foot or two feet and one hand at all times during entry and exit.

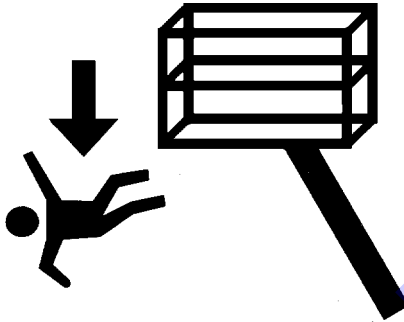


- Keep both feet firmly positioned on the platform floor at all times. Never position ladders, boxes, steps, planks, or similar items on unit to provide additional reach for any purpose.
- Keep oil, mud, and slippery substances cleaned from footwear and the platform floor.

Electrocution Hazards

- This machine is not insulated and does not provide protection from contact or proximity to electrical current.

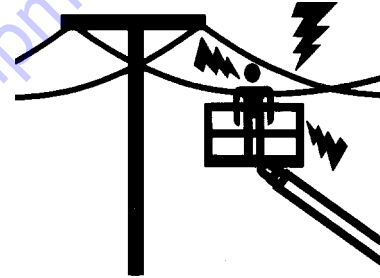

SECTION 1 - SAFETY PRECAUTIONS

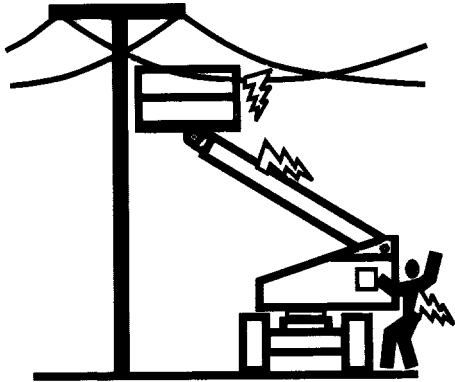

- Maintain distance from electrical lines, apparatus, or any energized (exposed or insulated) parts according to the Minimum Approach Distance (MAD) as shown in Table 1-1.
- Allow for machine movement and electrical line swaying.

Table 1-1. Minimum Approach Distances (M.A.D.)

Voltage Range (Phase to Phase)	MINIMUM APPROACH DISTANCE in Feet (Meters)
0 to 50 KV	10 (3)
Over 50KV to 200 KV	15 (5)
Over 200 KV to 350 KV	20 (6)
Over 350 KV to 500 KV	25 (8)
Over 500 KV to 750 KV	35 (11)
Over 750 KV to 1000 KV	45 (14)

NOTE: *This requirement shall apply except where employer, local or governmental regulations are more stringent.*

- Maintain a clearance of at least 10 ft. (3m) between any part of the machine and its occupants, their tools, and their equipment from any electrical line or apparatus carrying up to 50,000 volts. One foot additional clearance is required for every additional 30,000 volts or less.


- The minimum approach distance may be reduced if insulating barriers are installed to prevent contact, and the barriers are rated for the voltage of the line being guarded. These barriers shall not be part of (or attached to) the machine. The minimum approach distance shall be reduced to a distance within the designed working dimensions of the insulating barrier. This determination shall be made by a qualified person in accordance with the employer, local, or governmental requirements for work practices near energized equipment.

⚠ DANGER

DO NOT MANEUVER MACHINE OR PERSONNEL INSIDE PROHIBITED ZONE (MAD). ASSUME ALL ELECTRICAL PARTS AND WIRING ARE ENERGIZED UNLESS KNOWN OTHERWISE.

Tipping Hazards

- Ensure that the ground conditions are adequate to support the maximum load indicated on the load decals located on the chassis adjacent to each track. Do not travel on unsupported surfaces.
- The user must be familiar with the operating surface before driving. Do not exceed the allowable sideslope and grade while driving.

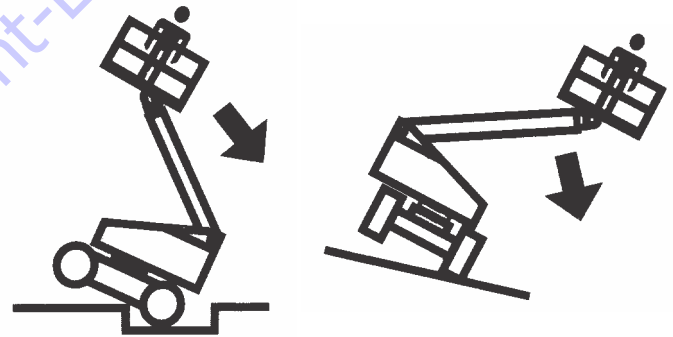

- Do not elevate platform or drive with platform elevated while on or near a sloping, uneven, or soft surface. Ensure machine is positioned on a smooth, firm surface within the limits of the maximum operating slope before elevating platform or driving with the platform in the elevated position.

SECTION 1 - SAFETY PRECAUTIONS

- Before driving on floors, bridges, trucks, and other surfaces, check allowable capacity of the surfaces.
- Never exceed the maximum platform capacity as specified on the platform. Keep all loads within the confines of the platform, unless authorized by JLG.
- Keep the chassis of the machine a minimum of 2 ft. (0.6m) from holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards at the ground level.
- Do not push or pull any object with the boom.
- Never attempt to use the machine as a crane. Do not tie-off machine to any adjacent structure. Never attach wire, cable, or any similar items to platform.
- If boom assembly or platform is in a position that one or more wheels are off the ground, all persons must be removed before attempting to stabilize the machine. Use cranes, forklift trucks, or other appropriate equipment to stabilize machine.
- Do not operate the machine when wind conditions, including gusts, exceed specifications shown in section 7-2 of this manual or as shown on the capacity placard of the platform billboard. Factors affecting wind speed are; platform elevation, surrounding structures, local weather events, and approaching storms.
- Wind speed can be significantly greater at height than at ground level.
- Wind speed can change rapidly. Always consider approaching weather events, the time required to lower the platform, and methods to monitor current and potential wind conditions.
- Do not cover or increase surface area of the platform or the load. Do not carry large surface area items in the platform when operating outdoors. The addition of such items increases the exposed wind area of the machine. Increased areas exposed to wind will decrease stability.
- Do not increase the platform size with unauthorized modifications or attachments.

NOTICE


DO NOT OPERATE THE MACHINE WHEN WIND CONDITIONS EXCEED SPECIFICATIONS SHOWN IN SECTION 7.2 OR AS SHOWN ON THE CAPACITY PLACARD ON THE PLATFORM BILLBOARD.

Table 1-2. Beaufort Scale (For Reference Only)

Beaufort Number	Wind Speed		Description	Land Conditions
	mph	m/s		
0	0	0-0.2	Calm	Calm. Smoke rises vertically
1	1-3	0.3-1.5	Light air	Wind motion visible in smoke
2	4-7	1.6-3.3	Light breeze	Wind felt on exposed skin. Leaves rustle
3	8-12	3.4-5.4	Gentle breeze	Leaves and smaller twigs in constant motion
4	13-18	5.5-7.9	Moderate breeze	Dust and loose paper raised. Small branches begin to move.
5	19-24	8.0-10.7	Fresh breeze	Smaller trees sway.
6	25-31	10.8-13.8	Strong breeze	Large branches in motion. Flags waving near horizontal. Umbrella use becomes difficult.
7	32-38	13.9-17.1	Near Gale/Moderate Gale	Whole trees in motion. Effort needed to walk against the wind.
8	39-46	17.2-20.7	Fresh Gale	Twigs broken from trees. Cars veer on road.
9	47-54	20.8-24.4	Strong Gale	Light structure damage.

Crushing and Collision Hazards

- Approved head gear must be worn by all operating and ground personnel.
- Watch for obstructions around machine and overhead when driving. Check clearances above, on sides, and bottom of platform during all operations.

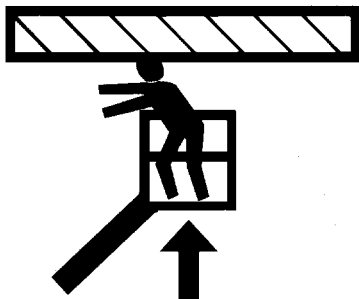

- During operation, keep all body parts inside platform railing.
- Use the boom functions, not the drive function, to position the platform close to obstacles.
- Always post a lookout when driving in areas where vision is obstructed.

- Keep non-operating personnel at least 6 ft. (1.8m) away from machine during all operations.
- Under all travel conditions, the operator must limit travel speed according to conditions of ground surface, congestion, visibility, slope, location of personnel, and other factors.
- Be aware of stopping distances in all drive speeds. When driving in high speed, reduce drive speed before stopping. Travel grades in low speed only.
- Do not use high speed drive in restricted or close quarters or when driving in reverse.
- Exercise extreme caution at all times to prevent obstacles from striking or interfering with operating controls and persons in the platform.
- Ensure that operators of other overhead and floor level machines are aware of the MEWP's presence. Disconnect power to overhead cranes.
- Do not operate over ground personnel. Warn personnel not to work, stand, or walk under a raised boom or platform. Position barricades on floor if necessary.

1.4 TOWING, LIFTING, AND HAULING

- Never allow personnel in platform while towing, lifting, or hauling.
- This machine should not be towed, except in the event of emergency, malfunction, power failure, or loading/unloading. Refer to the Emergency Procedures section of this manual for emergency towing procedures.
- Ensure boom is in the stowed position and, if equipped, the turntable locked prior to towing, lifting or hauling. The platform must be completely empty of tools.
- When lifting machine, lift only at designated areas of the machine. Lift the unit with equipment of adequate capacity.
- Refer to the Machine Operation section of this manual for lifting information.

1.5 MAINTENANCE

This sub-section contains general safety precautions which must be observed during maintenance of this machine. Additional precautions to be observed during machine maintenance are inserted at the appropriate points in this manual and in the Service and Maintenance Manual. It is of utmost importance that maintenance personnel pay strict attention to these precautions to avoid possible injury to personnel or damage to the machine or property. A maintenance program must be established by a qualified person and must be followed to ensure that the machine is safe.

Maintenance Hazards

- Shut off power to all controls and ensure that all moving parts are secured from inadvertent motion prior to performing any adjustments or repairs.
- Never work under an elevated platform until it has been fully lowered to the full down position, if possible, or otherwise supported and restrained from movement with appropriate safety props, blocking, or overhead supports.
- DO NOT attempt to repair or tighten any hydraulic hoses or fittings while the machine is powered on or when the hydraulic system is under pressure.
- Always relieve hydraulic pressure from all hydraulic circuits before loosening or removing hydraulic components.

SECTION 1 - SAFETY PRECAUTIONS

- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to help protect hands from spraying fluid.



- Use only replacement parts or components that are approved by JLG. To be considered approved, replacement parts or components must be identical or equivalent to original parts or components.
- Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. Ensure adequate support is provided when raising components of the machine.
- Do not use machine as a ground for welding.
- When performing welding or metal cutting operations, precautions must be taken to protect the chassis from direct exposure to weld and metal cutting spatter.
- Do not refuel the machine with the engine running.
- Use only approved non-flammable cleaning solvents.
- Do not replace items critical to stability, such as batteries or solid tires, with items of different weight or specification. Do not modify the MEWP in any way to affect stability.
- Refer to the Service and Maintenance Manual for the weights of critical stability items.

⚠ WARNING

MODIFICATION OR ALTERATION OF A MEWP SHALL BE MADE ONLY WITH PRIOR WRITTEN PERMISSION FROM THE MANUFACTURER.

Battery Hazards

- Always disconnect batteries when servicing electrical components or when performing welding on the machine.
- Do not allow smoking, open flame, or sparks near battery during charging or servicing.
- Do not contact tools or other metal objects across the battery terminals.
- Always wear hand, eye, and face protection when servicing batteries. Ensure that battery acid does not come in contact with skin or clothing.

⚠ CAUTION

BATTERY FLUID IS HIGHLY CORROSIVE. AVOID CONTACT WITH SKIN AND CLOTHING AT ALL TIMES. IMMEDIATELY RINSE ANY CONTACTED AREA WITH CLEAN WATER AND SEEK MEDICAL ATTENTION.

- Charge batteries only in a well ventilated area.
- Avoid overfilling the battery fluid level. Add distilled water to batteries only after the batteries are fully charged.

SECTION 2. USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION

2.1 PERSONNEL TRAINING

The Mobile Elevating Work Platform (MEWP) is a personnel handling device; so it is necessary that it be operated and maintained only by trained personnel.

Operator Training

Operator training must cover:

1. Reading and understanding the Operation and Safety Manual.
2. Thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground, and emergency descent controls.
3. Control labels, instructions, and warnings on the machine.
4. Applicable regulations, standards, and safety rules.
5. Use of approved fall protection equipment.
6. Enough knowledge of the mechanical operation of the machine to recognize a malfunction or potential malfunction.
7. The safest means to operate the machine where overhead obstructions, other moving equipment, and obstacles, depressions, holes, and drop-offs exist.
8. Means to avoid the hazards of unprotected electrical conductors.
9. Selection of the appropriate MEWP and available options for the work to be performed considering specific job requirements, with involvement from the MEWP owner, user, and/or supervisor.
10. The responsibility of the operator to ensure all platform occupants have a basic level of knowledge to work safely on the MEWP, and to inform them of applicable regulations, standards, and safety rules.
11. The requirement for familiarization in addition to training.

Training Supervision

Training must be delivered by a qualified person in an open area, free of hazards until the trainee has demonstrated the ability to safely control and operate the machine.

Operator Responsibility

The operator must be instructed they have the responsibility and authority to shut down the machine in case of a malfunction or other unsafe condition of either the machine or the job site.

Machine Familiarization

NOTE: Responsibilities for familiarization may vary by region.

Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation. The user shall ensure that after familiarization, the operator operates the MEWP for a sufficient period of time to achieve proficiency. When authorized by the user, self-familiarization can be achieved, if authorized, by a properly trained operator reading, understanding and following the manufacturer's operator's manual.

Prior to users authorization of an operator to use a specific model of MEWP, the user shall ensure the operator is familiarized on the following:

1. Location of the manual storage compartment and the requirement to ensure the required manual(s) are present on the MEWP;
2. Purpose and function of the machine controls and indicators at the platform and ground control stations;

3. Purpose, location, and function of the emergency controls;
4. Operating characteristics and limitations;
5. Features and devices;
6. Accessories and optional equipment.

2.2 PREPARATION, INSPECTION, AND MAINTENANCE

The following table covers machine inspections and maintenance required by JLG Industries, Inc. Consult local regulations for further requirements for MEWPs. The frequency of inspections and maintenance must be increased as necessary when the machine is used in a harsh or hostile environment, if the machine is used with increased frequency, or if the machine is used in a severe manner.

SECTION 2 - USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION

Table 2-1. Inspection and Maintenance Table

Type	Frequency	Primary Responsibility	Service Qualification	Reference
Pre-Start Inspection	Before using each day; or whenever there's an Operator change.	User or Operator	User or Operator	Operator and Safety Manual
Pre-Delivery Inspection (See Note)	Before each sale, lease, or rental delivery.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form
Frequent Inspection (See Note)	In service for 3 months or 150 hours, whichever comes first; or Out of service for a period of more than 3 months; or Purchased used.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form
Annual Machine Inspection (See Note)	Annually, no later than 13 months from the date of prior inspection.	Owner, Dealer, or User	Factory Trained Service Technician (Recommended)	Service and Maintenance Manual and applicable JLG inspection form
Preventative Maintenance	At intervals as specified in the Service and Maintenance Manual.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual


NOTE: Inspection forms are available from JLG. Use the Service and Maintenance Manual to perform inspections.

NOTICE

JLG INDUSTRIES, INC. RECOGNIZES A FACTORY TRAINED SERVICE TECHNICIAN AS A PERSON WHO HAS SUCCESSFULLY COMPLETED THE JLG SERVICE TRAINING SCHOOL FOR THE SPECIFIC JLG PRODUCT MODEL.

2.3 BASIC NOMENCLATURE


- 1. Platform
- 2. Platform Control Console
- 3. SkyGuard
- 4. Fly Boom Section
- 5. Base Boom Section
- 6. Final Drive Hub
- 7. Track
- 8. Chassis and Roller Assembly
- 9. Turntable
- 10. Ground Control Console

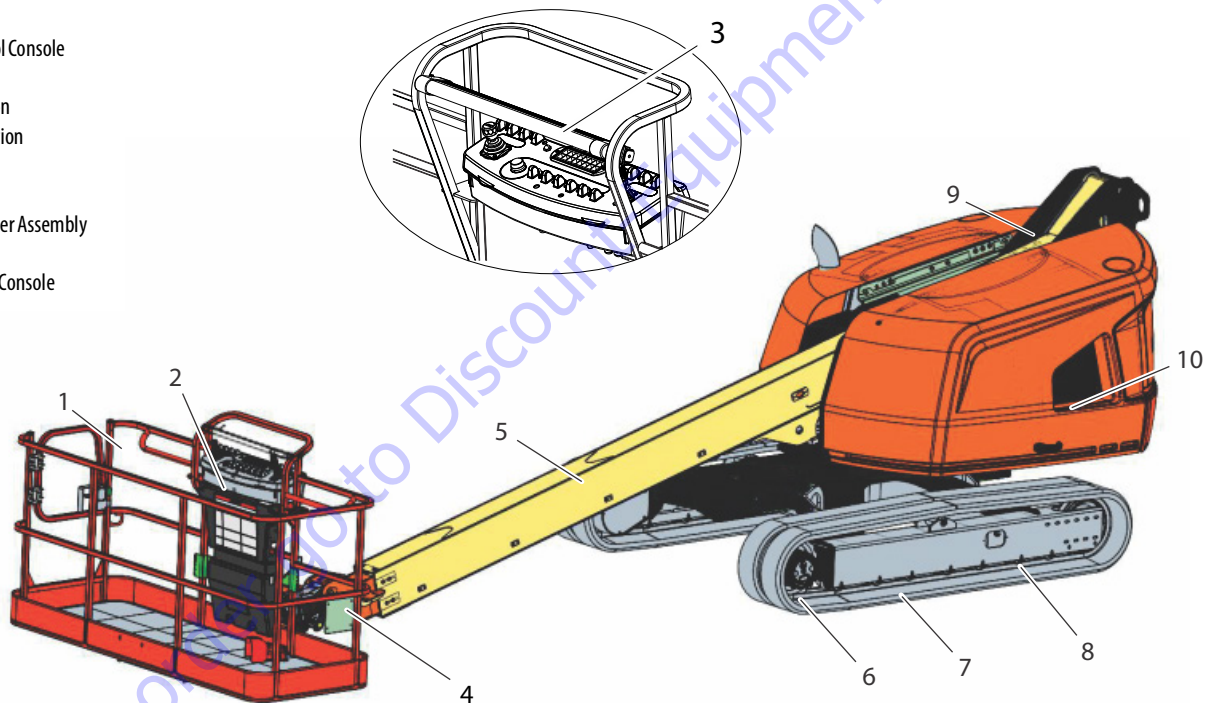


Pre-Start Inspection

The Pre-Start Inspection should include each of the following:

1. **Cleanliness** – Check all surfaces for leakage (oil, fuel, or battery fluid) or foreign objects. Report any leakage to the proper maintenance personnel.
2. **Structure** - Inspect the machine structure for dents, damage, weld or parent metal cracks or other discrepancies.

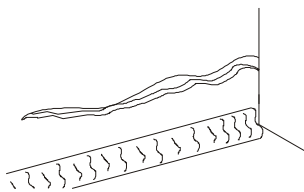

Parent Metal Crack

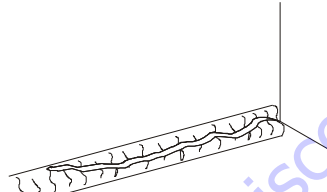

Weld Crack

3. **Decals and Placards** – Check all for cleanliness and legibility. Make sure none of the decals and placards are missing. Make sure all illegible decals and placards are cleaned or replaced.

4. **Operation and Safety Manuals** – Make sure a copy of the Operation and Safety Manual, AEM Safety Manual (ANSI markets only), and ANSI Manual of Responsibilities (ANSI markets only) is enclosed in the weather resistant storage container.
5. **Walk-Around Inspection** – Perform as instructed.
6. **Battery** – Charge as required.
7. **Fuel** (Combustion Engine Powered Machines) – Add the proper fuel as necessary.
8. **Engine Oil Supply** - Ensure the engine oil level is at the Full mark on the dipstick and the filler cap is secure.
9. **Hydraulic Oil** – Check the hydraulic oil level. Ensure hydraulic oil is added as required.
10. **Accessories/Attachments** - Refer to the Accessories section in this manual or accessory installed upon the machine for specific inspection, operation, and maintenance instructions.


SECTION 2 - USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION

11. **Function Check** – Once the Walk-Around Inspection is complete, perform a functional check of all systems in an area free of overhead and ground level obstructions. Refer to Section 4 for more specific operating instructions.
12. **Platform Gate** - Keep gate and surrounding area clean and unobstructed. Verify the gate closes properly and is not bent or damaged. Keep gate closed at all times except when entering/exiting the platform and loading/unloading materials.
13. **Lanyard Attach Points** - During operation, occupants in the platform must wear a full body harness with a lanyard attached to an authorized lanyard anchorage point. Attach only one (1) lanyard per lanyard anchorage point.

WARNING

IF THE MACHINE DOES NOT OPERATE PROPERLY, TURN OFF THE MACHINE IMMEDIATELY! REPORT THE PROBLEM TO THE PROPER MAINTENANCE PERSONNEL. DO NOT OPERATE THE MACHINE UNTIL IT IS DECLARED SAFE FOR OPERATION.

2.4 WALK-AROUND INSPECTION

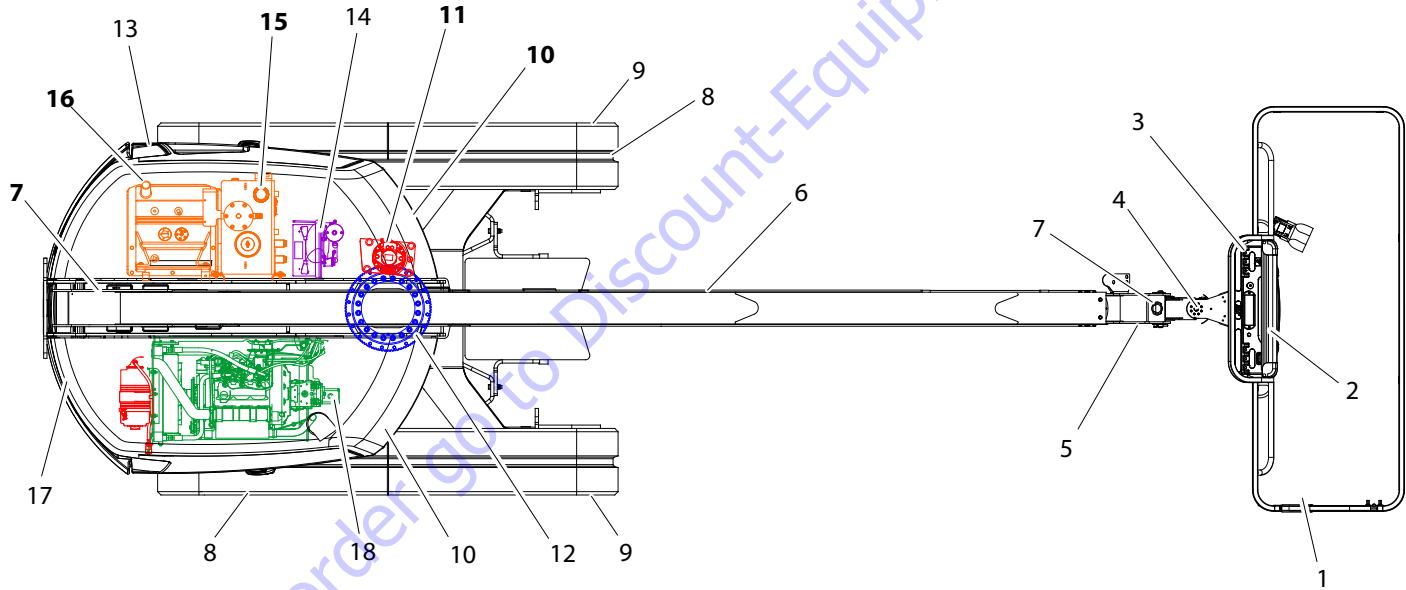

SECTION 2 - USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION

General

Begin the Walk-Around Inspection at Item 1, as noted on the diagram. Continue checking each item in sequence for the conditions listed in the following checklist.

WARNING

TO AVOID POSSIBLE INJURY, BE SURE MACHINE POWER IS OFF. DO NOT OPERATE MACHINE UNTIL ALL MALFUNCTIONS HAVE BEEN CORRECTED.

NOTICE

DO NOT OVERLOOK VISUAL INSPECTION OF CHASSIS UNDERSIDE. CHECKING THIS AREA MAY RESULT IN DISCOVERY OF CONDITIONS WHICH COULD CAUSE EXTENSIVE MACHINE DAMAGE.

INSPECTION NOTE: *On all components, make sure there are no loose or missing parts, that they are securely fastened, and no visible damage, leaks or excessive wear exists in addition to any other criteria mentioned.*

- 1. Platform Assembly and Gate** - Footswitch works properly, not modified, disabled or blocked. Gate latches and hinges in working condition.
- 2. SkyGuard** - See Inspection Note.
- 3. Platform Control Console** - Switches and levers return to neutral when activated and released, decals/placards secure and legible, control markings legible.
- 4. Platform Rotator** - See Inspection Note.
- 5. Jib Assembly (if equipped)** - See Inspection Note.
- 6. Boom Sections/Turntable** - See Inspection Note.
- 7. All Hydraulic Cylinders** - No visible damage; pivot pins and hydraulic hoses undamaged, not leaking.
- 8. Track and Roller Assembly** - Properly secured, no missing nuts. Inspect for worn track, cuts, tears or other discrepancies. Inspect rollers for damage and corrosion.
- 9. Final Drive Hub** - No evidence of leakage.
- 10. Hood Assemblies** - See Inspection Note.
- 11. Swing Drive** - No evidence of damage.
- 12. Turntable Bearing** - Evidence of proper lubrication. No evidence of loose bolts or looseness between bearing and machine.
- 13. Ground Control Console** - Switches and levers return to neutral when activated and released, decals/placards secure and legible, control markings legible.
- 14. Battery** - Batteries have proper electrolyte level; cables tight; see Inspection Note.

SECTION 2 - USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION

- 15. **Hydraulic Reservoir** - See Inspection Note.
- 16. **Fuel Tank** - See Inspection Note.
- 17. **Counterweight** - See Inspection Note.
- 18. **Hydraulic Pumps** - See Inspection Note.

Function Check

Perform the Function Check as follows:

- 1.** From the ground control console with no load in the platform:
 - a.** Ensure that all machine functions are disabled when the Emergency Stop Button is pushed in.
 - b.** Ensure all functions stop when the function switch is released.
 - c.** Operate all functions and check all limiting and cut-out switches to ensure proper operation.
 - d.** Check auxiliary power and ensure proper operation.
- 2.** From the platform control console:
 - a.** Ensure the control console is firmly secured in the proper location.
 - b.** Check all guards protecting the switches or locks are in place.
 - c.** Ensure all machine functions are disabled when the Emergency Stop Button is pushed in.
 - d.** Ensure all machine functions stop when the footswitch is released.
 - e.** Operate all functions and check all limiting and cut-out switches to ensure proper operation.
- 3.** With the platform in the stowed position:
 - a.** Drive the machine on a grade, not to exceed the rated gradeability, and stop to ensure the brakes hold.
 - b.** Check that the tilt indicator is illuminated to ensure proper operation.
- 4.** Swing the boom over either rear corner of the machine and ensure that the Drive Orientation indicator illuminates and that the Drive Orientation Override switch must be used for the drive function to operate.
- 5.** With the machine positioned on a smooth, firm surface within the limits of the maximum operating slope, elevate the boom above 5 degrees of horizontal or extend beyond 1.6 feet (0.5 m). Select high speed drive mode. Carefully attempt to drive and ensure the drive speed is reduced.

SkyGuard Function Test

NOTE: Refer to Section 4.6 for additional information on SkyGuard operation.

From the Platform Console in an area free from obstructions:

1. Operate the telescope out function.
2. Activate the SkyGuard sensor:
 - a. **SkyGuard** - Apply approximately 50 lb (222 Nm) of force to yellow bar.
 - b. **SkyGuard - SkyLine** - Press cable to break magnetic connection between the cable and right bracket.
 - c. **SkyGuard - SkyEye** - Put arm or hand in path of sensor beam.
3. Once the sensor has been activated, verify the following conditions:
 - a. Telescope out function stops and telescope in function operates for a short duration.
 - b. The horn sounds.
 - c. The SkyGuard beacon illuminates (if equipped).

4. Disengage the SkyGuard sensor, release controls, then recycle the footswitch. Ensure normal operation is available.

NOTE: On machines equipped with SkyLine, reattach magnetic end of the cable to the bracket.

If SkyGuard remains activated after function reversal or cutout, depress and hold the SkyGuard Override Switch to allow normal use of machine functions until the sensor is disengaged.

SECTION 3. MACHINE CONTROLS AND INDICATORS

3.1 GENERAL

NOTICE

THE MANUFACTURER HAS NO DIRECT CONTROL OVER MACHINE APPLICATION AND OPERATION. THE USER AND OPERATOR ARE RESPONSIBLE FOR CONFORMING WITH GOOD SAFETY PRACTICES.

This section provides the necessary information needed to understand control functions.

3.2 CONTROLS AND INDICATORS

NOTE: *The indicator panels use different shaped symbols to alert the operator to different types of operational situations that could arise. The meaning of those symbols are explained below.*



Indicates a potentially hazardous situation, which if not corrected, could result in serious injury or death. This indicator will be red.



Indicates an abnormal operating condition, which if not corrected, may result in machine interruption or damage. This indicator will be yellow.



Indicates important information regarding the operating condition, i.e. procedures essential for safe operation. This indicator will be green with the exception of the capacity indicator which will be green or yellow depending upon platform position.

SECTION 3 - MACHINE CONTROLS AND INDICATORS

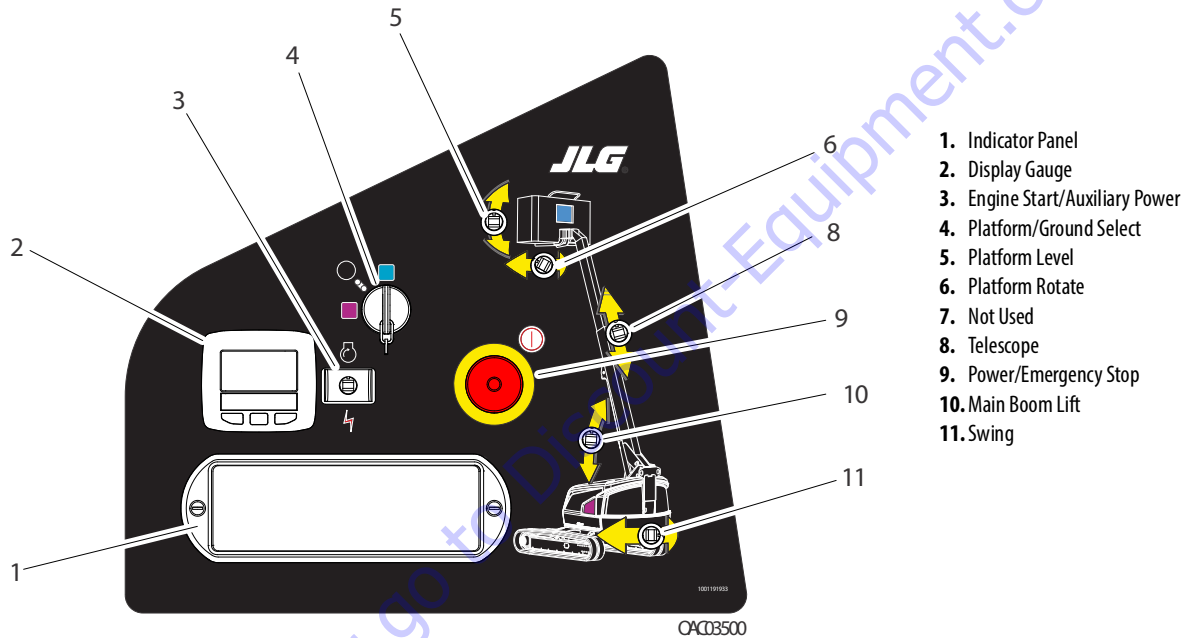


Figure 3-1. Ground Control Console - 400SC without MSSO

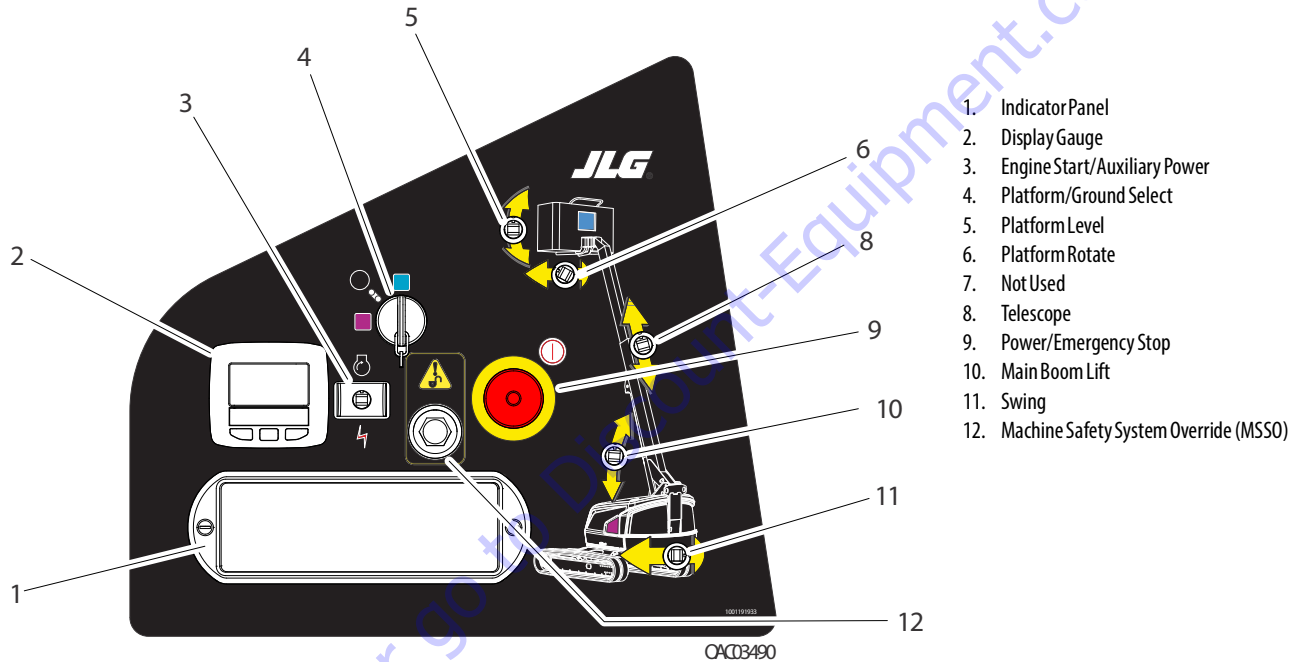


Figure 3-1. Ground Control Console - 400SC with MSSO

SECTION 3 - MACHINE CONTROLS AND INDICATORS

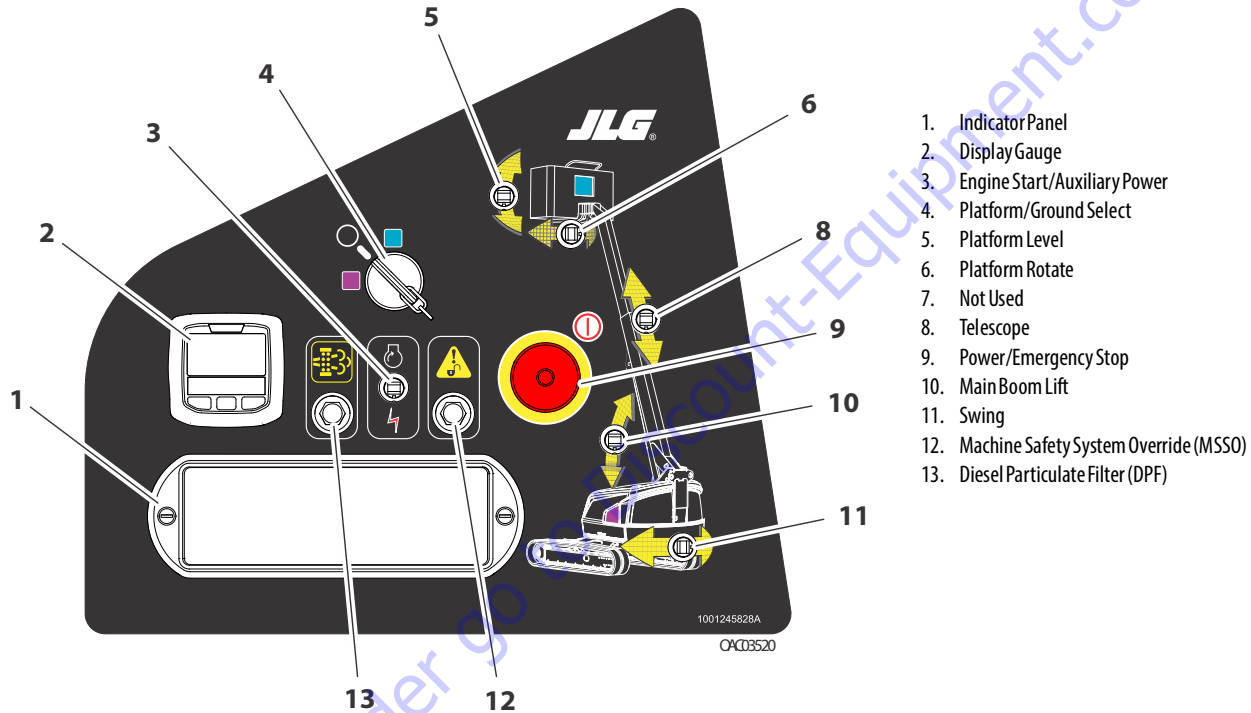


Figure 3-1. Ground Control Console - 400SC with MSSO and DPF

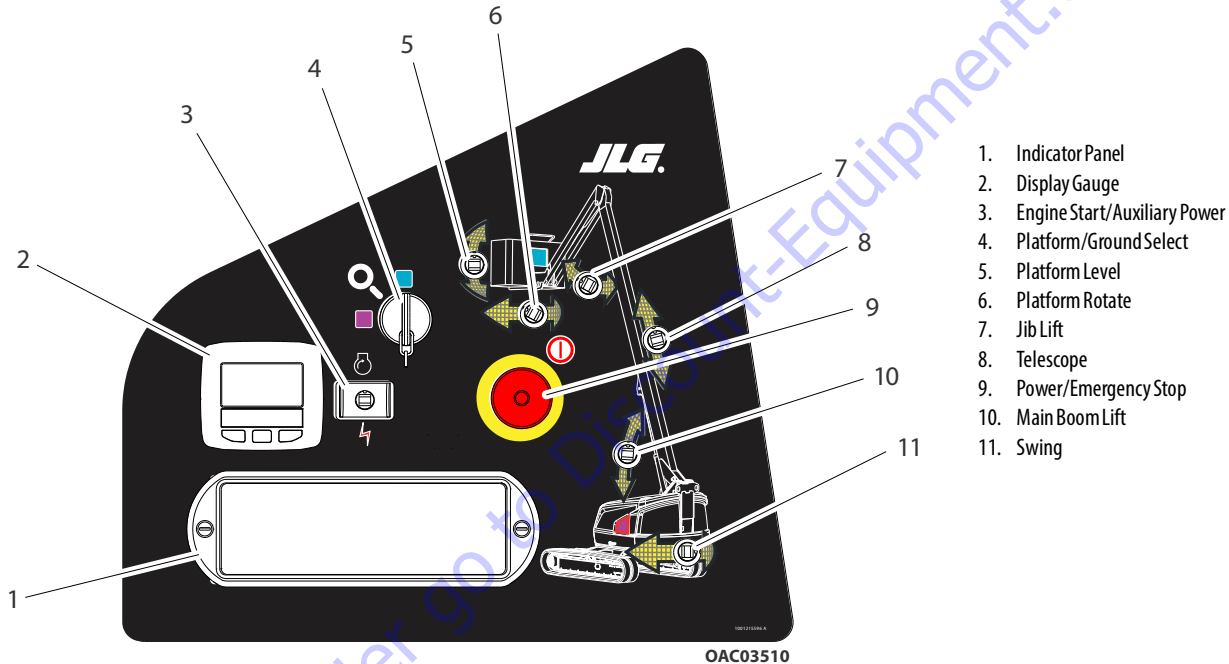


Figure 3-1. Ground Control Console - 460SJC without MSSO

SECTION 3 - MACHINE CONTROLS AND INDICATORS

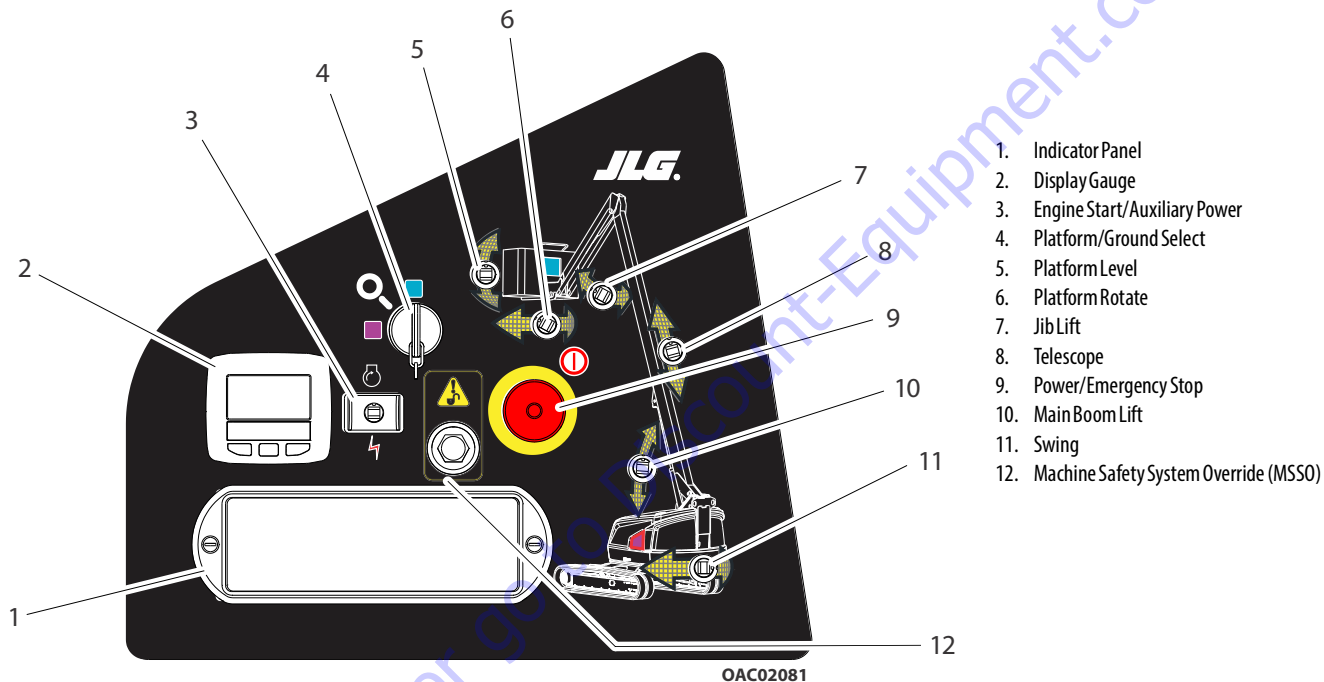


Figure 3-1. Ground Control Console - 460SJC with MSSO

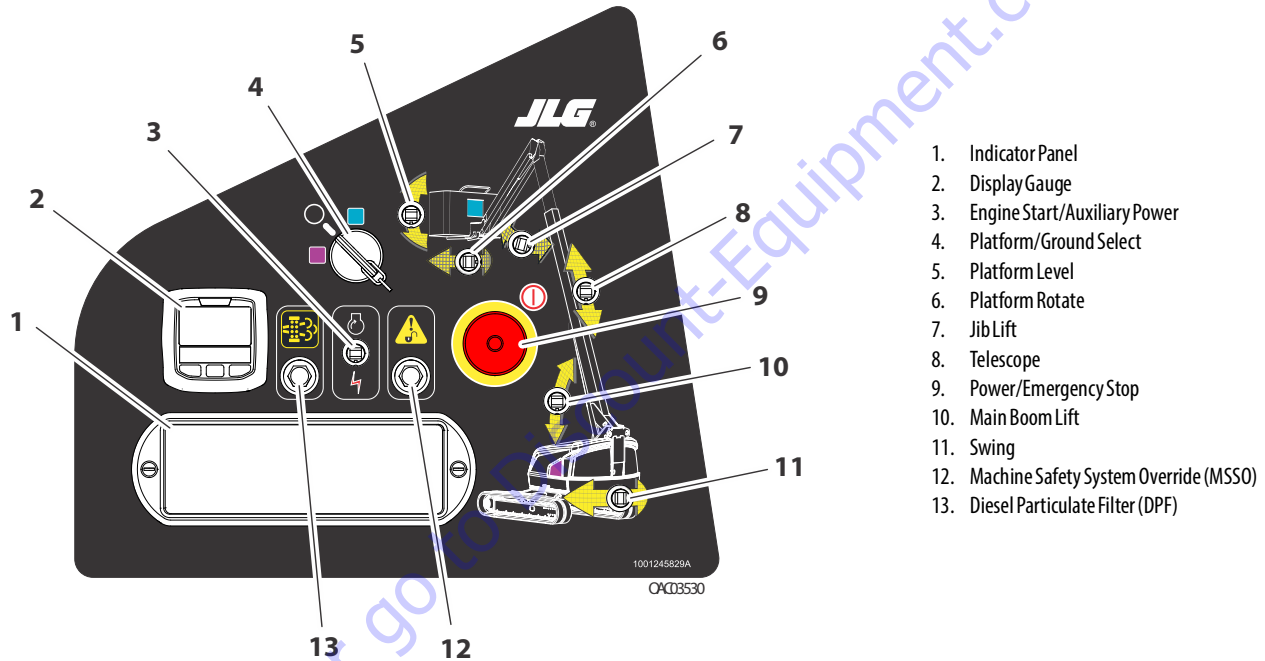


Figure 3-1. Ground Control Console - 460SJC with MSSO and DPF

3.3 GROUND CONTROL CONSOLE

⚠ WARNING

TO AVOID SERIOUS INJURY, DO NOT OPERATE MACHINE IF ANY CONTROL LEVERS OR TOGGLE SWITCHES CONTROLLING PLATFORM MOVEMENT DO NOT RETURN TO THE OFF OR NEUTRAL POSITION WHEN RELEASED.

NOTE: When machine is shut down the Platform/Ground Select switch and Emergency Stop must be positioned to Off.



1. Indicator Panel

The Indicator Panel contains indicator lights that signal problem conditions or functions operating during machine operation.

2. Display Gauge

Registers amount of time machine has been in use, with engine running. The hour meter registers up to 16,500 hours and cannot be reset.



NOTE: On machines with diesel engines, when Glow Plug Indicator is lighted (yellow), wait until light goes out before cranking engine.

3. Engine Start/ Auxiliary Power

To start engine, switch must be held Up until the engine starts.

 
To use auxiliary power, switch must be held Down for duration of function use.



NOTE: When the Platform/Ground Select Switch is in the center position, power is shut off to the controls at both operating consoles. Remove key to prevent controls from being actuated.

4. Platform/Ground Select Switch

The three position, key operated switch supplies power to the platform control console when positioned to Platform. With the switch key turned to the Ground position only ground controls are operable.



⚠ WARNING

ONLY USE THE PLATFORM LEVELING OVERRIDE FUNCTION FOR SLIGHT LEVELING OF THE PLATFORM. INCORRECT USE COULD CAUSE THE LOAD/OCCUPANTS TO SHIFT OR FALL. FAILURE TO DO SO COULD RESULT IN DEATH OR SERIOUS INJURY.

5. Platform Leveling Override

A three position switch allows the operator to adjust the automatic self leveling system. This switch is used to adjust platform level in situations such as ascending/descending a grade.



6. Platform Rotate

Provides rotation of the platform.



 
7. Jib Lift (If Equipped)

Provides raising and lowering of the jib.



8. Telescope Control

Provides extension and retraction of the boom.




SECTION 3 - MACHINE CONTROLS AND INDICATORS

CAUTION

ALWAYS POSITION EMERGENCY STOP SWITCH TO THE OFF POSITION (PUSHED IN) WHEN MACHINE IS NOT IN USE.

9. Power/Emergency Stop Switch

 A two-position red mushroom shaped switch supplies power to Platform/Ground Select switch when pulled out (on). When pushed in (off), power is shut off to the Platform/Ground Select switch.




10. Main Boom Lift

Provides raising/lowering of the main boom when positioning up or down.



11. Swing

 Provides 360 degree continuous turntable rotation.




12. Machine Safety System Override (MSSO) (If Equipped)

Provides emergency override of function controls that are locked out in the event of Load Sense System activation.




13. Diesel Particulate Filter (DPF)

 This button initiates the standstill exhaust system cleaning.



3.4 GROUND CONTROL INDICATOR PANEL

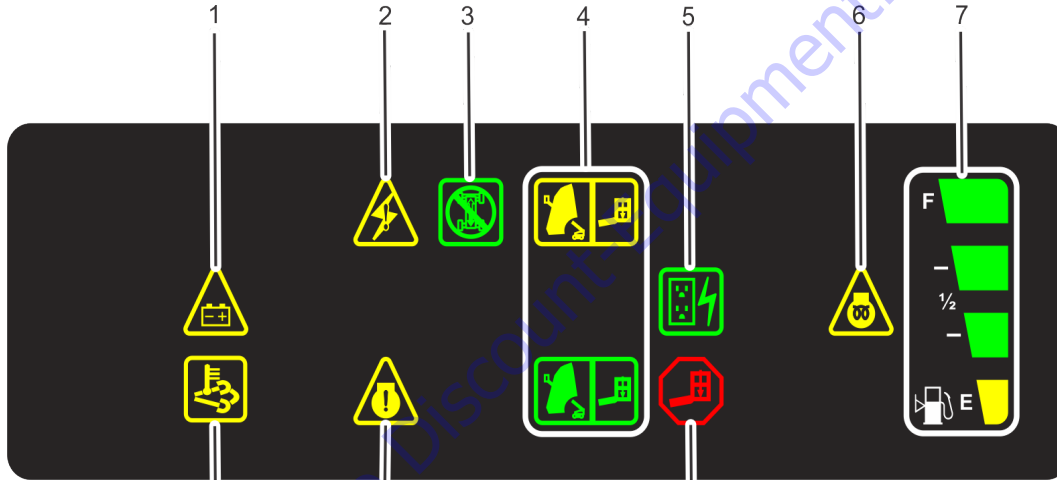

OAC01900

- | | | | |
|------------------------|----------------------|----------------------|---------------------------|
| 1. Battery Charge | 4. Platform Capacity | 7. Fuel Level | 9. Engine Error |
| 2. System Distress | 5. Generator | 8. Platform Overload | 10. Emissions Temperature |
| 3. Drive Steer Disable | 6. Glow Plug | | |

Ground Control Indicator Panel

NOTE: Indicator lights illuminate as a self test for approximately 1 second when key is turned to the on position.

1. Battery Charge Indicator

Indicates a problem in the battery or charging circuit, and service is required.



2. System Distress Indicator

The indicator illuminates when the JLG Control System has detected an abnormal condition and a Diagnostic Trouble Code has been set in the system memory. Refer to the Service Manual for instructions concerning the trouble codes and trouble code retrieval. The system distress indicator light will illuminate for 2-3 seconds when the key is positioned to the ON position to act as a self test.



3. Drive Steer Disable Indicator

Indicates the Drive and Steer Disable function has been activated.



4. Platform Capacity Indicator

Indicates the platform capacity zone for the current position of the platform. Restricted capacities are permitted at restricted platform positions (shorter boom lengths and higher boom angles).

NOTE: Refer to capacity decals on the machine for restricted and unrestricted platform capacities.



5. Generator

Indicates the generator is in operation.



6. Glow Plug Indicator


Indicates the glow plugs are on. The glow plugs are automatically turned on with the ignition circuit and remain in for approximately 7 seconds. Start the engine only after the light goes out.



SECTION 3 - MACHINE CONTROLS AND INDICATORS

7. Fuel Level Indicator

 Indicates the level of the fuel in the fuel tank.



8. Platform Overload Indicator

Indicates the platform has been overloaded.



9. Engine Error Indicator

Indicates an engine fault requiring service or is requesting a cleaning sequence.



10. Emissions Temperature Indicator

Indicator illuminates when exhaust temperature reaches 1022° F (550° C).



Ground Control Console Display Gauge

The Display Gauge shows engine hours, fuel level (if applicable), and Diagnostic Trouble Codes (DTCs) from both the JLG Control System and the engine control system.

During machine start up, with no active DTCs in the control system, the splash screen displays for 3 seconds and then switches to the main screen. If there is an active DTC when powering up the machine, the splash screen displays for 3 seconds and then launches the Diagnostics Screen.

The indicator lamp lights when there is an active DTC in the Fault Log.



Figure 3-1. Splash Screen

SECTION 3 - MACHINE CONTROLS AND INDICATORS

The Diagnostic Screen displays active and inactive faults from the JLG Control System. An asterisk (*) indicates active faults.

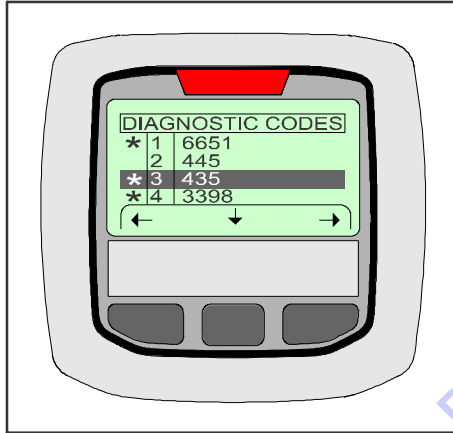


Figure 3-2. Diagnostic Screen

The Engine Diagnostics Screen displays the SPN (Suspect Parameter Number), FMI (Failure Mode Identifier), and Occurrence Count Information.

Engine SPN text is not scrollable. If there is more than one engine trouble code, the operator must exit from the Engine DTC Screen to see other SPN and FMI information.

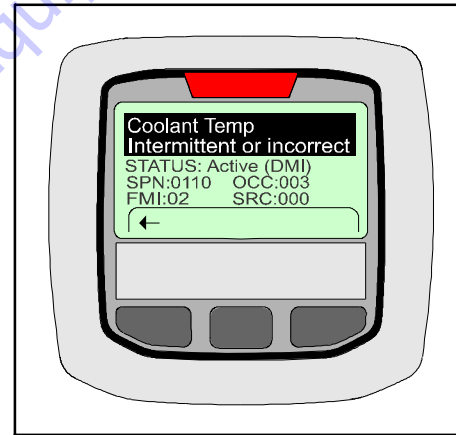


Figure 3-3. Engine Diagnostic Screen


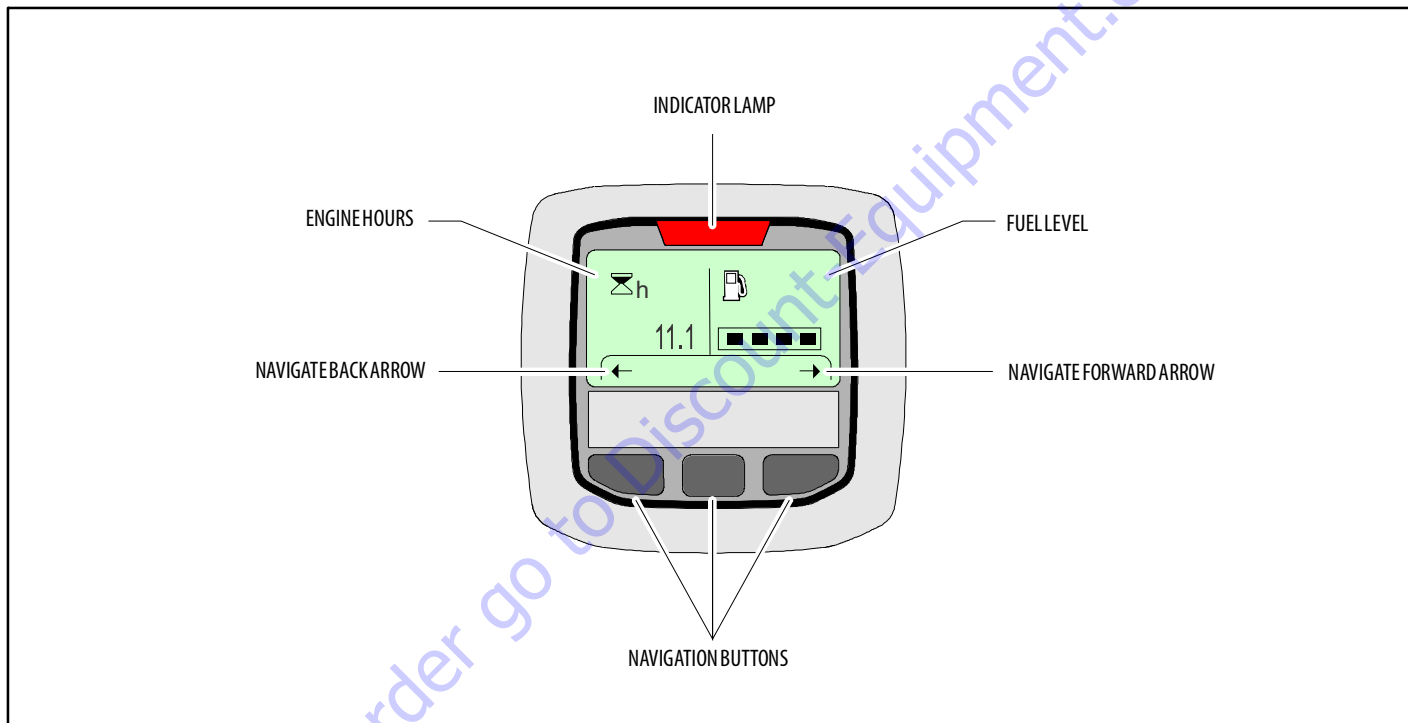


Figure 3-4. Ground Control Console Display Gauge

3.5 PLATFORM CONTROL CONSOLE

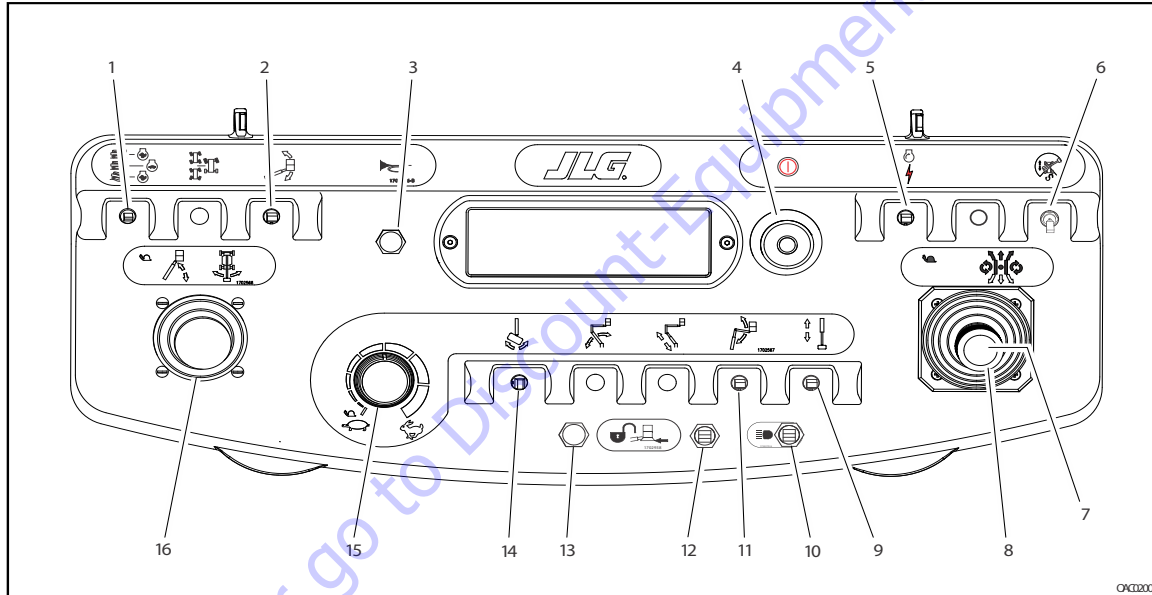

- | | | | |
|--------------------------------|-------------------------------|---|---|
| 1. Drive Speed / Torque Select | 5. Start/Auxiliary Power | 9. Telescope | 13. Soft Touch/SkyGuard Indicator/SkySense Mute |
| 2. Platform Level Override | 6. Drive Orientation Override | 10. Lights | 14. Platform Rotate |
| 3. Horn | 7. Drive/Steer Enable | 11. Jib Lift (If Equipped) | 15. Function Speed Control |
| 4. Power/Emergency Stop | 8. Drive Steer | 12. Soft Touch/SkyGuard/SkySense Override | 16. Main Lift / Swing Controller |

 
Platform Console

⚠ WARNING

TO AVOID SERIOUS INJURY, DO NOT OPERATE MACHINE IF ANY CONTROL LEVERS OR TOGGLE SWITCHES CONTROLLING PLATFORM MOVEMENT DO NOT RETURN TO THE OFF OR NEUTRAL POSITION WHEN RELEASED.

1. Drive Speed/Torque Select

Activating the Speed Mode switch allows the operator to select High or Low Speed travel operation.




⚠ WARNING

ONLY USE PLATFORM LEVELING OVERRIDE FUNCTION FOR SLIGHT LEVELING OF THE PLATFORM. INCORRECT USE COULD CAUSE THE LOAD/OCCUPANTS TO SHIFT OR FALL. FAILURE TO DO SO COULD RESULT IN DEATH OR SERIOUS INJURY.

2. Platform Leveling Override

 A three position switch allows the operator to adjust the automatic self leveling system. This switch is used to adjust platform level in situations such as ascending/descending a grade.




3. Horn

A push-type HORN switch supplies electrical power to an audible warning device when pressed.



4. Power/Emergency Stop Switch

 A two-position red mushroom shaped switch furnishes power to Platform Controls when pulled out (on). When pushed in (off), power is shut off to the platform functions.



5. Start/Auxiliary Power

When pushed forward, the switch energizes the starter motor to start the engine.



 
The Auxiliary Power control switch energizes the electrically operated hydraulic pump. (Switch must be held ON for duration of auxiliary pump use.)



The auxiliary pump functions to provide sufficient oil flow to operate basic machine functions should the main pump or engine fail. The auxiliary pump operates the main boom lift, main telescope, and swing functions.


6. Drive Orientation Override

When the boom is swung over the rear chassis or further in either direction, the Drive Orientation indicator will illuminate when the drive function is selected. Push and release the switch, and within 3 seconds move the Drive/Steer control to activate drive or steer. Before driving, locate the black/white orientation arrows on both the chassis and the platform controls. Move the drive controls in a direction matching the directional arrows.




7. Drive/Steer Enable

 Located on the top of the Drive Steer Joystick, the button must be pushed in for the Drive/Steer control to function. If at any time the Enable Switch is pushed in and no function is operated for a period of 3 seconds, the switch will "time-out" and the switch must be cycled again to renew normal functions.



8. Drive/Steer

Proportional dual axis joystick is provided to control drive and steer.

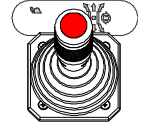

Push forward to drive straight forward. The joystick is proportional, with the drive speed increasing as the joystick is moved further from its neutral position.

Moving the joystick forward and to the side steers the machine in the direction of the side displacement of the joystick.

With the joystick positioned all the way to the side and slightly forward, the machine will turn in place with one track stopped and the other one turning the machine around the center of the stopped track.

Moving the joystick to the side (no displacement in the forward or aft direction) will turn the machine by counter-rotation around the center of the machine by powering the tracks in opposite directions.

Pulling the joystick back and to the sides controls speed and direction of drive in reverse.

SECTION 3 - MACHINE CONTROLS AND INDICATORS

 
NOTE: Both drive and steer functions work in the opposite direction when the boom is positioned over front of the chassis (over idler wheels).

NOTE: When boom is positioned above horizontal and any of the following switches, Drive Speed/Torque Select or Function Speed, are positioned to HIGH, high function speeds are automatically cut out and the machine continues to operate at a lower speed.

NOTE: The drive/steer control joystick can only command counter-rotate by being moved in the joystick's left - to - right axis, after first achieving the joystick neutral position.

9. Telescope

Provides extension and retraction of the main boom.




10. Lights (If Equipped)

This switch operates the accessory lights package if the machine is so equipped.



11. Jib Lift (If Equipped)

 Provides for raising or lowering of the jib.



12. Soft Touch/SkyGuard/SkySense Override Switch

For machines equipped with SkyGuard:

The SkyGuard override switch enables functions cut out by the Skyguard system to be operated again, allowing the operator to resume use of machine functions.



For machines equipped with both SkyGuard and Soft Touch:

The switch operates like the SkyGuard override switch as described above. The switch also enables the functions cut out by the Soft Touch system to operate again at creep speed, allowing the operator to move the platform away from the obstacle that caused the shut-down situation.



For machines equipped with both SkyGuard and SkySense:

The switch operates like the SkyGuard override switch as described above. The switch also enables the functions cut out by the SkySense system to operate again at creep speed, allowing the operator to move the platform closer to the obstacle that caused the shut-down situation if desired.



SECTION 3 - MACHINE CONTROLS AND INDICATORS

13. Soft Touch/SkyGuard Indicator/SkySense Mute Switch

Indicates Soft Touch bumper is against an object or the SkyGuard sensor has been activated. All controls are cut out until the override button is pushed. For Soft Touch, controls are then active in the Creep Mode or for SkyGuard, controls will work normally.

When Soft touch is active, the indicator will be on continuously and the alarm will sound. When SkyGuard is active, the indicator will flash and the horn will sound continuously.

If machine is equipped with SkySense, the switch will mute the SkySense speakers.

14. Platform Rotate

Provides rotation of the platform.




15. Function Speed Control

This control affects Telescope speed and Jib Lift speed (if equipped). Turning the knob all the way counterclockwise until it clicks places Drive and Swing functions in Creep mode.




NOTE: To operate the Main Boom Lift/Swing joystick, pull up on the locking ring below the handle.

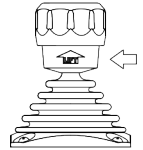


NOTE: The Main Boom Lift/Swing joystick is spring loaded and will automatically return to neutral (off) position when released.

16. Main Lift/Swing Controller

Provides main lift and swing. Push forward to lift up, pull backward to boom down. Move right to swing right, move left to swing left.

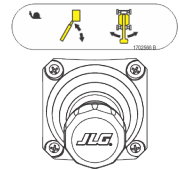

3.6 PLATFORM CONTROL INDICATOR PANEL

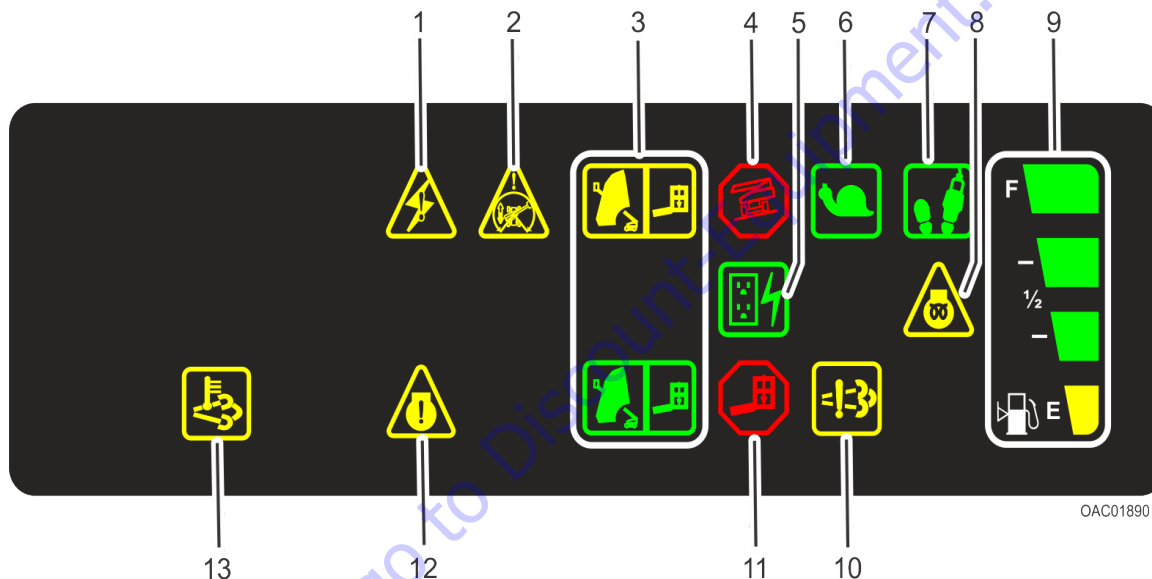

OAC01890

- | | | | |
|-----------------------|----------------------|-----------------------|---------------------------|
| 1. System Distress | 5. Generator | 8. Glow Plug | 11. Platform Overload |
| 2. Drive Orientation | 6. Creep Speed | 9. Fuel Level | 12. Engine Error |
| 3. Platform Capacity | 7. Footswitch Enable | 10. Emissions Failure | 13. Emissions Temperature |
| 4. Tilt Alarm/Warning | | | |

 
NOTE: Indicator lights illuminate as a self test for approximately 1 second when key is turned to the on position.

1. System Distress Indicator




The indicator illuminates when the JLG Control System has detected an abnormal condition and a Diagnostic Trouble Code has been set in the system memory. Refer to the Service Manual for instructions concerning the trouble codes and trouble code retrieval. The system distress indicator light will illuminate for 2-3 seconds when the key is positioned to the ON position to act as a self test.

2. Drive Orientation Indicator



Indicates the Drive and Steer Disable function has been activated.

 3. Platform Capacity Indicator



Indicates the platform capacity zone for the current position of the platform. Restricted capacities are permitted at restricted platform positions (shorter boom lengths and higher boom angles).

NOTE: Refer to capacity decals on the machine for restricted and unrestricted platform capacities.

4. Tilt Warning Light and Alarm



This red illuminator indicates the chassis is on a slope. If the boom is above horizontal and the machine is on a slope, the tilt alarm warning light will illuminate, an alarm will sound, available functions are placed in Creep speed, and drive is cut out in the direction of travel. Drive in the opposite direction may be allowed under certain conditions.

Tilt Angle	Specification
5°	All Markets

WARNING

IF TILT WARNING LIGHT IS ILLUMINATED WHEN BOOM IS RAISED OR EXTENDED, RETRACT AND LOWER TO BELOW HORIZONTAL THEN REPOSITION MACHINE SO THAT IT IS WITHIN THE LIMITS OF THE MAXIMUM OPERATING SLOPE BEFORE EXTENDING BOOM OR RAISING BOOM ABOVE HORIZONTAL.

NOTE: When the tilt sensor alarm is activated the Drive function will be disabled if the boom is elevated above horizontal.

5. Generator



Indicates the generator is in operation.

SECTION 3 - MACHINE CONTROLS AND INDICATORS

6. Creep Speed Indicator

When the Function Speed Control is turned to the creep position, the indicator acts as a reminder that all functions are set to the slowest speed.



7. Footswitch Enable Indicator

To operate any function, the footswitch must be depressed, and the function selected within seven seconds. The enable indicator shows that the controls are enabled. If a function is not selected within seven seconds, or if a seven second lapse between ending one function and beginning the next function, the enable light will go out and the footswitch must be released and depressed again to enable the controls. Releasing the footswitch removes power from all controls and applies the drive brakes.



 
8. Glow Plug Indicator

Indicates the glow plugs are on. The glow plugs are automatically turned on with the ignition circuit and remain in for approximately 7 seconds. Start the engine only after the light goes out.



9. Fuel Level Indicator

Indicates the level of the fuel in the fuel tank.



10. Engine Emissions System Failure Indicator

Indicator illuminates when there is a fault with the Emissions After Treatment system.



11. Platform Overload Indicator

Indicates the platform has been overloaded.



12. Engine Error Indicator

Indicates an engine fault requiring service or is requesting a cleaning sequence.



13. Emissions Temperature Indicator

Indicator illuminates when exhaust temperature reaches 1022° F (550° C).



TO PURCHASE THIS PRODUCT PLEASE CONTACT US



**Equipment Financing and
Extended Warranties Available**



**Discount-Equipment.com is your online resource for
commercial and industrial quality parts and equipment sales.**

561-964-4949

visit us on line @ www.discount-equipment.com

Select an option below to find your Equipment

Search by Manufacturer

Search by Product Type

Request a Quote

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar

SECTION 4. MACHINE OPERATION

4.1 DESCRIPTION

This machine is a mobile elevating work platform used to position personnel, along with their necessary tools and materials at work locations.

The primary operator control console is in the platform. From this control console, the operator can drive and steer the machine in both forward and reverse directions. The operator can raise or lower the boom or swing the boom to the left or right. The machine can be driven on a smooth, firm surface within the limits of the maximum operating slope from an elevated platform position. Refer to the subsection Steering and Traveling of this manual for specific requirements. The machine has a Ground Control Station that can override the Platform Control Station. Ground controls operate all functions except Drive and Steer. Except for performing inspections and the Function Check, the ground controls are to be used in an emergency to lower the platform to the ground should the operator in the platform be unable to do so.

4.2 BOOM OPERATING CHARACTERISTICS AND LIMITATIONS

Capacities

Raising boom above horizontal with or without any load in platform, is based on the following criteria:

1. Machine is positioned on a smooth, firm surface within the limits of the maximum operating slope.
2. Load is within manufacturers rated design capacity.
3. All machine systems are functioning properly.
4. Machine is as originally equipped from JLG.

Platform Load Sensing System (LSS)

The Platform Load Sensing System provides the platform capacity to the control system.

If the LSS system senses an overload condition, boom functions will be disabled, the overload indicator is illuminated at both control stations, and the overload alarm will sound. Reduce the weight in the platform to not exceed the rated workload indicated on the capacity decal, then the controls will work again.

Stability

Machine stability is based on two (2) conditions which are called FORWARD and BACKWARD stability. The machine's position of least FORWARD stability is shown in Figure 4-1., and its position of least BACKWARD stability is shown in Figure 4-2.

WARNING

TO AVOID FORWARD OR BACKWARD TIPPING, DO NOT OVERLOAD MACHINE OR OPERATE THE MACHINE BEYOND THE LIMIT OF THE MAXIMUM OPERATING SLOPE.

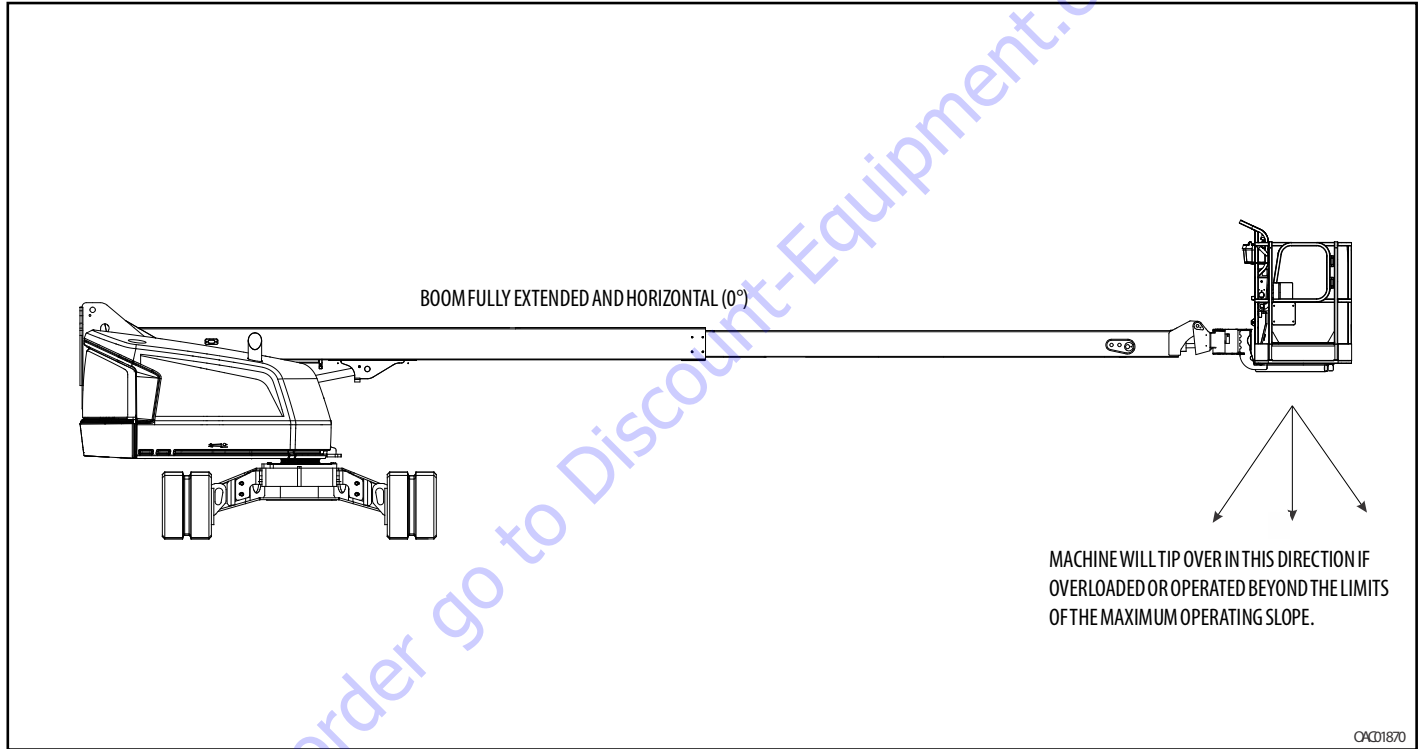


Figure 4-1. Position of Least Forward Stability

SECTION 4 - MACHINE OPERATION

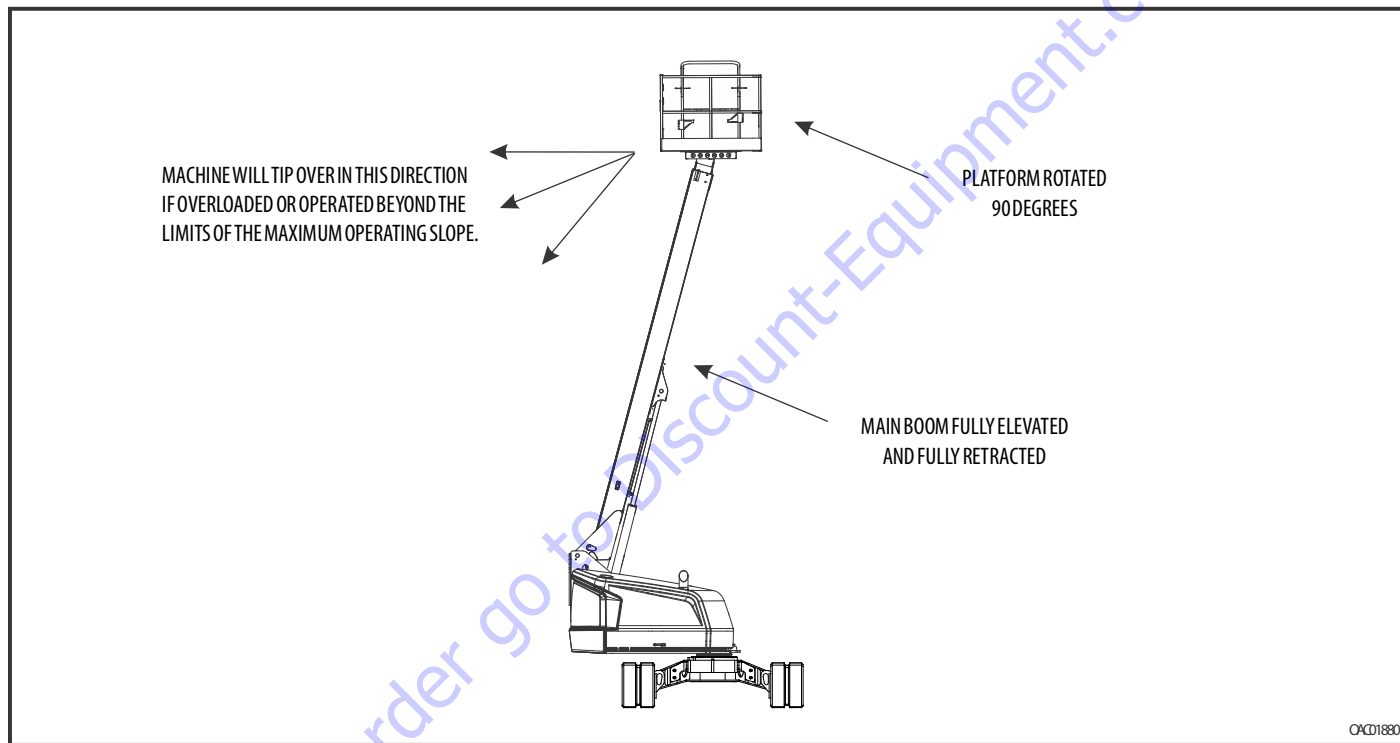


Figure 4-2. Position of Least Backward Stability


4.7 ENGINE OPERATION

NOTE: When operating a machine at high altitudes, a decrease in the machine performance may occur due to a decrease in air density.

NOTE: When operating a machine at high ambient temperatures, a decrease in machine performance and an increase in engine coolant temperature may occur.

NOTE: Contact JLG Customer Service for operation under abnormal conditions.

NOTE: Initial starting should always be performed from the Ground Control console.

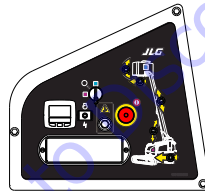

Starting Procedure

CAUTION

IF ENGINE FAILS TO START PROMPTLY, DO NOT CRANK FOR AN EXTENDED TIME. SHOULD ENGINE FAIL TO START AGAIN, ALLOW STARTER TO "COOL OFF" FOR 2-3 MINUTES. IF ENGINE FAILS AFTER SEVERAL ATTEMPTS, REFER TO ENGINE MAINTENANCE MANUAL.

NOTE: Diesel engines only: After turning on ignition, operator must wait until glow plug indicator light goes out before cranking engine.

1. Turn Platform/Ground Select key switch to Ground.
2. Pull Power/Emergency Stop switch to On.



SECTION 4 - MACHINE OPERATION

3. Push Engine Start switch until engine starts.



CAUTION

ALLOW ENGINE TO WARM-UP FOR A FEW MINUTES AT LOW SPEED BEFORE APPLYING ANY LOAD.

 
4. After engine has had sufficient time to warm up, push in Power/Emergency Stop switch and shut engine off.



5. Turn Platform/Ground Select key switch to Platform.



6. From Ground Control Console, pull Power/Emergency Stop switch out.



7. From Platform Control Console, pull Power/Emergency Stop switch out.



8. Push Engine Start switch until engine starts.



NOTE: Footswitch must be in released (up) position before starter will operate. If starter operates with footswitch in depressed position, DO NOT OPERATE MACHINE.

Shutdown Procedure

CAUTION

IF AN ENGINE MALFUNCTION CAUSES AN UNSCHEDULED SHUTDOWN, DETERMINE THE CAUSE AND CORRECT IT BEFORE RESTARTING THE ENGINE.

1. Remove all load and allow engine to operate at low speed for 3-5 minutes; this allows further reduction of internal engine temperature.
2. Push Power/Emergency Stop switch in.



3. Turn Platform/Ground Select key switch to Off.

Refer to Engine Manufacturer's manual for detailed information.



Fuel Reserve / Shut-Off System

NOTE: Reference the Service and Maintenance Manual along with a qualified JLG Mechanic to verify your machine setup.

The Fuel Shutoff System monitors the fuel in the tank and senses when the fuel level is getting low. The JLG Control System automatically shuts the engine down before the fuel tank is emptied unless the machine is set up for Engine Restart.

If fuel level reaches the Empty range, the Low Fuel light will begin to flash once a second and there will be approximately 60 minutes of engine run time left. If the system is in this condition and automatically shuts down the engine or if the operator manually shuts down the engine before the 60 minute run time is complete, the Low Fuel light will flash 10 times a second and the engine will react according to machine setup. Setup options are as follows:



- Engine One Restart - When the engine shuts down, the operator will be permitted to cycle power and restart the engine once with approximately 2 minutes of run time. After the 2 minute run time is complete or if the engine is shut down by the operator prior to the completion of the 2 minute run time, it cannot be restarted until fuel is added to the tank.

- Engine Restart - When the engine shuts down, the operator will be permitted to cycle power and restart the engine for approximately 2 minutes of run time. After the 2 minutes of run time is complete, the operator may cycle power and restart the engine for an additional 2 minutes of run time. The operator can repeat this process until there is no more fuel available.

NOTICE

CONTACT A QUALIFIED JLG MECHANIC IF THE MACHINE NEEDS RESTARTED AFTER NO MORE FUEL IS AVAILABLE.

- Engine Stop - When the engine shuts down, no restarts will be permitted until fuel is added to the tank.

4.4 DIESEL PARTICULATE FILTER (IF EQUIPPED)

Diesel Particulate Filter (DPF) is an emissions control system used in diesel engines and requires operator interaction to make sure proper operation of the system.

For peak operation, the DPF system must be cleaned using one of two methods, Standstill Cleaning and Maintenance Standstill Cleaning. Standstill Cleaning is any cleaning requested by the engine outside of the regular maintenance window (for example, if the system detects excessive soot in the DPF canister). Maintenance Standstill Cleaning is cleaning requested by the engine on the regular maintenance interval.

NOTE: *The system will reset the maintenance interval back to zero hours after Standstill or Maintenance Standstill Cleaning events are performed.*

Standstill Cleaning


The following conditions must be met to perform Standstill Cleaning.

- Machine must be stationary
- Boom in the stowed position
- No personnel in platform
- Engine must be idling
- Coolant temperature must be above 104° F (40° C)
- Machine in Ground Station mode



1. The Diesel Particulate Filter (DPF) Indicator on the Platform Control Panel will flash when standstill cleaning is required.
2. Move the machine to an suitable area free of flammables and personnel that could be exposed to hot exhaust.



3. Launch the cleaning process by pressing the DPF button on the Ground Console for 3 seconds. The Indicator Gauge will display the following screen.

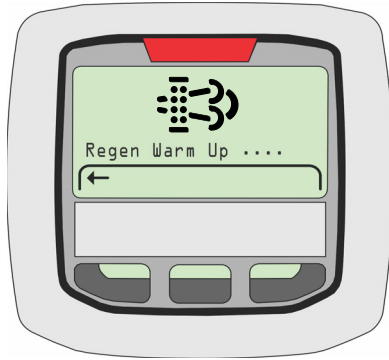

4. The Main Cleaning process will begin and last for approximately 30 to 60 minutes. The following screen will show that the process has begun and includes a status bar that indicates the progress of the cleaning process.

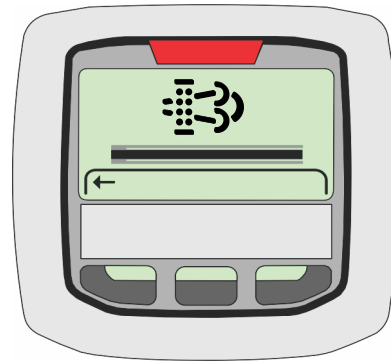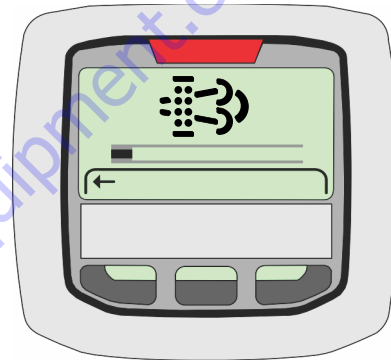

SECTION 4 - MACHINE OPERATION

5. After the cleaning process is complete, the engine will run for approximately 5 minutes to allow the Engine and Exhaust After Treatment (EAT) to cool down. The Indicator Gauge will display the "Regen Complete" screen as shown and the Emissions Temperature indicator will no longer be illuminated.



Maintenance Standstill Cleaning Initiation Methods


Maintenance Standstill Cleaning can be started by one of two methods, by using the Analyzer or the DPF button on the Ground Console. All the same conditions as outlined under Standstill Cleaning must be met.

Canceling Maintenance Standstill

Maintenance Standstill Cleaning will be stopped immediately if:

- The Platform/Ground Select switch is switched from Ground to Platform mode
- Any function switch is enabled to perform a boom function
- The Engine is powered down

If Maintenance Standstill Cleaning is interrupted, it must be re-initiated and the Indicator Gauge will display the "Regen Failed" screen as shown.

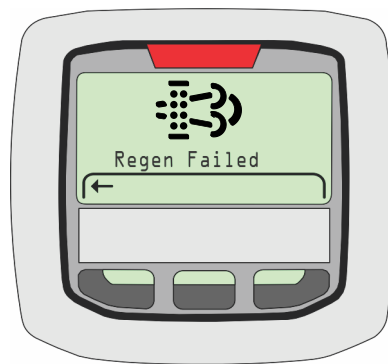


Unsuccessful Cleaning Event

If there is an unsuccessful cleaning event, the DPF icon will show on the display gauge. Possible causes of an Unsuccessful Cleaning Event are:

- Engine is not warmed up
- DEF tank is frozen
- Machine functions operated during cleaning event in progress
- Other engine faults are active


The Gauge will display "Regen Failed" screen as shown. If the cleaning event has failed, the process must be repeated.

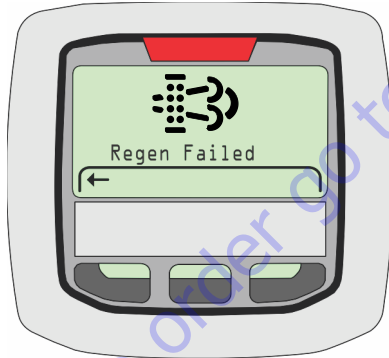

DPF Filter Replacement due to Ash Load

The DPF collects non-burnable particulates which cannot be removed by the Standstill Cleaning process. Build up of the ash load requires filter maintenance and/or exchange.

DPF filter maintenance or exchange requirement is indicated by the DPF Exchange icon shown on the display gauge.

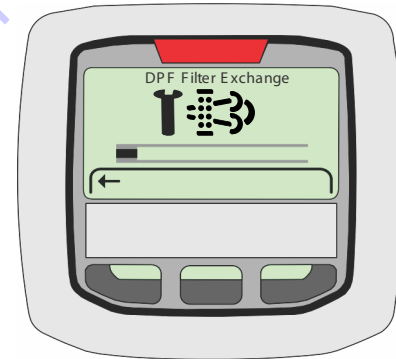

SECTION 4 - MACHINE OPERATION

Table 4-1. Ash Load DPF Filter Replacement

















	Ash Load	DPF Filter Exchange Indicator	Engine Error Indicator	Derate
Normal Operation	<100%	--	--	None
Filter Exchange Required	$\geq 100\%$		--	None
Warning Level	$\geq 105\%$	Blinking 	--	None
Warning Level	$\geq 110\%$	Blinking 	Continuous 	Machine placed in Creep and DTC active. Contact Deutz Dealer













Table 4-2. Maintenance Standstill Cleaning

Standstill Cleaning Levels		Machine Hours Since Last Cleaning	Engine Error Indicator	DPF Indicator	Emissions Temperature Indicator*	Derate	Comments
0	Normal Operation	0-500	--	--		None	Between 500 and 650 hours, cleaning cycle can be initiated with JLG analyzer.
		500-650					
1	Standstill Required	650-750	--	Blinking 		None	Engine coolant temperature must be >40° C and machine must be in ground station mode.
2	Warning Level	750-775	Continuous 	Blinking 		Machine placed in Creep and DTC active	
3	Shut Off Level	>775	Blinking 	Rapid Blinking 		Idle Lock. Boom Functions Locked Out and trapped in Transport.	Contact Deutz Dealer
4	Filter Exchange	DPF Regeneration NOT POSSIBLE DPF Filter exchange required	Blinking 	Rapid Blinking 		Idle Lock. Boom Functions Locked Out and trapped in Transport.	

* Emissions Temperature indicator continuously ON during Standstill Cleaning

SECTION 4 - MACHINE OPERATION

Table 4-3. Standstill Cleaning: DPF Filled with Soot

Soot Levels	Soot Load/ Time	DPF Cleaning Initiation Methods	Engine Error Indicator	DPF Indicator	Emissions Temperature Indicator*	Derate	Comments
Normal Operation	<99%	--	--	--		None	--
Standstill Required	100% to 109% or 100 Hours	Switch in JLG Machine or JLG Analyzer	--	Blinking 		None	Will remain in Standstill mode for 100 hours or until the soot load reaches 109%
Warning Level	109% to 125% or 25 Hours	Switch in JLG Machine or JLG Analyzer	Continuous 	Blinking 		Machine placed in Creep and DTC active	Will remain in Warning level (Derate) for 25 hours or until the soot load reaches 125%
Shut Off Level	125% to 161%	DPF Cleaning Not Possible	Blinking 	Rapid Blinking 		Idle Lock. Boom Functions Locked Out and Trapped in Transport	Contact Deutz Dealer
Filter Exchange	>161%	DPF Cleaning Not Possible	Blinking 	Rapid Blinking 		Idle Lock. Boom Functions Locked Out and Trapped in Transport	

* Emissions Temperature indicator continuously ON during Standstill Cleaning

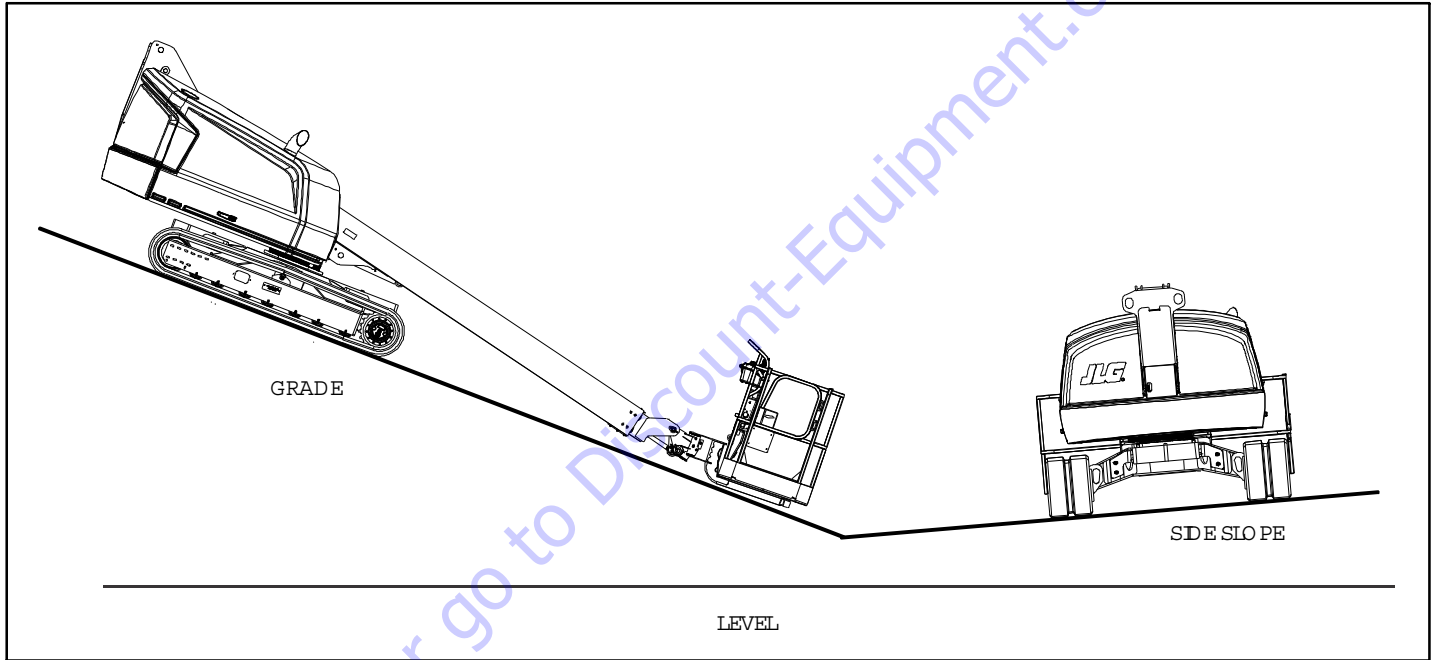


Figure 4-3. Grade and Side Slopes

4.1 TRAVELING (DRIVING)

See Figure 4-3., *Grade and Side Slopes*

NOTE: Refer to the Operating Specifications table for Gradeability and Sideslope ratings.

All ratings for Gradeability and Sideslope are based upon the machine's boom being in the stowed position, fully lowered, and retracted.

Traveling is limited by two factors:

1. Gradeability, which is the percent of grade of the incline the machine can climb.
2. Sideslope, which is the angle of the slope the machine can be driven across.

WARNING

DO NOT DRIVE WITH BOOM ABOVE HORIZONTAL EXCEPT ON A SMOOTH, FIRM SURFACE WITHIN THE LIMITS OF THE MAXIMUM OPERATING SLOPE.

TO AVOID LOSS OF TRAVEL CONTROL OR TIP OVER, DO NOT DRIVE MACHINE ON GRADES EXCEEDING THOSE SPECIFIED IN THE OPERATING SPECIFICATIONS SECTION OF THIS MANUAL.

DO NOT DRIVE ON SIDESLOPES WHICH EXCEED 5 DEGREES.

ENSURE TURNABLE LOCK IS ENGAGED BEFORE BEGINNING ANY EXTENDED TRAVELING.

WARNING

DRIVE SPEED/TORQUE SELECT SWITCH SHOULD BE IN THE BACKWARD POSITION FOR:

- TRAVELING GRADES
- TRAVELING IN DIFFICULT CONDITIONS
- SHARP TURNS (ESPECIALLY WITH ONE TRACK STOPPED)
- COUNTERROTATION

⚠ WARNING

USE EXTREME CAUTION WHEN DRIVING IN REVERSE AND AT ALL TIMES WHEN DRIVING WITH THE PLATFORM ELEVATED. DO NOT USE DRIVE TO MANEUVER PLATFORM CLOSE TO AN OBSTRUCTION. USE ONE OF THE BOOM FUNCTIONS.

BEFORE DRIVING, MAKE SURE THE BOOM IS POSITIONED OVER THE REAR OF THE CHASSIS (OVER FINAL DRIVES AND SPROCKETS). IF THE BOOM IS OVER THE FRONT OF THE CHASSIS (OVER THE IDLER WHEELS) STEER AND DRIVE CONTROLS WILL MOVE IN OPPOSITE DIRECTIONS TO MACHINE CONTROLS.

USE EXTREME CAUTION WHEN APPROACHING THE EDGE OF ANY TERRAIN OBSTACLE. CHECK FOR CURBS, LARGE STONES, OR OTHER TERRAIN OBSTACLES INCLUDING OVERHEAD OBSTACLES AS MACHINE MAY MAKE ABRUPT PIVOTING MOTION WHEN CENTER OF GRAVITY (CENTER OF TRACK FRAME) SHIFTS OVER AN EDGE. TRAVEL SLOWLY OVER OBSTACLES TO MINIMIZE PIVOTING MOTION.

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DEATH OR SERIOUS INJURY.

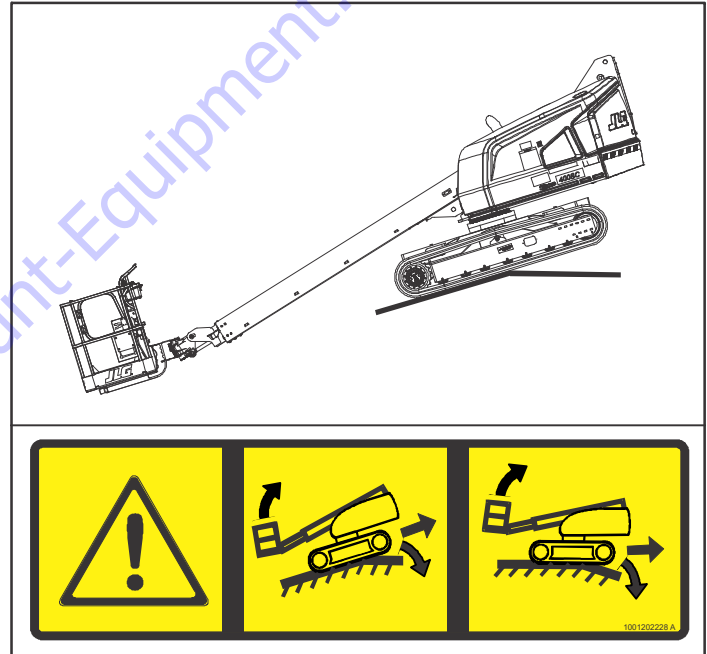
Machine Motion Hazard

Figure 4-4. Machine Motion Hazard

Traveling Forward and Reverse

1. At Platform Controls, with the engine running, pull out Emergency Stop switch and activate footswitch.



 
2. Position Drive control to Forward or Reverse as desired.



3. Depress footswitch, move joystick (Drive/Steer Control) to select desired direction of travel (forward or reverse), move Drive/Steer control to Right for smooth turn to right and Left for smooth turn to left.



4. To obtain sharp turns, move Drive Speed/Torque Select switch to the back position, slow down the travel speed and move the Drive control lever to Right for a turn to the right and to Left for a turn to the left. The sharpest possible turn is achieved when the joystick is in the position to command one track to stop and the other to move slowly.




CAUTION

TURN IN PLACE ONLY IN AN AREA FREE OF OBSTACLES AND ONLY WITH THE BOOM FULLY RETRACTED. USE SLOW, GENTLE CONTROL MOVEMENTS AND DO NOT OPERATE ANY OTHER FUNCTIONS DURING COUNTER-ROTATION.

5. To obtain counter-rotation (turn in place), stop the machine, move the Drive/Steer control lever directly to Right to get clockwise rotation and to Left to get counterclockwise rotation.


6. To obtain maximum travel speed, position the Drive controller to Fast and activate the following switches:

 - a. Position Drive Speed/Torque Select switch to Fast. (Forward Position)



7. Prior to stopping the machine, position switches as follows:

 - a. Position Drive Speed/Torque Select switch to Low. (Backward Position)



8. For traveling up grades, position switches as follows:


- a. Position Drive Speed/Torque Select switch to High. (Backward position)




NOTE: For smoother operation when driving with fully extended boom, place Drive control to Slow before stopping.

This machine is equipped with a Drive Orientation Indicator. The yellow light on the platform control console indicates the boom is swung beyond the rear and machine may Drive/Steer in the opposite direction from control movement. If the indicator is illuminated, operate the Drive function in the following manner:


1. Match black and white direction arrows on both platform control panel and the chassis to determine the direction machine will travel.

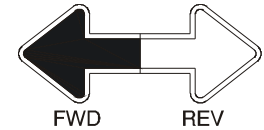

 2. Push and release the Drive Orientation Override switch. Within 3 seconds, slowly move the Drive control toward arrow matching intended direction of machine travel. The indicator light will flash during the 3 second interval until the drive function is selected.




SECTION 4 - MACHINE OPERATION

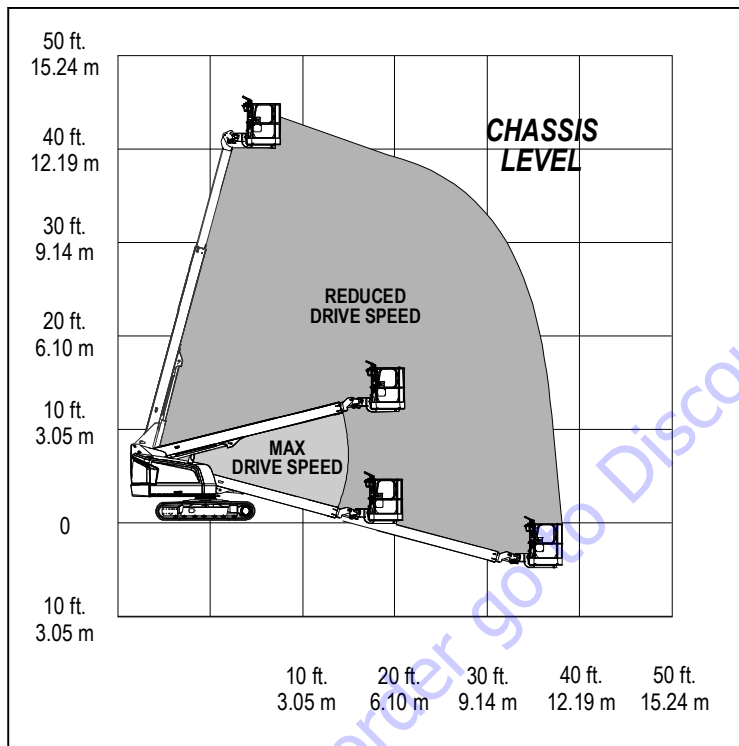

NOTE: In Transport Mode, High Drive will be disabled above 5° elevation or past 0.5 m (1.6 ft) of boom extension.

Figure 4-5. Drive Function Operating Range Diagrams - Sheet 1 of 2

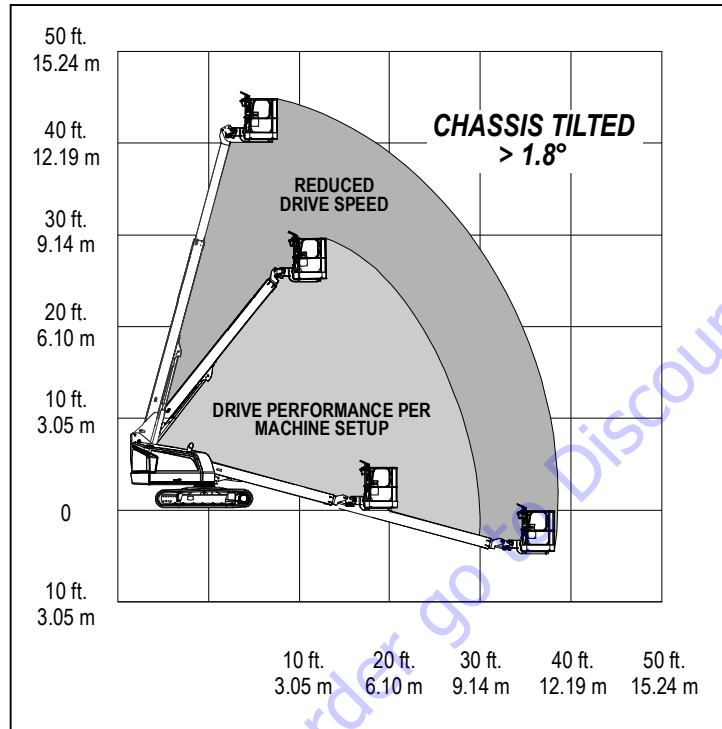

NOTE: In Transport Mode, High Drive will be disabled above 5° elevation or past 0.5 m (1.6 ft) of boom extension.

Figure 4-6. Drive Function Operating Range Diagrams - Sheet 2 of 2

Traveling on a Grade

When traveling on a grade, maximum braking and traction are obtained with the boom stowed, in position over the rear (drive) axle, and in line with the direction of travel. Drive the machine forward when climbing a grade, and in reverse when descending a grade. Do not exceed the machine's maximum rated gradeability.

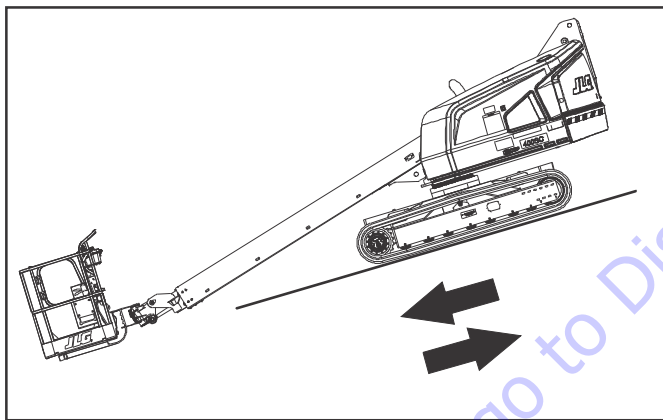


Figure 4-7. Traveling on a Grade

NOTICE

IF THE BOOM IS OVER THE FRONT (STEER) AXLE, DIRECTION OF STEER AND DRIVE MOVEMENT WILL BE OPPOSITE FROM THE MOVEMENT OF THE CONTROLS.

4.2 PLATFORM

Platform Level Adjustment

⚠ WARNING

ONLY USE THE PLATFORM LEVELING OVERRIDE FUNCTION FOR SLIGHT LEVELING OF THE PLATFORM. INCORRECT USE COULD CAUSE THE LOAD/OCCUPANTS TO SHIFT OR FALL. FAILURE TO DO SO COULD RESULT IN DEATH OR SERIOUS INJURY.

To Level Up or Down - Position Platform/Level control switch Up or Down and hold until platform is level.



Platform Rotation

To rotate platform left or right, use the Platform Rotate control switch to select direction and hold until desired position is reached.



4.3 BOOM

⚠ WARNING

A RED TILT WARNING LIGHT IS LOCATED ON THE CONTROL CONSOLE WHICH LIGHTS WHEN THE CHASSIS IS ON AN EXCESSIVE SLOPE. DO NOT SWING OR RAISE BOOM ABOVE HORIZONTAL WHEN LIGHT IS LIT.

DO NOT DEPEND ON TILT ALARM AS A LEVEL INDICATOR FOR THE CHASSIS. TILT ALARM INDICATES CHASSIS IS ON AN EXCESSIVE SLOPE (5 DEGREE OR GREATER). CHASSIS MUST BE POSITIONED WITHIN THE ALLOWABLE OPERATING SLOPE BEFORE SWINGING, OR RAISING BOOM ABOVE HORIZONTAL OR DRIVING WITH THE BOOM ELEVATED.

TO AVOID TIP OVER IF RED TILT WARNING LIGHT LIGHTS WHEN BOOM IS RAISED ABOVE HORIZONTAL, LOWER PLATFORM TO GROUND LEVEL. THEN REPOSITION MACHINE SO THAT CHASSIS IS LEVEL BEFORE RAISING BOOM.

TRAVELING WITH BOOM BELOW HORIZONTAL IS PERMITTED ON GRADES AND SIDE SLOPES SPECIFIED IN THE OPERATING SPECIFICATIONS SECTION OF THIS MANUAL.

⚠ WARNING

TO AVOID SERIOUS INJURY, DO NOT OPERATE MACHINERY IF ANY CONTROL LEVER OR TOGGLE SWITCH CONTROLLING PLATFORM MOVEMENT DOES NOT RETURN TO THE 'OFF' OR NEUTRAL POSITION WHEN RELEASED.

⚠ CAUTION

TO AVOID A COLLISION AND INJURY IF PLATFORM DOES NOT STOP WHEN A CONTROL SWITCH OR LEVER IS RELEASED, REMOVE FOOT FROM FOOTSWITCH OR USE EMERGENCY STOP SWITCH TO STOP THE MACHINE.

Swinging the Boom

To swing boom, use Swing control switch to select Right or Left direction.



NOTICE

WHEN SWINGING THE BOOM MAKE SURE THERE IS AMPLE ROOM FOR THE BOOM TO CLEAR SURROUNDING WALLS, PARTITIONS, AND EQUIPMENT.

 
Raising and Lowering the Main Boom

To raise or lower the Main Boom, use Main Boom Lift controller to select Up or Down movement until desired height is reached.



Telescoping the Main Boom

To extend or retract the main boom, use the Main Telescope Control Switch to select In or Out movement.



Raising and Lowering the Jib (If Equipped)

To raise or lower the Jib, use Jib Lift control to select Up or Down until desired height is reached.



4.4 FUNCTION SPEED CONTROL

This control affects the speed of Telescope and Jib Lift. Turning the knob all the way counter-clockwise until it clicks puts Drive, Main Lift, Platform Rotate, and Swing into Creep mode.



4.5 MACHINE SAFETY SYSTEM OVERRIDE (MSSO) (IF EQUIPPED)

The Machine Safety System Override (MSSO) is used to override function controls for Emergency Platform Retrieval only. Refer to Section 5.4, Machine Safety System Override (MSSO) (If Equipped) for operating procedures.



4.6 SKYGUARD OPERATION


SkyGuard provides enhanced control panel protection. When the SkyGuard sensor is activated, functions in use at the time of actuation will reverse or cutout. The SkyGuard Function Table provides more details on these functions.

During activation, the horn will sound and the SkyGuard beacon (if equipped) will illuminate until sensor and footswitch are disengaged.


If the SkyGuard sensor remains activated after function reversal or cutout, depress and hold the SkyGuard Override Switch to allow normal functions until the sensor is disengaged.

Consult the following illustrations to determine which type of SkyGuard the machine has and how it is activated. Regardless of type, SkyGuard function according to the SkyGuard Function Table does not change.

SkyGuard

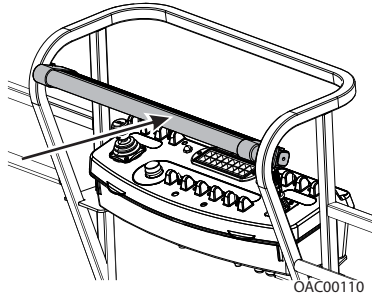


Approximately 50 lb (222 Nm) of force is applied to yellow bar.

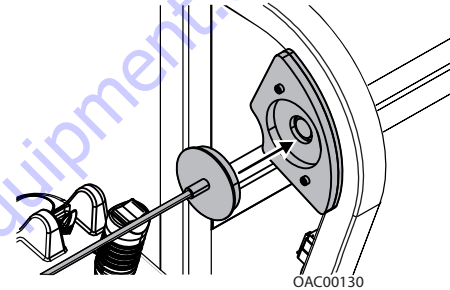


Reattach magnetic end of cable to bracket if it becomes disconnected.

SkyGuard - SkyLine

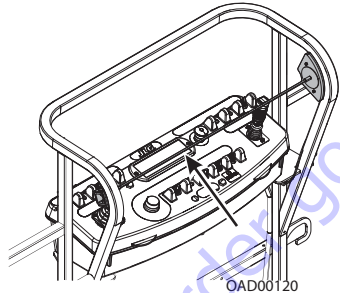

Cable is pressed, breaking the magnetic connection between the cable and right bracket.

SkyGuard - SkyEye

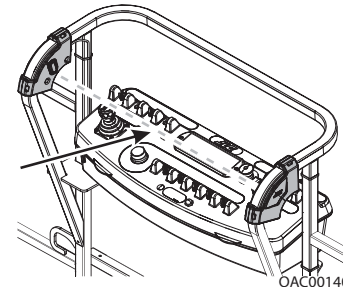

Operator passes through path of sensor beam.

SkyGuard Function Table

Drive Forward	Drive Reverse	Steer	Swing	Boom Lift Up	Boom Lift Down	Boom Tele Out	Boom Tele In	Jib Lift	Basket Level	Basket Rotate
C	C	C	R	R	R	R	C	C	C	C
R= Indicates Reversal is Activated										
C= Indicates Cutout is Activated										

4.7 SHUT DOWN AND PARK

Shut Down and Park

The procedures to shut down and park the machine are as follows:

1. Drive machine to a reasonably well protected area.

NOTE: *When parking on frozen ground overnight, drive machine up on boards to prevent freezing to ground.*

2. Ensure boom is fully retracted and lowered over rear axle.
3. Shut down Emergency Stop at Platform Controls.
4. Shut down Emergency Stop at Ground Controls. Position Platform/Ground Select switch to center OFF (center position).
5. If necessary, cover Platform Controls to protect instruction placards, warning decals, and operating controls from hostile environment.

NOTICE

IF PARKING A MEWP WITH THE BOOM ELEVATED IN AN EFFORT TO CONSERVE SPACE, BOOMS MAY BE ELEVATED, BUT SHALL NOT BE EXTENDED. IT IS THE OPERATOR'S RESPONSIBILITY TO ENSURE ALL SAFETY PRECAUTIONS IN SECTION 1 OF THIS MANUAL ARE FOLLOWED FOR EACH UNIQUE SITUATION.

SECTION 4 - MACHINE OPERATION

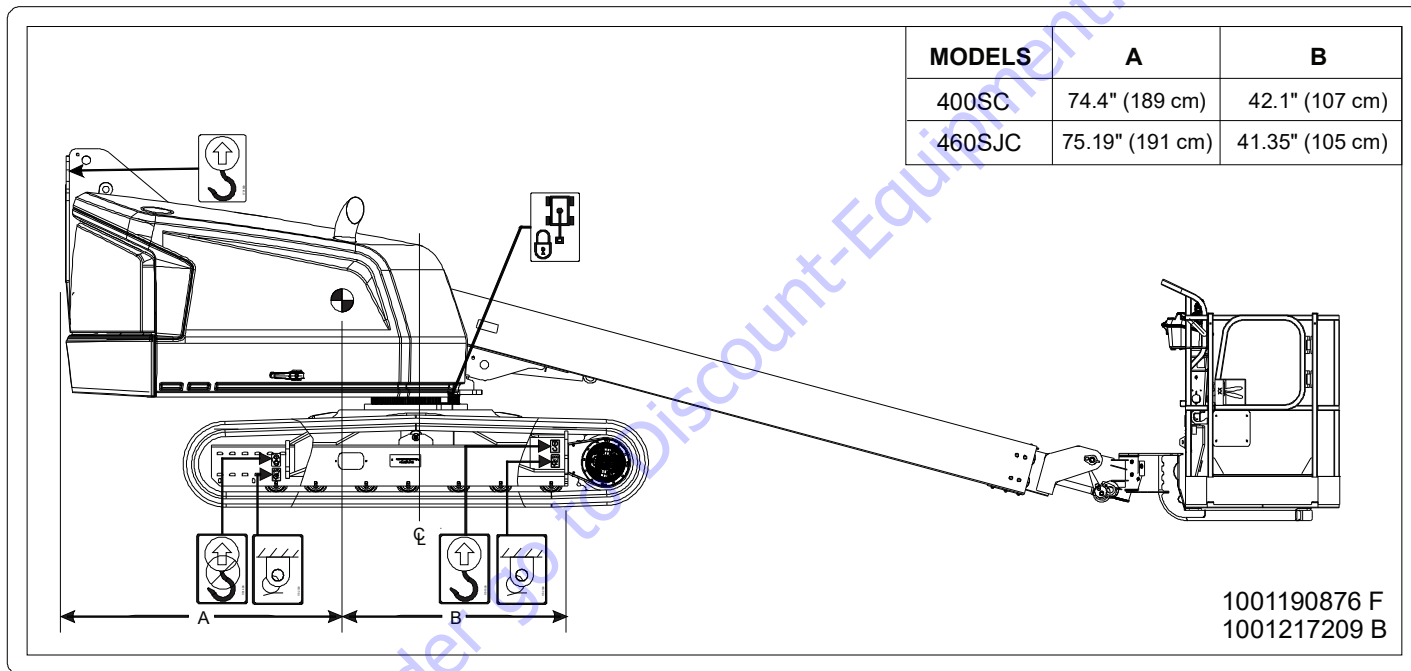


Figure 4-8. Lifting and Tie Down Chart

4.8 LIFTING AND TIE DOWN

(See Figure 4-8.)

Lifting

1. Refer to Serial Number Plate, Specifications section of this manual, or weigh the individual unit to determine Gross Vehicle Weight.
2. Place boom in stowed position.
3. Remove all loose items from machine.
4. Properly adjust rigging to prevent damage to machine and keep machine level.

Tie Down


NOTICE

WHEN TRANSPORTING THE MACHINE IN THE STOWED POSITION, THE BOOM MUST BE FULLY LOWERED INTO THE BOOM REST.

NOTE: *Putting the platform in certain positions for transporting may cause an LSS activation that restricts normal boom functions. To resolve this LSS activation, use the auxiliary power from the ground control console to place the platform in the desired position. Use of the MSSO will result in a MSSO fault.*

1. Place boom in stowed or storage position.
2. Remove all loose items from machine.
3. Secure chassis and platform using straps or chains of adequate strength.

SECTION 4 - MACHINE OPERATION

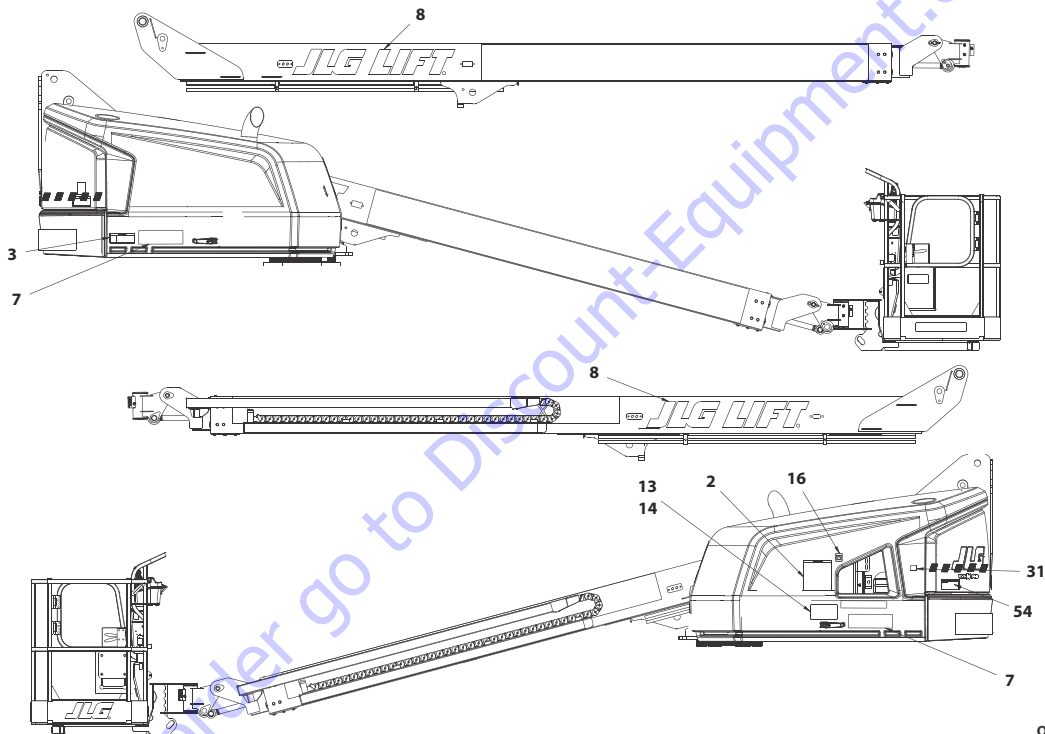

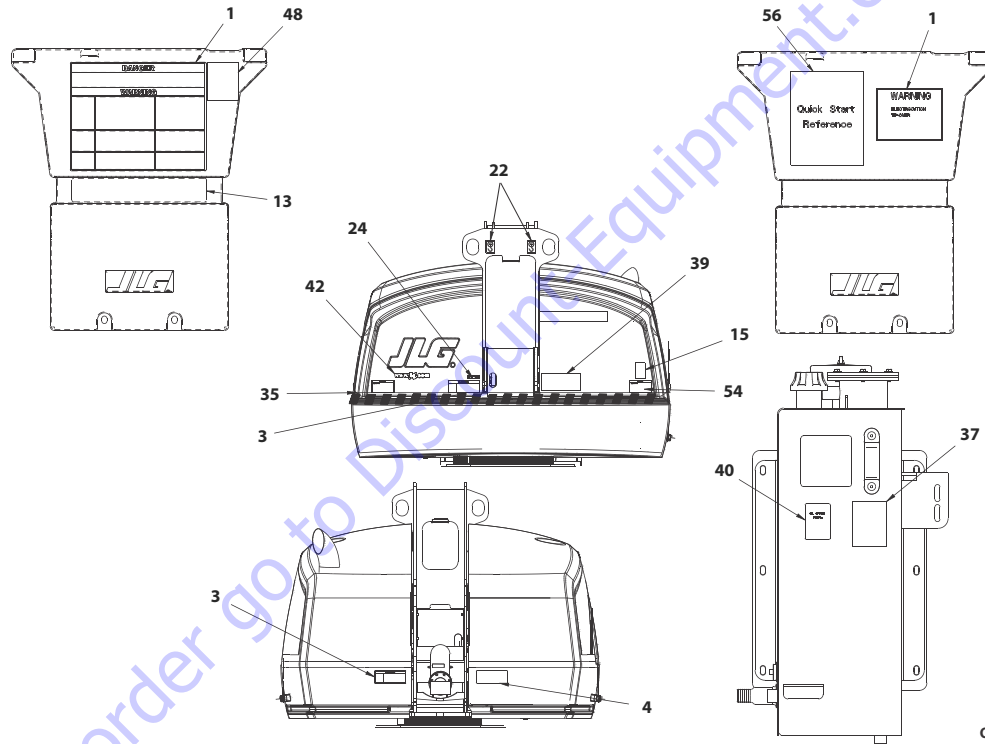


Figure 4-10. Decal Location - Turntable - Sheet 2 of 3

OAC001190

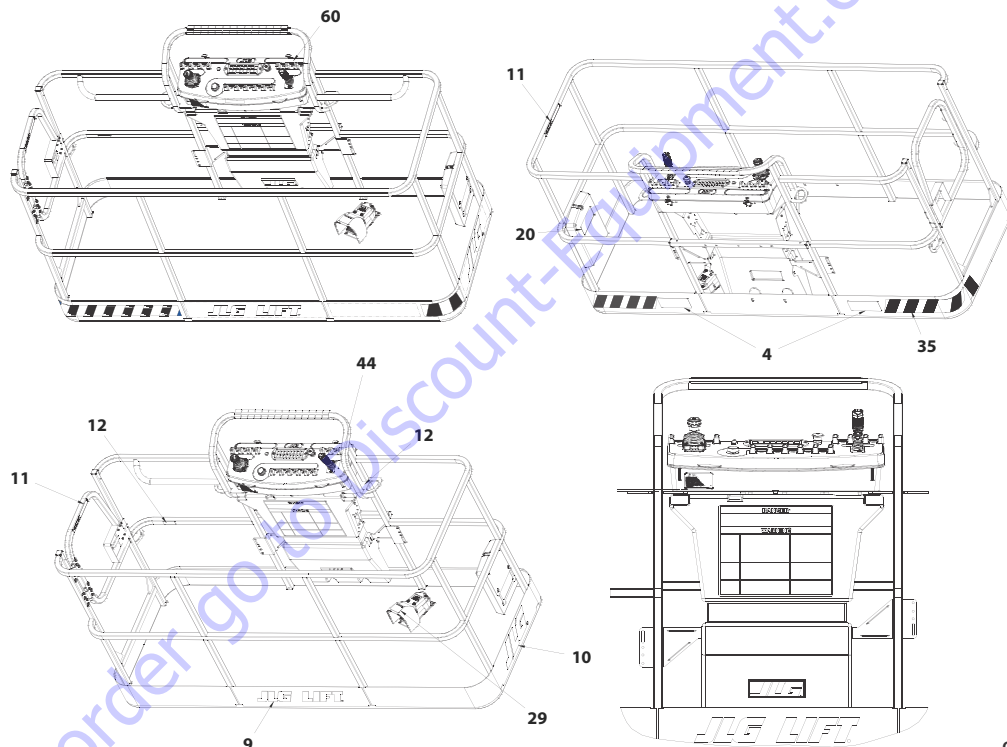


Figure 4-11. Decal Location - Turntable - Sheet 3 of 3

OAC01240

Table 4-4. Decal Legend - 400SC Turntable

Item	ANSI 1001239558-A	CSA 1001239335-A	Korean 1001239567-A	CE 1001250835-A	Eng/Japan 1001239585-A
1	1703797	1703924	1703927	1705921	1703926
2	1703798	1703930	1703933	1705822	1703932
3	1703805	1703936	1703939	1705961	1703938
4	1703804	1703948	1703951	1701518	1703950
7	1001190874	1001190874	1001190874	1001190874	1001190874
8	1702861	1702861	1702861	1001159323	1702861
9	1702774	1702774	1702774	--	1702774
10	1702773	1702773	1702773	1702773	1702773
11	1702868	1704000	--	--	--
12	1704277	1704277	1704277	1704277	1704277
13	1001254665	1001254667	1001254669	1001185237	1001254677
14	1001254666	1001254668	1001254670	--	1001254678
15	--	--	--	1001204510	--
16	1701504	1701504	1701504	1701504	1701504
20	1701509	1701509	1701509	1701509	1701509
22	1701500	1701500	1701500	1701500	1701500
24	3251243	3251243	--	--	--
29	3252347	1703984	1703981	1705828	1703980

SECTION 4 - MACHINE OPERATION

Table 4-4. Decal Legend - 400SC Turntable

Item	ANSI 1001239558-A	CSA 1001239335-A	Korean 1001239567-A	CE 1001250835-A	Eng/Japan 1001239585-A
35	4420051	4420051	4420051	4420051	4420051
37	1704174	1704174	1704174	1704174/1704175	1704174
39	1001190876	1001190876	1001190876	1001190876	1001190876
40	1704412	1704412	1704412	1704412	1704412
42	1704885	1704885	1704885	--	1704885
54	1703953	1703942	1703945	--	1703944
55	1001143852	--	1001143852	1001143852	1001143852
60	1001184618	1001184618	1001184618	1001184618	1001184618

Table 4-5. Decal Legend - 460SJC Turntable

Item	ANSI 1001239561-A	CSA 1001239336-A	Korean 1001239582-B	CE 1001250836-A	Eng/Japan 1001239594-B
1	1703797	1703924	1703927	1705921	1703926
2	1703798	1703930	1703933	1705822	1703932
3	1703805	1703936	1703939	1705961	1703938
4	1703804	1703948	1703951	1701518	1703950
7	1001217208	1001217208	1001217208	1001217208	1001217208
8	1702861	1702861	1702861	1001159323	1702861
9	1702774	1702774	1702774	--	1702774
10	1702773	1702773	1702773	1702773	1702773
11	1702868	1704000	--	--	--
12	1704277	1704277	1704277	1704277	1704277
13	1001254750	1001254751	1001254752	1001171339	1001254756
15	--	--	--	1001204510	--
16	1701504	1701504	1701504	1701504	1701504
20	1701509	1701509	1701509	1701509	1701509
22	1701500	1701500	1701500	1701500	1701500
24	3251243	3251243	--	--	--
29	3252347	1703984	1703981	1705828	1703980
35	4420051	4420051	4420051	4420051	4420051

SECTION 4 - MACHINE OPERATION

Table 4-5. Decal Legend - 460SJC Turntable

Item	ANSI 1001239561-A	CSA 1001239336-A	Korean 1001239582-B	CE 1001250836-A	Eng/Japan 1001239594-B
37	1704174	1704174	1704174	1704174/1704175	1704174
39	1001217209	1001217209	1001217209	1001217209	1001217209
40	1704412	1704412	1704412	1704412	1704412
42	1704885	1704885	1704885	--	1704885
54	1703953	1703942	1703945	--	1703944
60	1001184618	1001184618	1001184618	1001184618	1001184618

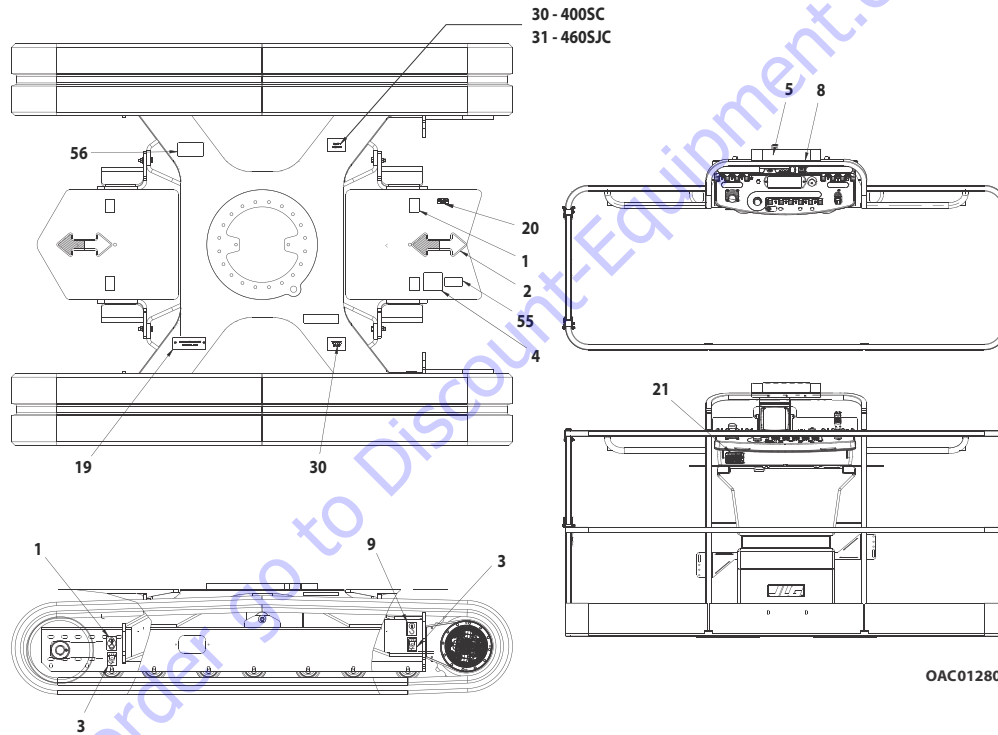


Figure 4-12. Decal Location - Chassis

SECTION 4 - MACHINE OPERATION

Table 4-6. Decal Legend - 400SC & 460SJ Chassis

Item	ANSI 1001227662-A	CSA 1001227695-A	Korean 1001227698-A	CE 1001191076-E	Eng/Japan 1001215290-C
1	1701499	1701499	1701499	1701499	1701499
2	1701529	1701529	1701529	1701529	1701529
3	1702300	1702300	1702300	1702300	1702300
4	1702631	1702631	1702631	1702631	1702631
5	1704468	1001093684	1001215286	1001202228	1001215285
8	3820001	3820001	3820001	3820001	3820001
9	1701500	1701500	1701500	1701500	1701500
18	1001131269	1001131269	1001131269	--	--
19	1001253997	1001253997	1001253997	1001253993	1001253997
20	1001223453	1001223453	--	--	--
21	1001231801	--	--	--	--
30	1001201127	1001201127	1001201127	1001201127	1001201127
31	1001217210	1001217210	1001217210	1001217210	1001217210
55	1001143852	--	1001143852	1001143852	1001143852
56	1001253055	1001223971	1001224048	--	1001224053

SECTION 5. EMERGENCY PROCEDURES

5.1 GENERAL

This section explains steps to be taken in case of an emergency situation while operating.

5.2 INCIDENT NOTIFICATION

JLG Industries, Inc. must be notified immediately of any incident involving a JLG product. Even if no injury or property damage is evident, the factory should be contacted by telephone and provided with all necessary details.

- USA: 877-JLG-SAFE (554-7233)
- EUROPE: (32) 0 89 84 82 20
- AUSTRALIA: (61) 2 65 811111
- E-mail: ProductSafety@JLG.com

Failure to notify manufacturer of an incident involving a JLG Industries product within 48 hours of such an occurrence may void any warranty consideration on that particular machine.

NOTICE

FOLLOWING ANY INCIDENT, THOROUGHLY INSPECT MACHINE AND TEST ALL FUNCTIONS FIRST FROM GROUND CONTROLS, THEN FROM PLATFORM CONTROLS. DO NOT LIFT ABOVE 3 M (10 FT) UNTIL YOU ARE SURE ALL DAMAGE HAS BEEN REPAIRED, IF REQUIRED, AND ALL CONTROLS ARE OPERATING CORRECTLY.

5.3 EMERGENCY OPERATION

Operator Unable to Control Machine

IF THE PLATFORM OPERATOR IS PINNED, TRAPPED OR UNABLE TO OPERATE OR CONTROL MACHINE:

1. Other personnel should operate machine from ground controls only as required.
2. Other qualified personnel on platform may use platform controls. DO NOT CONTINUE OPERATION IF CONTROLS DO NOT FUNCTION PROPERLY.
3. Cranes, forklift trucks or other equipment can be used to stabilize motion of the machine.

Platform or Boom Caught Overhead

If the platform or boom becomes jammed or snagged in overhead structures or equipment, do the following:

1. Shut off the machine.
2. Rescue all people in the platform before freeing the machine. Personnel must be out of the platform before operating any controls on the machine.
3. Use cranes, forklifts, or other equipment to stabilize motion of the machine to prevent a tip over as required.
4. From the ground controls, use the Auxiliary Power System (if equipped) to carefully free the platform or boom from the object.
5. Once clear, restart the machine and return the platform to a safe position.
6. Inspect the machine for damage. If the machine is damaged or does not operate properly, turn off the machine immediately. Report the problem to the proper maintenance personnel. Do not operate the machine until it is declared safe for operation.

5.4 MACHINE SAFETY SYSTEM OVERRIDE (MSSO) (IF EQUIPPED)

The Machine Safety System Override (MSSO) is only to be used to retrieve an operator that is pinned, trapped, or unable to operate the machine. The MSSO will override function controls that are locked out from the platform and ground consoles. An example of this would be in the case of Load Sense System activation.



NOTE: If the MSSO functionality is used, the fault indicator is set with a fault code in the JLG Control System which must be reset by a qualified JLG Service Technician.

NOTE: No functional checks of the MSSO system are necessary. The JLG Control system will set a Diagnostic Trouble Code if the control switch is faulty.

1. From ground control console, place Platform/Ground Select switch in Ground position.
2. Pull out Power/Emergency Stop control.
3. Start engine or MSSO will function through the Auxiliary Power system.
4. Press and hold MSSO switch and control switch for the desired function.

SECTION 6. ACCESSORIES

Table 6-1. Available Accessories

Accessory	Market			
	ANSI (USA Only)	ANSI	CSA	CE
PipeRacks	√	√	√	√
SkyGlazier™	√	√	√	√
SkyPower™	√	√	√	√
SkyWelder™	√	√	√	√
SoftTouch	√	√	√	√
SkySense™	√	√	√	√

SECTION 6 - ACCESSORIES

Table 6-2. Options/Accessories Relationship Table


ACCESSORY	REQUIRED ITEM	COMPATIBLE WITH (Note 1)	INCOMPATIBLE WITH	INTERCHANGABLE WITH (Note 2)
Pipe Racks		SkyPower™	Soft Touch, SkySense	SkyGlazier™, SkyWelder™
SkyGlazier™		SkyPower™	Pipe Racks, Soft Touch, SkySense	SkyWelder™
SkyPower™		Pipe Racks, SkyGlazier™, SkyWelder™		
SkyWelder™	SkyPower™		Pipe Racks, Soft Touch, SkySense	SkyGlazier™
Soft Touch		SkyPower™	Pipe Racks, SkySense, SkyGlazier™, SkyWelder™	
SkySense™		SkyPower™	Pipe Racks, Soft Touch, SkyGlazier™, SkyWelder™	
Note 1: Any non-"Sky" accessory not listed under "INCOMPATIBLE WITH" is assumed to be compatible.				
Note 2: Can be used on same unit but not simultaneously.				

6.1 FALL ARREST PLATFORM

NOTE: See the JLG External Fall Arrest System manual (PN 3128935) for more detailed information.

The external fall arrest system is designed to provide a lanyard attach point while allowing the operator to access areas outside the platform. Exit/enter the platform through the gate area only. The system is designed for use by one person. Personnel must use fall protection at all times. A full body harness is required with lanyard not to exceed 6 ft (1.8 m) in length, that limits the maximum arrest force to 900 lb (408 kg) for the transfaster type and 1350 lb (612 kg) for the shuttle type fall arrest system.

6.2 PIPE RACKS

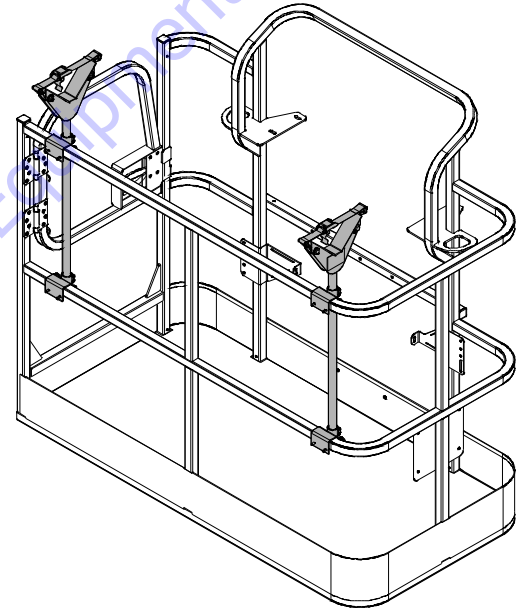

Pipe Racks provide a way to store pipe or conduit inside the platform in order to prevent rail damage and optimize platform utility. This accessory consists of two racks with adjustable straps to secure the load in place.

Safety Precautions

⚠ WARNING

REDUCE PLATFORM CAPACITY BY 100 LB (45.5 KG) WHEN INSTALLED.

⚠ WARNING

WEIGHT IN RACKS PLUS WEIGHT IN PLATFORM MUST NOT EXCEED RATED CAPACITY.

NOTICE

THE MAXIMUM LOAD IN THE RACKS IS 180 LB (80 KG) EVENLY DISTRIBUTED BETWEEN THE TWO RACKS.

NOTICE

THE MAXIMUM LENGTH OF MATERIAL IN RACKS IS 20 FT (6.1 M).

- Ensure no personnel are beneath the platform.
- Do not exit platform over rails or stand on rails.
- Do not drive machine without material secured
- Return racks to the stowed position when not in use.
- Use this option only on approved models.

Preparation and Inspection


- Ensure racks are secured to the platform rails.
- Replace torn or frayed tie-down straps.

Operation

1. To prepare racks for loading, remove locking pins, rotate each rack 90 degrees from stowed to working position, then secure with locking pins.
2. Loosen and remove tie-down straps. Place material on racks with weight evenly distributed between both racks.
3. Route the tie-down straps at each end across loaded material and tighten.
4. To remove material, loosen and remove tie-down straps, then carefully remove material from racks.

NOTE: *Reinstall tie-down straps across any remaining material before continuing machine operations.*

6.3 SKYGLAZIER™

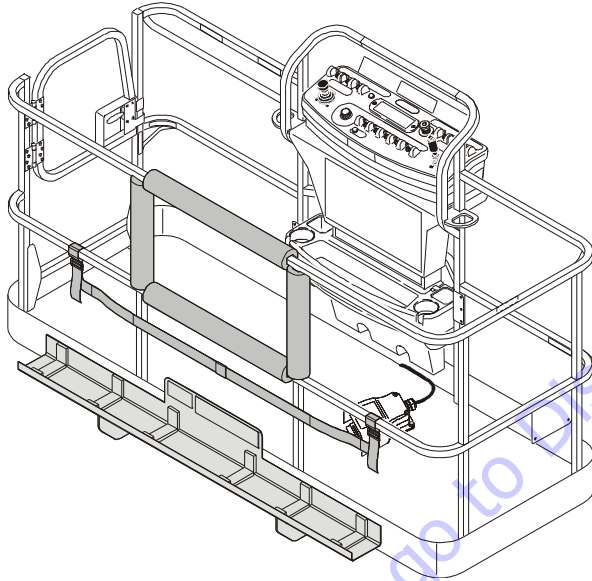

SkyGlazier™ allows glaziers to position panels efficiently. The glazier package consists of a tray that attaches the bottom of the platform. The panel rests on the tray and against top-rail of the platform, which is padded to prevent damage. SkyGlazier™ includes a strap to secure the panel to the platform rail.

Capacity Specifications

Capacity Zone *	Max. Tray Capacity	Max. Platform Capacity (With Max. Weight in Tray)
500 lb (227 kg)	150 lb (68 kg)	250 lb (113 kg)
550 lb (250 kg)	150 lb (68 kg)	250 lb (113 kg)
600 lb (272 kg)	150 lb (68 kg)	250 lb (113 kg)
750 lb (340 kg)	150 lb (68 kg)	440 lb (200 kg)
1000 lb (454 kg)	250 lb (113 kg)	500 lb (227 kg)
* Refer to the capacity decals installed on the machine for capacity zone information.		
Required Platform Type: Side-Entry		
Max. Dimensions of Panel: 32 sq.ft. (3 sq.m.)		

Safety Precautions

WARNING

ENSURE PANEL IS SECURED WITH STRAP.

WARNING

DO NOT OVERLOAD TRAY OR PLATFORM. TOTAL MACHINE CAPACITY IS REDUCED WHEN TRAY IS INSTALLED.

WARNING

WITH SKYGLAZIER™ INSTALLED, THE ORIGINAL PLATFORM CAPACITY RATINGS ARE REDUCED AS SPECIFIED IN THE CAPACITY SPECIFICATIONS TABLE. DO NOT EXCEED NEW PLATFORM CAPACITY RATINGS. REFER TO CAPACITY DECAL LOCATED ON TRAY.

WARNING

AN INCREASE OF THE AREA EXPOSED TO THE WIND WILL DECREASE STABILITY. LIMIT PANEL AREA TO 32 SQ FT (3 SQ M).

- Ensure no personnel are beneath platform.
- Do not exit platform over rails or stand on rails.
- Remove tray when not in use.
- Use this option only on approved models.


Preparation and Inspection

- Check for cracked welds and damage to tray.
- Ensure tray is properly secured to platform.
- Ensure strap is not torn or frayed.

Operation

1. Load SkyGlazier™ tray with panel.
2. Route the adjustable strap around the panel and tighten until secure.
3. Position panel to its desired location.

6.4 SKYPOWER™

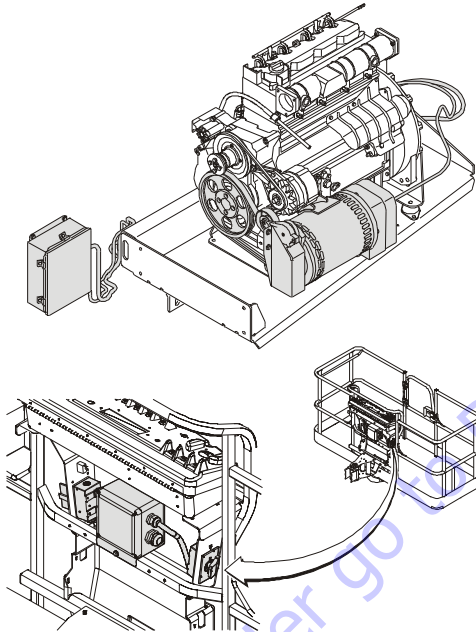

The SkyPower™ system supplies AC power to the platform through an AC receptacle to run tools, lights, cutting, and welding equipment.

All power regulation components are located in a watertight box connected by cable to the generator. The generator supplies power when running at the specified speed with the power switch on (switch is located on platform). A three-pole, 30 Amp circuit breaker protects the generator from overload.

Generator Output

ANSI Specifications:

- 3-phase: 240 V, 60 Hz, 7.5 kW
- 1-phase: 240 V/120 V, 60 Hz, 6 kW

CE Specifications:

- 3-phase: 240 V, 7.5 kW, 18.3 A, 1.0-pf
- 1-phase: 240 V, 6.0 kW, 26 A, 1.0-pf
- 1-phase: 120 V, 6.0 kW, 50 A, 1.0-pf

Peak:

- 3-phase: 8.5 kW
- 1-phase: 6.0 kW

Accessory Ratings

- 3000 rpm (50 Hz)
- 3600 rpm (60 Hz)

Safety Precautions

⚠ WARNING

DO NOT OVERLOAD PLATFORM.

- Ensure no personnel are beneath platform.
- This factory-installed option is available only on specified models.
- Keep lanyard attached at all times.
- Do not use electrical tools in water.
- Use correct voltage for tool being used.
- Do not overload circuit.

Preparation and Inspection


- Ensure generator is secure.
- Check condition of belt and wiring.

Operation

Start the engine, then turn on the generator.

See the Miller Generator Technical Manual (PN 3121677) for more information.

6.5 SKYWELDER™

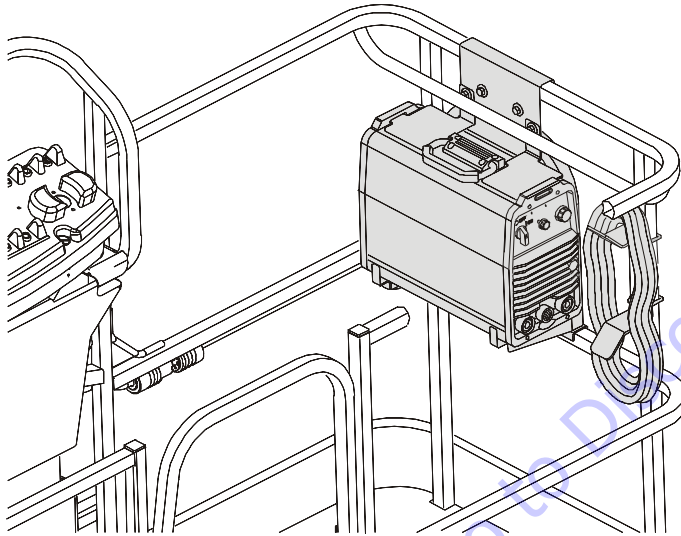

SkyWelder™ is capable of TIG and Stick welding, producing 200 Amps at 100% duty cycle or 250 Amps at 50% duty cycle. This accessory receives power from the SkyPower™ system.

Generator Output

Engine Speed of 1800 rpm +/- 10%.

ANSI Specifications:

- 3-phase: 240 V, 60 Hz, 7.5 kW
- 1-phase: 240 V/120 V, 60 Hz, 6 kW

CE Specifications:

- 3-phase: 400 V, 50 Hz, 7.5 kW
- 1-phase: 220 V, 50 Hz, 6 kW

Welding Accessories

- 12 ft welding leads with clamp and stinger (stored in the platform)
- Fire extinguisher

Accessory Ratings

Welding Mode	Input Power	Rated Output	Welding Amperage Range	Maximum Open Circuit Voltage	Amps Input At Rated Load Output (50/60 Hz)				
					230 V	460 V	575 V	kVa	kW
Stick (SMAW) TIG (GTAW)	3-phase	280 Amp at 31.2V, 35% Duty Cycle	5-250 A	79VDC	32	17	13	15.7	10
		200 Amp at 28V, 100% Duty Cycle			20	11	8	10.3	6.4
	1-phase	200 Amp at 28V, 50% Duty Cycle	5-200 A	79VDC	35	-----	-----	9.8	6.5
		150 Amp at 28V, 100% Duty Cycle			34	-----	-----	6.9	4.4

Safety Precautions

⚠ WARNING

DO NOT OVERLOAD PLATFORM.

⚠ WARNING

DE-RATE THE PLATFORM BY 70 LB (32 KG) WHEN WELDER IS IN THE PLATFORM.

- Check for cracked welds and damage to welder supports.
- Check for proper and secure installation of welder and bracket.
- Ensure no personnel are beneath platform.
- Do not exit platform over rails or stand on rails.
- Use this option only on approved models.
- Keep lanyard attached at all times.
- Ensure correct polarity of leads.
- Wear proper welding apparel.

- Use correct rod size and current settings.
- Do not use electrical cords without ground.
- Do not use electrical tools in water.
- Do not weld to the platform.
- Do not ground through the platform.
- Do not use a high frequency arc starter with TIG welder.

Preparation and Inspection

- Connect ground clamp to metal being welded.
- Ensure there is a good ground connection and observe proper polarity.


Operation

Start the engine, turn on the generator, then turn on the welder.

See the Miller Welder Owner's Manual (PN 3128957) for more information.

6.6 SOFT TOUCH

A padding kit is mounted to the platform rails and to a frame suspended below the platform. Limit switches deactivate platform functions when padded framework contacts an adjacent structure. A button on the platform console allows system override.

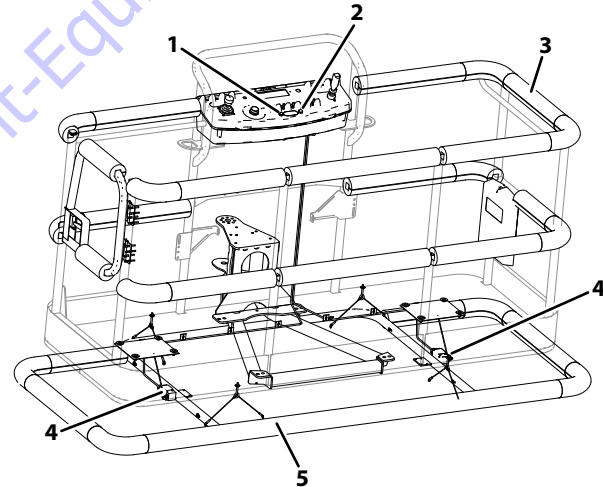

- | | |
|-----------------------------|------------------------------------|
| 1. Override Indicator Light | 4. Limit Switches (2) |
| 2. Override Button | 5. Suspended Frame and Rail Bumper |
| 3. Rail Bumper | |

6.7 SKYSENSE™

WARNING

SKYSENSE IS NOT INTENDED TO REPLACE OR REDUCE THE NEED FOR THE OPERATOR TO BE AWARE OF THE ENVIRONMENT AROUND THE MACHINE. HAZARDS THAT WILL CAUSE SERIOUS INJURY OR DEATH MAY NOT BE PREVENTED OR REDUCED BY SKYSENSE. THE OPERATOR MUST ALWAYS LOOK IN THE DIRECTION OF TRAVEL, AVOID POWER LINES, AVOID OBSTACLES THAT COULD STRIKE THE MACHINE OR PERSONS IN THE PLATFORM, AND FOLLOW ALL INSTRUCTIONS, DECALS, AND OTHER WARNINGS PROVIDED WITH THIS MACHINE.

THE OPERATOR MUST NOT RELY ON SKYSENSE AS A SUBSTITUTE FOR FOLLOWING THE INSTRUCTIONS AND WARNINGS CONTAINED IN THE MANUALS AND PLACARDS PROVIDED WITH THIS MACHINE.

SKYSENSE IS INTENDED TO ASSIST THE OPERATOR. SKYSENSE MAY NOT DETECT CERTAIN OBJECTS DEPENDING ON SHAPE, TYPE OF MATERIAL, OR ORIENTATION OF THE OBJECT TO THE SENSORS. IT IS THE OPERATOR'S RESPONSIBILITY TO BE AWARE OF THEIR SURROUNDINGS AT ALL TIMES.

WARNING

REDUCE THE PLATFORM CAPACITY BY 10 LB (4.5 KG) PER BAR WHEN INSTALLED ON THE PLATFORM.

NOTE: *SkySense is not active when operating the machine from the ground controls.*

Preparation and Inspection

Pre-Operation Inspection:

1. Inspect each of the SkySense tubes for dents, cracks, or other damage.
2. Inspect each SkySense sensor for any damage to the housing or sensor.

To test the SkySense system:

1. Ensure there are no obstructions within 10 feet around or above the platform and the machine is on a smooth, firm surface within the limits of the maximum operating slope.
2. From the platform control console, elevate the boom until the bottom of the platform is at least 6 feet off the ground.
3. Continue to elevate the platform.
4. While elevating, wave your hand over one of the upward facing sensors. The machine should stop, and the LED should be red.
5. Ensure the area below the platform is clear of obstructions and lower the platform. The machine should slow down, (SkySense Status LED will blink yellow with increasing frequency) and stop, (SkySense Status LED will be illuminated solid red) when the bottom of the platform is approximately 1 foot from the ground.

6. Recycle the footswitch and press the override button on the platform control console.
7. Continue to lower the platform. The machine should move in the elevated drive speed mode (SkySense Status LED will remain red).

NOTE: *The SkySense system will not stop machine operation while in Creep.*

Operation

SkySense slows a machine's drive speed to elevated drive speed when it is a certain distance away from an object, known as the "warning zone." If the machine continues to approach the object and moves into the "stop zone," SkySense stops all machine functions.

For proportional functions activated by the joystick, the size of the warning zone varies based on the amount of joystick activation. The stop zone always activates at the same distance from the object regardless of the joystick's position.

If the function has reached the warning zone, release and re-engage to return to normal drive speed in the opposite direction. If the machine has reached the SkySense stop zone, release the function and recycle the footswitch to activate a function in the opposite direction.


SkySense is active during the following functions:

- Boom Lift Up/Down
- Platform Rotate
- Telescope Out
- Swing
- Reverse Drive

NOTE: *During active Drive Orientation System (DOS), SkySense is active when driving in both forward and reverse directions.*

There are two LED indicators on the platform control box that signal SkySense activity.

- **No LED:** Normal operation.
- **LED Flashing Yellow:** Machine is in SkySense warning zone and will reduce to elevated drive height speed. Flash frequency correlates to closeness of object.
- **LED Red:** Machine is in SkySense stop zone and all machine functions will cease.
- **LED Flashing Red:** SkySense sensor is obstructed or damaged. Obstructions must be removed and proper function verified. Damaged sensors must be replaced.

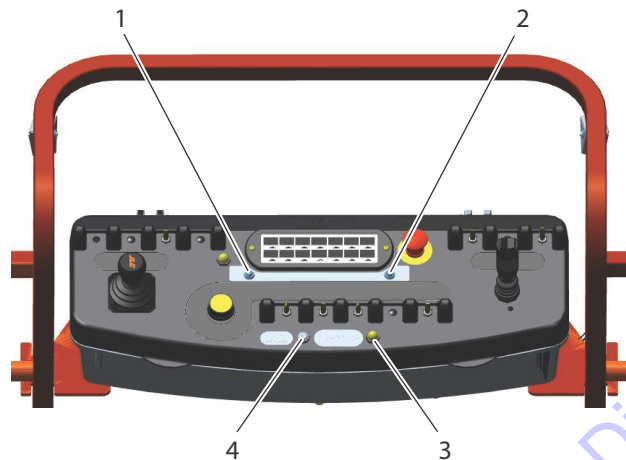

1. LED Indicator Light
2. LED Indicator Light
3. Override Button
4. Mute Speaker Switch

Figure 6-1. SkySense Platform Panel Indicators

SkySense Alarm

Activation of SkySense is signaled by an audible alarm which indicates SkySense activity when reaching the warning or stop zones.

In the warning zone, the audible alarm will pulse and increase in frequency as the machine moves closer to the object. In the stop zone, the alarm will sound a continuous tone.

Additionally, when the machine is in the stop zone, the platform control panel audible alarm will sound. The system may be reset by recycling the footswitch.


The audible SkySense alarms can be muted by a switch on the platform control console, although LEDs will continue to light. The platform control panel alarm will sound when the machine enters the SkySense stop zone even when muted.

Override Button

The yellow override button allows operators to bypass normal SkySense operation in order to move closer to an object in the stop zone.



When the operator overrides the SkySense via the override button to get closer to a work surface, the machine will maintain elevated speed and flash the appropriate indicator color based on location in either the warning or stop zones.

SkySense Coverage Areas

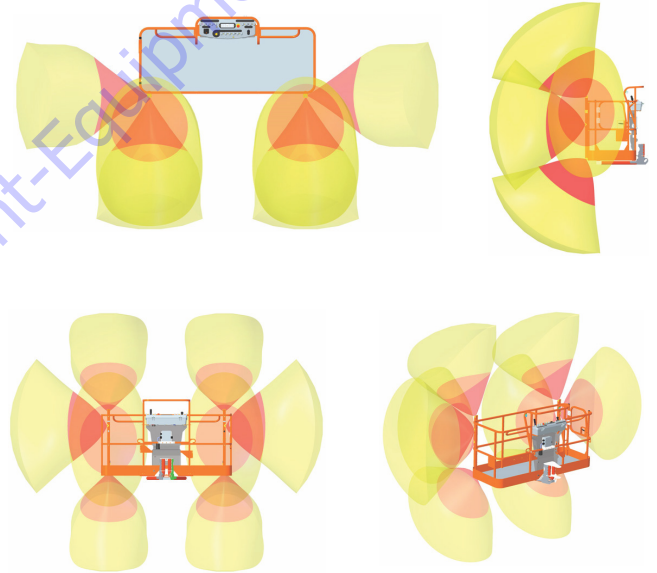

Level 1 (2-Bar)

SECTION 6 - ACCESSORIES

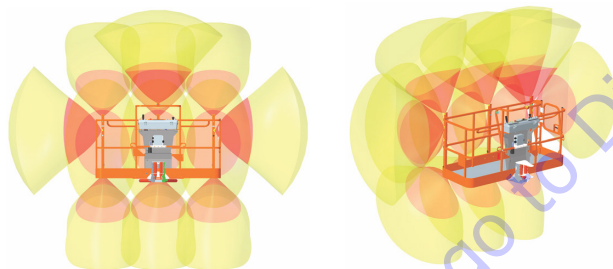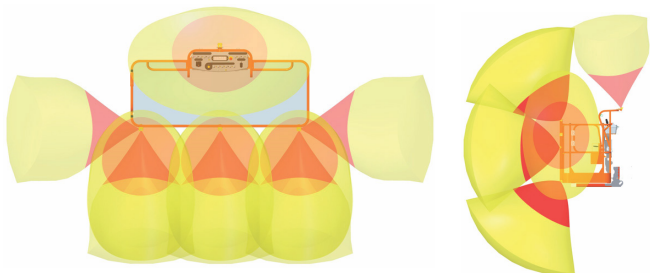

Level2 (3-Bar)

NOTE: Sensor Cones shown are approximations for reference only.

SECTION 7. GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

7.1 INTRODUCTION

This section of the manual provides additional necessary information to the operator for proper operation and maintenance of this machine.

The maintenance portion of this section is intended as information to assist the machine operator to perform daily maintenance tasks only, and does not replace the more thorough Preventive Maintenance and Inspection Schedule included in the Service and Maintenance Manual.

Other Publications Available:

Service and Maintenance Manual 31215019
 Illustrated Parts Manual 31215020

7.2 OPERATING SPECIFICATIONS

Table 7-1. Operating Specifications - 400SC

Maximum Work Load (Capacity):	
Unrestricted	272 kg (600lb)
Restricted	454 kg (1000lb)
Maximum Operating Slope	5°
Maximum Travel Grade, Stowed Position (Gradeability)	51%
Maximum Travel Grade, Stowed Position (Side Slope)	5°
Platform Height:	12.05 m (39 ft-6.5 in)
Horizontal Platform Reach:	10 m (33 ft)
Turning Radius (Outside)	0
Turning Radius (Inside)	0
Overall Width	2.23 m (7 ft-4 in)
Stowed Height:	2.32 m (7 ft-7.5 in ft)
Stowed Length	7.57 m (24ft-10 in)
Wheelbase	2.25 m (7 ft-4.8 in)
Ground Clearance	0.41 m (16 in)

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

Table 7-1. Operating Specifications - 400SC

Ground Bearing Pressure:	3661 kg/m ² (5.21 psi)
Travel Speed	2.57 km/h (1.6 mph)
Rubber Track GVW:	6,604kg (14,559)
Maximum Rubber Track Load	5769 kg (12,718 lb)
Maximum System Voltage	12V
Max. Hydraulic System Operating Pressure	207 bar (3000 psi)
Manual Force (CE)	400 N (90 lb)
Maximum Wind Speed	12.5 m/s (28 mph)
Tailswing	0.96 m (3.14 ft)

Table 7-2. Operating Specifications - 460SJC

Maximum Work Load (Capacity):	272 kg (600lb)
Maximum Operating Slope	5°
Maximum Travel Grade, Stowed Position (Gradeability)	51%
Maximum Travel Grade, Stowed Position (Side Slope)	5°
Platform Height:	13.88 m (45 ft-6.5 in)
Horizontal Platform Reach:	12 m (39 ft)
Turning Radius (Outside)	0 m (0 ft.)
Turning Radius (Inside)	0 m (0 ft.)
Track Width	0.4 m (1.31 ft.)
Overall Width	2.23 m (7 ft-4 in)
Stowed Height:	2.33 m (7 ft-7.2 in ft)
Stowed Length	8.9 m (29ft-3 in)
Wheelbase	2.25 m (7 ft-4.8 in)
Ground Clearance	0.41 m (16 in)
Tailswing	0.96 m (3.14 ft)
Ground Bearing Pressure:	5870 kg/m ² (8.35 psi)
Maximum Travel Speed	2.9 km/h (1.8 mph)

Table 7-2. Operating Specifications - 460SJC

Rubber Track GVW:	8,184 kg (17,998)
Maximum Rubber Track Load	5769 kg (12,718 lb)
Maximum System Voltage	12V
Max. Hydraulic System Operating Pressure	207 bar (3000 psi)
Manual Force (CE)	400 N (90 lb)
Maximum Wind Speed	12.5 m/s (28 mph)

Capacities

Table 7-3. Capacities

Fuel Tank (Usable)	83.3L (22 gal)
Hydraulic Tank (Usable)	136.28L (36 gal)
Final Drive Hub	1 L (33.8 oz)

Engine Data

NOTE: RPM Tolerances are ± 100 .

Table 7-4. Deutz D2011L03

Engine Type	Four-stroke Diesel
Fuel	Diesel
No. of Cylinders	3
Bore	94 mm (3.7 in)
Stroke	112 mm (4.4 in)
Displacement	2331 cm ³ (142 cu. in)
Oil Capacity	
crankcase	6L (6.3 qt)
cooler	3.5L (3.7 qt)
total capacity	9.5L (10 qt)
Low RPM	1200
Mid RPM	
Boom Lift, Telescope	
Swing, Basket Level, Basket	1800
Rotate	1500
High RPM	2800

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

Table 7-5. Deutz 2.9L4

Engine Type	Four-stroke Diesel
Fuel	Diesel
No. of Cylinders	3
Bore	92 mm
Stroke	110 mm
Displacement	2925 cm ³ (178 cu. in.)
Oil Capacity	8.9 L (9.5 qt.)
Coolant Capacity	11.3 L (12 qt.)
Low RPM	1200
High RPM	2600
Max Output Power	34.4 kW (48.8 hp)
Max Output Torque	147 Nm (108 ft.lb.)
Acceptable Fuel Grades	Ultra Low Sulfur (15 ppm) Up to 5% Bio Diesel

Hydraulic Oil

Table 7-6. Hydraulic Oil

Hydraulic System Operating Temperature Range	S.A.E. Viscosity Grade
-18° to +83° C (+0° to + 180° F)	10W
-18° to +99° C (+0° to + 210° F)	10W-20, 10W30
+10° to +99° C (+50° to + 210° F)	20W-20

NOTE: Hydraulic oils must have anti-wear qualities at least to API Service Classification GL-3, and sufficient chemical stability for mobile hydraulic system service. JLG Ind. recommends Mobilfluid 424 hydraulic oil, which has an SAE viscosity index of 152.

NOTE: When temperatures remain consistently below 20° F (-7° C), JLG Industries recommends the use of Mobil DTE-13.

NOTE: Machines may be equipped with Mobil EAL224H biodegradable and non-toxic hydraulic oil. This is Vegetable oil based and possesses the same antiwear and rust protection characteristics as mineral oils, but will not adversely affect the ground water or the environment when spilled or leaked in small amounts. Mobil EAL-224H has a viscosity of 34 cSt at 40° C. and viscosity index of 213. The operating temperature range of this oil is -18° C to +83° C.

Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. If use of hydraulic oil other than standard UTTO is desired, contact JLG Industries for proper recommendations.

Table 7-7. Mobilfluid 424 Specs

SAE Grade	10W30
Gravity, API	29.0
Density, Lb/Gal. 60°F	7.35
Pour Point, Max	-43°C (-46°F)
Flash Point, Min.	228°C (442°F)
Viscosity	
Brookfield, cP at -18°C	2700
at 40° C	55 cSt
at 100° C	9.3 cSt
Viscosity Index	152

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

Table 7-8. Mobil DTE 13M Specs

ISO Viscosity Grade	#32
Specific Gravity	0.877
Pour Point, Max	-40°C (-40°F)
Flash Point, Min.	166°C (330°F)
Viscosity	
at 40°C	33cSt
at 100°C	6.6 cSt
at 100°F	169 SUS
at 210°F	48 SUS
cp at -20°F	6,200
Viscosity Index	140

Table 7-9. UCon Hydrolube HP-50/46

Type	Synthetic Biodegradable
Specific Gravity	1.082
Pour Point, Max	-50°C (-58°F)
pH	9.1
Viscosity	
at 0°C (32°F)	340 cSt (1600SUS)
at 40°C (104°F)	46 cSt (215SUS)
at 65°C (150°F)	22 cSt (106SUS)
Viscosity Index	170

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

Table 7-10. Mobil EAL 224H Specs

Type	Synthetic Biodegradable
ISO Viscosity Grade	32/46
Specific Gravity	.922
Pour Point, Max	-32°C (-25°F)
Flash Point, Min.	220°C (428°F)
Operating Temp.	-17 to 162°C (0 to 180°F)
Weight	0.9 kg/L (7.64 lb/gal)
Viscosity	
at 40°C	37 cSt
at 100°C	8.4 cSt
Viscosity Index	213
NOTE: Must be stored above 14°C (32°F)	

Table 7-11. Mobil EAL H 46 Specs

Type	Synthetic Biodegradable
ISO Viscosity Grade	46
Specific Gravity	.910
Pour Point	-42°C (-44°F)
Flash Point	260°C (500°F)
Operating Temp.	-17 to 162°C (0 to 180°F)
Weight	0.9 kg/L (7.64 lb/gal)
Viscosity	
at 40°C	45 cSt
at 100°C	8.0 cSt
Viscosity Index	153

Table 7-12. Exxon Univis HVI 26 Specs

Specific Gravity	32.1
Pour Point	-60°C (-76°F)
Flash Point	103°C (217°F)
Viscosity	
at 40°C	25.8 cSt
at 100°C	9.3 cSt
Viscosity Index	376
NOTE: Mobil/Exxon recommends to check this oil on a yearly basis for viscosity.	

Critical Stability Weights

Table 7-13. Critical Stability Weights

Component	kg	lb
Battery	30	66
Counterweight (400SC) - Turntable	4812	1060
Counterweight (460SJC) - Turntable	1225	2,700
Counterweight (400SC) - Chassis (Front)	544	1,200
Counterweight (400SC) - Chassis (Rear)	549	1,210
Counterweight (460SJC) - Chassis (Front)	804	1,773
Counterweight (460SJC) - Chassis (Rear)	810.5	1787
Rubber Track (Each) - Excavator Tracks	263	580
Rubber Track (Each) - Carrier Tracks	256	565
Rubber Track (Each) - Non-Marking	254	560
Steel Track - Each	339	747.5
Track Pad - Each	3.5	7.7
Platform and Console - 30 x 60	77	170
Platform and Console - 36 x 72	95	209
Platform and Console - 36 x 96	109	240

Serial Number Location

A serial number plate is affixed to the left side of the frame. If the serial number plate is damaged or missing, the machine serial number is stamped on the left side of the frame.

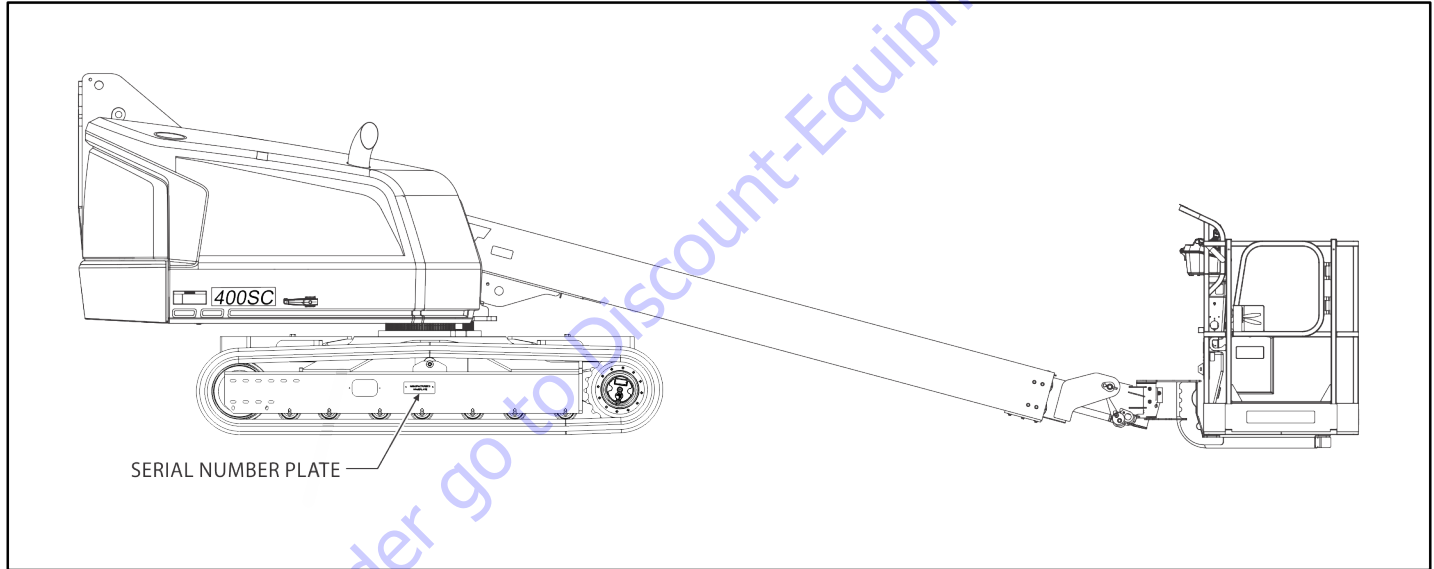


Figure 7-1. Serial Number Location

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

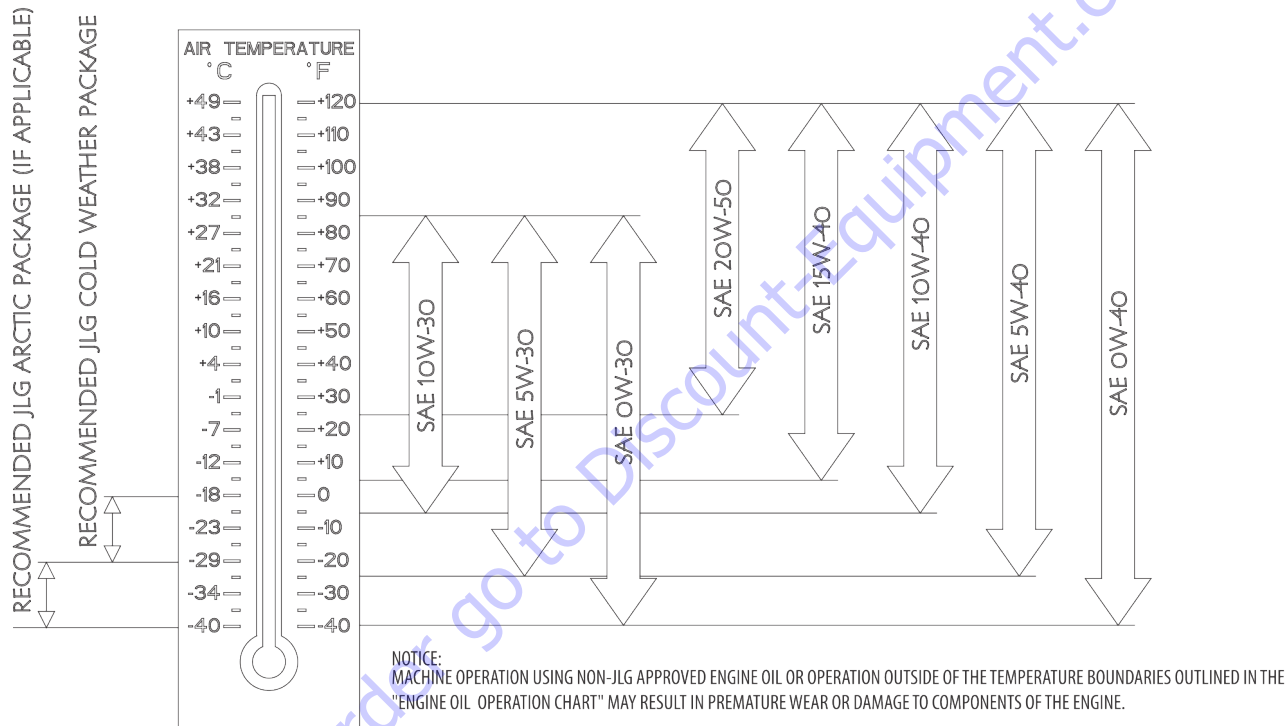


Figure 7-2. Engine Operating Temperature Specifications - Deutz

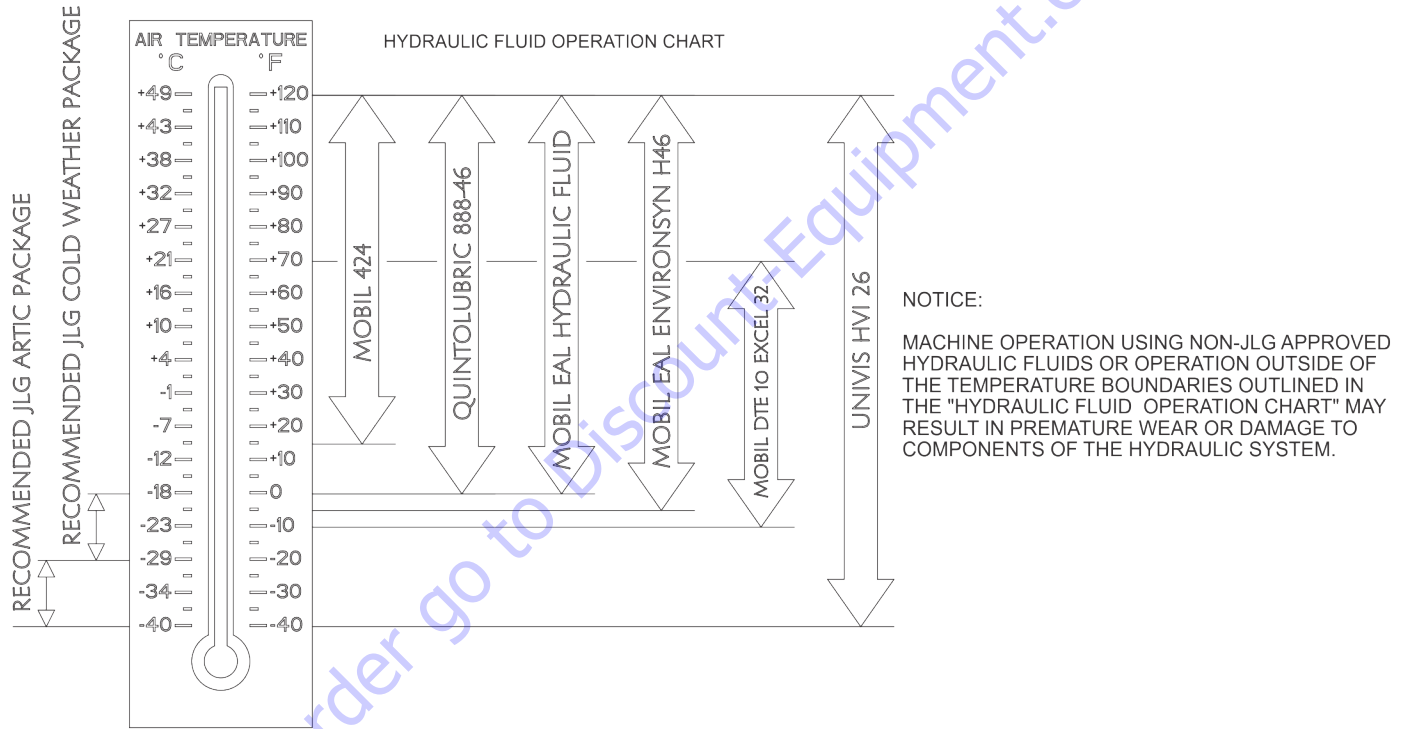


Figure 7-3. Hydraulic Oil Operation Chart - Sheet 1 of 2

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

Fluid	Properties		Base				Classifications		
	Viscosity at 40° C (cSt, Typical)	Viscosity Index	Mineral Oils	Vegetable Oils	Synthetic	Synthetic Polyol Esters	Readily Biodegradable*	Virtually Non-toxic**	Fire Resistant***
Mobilfluid 424	55	145	X						
Mobil DTE 10 Excel 32	32	164	X				X		
Univis HVI 26	26	376	X						
Mobil EAL Hydraulic Oil	47	176		X			X	X	
Mobil EAL EnviroSyn H46	49	145			X		X	X	
Quintolubric 888-46	50	185				X	X	X	X

* Readily biodegradable classification indicates one of the following:

CO₂ Conversion > 60% per EPA 560/6-82-003

CO₂ Conversion > 80% per CEC-L-33-A-93


** Virtually Non-toxic classification indicates an LC50 > 5000 ppm per OECD 203

*** Fire Resistant classification indicates Factory Mutual Research Corp. (FMRC) Approval


41507-40 B

Figure 7-4. Hydraulic Oil Operation Chart - Sheet 2 of 2

7.3 OPERATION MAINTENANCE AND LUBRICATION DIAGRAM - DEUTZ D2011

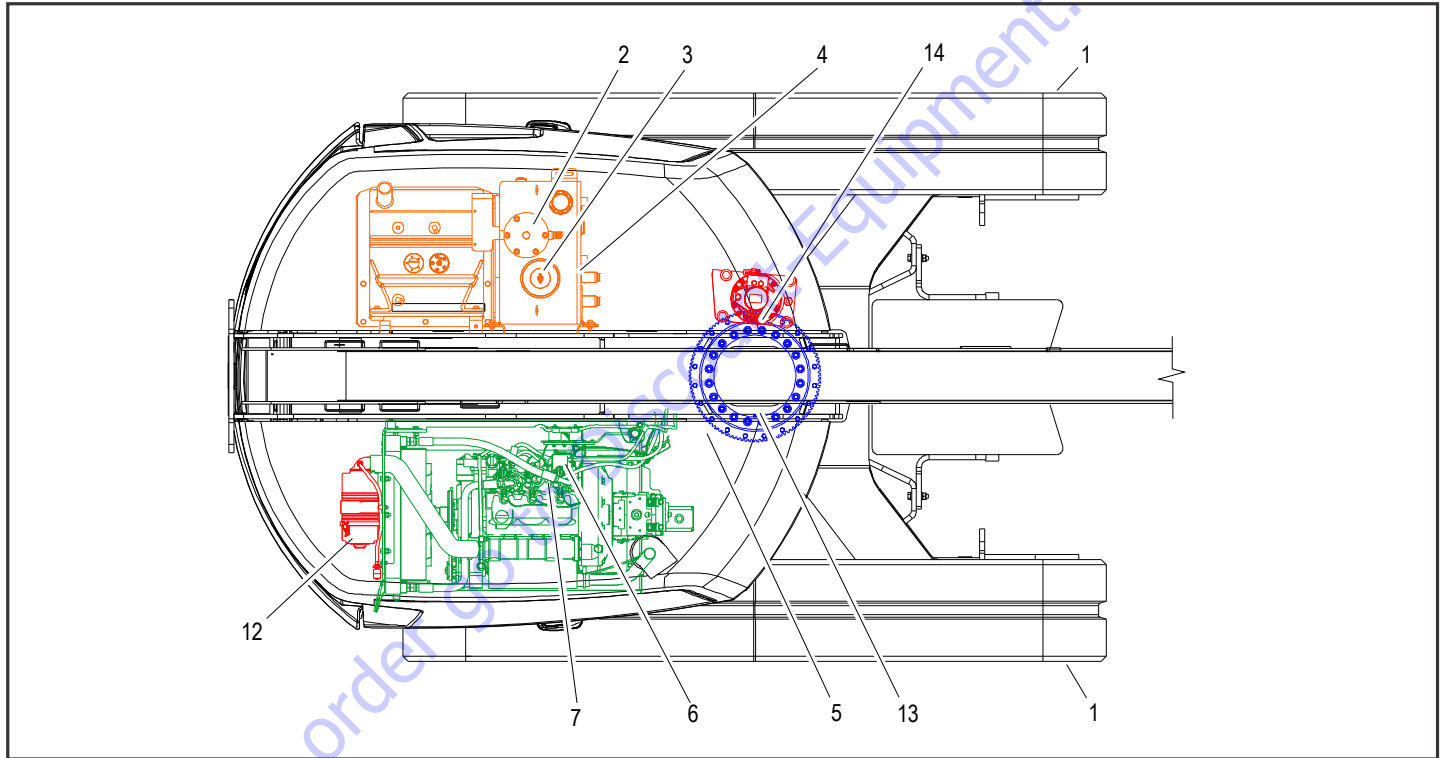

7.4 OPERATOR MAINTENANCE AND LUBRICATION DIAGRAM - DEUTZ 2.9L4

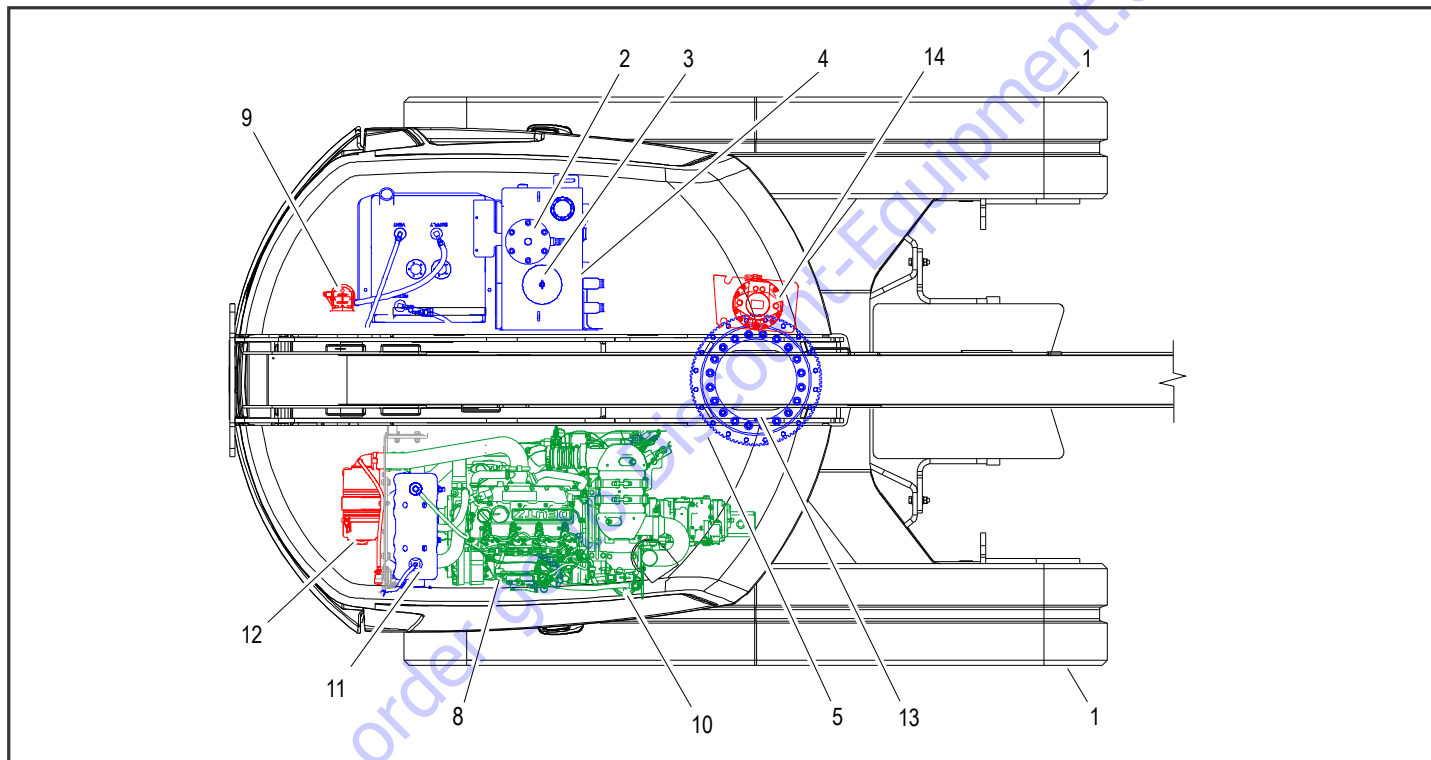

7.5 OPERATOR MAINTENANCE

NOTE: The following numbers correspond to those in Figure 7.3, Operation Maintenance and Lubrication Diagram - Deutz D2011.

Table 7-14. Lubrication Specifications


KEY	SPECIFICATIONS
MPG	Multipurpose Grease having a minimum dripping point of 350°F (177°C). Excellent water resistance and adhesive qualities, and being of extreme pressure type. (Timken OK 40 pounds minimum.)
EPGL	Extreme Pressure Gear Lube (oil) meeting API service classification GL-5 or MIL-Spec MIL-L-2105
HO	Hydraulic Oil. API service classification GL-3, e.g. Mobilfluid 424.
EO	Engine (crankcase). Gas (5W30)- API SN, - Arctic ACEA AI/BI, A5/B5 - API SM, SL, SJ, EC, CF, CD - ILSAC GF-4. Diesel (15W40, 5W30 Arctic) - API CJ-4.
OGL	Open Gear Lubricant - Mobilvac 375 or equivalent.

NOTICE

LUBRICATION INTERVALS ARE BASED ON MACHINE OPERATION UNDER NORMAL CONDITIONS. FOR MACHINES USED IN MULTI-SHIFT OPERATIONS AND/OR EXPOSED TO HOSTILE ENVIRONMENTS OR CONDITIONS, LUBRICATION FREQUENCIES MUST BE INCREASED ACCORDINGLY.

NOTE: It is recommended as a good practice to replace all filters at the same time.

1. Final Drive Hub

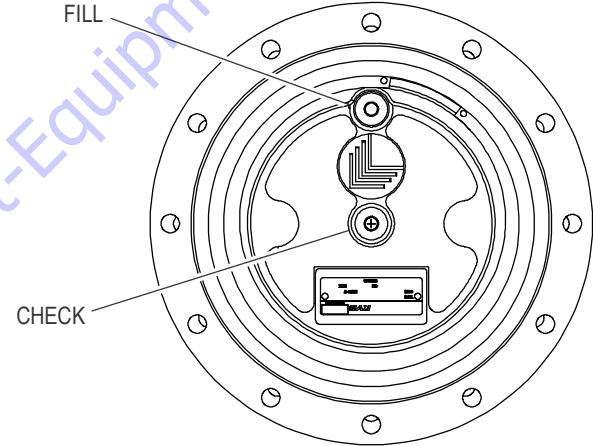


Lube Point(s) - Level/Fill Plug
Capacity - 33.8 oz (1 L)(1/2 Full)
Lube - EPGL

Interval - Check level every 3 months or 150 hours of operation; change every 2 years or 1200 hours of operation

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

2. Hydraulic Return Filter

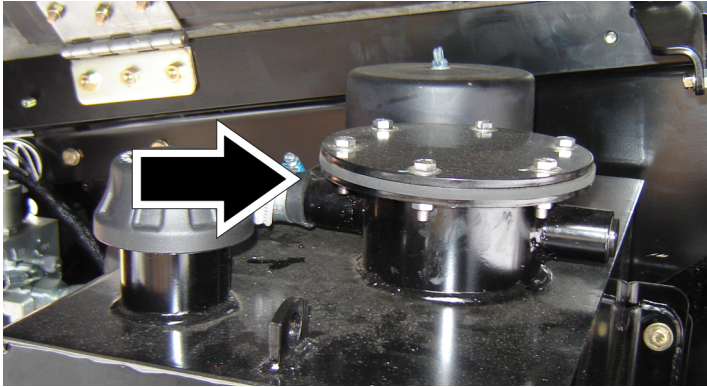

Interval - Change after first 50 hours and every 6 months or 300 hours thereafter or whenever Charge Filter is replaced


3. Hydraulic Tank Breather



Interval - Change after first 50 hours and every 6 months or 300 hours thereafter.
Comments - Remove wing nut and cover to replace. Under certain conditions, it may be necessary to replace on a more frequent basis.

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

4. Hydraulic Tank

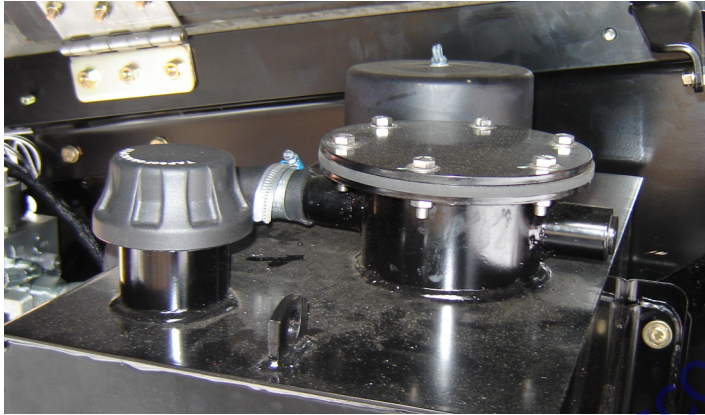

Lube Point(s) - Fill Cap

Capacity - 32.5 gal tank (123 L) 40.0 gal system (151 L)

Lube - HO

Interval - Check Level daily; Change every 2 years or 1200 hours of operation


5. Hydraulic Charge Filter



Interval - Change after first 50 hours and every 6 months or 300 hours thereafter or as indicated by Condition Indicator

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

6. Oil Change w/Filter - Deutz D2011

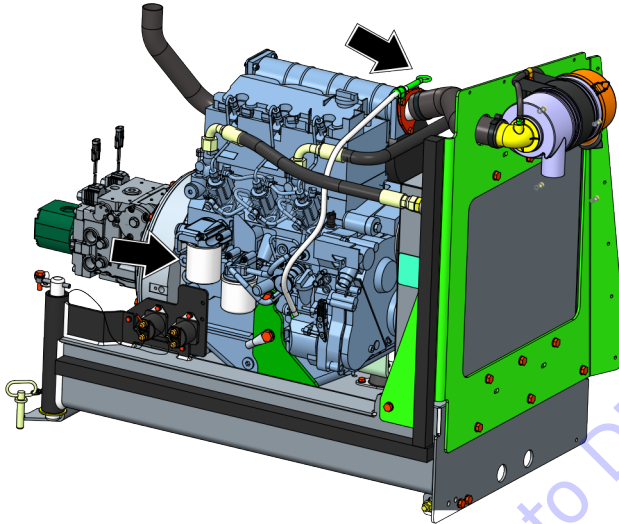


Lube Point(s) - Fill Cap/Spin-on Element

Capacity - 10 qt (9.5 L) w/Filter

Lube - EO

Interval - Check level daily; change every 500 hours or six months, whichever comes first. Adjust final oil level by mark on dipstick.

7. Fuel Filter - Deutz D2011

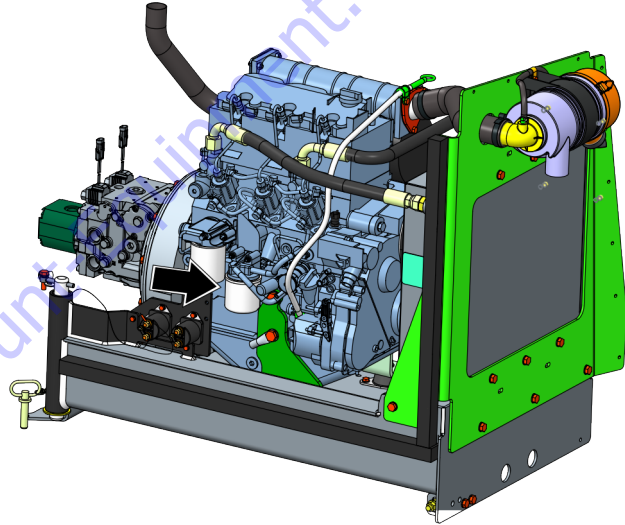


Lube Point(s) - Replaceable Element

Interval - Every year or 500 hours of operation

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

8. Oil Change w/Filter - Deutz 2.9L4

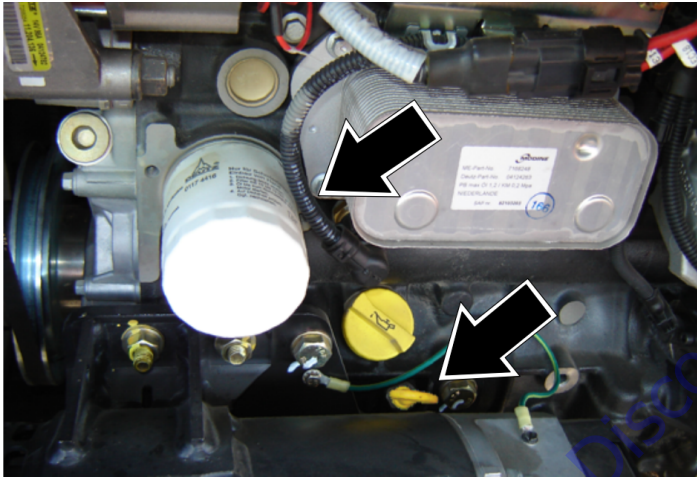

Lube Point(s) - Fill Cap/Spin-on Element

Capacity - 9.5 qt (8.9 L) w/Filter

Lube - EO

Interval - Check level daily; change every 500 hours or six months, whichever comes first. Adjust final oil level by mark on dipstick.

9. Fuel Pre-Filter - Deutz D2.9




Lube Point(s) - Replaceable Element

Interval - Drain water daily; Every year or 500 hours of operation


SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

10. Fuel Filter - Deutz 2.9L4

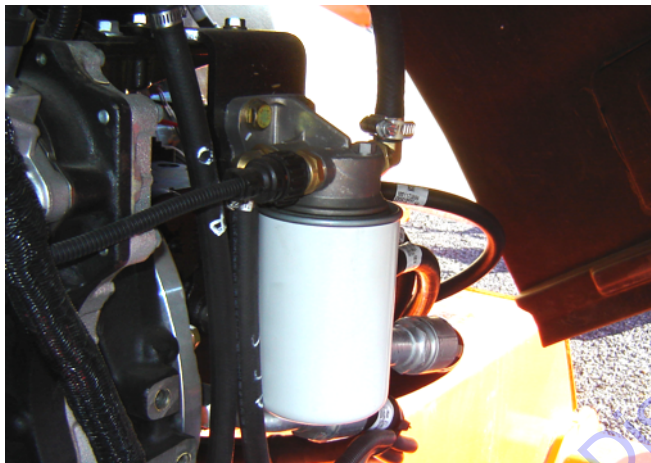

Lube Point(s) - Replaceable Element
Interval - Every year or 500 hours of operation


11. Radiator Coolant Deutz 2.9

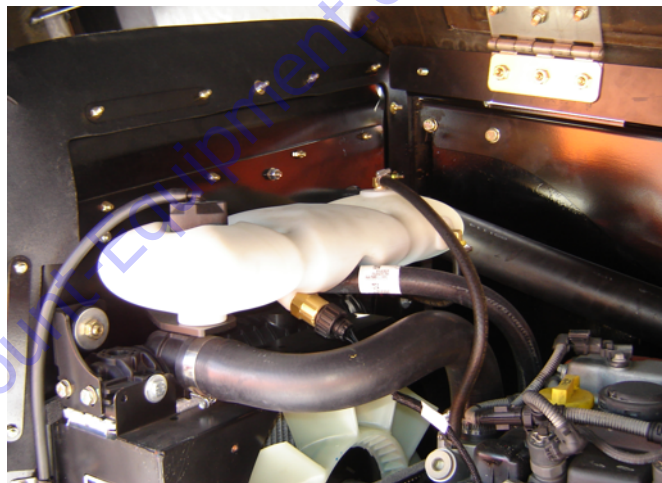

Lube Point(s) - Fill Cap
Capacity - 2.9 Gallon (11.3 L)
Lube - Anti-Freeze
Interval - Check level daily; change every 1000 hours or 2 years,
whichever comes first

SECTION 7 - GENERAL SPECIFICATIONS & OPERATOR MAINTENANCE

12. Air Filter

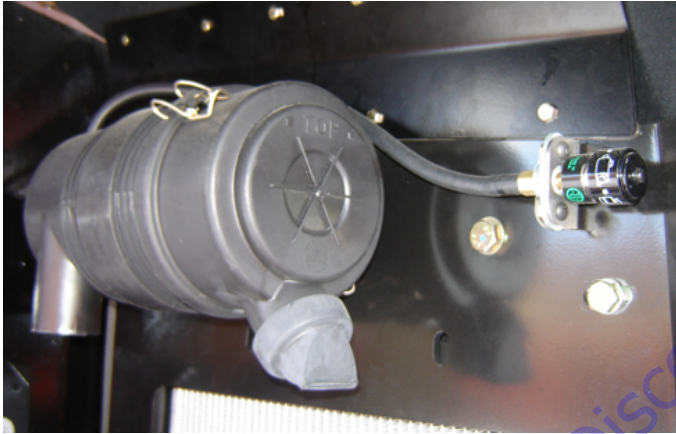


Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation or as indicated by the condition indicator
Comments - Check Dust Valve daily

13. Swing Bearing - Internal Ball Bearing

Lube Point(s) - 2 Grease Fittings
Capacity - A/R
Lube - MPG
Interval - Every 3 months or 150 hours of operation
Comments - Fittings in center of bearing: Remote Access is optional: Apply grease and rotate in 90 degree intervals until bearing is completely lubricated

14. Swing Drive Hub

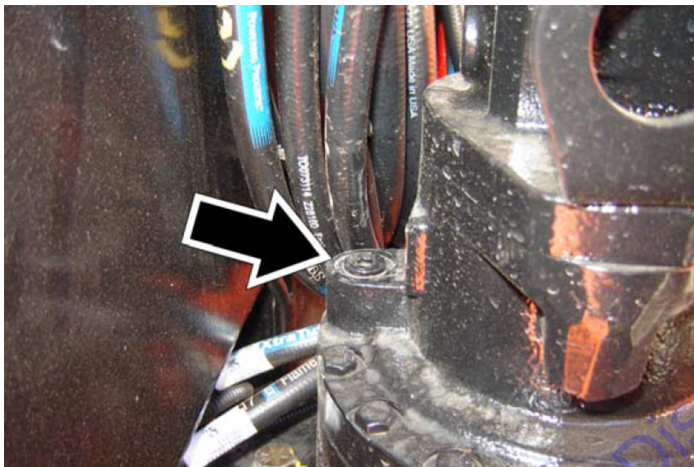

Lube Point - Level/Fill Plug

Capacity - 40 oz (1.2 L)

Lube - 90w80 Gear Oil

Interval - Check level every 3 months or 150 hours of operation; change after first 50 hours and every 2 years or 1200 hours of operation thereafter

7.6 SUPPLEMENTAL INFORMATION

The following information is provided in accordance with the requirements of the European Machinery Directive 2006/42/EC and is only applicable to CE machines.

For electric powered machines, the equivalent continuous A-Weighted sound pressure level at the work platform is less than 70dB(A)

For combustion engine powered machines, guaranteed Sound Power Level (LWA) per European Directive 2000/14/EC (Noise Emission in the Environment by Equipment for Use Outdoors) based on test methods in accordance with Annex III, Part B, Method 1 and 0 of the directive, is 104 dB.

The vibration total value to which the hand-arm system is subjected does not exceed $2,5 \text{ m/s}^2$. The highest root mean square value of weighted acceleration to which the whole body is subjected does not exceed $0,5 \text{ m/s}^2$.

TO PURCHASE THIS PRODUCT PLEASE CONTACT US



**Equipment Financing and
Extended Warranties Available**



**Discount-Equipment.com is your online resource for
commercial and industrial quality parts and equipment sales.**

561-964-4949

visit us on line @ www.discount-equipment.com

Select an option below to find your Equipment

Search by Manufacturer

Search by Product Type

Request a Quote

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar

JLG[®]

An Oshkosh Corporation Company

**Discount
Equipment**

www.Discount-Equipment.com

To order go to www.Discount-Equipment.com