REVISED STARTING SERIAL NO. 30130 Discount Equipment / PARTS LIST MANUAL **Model ALR ERGONOMIC MODEL STRAIGHT** MODEL **Chisel Scaler**



PARTS FINDER Search Website Search Website Search Website Search Website







Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: 561-964-4949 Outside Florida TOLL FREE: 877-690-3101

Need parts?

Click on this link: http://www.discount-equipment.com/category/5443-parts/ and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep,Small Line, Wanco, Yanmar



READ AND UNDERSTAND THE OPERATOR'S INSTRUCTION MANUAL THOROUGHLY BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.

Death or serious injury could occur if this equipment is used improperly.



SAFETY MESSAGES

Safety Instructions are proceeded by a graphic alert symbol of DANGER, WARNING, or CAUTION.



Indicates an imminent hazard which, if not avoided, will result in death or serious injury.



Indicates an imminent hazard which, if not WARNING avoided, can result in death or serious injury.



Indicates hazards which, if not avoided, could result in serious injury and or damage to the

AIR POWERED EQUIPMENT







 












- Use the correct size air hose for the tool, 1/2" diameter (minimum). Hose and fittings must be rated for safe handling in excess of 100 PSI pressure. The working pressure of this tool is 80-90 PSI and should never be allowed to exceed 100 PSI.
- ALR-E Limit the hose length to 30 feet (10 meters) maximum. Note: The pressure drop of 1/2" diameter hose is approximately 1 PSI per 90 linear feet.
- ALR-BS Limit the hose length to 30 feet (10 meters) maximum. Note: The pressure drop of 3/8" diameter hose is approximately 3 PSI per 90 linear feet.
- A filter/water separator must be provided on the air source to afford an adequate supply of clean, dry air to this tool. A



lubricator should also be used. If a lubricator is unavailable, lubricate the tool daily by putting 6 to 7 drops of lightweight machine oil in the hose connector opening prior to connect-

ing the air supply. In cold weather, use graphite oil for lubrication.

- Disconnect the air supply before removing or installing a chisel or accessory. Squeeze the hand lever to release all compressed air from the tool. Use only genuine EDCO chisels and accessories with this equipment. Failure to do so may result in serious bodily injury or death.
- Replace any damaged parts immediately. Use only genuine EDCO parts.

AIR POWERED EQUIPMENT CONTINUED

- To install or remove chisel: Disconnect the air supply. Squeeze the hand lever to release all compressed air. Pull back in the spring loaded locking collar and hold while removing the chisel. Hold back on the spring lodaded locking collarwhile firmly seating the new chisel in the holder. Release collar to retain the chisel.
- The appropriate accessory must be used for the job at hand. Do **NOT** force the tool into the work. The hammering action of the tool will perform the work for you. **NEVER USE** THE TOOL AS A PRY BAR. Damage to the equipment will result. If the tool does not seem to perform the work to your specifications, try another accessory or contact Discountequipment
- To activate tool, attach the air source, firmly grip the tool and then squeeze the hand lever on the air valve.



 After releasing the air valve hand lever, the tool will continue to operate for up to 15 seconds. This is a normal result of stored up

pressuer in the tool casing being released gradually. Be sure to firmly grip the tool until ALL air leaves the chamber.



- Remove the air source from the tool when not in use.
- This equipment will create dust from the material being removed. That dust may contain a chemical known to the state of California to cause cancer and/or birth defects or other reproductive harm. Check the chemical properties of the materials to be removed.



 It is the operator's responsibility to keep other people (workers, pedestrains, bystanders, etc.) away during operation. Block off

the work area in all directions with roping, safety netting, etc. for a safe distance. Failure to do so may result in others being injured by flying debris or exposing them to harmful dust and noise.

DUST WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects, or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints, and
- Crystalline silica from bricks and concrete

and other

masonry products.

Your risk of exposure to these chemicals varies depending on how often you do this type of work. To reduce your risk: work in a well ventilated area, use a dust control system, such as an industrial-style vacuum, and wear approved personal safety equipment, such as a dust/particle respirator designed to filter out microscopic particles.




PARTS LIST MANUAL **EDCO MODEL ALR**

Section	Page Number
Safety Messages and General Instructions. How To Order Replacement Parts. Illustration # 1: Chisel Scaler Assembly. Parts Listing - Illustration #1: Chisel Scaler assembly. Illustration # 2: Valve Body Assembly Piston & Cylinder Assembly Cylinder Housing Assembly Chisel Holder Assembly.	2 3 4 5
ALR Accessory Listing Limited Equipment Warranty	

		CHISEL SCALERS
PART #	MODEL	DESCRIPTION
C10342	ALR-E	5 FT. ERGONOMIC HEAVY-DUTY STEEL
C10301	ALR-5	5 FT. STRAIGHT HEAVY-DUTY STEEL
C10308	ALR-4	4 FT. STRAIGHT HEAVY-DUTY STEEL
C10309	ALR-2	2 FT. STRAIGHT HEAVY-DUTY STEEL
C10301A	ALR-5A	5 FT. STRAIGHT LIGHT-WEIGHT ALUMINUM
C10308A	ALR-4A	4 FT. STRAIGHT LIGHT-WEIGHT ALUMINUM
C10309A	ALR-2A	2 FT. STRAIGHT LIGHT-WEIGHT ALUMINUM
*io Die	COUNTIFIC	



ILLUSTRATION #1: CHISEL SCALER ASSEMBLY

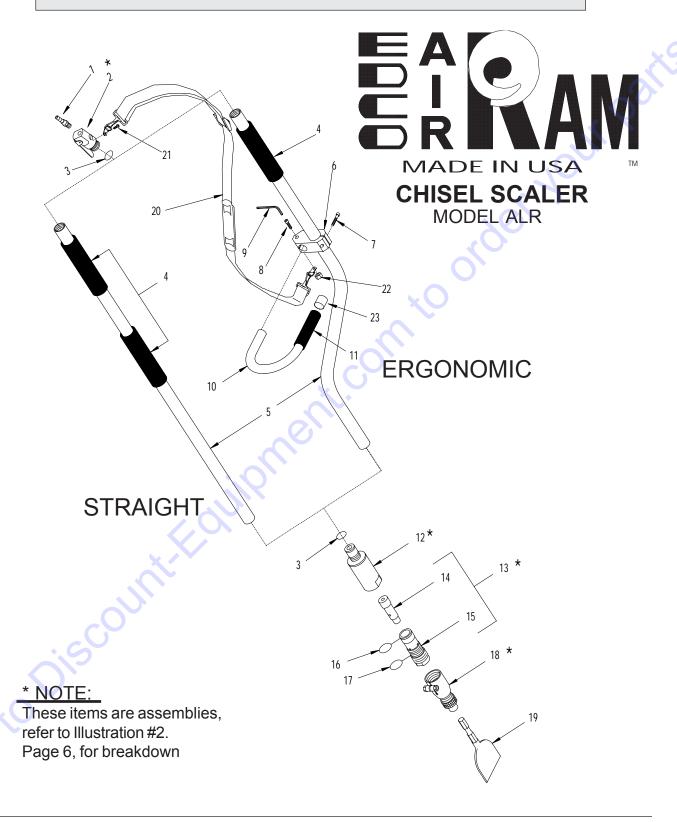




PART	S LISTING	G - ILLUSTRATION #1: CHISEL SCALER AS	SEMBLY	
ITEM#	PART#	DESCRIPTION	QTY.	
1	C10523	BARB, SWIVEL 3/8 HOSE x 1/4 MPT	1	
2	C10570	VALVE BODY ASSEMBLY		
		(REFER TO ILLUS. #2 for BREAKDOWN)	1	
*3	C10536	O-RING 2 x 26mm	2	
4		GRIP, FOAM	(
	C10531	1-1/4" ID x 8" L (MODELS ALR-4 & 5, ALR-E)	1 or 2	
	C10539	1-1/4" ID x 12" L (MODEL ALR-2 ONLY)	1	
5		CASING (SPECIFY STYLE AND SIZE)	1	
	C10587	ERGONOMIC STEEL MODEL ALR-E5		
	C10532	STRAIGHT STEEL 44-1/2" MODEL ALR-5		
	C10532A	STRAIGHT ALUM. 44-1/2" MODEL ALR-5A		
	C10533	STRAIGHT STEEL 32-1/2" MODEL ALR-4		
	C10533A	STRAIGHT ALUM. 32-1/2" MODEL ALR-4A		
	C10534	STRAIGHT STEEL 12" MODEL ALR-2		
	C10534A	STRAIGHT ALUM. 12" MODEL ALR-2A		
6	C10586	CLAMP, ERGONOMIC HANDLE	1	
7	10856	SCREW, SKT. HD. CAP 1/4-20 x 1-1/2	1	
8	10869	SCREW, SKT. HD. CAP 1/4-20 x 1 (w/o SHOULDER STRAP)	1	
	10856	SCREW, SKT. HD. CAP 1/4-20 x 1-1/2 (w/ SHOULDER STRAP)	1	
9	66045	WRENCH, HEX KEY 3/16"	1	
10	C10588	HANDLE, U-SHAPED	1	
11	61067	GRIP, FOAM 7/8" ID x 5"L	1	
12		CYLINDER HOUSING ASSEMBLY	1	
		(REFER TO ILLUS. #2 for BREAKDOWN)		
	C10535	STEEL HOUSING		
	C10535A	ALUM. HOUSING		
13	C10590	PISTON & CYLINDER ASSEMBLY (INCLUDES ITEMS 14 - 17)	1	
14	C10583	PISTON	1	
15	C10584	CYLINDER	1	
*16	C10511	O-RING 2 x 34mm	1	
*17	C10512	O-RING 2 x 37mm	1	
18	C10514	CHISEL HOLDER ASSY., 5/8" HEX SHANK	1	
	~\\\\	(REFER TO ILLUS. # 2 for BREAKDOWN)		
19	C10302	LR-4 CHISEL, 4" STEEL - REFER TO PG. 7 for ADDITIONAL		
		ACCESSORIES	1	
20	24040	STRAP, SHOULDER (INCL. SHOULDER PAD, 2 D-RINGS,		
		2 BRACKETS) SHOULDER STRAP IS OPTIONAL	1	
21	11578	SCREW, SKT. BUTTON HEAD 1/4-20 x 1/2	1	
22	10015	NUT, LOCK 1/4-20	1	
23	C10598	PLUG, CAP 1" 1		

*Note: To order KIT OF ALL O-RINGS (8 total) use part # C10550. This kit includes items #3, 16, & 17 from Illustration #1 and items 2-B, 2-E, 12-D, 12-E, & 12-F from Illustration # 2.




ITEM #2 C10570 VALVE BODY ASSEMBLY

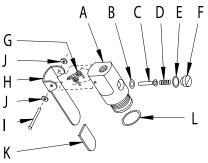

ПЕМ	PART#	DESCRIPTION	QTY.
2-A	C10571	VALVE BODY	1
2-B	C10540	O-RING #109, 3/32 x 5/16" ID	1
2-C	C10572	VALVE STEM	1
2-D	C10542	SPRING, VALVE STEM	1
2-E	C10543	O-RING #013, 1/16 x 7/16" ID	1
2-F	C10544	VALVE STEM RETAINER	1
2-G	C10585	SPRING, DOUBLE TORSION	1
2-H	C10573	LEVER, AIR VALVE 4"	1
2-I	11556	RIVET, OVAL HEAD 1/8 x 1-1/2	1
2-J	11557	WASHER, RIVET 1/8"ID x 3/8" OD	2
2-k	C10569	GRIP, FLAT RED .125 x .75 x 1.5" L 1	
2-L	C10536	O-RING 2 x 26mm	1

ITEM #13 C10590 PISTON & CYLINDER ASSEMBLY

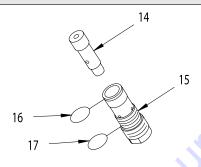


ITEM	PART#	DESCRIPTION	QTY.
14	C10583	PISTON	1
15	C10584	CYLINDER	1
16	C10511	O-RING 2 x 34mm	1
17	C10512	O-RING 2x 37mm	1

NOTE:


These parts should be replaced together as an assembly.

ITEM #12 C10535 OR C10535A CYLINDER HOUSING ASSEMBLY

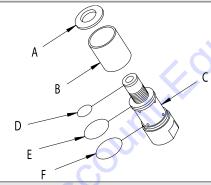

ПЕМ	PART# DESCRIPTION	QTY.
12-A	C10545 CYLINDER HOUSING CAP	1
12-B	C10546 CYLINDER HOUSING SLEEVE	1
12-C	CYLINDER HOUSING MAIN BODY	′ 1
×	C10547 STEEL MAIN BODY	
	C10547A ALUM. MAIN BODY	
12-D	C10536 O-RING 2 x 26mm	1
12-E	C10548 O-RING 2 x 46mm	1
12-F	C10549 O-RING 2 x 48mm	1

ITEM #18 C10514 CHISEL HOLDER ASSEMBLY

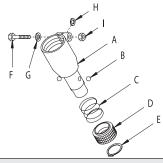

ПЕМ	PART#	DESCRIPTION	QTY.
18-A	C10578	CHUCK BODY	1
18-B	C10579	BALL, 5/16' CHROME	2
18-C	C10580	SPRING, COMP. 1.437"OD x 1.25"FL	
18-D	C10581	COLLAR, KNURLED BALL LOCKING	
18-E	C10582	RETAINING RING, EXT. 1-1/8"	
18-F	10342	SCREW, CAP 5/16-18 x 1-1/2	
18-G	10801	WASHER, LOCK 5/16	1
18-H		WASHER, FLAT S.S.	1
	11558	.328"ID x .562"OD x .025"THK.	
	11559	.328"ID x .562"OD x .058"THK	
18-I	10807	NUT, LOCK 5/16-18	1



ALR ACCESSORIES




ALR ACCESSORY LISTING			
TYPE	PART#	SPEC#	DESCRIPTION
DISPLAY STAND	27075		DISPLAYS ALL CHISEL SCALER MODELS AND ACCESSORIES
CHISELS	C10302	LR-4	4" STRAIGHT STEEL CHISEL
	C10303	LR-2	2" STRAIGHT STEEL CHISEL
	C10324	LR-1	1-1/4" STRAIGHT STEEL CHISEL
	C10315	LR-2-45	2" @ 45° ANGLED STEEL CHISEL
SCRAPER	C10306	LR-4M	BLADE ADAPTER, STRAIGHT 4"
BLADES	C10329	LR-4S	4" SCRAPER BLADES (5 PACK)
AND	C10304	LR-8	8" SCRAPER BLADES (5 PACK)
ADAPTERS	C10305	LR-12	12" SCRAPER BLADES (5 PACK)
	C10316	LR-2-45M	BLADE ADAPTER, 45° ANGLED 2"
	C10321	LR-2A	2" SCRAPER BLADES for ANGLED ADAPTER (5 PACK)
	C10322	LR-4A	4" SCRAPER BLADES for ANGLED ADAPTER (5 PACK)
JOINT	C10320	LR-JS	7/16" CURVED JOINT CLEANER
CLEANERS	C10353	LR-JM	5/8" CURVED JOINT CLEANER
	C10354	LR-JW	7/8" CURVED JOINT CLEANER
CHIPPING	C10327	LR-MPT	CHIPPING POINT
POINT			
SCABBLER	C10310	LRS-H	SCABBLER HEAD ADAPTER
HEADS	C10312	LRS-5	5-POINT SCABBLER
	C10311	LRS-9	9-POINT SCABBLER
BUSHING	C10336	LR-TB	BUSHING HEAD TOOL 1-3/4" SQUARE
HEAD			
TAMPER	C10348	LR-CH	ASPHALT TAMPER/COMPACTION HEAD 3-1/2" x 6-3/4"
SHINGLE	C10339	LR-SCR	SHINGLE REMOVER BLADE ADAPTER
REMOVER	C10323	LR-SR	8" SHINGLE REMOVER BLADES (5 PACK)



PARTS FINDERS Search Website Can't Find



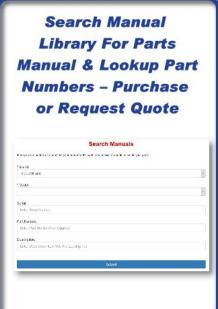



Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: 561-964-4949 Outside Florida TOLL FREE: 877-690-3101

Need parts?

Click on this link: http://www.discount-equipment.com/category/5443-parts/ and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep,Small Line, Wanco, Yanmar