



MAINTENANCE CHECKLIST

Made in America Since 1968

6280HD GLADIATOR

6280HD-HER, 6280HD-SUN



Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

**Refer to Service Manual for precise schedule*

WEEKLY RECOMMENDED MAINTENANCE

- Inspect the wheels and blade holder for damage
- Make sure the power cord on the operator's handle is in good, working condition
- Plug the unit in and ensure the on/off switch is functioning properly. When the unit is powered on, push the two control levers forward and the 6280HD will move forward.
- Pull the two control levers backwards to reverse the unit.
- Ensure the axle pins are secured in the wheel hub hole (Remove the axle pins for easier maneuverability when not powered)
- Make sure the T-Handle wrench that came with the machine is in the holder located directly below the right hand grip towards the middle of the handle.
- Remove any glue, mastic, and debris from the wheels, debris deflector, front weight, and blade holder plate.
- Look for damage to the blade holder
- Check the quick adjustment multi-position handle to ensure it moves freely and locks into place
- Make sure the wheel cleaner touches, but does not dig into, the wheel
- Check for misalignment, binding of moving parts, broken parts and any other conditions that may affect operation.
- All maintenance, nameplates and safety stickers must be in place and legible.
- Make sure the operator's manual and safety glasses are with the machine.
- Check that the power cord is free of damage.
- Check that all screws are tight and secure.

BI-ANNUALLY RECOMMENDED MAINTENANCE*

**More frequently if rented regularly*

- Inspect handle grips for wear and replace if necessary
- Check blade holder bolts for wear and replace periodically
- Check the blade holder for signs of wear, cracks, or other damage. Replace if necessary
- Check the rear wheels for damage and excessive wear
- Inspect/replace cutting head bearing.**
- Inspect/replace the isolators.**
- Remove and replace 1.5 gallons of Texaco Rando 46 Hydraulic Oil

*** See manual for complete, detailed instruction.*



TO PURCHASE THIS PRODUCT PLEASE CONTACT US



**Equipment Financing and
Extended Warranties Available**



**Discount-Equipment.com is your online resource for
commercial and industrial quality parts and equipment sales.**

561-964-4949

visit us on line @ www.discount-equipment.com

Select an option below to find your Equipment

Search by Manufacturer

Search by Product Type

Request a Quote

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar