

SKYJACK™

MAINTENANCE & PARTS MANUAL



SJIII Series

The Conventionals
Models 3220, 3226, 4620,
4626 And 4632

For Service please call **800 275-9522**
Skyjack Inc. Service Center, 3451 Swenson Ave., St. Charles, IL. 60174 FAX 630 262-0006
For Parts in North America and Asia please call **800 965-4626**
Skyjack Inc. Parts Center, 3451 Swenson Ave., St. Charles, IL. 60174 FAX 888 782-4825
For Parts & Service in Europe please call **44-1691-676 236**
Skyjack Europe Glovers Meadow, Maesbury Road, Oswestry, Shropshire, UK FAX 44-169- 676 238

USE THE SERIAL NUMBER OF YOUR MACHINE TO DETERMINE THE CORRECT OPERATING MANUAL TO USE

Manual Part #		117128AE	118940AN	122909AG	129919AI		
Release Date		May 1999	April 2004	April 2004	June 2008		
M O D E L	3220	609330 & BELOW	609331 To 613550	613551 To 615766	615767 to 620094	60 000 001 & ABOVE	
	3226	Not Used	27014 To 28042 28048 To 28117	28043 To 28047 28118 To 272099	272100 to 279956	27 000 001 & ABOVE	
	4620	66429 & BELOW	66430 To 66889	Not Used	710000 to 719126	70 000 001 & ABOVE	
	4626	704418 & BELOW	704419 To 709588				
	4632	Not Used	Not Used				
	4830/32	86982 & BELOW	86983 To 871159		Not Used	Not Used	Not Used
	6826	75517 & BELOW	75518 To 75635				
	6832	82402 & BELOW	82403 To 83108				
	3220M	Not Used	Not Used				
3226M							
Release Date		129926AF			129945AB	143842AA Parts Manual (Soft Metric)	
		April 2007		April 2007	July 2007		
M O D E L	3220	Not Used	Not Used	Not Used	Not Used		
	3226						
	4620						
	4626						
	4632						
	4830/32	75636 to 75664	75 000 001 & ABOVE	Not Used	Not Used		
	6826						
	6832					83109 to 83311	80 000 001 & ABOVE
	3220M	Not Used	Not Used	M600 000 to M600546	M60 000 001 to M60 000 100		
3226M	M270 000 to M270842			M27 000 001 to M27 000 100			

Table of Contents

Section - Paragraph	Page No.	
Section 1 - About Your Aerial Platform		S
Aerial Platform Definition.....	1	E
Purpose of Equipment.....	1	C
Use of Equipment.....	1	T
Manuals.....	1	I
Operator.....	1	O
Service Policy and Warranty.....	1	N
Optional Accessories.....	1	
Scope of this Manual.....	2	
Operator Safety Reminders.....	3	
Electrocution Hazard.....	3	
Safety Precautions.....	4	
Section 2 - List of Tables		
Table of Contents.....	1	
Section 3 - System Component Identification and Schematics - Operation		
Table of Contents.....	1	
Section 4 - Troubleshooting Information - Operation		
Table of Contents.....	1	
Section 5 - Maintenance and Service - Operation		
Table of Contents.....	1	
Section 6 - Parts Lists - Operation		
Table of Contents.....	2	

**S
E
C
T
I
O
N
I
N
D
E
X**

1

2

3

4

5

6

The Safety Alert Symbol identifies important safety messages on aerial platforms, safety signs in manuals or elsewhere. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.



This Safety Alert Symbol means attention!

Become alert! Your safety is involved.



DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

IMPORTANT

IMPORTANT indicates a procedure essential for safe operation and which, if not followed, may result in a malfunction or damage to the aerial platform.