

CHANNEL OPERATING FREQUENCIES

To change the operating frequency of a channel:

- 1 With the transceiver power OFF, press and hold the **PTT** switch and **Side 1** key while turning the transceiver power ON.
 - Continue to hold the **PTT** switch and **Side 1** key until the LED lights orange and the transceiver announces “Self”.
- 2 Release the **PTT** switch and **Side 1** key.
 - The transceiver announces “Channel”.
 - Pressing the **Side 1** key or **Side 2** key will toggle between QT, DQT, and Channel setup.
- 3 Press and release the **PTT** switch, then rotate the **Channel** selector to your desired channel.
 - Upon pressing and releasing the **PTT** switch, a beep will sound and the transceiver announces “Table zero”.
- 4 Press the **Side 1** or **Side 2** key to increment/ decrement the Table number, to select the new channel frequency.
 - Press and hold the **Side 1** or **Side 2** key to increment/ decrement the number by 5 at a time.
 - Table numbers and their corresponding operating frequencies are provided in the table on page 14.
 - A voice announcement will inform you of the currently selected Table number.
- 5 Press the **PTT** switch to save the setting.
 - A beep will sound.
 - Repeat steps 3 to 5 to set up another channel.
- 6 Turn the transceiver power OFF and then ON again to activate the new settings.

Note: The transceiver will automatically return to normal operation if no action is performed for 5 seconds.

TK-2300 Table Number	Operating Frequency (MHz)	TK-2300 Table Number	Operating Frequency (MHz)
0	OFF	14	151.7450
1	151.6250	15	151.7750
2	151.9550	16	151.8650
3	152.8850	17	151.8950
4	152.9150	18	151.9250
5	151.7000	19	152.7000
6	151.7600	20	154.4900
7	152.9450	21	154.5150
8	151.8350	22	154.5275
9	151.8050	23	154.5400
10	151.5125	24	153.0050
11	151.6550	25	154.6550
12	151.6850	26	158.4000
13	151.7150	27	158.4075

TK-3300 Table Number	Operating Frequency (MHz)	TK-3300 Table Number	Operating Frequency (MHz)
0	OFF	14	461.1625
1	464.5000	15	461.1875
2	464.5500	16	461.2125
3	467.7625	17	461.2375
4	467.8125	18	461.2625
5	467.8500	19	461.2875
6	467.8750	20	461.3125
7	467.9000	21	461.3375
8	467.9250	22	461.3625
9	461.0375	23	462.7625
10	461.0625	24	462.7875
11	461.0875	25	462.8125
12	461.1125	26	462.8375
13	461.1375	27	462.8625

TK-3300 Table Number	Operating Frequency (MHz)	TK-3300 Table Number	Operating Frequency (MHz)
28	462.8875	59	462.4875
29	462.9125	60	462.5125
30	464.4875	61	467.1875
31	464.5125	62	467.4625
32	464.5375	63	467.4875
33	464.5625	64	467.5125
34	466.0375	65	451.1875
35	466.0625	66	451.2375
36	466.0875	67	451.2875
37	466.1125	68	451.3375
38	466.1375	69	451.4375
39	466.1625	70	451.5375
40	466.1875	71	451.6375
41	466.2125	72	452.3125
42	466.2375	73	452.5375
43	466.2625	74	452.4125
44	466.2875	75	452.5125
45	466.3125	76	452.7625
46	466.3375	77	452.8625
47	466.3625	78	456.1875
48	467.7875	79	456.2375
49	467.8375	80	456.2875
50	467.8625	81	456.3375
51	467.8875	82	456.4375
52	467.9125	83	456.5375
53	469.4875	84	456.6375
54	469.5125	85	457.3125
55	469.5375	86	457.4125
56	469.5625	87	457.5125
57	462.1875	88	457.7625
58	462.4625	89	457.8625