


# LS600 PUMP — WIRING DIAGRAM (CONTROL BOX)


## Connections to Digital Control Box - J3 and J4 Connectors ( 1 of 2)

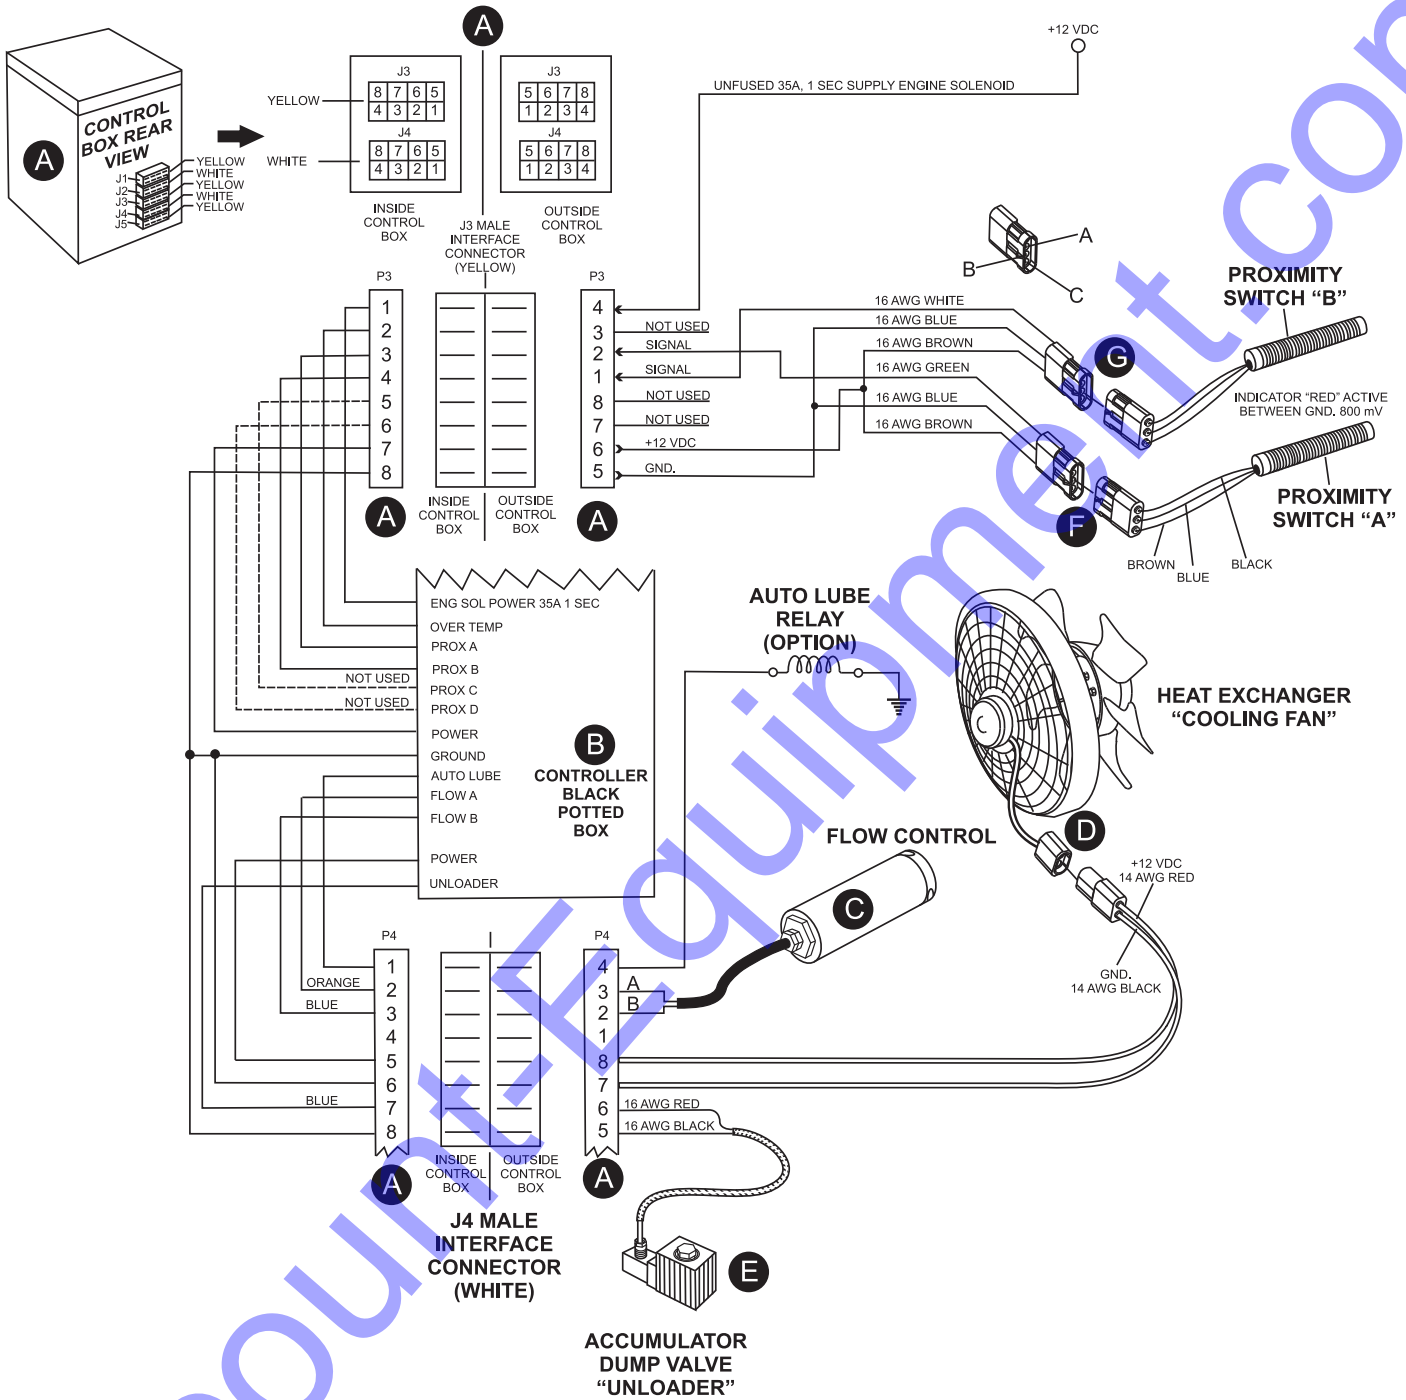

CONNECTIONS TO J3 AND J4 CONNECTORS ON DIGITAL CONTROL BOX (LS600)

## Connections to Digital Control Box - J3 and J4 Connectors ( 1 of 2)

# LS600 PUMP — WIRING DIAGRAM (CONTROL BOX)

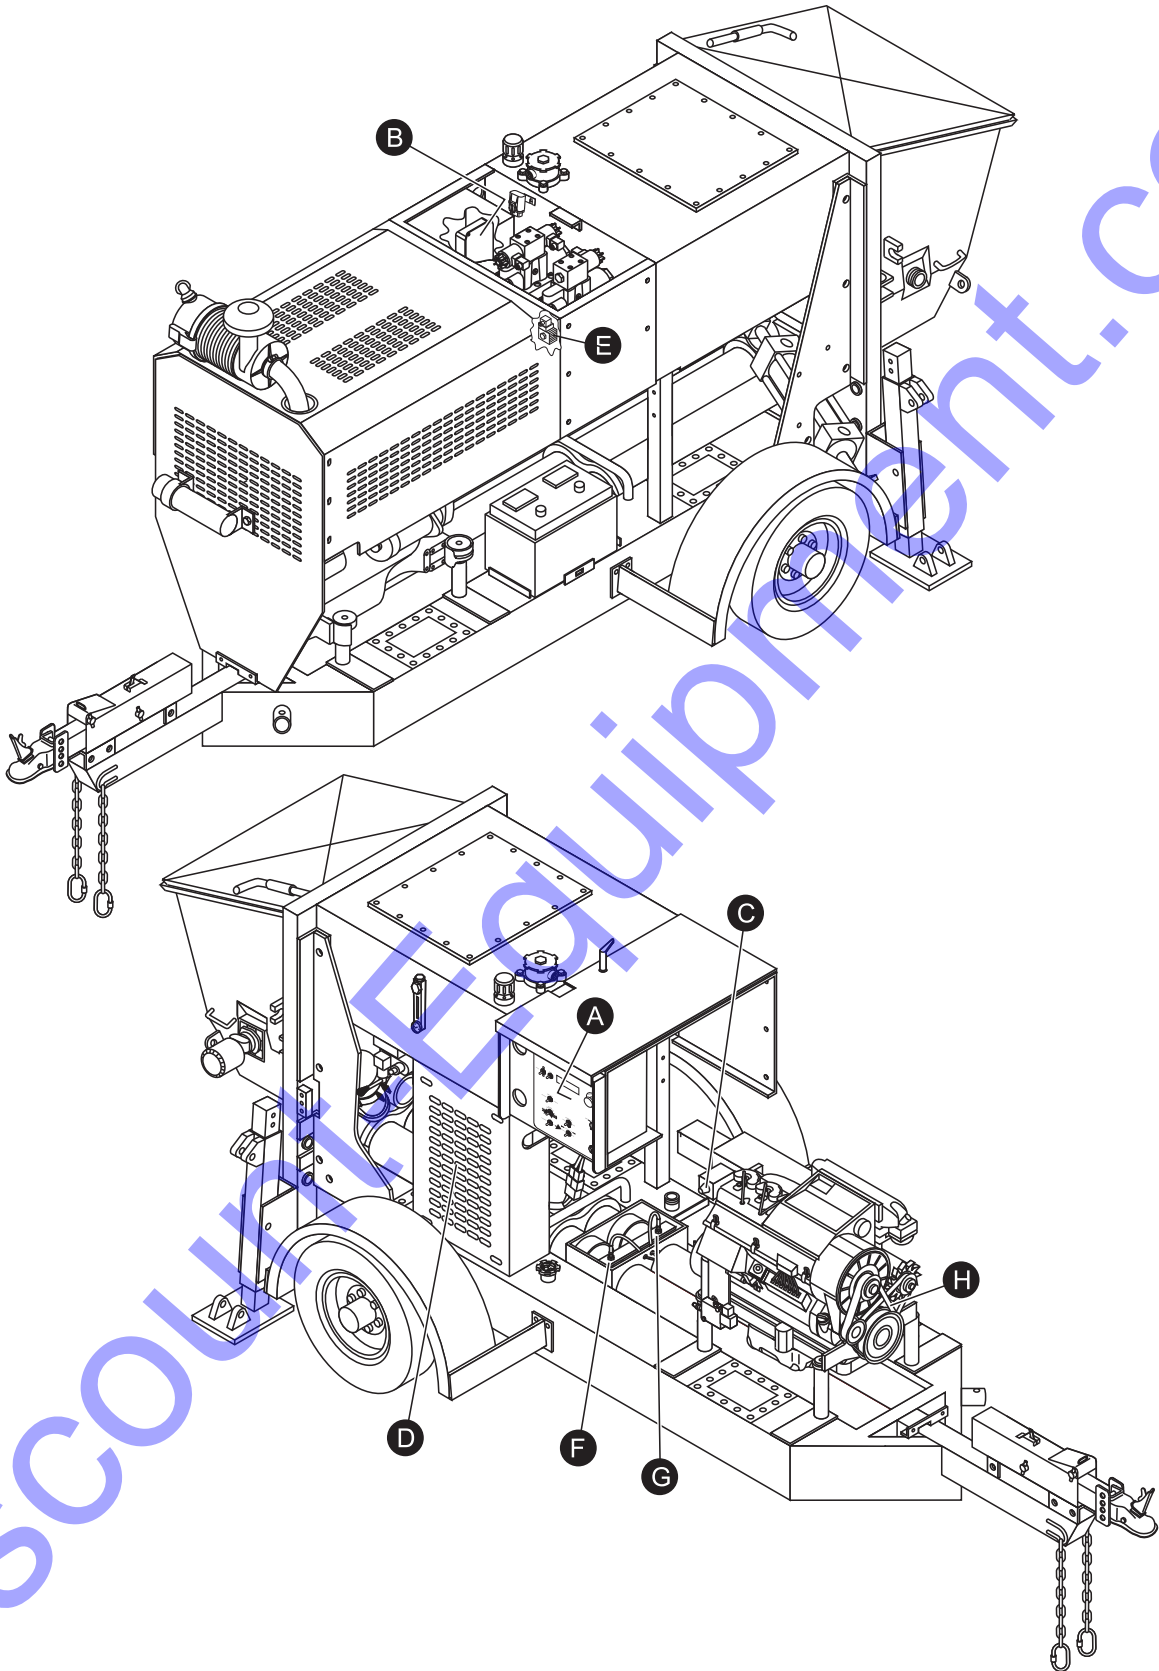

Connections to Digital Control Box - J3 and J4 Connectors ( 2 of 2)