

Table 6-12. Diagnostic Trouble Code Chart

DTC	Flash Code	Sequence	Fault Message	Fault Description	Check
9945	99	45	CURRENT FEEDBACK CALIBRATION CHECKSUM INCORRECT	The factory set current feedback checksum is not correct.	
9979	99	79	FUNCTIONS LOCKED OUT - GROUND MODULE SOFTWARE VERSION IMPROPER	Temporary fault for the telematics project. The model needs to be a 600S or 1350S if not this fault will be generated and Platform controls will be prevented. This fault was to ensure that the software will only work for these two models.	Disable all machine and engine functions (i.e., command engine shutdown and do not permit start).

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter the model number or part number to search for parts.

* Brand:

* Model:

* Serial:

SEARCH

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in as much information as possible to help us find the right part for you.

Manufacturer:	
Model:	
Serial:	
Part Number:	
Description:	
Quantity:	
Notes:	
Submit:	

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on once of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION 7. BASIC ELECTRICAL INFORMATION & SCHEMATICS

7.1 GENERAL

This section contains basic electrical information and schematics to be used for locating and correcting most of the operating problems which may develop.

NOTE: *Some of the procedures/connectors shown in this section may not be applicable to all models.*

7.2 MULTIMETER BASICS

A wide variety of multimeters or Volt Ohm Meters (VOM) can be used for troubleshooting your equipment. This section shows diagrams of a common, digital VOM configured for several different circuit measurements. Instructions for your VOM may vary. Please consult the meter operator's manual for more information.

Grounding

"Grounding the meter" means to take the black lead (which is connected to the COM (common) or negative port) and touch it to a good path to the negative side of the Voltage source.

Backprobing

To "backprobe" means to take the measurement by accessing a connector's contact on the same side as the wires, the back of the connector. Readings can be done while maintaining circuit continuity this way. If the connector is the sealed type, great care must be taken to avoid damaging the seal around the wire. It is best to use probes or probe tips specifically designed for this technique, especially on sealed connectors. Whenever possible insert probes into the side of the connector such that the test also checks both terminals of the connection. It is possible to inspect a connection within a closed connector by backprobing both sides of a connector terminal and measuring resistance. Do this after giving each wire a gentle pull to ensure the wires are still attached to the contact and contacts are seated in the connector.

Min/Max

Use of the "Min/Max" recording feature of some meters can help when taking measurements of intermittent conditions while alone. For example, you can read the Voltage applied to a solenoid when it is only operational while a switch, far from the solenoid and meter, is held down.

Polarity

Getting a negative Voltage or current reading when expecting a positive reading frequently means the leads are reversed. Check what reading is expected, the location of the signal and that the leads are connected to the device under test correctly. Also check that the lead on the "COM" port goes to the Ground or negative side of the signal and the lead on the other port goes to the positive side of the signal.

Scale

M = Mega = 1,000,000 * (Displayed Number)

k = kilo = 1,000 * (Displayed Number)

m = mili = (Displayed Number) / 1,000

μ = micro = (Displayed Number) / 1,000,000

Example: 1.2 kW = 1200 W

Example: 50 mA = 0.05 A

Voltage Measurement

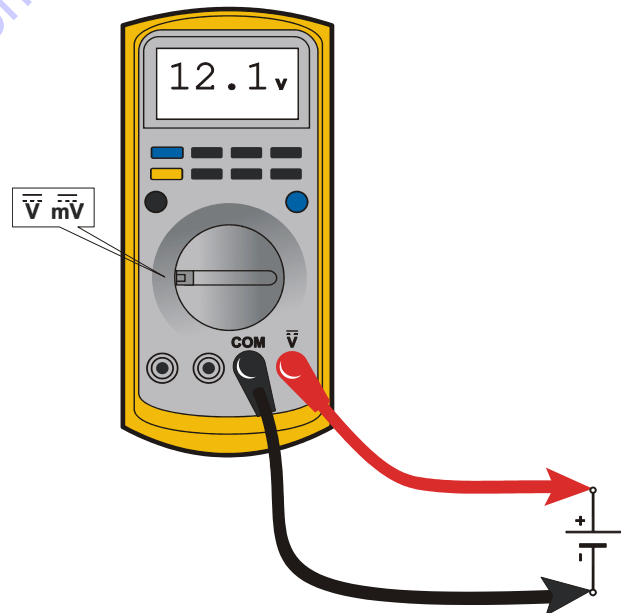


Figure 7-1. Voltage Measurement (DC)

- If meter is not auto ranging, set it to the correct range (See multimeter's operation manual).
- Use firm contact with meter leads.

Resistance Measurement

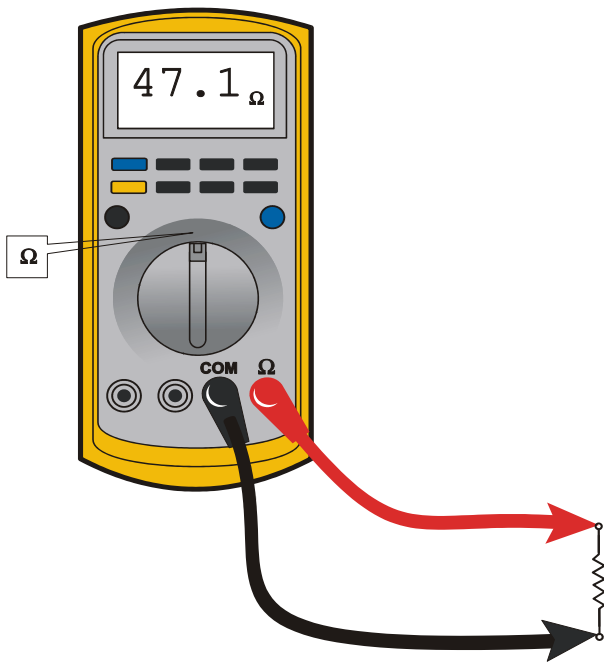


Figure 7-2. Resistance Measurement

- First test meter and leads by touching leads together. Resistance should read a short circuit (very low resistance).
- Circuit power must be turned OFF before testing resistance.
- Disconnect component from circuit before testing.
- If meter is not auto ranging, set it to the correct range (See multimeter's operation manual).
- Use firm contact with meter leads.

Continuity Measurement

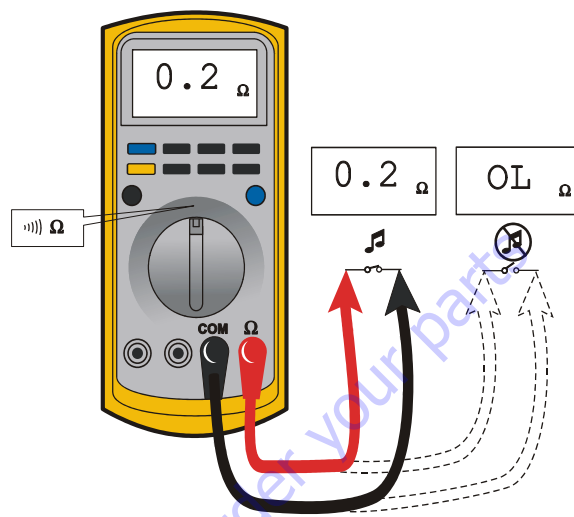


Figure 7-3. Continuity Measurement

- Some meters require a separate button press to enable audible continuity testing.
- Circuit power must be turned OFF before testing continuity.
- Disconnect component from circuit before testing.
- Use firm contact with meter leads.
- First test meter and leads by touching leads together. Meter should produce an audible alarm, indicating continuity.

Current Measurement

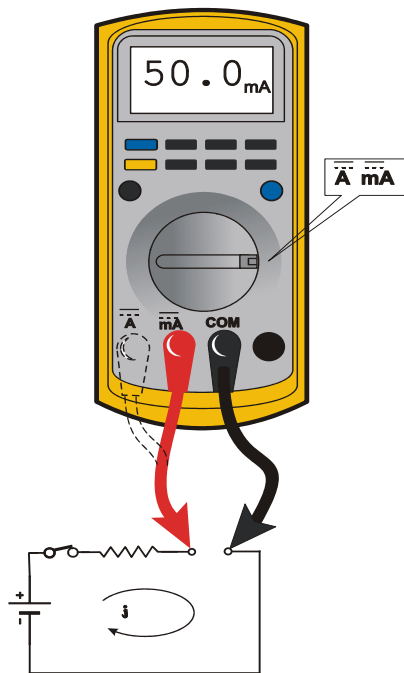


Figure 7-4. Current Measurement (DC)

- Set up the meter for the expected current range.
- Be sure to connect the meter leads to the correct jacks for the current range you have selected.
- If meter is not auto ranging, set it to the correct range (See multi meter's operation manual).
- Use firm contact with meter leads.

7.3 APPLYING SILICONE DIELECTRIC COMPOUND TO ELECTRICAL CONNECTIONS

NOTE: This section is not applicable for battery terminals.

NOTICE

JLG P/N 0100048 DIELECTRIC GREASE (NOVAGARD G661) IS THE ONLY MATERIAL APPROVED FOR USE AS A DIELECTRIC GREASE.

NOTE: Do NOT apply dielectric grease to the following connections:

- Main Boom Rotary sensor connections (on Celesco Sensor).
- LSS Modules connections.
- Deutz EMR 2 ECM connection.

Silicone Dielectric Compound must be used on all electrical connections except for those mentioned above for the following reasons:

- To prevent oxidation at the mechanical joint between male and female pins.
- To prevent electrical malfunction caused by low level conductivity between pins when wet.

Use the following procedure to apply Silicone Dielectric Compound to the electrical connectors. This procedure applies to all plug connections not enclosed in a box. Silicone grease should not be applied to connectors with external seals.

1. To prevent oxidation, silicone grease must be packed completely around male and female pins on the inside of the connector prior to assembly. This is most easily achieved by using a syringe.

NOTE: Over a period of time, oxidation increases electrical resistance at the connection, eventually causing circuit failure.

2. To prevent shorting, silicone grease must be packed around each wire where they enter the outside of the connector housing. Also, silicone grease must be applied at the joint where the male and female connectors come together. Any other joints (around strain reliefs, etc.) where water could enter the connector should also be sealed.

NOTE: This condition is especially common when machines are pressure washed since the washing solution is much more conductive than water.

- Anderson connectors for the battery boxes and battery chargers should have silicone grease applied to the contacts only.

NOTE: *Curing-type sealants might also be used to prevent shorting and would be less messy, but would make future pin removal more difficult.*


When applied to electrical connections, dielectric grease helps to prevent corrosion of electrical contacts and improper conductivity between contacts from moisture intrusion. Open and sealed connectors benefit from the application of dielectric grease.

Dielectric grease shall be applied to all electrical connectors at the time of connection (except those noted under Exclusions).

Installation of Dielectric Grease

Before following these instructions, refer to excluded connector types (See Exclusions below).

- Use dielectric grease in a tube for larger connection points or apply with a syringe for small connectors.
- Apply dielectric grease to the female contact (fill it approximately $\frac{1}{2}$ full; see example below).
- Leave a thin layer of dielectric grease on the face of the connector.
- Assemble the connector system immediately to prevent moisture ingress or dust contamination.
- Pierce one of the unused wire seals prior to assembly if the connector system tends to trap air (i.e. AMP Seal) and then install a seal plug.

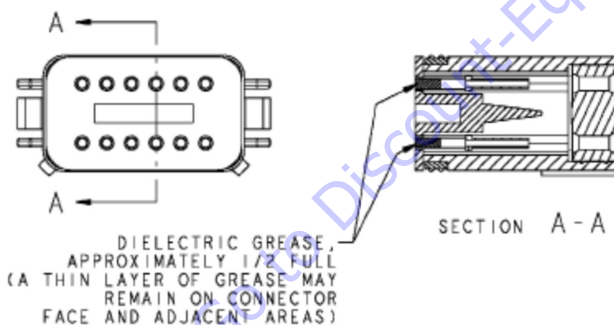

Deutsch HD, DT, DTM, DRC Series

The Deutsch connector system is commonly used for harsh environment interconnect. Follow the installation instructions.



AMP Seal

The AMP Seal connector system is used on the Control ADE Platform and Ground Modules.

Apply dielectric grease to the female contact. If trapped air prevents the connector from latching, pierce one of the unused wire seals. After assembly, install a seal plug (JLG #4460905) in that location to prevent moisture ingress.

Note that seal plugs may be installed by the wire harness manufacturer if an unused wire seal becomes compromised (wire inserted in the wrong cavity during assembly and then corrected).



Figure 7-5. Application to Female Contacts


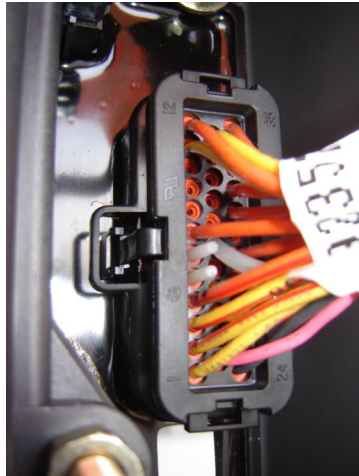


Figure 7-6. Use of Seal Plugs

AMP Mate-N-Lok

This connector system is widely used inside enclosures for general purpose interconnect. Follow the general guidance for installation.

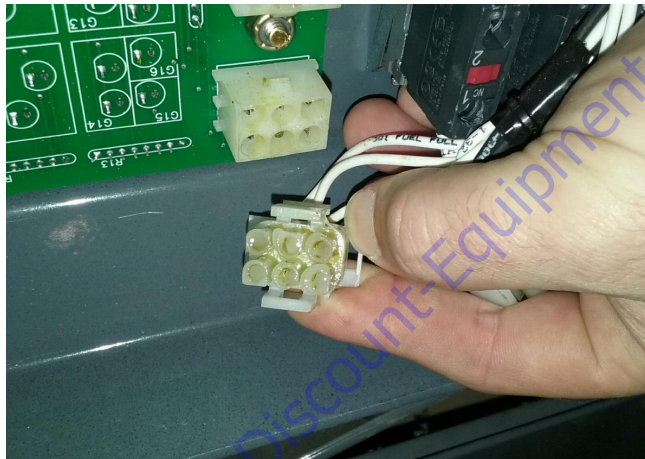

DIN Connectors

This connector is typically used on hydraulic valves. Follow the installation instructions.



Exclusions

A limited number of connectors do not benefit from dielectric grease, or may be permanently damaged by application. Dielectric grease may not be required in properly sealed enclosures.

BRAD HARRISON / PHOENIX CONTACT M12

The connector uses gold contact material to resist corrosion and an o-ring seal for moisture integrity. If dielectric grease is mistakenly applied to this connector system, the low-force contacts cannot displace the grease to achieve electrical contact. Once contaminated, there is no practical way to remove the dielectric grease (replacement of female contacts required). The JLG Load Sensing System and Rotary Angle Sensors are examples of components with the M12 connector system.



Figure 7-7. Brad-Harrison M12



Figure 7-8. Phoenix Contact M12

ENGINE CONTROL UNIT CONNECTORS

moisture integrity. However, the low-force contacts cannot displace dielectric grease and create electrical contact. It is possible to use solvents (i.e. contact cleaner or mineral spirits) for the removal of improperly applied dielectric grease. The EMR4 engine control module from Deutz employs this connector system (for example).



SEALED ENCLOSURES

Application of dielectric grease is not required in properly sealed enclosures. To meet criteria, the enclosure must be rated to at least IP66 (dust tight; protected from powerful jets of water). The enclosure must be fitted with a high quality, continuous gasket and all wiring must pass through cable entrances.




MIL-C-5015 SPEC CONNECTOR'S

Crown Connector Inc's recommendation is to not use dielectric grease for this series connector. For similar model series connectors, the manufacturer should be contacted for confirmation before applying dielectric grease. A typical application for this connector is on David Clark Intercom connections in Aerial Work Platforms.



MOLEX CMC SERIES CONNECTORS

The CMC connector family is a sealed, high-density connection system using matte-seal technology for CP 0.635 and 1.50 mm terminals. To guarantee IP6K7 and IP6K9 sealing, a seal plug option is used. However, the low-force contacts cannot displace dielectric grease and create electrical contact. It is possible to use solvents (i.e. contact cleaner or mineral spirits) for the removal of improperly applied dielectric grease. The flexbox control modules from JDES employ this connector system (for example).

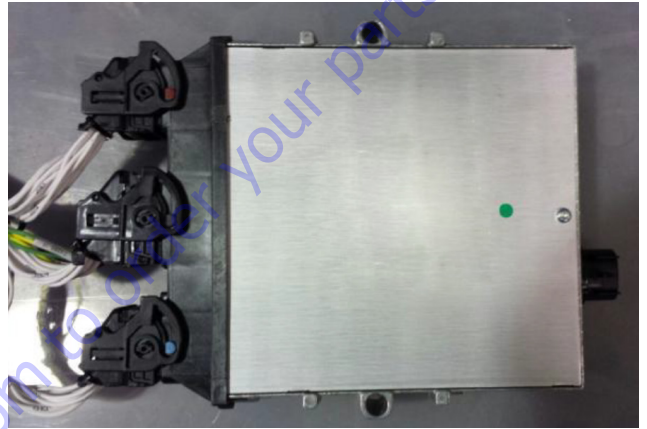

Go to Discount-Equipment.com to check your parts

7.4 AMP CONNECTOR

Assembly

Check to be sure the wedge lock is in the open, or as-shipped, position (See Figure 7-9.). Proceed as follows:

1. To insert a contact, push it straight into the appropriate circuit cavity as far as it will go (See Figure 7-11.).
2. Pull back on the contact wire with a force of 1 or 2 lbs. to be sure the retention fingers are holding the contact (See Figure 7-11.).

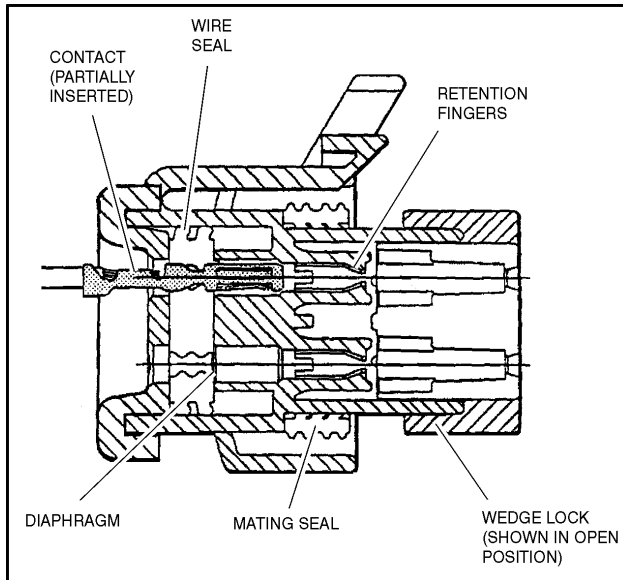


Figure 7-9. Connector Assembly Figure 1

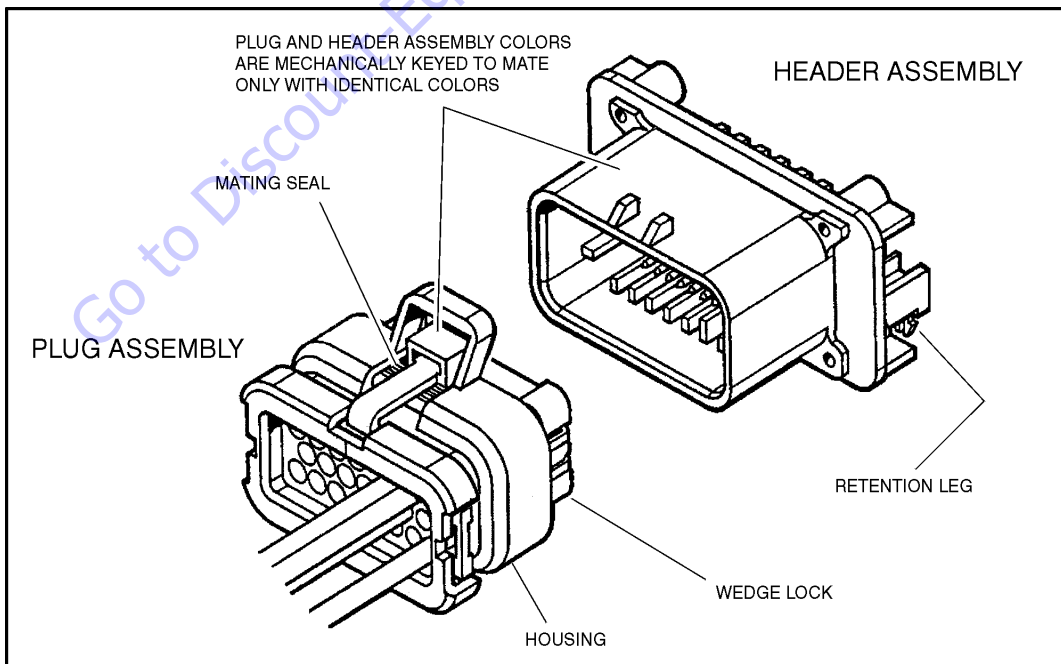


Figure 7-10. AMP Connector

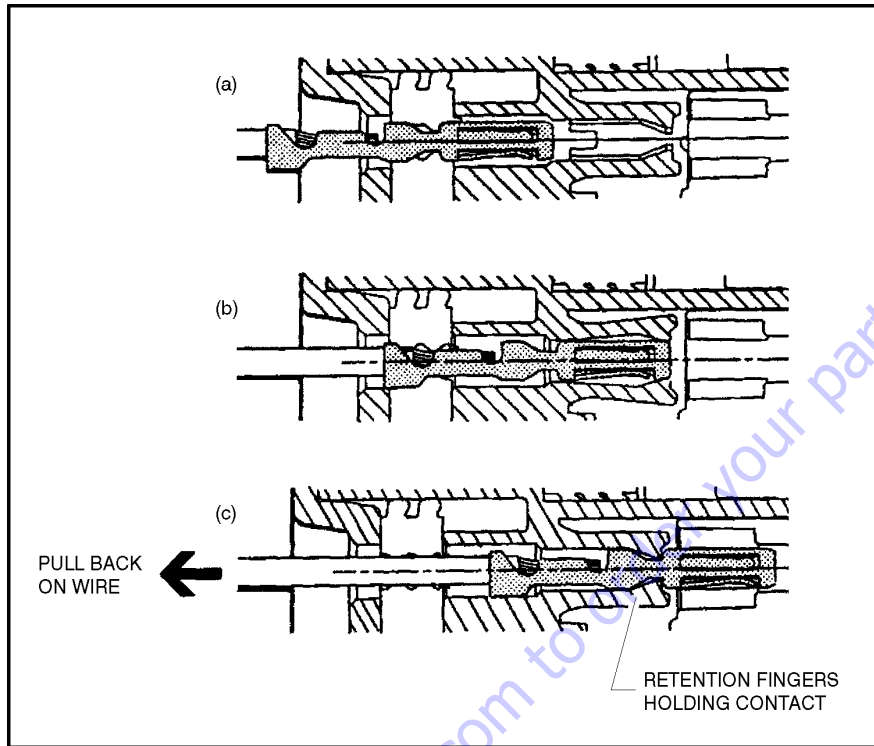


Figure 7-11. Connector Assembly Figure 2

3. After all required contacts have been inserted, the wedge lock must be closed to its locked position. Release the locking latches by squeezing them inward (See Figure 7-12.).

4. Slide the wedge lock into the housing until it is flush with the housing (See Figure 7-13.).

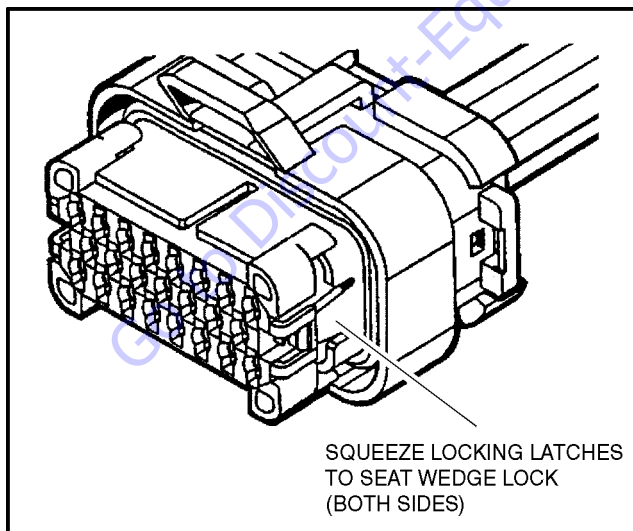


Figure 7-12. Connector Assembly Figure 3

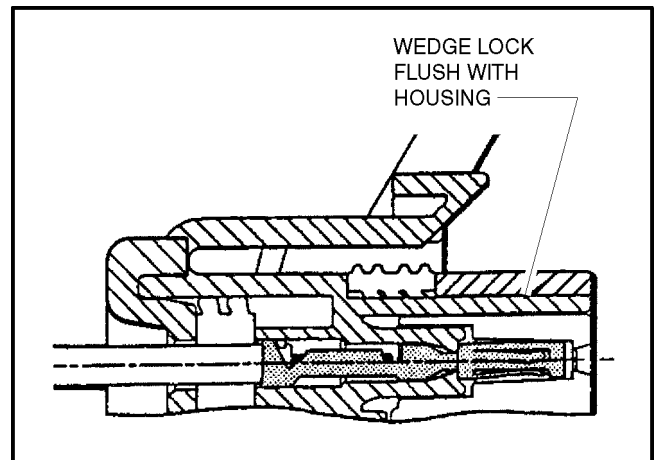


Figure 7-13. Connector Assembly Figure 4

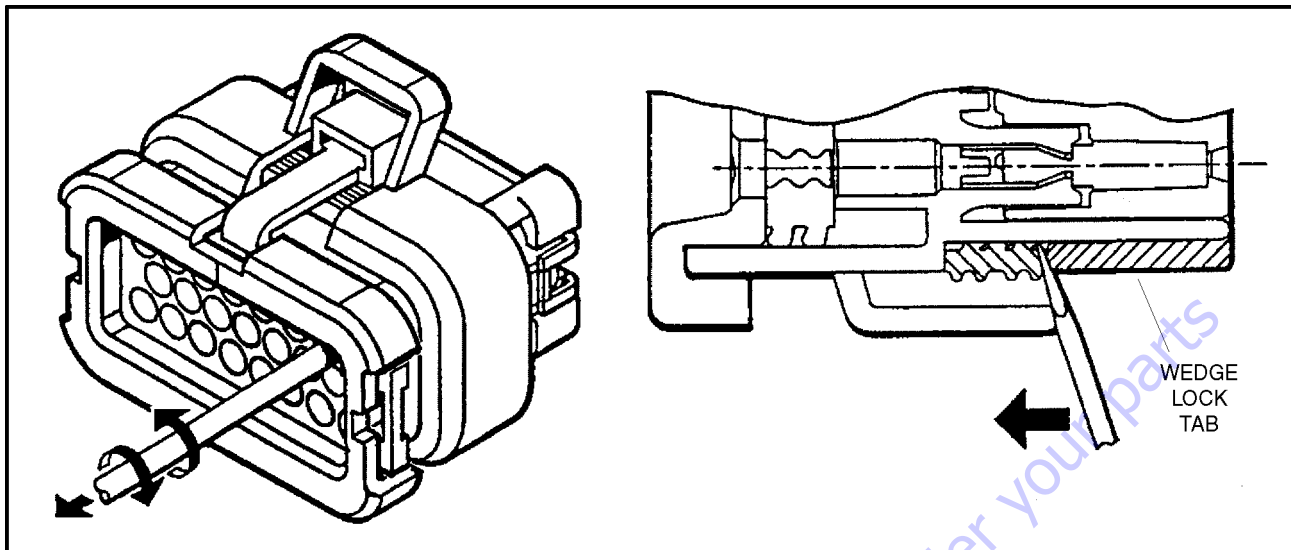


Figure 7-14. Connector Disassembly

Disassembly

5. Insert a 4.8 mm (3/16 in.) wide screwdriver blade between the mating seal and one of the red wedge lock tabs.
6. Pry open the wedge lock to the open position.
7. While rotating the wire back and forth over a half turn (1/4 turn in each direction), gently pull the wire until the contact is removed.

NOTE: The wedge lock should never be removed from the housing for insertion or removal of the contacts.

Wedge Lock

The wedge lock has slotted openings in the forward, or mating end. These slots accommodate circuit testing in the field, by using a flat probe such as a pocket knife. DO NOT use a sharp point such as an ice pick.

Service - Voltage Reading

NOTICE

DO NOT PIERCE WIRE INSULATION TO TAKE VOLTAGE READINGS.

It has been common practice in electrical troubleshooting to probe wires by piercing the insulation with a sharp point. This practice should be discouraged when dealing with the AMPSEAL plug assembly, or any other sealed connector system. The resulting pinholes in the insulation will allow moisture to invade the system by traveling along the wire strands. This nullifies the effectiveness of the connector seals and could result in system failure.

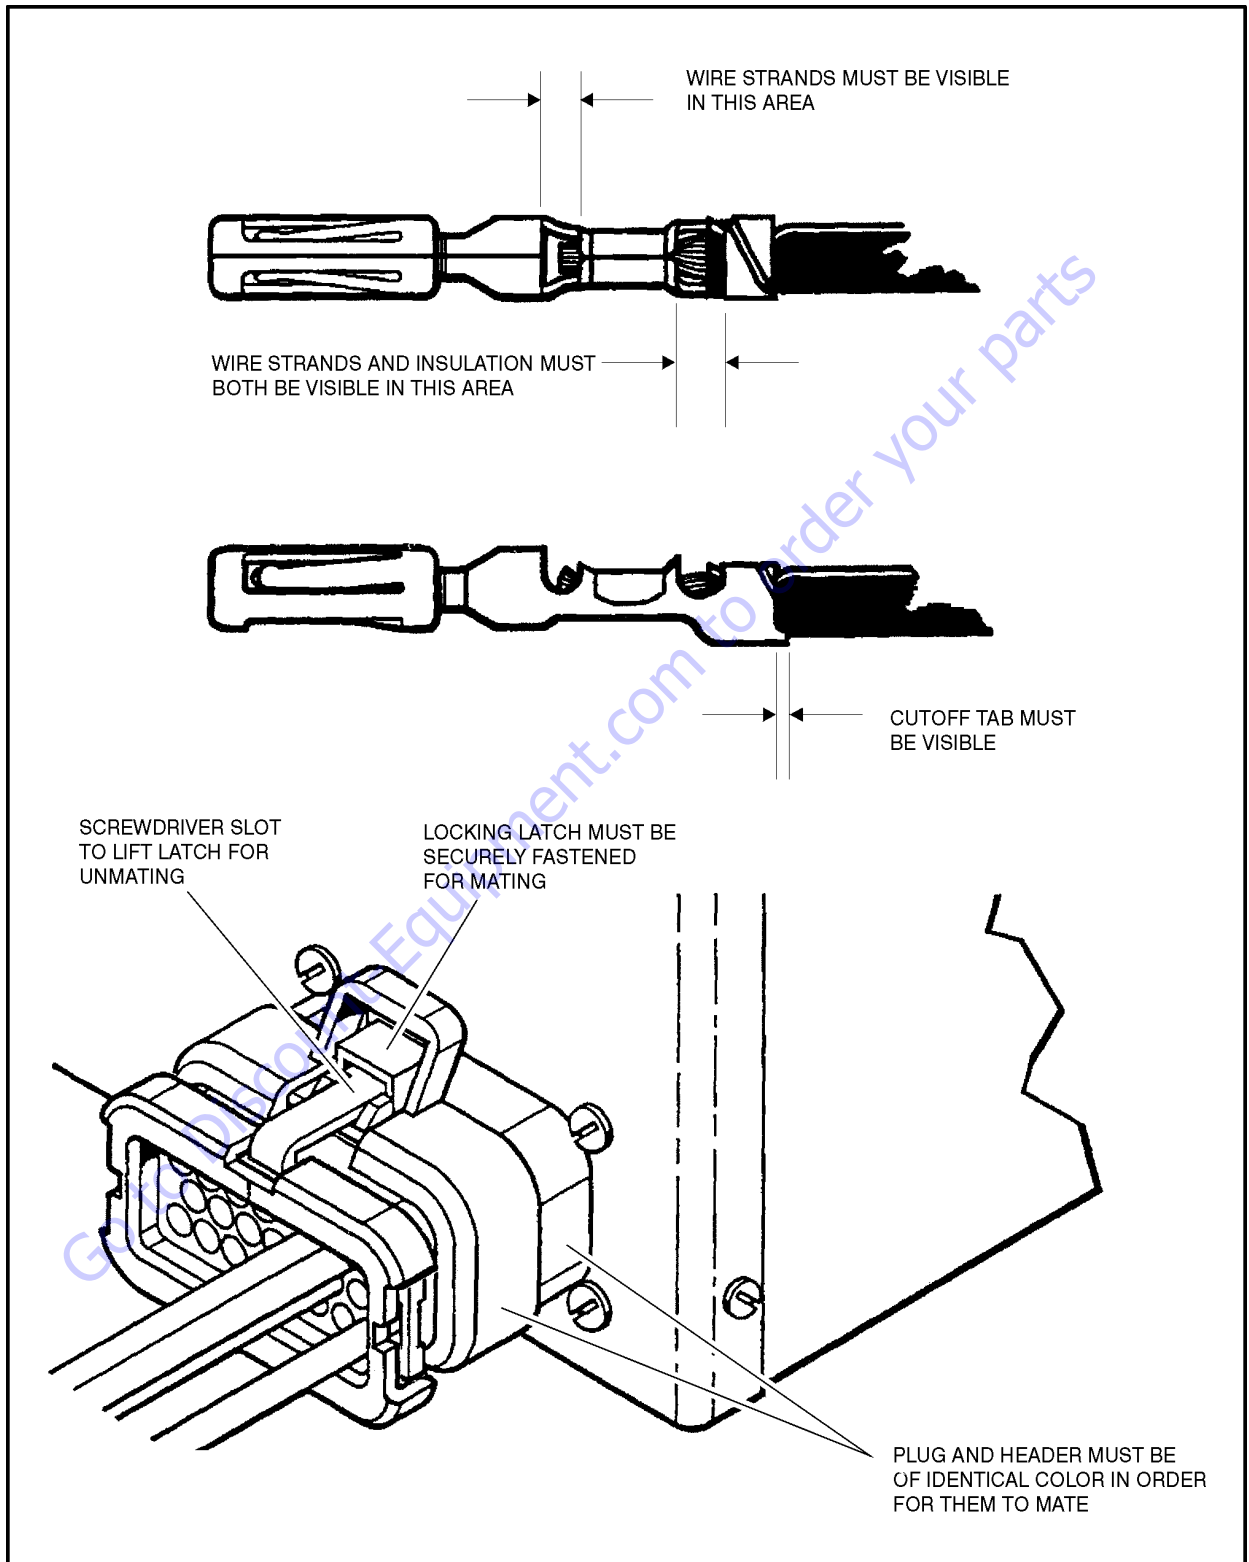


Figure 7-15. Connector Installation

7.5 DEUTSCH CONNECTORS

DT/DTP Series Assembly

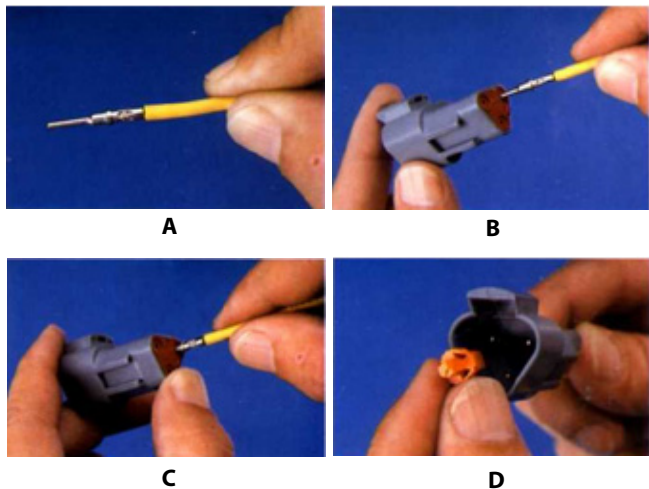


Figure 7-16. DT/DTP Contact Installation

1. Grasp crimped contact about 25mm behind the contact barrel.
2. Hold connector with rear grommet facing you.
3. Push contact straight into connector grommet until a click is felt. A slight tug will confirm that it is properly locked in place.
4. Once all contacts are in place, insert wedgelock with arrow pointing toward exterior locking mechanism. The wedgelock will snap into place. Rectangular wedges are not oriented. They may go in either way.

NOTE: The receptacle is shown - use the same procedure for plug.

DT/DTP Series Disassembly

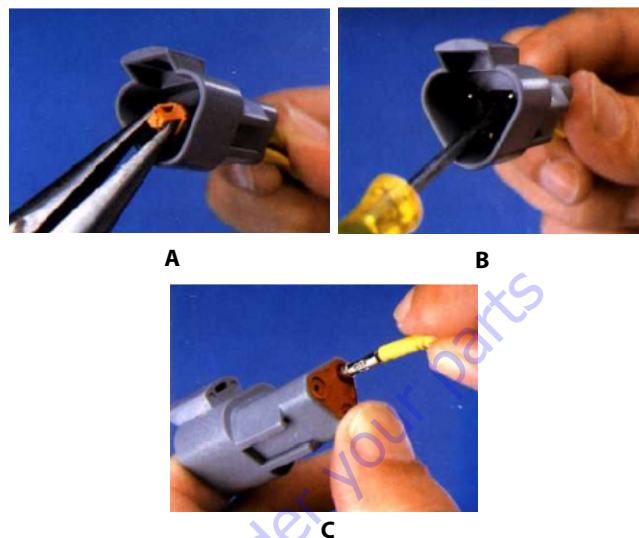


Figure 7-17. DT/DTP Contact Removal

1. Remove wedgelock using needle nose pliers or a hook shaped wire to pull wedge straight out.
2. To remove the contacts, gently pull wire backwards, while at the same time releasing the locking finger by moving it away from the contact with a screwdriver.
3. Hold the rear seal in place, as removing the contact may displace the seal.

HD30/HDP20 Series Assembly

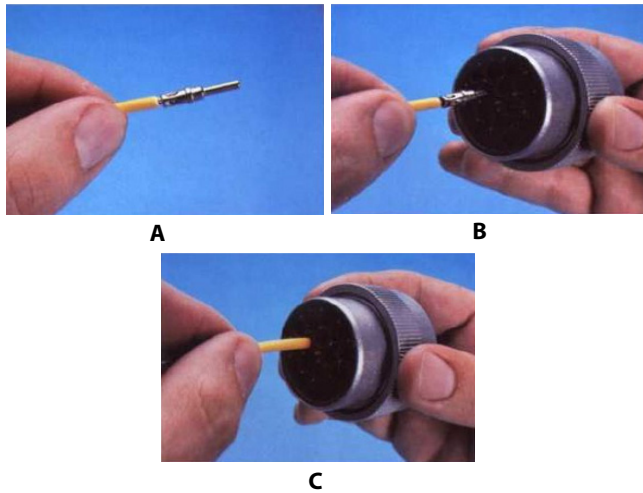


Figure 7-18. HD/HDP Contact Installation

1. Grasp contact about 25mm behind the contact crimp barrel.
2. Hold connector with rear grommet facing you.
3. Push contact straight into connector grommet until a positive stop is felt. A slight tug will confirm that it is properly locked in place.

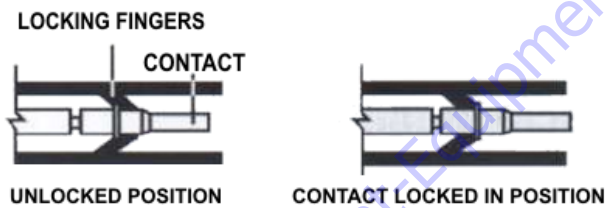


Figure 7-19. HD/HDP Locking Contacts Into Position

NOTE: For unused wire cavities, insert sealing plugs for full environmental sealing.

HD30/HDP20 Series Disassembly

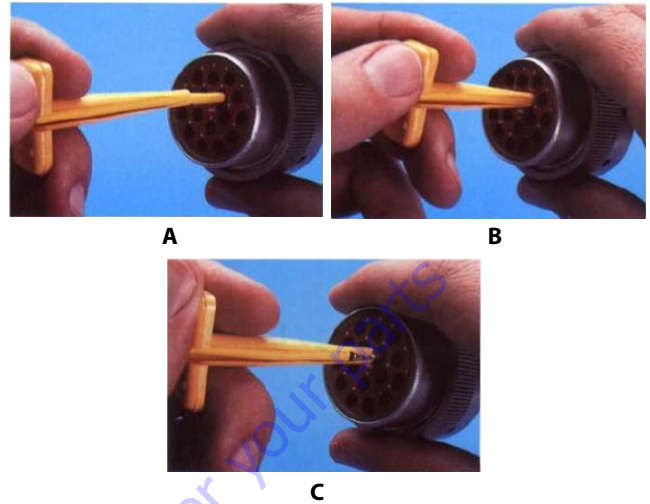


Figure 7-20. HD/HDP Contact Removal

1. With rear insert toward you, snap appropriate size extractor tool over the wire of contact to be removed.
2. Slide tool along into the insert cavity until it engages contact and resistance is felt.
3. Pull contact-wire assembly out of connector.

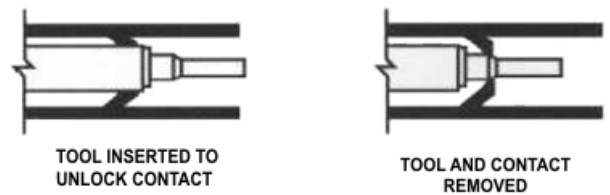



Figure 7-21. HD/HDP Unlocking Contacts

NOTE: Do Not twist or insert tool at an angle.

7.6 TELEMATICS GATEWAY


Personnel using machines equipped with an optional telematics gateway will be able to view the following data through their telematics device:

JLG LABEL	DESCRIPTION	UNIT
Engine Speed	Actual engine speed.	RPM
DEF Tank Level (If Equipped)	Indicates the level of DEF (diesel exhaust fluid) within the DEF tank if the machine is equipped with DEF tank. <ul style="list-style-type: none"> • 0% = Empty • 100% = Full 	Percentage (%)
JLG Machine Faults: Active / Not-Active	<ul style="list-style-type: none"> • 00 - No Machine Faults • 01 - Active Machine Fault • 10 - Error • 11 - Not available 	Bit
Total Idle Fuel Used	Total amount of fuel used during vehicle operation during idle conditions.	Liters
Total Idle Hours	Total time of engine operation during idle conditions.	Seconds
Total Engine Hours	Total time of engine operation.	Seconds
Total Fuel Used	Total amount of fuel used during vehicle operation.	Liters
Fuel Rate	Amount of fuel consumed by engine per unit of time.	Liters/Hour
Fuel Level	Ratio of fuel volume to the total volume of the fuel storage container. When a low fuel limit switch is present, the fuel level will indicate "full" until the switch opens, which will then indicate 10% fuel remaining. When Fuel Level 2 (SPN 38) is not used, Fuel Level 1 represents the total fuel in all fuel storage containers. When Fuel Level 2 is used, Fuel Level 1 represents the fuel level in the primary or left side fuel storage container.	Percentage (%)
DM1 Engine Faults	Shows actual engine fault codes.	N/A

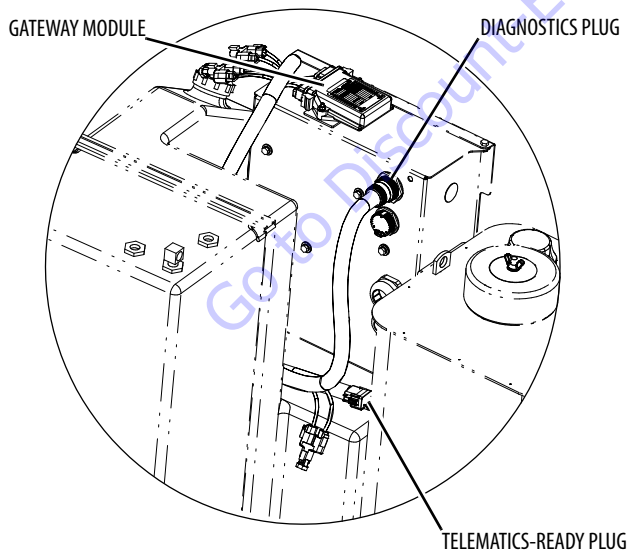

Telematics-Ready (TCU) Plug

The telematics-ready (TCU) plug is a standard 12-pin Deutsch connector. Pin-out locations are shown below:

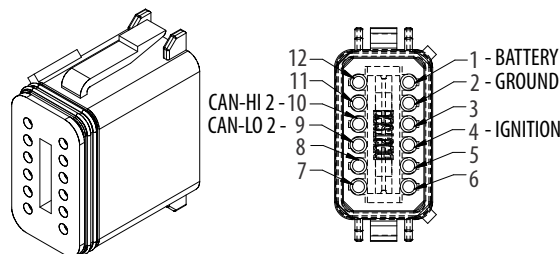

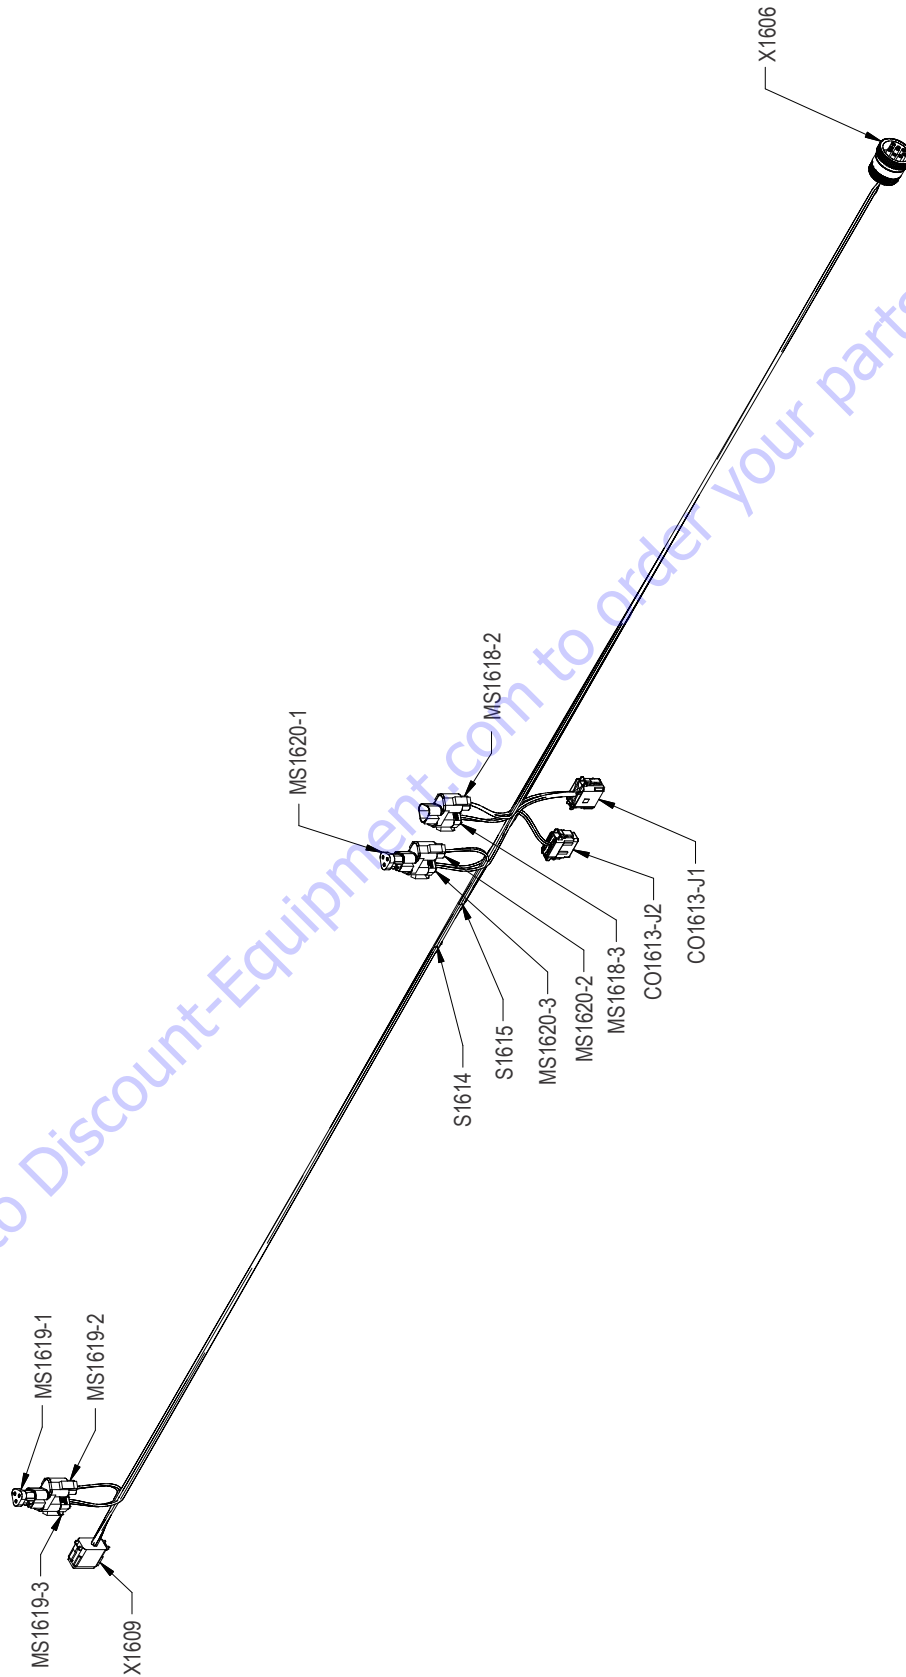


Figure 7-22. Telematics Gateway Harness - Sheet 1 of 3

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

X1609 (TCU)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
1	RED	1-0 BAT	16 AWG	GXL	X1606 (B)
2	BLK	0-0 GND	16 AWG	GXL	S1615 (1)
4	ORN	2-0 IGN	16 AWG	GXL	S1614 (1)
9	GRN	CANL2	18 AWG	GXL	MS1619-2 (B)
10	YEL	CANH2	18 AWG	GXL	MS1619-2 (A)

MS1619-2 (CAN-T 2)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
A	YEL	CANH2	18 AWG	GXL	X1609 (10)
B	GRN	CANL2	18 AWG	GXL	X1609 (9)

MS1619-3 (CAN-T 2)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
A	YEL	CANH2	18 AWG	GXL	MS1620-2 (A)
B	GRN	CANL2	18 AWG	GXL	MS1620-2 (B)

CO1613-J1 (GATEWAY 1)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
9	GRN	CAN1	18 AWG	GXL	MS1618-2 (B)
10	YEL	CANH1	18 AWG	GXL	MS1618-2 (A)
11	BLK	0-2 GND	16 AWG	GXL	S1615 (2)
12	ORN	2-2 IGN	16 AWG	GXL	S1614 (2)

CO1613-J2 (GATEWAY 2)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
9	GRN	CANL2	18 AWG	GXL	MS1620-3 (B)
10	YEL	CANH2	18 AWG	GXL	MS1620-3 (A)

MS1620-2 (CAN-T 2)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
A	YEL	CANH2	18 AWG	GXL	MS1619-3 (A)
B	GRN	CANL2	18 AWG	GXL	MS1619-3 (B)

MS1620-3 (CAN-T 2)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
A	YEL	CANH2	18 AWG	GXL	CO1613-J2 (10)
B	GRN	CANL2	18 AWG	GXL	CO1613-J2 (9)

S1614					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
1	ORN	2-0 IGN	16 AWG	GXL	X1609 (4)
2	ORN	2-1 IGN	16 AWG	GXL	X1606 (H)
2	ORN	2-2 IGN	16 AWG	GXL	CO1613-J1 (12)

S1615					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
1	BLK	0-0 GND	16 AWG	GXL	X1609 (2)
2	BLK	0-1 GND	16 AWG	GXL	X1606 (A)
2	BLK	0-2 GND	16 AWG	GXL	CO1613-J1 (11)

MS1618-2 (CAN-T 1)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
A	YEL	CANH1	18 AWG	GXL	CO1613-J1 (10)
B	GRN	CANL1	18 AWG	GXL	CO1613-J1 (9)

MS1618-3 (CAN-T 1)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
A	YEL	CANH1	18 AWG	GXL	X1606 (C)
B	GRN	CANL1	18 AWG	GXL	X1606 (D)

X1606 (DIAG)					
CONN POS	WIRE COLOR	WIRE LABEL	GAUGE	JACKET	TO
A	BLK	0-1 GND	16 AWG	GXL	S1615 (2)
B	RED	1-0 BAT	16 AWG	GXL	X1609 (1)
C	YEL	CANH1	18 AWG	GXL	MS1618-3 (A)
D	GRN	CANL1	18 AWG	GXL	MS1618-3 (B)
H	ORN	2-1 IGN	16 AWG	GXL	S1614 (2)

Figure 7-23. Telematics Gateway Harness - Sheet 2 of 3

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

					FROM		TO	
WIRE NO.	COLOR	WIRE GAUGE	LENGTH (mm)	JACKET	REFERENCE	PIN	REFERENCE	PIN
CAN L2	GRN	18 AWG	1151	GXL	MS1619-3	B	MS1620-2	B
CAN L2	GRN	18 AWG	151	GXL	X1609	9	MS1619-2	B
CAN L1	GRN	18 AWG	157	GXL	MS1618-2	B	CO1613-J1	9
CAN L2	GRN	18 AWG	225	GXL	MS1620-3	B	CO1613-J2	9
CAN L1	GRN	18 AWG	1076	GXL	MS1618-3	B	X1606	D
CAN H2	YEL	18 AWG	155	GXL	X1609	10	MS1619-2	A
CAN H2	YEL	18 AWG	233	GXL	MS1620-3	A	CO1613-J2	10
CAN H1	YEL	18 AWG	157	GXL	MS1618-2	A	CO1613-J1	10
CAN H2	YEL	18 AWG	1150	GXL	MS1619-3	A	MS1620-2	A
CAN H1	YEL	18 AWG	1079	GXL	MS1618-3	A	X1606	C
0-0 GND	BLK	16 AWG	1006	GXL	X1609	2	S1615	1
0-1 GND	BLK	16 AWG	1145	GXL	X1606	A	S1615	2
0-2 GND	BLK	16 AWG	223	GXL	CO1613-J1	11	S1615	2
1-0 BAT	RED	16 AWG	2150	GXL	X1609	1	X1606	B
2-0 IGN	ORN	16 AWG	939	GXL	X1609	4	S1614	1
2-1 IGN	ORN	16 AWG	1212	GXL	S1614	2	X1606	H
2-2 IGN	ORN	16 AWG	287	GXL	CO1613-J1	12	S1614	2

Figure 7-24. Telematics Gateway Harness - Sheet 3 of 3

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

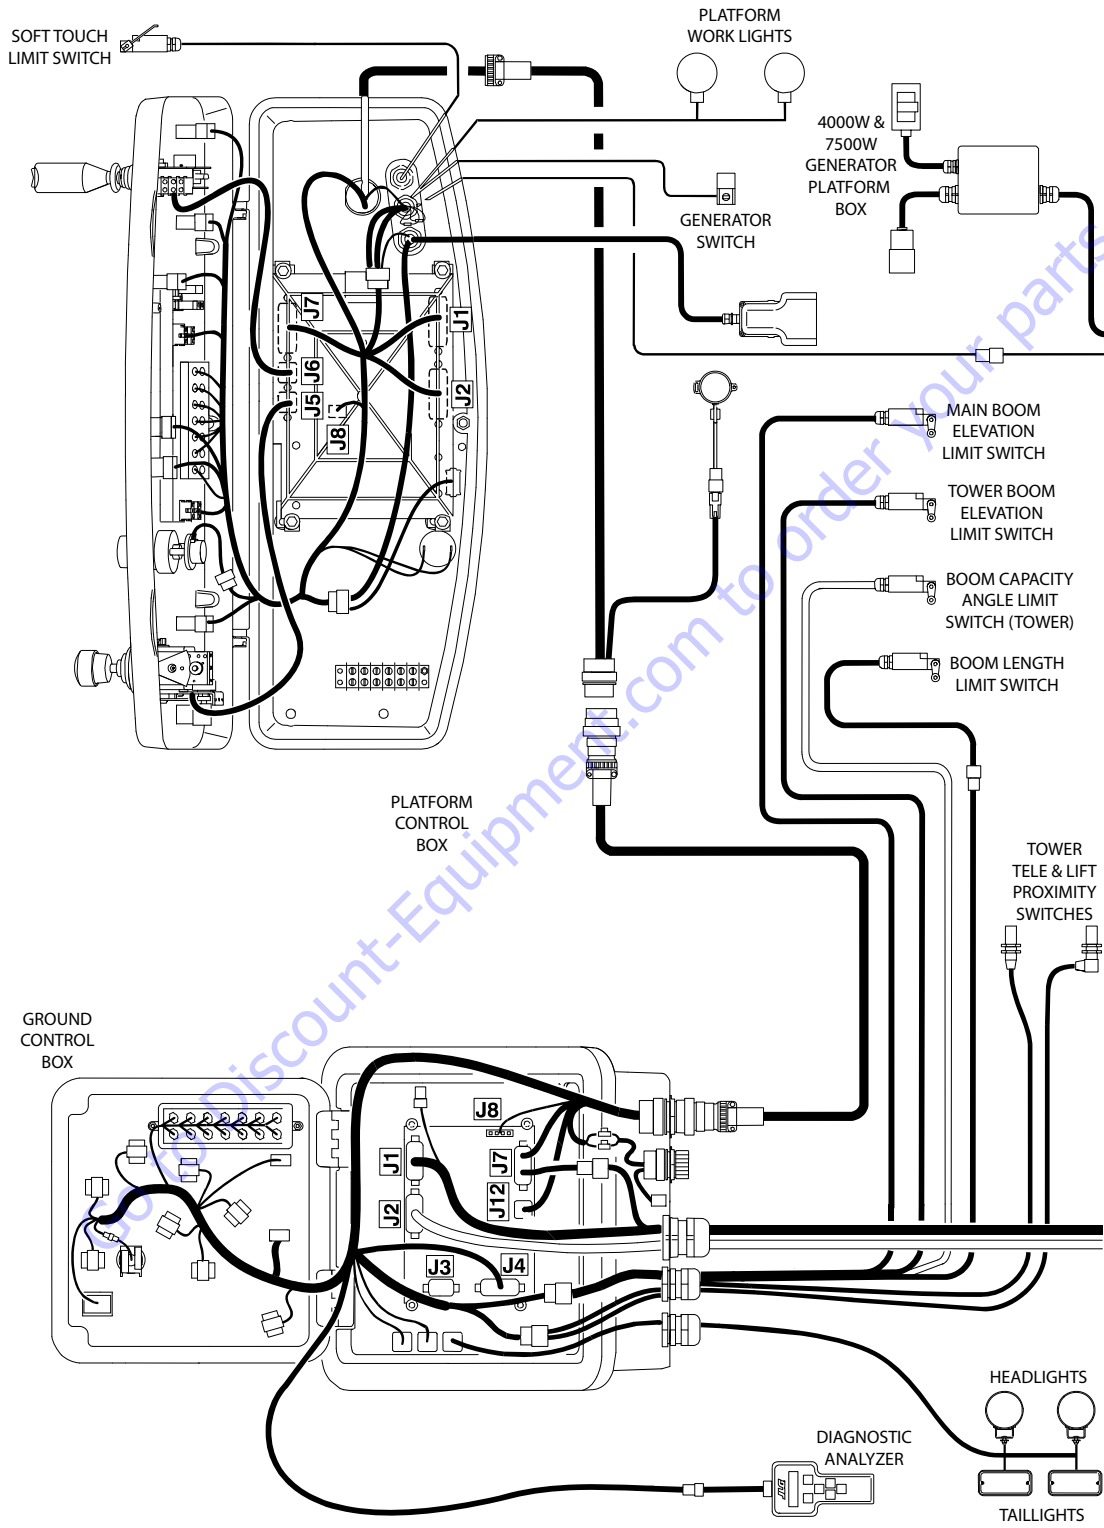


Figure 7-25. Electrical Components Installation - Sheet 1 of 2

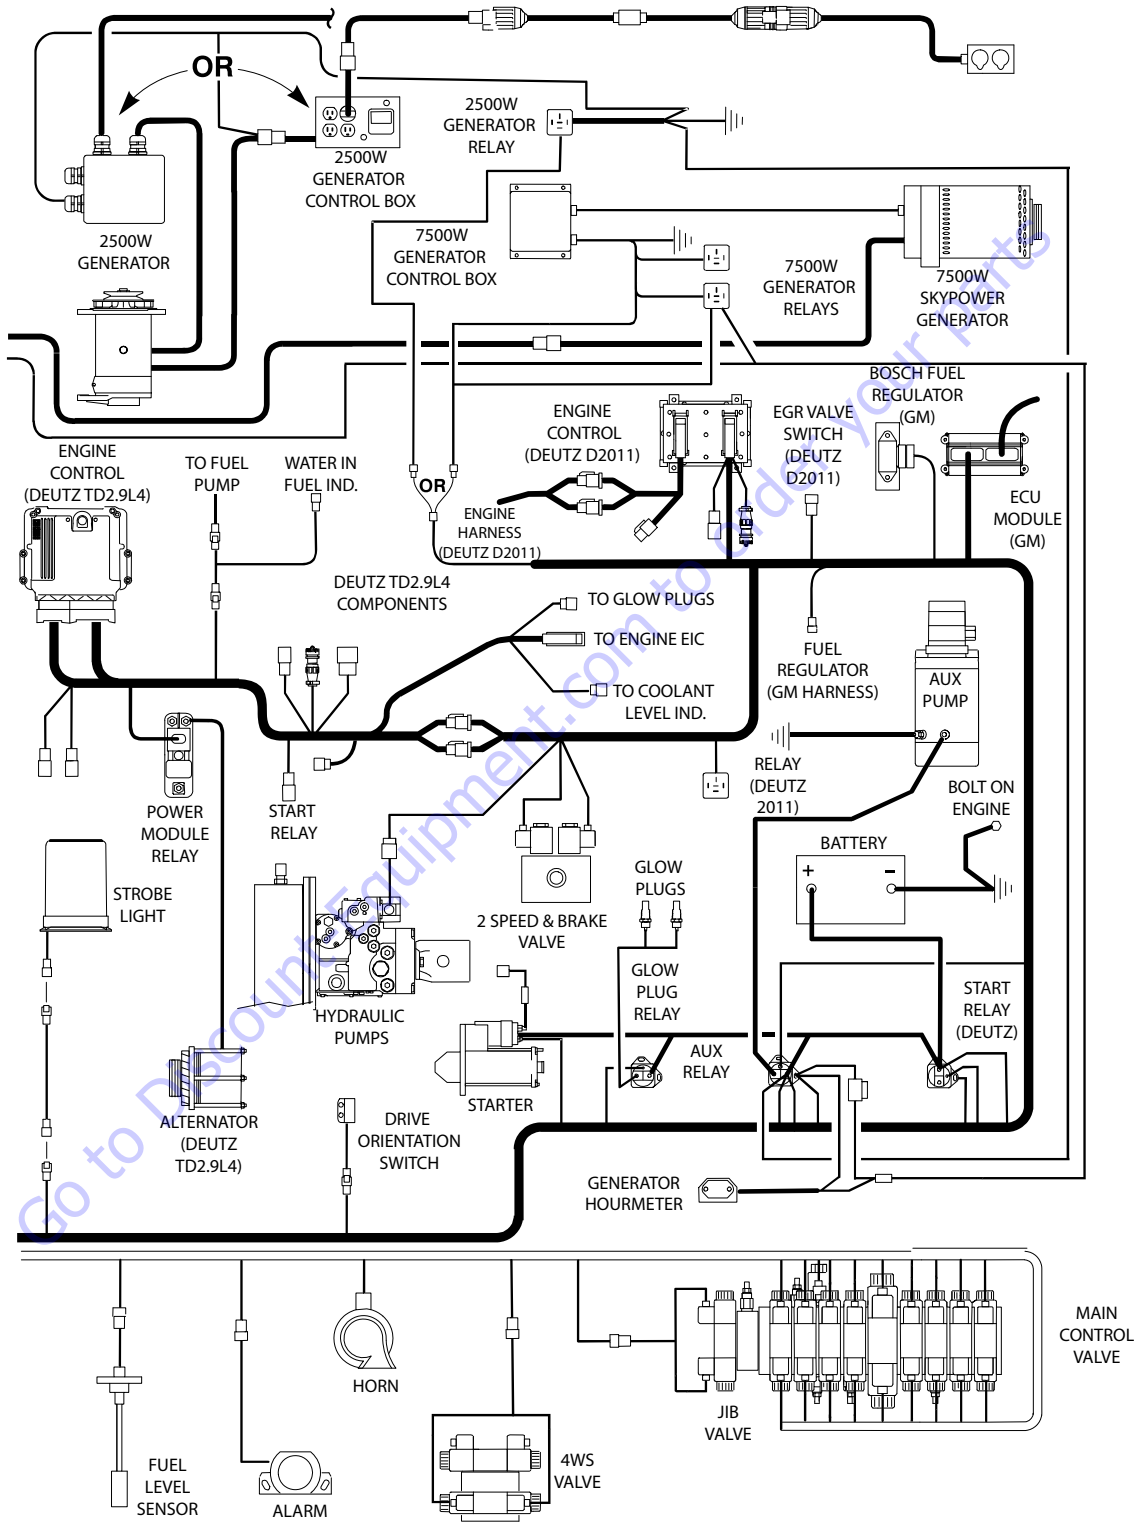


Figure 7-26. Electrical Components Installation - Sheet 2 of 2

7.7 ELECTRICAL SCHEMATICS

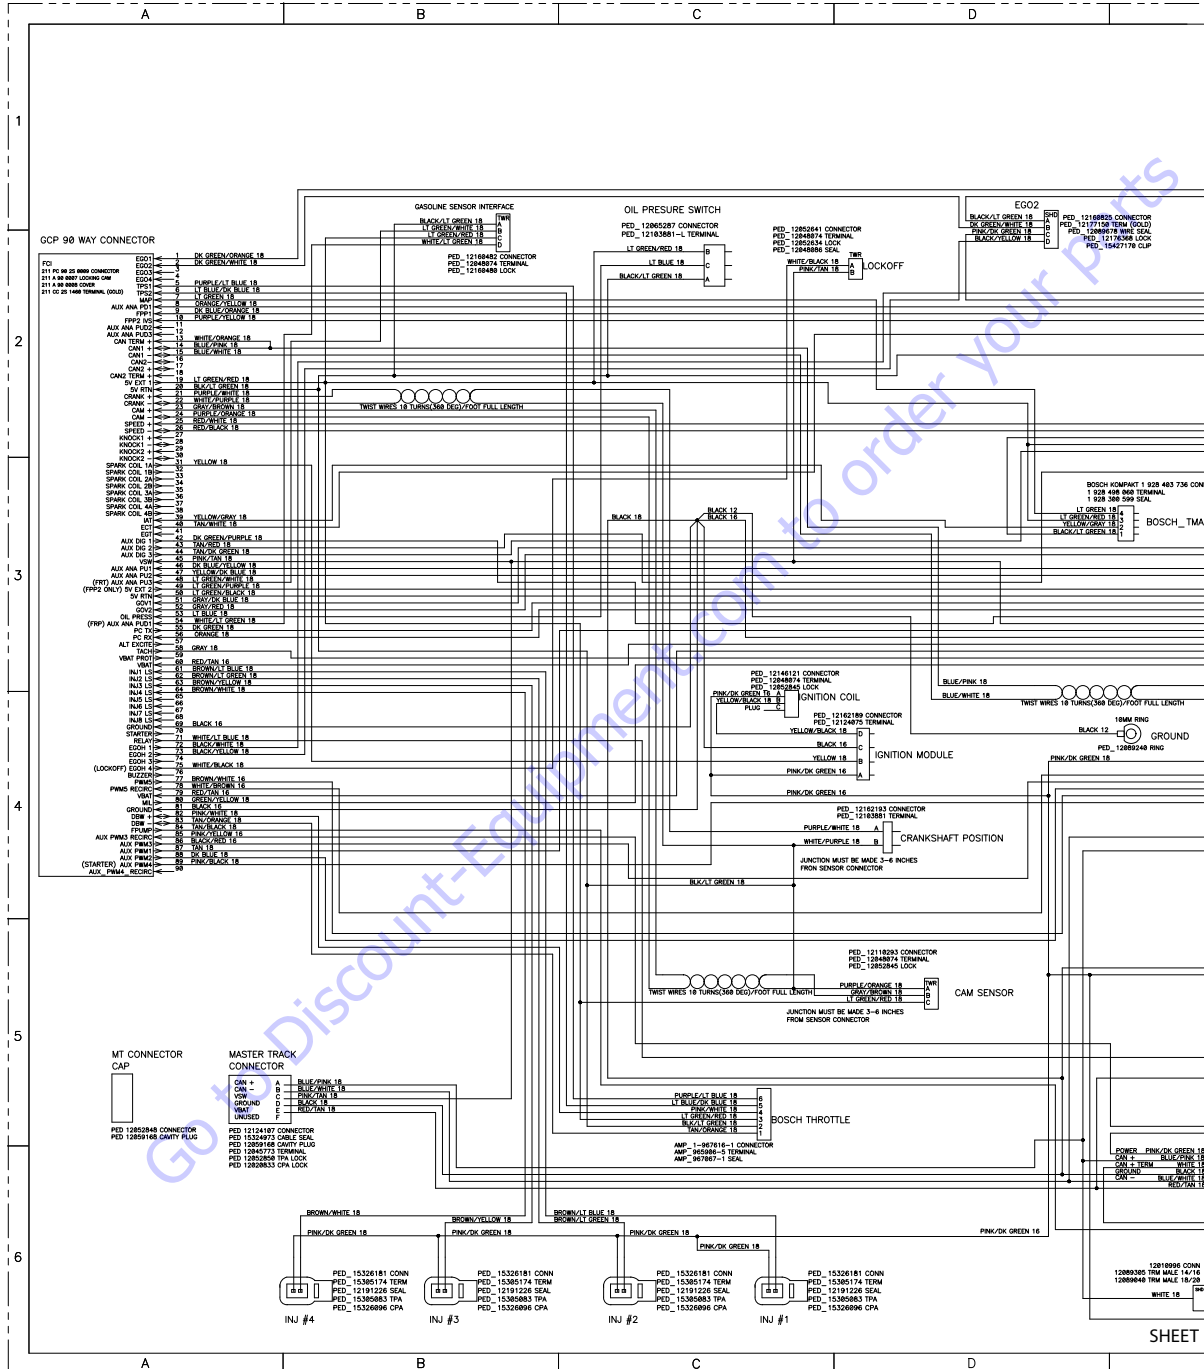


Figure 7-27. Electrical Schematic GM - Sheet 1 of 2

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

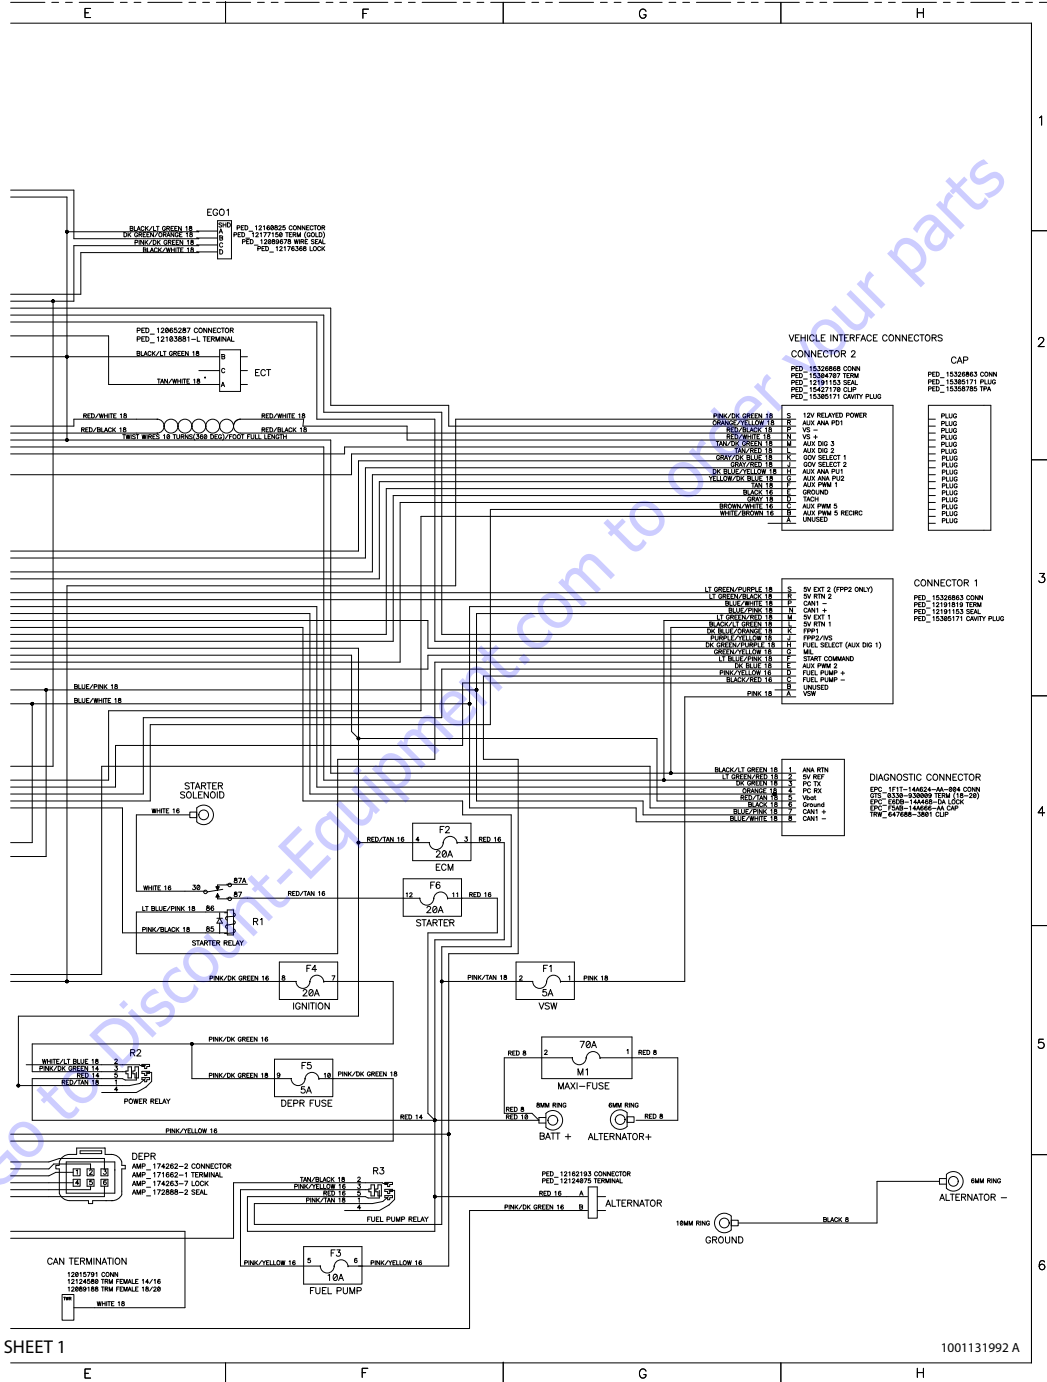


Figure 7-28. Electrical Schematic GM - Sheet 2 of 2

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS


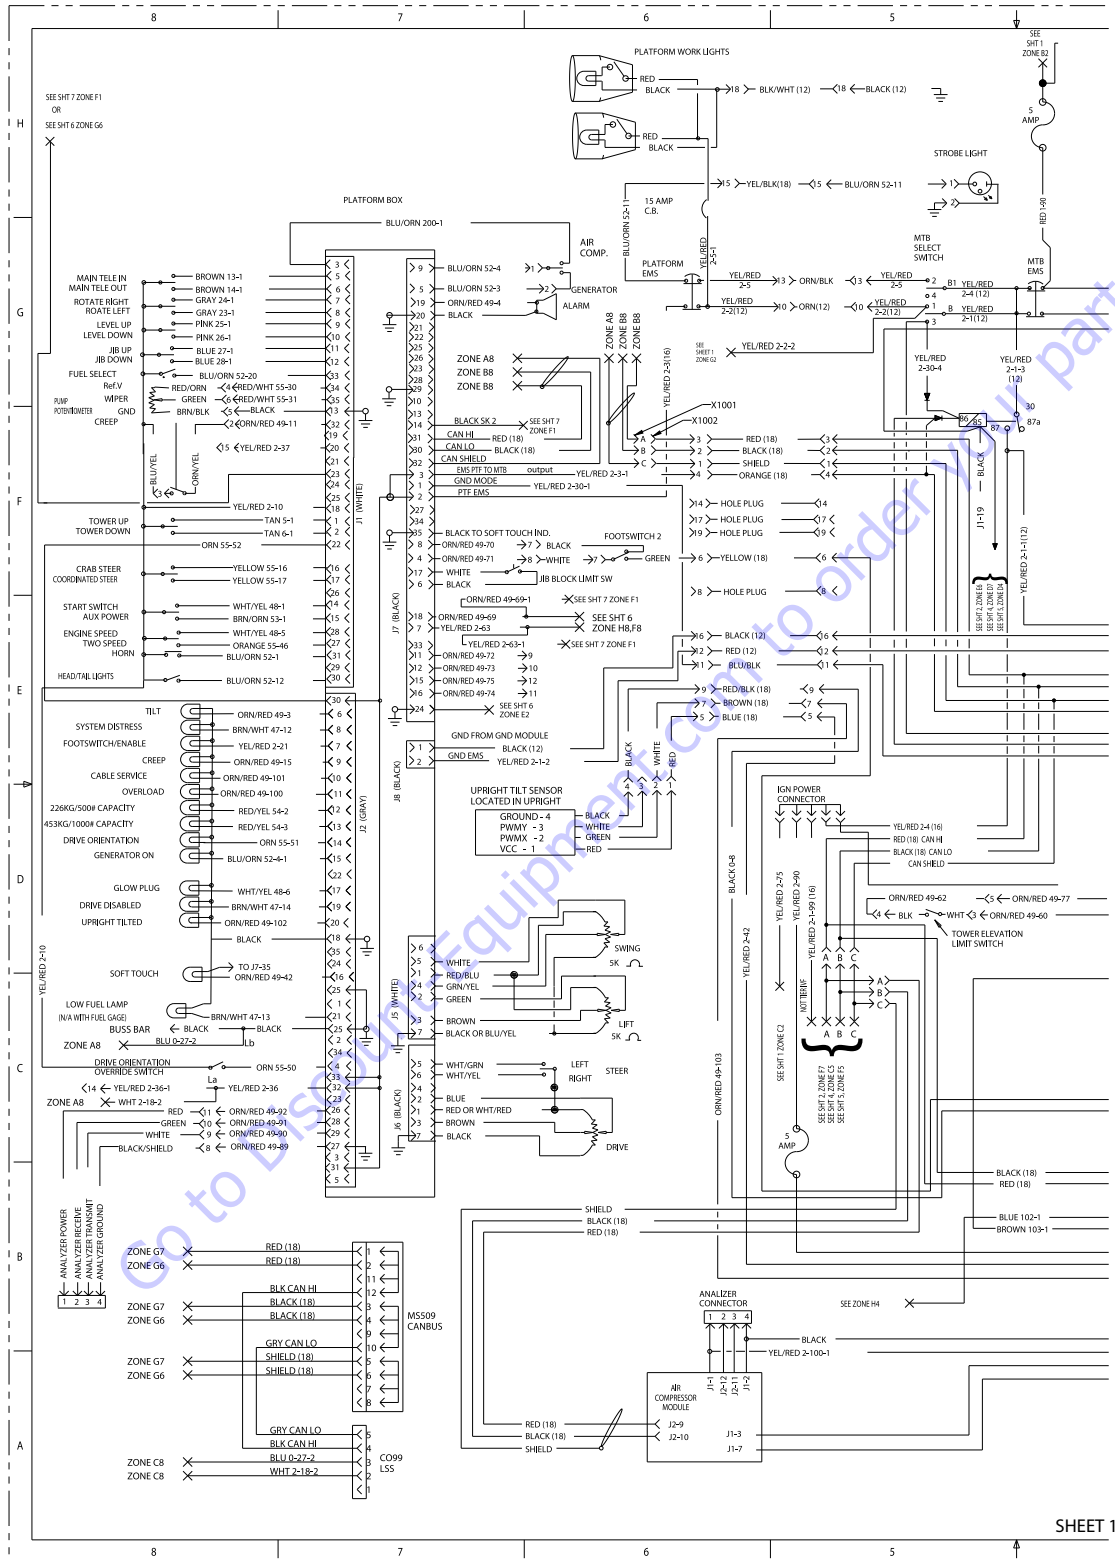


Figure 7-29. Electrical Schematic - Sheet 1 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

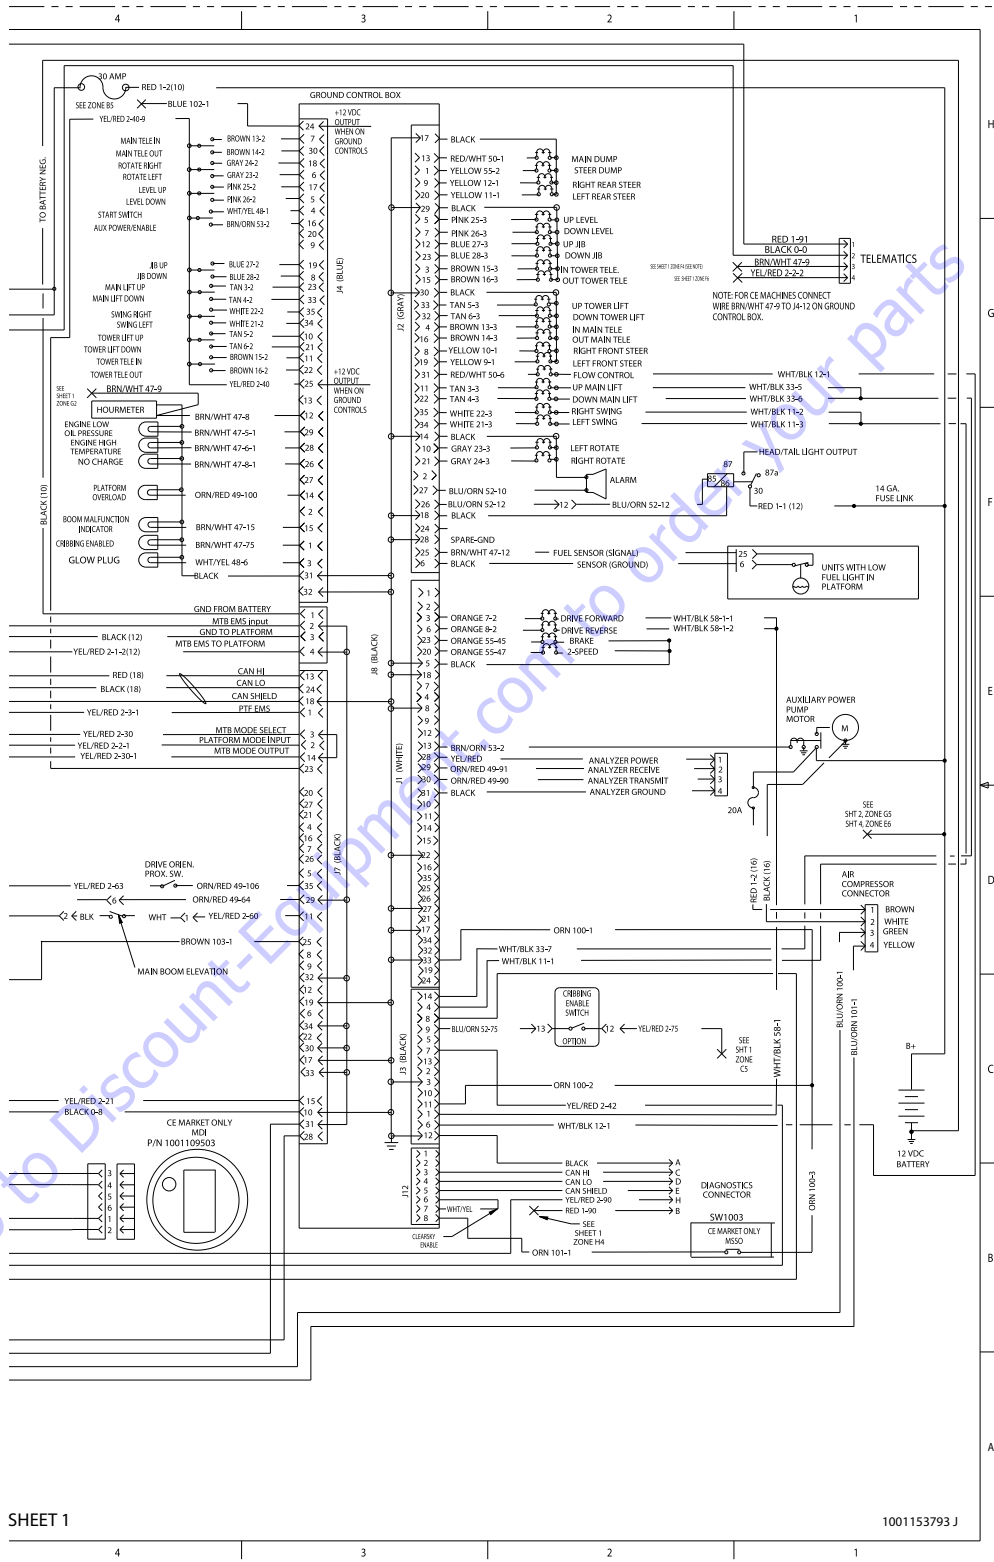

SHEET 1

1001153793 J

Figure 7-30. Electrical Schematic - Sheet 2 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

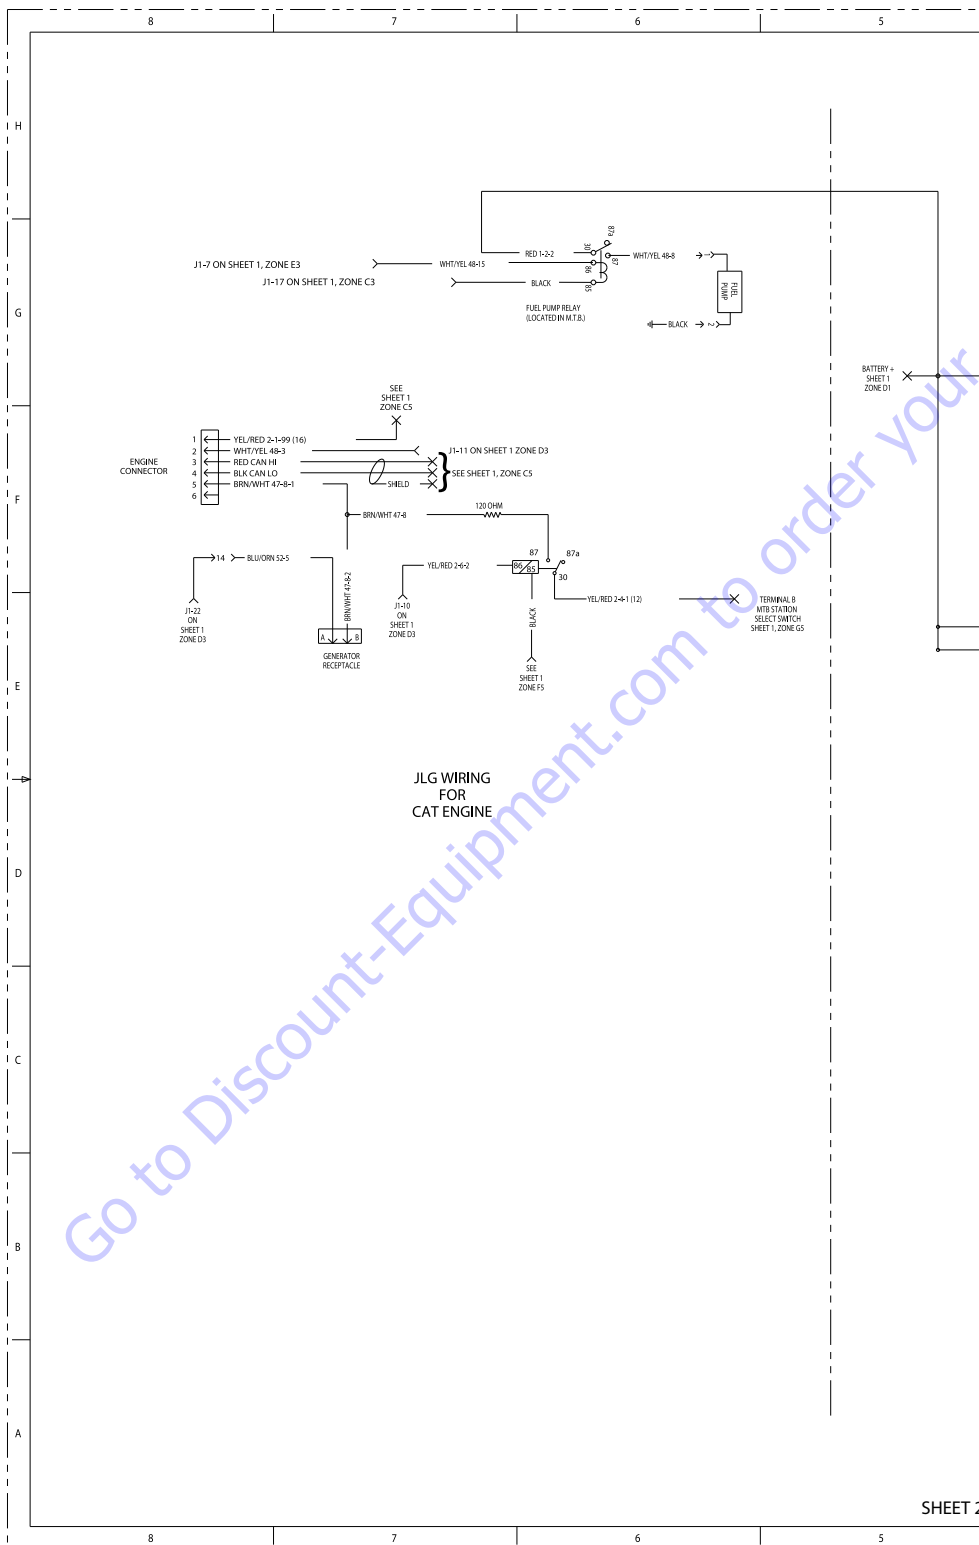


Figure 7-31. Electrical Schematic - Sheet 3 of 14

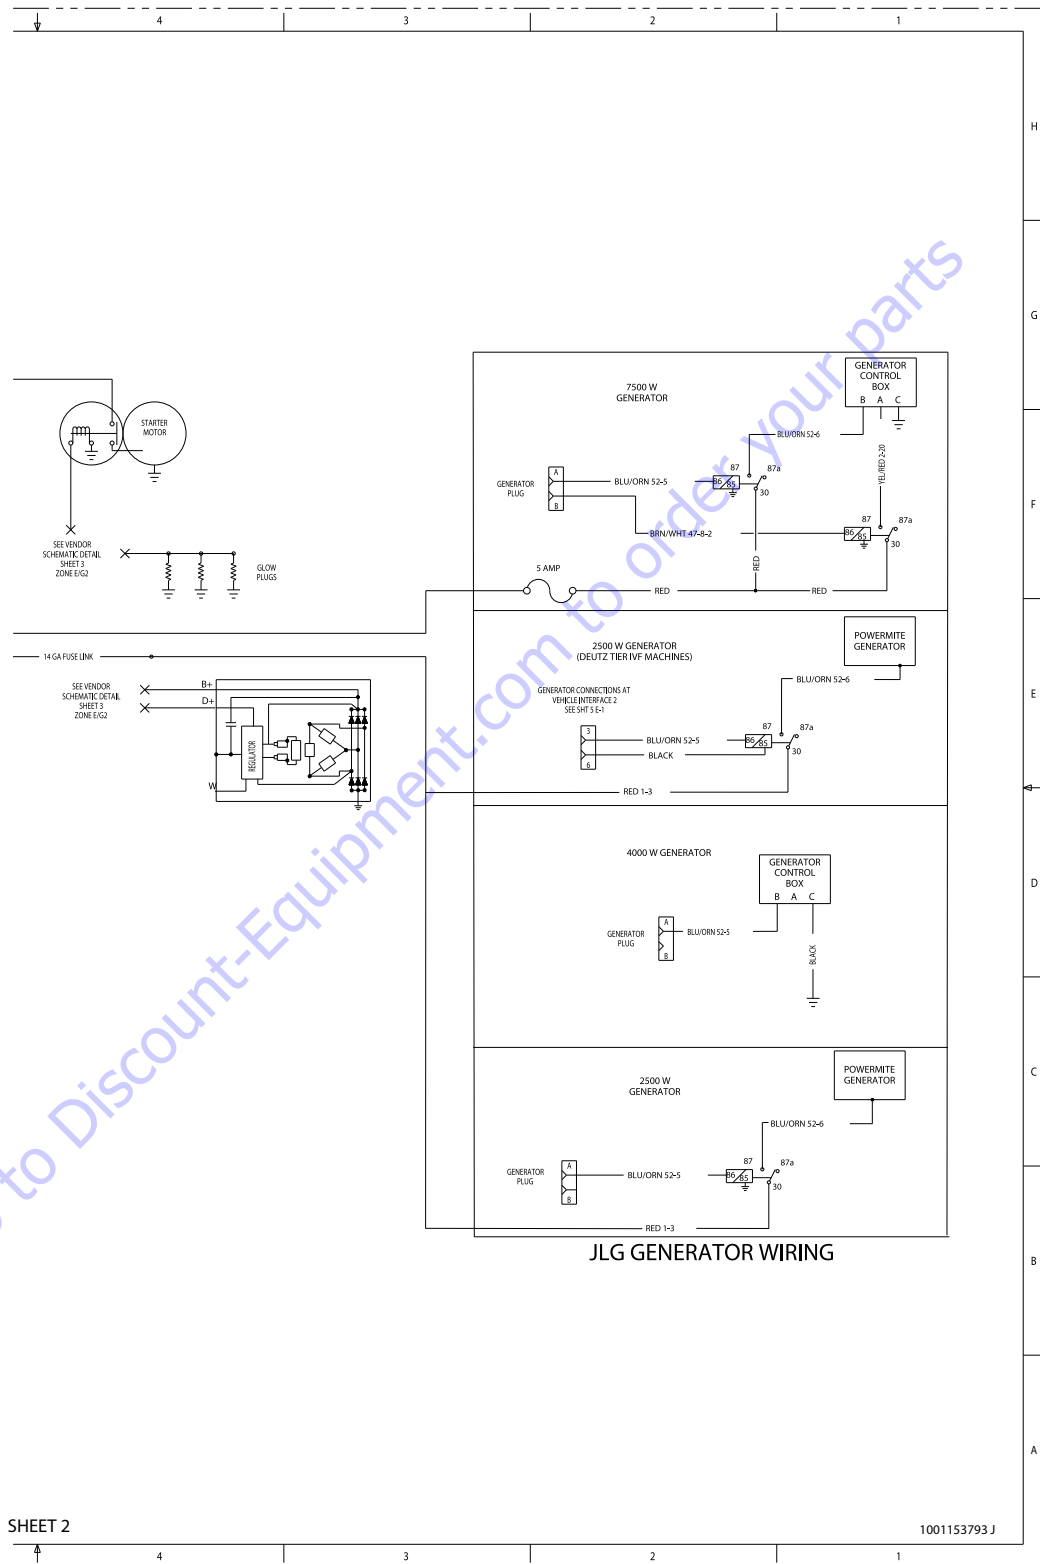


Figure 7-32. Electrical Schematic - Sheet 4 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS


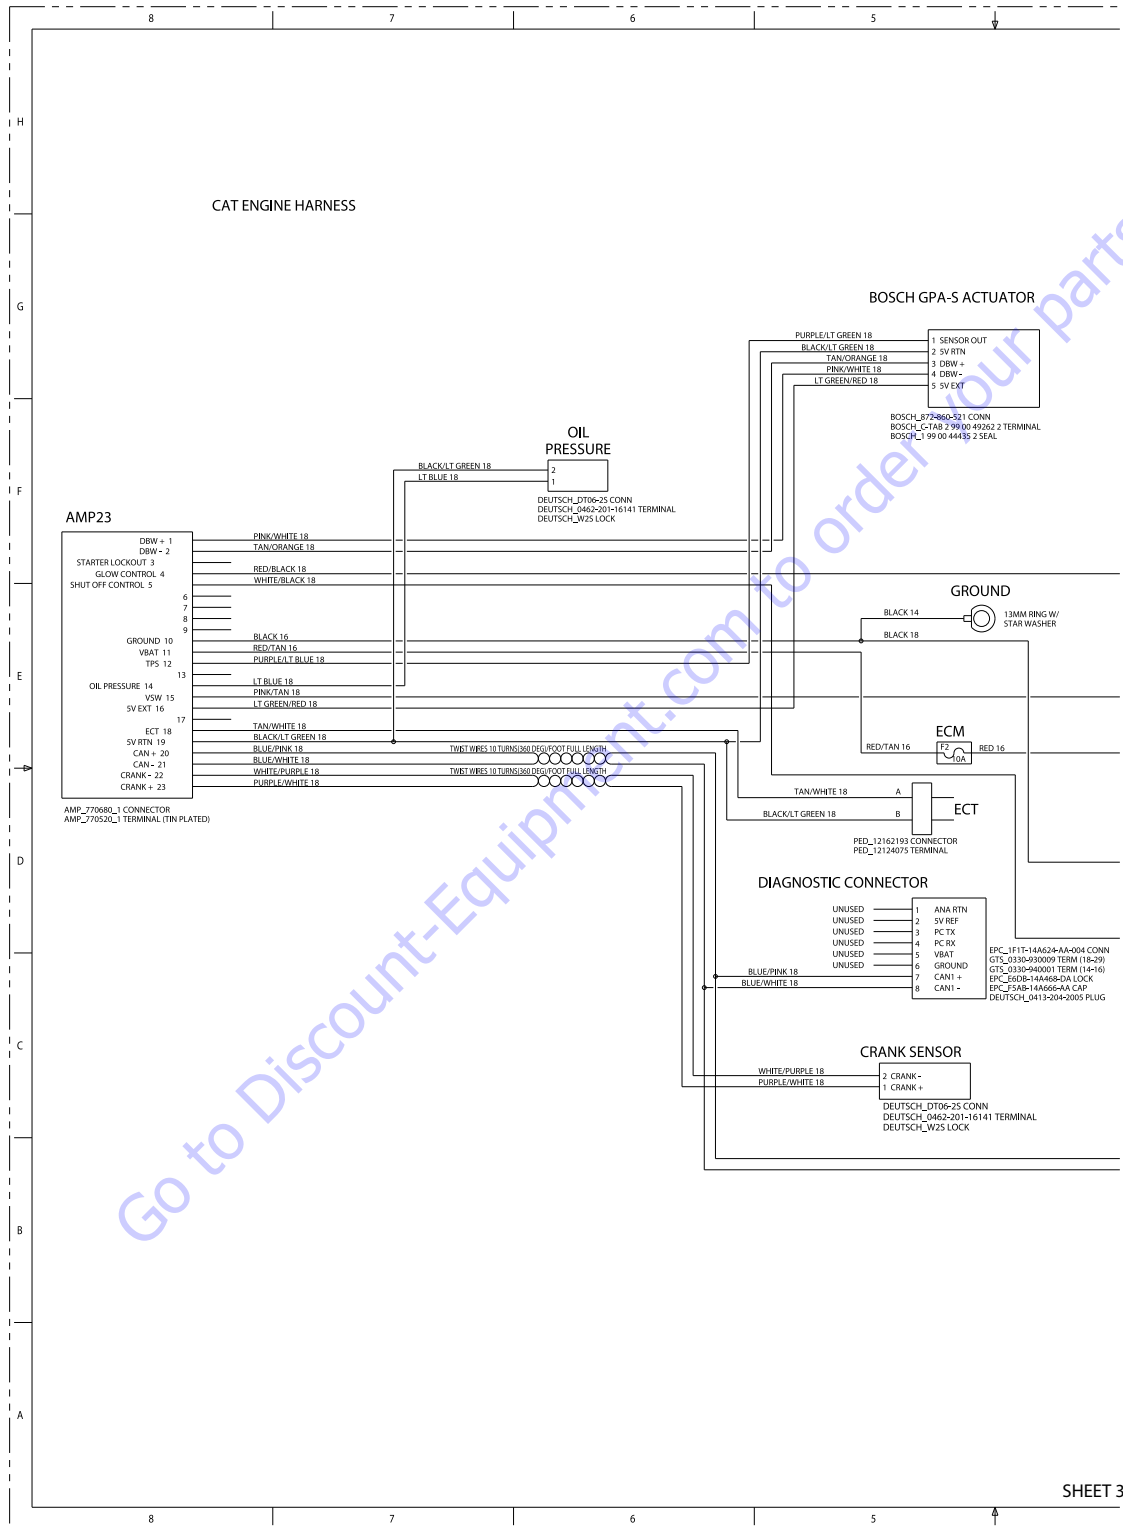


Figure 7-33. Electrical Schematic - Sheet 5 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

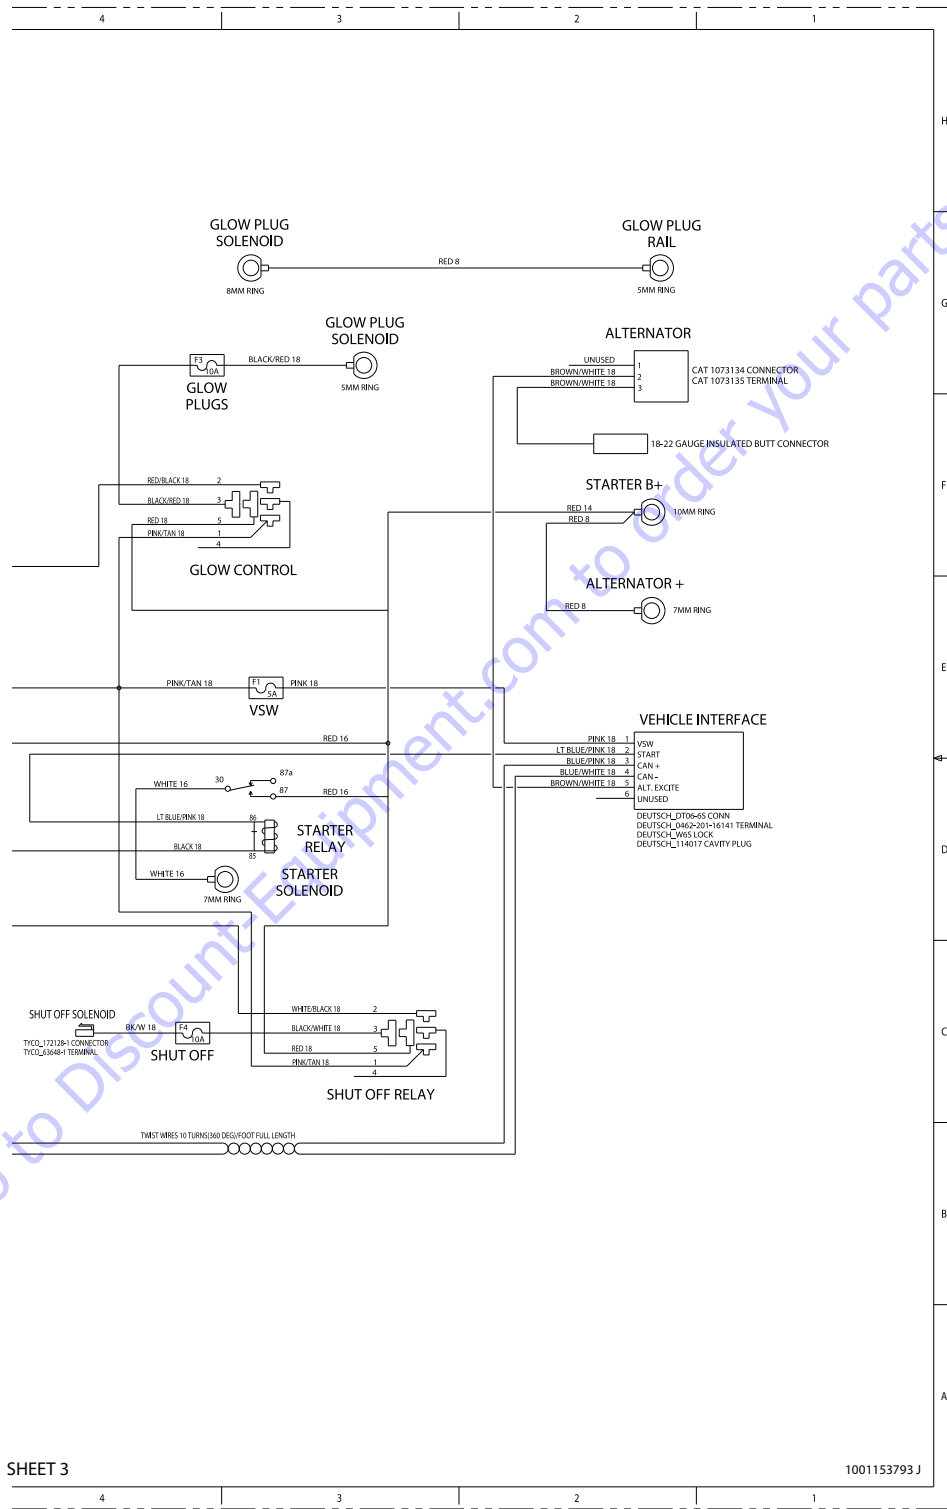

SHEET 3

1001153793J

Figure 7-34. Electrical Schematic - Sheet 6 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

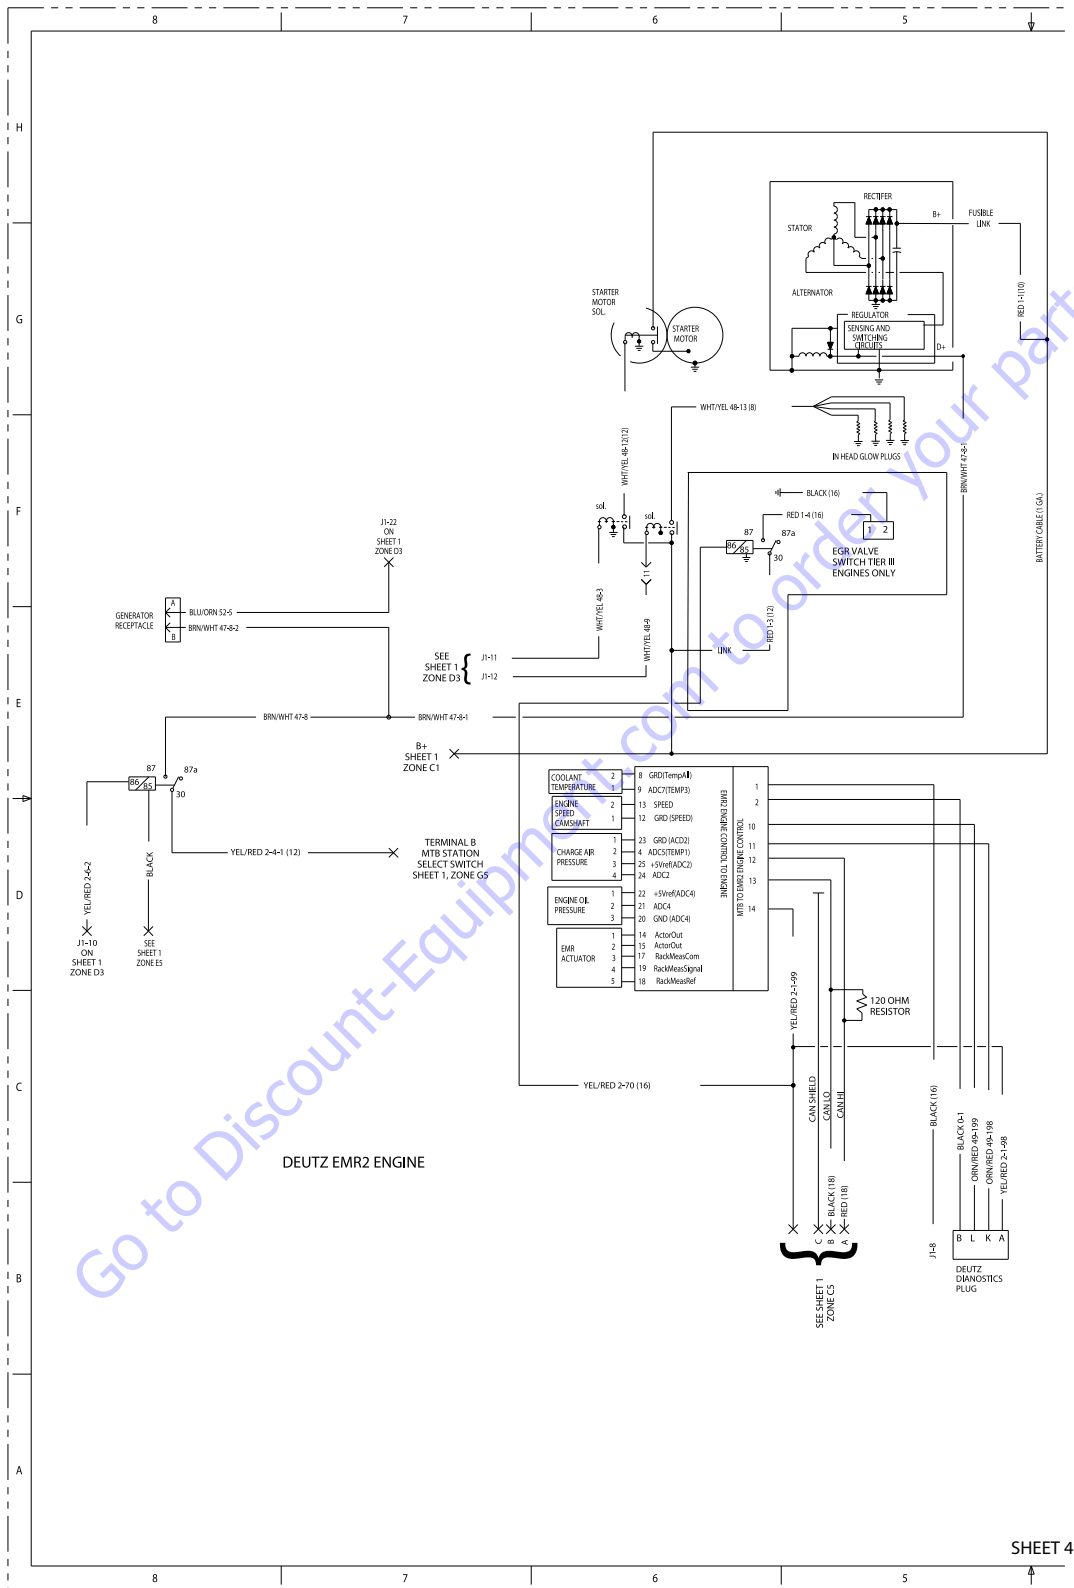


Figure 7-35. Electrical Schematic - Sheet 7 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

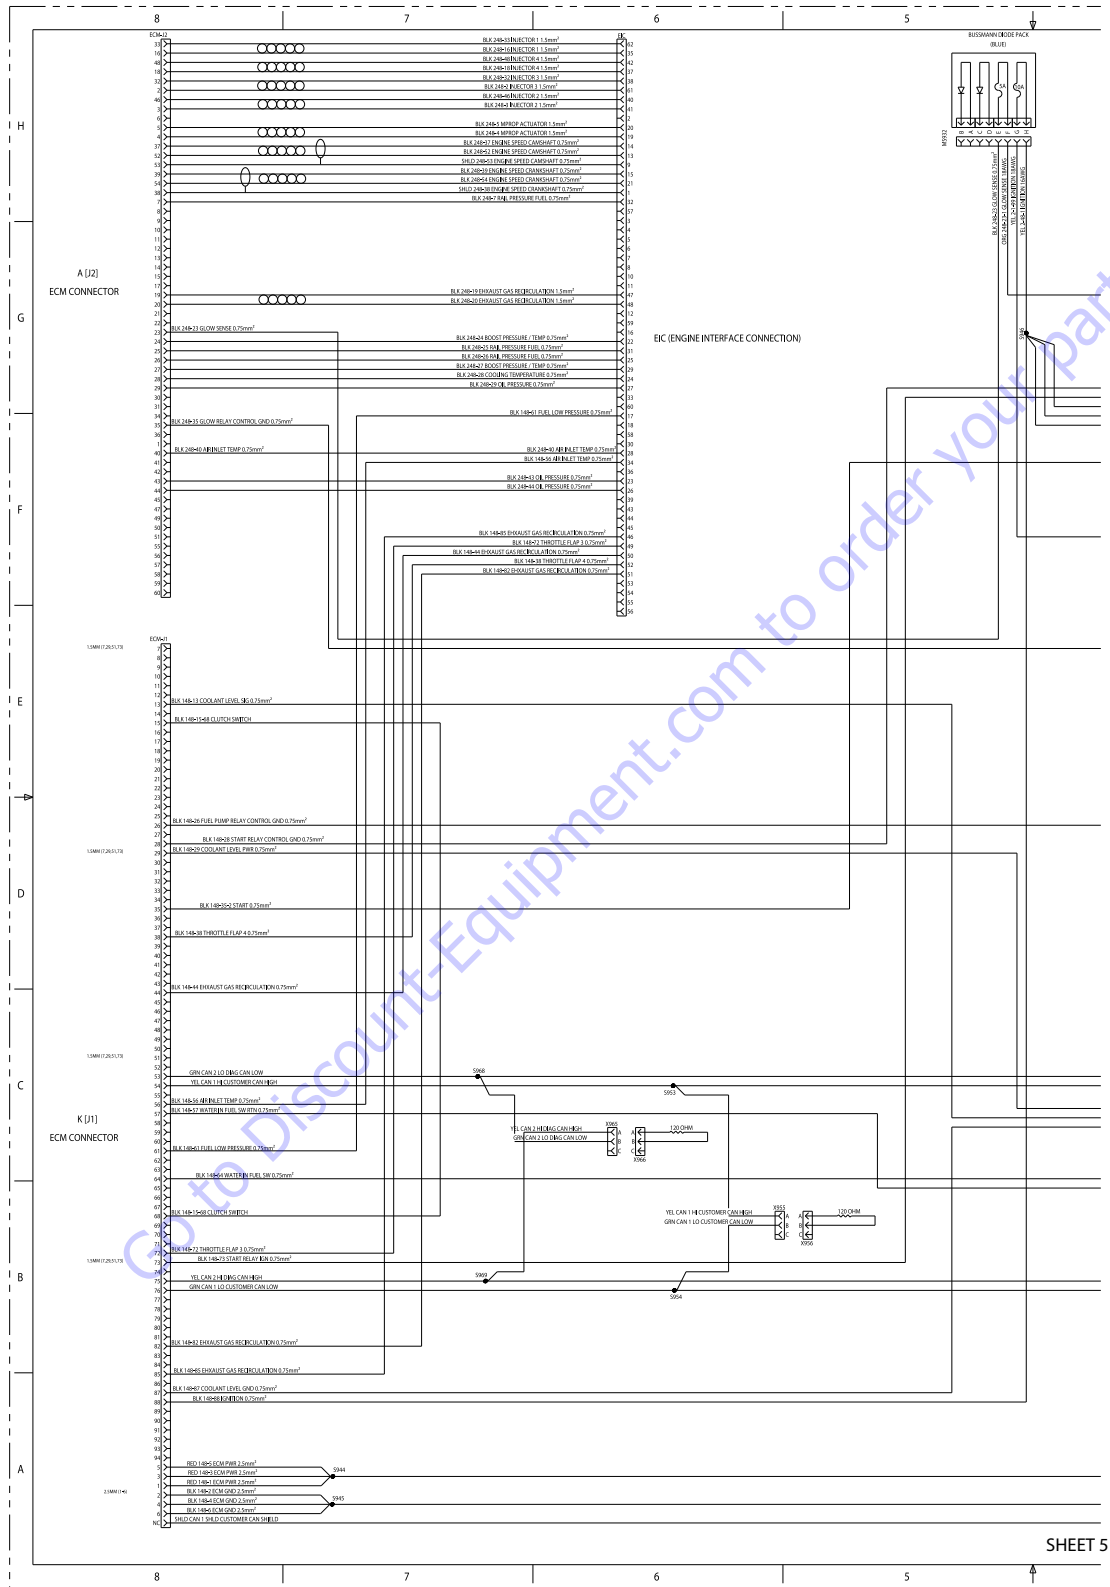


Figure 7-37. Electrical Schematic - Sheet 9 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

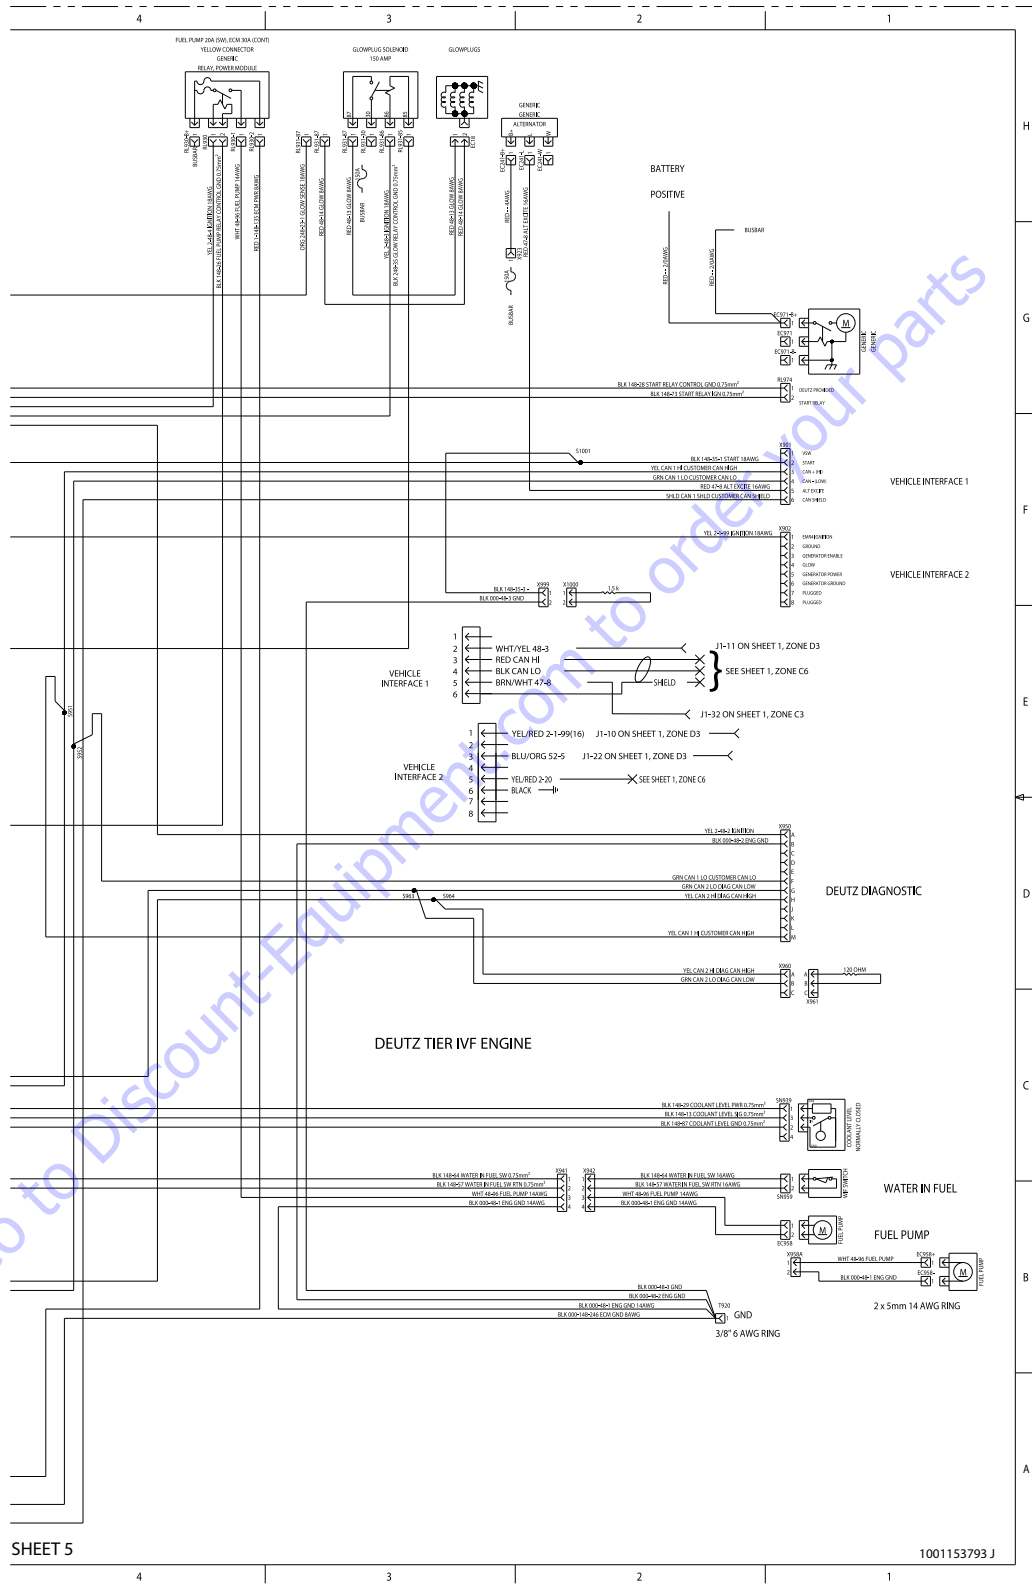


Figure 7-38. Electrical Schematic - Sheet 10 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

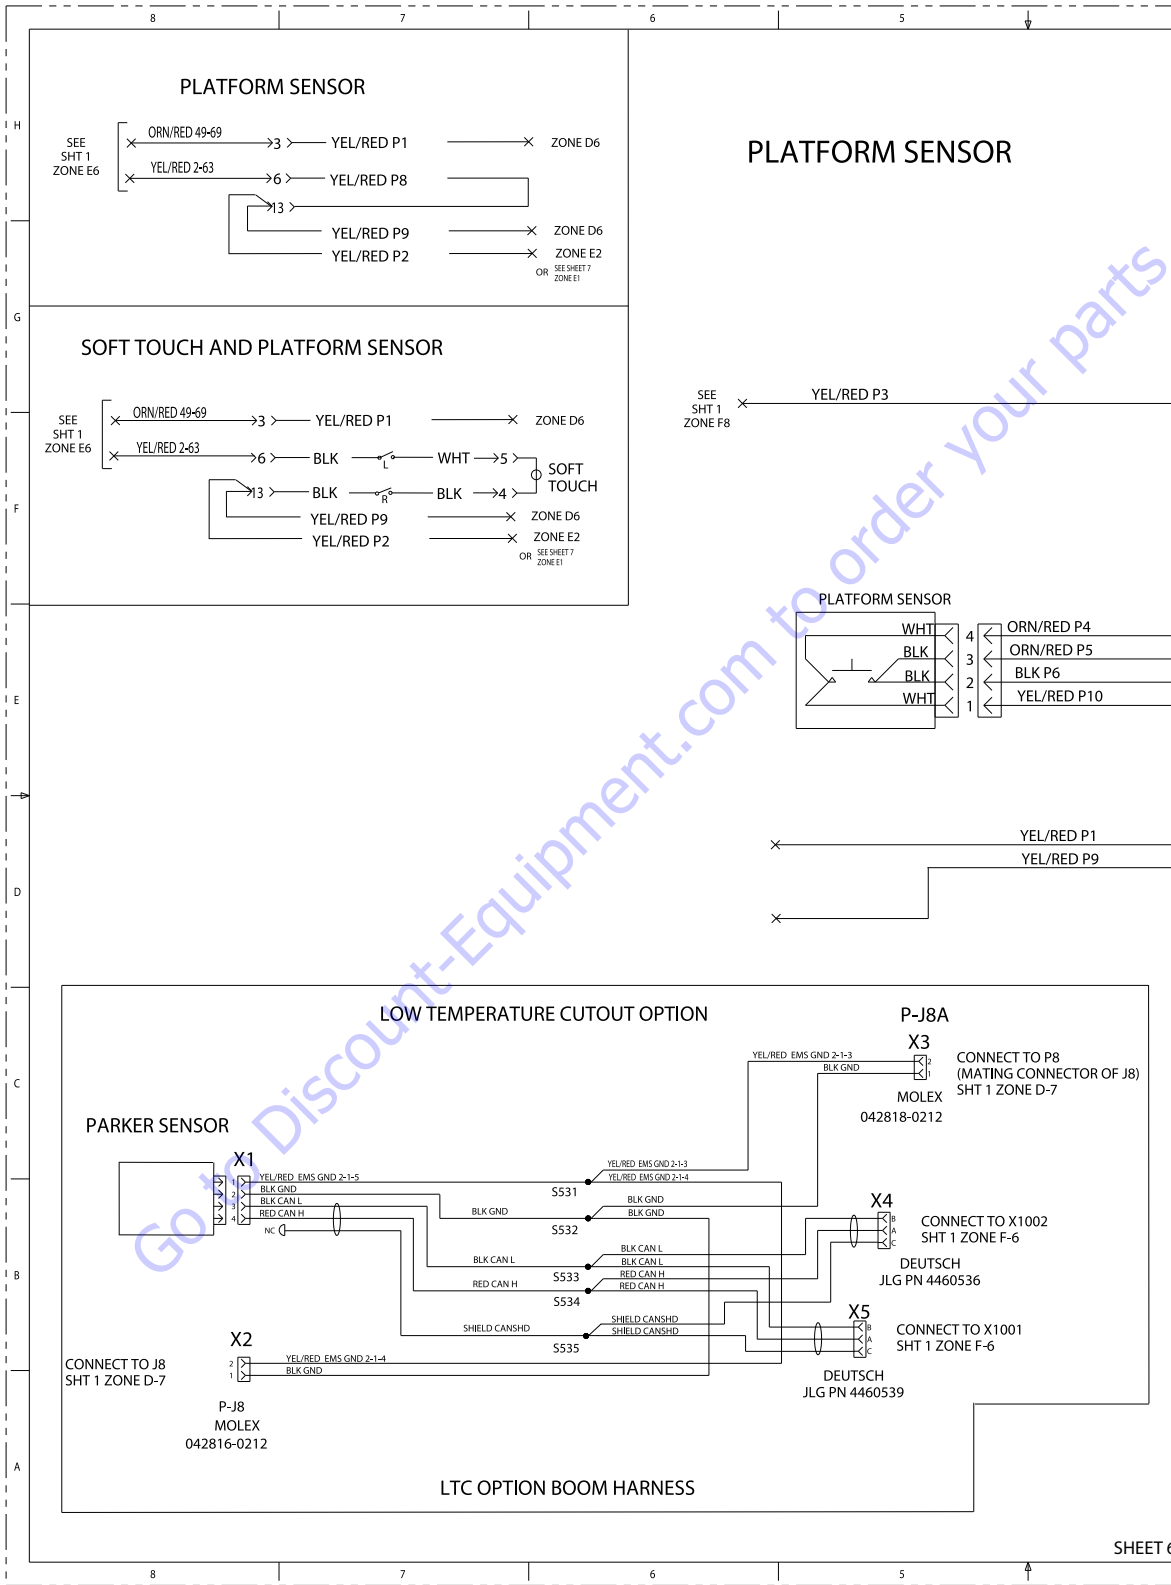


Figure 7-39. Electrical Schematic - Sheet 11 of 14


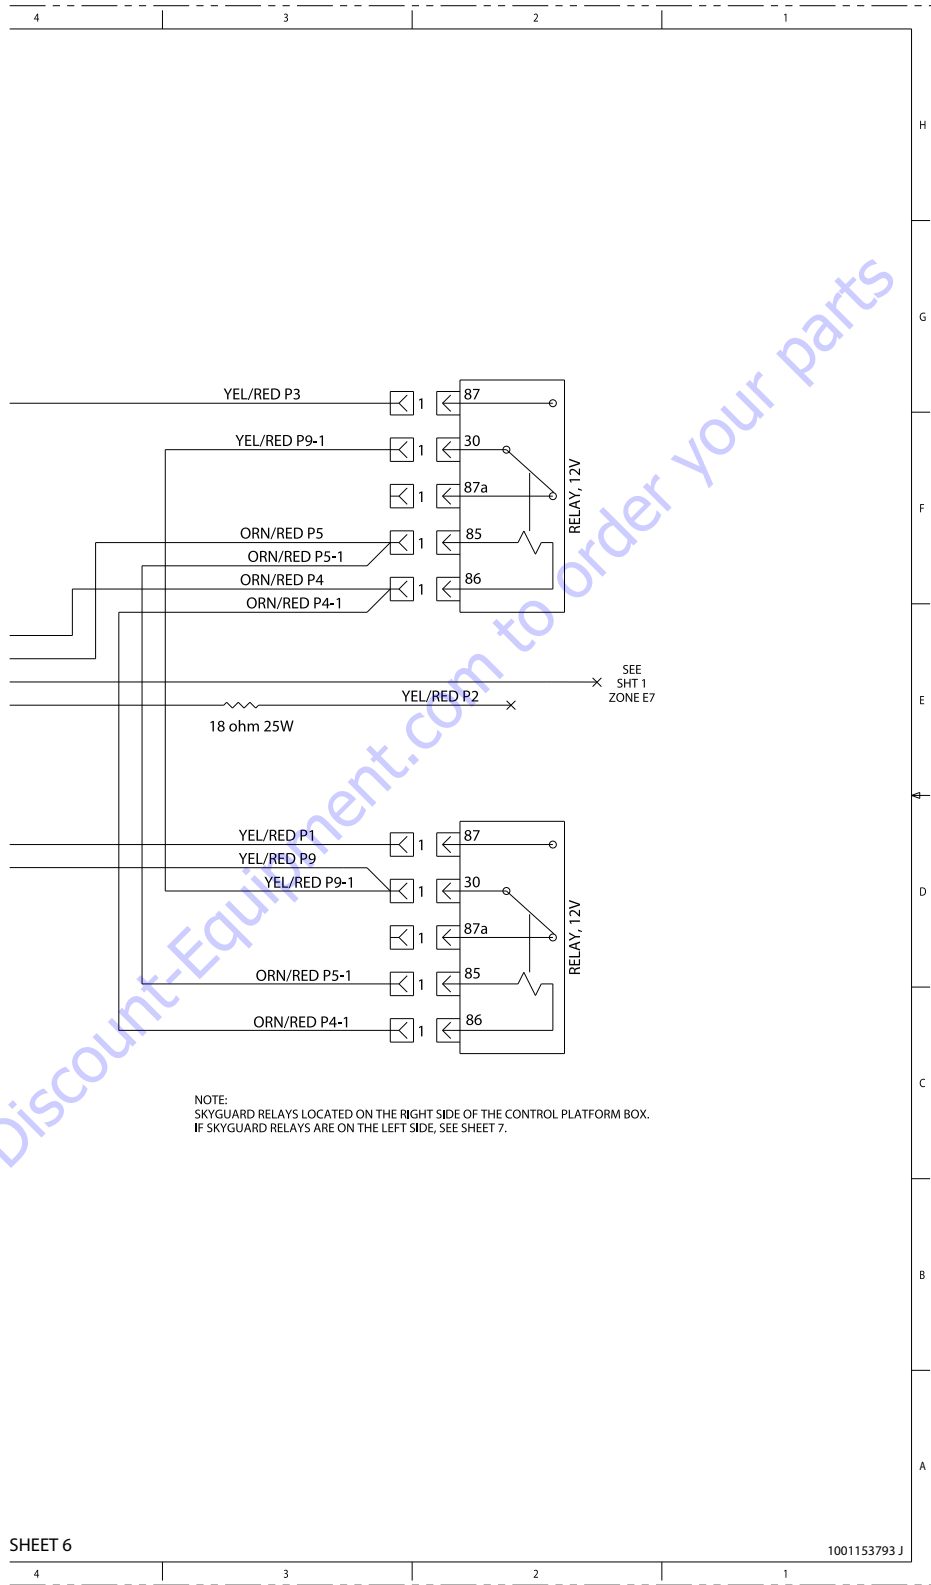


Figure 7-40. Electrical Schematic - Sheet 12 of 14

SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS

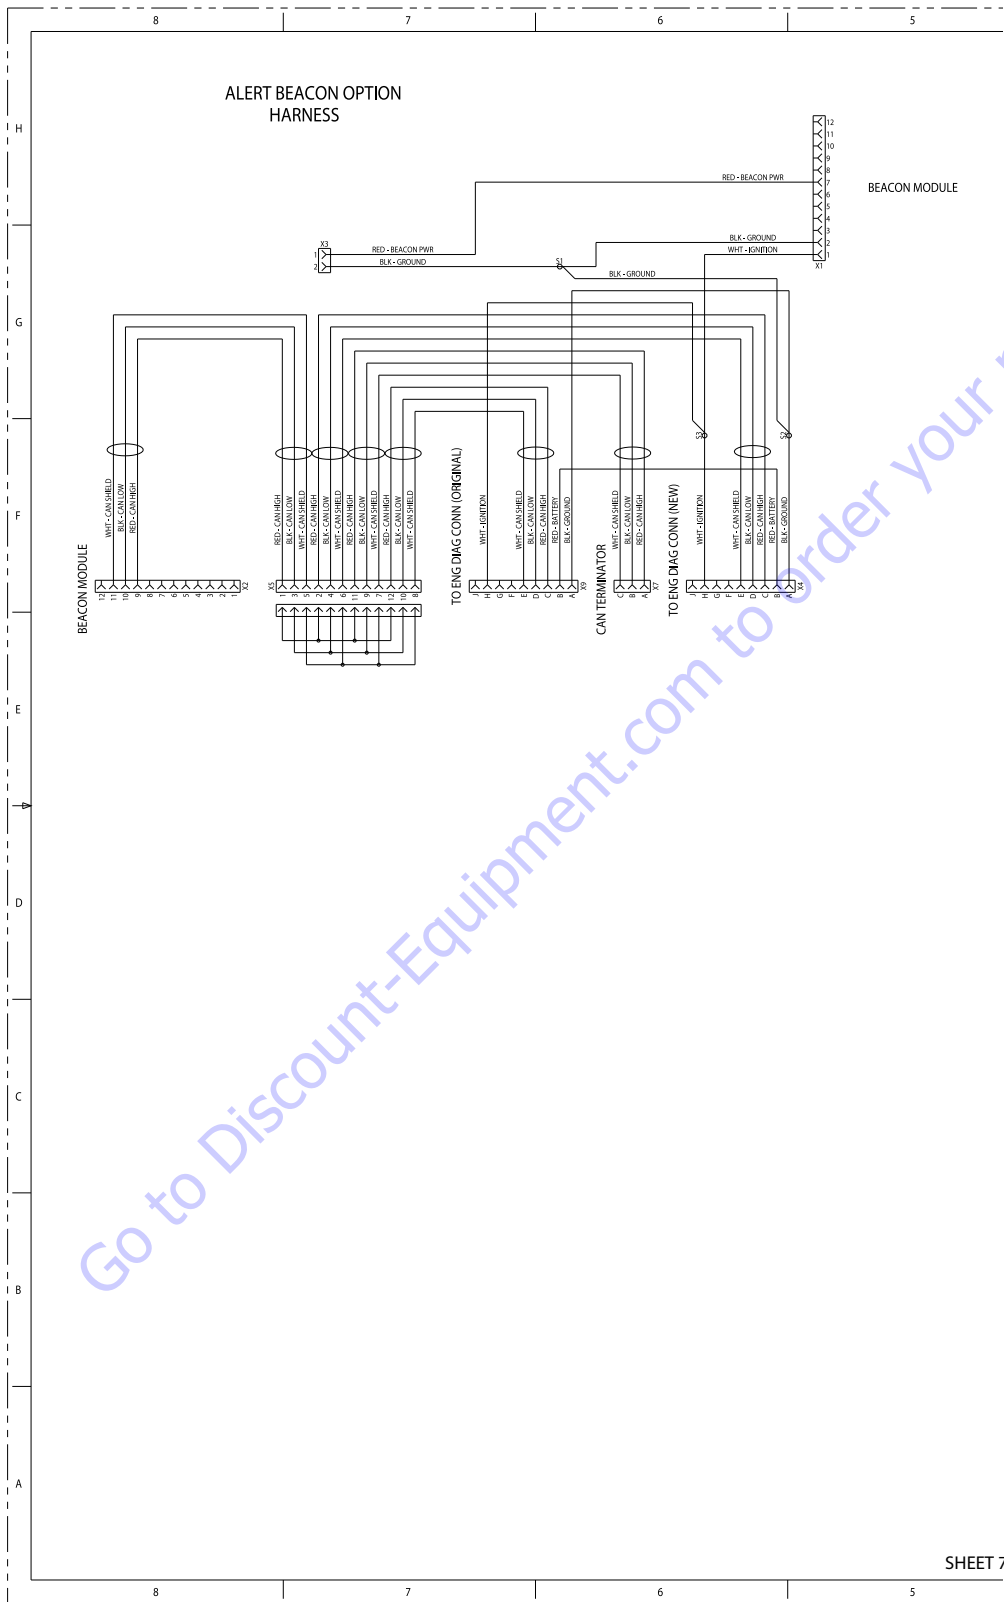

Go to Discount-Equipment.com to order your parts

Figure 7-41. Electrical Schematic - Sheet 13 of 14


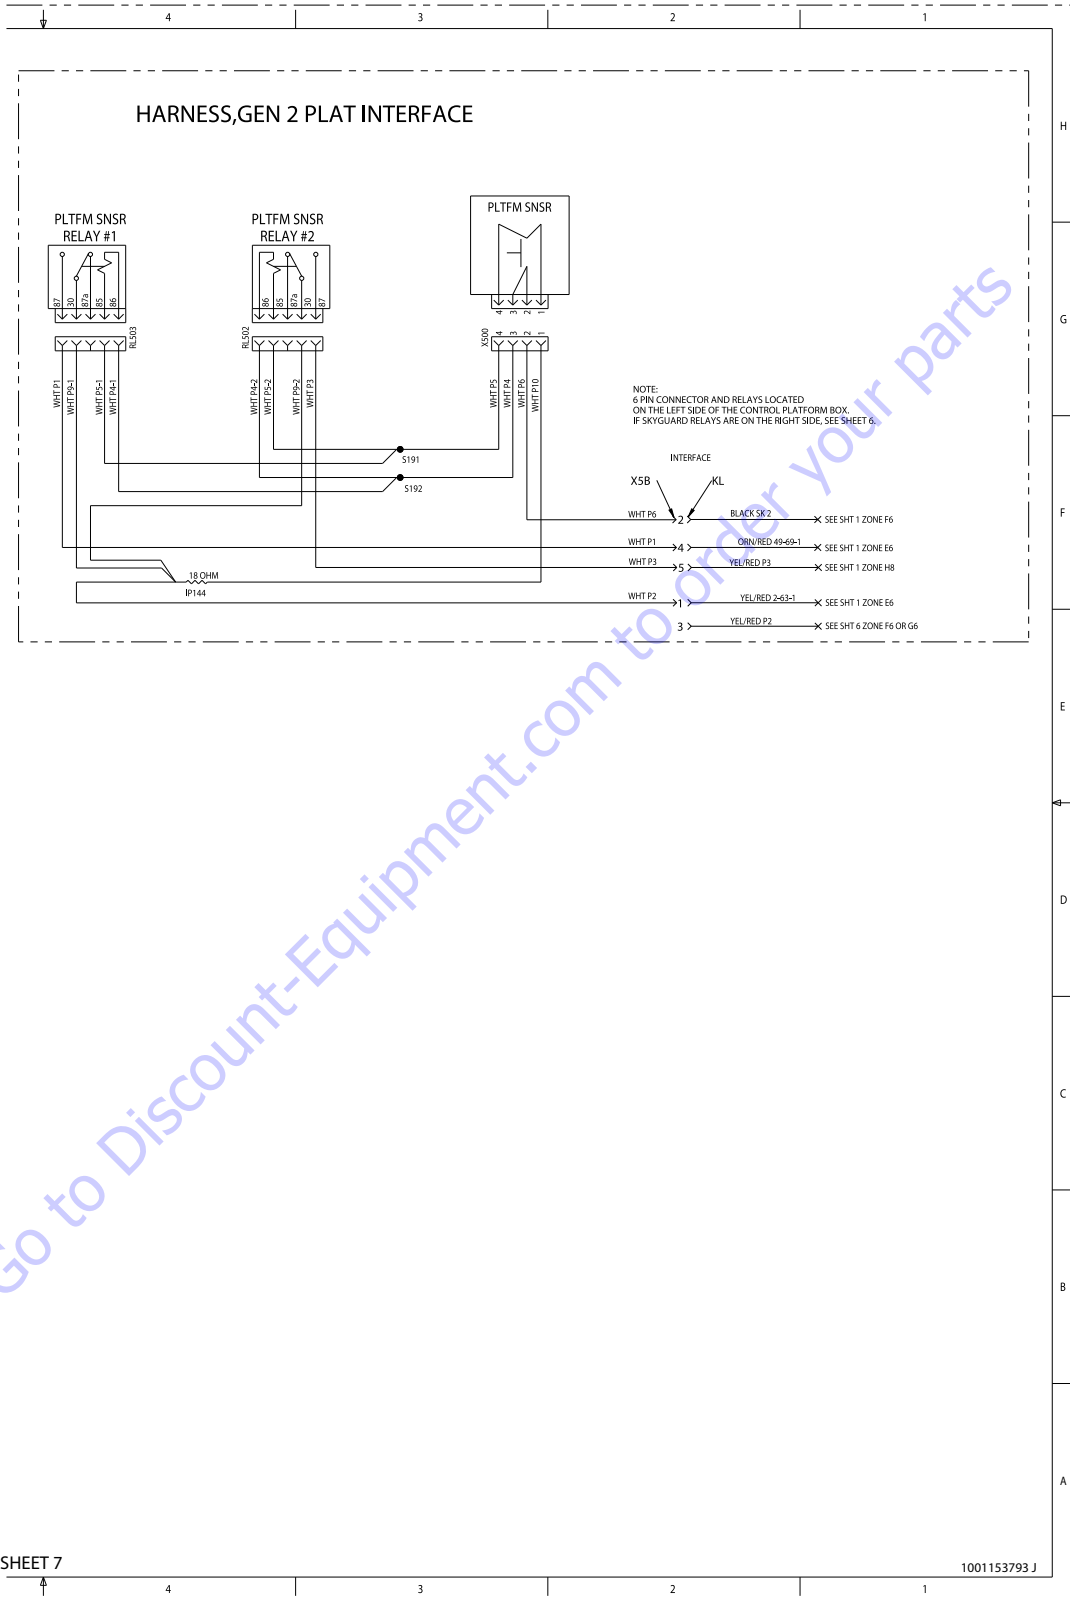


Figure 7-42. Electrical Schematic - Sheet 14 of 14



3121651

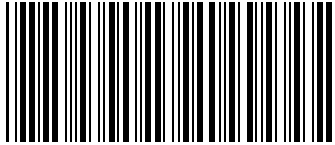

An Oshkosh Corporation Company



www.Discount-Equipment.com

Go to Discount-Equipment.com to order your parts

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter your information to search for manuals and parts.

* Brand:

* Model:

* Serial:

* Part Number:

SEARCH

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in the following information:

Manufacturer:

Model:

Description:

Quantity:

Part Number:

Part Name:

Part Description:

Part Location:

Part Condition:

Part Status:

Part Price:

Part Weight:

Part Dimensions:

Part Material:

Part Color:

Part Finish:

Part Notes:

Part Images:

Part Attachments:

Part Specifications:

Part Certifications:

Part Compliance:

Part Safety:

Part Environmental:

Part Electrical:

Part Hydraulic:

Part Pneumatic:

Part Mechanical:

Part Structural:

Part Fasteners:

Part Seals:

Part Gaskets:

Part O-rings:

Part Belts:

Part Chains:

Part Cables:

Part Wires:

Part Hoses:

Part Pipes:

Part Fittings:

Part Valves:

Part Switches:

Part Controls:

Part Displays:

Part Sensors:

Part Actuators:

Part Motors:

Part Generators:

Part Transformers:

Part Relays:

Part Diodes:

Part Capacitors:

Part Inductors:

Part Resistors:

Part Transistors:

Part ICs:

Part Microcontrollers:

Part Processors:

Part Memory:

Part Storage:

Part Networking:

Part Security:

Part Encryption:

Part Decryption:

Part Authentication:

Part Authorization:

Part Accounting:

Part Reporting:

Part Analytics:

Part Optimization:

Part Performance:

Part Reliability:

Part Availability:

Part Scalability:

Part Flexibility:

Part Interoperability:

Part Compatibility:

Part Integration:

Part Migration:

Part Upgrade:

Part Patching:

Part Updates:

Part Backups:

Part Recovery:

Part Disaster:

Part Business:

Part Continuity:

Part Resilience:

Part Security:

Part Privacy:

Part Compliance:

Part Governance:

Part Risk:

Part Mitigation:

Part Prevention:

Part Detection:

Part Response:

Part Recovery:

Part Improvement:

Part Innovation:

Part Research:

Part Development:

Part Testing:

Part Deployment:

Part Monitoring:

Part Maintenance:

Part Support:

Part Training:

Part Documentation:

Part Knowledge:

Part Expertise:

Part Experience:

Part Reputation:

Part Credibility:

Part Trust:

Part Loyalty:

Part Retention:

Part Satisfaction:

Part Engagement:

Part Interaction:

Part Communication:

Part Collaboration:

Part Partnership:

Part Alliance:

Part Joint Venture:

Part Acquisition:

Part Merger:

Part Divestiture:

Part Liquidation:

Part Bankruptcy:

Part Reorganization:

Part Restructuring:

Part Turnaround:

Part Revitalization:

Part Transformation:

Part Innovation:

Part Disruption:

Part Digital:

Part Cloud:

Part Mobile:

Part IoT:

Part AI:

Part ML:

Part DL:

Part NLP:

Part CV:

Part RL:

Part Robotics:

Part AR:

Part VR:

Part XR:

Part Blockchain:

Part Cryptocurrency:

Part Smart Contracts:

Part Decentralization:

Part Scalability:

Part Security:

Part Privacy:

Part Compliance:

Part Governance:

Part Risk:

Part Mitigation:

Part Prevention:

Part Detection:

Part Response:

Part Recovery:

Part Improvement:

Part Innovation:

Part Research:

Part Development:

Part Testing:

Part Deployment:

Part Monitoring:

Part Maintenance:

Part Support:

Part Training:

Part Documentation:

Part Knowledge:

Part Expertise:

Part Experience:

Part Reputation:

Part Credibility:

Part Trust:

Part Loyalty:

Part Retention:

Part Satisfaction:

Part Engagement:

Part Interaction:

Part Communication:

Part Collaboration:

Part Partnership:

Part Alliance:

Part Joint Venture:

Part Acquisition:

Part Merger:

Part Divestiture:

Part Liquidation:

Part Bankruptcy:

Part Reorganization:

Part Restructuring:

Part Turnaround:

Part Revitalization:

Part Transformation:

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar