



An Oshkosh Corporation Company



www.Discount-Equipment.com

Operation and Safety Manual

Original Instructions - Keep this manual with the machine at all times.

**Model
830P**



ANSI

3121742

July 20, 2018 - Rev B

TO PURCHASE THIS PRODUCT PLEASE CONTACT US



**Equipment Financing and
Extended Warranties Available**



**Discount-Equipment.com is your online resource for
commercial and industrial quality parts and equipment sales.**

561-964-4949

visit us on line @ www.discount-equipment.com

Select an option below to find your Equipment

Search by Manufacturer

Search by Product Type

Request a Quote

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar



WARNING

Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information go to www.P65Warnings.ca.gov.

FOREWARD

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS



This is the Safety Alert Symbol. It is used to alert you to the potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death

⚠ DANGER

INDICATES AN IMMINENTLY HAZARDOUS SITUATION. IF NOT AVOIDED, WILL RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE A RED BACKGROUND.

⚠ WARNING

INDICATES A POTENTIALITY HAZARDOUS SITUATION. IF NOT AVOIDED, COULD RESULT IN SERIOUS INJURY OR DEATH. THIS DECAL WILL HAVE AN ORANGE BACKGROUND.

⚠ CAUTION

INDICATES A POTENTIALITY HAZARDOUS SITUATION. IF NOT AVOIDED, MAY RESULT IN MINOR OR MODERATE INJURY. IT MAY ALSO ALERT AGAINST UNSAFE PRACTICES. THIS DECAL WILL HAVE A YELLOW BACKGROUND.

NOTICE

INDICATES INFORMATION OR A COMPANY POLICY THAT RELATES DIRECTLY OR INDIRECTLY TO THE SAFETY OF PERSONNEL OR PROTECTION OF PROPERTY.

⚠ WARNING

THIS PRODUCT MUST COMPLY WITH ALL SAFETY RELATED BULLETINS. CONTACT JLG INDUSTRIES, INC. OR THE LOCAL AUTHORIZED JLG REPRESENTATIVE FOR INFORMATION REGARDING SAFETY RELATED BULLETINS WHICH MAY HAVE BEEN ISSUED FOR THIS PRODUCT.

NOTICE

JLG INDUSTRIES, INC. SENDS SAFETY RELATED BULLETINS TO THE OWNER OF RECORD OF THIS MACHINE. CONTACT JLG INDUSTRIES, INC. TO ENSURE THAT THE CURRENT OWNER RECORDS ARE UPDATED AND ACCURATE.

NOTICE

JLG INDUSTRIES, INC. MUST BE NOTIFIED IMMEDIATELY IN ALL INSTANCES WHERE JLG PRODUCTS HAVE BEEN INVOLVED IN AN ACCIDENT INVOLVING BODILY INJURY OR DEATH OF PERSONNEL OR WHEN SUBSTANTIAL DAMAGE HAS OCCURRED TO PERSONAL PROPERTY OR THE JLG PRODUCT.

For :

- Accident Reporting
- Product Safety Publications
- Current Owner Updates
- Questions Regarding Product Safety
- Standards and Regulations Compliance Information
- Questions Regarding Special Product Applications
- Questions Regarding Product Modifications

Contact :

Product Safety and Reliability Department
JLG Industries, Inc.
1 JLG Drive
McConnellsburg, PA 17233

or Your Local JLG Office
(See addresses on manual rear cover)

In USA:

Toll Free: 877-JLG-SAFE (877-554-7233)

Outside USA:

Phone: 717-485-5161
E-mail: ProductSafety@JLG.com

REVISION LOG

Original Issue of Manual - A..... July 6, 2016
Revision - B July 20, 2018

Discount-Equipment.com

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE	SECTION - PARAGRAPH, SUBJECT	PAGE
SECTION - 1 - SAFETY PRECAUTIONS			
1.1 GENERAL	1-1	Training Supervision	2-1
1.2 TRANSPORTING	1-2	Operator Responsibility	2-1
Tipping Hazards	1-2	2.2 PREPARATION, INSPECTION, AND MAINTENANCE	2-2
1.3 PRE-OPERATION	1-4	2.3 PRE-START INSPECTION	2-4
Operator Training and Knowledge	1-4	2.4 DAILY WALK-AROUND INSPECTION	2-4
Workplace Inspection	1-4	General	2-4
Machine Inspection	1-5	2.5 FUNCTION CHECK	2-7
1.4 OPERATION	1-6	SECTION - 3 - MACHINE OPERATION	
General	1-6	3.1 GENERAL	3-1
Trip and Fall Hazard	1-6	3.2 MACHINE DESCRIPTION	3-1
Electrocution Hazard	1-8	3.3 MACHINE OPERATION	3-2
Tipping Hazards	1-9	Machine Component Locations	3-3
Crushing and Collision Hazards	1-11	Battery Charger Operation	3-4
1.5 MOVING, LIFTING AND REPOSITIONING	1-12	Ground Controls	3-6
General	1-12	Positioning and Leveling Machine	3-6
Additional Safety Information	1-12	Entering/Exiting The Platform	3-7
1.6 MAINTENANCE	1-12	Platform Controls	3-7
Maintenance Hazards	1-12	3.4 TRANSPORTING, LIFTING AND TIE-DOWN PROCES- DURES	3-8
Battery Hazards	1-13	Loading or Towing	3-8
		Vehicle Transport	3-8
SECTION - 2 - PREPARATION AND INSPECTION			
2.1 PERSONNEL TRAINING	2-1		
Operator Training	2-1		

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE	SECTION - PARAGRAPH, SUBJECT	PAGE
3.5 STORAGE.....	3-8	SECTION - 6 - INSPECTION AND REPAIR LOG	
3.6 DECAL INSTALLATION	3-10		
SECTION - 4 - EMERGENCY PROCEDURES			
4.1 GENERAL INFORMATION.....	4-1		
4.2 EMERGENCY OPERATION	4-1		
Operator Unable to Control Machine.....	4-1		
Platform Caught Overhead	4-1		
Righting of Tipped Machine.....	4-1		
4.3 INCIDENT NOTIFICATION.....	4-2		
4.4 EMERGENCY LOWERING OPERATION	4-2		
SECTION - 5 - GENERAL SPECIFICATIONS			
5.1 INTRODUCTION.....	5-1		
5.2 GENERAL SPECIFICATIONS	5-2		
Machine Specifications	5-2		
Power Source:.....	5-3		
Battery Charger Specification:.....	5-3		
Lubrication Specification	5-3		
5.3 OPERATOR MAINTENANCE.....	5-4		
Accessing Hydraulic/Electrical Components In Base Frame.....	5-4		
Hydraulic System Maintenance	5-5		

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT	PAGE	SECTION - PARAGRAPH, SUBJECT	PAGE
LIST OF FIGURES		LIST OF TABLES	
2-1. Daily Walk-Around Inspection	2-6	1-1 Minimum Approach Distances (M.A.D.)	1-8
3-1. Machine Component Locations	3-3	2-1 Inspection and Maintenance Table	2-3
3-2. Battery Charger	3-4	3-1 Decal Installation Chart	3-11
3-3. Charger AC Input Cable	3-4	5-1. Machine Specifications	5-2
3-4. Battery Charge Indicator	3-5	5-2. Machine Dimensions	5-2
3-5. Charger LEDs	3-5	5-3 Battery Charger Specification	5-3
3-6. Machine Bubble Level Indicator	3-6	6-1 Inspection and Repair Log	6-1
3-7. Transport - ForkLift Truck - Tie-Down - Towing ..	3-9		
3-8. Decal Installation	3-10		
4-1. Emergency Lowering	4-3		
5-1. Operating Specifications	5-3		
5-2. Platform Maintenance Position	5-4		
5-3. Hydraulic Reservoir	5-5		

TABLE OF CONTENTS

SECTION - PARAGRAPH, SUBJECT

PAGE

SECTION - PARAGRAPH, SUBJECT

PAGE

This page left blank intentionally

SECTION 1. SAFETY PRECAUTIONS

1.1 GENERAL

This section outlines the necessary precautions for proper and safe machine usage and maintenance. In order to promote proper machine usage, it is mandatory that a daily routine is established based on the content of this manual. A maintenance program, using the information provided in the Service and Maintenance section, must also be established by a qualified person and must be followed to ensure that the machine is safe to operate.

The owner/user/operator/lessor/lessee of the machine must not accept operating responsibility until this manual has been read, training is accomplished, and operation of the machine has been completed under the supervision of an experienced and qualified operator.

These sections contain the responsibilities of the owner, user, operator, lessor, and lessee concerning safety, training, inspection, maintenance, application, and operation. If there are any questions with regard to safety, training, inspection, maintenance, application, and operation, please contact JLG Industries, Inc. ("JLG").

WARNING


FAILURE TO COMPLY WITH THE SAFETY PRECAUTIONS LISTED IN THIS MANUAL COULD RESULT IN MACHINE DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

1.2 TRANSPORTING


Tipping Hazards

⚠ WARNING

FAILURE TO COMPLY WITH THE FOLLOWING TIPPING HAZARD INSTRUCTIONS COULD CAUSE THE UNIT TO TIP OVER OR BE HARD TO CONTROL WHEN BEING MOVED, WHICH COULD RESULT IN SERIOUS INJURY OR DEATH.

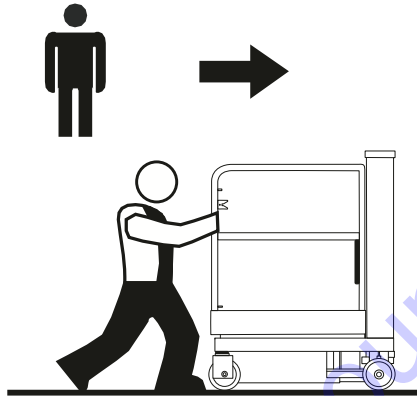

- On a level surface, always push machine from the platform end with the mast end leading the way.
- Watch for obstructions around machine and overhead.
- Check travel path for persons, holes, bumps, drop-offs, obstructions, debris, and coverings which may conceal other hazards.
- Before placing machine on floors, trucks and other surfaces, check allowable capacity of surfaces.

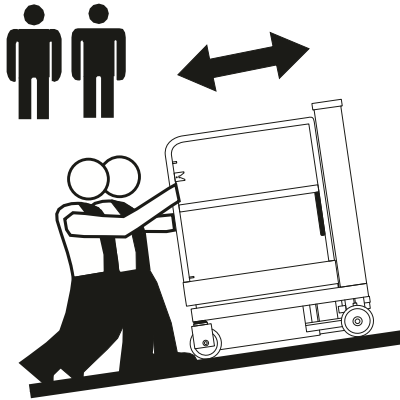

- Two persons are required on slopes up to 5°. A forklift must be used when moving units on slopes greater than 5°.
- Always travel up or down a slope with the platform end of the machine positioned towards the low side of the slope. The operator and assistant must walk side by side to guide the machine.




- Never position the unit sideways on a slope.
- Do not elevate the platform or move the machine on a soft surface.
- Use caution and check clearances when moving machine in restricted or close quarters.
- Always use an assistant when moving machine in areas where vision is obstructed.
- Keep non-operating personnel at least 6 ft. (1.8m) away from machine during moving operations.

1.3 PRE-OPERATION

Operator Training and Knowledge

- This manual must be read and understood in its entirety before operating the machine. For clarification, questions, or additional information regarding any portions of this manual, contact JLG Industries, Inc.

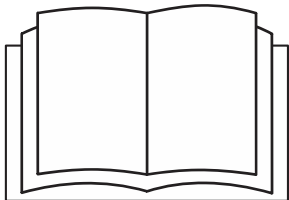

- An operator must not accept operating responsibilities until adequate training has been given by competent and authorized persons.
- Allow only those authorized and qualified personnel to operate the machine who have demonstrated that they understand the safe and proper operation and maintenance of the unit.
- Read, understand, and obey all DANGERS, WARNINGS, CAUTIONS, and operating instructions on the machine and in this manual.

- Ensure that the machine is to be used in a manner which is within the scope of its intended application as determined by JLG.
- All operating personnel must be familiar with the emergency controls and emergency operation of the machine as specified in this manual.
- Read, understand, and obey all applicable employer, local, and governmental regulations as they pertain to your utilization and application of the machine.

Workplace Inspection

- Precautions to avoid all hazards in the work area must be taken by the user before and during operation of the machine.
- Do not operate or raise the platform from a position on trucks, trailers, railway cars, floating vessels, scaffolds or other equipment unless the application is approved in writing by JLG.
- Before operation, check work area for overhead hazards such as electric lines, bridge cranes, and other potential overhead obstructions.
- Check floor surfaces for holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards.

- Check the work area for hazardous locations. Do not operate the machine in hazardous environments unless approved for that purpose by JLG.
- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel.
- Check the machine for modifications to original components. Ensure that any modifications have been approved by JLG.
- Avoid accumulation of debris on platform deck. Keep mud, oil, grease, and other slippery substances from footwear and platform deck.

Machine Inspection

- Do not operate this machine until the inspections and functional checks have been performed as specified in Section 2 of this manual.
- Do not operate this machine until it has been serviced and maintained according to the maintenance and inspection requirements as specified in the Service and Maintenance section of this manual.
- Ensure all safety devices are operating properly. Modification of these devices is a safety violation.

WARNING

MODIFICATION OR ALTERATION OF AN AERIAL WORK PLATFORM SHALL BE MADE ONLY WITH PRIOR WRITTEN PERMISSION FROM THE MANUFACTURER.

- Do not operate any machine on which the safety or instruction placards or decals are missing or illegible.

SECTION 1 - SAFETY PRECAUTIONS

1.4 OPERATION


General

- Machine operation requires your full attention. Bring the machine to a full stop before using any device, i.e. cell phones, two-way radios, etc. that will distract your attention from safely operating the machine.
- Do not use the machine for any purpose other than positioning personnel, their tools, and equipment.
- Before operation, the user must be familiar with the machine capabilities and operating characteristics of all functions.
- Never operate a malfunctioning machine. If a malfunction occurs, shut down the machine. Remove the unit from service and notify the proper authorities.
- Do not remove, modify, or disable any safety devices.
- Do not allow personnel to tamper with or operate the machine from the ground with personnel in the platform, except in an emergency.
- Do not carry materials directly on platform railing unless approved by JLG.
- Always ensure that power tools are properly stowed and never left hanging by their cord from the platform work area.


- Fully lower platform before leaving machine.
- Remove all rings, watches, and jewelry when operating machine. Do not wear loose fitting clothing or long hair unrestrained which may become caught or entangled in equipment.
- Persons under the influence of drugs or alcohol or who are subject to seizures, dizziness or loss of physical control must not operate this machine.

Trip and Fall Hazard

- Prior to operation, ensure all gates and rails are fastened and secured in their proper position.

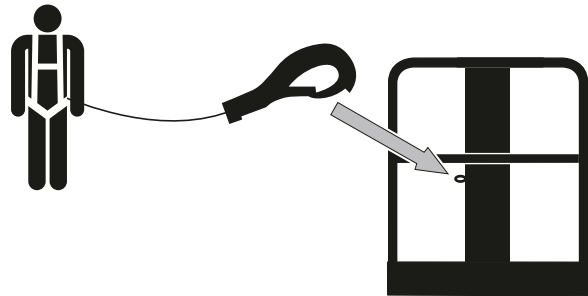


- JLG recommends that the operator utilizes a fall/travel restraint system in the platform with a lanyard attached to an authorized lanyard anchorage point. For further information regarding fall protection requirements on JLG products, contact JLG.
- Identify the designated lanyard anchorage point at the platform and securely attach the lanyard. Attach only one (1) lanyard per lanyard anchorage point.
- Enter and exit only through gate area. Use extreme caution when entering or leaving platform. Ensure that the platform assembly is fully lowered. Face the machine when entering or leaving the platform. Always maintain “three point contact” with the machine, using two hands and one foot or two feet and one hand at all times during entry and exit.

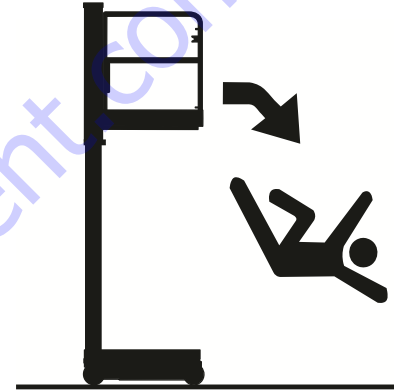

- Keep both feet firmly positioned on the platform floor at all times. Never position ladders, boxes, steps, planks, or similar items on unit to provide additional reach for any purpose.
- Never use the mast assembly to gain access to or leave the platform.
- Keep oil, mud, and slippery substances cleaned from footwear and the platform floor.

SECTION 1 - SAFETY PRECAUTIONS

Electrocution Hazard

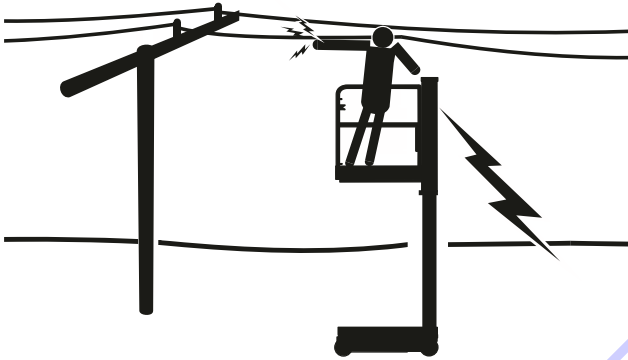

to 50,000 volts. One foot additional clearance is required for every additional 30,000 volts or less.

Table 1-1. Minimum Approach Distances (M.A.D.)

VOLTAGE RANGE (Phase to Phase)	MINIMUM APPROACH DISTANCE in Feet (Meters)
0 to 50 KV	10 (3)
Over 50KV to 200 KV	15 (5)
Over 200KV to 350 KV	20 (6)
Over 350 KV to 500 KV	25 (8)
Over 500 KV to 750 KV	35 (11)
Over 750 KV to 1000 KV	45 (14)

NOTE: *This requirement shall apply except where employer, local or governmental regulations are more stringent.*


- This machine is not insulated and does not provide protection from contact or proximity to electrical current.
- Maintain distance from electrical lines, apparatus, or any energized (exposed or insulated) parts according to the Minimum Approach Distance (MAD) as shown in Table 1-1.
- Allow for machine movement and electrical line swaying.
- Maintain a clearance of at least 10 ft. (3m) between any part of the machine and its occupants, their tools, and their equipment from any electrical line or apparatus carrying up

- The minimum approach distance may be reduced if insulating barriers are installed to prevent contact, and the barriers are rated for the voltage of the line being guarded. These barriers shall not be part of (or attached to) the machine. The minimum approach distance shall be reduced to a distance within the designed working dimensions of the insulating barrier. This determination shall be made by a qualified person in accordance with the employer, local, or governmental requirements for work practices near energized equipment.

⚠ DANGER

DO NOT MANEUVER MACHINE OR PERSONNEL INSIDE PROHIBITED ZONE (MAD). ASSUME ALL ELECTRICAL PARTS AND WIRING ARE ENERGIZED UNLESS KNOWN OTHERWISE.


Tipping Hazards

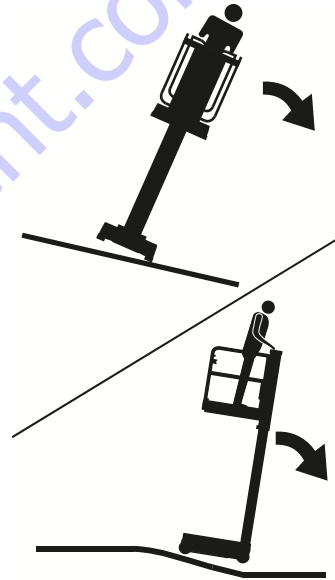

- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel. Do not operate machine on unsupported surfaces.

SECTION 1 - SAFETY PRECAUTIONS


- Do not elevate platform while on or near a sloping, uneven, or soft surface. Ensure machine is positioned on a firm, level and smooth surface before elevating platform.
- Before operating on floors, bridges, trucks, and other surfaces, check allowable capacity of the surfaces.
- Never exceed the maximum work load as specified on the platform. Keep all loads within the confines of the platform, unless authorized by JLG.
- Keep the chassis of the machine a minimum of 2 ft. (0.6m) from holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards at the ground level.
- Never operate machine in high wind, rain or snow.
- Do not perform work that will subject unit to a horizontal force or create a swaying motion of the platform.

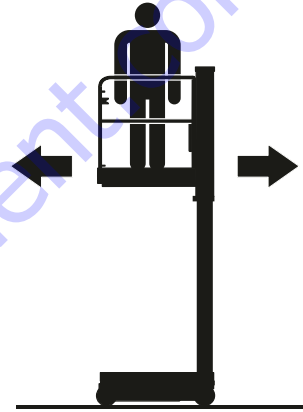

- Never attempt to use the machine as a crane. Do not tie-off machine to any adjacent structure. Never attach wire, cable, or any similar items to platform.
- Do not cover the platform sides or carry large surface-area items in the platform. The addition of such items increases the exposed wind area of the machine.
- Do not increase the platform size with unauthorized deck extensions or attachments.
- If the mast assembly or platform is caught so that one or more wheels are off the ground, platform personnel must

be removed before attempting to free the machine. Use cranes, forklift trucks, or other appropriate equipment to stabilize machine and remove personnel.

Crushing and Collision Hazards

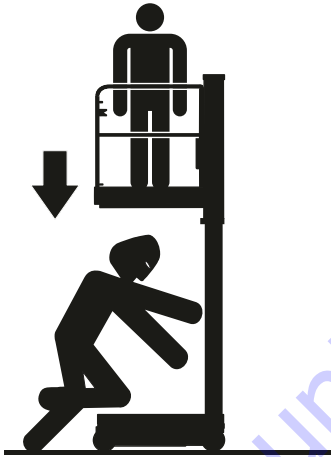

- Approved head gear must be worn by all operating and ground personnel.

- Watch for obstructions around machine and overhead when driving. Check clearances above, on sides, and bottom of platform when lifting or lowering platform.
- During operation, keep all body parts inside platform railing.
- Keep non-operating personnel at least 6 ft. (1.8m) away from machine during all operations.
- When moving the machine, the operator must limit travel speed according to conditions of ground surface, congestion, visibility, slope, location of personnel, and other factors.
- Exercise extreme caution at all times to prevent obstacles from striking or interfering with operating controls and persons in the platform.
- Ensure that operators of other overhead and floor level machines are aware of the aerial work platform's presence. Disconnect power to overhead cranes. Barricade floor area if necessary.
- Do not operate over ground personnel. Warn personnel not to work, stand, or walk under a raised platform. Position barricades on floor as necessary.

1.5 MOVING, LIFTING AND REPOSITIONING

General

- Never allow personnel in platform while moving, lifting or repositioning the machine.
- This machine shall not be towed by a vehicle.
- Do not move assembled unit on wheels over soft or uneven surfaces, or over obstructions, bumps, debris, etc.
- Disassemble unit to transport over uneven or sloped ground, or in a vehicle.
- Ensure platform is fully retracted and completely empty of tools prior to disassembly, lifting or hauling.
- Refer to the Machine Operation section of this manual for lifting information.

Additional Safety Information

- Do not use machine as ground for welding.

1.6 MAINTENANCE

This sub-section contains general safety precautions which must be observed during maintenance of this machine. Additional precautions to be observed during machine maintenance are inserted at the appropriate points in this manual and in the Service and Maintenance section of this manual. It is of utmost importance that maintenance personnel pay strict attention to these precautions to avoid possible injury to personnel or damage to the machine or property. A maintenance program must be established by a qualified person and must be followed to ensure that the machine is safe.

Maintenance Hazards

- Shut off power to all controls and ensure that all moving parts are secured from inadvertent motion prior to performing any adjustments or repairs.
- Never work under an elevated platform until it has been fully lowered to the full down position, if possible, or otherwise supported and restrained from movement with appropriate safety props, blocking, or overhead supports.
- DO NOT attempt to repair or tighten any hydraulic hoses or fittings while the machine is powered on or when the hydraulic system is under pressure.

- Always relieve hydraulic pressure from all hydraulic circuits before loosening or removing hydraulic components.
- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to help protect hands from spraying fluid.
- Ensure replacement parts or components are identical or equivalent to original parts or components.
- Ensure that all moving parts are secured from inadvertent motion prior to performing any adjustments or repairs.
- Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. Ensure adequate support is provided when raising components of the machine.
- Use only approved non-flammable cleaning solvents.
- Do not replace items critical to stability, such as batteries or solid tires, with items of different weight or specification.
- Do not modify unit in any way to affect stability.
- Reference the Service and Maintenance Manual for the weights of critical stability items.



⚠ WARNING

MODIFICATION OR ALTERATION OF AN AERIAL WORK PLATFORM SHALL BE MADE ONLY WITH PRIOR WRITTEN PERMISSION FROM THE MANUFACTURER.

Battery Hazards

- Always disconnect batteries when servicing electrical components or when performing welding on the machine.
- Do not allow smoking, open flame, or sparks near battery during charging or servicing.
- Do not contact tools or other metal objects across the battery terminals.
- Always wear hand, eye, and face protection when servicing batteries. Ensure that battery acid does not come in contact with skin or clothing.

⚠ CAUTION

BATTERY FLUID IS HIGHLY CORROSIVE. AVOID CONTACT WITH SKIN AND CLOTHING AT ALL TIMES. IMMEDIATELY RINSE ANY CONTACTED AREA WITH CLEAN WATER AND SEEK MEDICAL ATTENTION.

- Charge batteries only in a well ventilated area.
- Avoid overfilling the battery fluid level. Add distilled water to batteries only after the batteries are fully charged.

SECTION 1 - SAFETY PRECAUTIONS



NOTES:

Two columns of horizontal lines for taking notes.

Discount-Equipment.com

TO PURCHASE THIS PRODUCT PLEASE CONTACT US



**Equipment Financing and
Extended Warranties Available**



**Discount-Equipment.com is your online resource for
commercial and industrial quality parts and equipment sales.**

561-964-4949

visit us on line @ www.discount-equipment.com

Select an option below to find your Equipment

Search by Manufacturer

Search by Product Type

Request a Quote

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar

SECTION 2. PREPARATION AND INSPECTION

2.1 PERSONNEL TRAINING

The aerial platform is a personnel handling device; so it is necessary that it be operated and maintained only by trained personnel.

Persons under the influence of drugs or alcohol or who are subject to seizures, dizziness or loss of physical control must not operate this machine.

Operator Training

Operator training must cover:

1. Use and limitations of the controls in the platform and at the ground, emergency controls and safety systems.
2. Control labels, instructions, and warnings on the machine.
3. Rules of the employer and government regulations.
4. Use of approved fall protection device.
5. Enough knowledge of the mechanical operation of the machine to recognize a malfunction or potential malfunction.
6. The safest means to operate the machine where overhead obstructions, other moving equipment, and obstacles, depressions, holes, dropoffs.

7. Means to avoid the hazards of unprotected electrical conductors.
8. Specific job requirements or machine application.

Training Supervision

Training must be done under the supervision of a qualified person in an open area free of obstructions until the trainee has developed the ability to safely control and operate the machine.

Operator Responsibility

The operator must be instructed that he/she has the responsibility and authority to shut down the machine in case of a malfunction or other unsafe condition of either the machine or the job site.

2.2 PREPARATION, INSPECTION, AND MAINTENANCE

The following table covers the periodic machine inspections and maintenance recommended by JLG Industries, Inc. Consult local regulations for further requirements for aerial work platforms. The frequency of inspections and maintenance must be increased as necessary when the machine is used in a harsh or hostile environment, if the machine is used with increased frequency, or if the machine is used in a severe manner.

NOTICE

JLG INDUSTRIES, INC. RECOGNIZES A FACTORY-TRAINED SERVICE TECHNICIAN AS A PERSON WHO HAS SUCCESSFULLY COMPLETED THE JLG SERVICE TRAINING SCHOOL FOR THE SPECIFIC JLG PRODUCT MODEL.

Table 2-1. Inspection and Maintenance Table

TYPE	FREQUENCY	PRIMARY RESPONSIBILITY	SERVICE QUALIFICATION	REFERENCE
Pre-Start Inspection	Before using each day; or whenever there's an Operator change.	User or Operator	User or Operator	Operator and Safety Manual
Pre-Delivery Inspection (See Note Below)	Before each sale, lease, or rental delivery.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form
Frequent Inspection	In service for 3 months or 150 hours, whichever comes first; or Out of service for a period of more than 3 months; or Purchased used.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form
Annual Machine Inspection	Annually, no later than 13 months from the date of prior inspection.	Owner, Dealer, or User	Factory Trained Service Technician (Recommended)	Service and Maintenance Manual and applicable JLG inspection form
Preventative Maintenance	At intervals as specified in the Service and Maintenance Manual.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual

NOTE: Inspection forms are available from JLG. Use the Service and Maintenance Manual to perform inspections.

2.3 PRE-START INSPECTION

The Pre-Start Inspection should include each of the following:

1. **Cleanliness** – Check all surfaces for leakage (oil, fuel, or battery fluid) or foreign objects. Report any leakage to proper maintenance personnel.
2. **Decals and Placards** – Check all for cleanliness and legibility. Make sure none of the decals and placards are missing. Make sure all illegible decals and placards are cleaned or replaced. (Reference Section 3, Decal Installation).
3. **Operation and Safety Manual** – Make sure a copy of the Operation and Safety Manual, AEM Safety Manual, and ANSI Manual of Responsibilities is enclosed in the weather resistant manual storage container.
4. **Walk-Around Inspection** – Refer to Section 2.4.
5. **Battery** - Charge is required.
6. **Hydraulic Oil** - Check the hydraulic oil level. Ensure hydraulic oil is added as required.
7. **Function Check** - Once the “Walk-Around” Inspection is complete, perform a function check of all systems in an area free of overhead and ground level obstructions. Refer to Section 2.5 for more specific instructions.

2.4 DAILY WALK-AROUND INSPECTION

General

Begin Walk-Around Inspection at item 1 (See Figure 2-1. on page 2-6). Continue around machine checking each item in this check list.

NOTICE

DO NOT OVERLOOK VISUAL INSPECTION OF CHASSIS UNDERSIDE. CHECKING THIS AREA MAY RESULT IN DISCOVERY OF CONDITIONS WHICH COULD CAUSE EXTENSIVE MACHINE DAMAGE.

INSPECTION NOTE:

On each item, make sure there are no loose or missing parts, they are securely fastened, no visible damage exists in addition to any other criteria mentioned.

1. **Swivel Castor Wheels** - Properly secured, wheels and castors turn freely. Brakes lock and release - prevent wheels from rolling when locked.
2. **Rear Wheels - Auto-Locking Brake** - Check for any debris stuck to or around wheels. See Inspection Note.
3. **Gate/Gate Latch** - Platform railings; entry gate in proper working order, closing properly.
4. **Platform Control Box** - See Inspection Note.
5. **Emergency Lowering Valve** - Ensure the emergency lowering valve is closed before machine operation.

- 6. Emergency Stop/Battery Isolator** - Turn key switch in emergency stop button, then pull to release.
- 7. Bubble Level Indicator** - Check bubble level indicator is clean, secure and responds to movement.
- 8. Battery/Charger Assembly/Hydraulic System** - Proper battery electrolyte level (if non-sealed battery), no battery terminal corrosion. Check hydraulic oil level in reservoir, check hydraulic lines for oil leaks. (See Section 5 - Operator Maintenance.)
- 9. Platform** - See Inspection Note.
- 10. Mast Assembly** - Check lanyard attach point is not bent and is secure to mast. See Inspection Note.

Discount-Equipment.com

SECTION 2 - PREPARATION AND INSPECTION

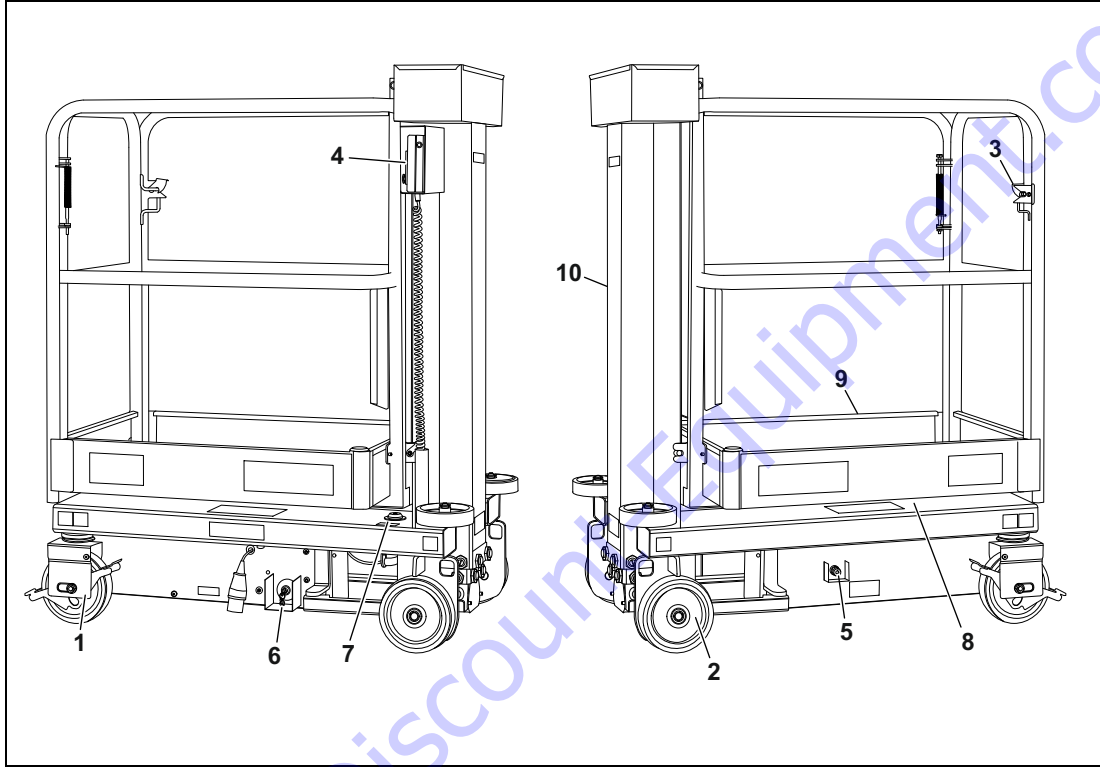


Figure 2-1. Daily Walk-Around Inspection

1. Swivel Castor
2. Auto-Lock Braked Wheel
3. Gate/Gate Latch
4. Platform Control Box
5. Emergency Lowering Valve
6. Emergency Stop/Battery Isolator
7. Bubble Level Indicator
8. Battery/Charger/Hydraulic Pump Assembly (Inside Base Frame)
9. Platform
10. Mast Assembly

2.5 FUNCTION CHECK

The function check of all systems should be performed in an area free of overhead and ground level obstructions. Perform a function check as follows:

1. Set-up machine for operation according to instructions in Section 3, Positioning and Leveling Machine.
2. Check that front caster wheel locks, when set, stop all machine rolling movement.
3. Power up machine. Check that the Emergency Stop button, located on the base frame, shuts power off when pressed in.
4. Enter platform check that the platform entry gate automatically closes.
5. Check that the platform controls operate properly. Check that all platform movement stops immediately when the enable, up, or down buttons are released on the platform control box. Check that the emergency stop button stops all platform movement when pressed in.
6. Raise and lower platform 2 ft. to 3 ft. (0.61 m to 0.92m) several times. Check for smooth elevation and lowering of platform.
7. With the aid of an assistant, check the operation of the rear wheel auto locking brake mechanism. With the platform elevated and clear of the chassis, observe the

action of the rear wheel brake, ensure the wheels fully engage the locking tab weldments above the rear wheels when the platform is elevated, and is released when the platform is fully lowered.

8. Emergency Lowering Valve - raise platform 2 to 3 ft. (0.61m to 0.92m), to open valve, push red knob in and turn 90° counter-clockwise and release, platform will start to lower. Once platform is lowered to desired height, push in and turn knob clockwise and release to close valve.

SECTION 2 - PREPARATION AND INSPECTION



NOTES:

Two columns of horizontal lines for taking notes, separated by a vertical line. A large, light blue watermark 'Discount-Equipment.com' is oriented diagonally across the page.

SECTION 3. MACHINE OPERATION

3.1 GENERAL

NOTICE

THE MANUFACTURER HAS NO DIRECT CONTROL OVER MACHINE APPLICATION AND OPERATION. THE USER AND OPERATOR ARE RESPONSIBLE FOR CONFORMING WITH GOOD SAFETY PRACTICES.

This section provides the necessary information needed to understand control function and operation.

3.2 MACHINE DESCRIPTION

The machine is manually propelled machine, with a work platform mounted to an elevating mast mechanism. The personnel lift's intended purpose is to provide personnel (with their tools & supplies) access to areas above ground level.

The platform is raised and lowered by a control station on the right side of the mast. This controls a hydraulic system which extends a hydraulic cylinder within the mast assembly.

An emergency lowering valve is provided at the base of the machine to lower the platform to the ground in an emergency if the operator in the platform is unable to do so.

3.3 MACHINE OPERATION

The following control conditions must be met before elevating the platform:


- Make sure the pre-start inspection (Section 2) has been completed, and the machine is safe to use.
- Check that machine base is level and is set up properly for operation.
- Platform swing-in entry gate must be closed and latched once the operator is in the platform.

- Ensure Emergency lowering valve is closed.
- Batteries contain enough voltage to operate the machine. Check the battery charge indicator located on the platform control box. When indicator is in the RED area battery voltage is getting low and battery should be charged before operating machine.

NOTICE

JLG RECOMMENDS THAT THE OPERATOR UTILIZES A FALL RESTRAINT SYSTEM IN THE PLATFORM WITH A LANYARD ATTACHED TO THE AUTHORIZED LANYARD ANCHORAGE POINT IN THE PLATFORM.

Machine Component Locations

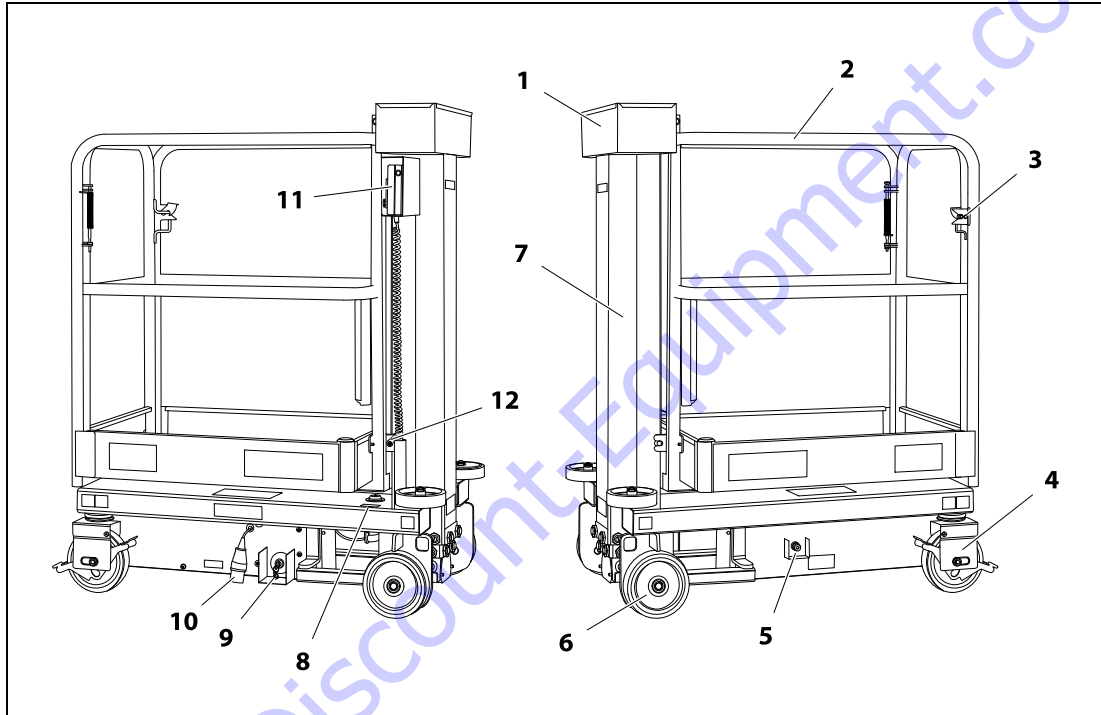

- 1. Tool Tray
- 2. Platform
- 3. Entry Gate and Latch
- 4. Front Locking Caster Wheels
- 5. Emergency Lowering Valve
- 6. Rear Wheel (Auto Locking)
- 7. Mast Assembly
- 8. Bubble Level Indicator
- 9. Emergency Stop with Key Switch
- 10. Battery Charger AC Plug
- 11. Platform Control Box
- 12. Platform Lift Up Release Latch

Figure 3-1. Machine Component Locations

Battery Charger Operation

The battery charger is located under the base frame cover beneath the platform. (See Figure 3-2.) To access the charger, see Figure 5-2.

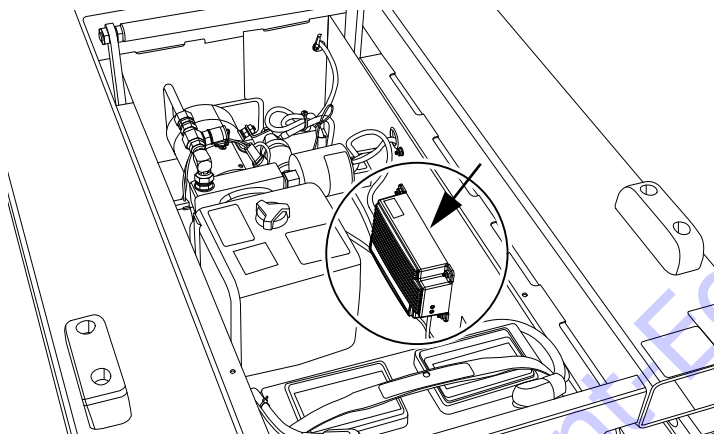


Figure 3-2. Battery Charger

The charging AC input cable is located on the left side of the machine base (see Figure 3-3.). Plug into a compatible AC power supply, see charger specifications in Table 5-3 on page 5-3.

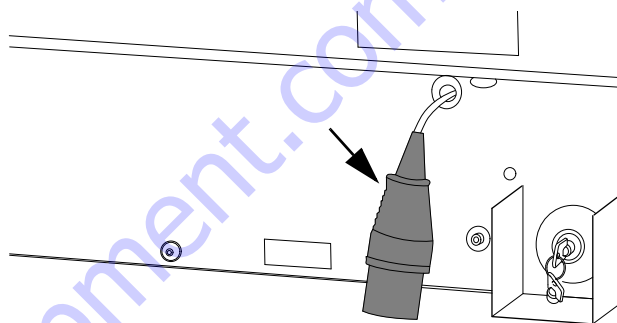


Figure 3-3. Charger AC Input Cable

The battery charge level can be monitored at the platform control box - battery charge indicator see Figure 3-4. or by observing the LEDs on the front of the battery charger, see Figure 3-5.

To display current battery charge status on the platform control - battery charge indicator - both the ground and platform control, emergency stop switches must be set to the ON position, and the enable button on the side of the platform control must be momentarily pressed in. When the indicator is at the top of the GREEN area that indicates a full charge. When the indicator is in the RED area this indicates power is getting low and batteries will soon need recharged.

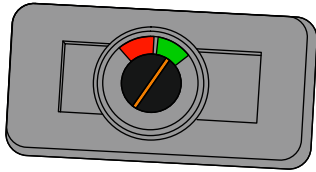


Figure 3-4. Battery Charge Indicator

(Located near the top of the Platform Control Box)


The AMBER LED will illuminate when the battery charger is connected to the AC power supply.

NOTE: *If the AMBER LED is flashing there is a fault, check fuse and connections.*

The AMBER and GREEN LEDs indicate the charging phase.

The charge is complete when the GREEN LED illuminates.

The battery charger can be connected to the AC power supply at any time or left for extended periods.

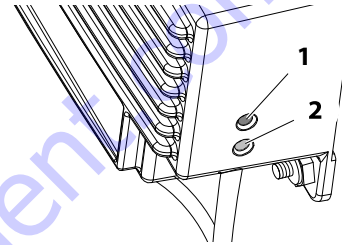

1. Green LED

2. Amber LED


Figure 3-5. Charger LEDs

NOTICE

AC POWER SUPPLY CIRCUIT SHOULD BE PROTECTED WITH A BREAKER CIRCUIT. ONLY CHARGE BATTERY IN A WELL-VENTILATED AREA.

NOTE: *The charger is fitted with a 15A automotive spade fuse (blue). If the fuse has failed, the indicator lights will still operate. The fuse may have failed if the battery is heavily discharged and the motor is run when the charger is switched on. In such an event, the fuse is simple to replace; ensure battery disconnect is switched off and that the positive RED battery cable is disconnected before attempting to check or change fuse.*

Ground Controls

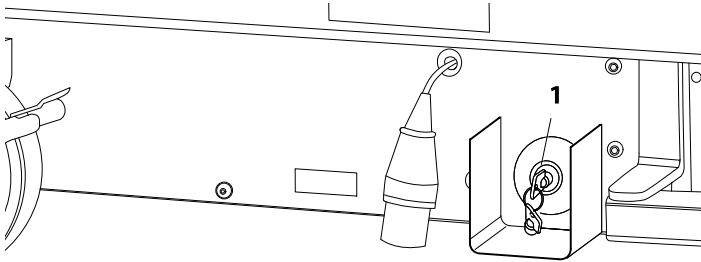


1. Emergency Stop/Key Switch


- 2. Emergency Stop with Key Switch** - This is the ground control emergency stop switch. When pressed in all platform movement will stop. When turned clockwise the button will pop out and re-activate the electrical system. The switch is also equipped with a removable key, with the button pressed in and the key removed the electrical system cannot be activated.

Positioning and Leveling Machine

1. Position machine under work area on a firm, level, and uniform supporting surface.
2. Check that **ALL** wheels front and rear are in contact with the supporting surface.
3. Check that the bubble level indicator is centered and machine is level. (See Figure 3-6.)

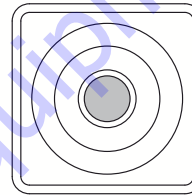

Level

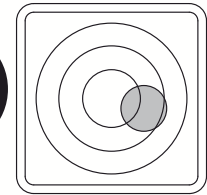

NOT - Level

Figure 3-6. Machine Bubble Level Indicator

4. Lock the front castor wheels to prevent the machine from rolling.

Entering/Exiting The Platform

⚠ WARNING

DO NOT EXCEED MAXIMUM PLATFORM CAPACITY. MAXIMUM CAPACITY INCLUDES PERSONNEL IN PLATFORM PLUS WEIGHT IN TOOL TRAY OR ANY OTHER WEIGHT PLACED IN PLATFORM.



1. Always maintain “three point contact” with the machine, using two hands and one foot or two feet and one hand at all times during entry and exit.
2. Attach your lanyard to the lanyard attachment point in the lower right hand corner of the Mast.
3. Make sure entry gate is closed behind you.
4. Once in the platform and the entry gate fully closed, the platform is ready for the operation.


⚠ WARNING

BEFORE OPERATING PLATFORM CHECK AROUND AND OVERHEAD FOR ANY OBSTACLES OR PERSONNEL THAT MAY COME INTO CONTACT WITH MACHINE WHILE ELEVATING OR LOWERING THE PLATFORM. IF NECESSARY, EXIT MACHINE AND REPOSITION BEFORE PROCEEDING.

5. Before exiting the platform, be certain platform is fully lowered.

Platform Controls

1. Check there are no overhead obstructions before elevating platform.
2. The enable button (1), this button must be pressed and held in to operate either the UP or DOWN buttons on the control box.
3. Battery Charge Indicator (2) shows the charge status of the onboard battery.
4. Press  Up arrow button (3) to elevate the platform.
5. Press  Down arrow button (4) to lower the platform.
6. In case of uncontrolled platform elevation or descent, press in the RED emergency stop button (5) to the OFF position. Twist clockwise to RESET to the ON position.

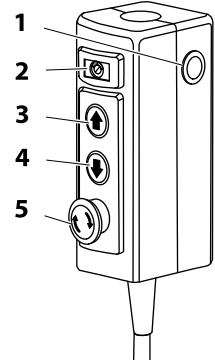

⚠ WARNING

CRUSHING HAZARD - BE AWARE OF DESCENDING PLATFORM WHEN LOWERING THE PLATFORM. KEEP HANDS OR FEET OFF THE MAST ASSEMBLY AND FROM UNDER THE PLATFORM.

3.4 TRANSPORTING, LIFTING AND TIE-DOWN PROCEDURES

(See Figure 3-7.)

Loading or Towing

If loading machine up a ramp to the trailer with the aid of a winch, connect the winch cable to the castor/gate end of the chassis using the location holes provided. First run a strap around the front tow/tie down pins mounted inside the fork lift pockets, and then connect the winch cable to the strap.

When towing ensure the castor wheel locks are unlocked, and that the platform is fully lowered in the transport position.

Before disconnecting the machine from the winch cable, engage the castor wheel locks to keep the machine from rolling.

Vehicle Transport

Always ensure that the machine is transported in the upright position. Never lay flat.

Ensure the transport vehicle is parked on a level surface.

The machine can be loaded via a forklift, tail-lift, or winch. Never push the machine up a slope greater than 5° without the aid of a winch or forklift.

If using a forklift, set the front castor locks, this will keep the machine from rolling. Ensure the forklift tines are fully engaged through the chassis sockets.

To secure machine to the transport vehicle, use at least two straps, with one strap over the chassis, around the mast section and out to the rear of the machine. The other strap should be fed through the front tie down locations on the chassis and the straps taken forward, so that the machine is tied down in four diagonal directions.

NOTICE

NEVER PLACE THE STRAP THROUGH THE PLATFORM OR HANDRAILS THIS COULD RESULT IN MACHINE DAMAGE. DO NOT USE EXCESSIVE FORCE WHEN TIGHTENING STRAPS.

3.5 STORAGE

If the machine is to be taken out of operation for a period longer than one month, the following precautions should be taken.

Ideally, the battery charger should be switched on. The charger has a programmed maintenance mode, and will maintain the battery in good condition indefinitely, although obviously the electrolyte level must still be checked periodically. If this is not practical, then the charger should be switched on once a week for half an hour. This is especially important in cold conditions.

The hydraulic oil must be replaced (recommended after 3 months of non-use) see the procedure in the Maintenance Procedures section.

If the storage period is for an undetermined period then it is advisable that the battery be removed and stored in a secure battery storage container. We would also advise that all external

electrical and hydraulic connections be covered to prevent corrosion.

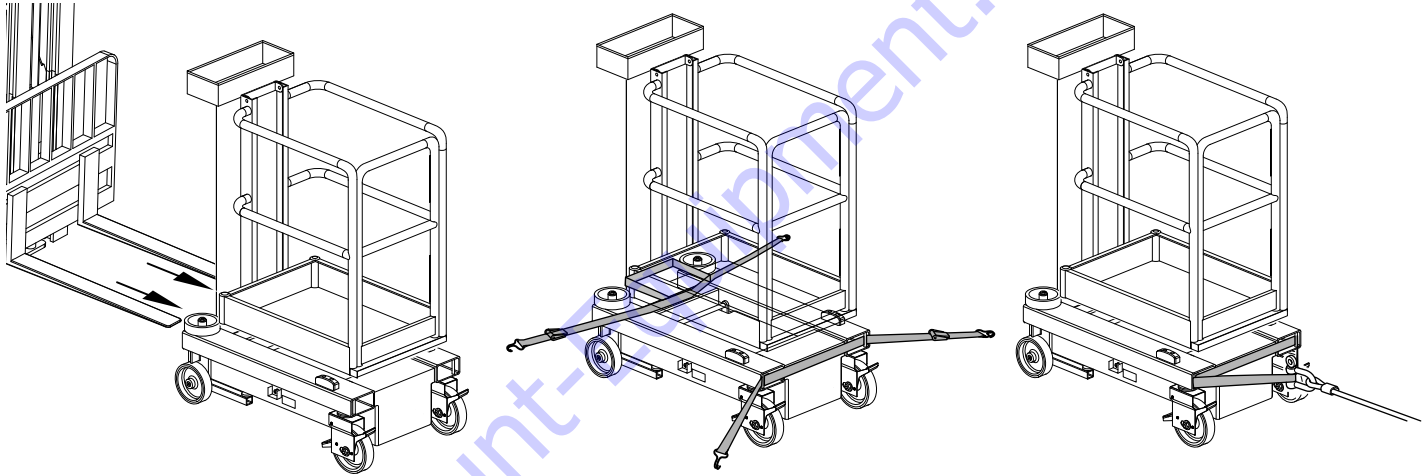


Figure 3-7. Transport - ForkLift Truck - Tie-Down - Towing

3.6 DECAL INSTALLATION

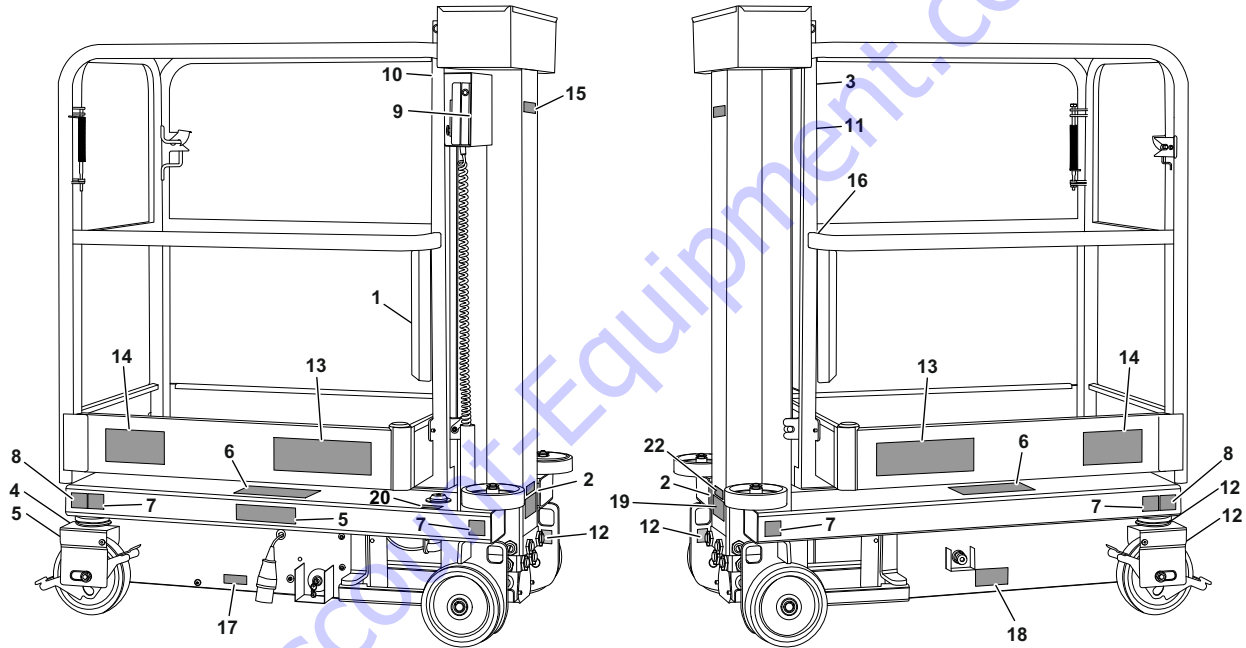


Figure 3-8. Decal Installation

Table 3-1. Decal Installation Chart (See Figure 3-8.)

Item	Part Number			
	ANSI - English (1001214198-B)	CSA - French (1001215008-A)	ANSI - Spanish (1001241788-A)	ANSI - Portuguese (1001241789-A)
1	1701509			
2	1703817			
3	1703781	1704795	1704029	1704021
4	1702391	1001215113	1001241795	1001241805
5	1703813	1001215217	1001241797	1001241806
6	1703786	1704039	1704032	1704024
7	1001213587			
8	1001213208			
9	1001213490			
10	1001213488			
11	1001213946	1001215006	1001241798	1001241807
12	1001213442			
13	1001213551			
14	1001214107			
15	1001214109			

Table 3-1. Decal Installation Chart (See Figure 3-8.)

Item	Part Number			
	ANSI - English (1001214198-B)	CSA - French (1001215008-A)	ANSI - Spanish (1001241788-A)	ANSI - Portuguese (1001241789-A)
16	1001213582	1001215009	1001241792	1001241802
17	3251243			
18	1001214251	1001215004	1001241799	1001241808
19	1001213621			
20	1703789	1704041	1704034	1704026
21	—	—	—	—
22	—	1706351	—	—

SECTION 3 - MACHINE OPERATION



NOTES:

A large area for taking notes, consisting of two columns of horizontal lines. A large, light blue watermark reading 'Discount-Equipment.com' is oriented diagonally across the center of the page.

SECTION 4. EMERGENCY PROCEDURES

4.1 GENERAL INFORMATION

This section explains the steps to be taken in case of an emergency situation while operating the machine.

4.2 EMERGENCY OPERATION

Operator Unable to Control Machine

IF THE PLATFORM OPERATOR IS PINNED, TRAPPED OR UNABLE TO OPERATE OR CONTROL THE MACHINE, USE THE FOLLOWING INSTRUCTIONS AS A GUIDELINE.

1. Other personnel should operate the machine from ground controls only as required.
2. Only qualified personnel in the platform may use the platform controls. DO NOT CONTINUE OPERATION IF CONTROLS DO NOT FUNCTION PROPERLY.

Cranes, forklift trucks or other equipment can be used to remove the platform occupant and stabilize motion of the machine.

Platform Caught Overhead

If the platform becomes jammed or snagged in overhead structures or equipment, rescue the platform occupant prior to freeing the machine.

Righting of Tipped Machine

Before righting a tipped machine, check machine for any damage which may prevent it from setting properly on its base wheels once in a vertical position, (i.e. base wheels damaged, base frame distorted, etc.). Use a crane, forklift or other suitable lifting equipment and carefully lift the machine to an upright position.

NOTICE

FOLLOWING ANY INCIDENT, THOROUGHLY INSPECT THE MACHINE AND TEST ALL FUNCTIONS. DO NOT ELEVATE PLATFORM UNTIL YOU ARE SURE THAT ALL DAMAGE HAS BEEN REPAIRED, IF REQUIRED AND THAT ALL CONTROLS ARE OPERATING CORRECTLY.

4.3 INCIDENT NOTIFICATION

JLG Industries, Inc. must be notified immediately of any incident involving a JLG product. Even if no injury or property damage is evident, JLG must be contacted by telephone and provided with all necessary details.

USA: 877-JLG-SAFE (554-7233)

EUROPE: (32) 0 89 84 82 20

AUSTRALIA: (61) 2 65 811111

E-mail: productsafety@jlg.com

Failure to notify the manufacturer of an incident involving a JLG Industries product within 48 hours of such an occurrence may void any warranty consideration on that particular machine.

NOTICE

FOLLOWING ANY INCIDENT, THOROUGHLY INSPECT THE MACHINE. DO NOT ELEVATE PLATFORM UNTIL YOU ARE SURE THAT ALL DAMAGE HAS BEEN REPAIRED, AND THAT ALL CONTROLS ARE OPERATING CORRECTLY. TEST ALL FUNCTIONS FIRST FROM THE GROUND CONTROL STATION, THEN FROM THE PLATFORM CONTROL CONSOLE.

4.4 EMERGENCY LOWERING OPERATION

⚠ WARNING

DO NOT CLIMB OUT OF THE PLATFORM WHILE ELEVATED. THIS MAY AFFECT THE MACHINE'S BALANCE, CAUSING IT TO TIP OVER. ONLY EXIT THE PLATFORM VIA THE PLATFORM GATES. DO NOT ATTEMPT TO CLIMB DOWN MAST.

In case of platform control failure or operator incapacity.

To lower the platform:

1. Locate emergency lowering valve on the frame on the right side of machine (see Figure 4-1.). To open valve, push red knob in and turn 90° counter-clockwise and release, platform will start to lower. Once platform is lowered to desired height, push in and turn knob clockwise and release to close valve.
2. Check the area below the platform is free from obstructions when lowering.
3. Keep clear of descending structure.
4. Do not force the valve knob.

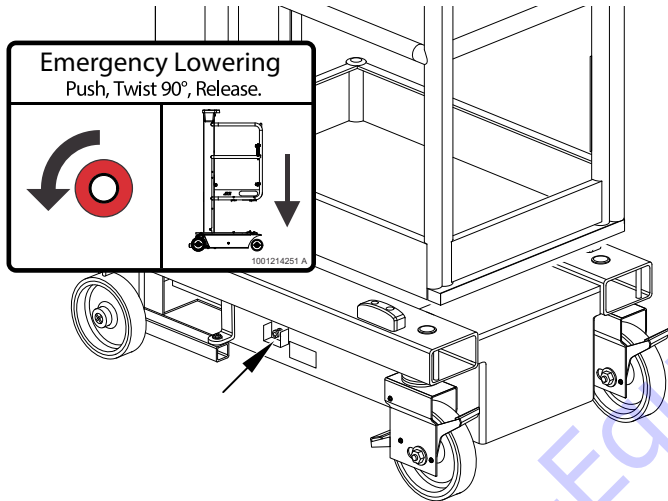


Figure 4-1. Emergency Lowering

SECTION 4 - EMERGENCY PROCEDURES



NOTES:

Lined area for taking notes, consisting of two columns of horizontal lines.

Discount-Equipment.com

SECTION 5. GENERAL SPECIFICATIONS

5.1 INTRODUCTION

This section of the manual provides additional necessary information to the operator for proper operation and maintenance of this machine.

The maintenance portion of this section is intended as information to assist the machine operator to perform daily maintenance tasks only, and does not replace the more thorough Preventive Maintenance and Inspection Schedule included in the Service and Maintenance Manual.

Other Publications Available Specific to this Machine:

Illustrated Parts Manual

ANSI 3121743

Service and Maintenance Manual

ANSI 3121749

5.2 GENERAL SPECIFICATIONS

Machine Specifications

Table 5-1. Machine Specifications

WORKING DIMENSION	830P
Maximum working height:	14.76 ft (4.50 m)
Maximum platform height:	8.20 ft (2.50 m)
Platform Dimensions:	3.28 ft (L) x 2.39 ft (W) (1 m (L) x 0.73 m (W))
Working footprint:	3.90 ft x 2.46 ft (1.19 m x 0.75 m)
Max. Platform Capacity: (Platform and Tool Tray Combined)	440 lb (200 kg) (1 person + tools)
Maximum manual side force:	45 lb (200 N)
Maximum gradient for operation	0 degree
Maximum wind force	Indoor use only
Max. ground bearing pressure	174 psi (12.23 kg/cm ²)
Max. wheel load	345 lb (157 kg)

Table 5-2. Machine Dimensions

CLOSED DIMENSION	830P
Length	3.92 ft (1.195 m)
Width	2.46 ft (0.750 m)
Height	5.11 ft (1.560 m)
Weight	628 lb (285 kg)

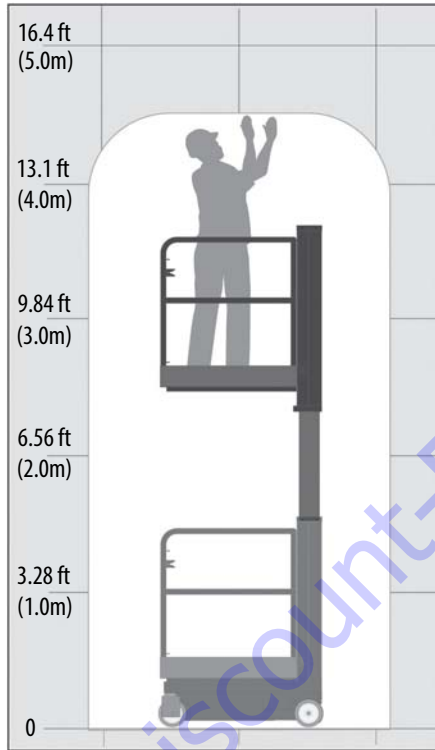


Figure 5-1. Operating Specifications

Power Source:

12V DC Battery

Electric Motor - Standard 12V DC

Hydraulic Pump - 3.1cc/rev

Hydraulic Pressure Relief: 942 psi/65 bar

Battery Charger Specification:

Table 5-3. Battery Charger Specification

AC Input Voltage	90-135V AC
Frequency	45-65 Hz
Output	12V DC, 7A

Lubrication Specification

Hydraulic Oil - Grade 32 Mineral Oil

5.3 OPERATOR MAINTENANCE

Accessing Hydraulic/Electrical Components In Base Frame

1. Using the platform control box, raise platform up an inch or two off the rear wheel brake, set bar.

CAUTION

WHEN REMOVING THE BASE FRAME COVER FOR MAINTENANCE PURPOSES, FIRST SWITCH MACHINE POWER OFF BY DEPRESSING THE EMERGENCY STOP BUTTON LOCATED ON THE BASE OF THE MACHINE. USE APPROPRIATE SAFETY/PERSONAL PROTECTIVE EQUIPMENT WHERE NECESSARY.

2. Lift the platform release latch on the left side of the mast while swinging the platform forward.
3. Tilt the platform up by lifting from gate end, the gas strut mounted on the left rear of the platform will assist with platform movement.
4. When fully extended check that the catch mechanism on the gas strut is set and platform is locked in position before working beneath the platform.
5. On the base frame, unscrew the black retaining knobs attaching the frame cover to the base frame, lift cover off frame.
6. After maintenance is completed, reassemble frame cover on the base frame in reverse order starting at step 4 above. Release gas strut and lower platform.




1. Platform Lock/Release Latch
2. Gas Strut with Catch Mechanism
3. Platform Latch Lock Pin
4. Base Frame Cover with Screws

Figure 5-2. Platform Maintenance Position

Hydraulic System Maintenance

- Hydraulic Oil Specification - refill with grade 32 mineral oil.
 - Ensure the hydraulic oil reservoir is not overfilled.
 - The oil level must only be checked when the mast is fully lowered.
 - The correct oil level with the mast fully lowered is approximately 3/4 from the base of the reservoir, as indicated by the line on the side of the reservoir. (See Figure 5-3.)
 - Check that hydraulic connections around the pump and base of cylinder are tight and undamaged.
 - The hydraulic oil must be replaced on an annual basis. If the oil is not replaced, then premature wear and failure of components will occur.
- The only practical method to remove the oil from the tank is to use a syringe suitable for hydraulic oil, which are easily obtainable, or a vacuum system for hydraulic oil. Refill to proper level with fresh oil, and cycle the mast up and down a few full cycles, then recheck oil level.

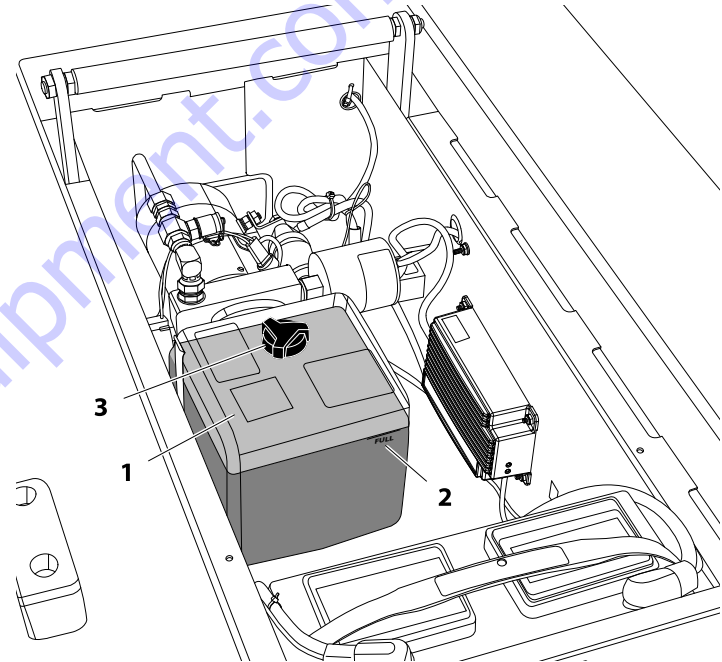

1. Hydraulic Reservoir 3. Fill Cap
2. Full Mark on Reservoir

Figure 5-3. Hydraulic Reservoir

SECTION 6. INSPECTION AND REPAIR LOG

Machine Serial Number: _____

Table 6-1. Inspection and Repair Log

DATE	COMMENTS

Discount-Equipment.com

SECTION 6 - INSPECTION AND REPAIR LOG

Machine Serial Number: _____

Table 6-1. Inspection and Repair Log

DATE	COMMENTS

Discount-Equipment.com

TO PURCHASE THIS PRODUCT PLEASE CONTACT US



**Equipment Financing and
Extended Warranties Available**



**Discount-Equipment.com is your online resource for
commercial and industrial quality parts and equipment sales.**

561-964-4949

visit us on line @ www.discount-equipment.com

Select an option below to find your Equipment

Search by Manufacturer

Search by Product Type

Request a Quote

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep, Small Line, Wanco, Yanmar