LS600 PUMP — WIRING DIAGRAM (DIGITAL READOUT SCREEN)

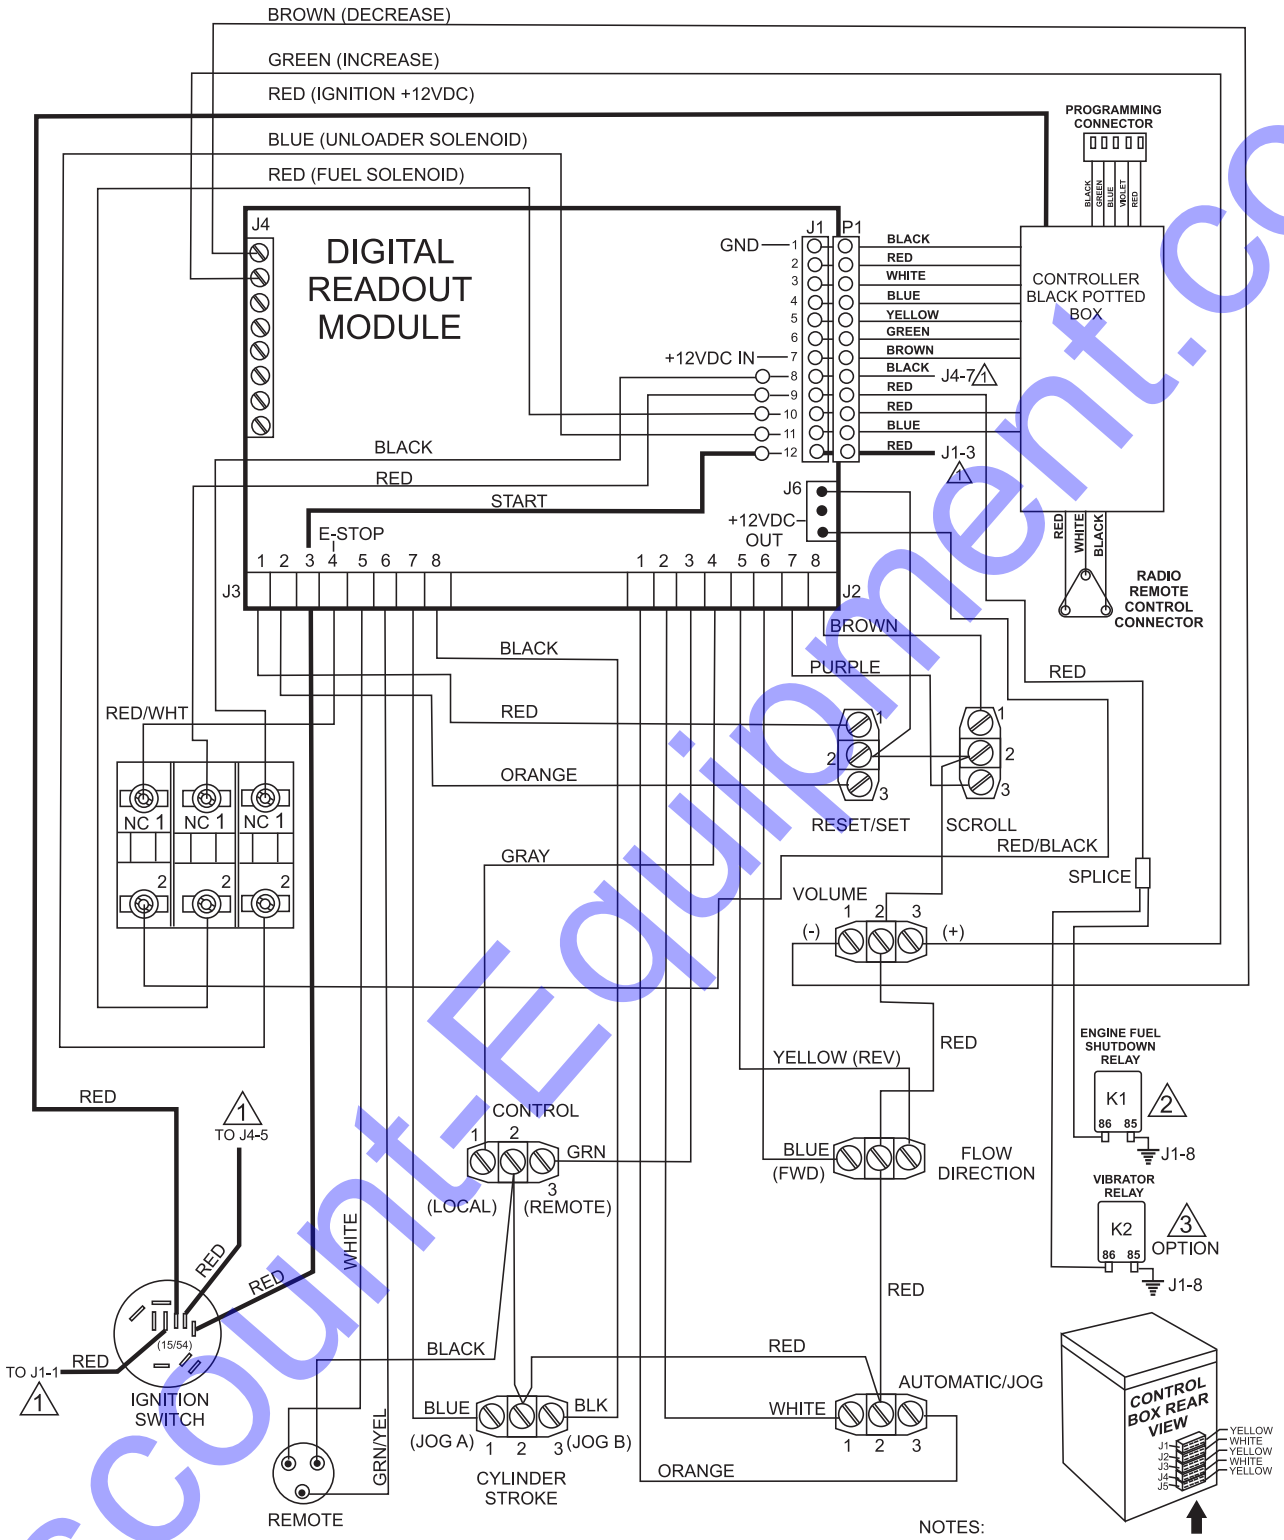

NOTES:

1. CONNECT WIRES TO EITHER J1-1, J1-3, J1-8, J4-5 AND J4-7 CONNECTORS INSIDE CONTROL BOX.
2. SEE ENGINE FUEL SHUTDOWN RELAY WIRING DIAGRAM.
3. SEE VIBRATOR RELAY WIRING DIAGRAM.

Connections to Digital Readout Screen

MAYCO LS600 PUMP

www.discount-equipment.com

Discount-Equipment.com