

DIAMOND CHAIN LIFE



CONCRETE. STONE. MASONRY. **UNSTOPPABLE.**

Fit the Chain to the Job

Understanding the many job-related variables that can affect chain life will help you choose the ICS® diamond chain that best matches your application. This knowledge, combined with accurate performance expectations, is key to employing the unique abilities of Diamond Chain Technology® profitably.




The Job, and the many variables involved, is a key determinant of chain life.

CHAIN LIFE FACTORS	
LESS LIFE	MORE LIFE
AGGREGATE HARDNESS	
Hard Flint	Soft Limestone
STEEL REINFORCING	
Heavy	Light
OPERATOR EXPERIENCE	
Beginner	Expert
CONCRETE AGE	
Green	Hardened
CUTTING DIRECTION	
Horizontal	Vertical

The Chain must be matched to the application to ensure optimum chain life.

DIAMOND CHAIN SELECTION CHART

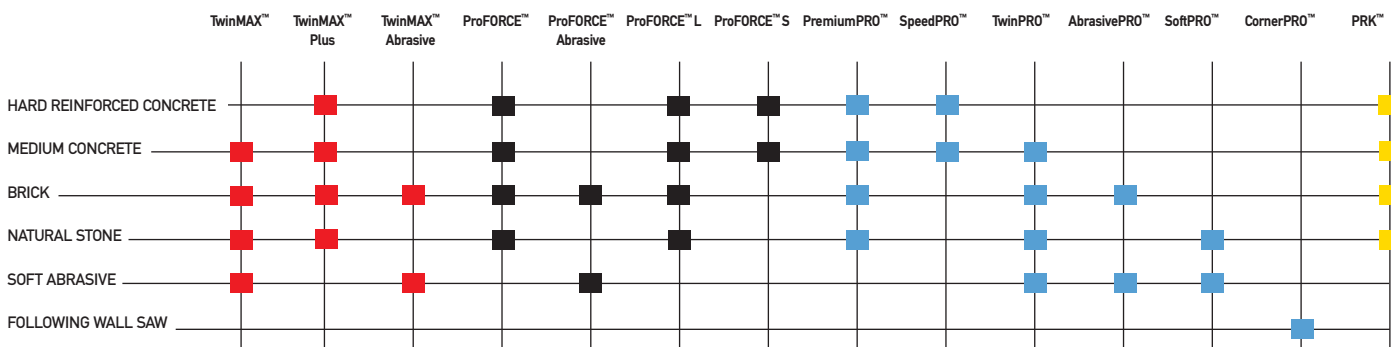

ICS, Blount Inc. • 4909 SE International Way Portland, OR 97222 USA • Ph 800.321.1240 • Fax 503.653.4393

© Copyright 2008 ICS, Blount Inc. Specifications subject to change without notice. All rights reserved. ICS, WallWalker, Redzaw, SpeedHook and SealPro are registered trademarks of ICS, Blount Inc. The best way to cut concrete, Bestway, ProFORCE, PremiumPRO, TwinPRO, AbrasivePRO, SoftPRO, SpeedPRO, CornerPRO, PRK, TSS, Diamond Chain Technology, DCT, TwinMAX and FORCE4 are trademarks of ICS, Blount Inc. 0708

icsbestway.com

DIAMOND CHAIN LIFE



CONCRETE. STONE. MASONRY. **UNSTOPPABLE.**


Estimated Chain Life

Chain life is sometimes measured in inch-feet and can vary widely depending on the type of chain employed and the many variables related to the job. Depending on the type you select, the right ICS® diamond chain used under optimum conditions by a trained operator should deliver the performance shown in the charts below.

For comparison purposes only. Do not use to bid jobs.

INCH-FOOT DEFINITION

- An in-ft is defined as DEPTH of cut in inches multiplied by LENGTH of cut in feet.

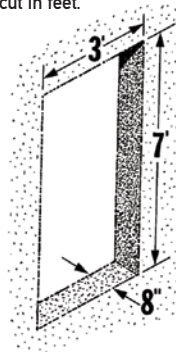

$$3 + 7 + 3 + 7 = 20 \text{ feet}$$

$$8 \text{ in} \times 20 \text{ ft} = 160 \text{ in-ft}$$

Gas Saws

Chain Type	0 in-ft	200 in-ft	400 in-ft	600 in-ft	800 in-ft	1000 in-ft
MAX™ SERIES						

Hydraulic Saws


Chain Type	0 in-ft	200 in-ft	400 in-ft	600 in-ft	800 in-ft	1000 in-ft
PRO™ SERIES/ FORCE4						

Chain wear is normal, but excessive wear can result from factors that usually can be corrected. Examining the chain can help pinpoint the source of trouble.



NORMAL WEAR

Example of a worn out chain under normal usage. No damage to the chassis, drive links or segments. Segments have been worn down to the weld pad.

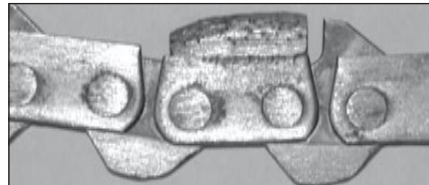

RUN BACKWARDS

Evidence that chain has been run backwards: Wear at back of segment and bond trails extend in wrong direction.



WORN BAR

Chain has been run on a bar that has excessive rail wear causing the drive links to be worn flat.




WORN SPROCKET / IMPROPER TENSION

Chain has been run with improper tension (too loose) or drive sprocket is worn out. Sprocket was turning when the chain was stationary, causing damage to the drive links.



NO WATER

Heat generated by running a chain "dry" can disintegrate o-rings and degrade the diamonds. Drive links are dark blue and connecting links have burred edge on the bottom.

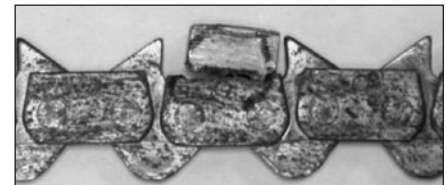

IMPACT DAMAGE

Broken segment caused by attempting to insert the chain into a slot narrower than the diamond segments.