PARTS MANUAL





MODELS
WBH-16
WBH-16E
WBH-16F
WBH-16EF
POWER BUGGY

(HONDA GX390RT2QTT RECOIL START

GX390RT2QNB2 ELECTRIC START GASOLINE ENGINES)

Revision #7 (04/07/23)



www.discount-equipment.com

THIS MANUAL MUST ACCOMPANY THE EQUIPMENT AT ALL TIMES.

PARTS FINDERS Search Website Can't Find







Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: 561-964-4949 Outside Florida TOLL FREE: 877-690-3101

Need parts?

Click on this link: http://www.discount-equipment.com/category/5443-parts/ and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep,Small Line, Wanco, Yanmar

WBH-16 Series Power Buggy

Explanation of Code in Remarks Column	4
Suggested Spare Parts	5

Component Drawings

Power Buggy		
Explanation of Code in Remarks Column Suggested Spare Parts		order your parts
Component Drawings		5 00.
Nameplate and Decals Assembly	6–7	
Hydraulic Drive Assembly		
Hydraulic Pump Assembly		10
Hydraulic Dump Assembly	12–13	
Pump and Coupling Assembly	14–15	
Tub Assembly		
Panel Assembly		
Brake Assembly	20–21	O,
Steering and Controls Assembly		40
Chassis Assembly		
Handle/Foot Dump Controls Assembly		
Hydraulic Oil Tank Assembly		
Battery Assembly		
Fuel Tank Assembly (Steel)		
Fuel Tank Assembly (Plastic)		
Engine Mounting Assembly		ひ `
Engine Assembly		
Engine Service Parts	40–41	

NOTICE

Specifications and part numbers are subject to change without notice.

NOTES

69
;O)
CO
3.5
(O

EXPLANATION OF CODE IN REMARKS COLUMN

The following section explains the different symbols and remarks used in the Parts section of this manual. Use the help numbers found on the back page of the manual if there are any questions.

NOTICE

The contents and part numbers listed in the parts section are subject to change **without notice**. Multiquip does not guarantee the availability of the parts listed.

SAMPLE PARTS LIST

1 12345 BOLT	<u>NO.</u>	<u>Part no.</u>	<u>Part name</u>	<u>QTY.</u>	<u>REMARKS</u>
2% 12347 WASHER, 3/8 IN1MQ-45T ONLY 3 12348 HOSEA/RMAKE LOCALLY	1	12345	BOLT	1	INCLUDES ITEMS W/%
3 12348 HOSEA/RMAKE LOCALLY	2%		WASHER, 1/4 IN	l	NOT SOLD SEPARATELY
	2%	12347	WASHER, 3/8 IN	l1	MQ-45T ONLY
4 12349 BEARING1S/N 2345B AND ABOV	3	12348	HOSE	A/R	MAKE LOCALLY
	4	12349	BEARING	1	S/N 2345B AND ABOVE

NO. Column

Unique Symbols — All items with same unique symbol

(@, #, +, %, or >) in the number column belong to the same assembly or kit, which is indicated by a note in the "Remarks" column.

Duplicate Item Numbers — Duplicate numbers indicate multiple part numbers, which are in effect for the same general item, such as different size saw blade guards in use or a part that has been updated on newer versions of the same machine.

NOTICE

When ordering a part that has more than one item number listed, check the remarks column for help in determining the proper part to order.

PART NO. Column

Numbers Used — Part numbers can be indicated by a number, a blank entry, or TBD.

TBD (To Be Determined) is generally used to show a part that has not been assigned a formal part number at the time of publication.

A blank entry generally indicates that the item is not sold separately or is not sold by Multiquip. Other entries will be clarified in the "Remarks" Column.

QTY. Column

Numbers Used — Item quantity can be indicated by a number, a blank entry, or A/R.

A/R (As Required) is generally used for hoses or other parts that are sold in bulk and cut to length.

A blank entry generally indicates that the item is not sold separately. Other entries will be clarified in the "Remarks" Column.

REMARKS Column

Some of the most common notes found in the "Remarks" Column are listed below. Other additional notes needed to describe the item can also be shown.

Assembly/Kit — All items on the parts list with the same unique symbol will be included when this item is purchased.

Indicated by:

"INCLUDES ITEMS W/(unique symbol)"

Serial Number Break — Used to list an effective serial number range where a particular part is used.

Indicated by:

"S/N XXXXX AND BELOW"

"S/N XXXX AND ABOVE"

"S/N XXXX TO S/N XXX"

Specific Model Number Use — Indicates that the part is used only with the specific model number or model number variant listed. It can also be used to show a part is NOT used on a specific model or model number variant.

Indicated by:

"XXXXX ONLY"

"NOT USED ON XXXX"

"Make/Obtain Locally" — Indicates that the part can be purchased at any hardware shop or made out of available items. Examples include battery cables, shims, and certain washers and nuts.

"Not Sold Separately" — Indicates that an item cannot be purchased as a separate item and is either part of an assembly/kit that can be purchased, or is not available for sale through Multiquip.

SUGGESTED SPARE PARTS

WBH16 SERIES POWER BUGGY

1 to 3 units

Qty.	P/N	Description
1	.508667	FILTER, HYDRAULIC OIL
1	.EM16477	. CAP, HYDRAULIC OIL TANK
1	.18035	.PUMP, HYDRAULIC
1	.18051	COUPLING, ENGINE SHAFT
2	.512881	. BRAKE BAND ASSY.
1	.18145	ROD, BRAKE CONTROL
1	.18166	.CAP, FUEL (NON EPA, 4-IN)
1	.520820	.CAP, FUEL (EPA, 2-IN)
5	.EM20763	.FILTER, IN-LINE FUEL
1	.18131	.SWITCH, KILL
1	.18133	.CABLE, THROTTLE
1	.18132	LEVER, THROTTLE
1	.18029	.WHEEL, DRIVE, PNEUMATIC
1	.18029F	.WHEEL, DRIVE, FOAM
1	.18049	. WHEEL, STRG., PNEU.
		.WHEEL, STEERING, FOAM
1	.18016	.CABLE, PARK BRAKE

NOTICE

Part numbers on this Suggested Spare Parts list may supersede/replace the part numbers shown in the following parts lists.

ENGINE HONDA GX390RT2QTT (RECOIL START)

1 to 3 units


Qty.	P/N	Description
3	.9807955846	.SPARK PLUG
3	.11078	KEY, IGNITION SWITCH
3	.828461Z5T305	.GRIP, STARTER
1	.28462ZE3W01	ROPE, STARTER
3	.17210ZE3010	AIR FILTER, ELEMENT
3	.17218ZE3000	AIR FILTER, OUTER

ENGINE HONDA GX390RT2QNB2 (ELECTRIC START)

1 to 3 units

Qty.	P/N	Description
3	9807955846	SPARK PLUG
3	11078	KEY, IGNITION SWITCH
3	17210ZE3505	AIR FILTER, ELEM. (DUAL)
		AIR FILTER. OUTER


NAMEPLATE AND DECALS ASSY.

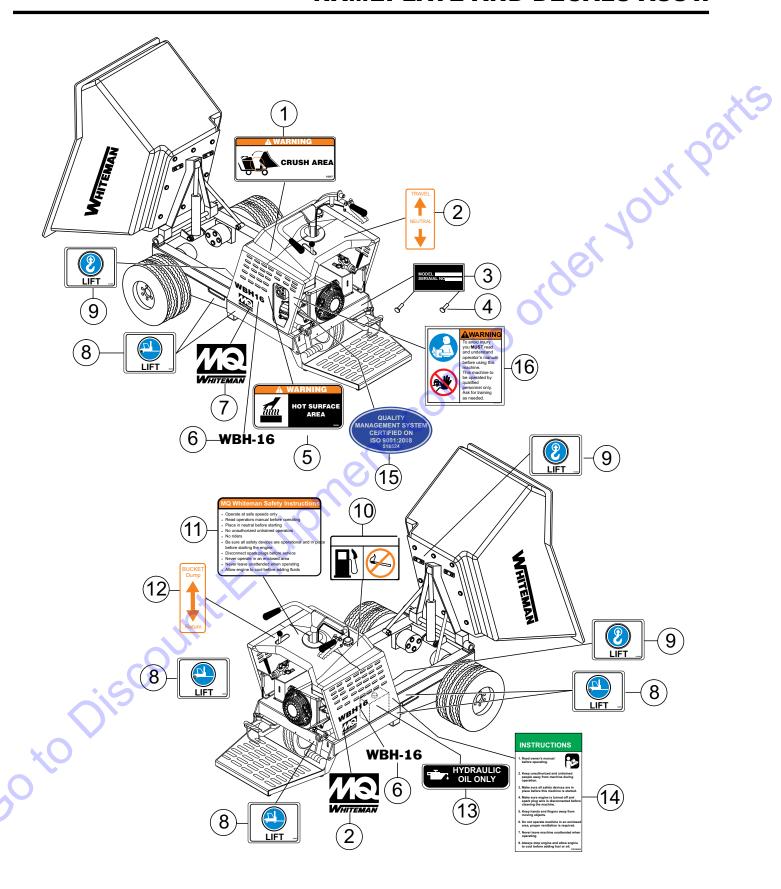

NAMEPLATE AND DECALS ASSY.

NO. 1 2 3	PART NO. 18247	PART NAME DECAL, CRUSH WARNING DECAL, TRAVEL LEVER DIRECTION PLATE, SERIAL NUMBER	<u>QTY.</u> 1 1	REMARKS MOLDED INTO FUEL TANK COVER CONTACT MQ PARTS DEPT.
4 5 6 7 8 9 10 11 12 13 14	491757 18248 18251 18252 18245 513608 EM985 520935	RIVET, I.D. PLATE DECAL, HOT SURFACE WARNING DECAL, WBH-16 DECAL, MQ WHITEMAN DECAL, FORKLIFT LIFTING DECAL, LIFTING HOOK DECAL, GASOLINE ONLY DECAL, WHITEMAN SAFETY INSTRUCTION DECAL, BUCKET DUMP LEVER DECAL, HYDRAULIC OIL DECAL, SAFETY INSTRUCTIONS	2 1 2 2 6 3 1	MOLDED INTO FUEL TANK COVER MOLDED INTO FUEL TANK COVER
15 16	518524 35137	DECAL, ISO 9001:2008 DECAL, READ MANUAL, ASK FOR TRAIN	NING 1	
		ent.	Olli	
		dilpme		
		untifica		
	Oisch			
))				
	WBH-1	6EF SERIES POWER BUGGY • PARTS MA	NUAL — REV	. #7 (04/07/23) — PAGE 7


HYDRAULIC DRIVE ASSY.

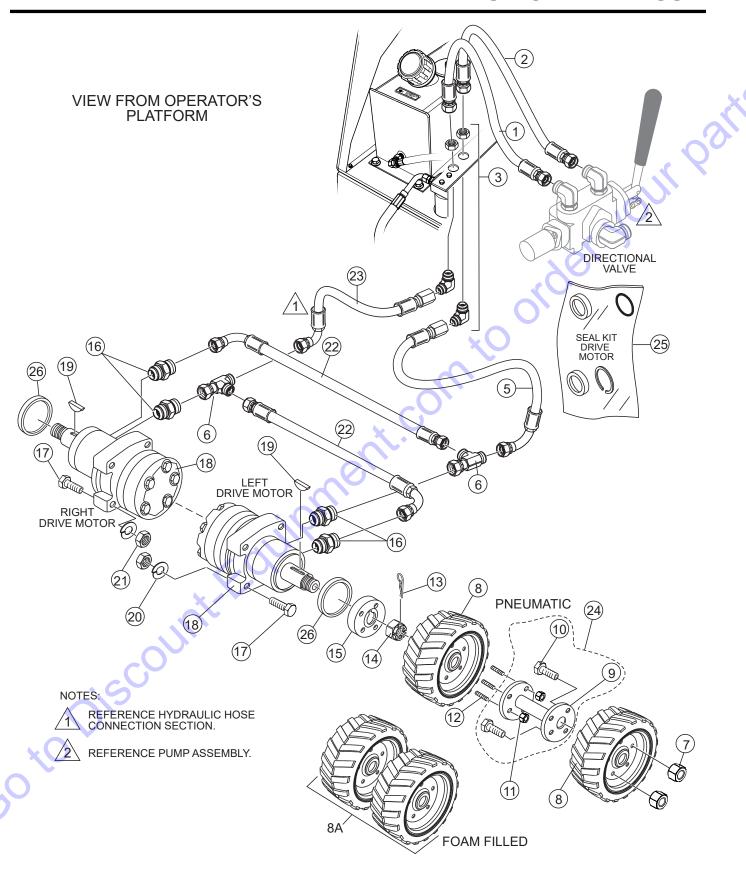

HYDRAULIC DRIVE ASSY.

NO.	PART NO.	PART NAME	QTY.	REMARKS
1	18265M	HOSE, DIRECTION VALVEHOSE, DIRECTION VALVE	1	RIGHT-DRIVE MOTOR
2	18264M	HOSE, DIRECTION VALVE	1	LEFT-DRIVE MOTOR
3	511810	ADAPTER, ELBOW	2	
5	18276M	HOSE, LH HYDRAULIC MOTOR	1	
6	512189	ADAPTER, TEE CONNECTOR	2	
7	492527	NUT. HEX 1/2"-20	8	~?>
8	18029	WHEEL, DRIVE ASSY. FRONT	4	PNEUMATIC TIRE
8A	18029F	WHEEL, DRIVE ASSY. FRONT	4	FOAM FILLED TIRE
9\$	511692	FLANGE, HUB	2	
10\$	18237	LUG BOLT/HUB ELANGE	8	100
11	492584	NUT, HEX 1/2"-13 NYLON	8	REPLACES P/N 6109160
12	18190	SCREW, HUB STUD 1/2"-20 X 2-3/4"	8	
13	491689	KEY, COTTER 1/8" X 2		NOT USED FOR WHB16EF
10	401000	NET, OUTTER 170 NZ	∠	S/N 1P02 AND ABOVE
				BEGINNING FEB. 2023
14	PT018038	NUT, CASTLE 1-1/8"-18	2	DEGININING FEB. 2023
15	803281	HIR DDIVE (IND) (WRH16/WRH16E/WRH16		
15	803281	HUB, DRIVE (IND) (WBH16/WBH16E/WBH16 HUB, DRIVE (IND) (WBH16EF)	2	S/N 1P01 AND BELOW
13	003201	HOB, DRIVE (IND) (WBITTOEF)	Z	USED UP TO JAN. 31, 2023
15	809428	HUB, DRIVE (IND) (WBH16EF)	2	S/N 1P02 AND ABOVE
15	009420	HOD, DRIVE (IND) (WOH TOEF)	Z	EFFECTIVE FEB. 2023
16	3365	ADADTED CTDAICHT	1	
		ADAPTER, STRAIGHT HEX. HEAD BOLT 1/2-20 X 2 3/4	4	\\\D\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
17	505718	HEX. HEAD BOLT 1/2-20 X 2 3/4	ö	VVBH 10/VVBH 10E/VVBH 10F
17	505718	HEX. HEAD BOLT 1/2-20 X 2 3/4	ð	
				S/N 1P01 AND BELOW
4-	E14040	HEV HEAD DOLE NO COMO ANA	•	USED UP TO JAN. 31, 2023
17	EM210	HEX. HEAD BOLT 1/2-20 X 3 1/4	8	
				S/N 1P02 AND ABOVE
				EFFECTIVE FEB. 2023
18	18011	MOTOR, HYDRAULIC DRIVEMOTOR, HYDRAULIC DRIVE	2	WBH16/WBH16E/WBH16F
18	18011	MOTOR, HYDRAULIC DRIVE	2	WBH16EF
				S/N 1P01 AND BELOW
				USED UP TO JAN. 31, 2023
18	809239	MOTOR, HYDRAULIC DRIVE	2	WBH16EF
	~O`			S/N 1P02 AND ABOVE
	~()			EFFECTIVE FEB. 2023
19	3311	KEY, 7 MM X 8 MM X 1-1/4"	2	REPLACES P/N PE449105
20	6109180	WASHER, LOCK 1/2"	8	WBH16/WBH16E/WBH16F
20	6109180	WASHER, LOCK 1/2"		
		•		S/N 1P01 AND BELOW
				0/


HYDRAULIC DRIVE ASSY. (CONT'D.)

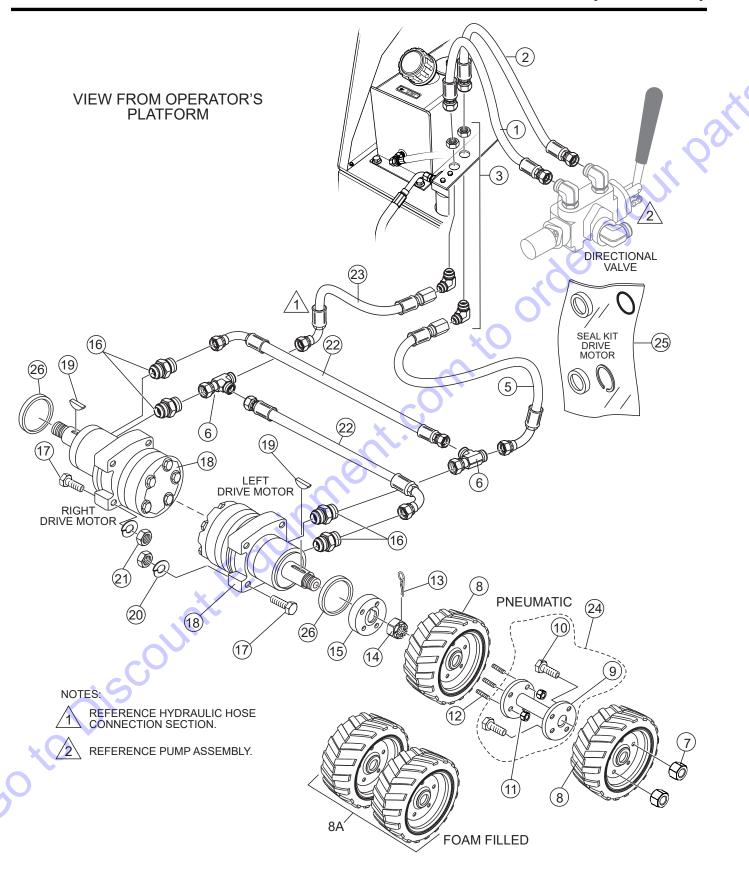

HYDRAULIC DRIVE ASSY. (CONT'D.)

<u>NO.</u> 21 21	PART NO. 6109160 6109160	PART NAME NUT, HEX 1/2"-13 NUT, HEX 1/2"-13	QTY. 8	
21	492584	NUT, NYLOC 1/2"-13	8	S/N 1P01 AND BELC USED UP TO JAN. 3 WBH16EF
21	432304	1401, 141200 112 -10		S/N 1P02 AND ABOV EFFECTIVE FEB. 20
22 23	18027 18275M	HOSE, DRIVER MOTOR CROSSOVER HOSE, RH HYDRAULIC MOTOR	2 1	
24 25	516528 18011SK	FLANGE HUB ASSYSEAL KIT, DRIVE MOTOR	1 1	INCLUDES ITEMS V
26	809610	SPACER RING (WBH16EF)	2	S/N 1P02 AND ABO EFFECTIVE FEB. 20
			Ċ	(O
			10	
		nt.Ealipment.com		
		ael.		
		iiPili		
	60			
	ais of			
	\bigcirc			
~O				
×O				
×O				
×O	Oisco'			


HYDRAULIC PUMP ASSY.

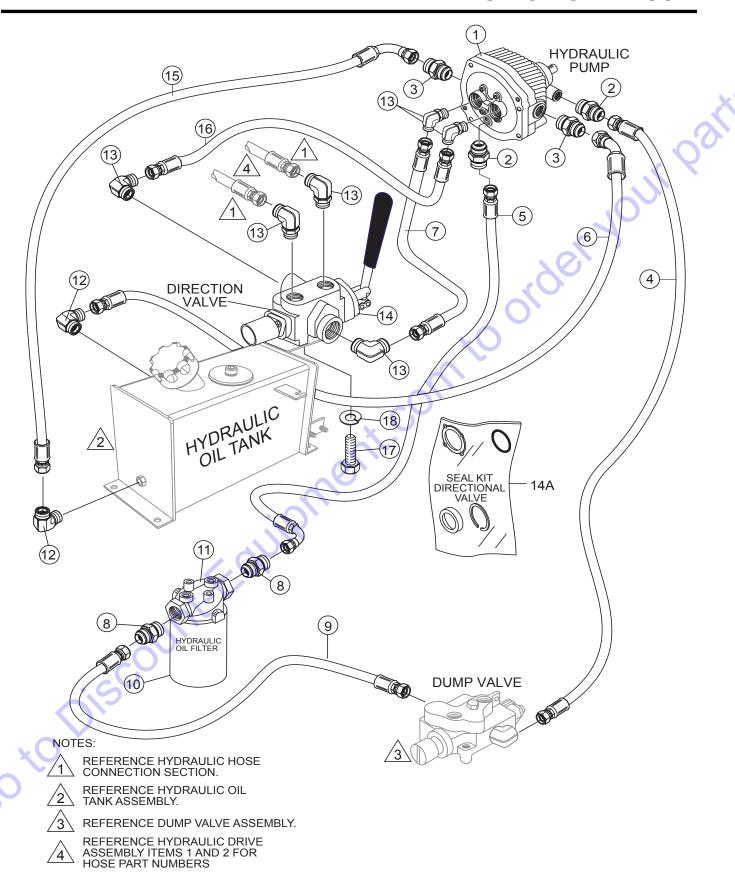

HYDRAULIC PUMP ASSY.

NO. 1 2 3 4	PART NO. 18035 511808 3365 18256M	PART NAME PUMP, HYDRAULIC ADAPTER, STRAIGHT ADAPTER, STRAIGHT HOSE, PUMP TO DUMP VALVE	QTY. 1 2 2	<u>REMARKS</u>
5 6 7 8 9 10 11 12 13 14 14A	18258M 18261M 18265M 512190 18257M 508667 508664 511799 3322 18058 18058SK	HOSE, FILTER TO PUMP HOSE, PUMP TO TANK HOSE, PUMP TO DIRECTION VALVE ADAPTER, STRAIGHT HOSE, FILTER TO DUMP VALVE FILTER, HYDRAULIC HYDRAULIC FILTER HEAD ADAPTER, ELBOW ADAPTER, ELBOW VALVE, DIRECTION CONTROL, TRAVE SEAL KIT, DIRECTIONAL VALVE	1 1 1 2 1 1 2 6 L 1	REPLACES P/N 18263M
15 16 17 18	18262M 18266M EM963055 0166 A	HOSE, TANK TO PUMP HOSE, PUMP TO DIRECTION VALVE HEX HEAD CAP SCREW WASHER, LOCK 3/8"	1 1 2	REPLACES P/N 492373 REPLACES P/N 492624
		- Edilbus		
	Oiscol			
<i>*</i> (0				

HYDRAULIC DUMP ASSY.

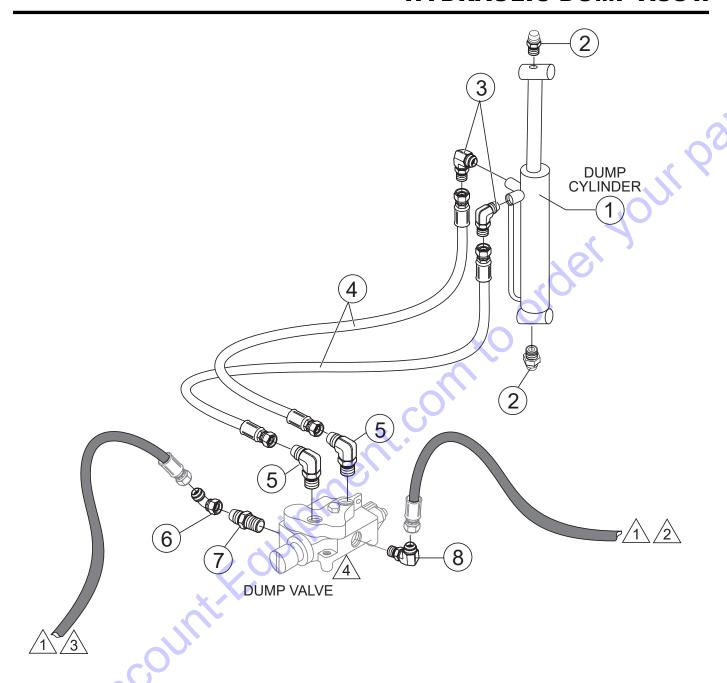

NOTES:

REFERENCE HYDRAULIC HOSE CONNECTION SECTION.

REFERENCE HYDRAULIC PUMP ASSEMBLY ITEM 4 FOR HOSE PART NUMBER.


REFERENCE HYDRAULIC PUMP ASSEMBLY ITEM 9 FOR HOSE PART NUMBER.

REFERENCE HANDLE/FOOT DUMP CONTROLS ASSEMBLY ITEM 8 FOR DUMP VALVE PART NUMBER.

HYDRAULIC DUMP ASSY.


NO. 1 2 3 4 5 6 7 8	PART NO. 18022 491705 511803 18020 511804 512234 511806 506191	PART NAME CYLINDER, HYDRAULIC DUMP ZERK FITTING ADAPTER, ELBOW HOSE, DUMP VALVE TO HYD. PISTON ADAPTER, ELBOW MALE ADAPTER, ELBOW ADAPTER, STRAIGHT ADAPTER, ELBOW	QTY. 1 2 2 2 2 1 1 1	REMARKS
			٠,٠	order ye
		CO.	Win	
		dilpmell		
	د ٥			
×0	Disco			

PUMP AND COUPLING ASSY.

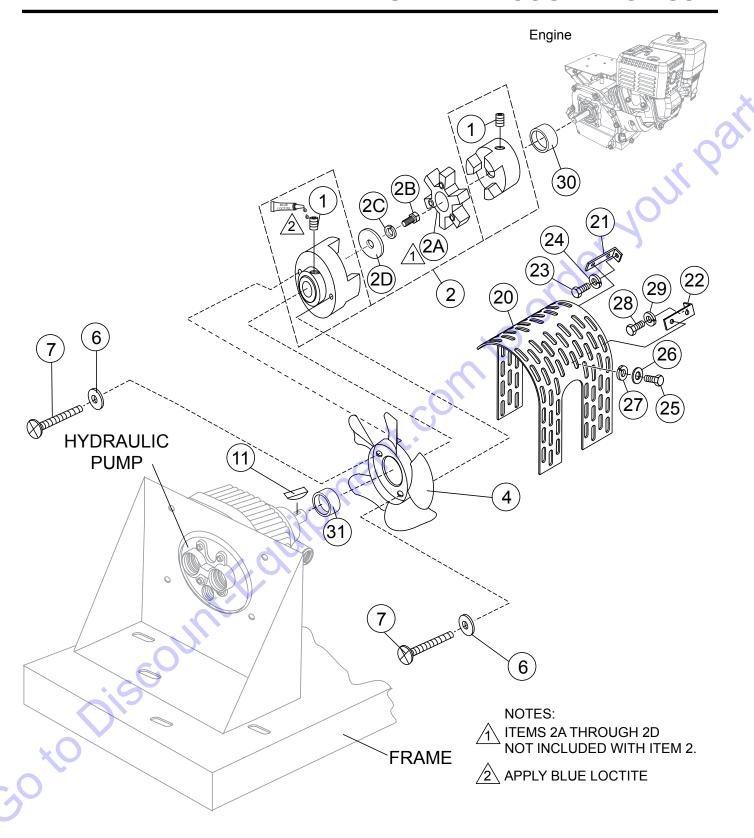


PUMP AND COUPLING ASSY.

1# 4924/2 SCREW, ALLEN HEAD 3/8 - 16 X 3/4 2 2 18051 COUPLING, ENGINE SHAFT	<u>NO.</u>	<u>PART NO.</u>	PART NAME	QTY.	<u>REMARKS</u>
2A 18051RS SPIDER, UNETHANE 1 2B 492356 SCREW, 1/4" X 3/4" GRD 5 1 2C 492622 WASHER, LOCK 1/4" 1 2D EM923057 WASHER, FLAT 3/4" 1 1	1# 2	492472 18051	SCREW, ALLEN HEAD 3/8"-16 X 3/4"	2	INCLLINES ITEMS WITH
2B				1 1	INGLUDES ITEIVIS VV/#
2C 492622 WASHER, LOCK 1/4" 1 2D EM923057 WASHER, FLAT 3/4" 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1				1	
2D EM923057 WASHER, FLAT 3/4"			· · · · · · · · · · · · · · · · · · ·	1	
4 18112 FAN 1 6 492596 WASHER, FLAT 1/4" 2 7 492355 SCREW, HHC 1/4"-20 X 1/2" 2 11 506250 KEY, WOODRUFF 1 20 513761 FAN GUARD 1 21 512493 BRACKET, LONG 1 22 513737 BRACKET, SHORT 1 23 492373 BOLT, C/H 3/8" X 3/4" NC GRD 5 1 24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1				1	
6 492596 WASHER, FLAT 1/4" 2 7 492355 SCREW, HHC 1/4"-20 X 1/2" 2 11 506250 KEY, WOODRUFF 1 20 513761 FAN GUARD 1 21 512493 BRACKET, LONG 1 22 513737 BRACKET, SHORT 1 23 492373 BOLT, C/H 3/8" X 3/4" NC GRD 5 1 24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			•		REPLAGES P/N 50445
7 492355 SCREW, HHC 1/4"-20 X 1/2" 2 11 506250 KEY, WOODRUFF 1 20 513761 FAN GUARD 1 21 512493 BRACKET, LONG 1 22 513737 BRACKET, SHORT 1 23 492373 BOLT, C/H 3/8" X 3/4" NC GRD 5 1 24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1				ı	
11 506250 KEY, WOODRUFF 1 20 513761 FAN GUARD 1 21 512493 BRACKET, LONG 1 22 513737 BRACKET, SHORT 1 23 492373 BOLT, C/H 3/8" X 3/4" NC GRD 5 1 24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			,		
20 513761 FAN GUARD 1 21 512493 BRACKET, LONG 1 22 513737 BRACKET, SHORT 1 23 492373 BOLT, C/H 3/8" X 3/4" NC GRD 5 1 24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			•	<u> </u>	
21 512493 BRACKET, LONG 1 22 513737 BRACKET, SHORT 1 23 492373 BOLT, C/H 3/8" X 3/4" NC GRD 5 1 24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			· · · · · · · · · · · · · · · · · · ·	1	
22 513737 BRACKET, SHORT 1 23 492373 BOLT, C/H 3/8" X 3/4" NC GRD 5 1 24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1				1	
23			•	1	
24 492624 WASHER, LOCK 3/8" 1 25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			·	1	XO
25 512367 BOLT, C/H 3/16" X 1/2" NC GRD 2 4 26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 1 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			· · · · · · · · · · · · · · · · · · ·	1	(0)
26 492595 WASHER, FLAT 3/16" 4 27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1				1	0,
27 492621 WASHER, LOCK 3/16" 4 28 492438 BOLT, C/H 5/16" X 1" NF GRD 5 29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1				4	
28			•	40	
29 492623 WASHER, LOCK 5/16" 1 30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			•	4	
30 802442 LOCK COLLAR 1 31 803009 BUSHING, HYDRAULIC PUMP 1			· · · · · · · · · · · · · · · · · · ·		
31 803009 BUSHING, HYDRAULIC PUMP 1			·		
iliphoenit.				1	
i countilland	01	000000	BOOTHING, TITBINIOLIG TOWN		
		رون درون	July Lolo		
	,				

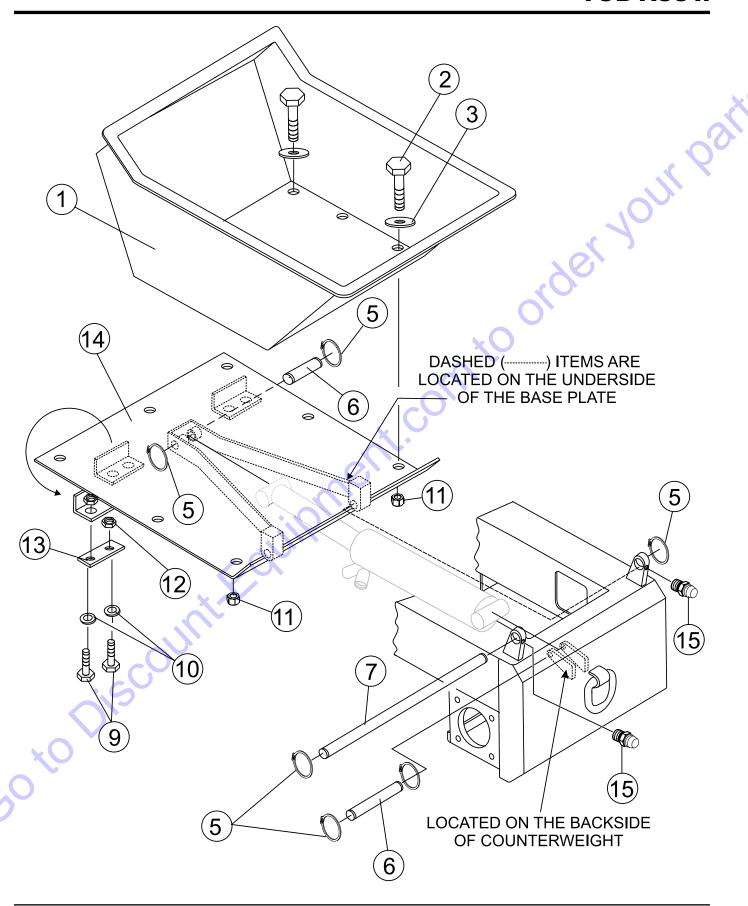


TUB ASSY.

NO. 1 2 3 5 6 7 9 10 11 12 13 14 14	PART NO. 18004 492313 512193 490957 18130 18129 0202 492597 492583 492582 512279 18099 522262	PART NAME TUB, PLASTIC, 16 CU. FT. SCREW, HHC 3/8"-16 X 1-1/2" WASHER, FLAT 3/8" LARGE RING, SNAP PIN, HYD. PISTON CROSS PIN, TUB FRAME CROSS SCREW, HHC 5/16"-18 X 1 ZINC WASHER, FLAT 9.5 X 22.2 NUT, NYLOC 3/8"-16 NUT, NYLOC 5/16"-18 SUPPORT, BUM STOP FRAME, TUB MOUNT, 16 CU. FT FRAME, TUB MOUNT, 16 CU. FT		REMARKSREPLACES P/N 492364BEFORE JULY 2020BEFFECTIVE JULY 2020
15	EM916019	GREASÉ FITTING		REPLACES P/N 491705
(30,40	Oisco'			
		F SERIES POWER BUGGY • PARTS MA	NUAL — REV. #7	(04/07/23) — PAGE 19

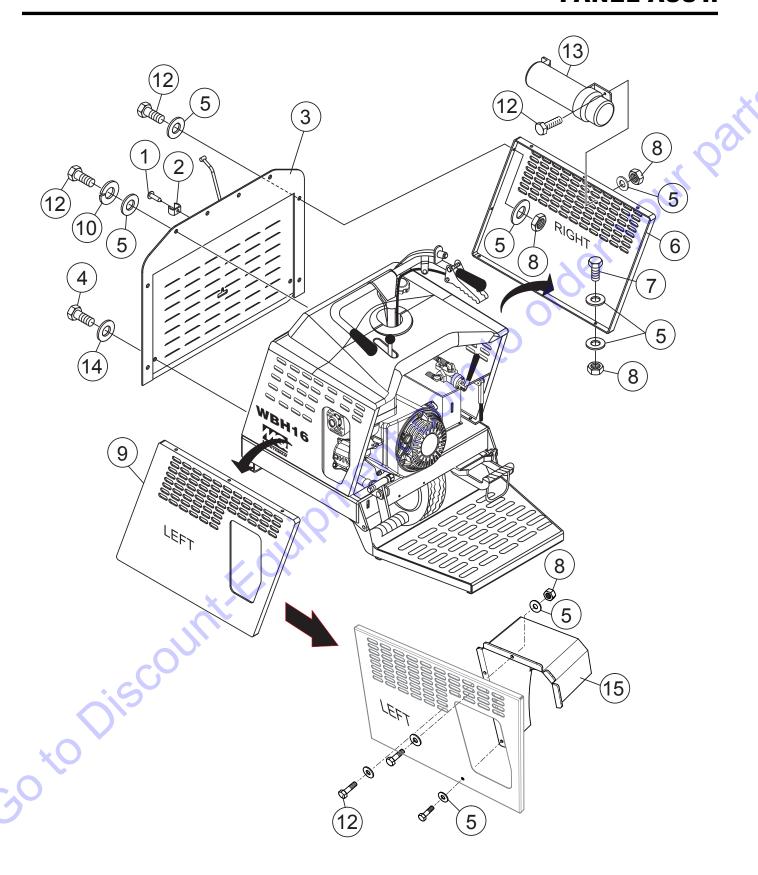


PANEL ASSY.

8	8 492582 NUT, NYLOC 5/16"-18 9 9 801026 COVER, LEFT/SIDE ENGINE 1 10 492623 WASHER, LOCK 5/16" 4 12 492363 SCREW, HHC 5/16" X 3/4" NC GRD 5 10 13 23297 MANUAL HOLDER 1 14 EM923057 WASHER, 1/4"	NO. 1 2 3 4 5 6 7	PART NO. 503978 511474 18008 492355 492597 18141 492364	PART NAME POP RIVET AM-56 FASTENER, ACCESS DOOR DOOR, ACCESS SCREW, 1/4" X 1/2" NC GRD 5 WASHER, FLAT 3/8" COVER, RIGHT/SIDE ENGINE SCREW, HHC 5/16"-18 X 1	QTY. 1 1 1 2 32 1 6	REMARKS
		8 9 10 12 13 14	492582 801026 492623 492363 23297 EM923057	NUT, NYLOC 5/16"-18 COVER, LEFT/SIDE ENGINE WASHER, LOCK 5/16" SCREW, HHC 5/16" X 3/4" NC GRD 5 MANUAL HOLDER WASHER, 1/4"	9 1 4 10 1	REPLACES P/N 492596
				W.C.C.	mio	
Ois Country	o to Discounitive					
		•	Oisco!			

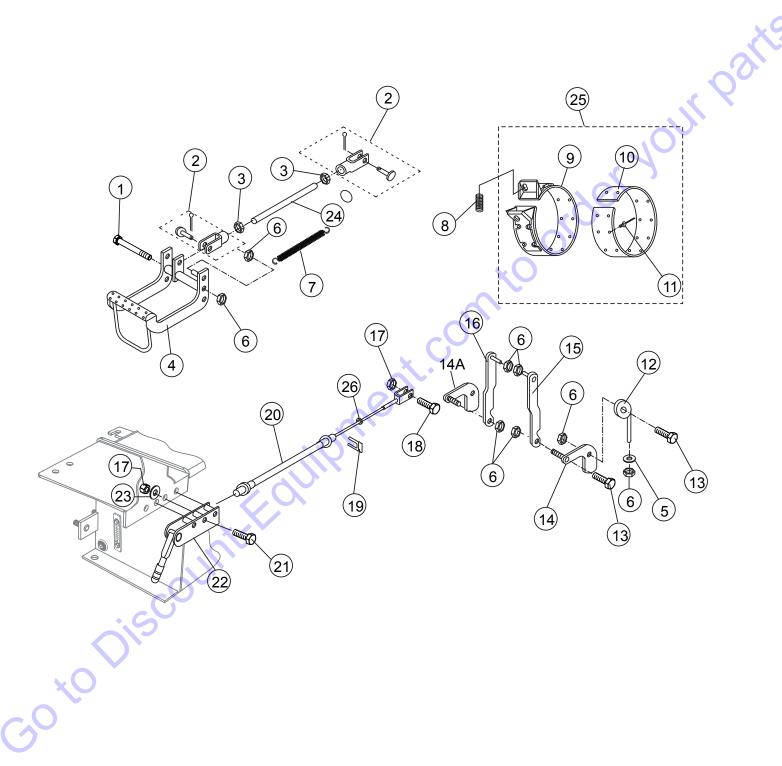


BRAKE ASSY.

STEERING AND CONTROLS ASSY.

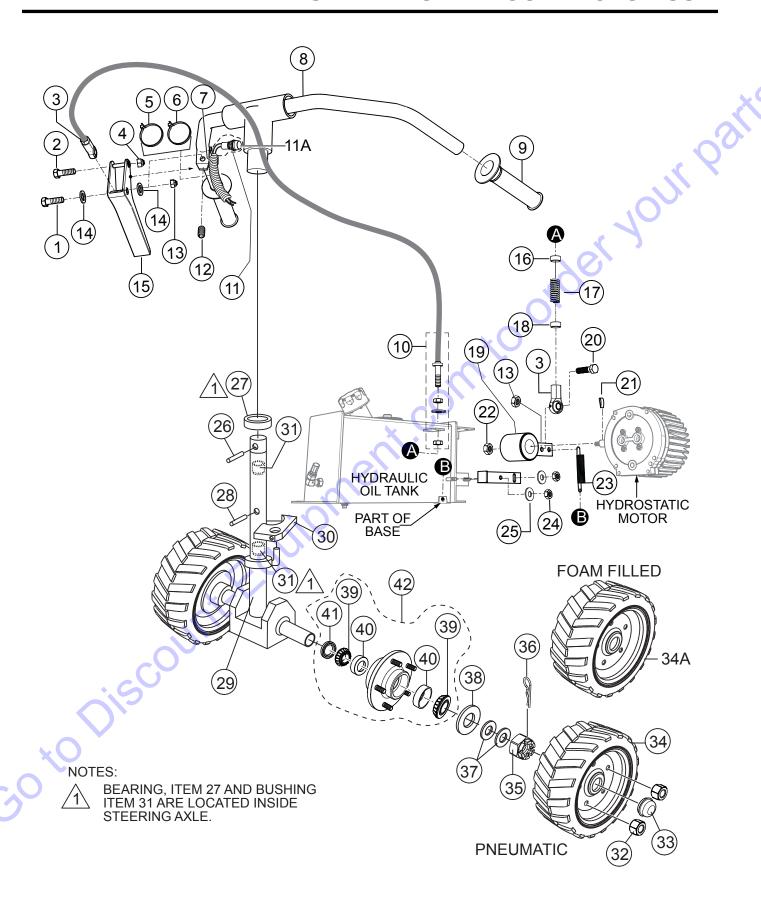

STEERING AND CONTROLS ASSY.


NO.	PART NO.	PART NAME	QTY.	REMARKS
1	2508	SCREW, HHC 1/4"-20 X 2-1/4"	1	REPLACES P/N 512414
2	492369	SCREW, HHC 5/16"-18 X 2-1/4"	1	
3	18183	ROD-END, THROTTLE CABLE	2	
4	492582	NUT, NYLOC 5/16"-18	1	
5	504505	WRAP, TIE 4.6 X 360 MM	1	
6	491030	WRAP, TIE 2.5 X 142 MM	2	
7	505304	COVER, WIRE (LOOM)	1	
8	18242	HANDLÉ BAR `	1	
9	15081	GRIP, HANDLE	2	
10	18133	CABLE, THROTTLE	1	100
11	515417	SWITCH HARNESS ASSY.	1	10
11A	18131	SWITCH, KILL	1	REPLACES P/N 18025
12	492465	SCREW, ALLEN HEAD 1/4"-20 X 3/8"	1	
13	492581	NUT, NYLOC 1/4"-20	2	
14	509161	WASHER, FLAT 5/16"	2	
15	18132	LEVER, THROTTLE	1	O ·
16	18182	BUSHING, CABLE	1	
17	18176	SPRING	1	
18	18181	BUSHING, CABLE	\sim 1	
19	18061	LEVER, CONTROL	1	
20	492357	SCREW, HHC 1/4"-20 X 1	1	
21	511717	KEY, WOODRUFF 1/8" X 5/8"	1	
22	492584	NUT, NYLOC 1/2"-13	1	
23	18177	SPRING	1	
24	492583	NUT, NYLOC 3/8"	2	
25	492598	WASHER, FLAT 3/8"	2	
26	491723	PIN, STEERING SHAFT	1	
27	18238	BEARING, STEERING SHAFT	1	
28	512186	PIN, STEERING SHAFT	1	
29	513360	STEERING COLUMN	1	
30	803151	STOP, STEERING	1	
31	512200	BUSHING, BRONZE	2	
32	8115	NUT LUG	8	
33	3469	CAP, DUST	2	
34	18049	WHEEL, STEERING ASSY. REAR	2	PNEUMATIC TIRE
34A	18049F	WHEEL, STEERING ASSY. REAR		
35	512210	NUT, CASTLE	2	
36	491688	PIN, COTTER 1/8" X 1-1/2"	2	
37	EM501299	WASHER, REAR WHEEL HUB	4	
38	511159	WASHER, FLAT 1"	2	
39#	EM903113	BEARING CONE	4	
40#	EM903012	BEARING CUP	4	
41#	EM914288	SEAL	2	
42	EM941306	HUB, REAR WHEEL	2	INCLUDES ITEMS W/#

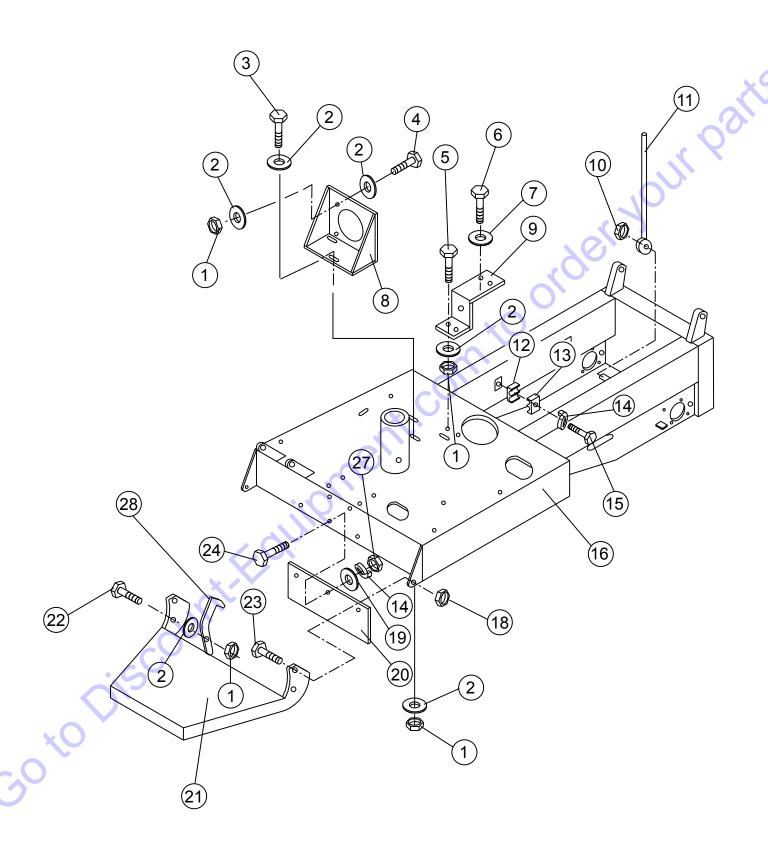

CHASSIS ASSY.

<u>NO.</u>	<u>PART NO.</u>	PART NAME	<u>QTY.</u>	<u>REMARKS</u>
1	492583	NUT, NYLOC 3/8"	10	
2	492598	WASHER, FLAT 3/8"	18	
3	492313	SCREW, HHC 3/8"-16 X 1-1/2"	3	
4	503112	SCREW, HHC 3/8"-16 X 2-3/4"	4	
5	EM963610	CAP SCREW 3/8" X 1-1/4" NC GRD 8	2	REPLACES P/N 492375 🦯
6	492356	SCREW, HHC 1/4" X 3/4" NC GRD 5	2	~~
7	492622	WASHER, LOCK 1/4"	2	
8	512196	BRACKET, HYD. PUMP MOUNTING	1	
9	18146	MOUNT, OIL FILTER	1	
10	505069	NUT, NYLOC 3/4"-10	1	10
11	18198	ROD, TUB PROP (WBH16/WBH16E/WBH16F)	1	
11	18198	ROD, TUB PROP (WBH16EF)	1	S/N 1P01 AND BELOW
		,		USED UP TO JAN. 31, 2023
11	809510	ROD, TUB PROP (WBH16EF)	1	S/N 1P02 AND ABOVÉ
		,		EFFECTIVE FEB. 2023
12	505976	CLAMP, BRACKET	2) [*]
13	506185	CLAMP, BRACKET	2	
14	492623	WASHÉR, LOCK 5/16"	5	
15	492366	SCREW, HHC 5/16"-18 X 1-1/2"	2	
16	18047	CHASSIS (WBH16/WBH16E/WBH16F)	1	
16	18047	CHASSIS (WBH16EF)	1	S/N 1P01 AND BELOW
				USED UP TO JAN. 31, 2023
16	522416	CHASSIS (WBH16EF)	1	S/N 1P02 AND ABOVÉ
				EFFECTIVE FEB. 2023
18	492586	NUT, NYLOC 5/8"-11	2	
19	492597	WASHER, FLAT 9.5 X 22.2	3	
20	18162	PANEL, REAR WHEEL COVER	1	
21	18222	PLATFORM, OPERATOR	1	
22	492313	SCREW, HHC 3/8"-16 X 1-1/2"	1	
23	492406	SCREW, HHC 5/8"-11 X 1-1/2"	2	
24	492363	SCREW, HHC 5/16"-18 X 3/4"	3	
27	2105164	NUT, 5/16"	3	REPLACES P/N 492553
28	18173	LATCH, PLATFORM	1	

HANDLE/FOOT DUMP CONTROLS ASSY.

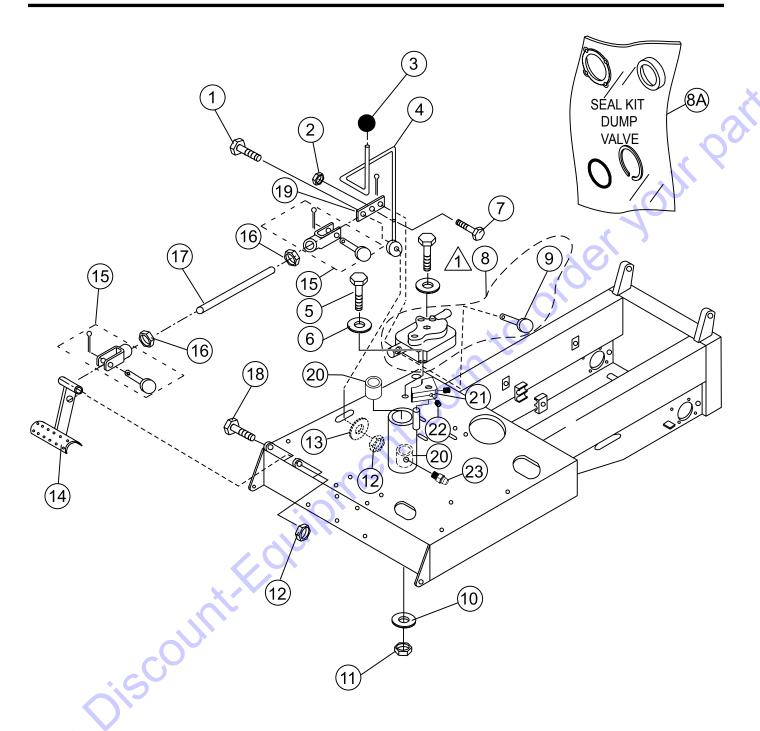


REFERENCE HYDRAULIC DUMP ASSY.

HANDLE/FOOT DUMP CONTROLS ASSY.


NO.	PART NO.	PART NAME	QTY.	REMARKS
1	492401	SCREW, HHC 1/2"-13 X 4	1	
2	503119	NUT, NYLOC 3/16"	1	
3	18121	KNOB, LEVER	1	
4	18065	LEVER, DUMP VALVE	1	
5 6	512185 492622	SCREW, HHC 1/4"-20 X 1-3/4" WASHER, FLAT 1/4"	2	0
7	512183	SCREW, HHC 3/16"-24 X 1-1/4"	4 1	00
8	18064	VALVE, DUMP	1	INCLUDES ITEMS W/\$
8A	18064SK	SEAL KIT, DUMP VALVE	1	INOLOBEO ITEMO WO
9\$	10001011	PIN, DUMP VALVE CROSS	1	NOT SOLD SEPARATELY
10	492596	WASHER, FLAT 1/4"	1	
11	492581	NUT, NYLOC 1/4"-20	1	
12	492584	NUT, NYLOC 1/2"-13	2	76,
13	492600	WASHER, FLAT 1/2"	1	40
14	18152	PEDAL, DUMP VALVE	1	
15	18123	CLEVIS ASSY., DUMP VALVE	2	
16 17	492574	NUT, HEX 3/8" ROD, DUMP VALVE	40	
18	18153 492400	SCREW, HHC 1/2"-13 X 3-1/2"	1	
19	18122	BELL CRANK, DUMP VALVE		
20	512200	BUSHING, BRONZE	2	
21	803151	STOP, STEERING	1	
22	492467	SET SCREW, 5/16" X 3/8" NC	2	
23	503901	ZERK FITTING 1/4"-28	1	
		O.		
		X		
		.00		
	~0			
	(),			
XO				
•				
	Oiscoi			

HYDRAULIC OIL TANK ASSY.

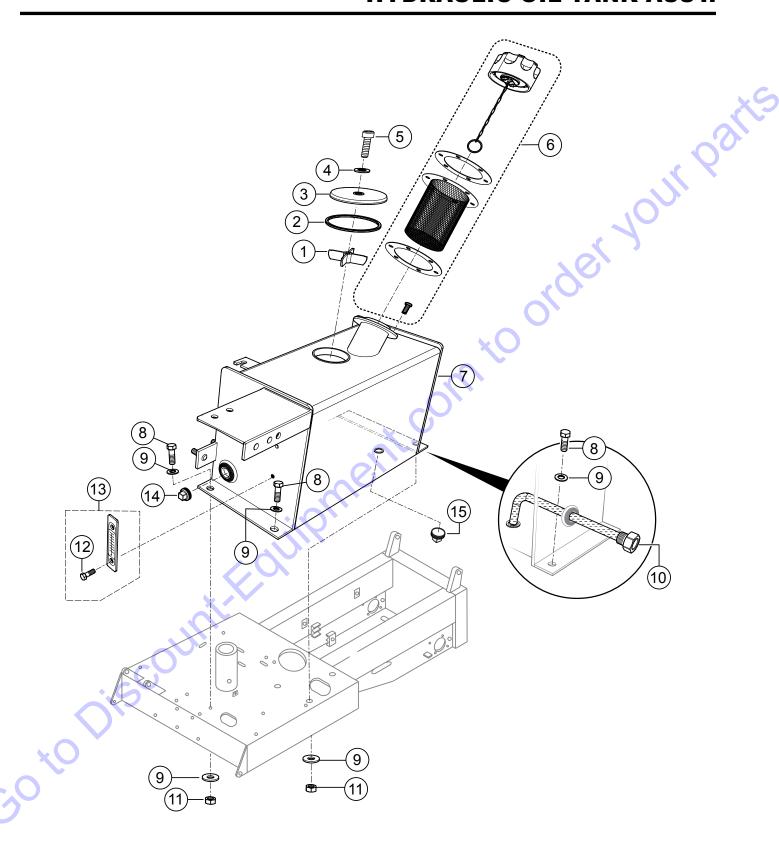

HYDRAULIC OIL TANK ASSY.


1	<u>PART NO.</u> 520461	<u>Part Name</u> Retainer	<u>QTY.</u> 1	<u>REMARKS</u>
2	801791 520460	O-RING COVER	1	
4	520343	O-RING	1	
5 6	510717 EM16477	BOLT, 1/2" X 1-3/4" NC CAP, HYDRAULIC OIL TANK	1 1	
7 8	18125 492376	TANK, HYDRAULIC OIL SCREW, HHC 3/8" X 1-1/4"	1	. 9
9	492598	WASHER, FLAT 3/8"	6	
10 11	18229 492583	SCREEN, OIL RESERVOIR NUT, NYLOC 3/8"-16	1 3	10
12% 13	18052	SCREW,SIGHT GAUGE, HYD. OIL TANK	2 1	NOT SOLD SEPARATELYINCLUDES ITEMS W/%
14 15	491213 506094	PLUG, HYD. OIL TANK 3/4"-14 NPT PLUG, HYD. OIL TANK 1/2" NPT	1	THE WOOD IN THE WOOD WITH
			×O	
			JU,	
		Wel.		
		All Pills		
		COLITA		
		nt-Eolile.		
		Jnt.E.OliiP		
	. 600	Jnt. Follie		
	Oisco'	JINTEROLITIE		
×O	Oisco'	Jnt.Ealile		
×O	Oisco'	Jint-Ealille		
×,O	Oisco'			
*CO	Oisco'			
×,C	Oisco'			

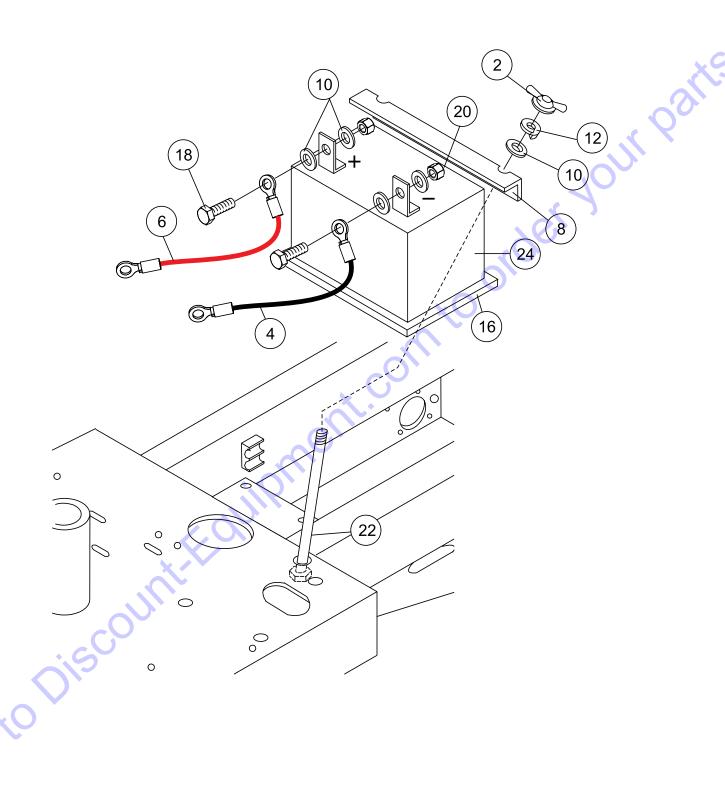

BATTERY ASSY.

2 505500 4 512557 6 511250	BATTERY CABLE, NEO		<u>REMARKS</u>
8 512555 10 EM923 12 210140 16 508480 18 492357 20 503119	BATTERY SUPPORT E WASHER, FLAT 1/4" WASHER, LOCK 1/4"	BRACKET 16	REPLACES P/N 492596 REPLACES P/N 492622
22 512585 24 4671	SUPPORT BRACKET I BATTERY	BOLT 2 1	order your
		N KC	
		Vr. Coll.	
	iipr	JOI.	
	T.F.Old		
	Office		
·C			
*O Die			
to Die	COUNTLE		


FUEL TANK ASSY. (STEEL)

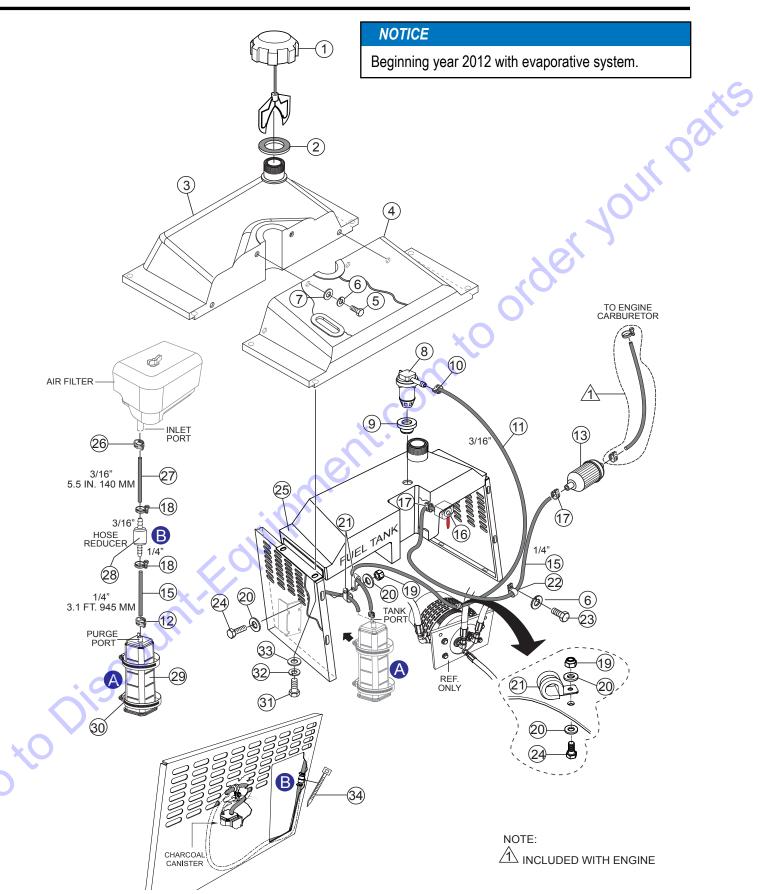

PAGE 34 — WBH-16EF SERIES POWER BUGGY • PARTS MANUAL — REV. #7 (04/07/23)


FUEL TANK ASSY. (STEEL)

<u>NO.</u>	PART NO.	PART NAME	QTY.	<u>REMARKS</u>
1	520820	CAP, FUEL (EPA) 2" DIA.	1	
2	802006	FUEL TANK NECK SEAL	1	
3	800845	COVER, FUEL TANK, FRONT, PLASTIC	1	
4	521392	COVER, FUEL TANK, REAR, PLASTIC	1	
5	492356	SCREW, 1/4" X 3/4" GRD 5	4	
6	492622	WASHER, LOCK 1/4"	4	
7	509161	WASHER, FLAT 5/16"	4	O
8	202772	VENT VALVE, EPA	1	
9	203403	GROMMET, VENT VALVE	1	
10	802498	TENSION CLAMP	1	100
11	60004	HOSE, FUEL, Ø.1875, LOW PERM 50PSI 41	" 1	70
12	802573	TENSION CLAMP	1	()
13	EM20763	FILTER, IN-LINE FUEL	1	
15	520611	HOSE, FUEL, 1/4" EPA (3.1 FT.)	4	1PC=1FT
16	22081	VALVE, FUEL SHUT-OFF	1	
17	802574	TENSION CLAMP	1) *
18	506208	CLAMP, FUEL HOSE	3 2	
19	492581	NUT, NYLOC 1/4"		
20	492595	WASHER, FLAT 1/4"	2	
21	801130	CLAMP, RUBBER COATED	3	
22	511807	CLAMP NYLON 5/8"	1	
23	492355	SCREW, 1/4" NC X 1/2" GRD 5	1	
24	800056	BOLT, HHCC 1/4" NC X 3/4" GRD 5	2	
25	800841	TANK, FUEL, STEEL	1	
26	802498	TENSION CLAMP	3	
27	520833	HOSE, AIR FILTER 3/16" (5.5") EPA	1	1PC=1FT
28	802405	HOSE REDUCER, 1/4" TO 3/16"	1	
29	23505	CANISTER, CHARCOAL, 390CC (EPA)	1	
30	510725	CLAMP	2	
31	492363	SCREW, 5/16" X 3/4" GRD 5	6	
32	EM923343	WASHER, LOCK 5/16"	8	REPLACES P/N 492623
33	EM923023	WASHER, FLAT 5/16"	8	REPLACES P/N 492597
34	491030	PLASTIC TIE WRAP	1	

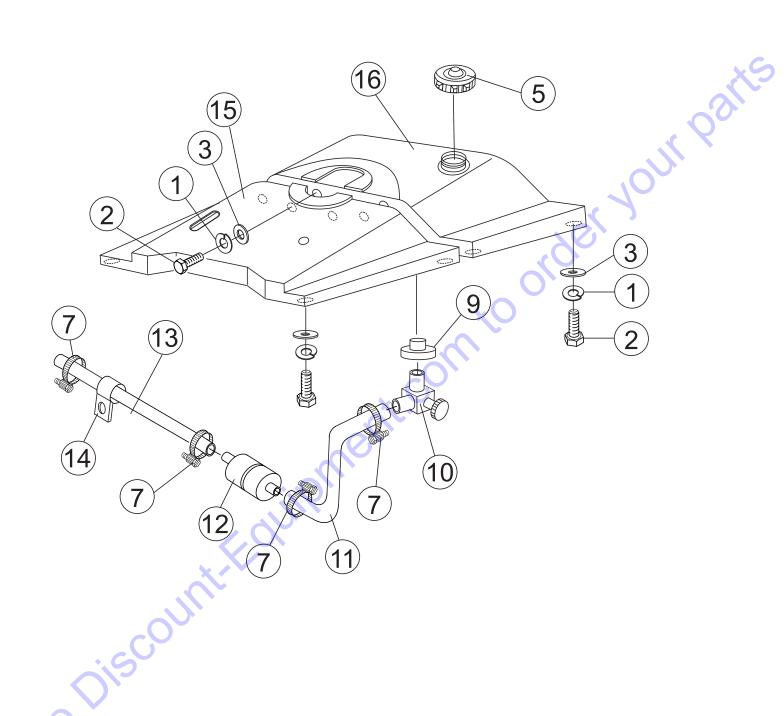


FUEL TANK ASSY. (PLASTIC)

2 3 5 7 9	PART NO. EM923343 EM492299 EM923023 18166 506208 19633	PART NAME WASHER, LOCK 5/16" SCREW, HHC 5/16"-18 X 1/2" WASHER, FLAT 5/16" CAP, FUEL 4" DIA. CLAMP, FUEL HOSE SEAL, FUEL TANK GROMMET VALVE, FUEL SHUT-OFF HOSE, FUEL FILTER, FUEL HOSE, FUEL STRAP, NYLON 5/8" COVER, FUEL TANK TANK, PLASTIC FUEL	QTY. 4 4 4 1 4	REMARKS
10 11 12 13 14	20795 512192 EM20763 512191 511807	VALVE, FUEL SHUT-OFF HOSE, FUEL FILTER, FUEL HOSE, FUEL STRAP, NYLON 5/8"	1 1 2 1 1	YOUR
16	18098	TANK, PLASTIC FUEL	1	orgeli
			OWIO	
		iowey.		
		ALE CULLE		
	oisco!			
•				
, X O				

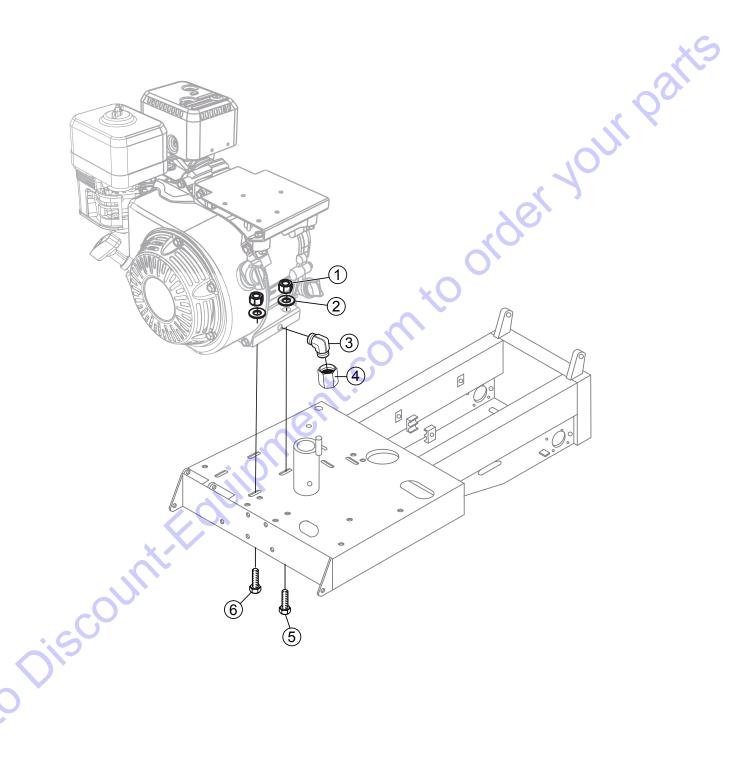

ENGINE MOUNTING ASSY.


<u>NO.</u> 1	<u>PART NO.</u> 2105164	PART NAME NUT, NYLOC 5/16"	<u>QTY.</u> 4	REMARKSREPLACES P/N 492582
2	505679	WASHER, FLAT 3/8"	4	REFLACES F/N 492302
3 4	513593 513594	90° FITTING ADAPTER PLUG	1 1	
5	492368	SCREW, 5/16" NC X 2" GRD 5		GROUND CONNECTION
6	492367	SCREW, 5/16" NC X 1-3/4" GRD 5	3	C
				order your
				16
				40
				O,
			χO	
		Į G		
		Jnt. Edille		
	م			
	2,50			
	(),			
x O	•			

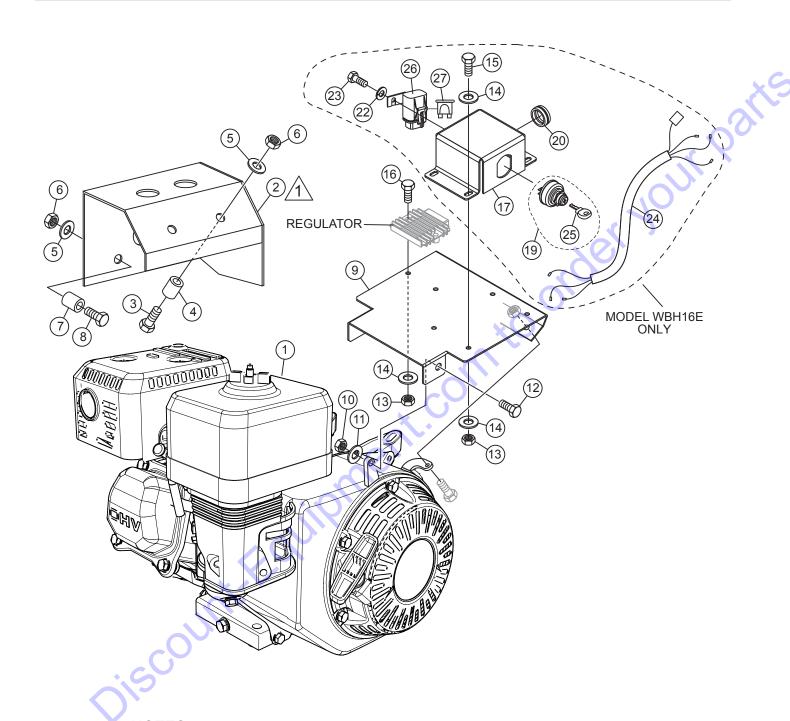

NOTES:

MUFFLER GUARD AND ASSOCIATED HARDWARE ARE NO LONGER AVAILABLE. REF. PANEL ASSY., ITEM 15 FOR REPLACEMENT MUFFLER GUARD.

ENGINE ASSY.

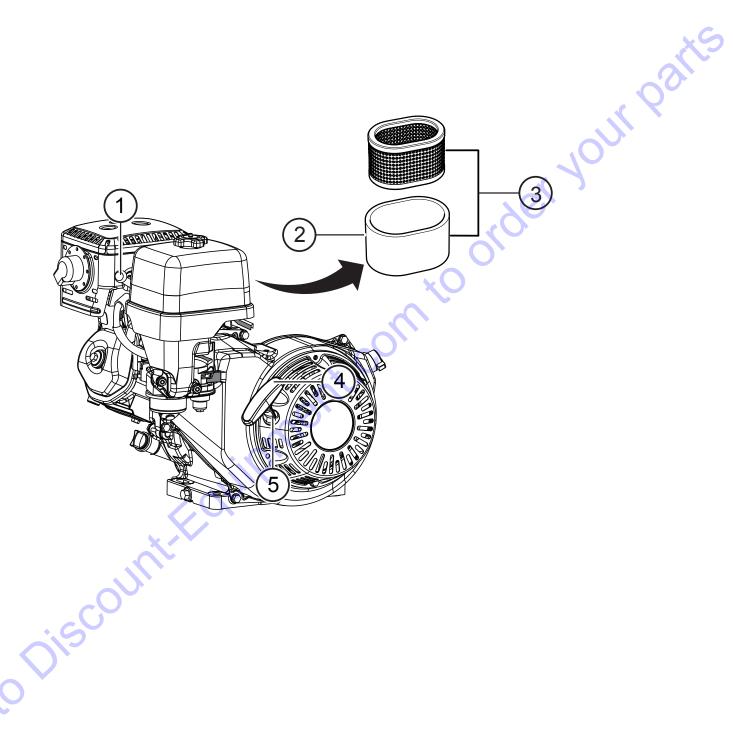

ENGINE SERVICE PARTS

1 9807955846	<u>PART NAME</u> SPARK PLUG	QTY. 1	REMARKS
2# 17218ZE3505 3 17210ZE3505 4 28461Z5T305 5 28400Z5T003Z 5 28400Z5T305Z	AIR FILTER, OUTER AIR FILTER, ELEM. (DUAL)	11	INCLUDES ITEMS W/#
			, your
		٠,0	order your
	, G	omite	
	ioment.		
	L.F. CUIIIA		
-0			
:00			
ro Disco			
to Discol			

PARTS FINDERS Search Website Can't Find







Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: 561-964-4949 Outside Florida TOLL FREE: 877-690-3101

Need parts?

Click on this link: http://www.discount-equipment.com/category/5443-parts/ and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, Stow, Wacker, Sakai, Mi-T-M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, Amida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, APT, Wylie, Ingersoll Rand / Doosan, Innovatech, Con X, Ammann, Mecalac, Makinex, Smith Surface Prep,Small Line, Wanco, Yanmar

PARTS MANUAL

HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL NUMBER ON-HAND WHEN CALLING



www.discount-equipment.com

© COPYRIGHT 2023, MULTIQUIP INC.

Multiquip Inc, the MQ logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations, descriptions, references and technical data contained in this manual are for guidance only and may not be considered as binding. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

