



An Oshkosh Corporation Company



www.Discount-Equipment.com

Service and Maintenance Manual

Model
800A
800AJ

S/N 0300183034 to Present

3121628


February 08, 2019 - Rev F

ANSI

CE



AS/NZS



SECTION A. INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS

A GENERAL

This section contains the general safety precautions which must be observed during maintenance of the aerial platform. It is of utmost importance that maintenance personnel pay strict attention to these warnings and precautions to avoid possible injury to themselves or others, or damage to the equipment. A maintenance program must be followed to ensure that the machine is safe to operate.

⚠ WARNING

MODIFICATION OR ALTERATION OF AN AERIAL WORK PLATFORM SHALL BE MADE ONLY WITH WRITTEN PERMISSION FROM THE MANUFACTURER.

The specific precautions to be observed during maintenance are inserted at the appropriate point in the manual. These precautions are, for the most part, those that apply when servicing hydraulic and larger machine component parts.

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

⚠ WARNING

SINCE THE MACHINE MANUFACTURER HAS NO DIRECT CONTROL OVER THE FIELD INSPECTION AND MAINTENANCE, SAFETY IN THIS AREA RESPONSIBILITY OF THE OWNER/OPERATOR.

B HYDRAULIC SYSTEM SAFETY

It should be noted that the machines hydraulic systems operate at extremely high potentially dangerous pressures. Every effort should be made to relieve any system pressure prior to disconnecting or removing any portion of the system.

Do not use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to help protect hands from spraying fluid.



C MAINTENANCE

⚠ WARNING

FAILURE TO COMPLY WITH SAFETY PRECAUTIONS LISTED IN THIS SECTION COULD RESULT IN MACHINE DAMAGE, PERSONNEL INJURY OR DEATH AND IS A SAFETY VIOLATION.

- ENSURE REPLACEMENT PARTS OR COMPONENTS ARE IDENTICAL OR EQUIVALENT TO ORIGINAL PARTS OR COMPONENTS.
- NO SMOKING IS MANDATORY. NEVER REFUEL DURING ELECTRICAL STORMS. ENSURE THAT FUEL CAP IS CLOSED AND SECURE AT ALL OTHER TIMES.
- REMOVE ALL RINGS, WATCHES AND JEWELRY WHEN PERFORMING ANY MAINTENANCE.
- DO NOT WEAR LONG HAIR UNRESTRAINED, OR LOOSE-FITTING CLOTHING AND NECKTIES WHICH ARE APT TO BECOME CAUGHT ON OR ENTANGLED IN EQUIPMENT.
- OBSERVE AND OBEY ALL WARNINGS AND CAUTIONS ON MACHINE AND IN SERVICE MANUAL.
- KEEP OIL, GREASE, WATER, ETC. WIPED FROM STANDING SURFACES AND HAND HOLDS.
- USE CAUTION WHEN CHECKING A HOT, PRESSURIZED COOLANT SYSTEM.
- NEVER WORK UNDER AN ELEVATED BOOM UNTIL BOOM HAS BEEN SAFELY RESTRAINED FROM ANY MOVEMENT BY BLOCKING OR OVERHEAD SLING, OR BOOM SAFETY PROP HAS BEEN ENGAGED.
- BEFORE MAKING ADJUSTMENTS, LUBRICATING OR PERFORMING ANY OTHER MAINTENANCE, SHUT OFF ALL POWER CONTROLS.
- BATTERY SHOULD ALWAYS BE DISCONNECTED DURING REPLACEMENT OF ELECTRICAL COMPONENTS.
- KEEP ALL SUPPORT EQUIPMENT AND ATTACHMENTS STOWED IN THEIR PROPER PLACE.
- USE ONLY APPROVED, NONFLAMMABLE CLEANING SOLVENTS.

REVISION LOG

Original Issue	A - September 16, 2016
Revised	B - October 13, 2016
Revised	C - September 05, 2017
Revised	D - May 30, 2018
Revised	E - June 29, 2018 - Revised Covers
Revised	F - February 08, 2019

Go to Discount-Equipment.com to order your parts

SECTION NO.	TITLE	PAGE NO.
SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	A-1
B	Hydraulic System Safety	A-1
C	Maintenance	A-1
SECTION 1 - SPECIFICATIONS		
1.1	Operating Specifications	1-1
1.2	Capacities	1-1
1.3	Tires	1-1
1.4	Engine Data	1-1
1.5	Component Data	1-3
	Drive System	1-3
	Swing System	1-3
	Auxiliary Power Pump	1-3
1.6	Torque Requirements	1-3
1.7	Hydraulic Oil	1-4
1.8	Major Component Weights	1-5
	Critical Stability Weights	1-6
1.9	Operator Maintenance	1-8
SECTION 2 - GENERAL		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventative Maintenance	2-1
2.2	Service and Guidelines	2-2
	General	2-2
	Safety and Workmanship	2-2
	Cleanliness	2-2
	Components Removal and Installation	2-2
	Component Disassembly and Reassembly	2-2
	Pressure-Fit Parts	2-2
	Bearings	2-3
	Gaskets	2-3
	Bolt Usage and Torque Application	2-3
	Hydraulic Lines and Electrical Wiring	2-3
	Hydraulic System	2-3
	Lubrication	2-3
	Battery	2-3
	Lubrication and Servicing	2-3
2.3	Lubrication and Information	2-3
	Hydraulic System	2-3
	Hydraulic Oil	2-4
	Changing Hydraulic Oil	2-4
	Lubrication Specifications	2-4
2.4	Cylinder Drift Test	2-5
	Theory	2-5
	Cylinder Leakage Test	2-5
	Cylinder Thermal Drift	2-5
2.5	Pins and Composite Bearing Repair Guidelines	2-6
2.6	Welding on JLG Equipment	2-6
	Do the Following When Welding on JLG Equipment	2-6
	Do NOT Do the Following When Welding on JLG Equipment	2-6

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
SECTION 3 - CHASSIS & TURNTABLE		
3.1	Tires & Wheels	3-1
	Tire Inflation	3-1
	Tire Damage	3-1
	Tire Replacement	3-1
	Wheel Replacement	3-1
	Wheel Installation	3-1
3.2	Lockout Cylinder Bleeding	3-2
3.3	Oscillating Axle Lockout Test	3-5
3.4	Drive Hub (Torque)	3-8
	Disassembly	3-8
	Cleaning and Inspection	3-8
	Repair	3-8
	Assembly	3-10
3.5	Drive Brake	3-16
	Disassembly	3-16
	Inspection	3-16
	Assembly	3-16
3.6	Drive Motor	3-18
	Description	3-18
	Shaft Seal Replacement	3-18
	Loop Flushing Valve	3-19
	Troubleshooting	3-20
	Disassembly	3-21
	Inspection	3-25
	Assembly	3-27
	Initial Start-up Procedures	3-32
3.7	Swing Drive	3-34
	Roll, Leak And Brake Testing	3-34
	Tightening and Torquing Bolts	3-34
	Motor Control Valve Disassembly	3-35
	Motor and Brake Disassembly	3-37
	Main Drive Disassembly	3-38
	Hub-Shaft Disassembly	3-39
	Carrier Disassembly	3-40
	Hub-Shaft Assembly	3-41
	Carrier Assembly	3-41
	Main Drive Assembly	3-42
	Motor and Brake Assembly	3-43
	Motor Control Valve Assembly	3-43
3.8	Swing Motor	3-46
	Disassembly and inspection	3-46
	Assembly	3-53
	One Piece Stator Construction	3-61
3.9	Swing Hub Installation	3-62
	Procedure For Setting Swing Gear Backlash	3-62
	Swing Drive Lubrication	3-63
3.10	Swing Hub Removal	3-63
3.11	Swing Bearing	3-64
	Turntable Bearing Mounting Bolt Condition Check	3-64
	Wear Tolerance	3-67
	Swing Bearing Replacement	3-67
	Swing Bearing Torque Values	3-68
3.12	Tilt Indicator System	3-71
3.13	Spark Arrester Cleaning Instructions	3-71
3.14	Rotary Coupling	3-72

SECTION NO.	TITLE	PAGE NO.
3.15	Generator.....	3-78
	Maintenance Schedule.....	3-78
	Overload Protection.....	3-78
	Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings.....	3-78
	Troubleshooting.....	3-80
	Generator Disassembly and Assembly.....	3-81
	Lead Connection List for Generator.....	3-88
3.16	Auxiliary Power System.....	3-89
3.17	Deutz Engine.....	3-90
3.18	Deutz Engine - TD2.9L4.....	3-109
	Check Oil Level.....	3-109
	Change Engine Oil.....	3-109
	Change Oil Filter.....	3-110
	Change Fuel Filters.....	3-110
3.19	Deutz Engine - D2011Lo4.....	3-111
	Glow Plugs.....	3-111
	Check Oil Level.....	3-111
	Replacing Engine Oil.....	3-112
	Replacing the Oil Filter.....	3-113
	Replacing the Primary Fuel Filter.....	3-113
3.20	Dual Fuel System.....	3-114
	Changing from Gasoline to LP Gas.....	3-114
	Changing from LP Gas to Gasoline.....	3-114
3.21	Deutz EMR 2.....	3-114
3.22	GM Engine General Maintenance.....	3-176
	Maintenance of the Drive Belt.....	3-176
	Engine Electrical System Maintenance.....	3-176
	Checking/Filling Engine Oil Level.....	3-176
	Changing The Engine Oil.....	3-177
	Coolant Fill Procedure - Dual Fuel Engine.....	3-177
3.23	GM Engine Dual Fuel System.....	3-178
	Fuel Filter.....	3-178
	Electric Lock Off.....	3-178
	EPR Assembly.....	3-179
	Low Pressure Regulator (LPR).....	3-179
	Air Fuel Mixer.....	3-180
	Electronic Throttle Control (ETC).....	3-180
	Engine Control Module.....	3-181
	Heated Exhaust Gas Oxygen Sensor.....	3-181
	Gasoline Multi Point Fuel Injection System (MPFI).....	3-181
	Gasoline Fuel Pump.....	3-182
	Gasoline Pressure And Temperature Sensor Manifold.....	3-182
	Fuel Filter.....	3-182
	Fuel Injector Rail.....	3-182
	Fuel Injector.....	3-182
3.24	GM Engine Fuel System Repair.....	3-183
	Propane Fuel System Pressure Relief.....	3-183
	Propane Fuel System Leak Test.....	3-183
	Propane Fuel Filter Replacement.....	3-184
	Electronic Pressure Regulator (EPR) Assembly Replacement.....	3-185
	Electronic Throttle Control Replacement.....	3-186
	Mixer Replacement.....	3-187
	Coolant Hose Replacement.....	3-188
	Vapor Hose Replacement.....	3-188
	Engine Control Module Replacement.....	3-188
	Heated Exhaust Gas Oxygen Sensor Replacement.....	3-188

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
3.25	GM Engine LPG Fuel System Diagnosis	3-189
	Fuel System Description	3-189
	Diagnostic Aids.....	3-189
3.26	Ford Engine	3-207
3.27	Counterweight	3-224
SECTION 4 - BOOM & PLATFORM		
4.1	Platform	4-1
	Platform Valve Removal	4-1
	Platform Valve Installation	4-1
	Support Removal	4-2
	Support Installation	4-3
4.2	Rotator and Platform (Slave) Cylinder	4-4
	Removal	4-4
4.3	Boom System	4-5
	Switch Systems.....	4-5
	Capacity Indicator System (800A only)	4-5
	Above Elevation (Above Horizontal) Cutout System.....	4-5
	Transport Position Interlock System (CE only).....	4-5
	Platform Control Enable System.....	4-5
	Function Speed Control System	4-5
	Platform	4-6
	Main Lift End Stroke Dampening System	4-6
	QuikStick Lift System	4-6
	Tower Boom Sequence Valve System	4-6
	Upright Level Override System	4-6
	Ground Control Keyswitch System	4-6
4.4	Main Boom Powertrack	4-8
	Removal	4-8
4.5	Powertrack Maintenance	4-14
	Flat Bar Removal	4-14
	Round Bar/Poly Bar Removal	4-14
	Removing and Installing Links	4-15
	Installing a New Flat Bar	4-18
	Installing a New Round Bar/Poly Roller	4-19
	Replacing a Fixed End Bracket	4-19
	Replacing a Moving End Bracket	4-20
	Replacing a One Piece Bracket	4-20
4.6	Boom Cleanliness Guidelines	4-21
4.7	Main Boom Assembly	4-22
	Removal	4-22
	Disassembly.....	4-23
	Inspection.....	4-23
	Assembly	4-23
	Installation	4-24
4.8	Upright	4-25
	Removal	4-25
	Installation	4-25
4.9	Tower Boom Assembly	4-26
	Removal	4-26
	Inspection.....	4-26
	Assembly	4-27
	Installation	4-27
	Tower Out of Sync.....	4-28

SECTION NO.	TITLE	PAGE NO.
4.10	Upright Monitoring System	4-30
	Re-Synchronizing Upright	4-30
	Calibration	4-32
	Calibration Faults	4-36
	Function Check	4-37
	Service Mode/Tower Boom Retrieval	4-38
4.11	UMS Troubleshooting and Fault Messages	4-44
	Backward Stability Concern Message	4-44
	Forward Stability Concern Message	4-44
	Auto Detection Input Low Message	4-44
	UMS Sensor Communications lost	4-44
	Out of Usable Range Message	4-44
	UMS Sensor Not Calibrated Message	4-45
	UMS Sensor Faulted Message	4-45
	Incompatible Software Detected Message	4-45
	Calibration Faults	4-45
4.12	Articulating Jib	4-46
	Removal	4-46
	Disassembly	4-46
	Inspection	4-46
	Assembly	4-47
4.13	Sequence For Hose Replacement In The Tower Boom	4-47
4.14	Limit Switches Adjustment	4-47
	Main Boom Horizontal Limit Switch	4-47
	Tower Boom Horizontal Limit Switch	4-47
	Dual Capacity Angle Limit Switch (800A only)	4-53
	Main Boom Length Switch (800A only)	4-53
4.15	Boom Valve Adjustment	4-54
	Tower Boom	4-54
	Main Boom	4-54
4.16	Rotator Assembly	4-55
	Theory of Operation	4-55
	Required Tools	4-55
	Disassembly	4-58
	Inspection	4-62
	Assembly	4-62
	Installing Counterbalance Valve	4-68
	Greasing Thrust Washers	4-69
	Testing the Actuator	4-69
	Installation and Bleeding	4-70
4.17	Foot Switch Adjustment	4-70
	Troubleshooting	4-71
4.18	Skyguard®	4-72
	Operation	4-72
	Function Test	4-72
	Diagnostics & Troubleshooting	4-73
4.19	Bolt-On External Fall Arrest	4-74
	Inspection Before Use	4-74
	Installation	4-74

SECTION NO.	TITLE	PAGE NO.
SECTION 5	- BASIC HYDRAULICS INFORMATION & SCHEMATICS	
5.1	Lubricating O-Rings in the Hydraulic System	5-1
	Cup and Brush	5-1
	Dip Method	5-2
	Spray Method	5-2
	Brush-on Method.....	5-2
5.2	Hydraulic Connection Assembly and Torque Specification	5-3
	Tapered Thread Types	5-3
	Straight Thread Types, Tube and Hose Connections	5-3
	Straight Thread Types, Port Connections	5-4
	Flange Connection Types	5-4
	Tightening Methods.....	5-4
	Assembly And Torque Specifications	5-5
	Assembly Instructions for American Standard Pipe Thread Tapered (NPTF) Connections.....	5-6
	Assembly Instructions for British Standard Pipe Thread Tapered (BSPT) Connections.....	5-7
	Assembly Instructions for 37° (JIC) Flare Fittings	5-8
	Assembly Instructions for 45° SAE Flare Fittings.....	5-11
	Assembly Instructions for O-Ring Face Seal (ORFS) Fittings.....	5-13
	Assembly Instructions for DIN 24° Flare Bite Type Fittings (MBTL and MBTS)	5-15
	Assembly Instructions for Bulkhead (BH) Fittings	5-17
	Assembly Instructions for O-Ring Boss (ORB) Fittings	5-20
	Assembly Instructions for Adjustable Port End Metric (MFF) Fittings.....	5-27
	Assembly Instructions for Metric ISO 6149 (MPP) Port Assembly Stud Ends	5-34
	Assembly Instructions for Adjustable Port End (BSPP) Fittings	5-37
	Assembly Instructions for Flange Connections: (FL61 and FL62)	5-44
	Double Wrench Method	5-47
	FFWR and TFFT Methods.....	5-48
	Adjustable Stud End Assembly.....	5-48
	O-ring Installation (Replacement)	5-49
5.3	Hydraulic Cylinders.....	5-50
	Axle Lockout Cylinder	5-50
	Platform Level Cylinder (800AJ - SN 0300183034 to Present, 800A - SN 0300183034 through 0300245050)	5-52
	Platform Level Cylinder (800A - SN 0300245051 to Present)	5-59
	Upright Level Cylinder.....	5-64
	Jib Lift Cylinder (800AJ Only).....	5-70
	Main Boom Lift Cylinder	5-78
	Tower Boom Lift Cylinder	5-85
	Master Cylinder (800A)	5-91
	Master Cylinder (800AJ).....	5-97
	Steer Cylinder	5-104
	Cleaning and Inspection.....	5-106
	Main Boom Telescope Cylinder (800A SN 0300183034 through 0300245050, 800AJ SN 0300183034 to Present)	5-109
	Main Boom Telescope Cylinder (SN 0300245051 to Present)	5-116
	Tower Boom Telescope Cylinder	5-122

SECTION NO.	TITLE	PAGE NO.
5.4	Cylinder Removal And Installation	5-129
	Main Boom Telescope Cylinder Removal	5-129
	Main Boom Telescope Cylinder Installation	5-131
	Main Lift Cylinder Removal	5-132
	Main Lift Cylinder Installation	5-133
	Upright Level Cylinder Removal	5-134
	Upright Level Cylinder Installation	5-135
	Tower Boom Lift Cylinder Removal	5-135
	Tower Boom Lift Cylinder Installation	5-136
	Tower Telescope Cylinder Removal	5-137
	Tower Telescope Cylinder Installation	5-137
	Platform (Slave) Cylinder Removal	5-137
	Platform (Slave) Cylinder Installation	5-138
5.5	Hydraulic Pump W/hayes Pump drive Coupling Lubrication	5-138
5.6	Pressure Setting Procedures	5-138
	Set Up the Function Pump	5-139
	Adjustments Made at the Main Valve Block	5-147
	Adjustments Made at the Platform Valve Block	5-147
5.7	Hydraulic Component Start-Up Procedures and Recommendations	5-148
5.8	Hydraulic Drive Pump Pre-fill Procedure	5-150
5.9	Function Pump	5-151
	Removal	5-151
	Installation	5-151
	Initial Start-up Procedures	5-153
	Troubleshooting	5-154
	Shaft Seal Replacement	5-158
	Control Assembly	5-158
	Plug and Fitting Sizes and Torques	5-160
5.10	Drive Pump	5-161
	Removal	5-161
	Installation	5-161
	Servo Controlled Piston Pump	5-162
	Charge Pump Adapter Assembly	5-165
	Manual Servo Control Basic Assembly	5-166
	Manual Servo Control Assembly Options	5-167
	Rotating Kit Assembly	5-169
	Fault- logic Trouble Shooting	5-170
	Start-up Procedure	5-175

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
SECTION 6 - JLG CONTROL SYSTEM		
6.1	JLG Control System Analyzer Kit Instructions	6-1
	Introduction	6-1
	To Connect the JLG Control System Analyzer	6-2
	Using the Analyzer	6-2
	Changing the Access Level of the Hand Held Analyzer	6-3
	Adjusting Parameters Using the Hand Held Analyzer	6-4
	Machine Setup	6-5
	Level Vehicle Description	6-5
6.2	Machine Personality Settings and Function Speeds	6-20
6.3	Machine Orientation When Setting Function Speeds	6-23
	Test Notes	6-23
6.4	CANbus Communications	6-24
	Analyzer Diagnostics Menu Structure	6-41
6.5	LSS System	6-44
	Diagnostic Menu	6-45
	Calibration Procedure	6-46
	Testing & Evaluation	6-51
	Troubleshooting	6-52
6.6	Resetting The MSSO System	6-53
SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS		
7.1	General	7-1
7.2	Multimeter Basics	7-1
	Grounding	7-1
	Backprobing	7-1
	Min/Max	7-1
	Polarity	7-1
	Scale	7-1
	Voltage Measurement	7-1
	Resistance Measurement	7-2
	Continuity Measurement	7-2
	Current Measurement	7-3
7.3	Applying Silicone Dielectric Compound to Electrical Connections	7-3
	Installation of Dielectric Grease	7-4
	Deutsch HD, DT, DTM, DRC Series	7-4
	AMP Seal	7-4
	AMP Mate-N-Lok	7-5
	DIN Connectors	7-5
	Exclusions	7-6
7.4	AMP Connector	7-8
	Applying Silicone Dielectric Compound to AMP Connectors	7-8
	Assembly	7-8
	Disassembly	7-10
	Wedge Lock	7-10
	Service - Voltage Reading	7-10
7.5	Deutsch Connectors	7-12
	DT/DTP Series Assembly	7-12
	DT/DTP Series Disassembly	7-12
	HD30/HDP20 Series Assembly	7-13
	HD30/HDP20 Series Disassembly	7-13
7.6	Telematics Gateway	7-14
	Telematics-Ready (TCU) Plug	7-14
7.7	Electrical Schematic	7-20

FIGURE NO.	TITLE	PAGE NO.
1-1.	Maintenance and Lubrication Diagram	1-7
1-2.	Deutz 2011 Engine Dipstick	1-10
1-3.	Torque Chart (SAE Fasteners - Sheet 1 of 5)	1-13
1-4.	Torque Chart (SAE Fasteners - Sheet 2 of 5)	1-14
1-5.	Torque Chart (SAE Fasteners - Sheet 3 of 5)	1-15
1-6.	Torque Chart (METRIC Fasteners - Sheet 4 of 5)	1-16
1-7.	Torque Chart (METRIC Fasteners - Sheet 5 of 5)	1-17
2-1.	Engine and Hydraulic Operating Temperature Specifications - Deutz	2-10
2-2.	Engine and Hydraulic Operating Temperature Specifications - GM	2-11
2-3.	Engine and Hydraulic Operating Temperature Specifications - Ford MSG 425	2-12
3-1.	Axle Installation	3-3
3-2.	Steering Installation	3-4
3-3.	Chassis Component Location	3-6
3-4.	Turntable Component Location	3-7
3-5.	Drive Hub (Torque)	3-15
3-6.	Drive Brake	3-17
3-7.	Drive Motor Cross Section	3-18
3-8.	Removing the Shaft Seal	3-18
3-9.	Loop Flushing Spool	3-19
3-10.	Loop Flushing Spool	3-21
3-11.	Plugs, Fittings, and Speed Sensor	3-21
3-12.	End Cap	3-22
3-13.	Valve Plate & Rear Shaft Bearing	3-22
3-14.	Cylinder Kit	3-23
3-15.	Shaft Seal	3-23
3-16.	Shaft & Front Bearing	3-23
3-17.	Swash Plate & Servo Piston	3-24
3-18.	Cylinder Kit Disassembly	3-24
3-19.	Servo Piston	3-27
3-20.	Cylinder Kit Assembly	3-28
3-21.	Swashplate and Journal Bearing	3-28
3-22.	Shaft and Front Bearing	3-29
3-23.	Cylinder Kit Installation	3-29
3-24.	Servo Spring and Minimum Angle Stop	3-29
3-25.	Valve Plate and Rear Bearing	3-30
3-26.	End Cap	3-30
3-27.	Shaft Seal	3-31
3-28.	Plugs and Fittings Installation	3-31
3-29.	Loop Flushing Spool	3-32
3-30.	Swing System	3-33
3-31.	Motor Control Valve	3-36
3-32.	Motor and Brake	3-37
3-33.	Main Drive Assembly	3-38
3-34.	Hub-Shaft	3-39
3-35.	Carrier	3-40
3-36.	Swing Drive Assembly	3-44
3-37.	Swing Motor and Brake Assembly	3-45
3-38.	Swing Drive Motor	3-47
3-39.	Swing Bearing Tolerance Boom Placement (Sheet 1 of 2)	3-65
3-40.	Swing Bearing Tolerance Boom Placement (Sheet 2 of 2)	3-66
3-41.	Swing Bolt Feeler Gauge Check	3-67
3-42.	Swing Bearing Tolerance Measuring Point	3-67
3-43.	Swing Bearing Removal (800A)	3-69
3-44.	Swing Bearing Removal (800AJ)	3-70
3-45.	Swing Bearing Torque Sequence	3-71
3-46.	Rotary Coupling Seal Installation	3-72
3-47.	Rotary Coupling Cutaway	3-73

FIGURE NO.	TITLE	PAGE NO.
3-48.	Rotary Coupling Port Location (7 Port)	3-74
3-49.	Rotary Coupling Port Location (9 Port)	3-75
3-50.	Rotary Coupling Installation	3-76
3-51.	Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings	3-79
3-52.	Generator Disassembly and Assembly	3-81
3-53.	Generator Troubleshooting Circuit Diagram (Sheet 1 of 2)	3-82
3-54.	Generator Troubleshooting Circuit Diagram (Sheet 2 of 2)	3-83
3-55.	Generator Electrical Circuit Diagram	3-84
3-56.	Power Board PC1 Electrical Circuit Diagram	3-85
3-57.	Power Board PC2 Electrical Circuit Diagram (Sheet 1 of 2)	3-86
3-58.	Power Board PC2 Electrical Circuit Diagram (Sheet 2 of 2)	3-87
3-59.	Auxiliary Power System	3-89
3-60.	Deutz TD2.9L4 Engine Components - Sheet 1 of 2	3-90
3-61.	Deutz TD2.9L4 Engine Components - Sheet 2 of 2	3-91
3-62.	Deutz TD2.9L4 Engine Installation (800A) - Sheet 1 of 8	3-92
3-63.	Deutz TD2.9L4 Engine Installation (800AJ) - Sheet 2 of 8	3-93
3-64.	Deutz TD2.9L4 Engine Installation - Sheet 3 of 8	3-94
3-65.	Deutz TD2.9L4 Engine Installation (800A) - Sheet 4 of 8	3-95
3-66.	Deutz TD2.9L4 Engine Installation (800AJ) - Sheet 5 of 8	3-96
3-67.	Deutz TD2.9L4 Engine Installation (800AJ) - Sheet 6 of 8	3-97
3-68.	Deutz TD2.9L4 Engine Installation- Sheet 7 of 8	3-98
3-69.	Deutz TD2.9L4 Engine Installation -Sheet 8 of 8	3-99
3-70.	Deutz TD2.9L4 China III Engine Installation - Sheet 1 of 7	3-100
3-71.	Deutz TD2.9L4 China III Engine Installation - Sheet 2 of 7	3-101
3-72.	Deutz TD2.9L4 China III Engine Installation - Sheet 3 of 7	3-102
3-73.	Deutz TD2.9L4 China III Engine Installation - Sheet 4 of 7	3-103
3-74.	Deutz TD2.9L4 China III Engine Installation - Sheet 5 of 7	3-104
3-75.	Deutz TD2.9L4 China III Engine Installation - Sheet 6 of 7	3-105
3-76.	Deutz TD2.9L4 China III Engine Installation - Sheet 7 of 7	3-106
3-77.	Deutz D2011L04 Engine Components - Sheet 1 of 2	3-107
3-78.	Deutz D2011L04 Engine Components - Sheet 2 of 2	3-108
3-79.	Deutz TD2.9L4 Dipstick Markings	3-109
3-80.	Engine Oil Viscosity	3-109
3-81.	Deutz D2011L04 Engine Dipstick	3-111
3-82.	Engine Oil Viscosity	3-112
3-83.	EMR 2 Engine Side Equipment	3-115
3-84.	Deutz EMR 2 Troubleshooting Flow Chart	3-116
3-85.	Deutz EMR 2 Vehicle Side Connection Diagram	3-117
3-86.	Deutz EMR 2 Engine Side Connection Diagram - Sheet 1 of 2	3-118
3-87.	Deutz EMR 2 Engine Side Connection Diagram - Sheet 2 of 2	3-119
3-88.	EMR 2 Engine Plug Pin Identification	3-120
3-89.	EMR 2 Vehicle Plug Pin Identification	3-121
3-90.	EMR2 Fault Codes - Sheet 1 of 5	3-122
3-91.	EMR2 Fault Codes - Sheet 2 of 5	3-123
3-92.	EMR2 Fault Codes - Sheet 3 of 5	3-124
3-93.	EMR2 Fault Codes - Sheet 4 of 5	3-125
3-94.	EMR2 Fault Codes - Sheet 5 of 5	3-126
3-95.	Engine Oil Dip Stick	3-176
3-96.	Electric Fuel Lock Off	3-178
3-97.	EPR Assembly	3-179
3-98.	Low Pressure Regulators	3-179
3-99.	Air Fuel Mixer	3-180
3-100.	ETC throttle control device	3-180
3-101.	LPG Engine Control Unit (ECM)	3-181
3-102.	ECM Assembly	3-181
3-103.	Heated Exhaust Gas Oxygen Sensor (HEGO)	3-181
3-104.	Gasoline Fuel Pressure and Temperature Manifold Assembly	3-182

FIGURE NO.	TITLE	PAGE NO.
3-105.	Filter Lock Assembly	3-184
3-106.	EPR Assembly	3-185
3-107.	Pressure Regulator Section	3-186
3-108.	(TMAP) Sensor & Electronic Throttle Control (ETC)	3-186
3-109.	Mixer Assembly	3-187
3-110.	EPR Assembly	3-189
3-111.	Ford Engine Installation - Sheet 1 of 4	3-207
3-112.	Ford Engine Installation - Sheet 2 of 4	3-208
3-113.	Ford Engine Installation - Sheet 3 of 4	3-209
3-114.	Ford Engine Installation - Sheet 4 of 4	3-210
3-115.	Counterweight	3-224
4-1.	Location of Components Platform Support	4-2
4-2.	Platform Support Torque Values	4-4
4-3.	Reassembly of Components-Rotator and Leveling Cylinder	4-4
4-4.	Boom Component Location	4-7
4-5.	Main Boom Powertrack Components	4-8
4-6.	Powertrack Installation Main Boom (Sheet 1 of 2)	4-9
4-7.	Powertrack Installation Main Boom (Sheet 2 of 2)	4-10
4-8.	Powertrack Installation Tower Boom (Sheet 1 of 3)	4-11
4-9.	Powertrack Installation Tower Boom (Sheet 2 of 3)	4-12
4-10.	Powertrack Installation Tower Boom (Sheet 3 of 3)	4-13
4-11.	Location of Components - Upright	4-25
4-12.	Location of Components - Tower Boom Powertrack	4-26
4-13.	Releveling Valve	4-30
4-14.	Boom Upright Positioning	4-31
4-15.	UMS Sensor Location	4-41
4-16.	UMS Module Location	4-42
4-17.	UMS Module Pin Identification	4-43
4-18.	Location of Components-Articulating Jib	4-46
4-19.	Boom Valve and Limit Switches Location (Sheet 1 of 3)	4-48
4-20.	Boom Valve and Limit Switches Location (Sheet 2 of 3)	4-49
4-21.	Boom Valve and Limit Switches Location (Sheet 3 of 3)	4-50
4-22.	Dual Capacity Switches Installation (800 Only if equipped)	4-51
4-23.	Transportation Switch Installation (CE only)	4-52
4-24.	Rotator - Exploded View	4-56
4-25.	Rotator- Assembly Drawing	4-57
4-26.	Rotator Counterbalance Valve	4-68
4-27.	Bolt-On External Fall Arrest Cable Tension	4-74
4-28.	Bolt-On External Fall Arrest System	4-76
5-1.	NPTF Thread	5-3
5-2.	BSPT Thread	5-3
5-3.	JIC Thread	5-3
5-4.	SAE Thread	5-3
5-5.	ORFS Thread	5-3
5-6.	MTBL-MBTS Thread	5-3
5-7.	Bulkhead Thread	5-3
5-8.	ORB-MPP Thread	5-4
5-9.	MFF-BSPP Thread	5-4
5-10.	ORB-MPP Thread	5-4
5-11.	Torque Wrench Angle	5-5
5-12.	Double Wrench Method	5-47
5-13.	FFWR Method	5-48
5-14.	Adjustable Stud End Assembly	5-49
5-15.	Axle Lockout Cylinder	5-51
5-16.	Cylinder Barrel Support	5-52
5-17.	Capscrew Removal	5-52
5-18.	Cylinder Rod Support	5-52

FIGURE NO.	TITLE	PAGE NO.
5-19.	Platform Level Cylinder (800A - SN 0300183034 through 0300245050, 800AJ - SN 0300183034 through 0300240878)	5-53
5-20.	Platform Level Cylinder (800AJ - SN 0300240879 to Present)	5-54
5-21.	Tapered Bushing Removal	5-55
5-22.	Composite Bearing Installation	5-56
5-23.	Rod Seal Installation	5-56
5-24.	Cylinder Head Seal Installation	5-56
5-25.	Wiper Seal Installation	5-57
5-26.	Installation of Head Seal Kit	5-57
5-27.	Tapered Bushing Installation	5-57
5-28.	Seating the Tapered Bearing	5-57
5-29.	Hydrolock Piston Seal Installation	5-58
5-30.	Piston Seal Kit Installation	5-58
5-31.	Rod Assembly Installation	5-58
5-32.	Cylinder Barrel Support	5-59
5-33.	Cylinder Head Removal	5-59
5-34.	Cylinder Rod Support	5-59
5-35.	Platform Level Cylinder (800A - SN 0300245051 to Present)	5-60
5-36.	Composite Bearing Installation	5-62
5-37.	Rod Seal Installation	5-62
5-38.	Cylinder Head Seal Installation	5-62
5-39.	Wiper Seal Installation	5-63
5-40.	Wiper Seal Installation	5-63
5-41.	Piston Seal Kit Installation	5-63
5-42.	Caulking	5-63
5-43.	Cylinder Barrel Support	5-64
5-44.	Capscrew Removal	5-64
5-45.	Cylinder Rod Support	5-64
5-46.	Upright Level Cylinder	5-65
5-47.	Tapered Bushing Removal	5-66
5-48.	Composite Bearing Installation	5-67
5-49.	Rod Seal Installation	5-67
5-50.	Cylinder Head Seal Installation	5-67
5-51.	Wiper Seal Installation	5-68
5-52.	Installation of Head Seal Kit	5-68
5-53.	Tapered Bushing Installation	5-68
5-54.	Seating the Tapered Bearing	5-68
5-55.	Hydrolock Piston Seal Installation	5-69
5-56.	Piston Seal Kit Installation	5-69
5-57.	Rod Assembly Installation	5-69
5-58.	Cylinder Barrel Support	5-70
5-59.	Capscrew Removal	5-70
5-60.	Cylinder Rod Support	5-70
5-61.	Jib Lift Cylinder (SN 0300183034 through 0300245050)	5-71
5-62.	Jib Lift Cylinder (SN 0300245051 through 0300245146)	5-72
5-63.	Jib Lift Cylinder (SN 0300245051 through 0300245146, SN 0300245147 to Present)	5-73
5-64.	Tapered Bushing Removal	5-74
5-65.	Composite Bearing Installation	5-75
5-66.	Rod Seal Installation	5-75
5-67.	Cylinder Head Seal Installation	5-75
5-68.	Wiper Seal Installation	5-76
5-69.	Installation of Head Seal Kit	5-76
5-70.	Tapered Bushing Installation	5-76
5-71.	Seating the Tapered Bearing	5-76
5-72.	Hydrolock Piston Seal Installation	5-77
5-73.	Piston Seal Kit Installation	5-77
5-74.	Rod Assembly Installation	5-77

FIGURE NO.	TITLE	PAGE NO.
5-75.	Cylinder Barrel Support	5-78
5-76.	Capscrew Removal	5-78
5-77.	Cylinder Rod Support	5-78
5-78.	Main Boom Lift Cylinder (SN 0300183034 through 0300239885)	5-79
5-79.	Main Boom Lift Cylinder (SN 0300239886 to Present)	5-80
5-80.	Tapered Bushing Removal	5-81
5-81.	Composite Bearing Installation	5-82
5-82.	Rod Seal Installation	5-82
5-83.	Cylinder Head Seal Installation	5-82
5-84.	Wiper Seal Installation	5-83
5-85.	Installation of Head Seal Kit	5-83
5-86.	Tapered Bushing Installation	5-83
5-87.	Seating the Tapered Bearing	5-83
5-88.	Piston Seal Kit Installation	5-84
5-89.	Rod Assembly Installation	5-84
5-90.	Cylinder Barrel Support	5-85
5-91.	Capscrew Removal	5-85
5-92.	Cylinder Rod Support	5-85
5-93.	Tower Boom Lift Cylinder	5-86
5-94.	Tapered Bushing Removal	5-87
5-95.	Composite Bearing Installation	5-88
5-96.	Rod Seal Installation	5-88
5-97.	Cylinder Head Seal Installation	5-88
5-98.	Wiper Seal Installation	5-89
5-99.	Installation of Head Seal Kit	5-89
5-100.	Tapered Bushing Installation	5-89
5-101.	Seating the Tapered Bearing	5-89
5-102.	Hydrolock Piston Seal Installation	5-90
5-103.	Piston Seal Kit Installation	5-90
5-104.	Rod Assembly Installation	5-90
5-105.	Cylinder Barrel Support	5-91
5-106.	Capscrew Removal	5-91
5-107.	Cylinder Rod Support	5-91
5-108.	Master Cylinder (800A)	5-92
5-109.	Tapered Bushing Removal	5-93
5-110.	Composite Bearing Installation	5-94
5-111.	Rod Seal Installation	5-94
5-112.	Cylinder Head Seal Installation	5-94
5-113.	Wiper Seal Installation	5-95
5-114.	Installation of Head Seal Kit	5-95
5-115.	Tapered Bushing Installation	5-95
5-116.	Seating the Tapered Bearing	5-95
5-117.	Piston Seal Kit Installation	5-96
5-118.	Rod Assembly Installation	5-96
5-119.	Cylinder Barrel Support	5-97
5-120.	Capscrew Removal	5-97
5-121.	Cylinder Rod Support	5-97
5-122.	Master Cylinder (SN 0300183034 through 0300243317)	5-98
5-123.	Master Cylinder (SN 0300243318 to Present)	5-99
5-124.	Tapered Bushing Removal	5-100
5-125.	Composite Bearing Installation	5-101
5-126.	Rod Seal Installation	5-101
5-127.	Cylinder Head Seal Installation	5-101
5-128.	Wiper Seal Installation	5-102
5-129.	Installation of Head Seal Kit	5-102
5-130.	Tapered Bushing Installation	5-102
5-131.	Seating the Tapered Bearing	5-102

FIGURE NO.	TITLE	PAGE NO.
5-132.	Hydrolock Piston Seal Installation	5-103
5-133.	Piston Seal Kit Installation	5-103
5-134.	Rod Assembly Installation	5-103
5-135.	Cylinder Barrel Support	5-104
5-136.	Spanner Nut Removal	5-104
5-137.	Cylinder Rod Support	5-104
5-138.	Steer Cylinder	5-105
5-139.	Composite Bearing Installation	5-106
5-140.	Rod Seal Installation	5-107
5-141.	Cylinder Head Seal Installation	5-107
5-142.	Wiper Seal Installation	5-107
5-143.	Installation of Head Seal Kit	5-107
5-144.	Piston Seal Kit Installation	5-108
5-145.	Cylinder Barrel Support	5-109
5-146.	Capscrew Removal	5-109
5-147.	Cylinder Rod Support	5-109
5-148.	Main Boom Telescopic Cylinder (800A SN 0300183034 through 0300245050, 800AJ SN 0300183034 through 0300243317)	5-110
5-149.	Main Boom Telescopic Cylinder (800AJ SN 0300243318 to Present)	5-111
5-150.	Tapered Bushing Removal	5-112
5-151.	Composite Bearing Installation	5-113
5-152.	Rod Seal Installation	5-113
5-153.	Cylinder Head Seal Installation	5-113
5-154.	Wiper Seal Installation	5-114
5-155.	Installation of Head Seal Kit	5-114
5-156.	Tapered Bushing Installation	5-114
5-157.	Seating the Tapered Bearing	5-114
5-158.	Piston Seal Kit Installation	5-115
5-159.	Rod Assembly Installation	5-115
5-160.	Cylinder Barrel Support	5-116
5-161.	Cylinder Head Removal	5-116
5-162.	Cylinder Rod Support	5-116
5-163.	Main Boom Telescopic Cylinder (800A SN 0300245051 to Present)	5-117
5-164.	Composite Bearing Installation	5-119
5-165.	Rod Seal Installation	5-119
5-166.	Cylinder Head Seal Installation	5-119
5-167.	Wiper Seal Installation	5-120
5-168.	Installation of Head Seal Kit	5-120
5-169.	Piston Seal Kit Installation	5-120
5-170.	Cylinder Barrel Support	5-122
5-171.	Capscrew Removal	5-122
5-172.	Cylinder Rod Support	5-122
5-173.	Tower Boom Telescopic Cylinder (SN 0300183034 through 0300243317)	5-123
5-174.	Tower Boom Telescopic Cylinder (SN 0300243318 to Present)	5-124
5-175.	Tapered Bushing Removal	5-125
5-176.	Composite Bearing Installation	5-126
5-177.	Rod Seal Installation	5-126
5-178.	Cylinder Head Seal Installation	5-126
5-179.	Wiper Seal Installation	5-127
5-180.	Installation of Head Seal Kit	5-127
5-181.	Tapered Bushing Installation	5-127
5-182.	Seating the Tapered Bearing	5-127
5-183.	Hydrolock Piston Seal Installation	5-128
5-184.	Piston Seal Kit Installation	5-128
5-185.	Rod Assembly Installation	5-128
5-186.	Components Main Boom and Tower Boom	5-129
5-187.	Load Sensing Control Adjustment	5-139

FIGURE NO.	TITLE	PAGE NO.
5-188.	Pressure Compensation Control Adjustment	5-139
5-189.	Main Control Valve Pressure Adjustments	5-140
5-190.	Main Valve Components - Sheet 1 of 2	5-141
5-191.	Main Valve Components - Sheet 2 of 2	5-142
5-192.	Valve Component Torque - Sheet 1 of 2	5-143
5-193.	Valve Component Torque - Sheet 2 of 2	5-144
5-194.	Platform Control Valve Pressure Adjustments	5-145
5-195.	Platform Control Valve Component Torque	5-146
5-196.	Articulating Jib Boom Pressure adjust.	5-148
5-197.	Gauge Port Locations	5-152
5-198.	Shaft Seal and Retaining Ring	5-158
5-199.	Control Assembly	5-158
5-200.	Plug Locations, Sizes, and Torques	5-160
5-201.	Endcover Inspection	5-162
5-202.	Housing Inspection	5-163
5-203.	Servo Piston Installation	5-163
5-204.	bearing or bushing Inspection	5-165
5-205.	Charge Pump Adapter Assembly	5-165
5-206.	Manual Servo Control Basic Assembly	5-166
5-207.	Manual Servo Control Basic Assembly Option	5-167
5-208.	Neutral Lockout Switch Assembly	5-168
5-209.	Rotating Kit Assembly	5-169
5-210.	Gauge Locations	5-170
5-211.	Fault- logic Troubleshooting	5-171
5-212.	Fault- logic Troubleshooting	5-172
5-213.	Fault- logic Troubleshooting	5-173
5-214.	Hydraulic Schematic - Sheet 1 of 6	5-176
5-215.	Hydraulic Schematic - Sheet 2 of 6	5-177
5-216.	Hydraulic Schematic - Sheet 3 of 6	5-178
5-217.	Hydraulic Schematic - Sheet 4 of 6	5-179
5-218.	Hydraulic Schematic - Sheet 5 of 6	5-180
5-219.	Hydraulic Schematic - Sheet 6 of 6	5-181
6-1.	Hand Held Analyzer	6-1
6-2.	ADE Block Diagram	6-8
6-3.	Analyzer Flow Chart (Software Version P6.22) -Sheet 1 of 9	6-25
6-4.	Analyzer Flow Chart (Software Version P6.22) -Sheet 2 of 9	6-26
6-5.	Analyzer Flow Chart (Software Version P6.22) -Sheet 3 of 9	6-27
6-6.	Analyzer Flow Chart (Software Version P6.22) -Sheet 4 of 9	6-28
6-7.	Analyzer Flow Chart (Software Version P6.22) -Sheet 5 of 9	6-29
6-8.	Analyzer Flow Chart (Software Version P6.22) -Sheet 6 of 9	6-30
6-9.	Analyzer Flow Chart (Software Version P6.22) -Sheet 7 of 9	6-31
6-10.	Analyzer Flow Chart (Software Version P6.22) -Sheet 8 of 9	6-32
6-11.	Analyzer Flow Chart (Software Version P6.22) -Sheet 9 of 9	6-33
6-12.	Fault Code Light Location	6-34
6-13.	Analyzer Connecting Points	6-35
6-14.	Ground Control Module - Sheet 1 of 3	6-36
6-15.	Ground Control Module - Sheet 2 of 3	6-37
6-16.	Ground Control Module - Sheet 3 of 3	6-38
6-17.	Platform Control Module - Sheet 1 of 2	6-39
6-18.	Platform Control Module - Sheet 2 of 2	6-40
7-1.	Voltage Measurement (DC)	7-1
7-2.	Resistance Measurement	7-2
7-3.	Continuity Measurement	7-2
7-4.	Current Measurement (DC)	7-3
7-5.	Application to Male Contacts	7-4
7-6.	Use of Seal Plugs	7-5
7-7.	Brad-Harrison M12	7-6

LIST OF FIGURES

FIGURE NO.	TITLE	PAGE NO.
7-8.	Phoenix Contact M12.....	7-6
7-9.	Connector Assembly Figure 1.....	7-8
7-10.	AMP Connector.....	7-8
7-11.	Connector Assembly Figure 2.....	7-9
7-12.	Connector Assembly Figure 3.....	7-9
7-13.	Connector Assembly Figure 4.....	7-9
7-14.	Connector Disassembly.....	7-10
7-15.	Connector Installation.....	7-11
7-16.	DT/DTP Contact Installation.....	7-12
7-17.	DT/DTP Contact Removal.....	7-12
7-18.	HD/HDP Contact Installation.....	7-13
7-19.	HD/HDP Locking Contacts Into Position.....	7-13
7-20.	HD/HDP Contact Removal.....	7-13
7-21.	HD/HDP Unlocking Contacts.....	7-13
7-22.	Telematics Gateway Harness - Sheet 1 of 3.....	7-15
7-23.	Telematics Gateway Harness - Sheet 2 of 3.....	7-16
7-24.	Telematics Gateway Harness - Sheet 3 of 3.....	7-17
7-25.	Electrical Components Installation - Sheet 1 of 2.....	7-18
7-26.	Electrical Components Installation - Sheet 2 of 2.....	7-19
7-27.	Electrical Schematic GM - Sheet 1 of 2.....	7-20
7-28.	Electrical Schematic GM - Sheet 2 of 2.....	7-21
7-29.	Electrical Schematic - Sheet 1 of 13.....	7-22
7-30.	Electrical Schematic - Sheet 2 of 13.....	7-23
7-31.	Electrical Schematic - Sheet 3 of 13.....	7-24
7-32.	Electrical Schematic - Sheet 4 of 13.....	7-25
7-33.	Electrical Schematic - Sheet 5 of 13.....	7-26
7-34.	Electrical Schematic - Sheet 6 of 13.....	7-28
7-35.	Electrical Schematic - Sheet 7 of 13.....	7-29
7-36.	Electrical Schematic - Sheet 8 of 13.....	7-30
7-37.	Electrical Schematic - Sheet 9 of 13.....	7-31
7-38.	Electrical Schematic - Sheet 10 of 13.....	7-32
7-39.	Electrical Schematic - Sheet 11 of 13.....	7-33
7-40.	Electrical Schematic - Sheet 12 of 13.....	7-34
7-41.	Electrical Schematic - Sheet 13 of 13.....	7-35

TABLE NO.	TITLE	PAGE NO.
1-1	Operating Specifications	1-1
1-2	Capacities	1-1
1-3	Tire Specifications	1-1
1-4	Deutz D2011L04 Specifications	1-1
1-5	Deutz TD 2.9 Specifications	1-2
1-6	GM 3.0L Specifications	1-2
1-7	Deutz TD 2.9 L4 China III Specifications	1-2
1-8	Ford 2.5L DF, MSG-425	1-2
1-9	Drive System Specifications	1-3
1-10	Swing System Specifications	1-3
1-11	Auxiliary Power Pump Specifications	1-3
1-12	Torque Requirements	1-3
1-13	Hydraulic Oil	1-4
1-14	Mobilfluid 424 Specs	1-4
1-15	Mobil DTE 10 Excel 32 Specs	1-4
1-16	Mobil EAL 224H Specs	1-4
1-17	UCon Hydrolube HP-5046	1-4
1-18	Exxon Univis HVI 26 Specs	1-5
1-19	Major Component Weights	1-5
1-20	Critical Stability Weights	1-6
1-21	Lubrication Specifications	1-8
2-1	Inspection and Maintenance	2-2
2-2	Cylinder Drift	2-5
2-3	Inspection and Preventive Maintenance Schedule	2-7
3-1	Wheel Torque Chart	3-2
3-2	Excessive Noise and/or Vibration	3-20
3-3	System Operating Hot	3-20
3-4	Won't Shift or Slow to Start	3-20
3-5	Displacement Identifiers	3-23
3-6	Slipper Foot Thickness & End Play	3-25
3-7	Cylinder Block Measurements	3-26
3-8	Coupling Port Information Table (7 port)	3-77
3-9	Coupling Port Information Table (9 port)	3-77
3-10	Troubleshooting	3-80
3-11	Lead Connection List for Generator	3-88
3-12	DTC to SPN/FMI Cross Reference Chart	3-127
3-13	Engine Fault Codes	3-129
3-14	LPG Fuel System Diagnosis	3-190
3-15	Symptom Diagnosis	3-192
3-16	GM Engine Diagnostics Codes	3-200
3-17	Fault Code Cross Reference List (Ford Engine)	3-211
3-18	CAN to DTC Cross Reference (Ford Engine)	3-217
4-1	Troubleshooting	4-71
4-2	SkyGuard Function Table	4-73
5-1	NPTF Pipe Thread	5-6
5-2	BSPT Pipe Thread	5-7
5-3	37° Flare (JIC)Thread - Steel	5-9
5-4	37° Flare (JIC)Thread - Aluminum/Brass	5-10
5-5	45° Flare (SAE) - Steel	5-12
5-6	45° Flare (SAE) - Aluminum/Brass	5-12
5-7	O-ring Face Seal (ORFS) - Steel	5-13
5-8	O-ring Face Seal (ORFS) - Aluminum/Brass	5-14
5-9	DIN 24° Cone (MBTL & MBTS)	5-16
5-10	Bulkhead Fittings (BH) - INCH	5-18
5-11	Bulkhead Fittings (BH) - METRIC	5-19
5-12	O-ring Boss (ORB) - Table 1 of 6	5-21
5-13	O-ring Boss (ORB) - Table 2 of 6	5-22

TABLE NO.	TITLE	PAGE NO.
5-14	O-ring Boss (ORB) - Table 3 of 6	5-23
5-15	O-ring Boss (ORB) - Table 4 of 6	5-24
5-16	O-ring Boss (ORB) - Table 5 of 6	5-25
5-17	O-ring Boss (ORB) - Table 6 of 6	5-26
5-18	Metric Flat Face Port (MFF) - L Series - Table 1 of 3	5-28
5-19	Metric Flat Face Port (MFF) - L Series - Table 2 of 3	5-29
5-20	Metric Flat Face Port (MFF) - L Series - Table 3 of 3	5-30
5-21	Metric Flat Face Port (MFF) - S Series - Table 1 of 3	5-31
5-22	Metric Flat Face Port (MFF) - S Series - Table 2 of 3	5-32
5-23	Metric Flat Face Port (MFF) - L Series - Table 3 of 3	5-33
5-24	Metric Pipe Parallel O-Ring Boss (MPP)	5-35
5-25	British Standard Parallel Pipe Port (BSPP) - L Series - Table 1 of 3	5-38
5-26	British Standard Parallel Pipe Port (BSPP) - L Series - Table 2 of 3	5-39
5-27	British Standard Parallel Pipe Port (BSPP) - L Series - Table 3 of 3	5-40
5-28	British Standard Parallel Pipe Port (BSPP) - S Series - Table 1 of 3	5-41
5-29	British Standard Parallel Pipe Port (BSPP) - S Series - Table 2 of 3	5-42
5-30	British Standard Parallel Pipe Port (BSPP) - S Series - Table 3 of 3	5-43
5-31	Flange Code (FL61 & FL62) -Inch Fasteners	5-45
5-32	Flange Code (FL61 & FL62) - Metric Fasteners	5-46
5-33	Main Control valve Coil Resistance	5-141
5-34	Platform Control valve Specification	5-146
5-35	Symbols Used	5-152
5-36	Gauge and Port information	5-152
5-37	Excessive Noise and/ or Vibration	5-154
5-38	Actuator Response Is Sluggish	5-154
5-39	System Operating Hot	5-155
5-40	Low Pump Output Flow	5-155
5-41	Pressure or Flow Instability	5-156
5-42	System Pressure Not Reaching Pressure Compensator Setting	5-156
5-43	High Inlet Vacuum	5-157
6-1	Analyzer Abbreviations	6-6
6-2	Machine Configuration Programming Information (Software Version P6.22)	6-9
6-3	800A Machine Configuration Programming Settings (Software Version P6.22)	6-17
6-4	800AJ Machine Configuration Programming Settings (Software Version P6.22)	6-18
6-5	Machine Personality Settings	6-20
6-6	Function Speeds	6-23
6-7	Adjustments - Personality Descriptions	6-41
6-8	Diagnostic Menu Descriptions	6-45
6-9	Accessory Weights	6-47
6-10	SkyGlazier Capacity Reductions	6-49
6-11	Pipe Rack Capacity Reductions	6-49
6-12	LSS Troubleshooting Chart	6-52
6-13	Diagnostic Trouble Code Chart	6-55

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter your information to search for manuals and parts.

* Brand:

* Model:

* Serial:

* Part Number:

SEARCH

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in the following information:

Manufacturer:

Model:

Description:

Quantity:

Part Number:

Part Name:

Part Description:

Part Location:

Part Condition:

Part Status:

Part Material:

Part Color:

Part Weight:

Part Dimensions:

Part Price:

Part Notes:

Submit

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION 1. SPECIFICATIONS

1.1 OPERATING SPECIFICATIONS

Table 1-1. Operating Specifications

Travel Speed	3.0 MPH (4.83 Km/hr.)
Gradeability	
2WD	30%
4WD	45%
Turning Radius (Outside)	
2WS	19ft. 8in. (6.02 m)
4WS	11ft. 7in. (3.53 m)
Turning Radius (Inside)	
2WS	12ft. 6in. (3.8 m)
4WS	6ft. (1.83 m)
Overall Width	8ft. 1in. (2.48 m)
Tailswing	8ft. 4in. (2.56 m)
Ground Clearance	11 in. (28 cm)
Machine Height Stowed	9ft. 10in. (3 m)
Machine Length (Stowed)	
800A	36ft. 11 in. (11.25 m)
800AJ	36ft. 6 in. (11.13 m)
Wheel base	10ft. (3.06 m)
Platform Height - 800A	
Above Grade	+80ft. (24.38 m)
Below Grade	-15ft. 7in. (4.75 m)
Platform Height - 800AJ	
Above Grade	+80ft. (24.48 m)
Below Grade	-13ft. 1in. (3.99 m)
Max. Ground Bearing Pressure	76 psi. (5.3 kg/cm ²)
Max. Tire Load	17,755 lbs. (8054 kg)
Machine Weight approximately*	35,500 lbs. (16,103 kg)
* Certain options or country standards can increase weight.	

1.2 CAPACITIES

Table 1-2. Capacities

Fuel Tank	Approx. 39 Gallons (147.6L)
Hydraulic Tank	Approx. 40 Gallons (151.4L)
Hydraulic System (Including Tank)	77 Gallons (291.4L)
Drive Hub	44 ounces (1.3L)
Drive Brake	2.7 ounces (80 ml)
Engine Crankcase	
Deutz D2011L04	11 qt (10.5L)
Deutz TD 2.9L	2.4 Gallons (8.9L) w/Filter
GM	4.5 qt (4.25L) w/Filter
Deutz TD 2.9L4 China III	2.11 Gallons (8.0L)
Ford 2.5 L MSG-425	7 qt (6.6L)

1.3 TIRES

Table 1-3. Tire Specifications

SIZE	TYPE	PLY RATING	LOAD RANGE	PRESSURE
15-625	pneumatic	16	H	95 psi (6.5 bar)
15-625	foam-filled	16	H	N/A
18-625	foam-filled	16	H	N/A

1.4 ENGINE DATA

Table 1-4. Deutz D2011L04 Specifications

Type	Liquid Cooled (Oil)
Fuel	Diesel
Oil Capacity	
Cooling System	5 qt (4.5L)
Crankcase	11 qt (10.5L) w/Filter
Total Capacity	16 qt (15L)
Idle RPM	1000
Low RPM	1800
High RPM	2600
Alternator	55 Amp, belt drive
Fuel Consumption	0.88 GPH (3.33 lph)
Battery	1000 Cold Cranking Amps, 210 minutes Reserve Capacity, 12 VDC
Horsepower	61.6 @ 2600 RPM, full load

SECTION 1 - SPECIFICATIONS

Table 1-5. Deutz TD 2.9 Specifications

Fuel	Ultra Low Sulfur Diesel (15 ppm)
Output	67 hp (50 kW)
Torque	173 ft.lbs. (234 Nm) @ 1800rpm
Oil Capacity (Crankcase)	2.4 Gallons (8.9 L) w/Filter
Cooling System	3.3 Gallons (12.5 L)
Low RPM	1200 ± 50 rpm
High RPM	2600 ± 50 rpm
Alternator	95 Amp
Fuel Consumption	0.65 GPH (2.48 lph)

Table 1-6. GM 3.0L Specifications

Fuel	Gasoline or Gasoline/LP Gas
No. of Cylinders	4
BHP	
Gasoline	83 hp @ 3000 rpm
LP	75 hp @ 3000 rpm
Bore	4.0 in. (101.6 mm)
Stroke	3.6 in. (91.44 mm)
Displacement	181 cu.in. (3.0 L, 2966 cc)
Oil Capacity w/filter	4.5 qt (4.25 L)
Minimum Oil Pressure	
at idle	6 psi (0.4 Bar) @ 1000 rpm
Hot	18 psi (1.2 Bar) @ 2000 rpm
Compression Ratio	9.2:1
Firing Order	1-3-4-2
Max. RPM	2800
Fuel Consumption	2.55 GPH (9.65 lph)

Table 1-7. Deutz TD 2.9 L4 China III Specifications

Fuel	Low Sulfur Diesel (500 ppm)
No. of Cylinders	4
Output	67 hp (50 kW)
Torque	173 ft.lbs. (234 Nm) @ 1800rpm
Displacement	177 cu.in. (2.9 L, 2900cc)
Oil Capacity (Crankcase)	2.11 Gallons (8.0 L) w/Filter
Cooling System	3.3 Gallons (12.5 L)
Low RPM	1200 ± 50 rpm
High RPM	2600 ± 50 rpm
Alternator	95 Amp
Fuel Consumption	0.91 GPH (3.44 lph)

Table 1-8. Ford 2.5L DF, MSG-425

Fuel	Gasoline/LP Gas
Oil Capacity	7 qt (6.6 L)
Coolant Capacity	0.63 Gallons (2.4 L)
Low RPM	1000 ± 50 rpm
High RPM	3200 ± 50 rpm
Alternator	150 AMP
Starter	64.4A @ 3574 RPM
Fan Ratio	1:3
Fuel Consumption	
Gasoline	0.99 GPH (3.75 LPH)
LP	5.7 lb./h (2.6 Kg/h)
Max Output (Power)	
Gasoline	84HP @ 3200
LP	80HP @ 3200
Max Output (Torque)	
Gasoline	142 ft. lbs. (192Nm) @ 2400 RPM
LP	145 ft. lbs. (197Nm) @ 2400 RPM

1.5 COMPONENT DATA

Drive System

Table 1-9. Drive System Specifications

Drive Motor Displacement	
2WD	2.439 cu. in. max. 1.347 cu. in. min. (40 cc max. 22.09 cc min.)
4WD	2.13 cu. in. max. 0.63 cu. in. min. (35 cc max. 10.3 cc min.)
Drive Hub Ratio	
2WD	87:1
4WD	87:1
Drive Brake	Automatic spring applied, hydraulically released disc brakes.

Swing System

Table 1-10. Swing System Specifications

Swing Motor Displacement	4.9 cu. in. (80 cm ³)
Swing Brake	Automatic spring applied hydraulically released disc brakes
Swing Hub Ratio	36.13:1

Auxiliary Power Pump

Table 1-11. Auxiliary Power Pump Specifications

Pump Output	1.43 GPM (5.6 lpm) @ 1800 psi. (124 bar)
Pump Displacement	0.273 cu. in. (4.48 cm ³)
Valving	Non-Adj. Unloader Preset to 230 psi Adjustable Relief Set at 1800 psi.
Motor	12 V.D.C. 2T Extended EMC Protected Intermittent Duty
Rotation	Counterclockwise

1.6 TORQUE REQUIREMENTS

Table 1-12. Torque Requirements

DESCRIPTION	TORQUE VALUE (DRY)	INTERVAL HOURS
Wheel Bolts	300 ft. lbs. (407 Nm)	150
Support to Rotator Bolts	50 ft. lbs. (68 Nm)	150
Rotator Center Bolt	480 ft. lbs. (651 Nm)	150
Swing Bearing Bolts	190 ft. lbs. (260 Nm)	50/600*
Starter or Aux Pump Solenoid Contacts Coil	95 in. lbs. (10.5 Nm) 40 in. lbs. (4.5 Nm)	As required
*Check swing bearing bolts for security after first 50 hours of operation and every 600 hours thereafter. (See Swing Bearing in Section 3.)		
NOTE: When maintenance becomes necessary or a fastener has loosened, refer to the Torque Chart to determine proper torque value.		

1.7 HYDRAULIC OIL

Table 1-13. Hydraulic Oil

HYDRAULIC SYSTEM OPERATING TEMPERATURE RANGE	S.A.E. VISCOSITY GRADE
+0° to +180°F (-18° to +83°C)	10W
+0° to +210°F (-18° to +99°C)	10W-20, 10W-30
+50° to +210°F (+10° to +99°C)	20W-20

NOTE: Hydraulic oils must have anti-wear qualities at least to API Service Classification GL-3, and sufficient chemical stability for mobile hydraulic system service. JLG Industries recommends Mobilfluid 424 hydraulic oil, which has an SAE viscosity index of 152.

NOTE: When temperatures remain consistently below 15°F (-9° C.), JLG Industries recommends the use of Mobil DTE10 Excel 32.

NOTE: Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities.

Table 1-14. Mobilfluid 424 Specs

SAE Grade	10W-30
Gravity, API	29.0
Density, Lb/Gal. 60°F	7.35
Pour Point, Max	-46°F (-43°C)
Flash Point, Min.	442°F (228°C)
VISCOSITY	
Brookfield, cP at -18°C	2700
at 40°C	55 cSt
at 100°C	9.3 cSt
Viscosity Index	152

Table 1-15. Mobil DTE 10 Excel 32 Specs

ISO Viscosity Grade	#32
Pour Point, Max	-65°F (-54°C)
Flash Point, Min.	482°F (250°C)
VISCOSITY	
at 40°C	32.7cSt
at 100°C	6.63 cSt
at 100°F	32.7cSt
at 212°F	6.63 cSt
Viscosity Index	164
Density (Kg/l) @ 15°C	0.8468
Density (lb/in ³) @ 60°F	0.0305

Table 1-16. Mobil EAL 224H Specs

Type	Synthetic Biodegradable
ISO Viscosity Grade	32/46
Specific Gravity	.922
Pour Point, Max	-25°F (-32°C)
Flash Point, Min.	428°F (220°C)
Operating Temp.	0 to 180°F (-17 to 162°C)
VISCOSITY	
at 40°C	37 cSt
at 100°C	8.4 cSt
Viscosity Index	213
NOTE: Must be stored above 32°F (14°C)	

Table 1-17. UCon Hydrolube HP-5046

Type	Synthetic Biodegradable
Specific Gravity	1.082
Pour Point, Max	-58°F (-50°C)
pH	9.1
VISCOSITY	
at 0°C (32°F)	340 cSt (1600SUS)
at 40°C (104°F)	46 cSt (215SUS)
at 65°C (150°F)	22 cSt (106SUS)
Viscosity Index	170

Table 1-18. Exxon Unavis HVI 26 Specs

Specific Gravity	32.1
Pour Point	-76°F (-60°C)
Flash Point	217°F (103°C)
VISCOSITY	
at 40°C	25.8 cSt
at 100°C	9.3 cSt
Viscosity Index	376
NOTE: Mobil/Exxon recommends that this oil be checked on a yearly basis for viscosity.	

1.8 MAJOR COMPONENT WEIGHTS

Table 1-19. Major Component Weights

MAJOR COMPONENTS	LBS.	KG.
Platform & Control Console	250	113
Main Boom (Inc. Slave Cylinder Rotator, Support)	3185	1445
Main Lift Cylinder	444.7	202
Main Telescope Cylinder	522	237
Upright	1175	535
Upright Level Cylinder	529.5	240
Tower Boom Complete	3450	1565
Tower Lift Cylinder	625	284
Tower Telescope Cylinder	232.5	105
Turntable Counterweight	4805	2180
Turntable Complete (Including Engine)	10625	4820
Chassis Complete (Pneumatic Tires)	13350	6060
Chassis Complete (Foam Filled Tires)	12220	5545
Machine Complete (GVW) w/ Pneumatic Tires	34200	15513
Machine Complete (GVW) w/ Foam Filled Tires	33100	15014
NOTE: The above components are separate assemblies. Example: "TURNTABLE COMPLETE" does not include booms, upright, lift cylinders or platform. The weights of these components must be added for the total weight.		

Critical Stability Weights

⚠ WARNING

DO NOT REPLACE ITEMS CRITICAL TO STABILITY WITH ITEMS OF DIFFERENT WEIGHT OR SPECIFICATION (FOR EXAMPLE: BATTERIES, FILLED TIRES, COUNTER WEIGHT, ENGINE, AND PLATFORM) DO NOT MODIFY UNIT IN ANY WAY TO EFFECT STABILITY.

Table 1-20. Critical Stability Weights

COMPONENTS		LBS.	KG.
Tire & Wheel Size (Foam Filled Only)	15-625	544	247
	18-625	601	273
Engine	Deutz	534	242
	GMw/pumps	1030	468
	Ford 2.5L MSG-425	358.5	162.6
Counterweight		4805	2180
Wheel Hubs	Rear	218	99
	Front 2WD	210	95
	Front 4WD	218	99
Platform	6 ft. (1.83 m)	205	93
	8 ft. (2.44 m)	230	105

Go to Discount-Equipment.com to order your parts

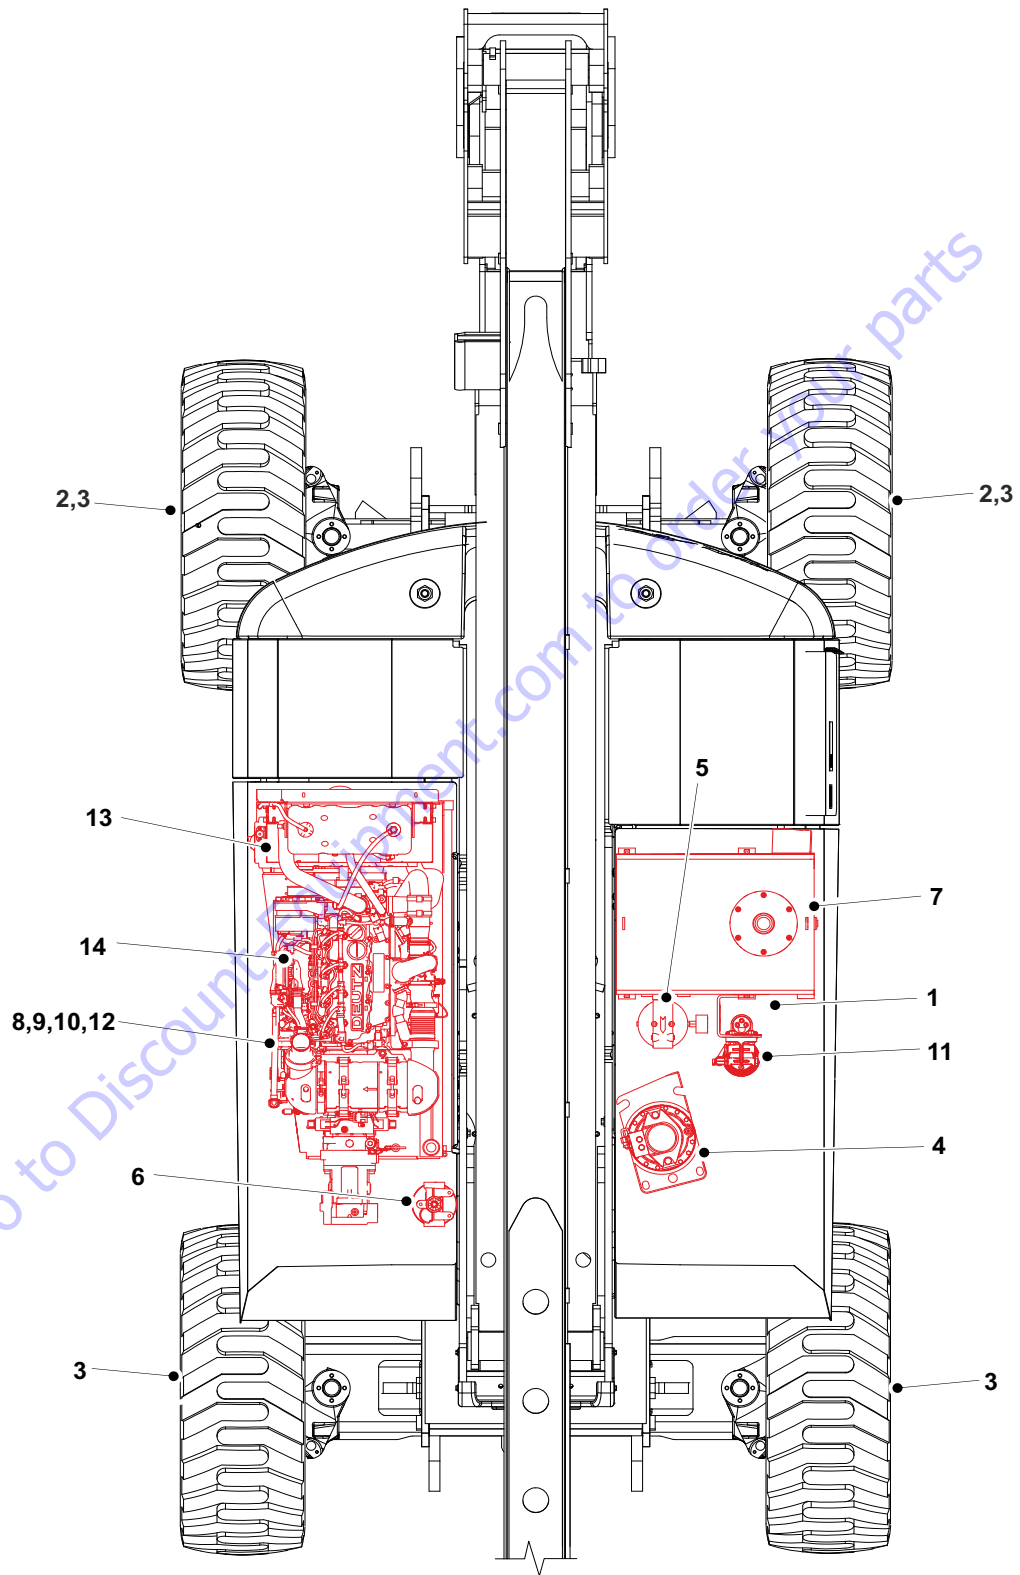


Figure 1-1. Maintenance and Lubrication Diagram

1.9 OPERATOR MAINTENANCE

NOTE: The following numbers correspond to those in Figure 1-1., Maintenance and Lubrication Diagram.

Table 1-21. Lubrication Specifications.

KEY	SPECIFICATIONS
MPG	Multipurpose Grease having a minimum dripping point of 350°F (177°C). Excellent water resistance and adhesive qualities, and being of extreme pressure type. (Timken OK 40 pounds minimum.)
EPGL	Extreme Pressure Gear Lube (oil) meeting API service classification GL-5 or MIL-Spec MIL-L-2105
HO	Hydraulic Oil. Refer Section 1.7, Hydraulic Oil.
EO	Engine (crankcase) Oil. Gas - API SF, SH, SG class, MIL-L-2104. Diesel - API CC/CD class, MIL-L-2104B/MIL-L-2104C
Super Lube®	Synthetic-Based Oil, Non-Flammable. Withstands temperatures within -45° to 450°F (-43° to 232°C). JLG P/N 3020042.

NOTICE

LUBRICATION INTERVALS ARE BASED ON MACHINE OPERATION UNDER NORMAL CONDITIONS. FOR MACHINES USED IN MULTI-SHIFT OPERATIONS AND/OR EXPOSED TO HOSTILE ENVIRONMENTS OR CONDITIONS, LUBRICATION FREQUENCIES MUST BE INCREASED ACCORDINGLY.

NOTE: It is recommended as a good practice to replace all filters at the same time.

1. Swing Bearing - Internal Ball Bearing




Lube Point(s) - 2 Grease Fittings
 Capacity - A/R
 Lube - MPG
 Interval - Every 3 months or 150 hours of operation
 Comments - Remote Access

2. Wheel Bearings




Lube Point(s) - Repack
 Capacity - A/R
 Lube - MPG
 Interval - Every 2 years or 1200 hours of operation

3. Wheel Drive Hub

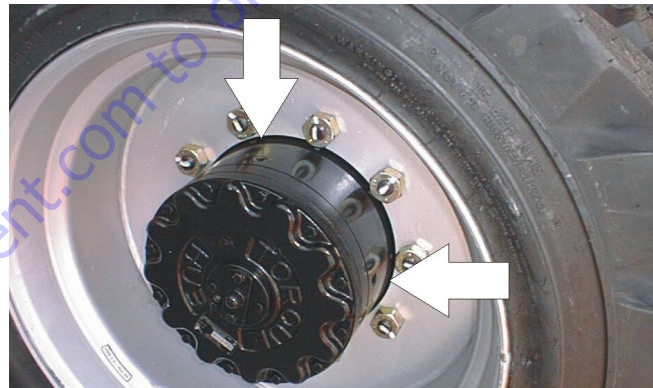


Lube Point(s) - Level/Fill Plug
 Capacity - 17 oz. (0.5 L) - 1/2 Full
 Lube - EPGL
 Interval - Check level every 3 months or 150 hours of operation; change every 2 years or 1200 hours of operation.
 Comments - Place Fill port at 12 o'clock position and Check port at 3 o'clock position. Pour lubricant into fill port until it just starts to flow out of check port.

4. Swing Drive Hub

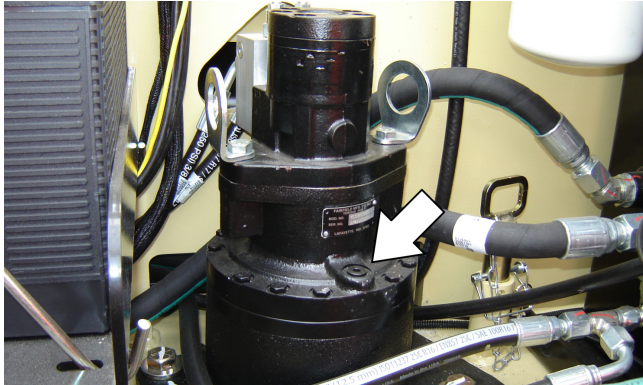


Lube Point(s) - Level/Fill Plug
 Capacity - 43 oz. (1.3 L)
 Lube - 90w80 Gear oil
 Interval - Check level every 3 months or 150 hours of operation; change every 2 years or 1200 hours of operation.

7. Hydraulic Tank

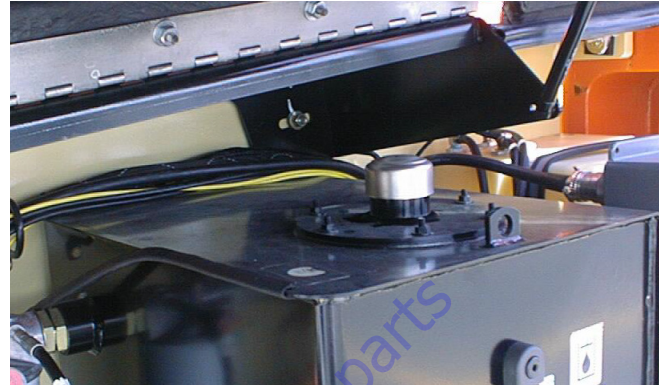


Lube Point(s) - Fill Cap
 Capacity - 40 gallons (151 L) Tank; 77 gallons (291.4 L) System
 Lube - HO
 Interval - Check Level daily; Change every 2 years or 1200 hours of operation.

5. Hydraulic Return Filter

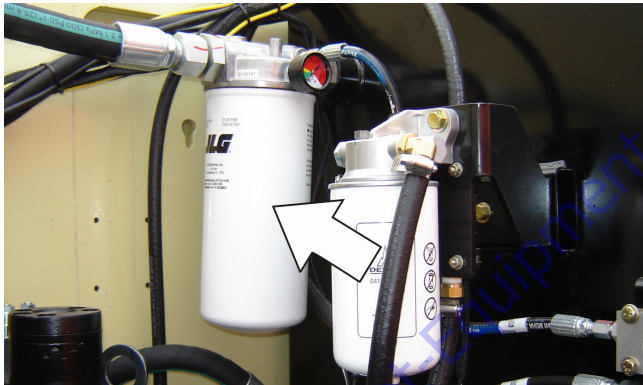

Interval - Change after first 50 hours and every 6 months or 300 hours thereafter or as indicated by Condition Indicator.

8. Oil Change w/Filter - Deutz D2011

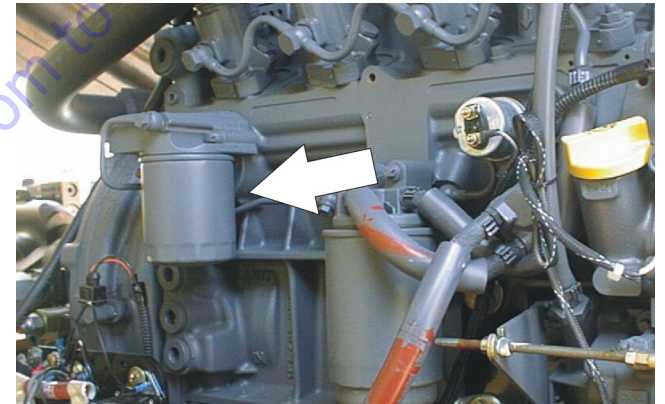

Lube Point(s) - Fill Cap/Spin-on Element
 Capacity - 11 Quarts (10.5 L) Crankcase
 Lube - EO
 Interval - Every Year or 1200 hours of operation
 Comments - Check level daily/Change in accordance with engine manual. Refer to Figure 1-2., Deutz 2011 Engine Dipstick.

6. Hydraulic Charge Filter



Interval - Change after first 50 hours and every 6 months or 300 hours thereafter or as indicated by Condition Indicator.


SECTION 1 - SPECIFICATIONS

B. Oil Change w/Filter - Deutz TD2.9



Lube Point(s) - Fill Cap/Spin-on Element
 Capacity - 9.6 Quarts (9.0 L)
 Lube - EO
 Interval - Every Year or 600 hours of operation
 Comments - Check level daily/Change in accordance with engine manual.

C. Oil Change w/Filter - Deutz TD 2.9 L4 China III

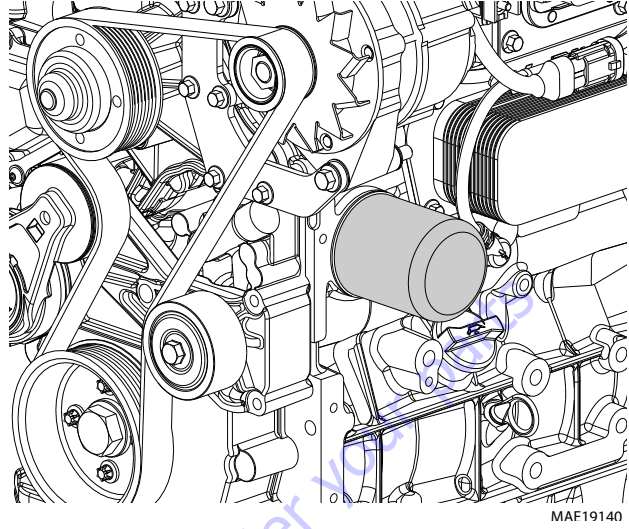

Lube Point(s) - Fill Cap/Spin-on Element
 Capacity - 8.5 Quarts (8.0 L)
 Lube - EO
 Interval - Every Year or 600 hours of operation
 Comments - Check level daily/Change in accordance with engine manual.

9. Oil Change w/Filter - GM



Lube Point(s) - Fill Cap/Spin-on Element
 (JLG P/N 7027965)
 Capacity - 4.5 qt. (4.25 L) w/filter
 Lube - EO
 Interval - 3 Months or 150 hours of operation
 Comments - Check level daily/Change in accordance with engine manual.


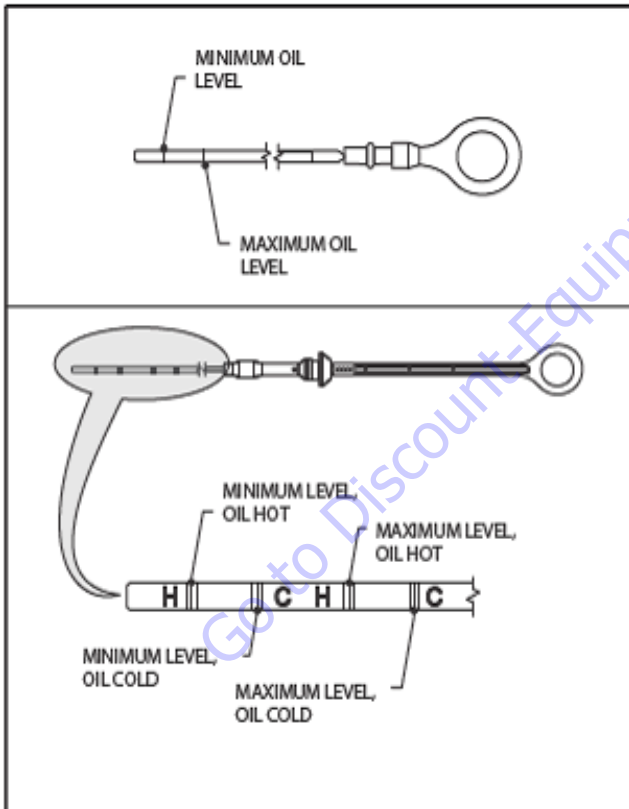



Figure 1-2. Deutz 2011 Engine Dipstick

10. A. Fuel Filter - Deutz D2011

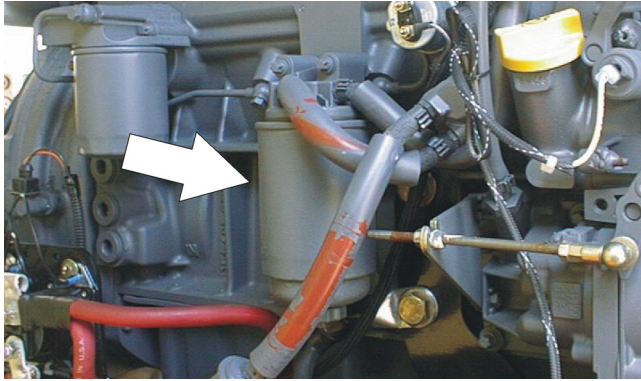

Lube Point(s) - Replaceable Element
Interval - Every Year or 600 hours of operation

B. Fuel Filter - Deutz TD2.9 (On Hydraulic Tank)

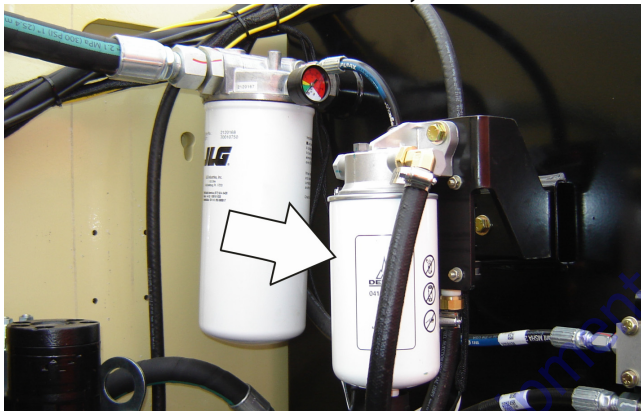


Lube Point(s) - Replaceable Element
Interval - Change in accordance with engine manual

C. Fuel Filter - Deutz TD2.9 (On Engine)




Lube Point(s) - Replaceable Element
Interval - Change in accordance with engine manual

D. Fuel Filter - Deutz TD 2.9 L4 China III

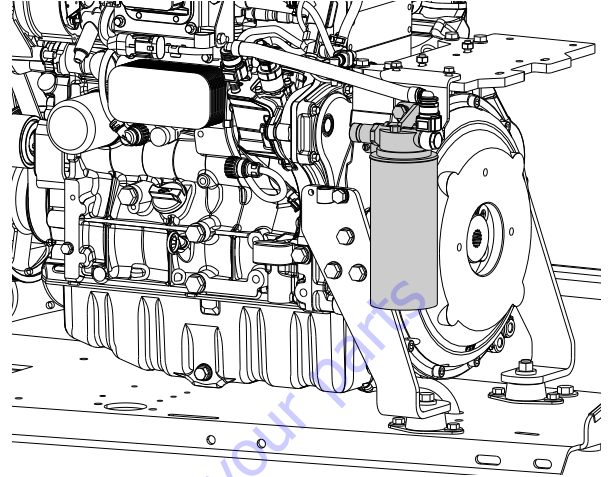

Lube Point(s) - Replaceable Element
Interval - Change in accordance with engine manual

11. Fuel/Water Separator - Deutz TD 2.9 L4 China III

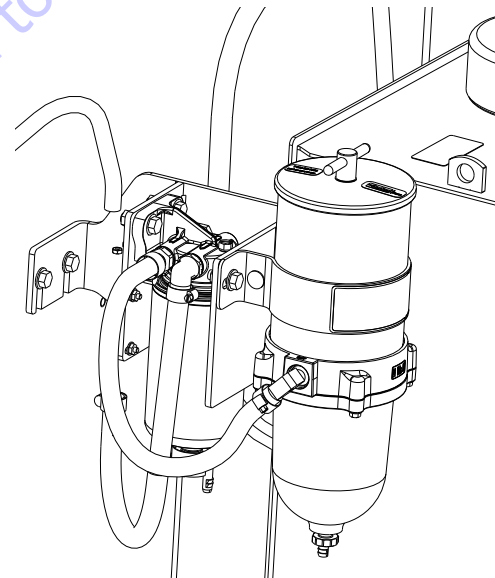

MAE25900


Lube Point(s) - Replaceable Element
Interval - Drain water daily; Change every year or 600hours of operation.

12. Fuel Filter (Gasoline) - GM

Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation


SECTION 1 - SPECIFICATIONS

13. Air Filter

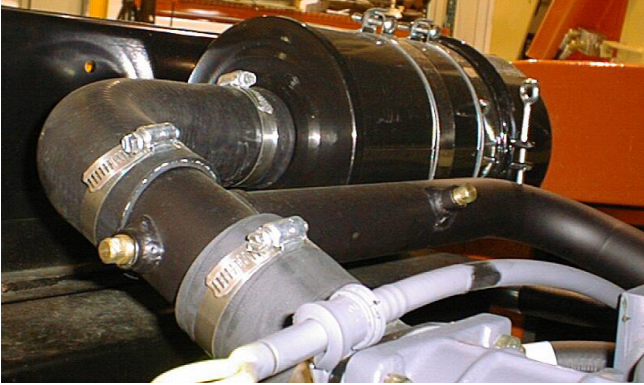


Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation
or as indicated by the condition indicator

B. Air Filter (Deutz TD 2.9)

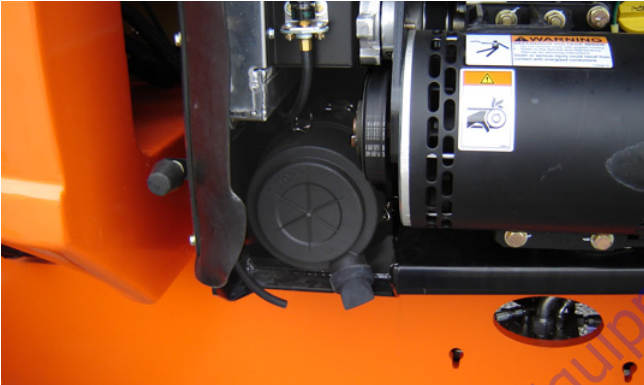


Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation
or as indicated by the condition indicator

C. Air Filter (Deutz TD 2.9 L4 China III)

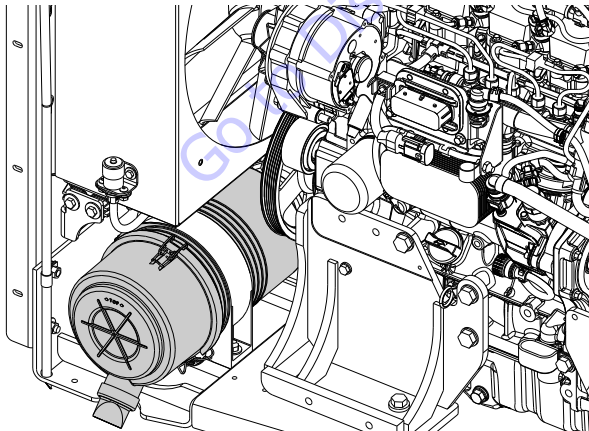

Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation
or as indicated by the condition indicator

14. Fuel Filter (Propane) - GM Engine

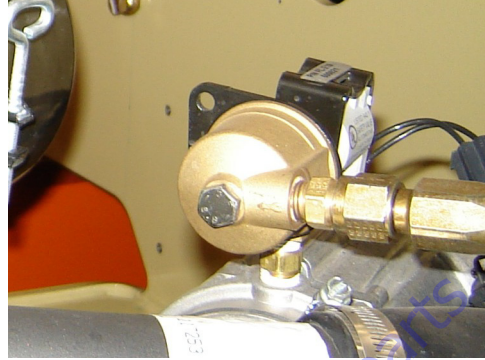

Interval - 3 Months or 150 hours of operation
Comments - Replace filter. Refer to Propane Fuel Filter
Replacement.

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)															
SAE GRADE 5 BOLTS & GRADE 2 NUTS						SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS*									
Size	TPI	Bolt Dia In	Tensile Stress Area Sq In	Clamp Load	Torque (Dry) [N.m]	Torque Lubricated [N.m]		Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) [N.m]		Torque (Loctite® 262™ or Vibra- TITE™ 131) [N.m]		Clamp Load	Torque (Dry or Loctite® 263) K=0.20 [N.m]	Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or K=18 [N.m]	Torque (Loctite® 262™ or Vibra- TITE™ 131) K=0.15 [N.m]
						IN-LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB				
4	40	0.1120	0.00604	380	8	0.9	6	0.8							
	48	0.1120	0.00661	420	9	1.0	7	0.7							
6	32	0.1380	0.00909	580	16	1.8	12	1.4							
	40	0.1380	0.01015	610	18	2.0	13	1.5							
8	32	0.1640	0.01400	800	30	3.4	22	2.5							
	36	0.1640	0.01474	840	31	3.5	23	2.6				1320	43	5	
10	24	0.1900	0.01750	1120	43	4.8	32	3.5				1560	60	7	
	32	0.1900	0.02000	1285	49	5.5	36	4				1800	68	8	
1/4	20	0.2500	0.0318	2020	96	10.8	75	9	105	12		2860	143	16	129
	28	0.2500	0.0364	2320	120	13.5	86	10	135	15		3280	164	19	148
5/16	18	0.3125	0.0654	3340	17	23	13	18	108	136					
	24	0.3125	0.09580	3700	19	26	14	19	118	148					
3/8	16	0.3750	0.0775	4940	30	41	23	31	183	224					
	24	0.3750	0.0878	5600	35	47	25	34	207	258					
7/16	14	0.4375	0.1063	6800	50	68	35	47	285	388					
	20	0.4375	0.1187	7550	55	75	40	54	320	449					
1/2	13	0.5000	0.1419	9050	75	102	55	75	475	646					
	20	0.5000	0.1599	10700	90	122	65	88	520	707					
9/16	12	0.5625	0.1820	11600	110	149	80	108	600	818					
	18	0.5625	0.2030	12950	120	163	90	122	683	933					
5/8	11	0.6250	0.2280	14400	150	203	110	149	802	1087					
	18	0.6250	0.2560	16300	170	230	130	176	909	1238					
3/4	10	0.7500	0.3340	21300	260	353	200	285	1175	1598					
	16	0.7500	0.3730	23800	300	407	220	298	1300	1768					
7/8	9	0.8750	0.4620	29400	430	583	320	434	1491	2074					
	14	0.8750	0.5090	32400	470	637	350	470	1680	2300					
1	8	1.0000	0.6060	38600	640	868	480	651	1979	2754					
	12	1.0000	0.6630	42200	700	949	530	719	2205	3028					
1 1/8	7	1.1250	0.7630	42300	800	1085	600	813	2430	3328					
	12	1.1250	0.8360	47300	880	1193	660	895	2670	3638					
1 1/4	7	1.2500	0.9690	53800	1120	1518	840	1139	3000	4118					
	12	1.2500	1.0730	59600	1240	1681	920	1247	3300	4525					
1 3/8	6	1.3750	1.1550	64100	1460	1979	1100	1491	3750	5145					
	12	1.3750	1.3150	73000	1680	2278	1260	1708	4150	5670					
1 1/2	6	1.5000	1.4050	78000	1940	2630	1460	1979	4620	6330					
	12	1.5000	1.5800	87700	2200	2983	1640	2224	5100	6978					

NO. 5000059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

REFERENCE JLG THREAD LOCKING COMPOUND			
JLG P/N	Loctite® P/N	ND Industries P/N	Description
0100011	242™	Vibra-TITE™ 121	Medium Strength (Blue)
0100019	271™	Vibra-TITE™ 140	High Strength (Red)
0100071	262™	Vibra-TITE™ 131	Medium - High Strength (Red)

Values for Magni Coating Fasteners (Ref 4150701)												
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load	SAE GRADE 5 BOLTS & GRADE 2 NUTS				SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS*			
					Torque (Dry) K=0.17	Torque (Locite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K=0.16	Torque (Locite® 262™ or VIBRA-TITE™ 131) K=0.15	Clamp Load	Torque (Dry or Locite® 263) K=0.17	Torque (Locite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K=0.16	Torque (Locite® 262™ or VIBRA-TITE™ 131) K=0.15	
		In	Sq In	LB	IN-LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB
4	40	0.1120	0.00604	380	7	0.8						
	48	0.1120	0.00661	420	8	0.9						
6	32	0.1380	0.00909	580	14	1.5						
	40	0.1380	0.01015	610	14	1.6						
8	32	0.1640	0.01400	900	25	2.8						
	36	0.1640	0.01474	940	26	2.9						
10	24	0.1900	0.01750	1120	36	4.1						
	32	0.1900	0.02000	1285	42	4.7						
1/4	20	0.2500	0.0318	2020	86	9.7	80	9	114	13		
	28	0.2500	0.0364	2320	99	11.1	95	11	131	15		
		In	Sq In	LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB	IN-LB
5/16	18	0.3125	0.0524	3340	15	20	14	19	20	25	20	25
	24	0.3125	0.0580	3700	15	20	15	21	20	25	20	25
3/8	16	0.3750	0.0775	4940	25	35	25	34	35	50	35	50
	24	0.3750	0.0878	5600	30	40	28	38	40	55	40	55
7/16	14	0.4375	0.1063	6800	40	55	40	54	60	80	55	70
	20	0.4375	0.1187	7550	45	60	44	60	65	90	60	80
1/2	13	0.5000	0.1419	9050	65	90	60	82	90	120	85	110
	20	0.5000	0.1599	10700	75	100	71	97	100	135	95	120
9/16	12	0.5625	0.1820	11600	90	120	87	118	130	175	125	170
	18	0.5625	0.2030	12950	105	145	97	132	145	195	135	185
5/8	11	0.6250	0.2260	14400	130	175	120	163	180	245	170	230
	18	0.6250	0.2560	16300	145	195	136	185	200	280	200	260
3/4	10	0.7500	0.3340	21300	225	305	213	290	320	435	300	410
	16	0.7500	0.3750	23800	255	345	238	324	355	485	335	455
7/8	9	0.8750	0.4620	29400	365	495	343	466	515	700	485	660
	14	0.8750	0.5090	32400	400	545	378	514	570	775	535	730
1	8	1.0000	0.6060	38600	545	740	515	700	730	995	685	930
	12	1.0000	0.6630	42200	600	815	563	765	845	1150	795	1080
1 1/8	7	1.1250	0.7630	42300	675	920	635	863	1095	1490	1030	1400
	12	1.1250	0.8560	47500	755	1025	713	969	1225	1665	1155	1570
1 1/4	7	1.2500	0.9690	53800	955	1300	897	1219	1545	2100	1455	1980
	12	1.2500	1.0730	59600	1055	1435	993	1351	1710	2325	1610	2190
1 3/8	6	1.3750	1.1550	64100	1250	1700	1175	1598	2025	2755	1905	2590
	12	1.3750	1.3150	73000	1420	1930	1338	1820	2300	3130	2165	2945
1 1/2	6	1.5000	1.4050	78000	1660	2260	1560	2122	2690	3660	2530	3440
	12	1.5000	1.5800	87700	1865	2535	1754	2385	3020	4105	2845	3870

NO. 500059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

Figure 1-4. Torque Chart (SAE Fasteners - Sheet 2 of 5)

SOCKET HEAD CAP SCREWS														
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load See Note 4	Magni Coating (Ref 4150701)*			Zinc Yellow Chromate Fasteners (Ref 4150707)*						
					Torque (Diy) K = .17	Torque (Locitite® 242™ or 271™ OR Vibra-TITE™ 111 or 140 OR Precoat 85®) K=0.16	Torque (Locitite® 262™ or TITE™ 131) K=0.15	Clamp Load See Note 4	Torque (Diy) K = .20	Torque (Locitite® 242™ or 271™ OR Vibra-TITE™ 111 or 140 OR Precoat 85®) K=0.18	Torque (Locitite® 262™ or TITE™ 131) K=0.15			
		In	Sq In	LB	IN-LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB	IN-LB	FT-LB
4	40	0.1120	0.00604											
	48	0.1120	0.00661											
6	32	0.1380	0.00909											
	40	0.1380	0.01015											
8	32	0.1640	0.01400											
	36	0.1640	0.01474											
10	24	0.1900	0.01750											
	32	0.1900	0.02000											
1/4	20	0.2500	0.0318	2860	122	14	114	13			16	129	15	
	28	0.2500	0.0364	3280	139	16	131	15			164	19	148	17
5/16	18	0.3125	0.0524	4720	20	25	20	25	20	25	25	35	20	25
	24	0.3125	0.0580	5220	25	35	20	25	20	25	35	25	35	20
3/8	16	0.3750	0.0775	7000	35	50	35	50	35	50	45	60	40	55
	24	0.3750	0.0878	7900	40	55	40	55	35	50	50	70	45	60
7/16	14	0.4375	0.1063	9550	60	80	55	75	50	70	95	65	90	70
	20	0.4375	0.1187	10700	65	90	60	80	60	80	110	70	95	60
1/2	13	0.5000	0.1419	12750	90	120	85	115	110	120	12750	105	145	130
	20	0.5000	0.1599	14400	100	135	95	130	90	120	14400	110	150	120
9/16	12	0.5625	0.1820	16400	130	175	125	170	115	155	16400	155	210	140
	18	0.5625	0.2030	18250	145	195	135	185	130	175	18250	170	230	175
5/8	11	0.6250	0.2260	20350	180	245	170	230	160	220	20350	210	285	190
	18	0.6250	0.2560	23000	205	280	190	260	180	245	23000	240	325	215
3/4	10	0.7500	0.3340	30100	320	435	300	400	280	380	30100	375	510	340
	16	0.7500	0.3730	33600	355	485	335	455	315	430	33600	420	570	380
7/8	9	0.8750	0.4620	41600	515	700	485	660	455	620	41600	605	825	545
	14	0.8750	0.5090	45800	570	775	535	730	500	680	45800	670	910	600
1	8	1.0000	0.6060	51500	730	995	685	930	645	875	51500	860	1170	775
	12	1.0000	0.6630	59700	845	1150	795	1080	745	1015	59700	995	1355	895
1 1/8	7	1.1250	0.7630	68700	1035	1490	1030	1400	965	1310	68700	1290	1765	1160
	12	1.1250	0.8560	77000	1225	1665	1155	1570	1085	1475	77000	1445	1965	1300
1 1/4	7	1.2500	0.9690	87200	1545	2100	1455	1980	1365	1855	87200	1815	2470	1635
	12	1.2500	1.0730	96600	1710	2325	1610	2190	1510	2055	96600	2015	2740	1810
1 3/8	6	1.3750	1.1550	104000	2025	2755	1905	2590	1785	2430	104000	2385	3245	2145
	12	1.3750	1.3150	118100	2300	3130	2165	2945	2030	2760	118100	2705	3680	2430
1 1/2	6	1.5000	1.4050	126500	2690	3660	2530	3440	2370	3225	126500	3165	4305	2845
	12	1.5000	1.5800	142200	3020	4105	2845	3870	2665	3625	142200	3555	4835	3200

NO. 500059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-5. Torque Chart (SAE Fasteners - Sheet 3 of 5)

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)											
CLASS 10.9 METRIC (HEX HEAD) BOLTS CLASS 10 METRIC NUTS CLASS 12.9 SOCKET HEAD CAP SCREWS M3 - M5*											
CLASS 8.8 METRIC (HEX/SOCKET HEAD) BOLTS CLASS 8 METRIC NUTS											
Size	PITCH	Tensile Stress Area	Clamp Load	Torque (Dry or Loctite® 263™)	Torque (Lub)	Torque (Loctite® 262™ OR Vibra-TITE™ 131)	Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140)	Clamp Load	Torque (Dry or Loctite® 263™) K = 0.20	Torque (Lub OR Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K = 0.18	Torque (Loctite® 262™ OR Vibra-TITE™ 131) K=0.15
		Sq mm	KN	[N.m]	[N.m]	[N.m]	[N.m]	KN	[N.m]	[N.m]	[N.m]
3	0.5	5.03	2.19	1.3	1.0	1.2	1.4	3.13			
3.5	0.6	6.78	2.95	2.1	1.6	1.9	2.3	4.22			
4	0.7	8.78	3.82	3.1	2.3	2.8	3.4	5.47			
5	0.8	14.20	6.18	6.2	4.6	5.6	6.8	8.85			
6	1	20.10	8.74	11	7.9	9.4	12	12.5			
7	1	28.90	12.6	18	13	16	19	18.0	25	23	19
8	1.25	36.60	15.9	26	19	23	28	22.8	37	33	27
10	1.5	58.00	25.2	50	38	45	55	36.1	70	65	55
12	1.75	84.30	36.7	88	66	79	97	52.5	125	115	95
14	2	115	50.0	140	105	126	154	71.6	200	180	150
16	2	157	68.3	219	164	197	241	97.8	315	280	235
18	2.5	192	83.5	301	226	271	331	119.5	430	385	325
20	2.5	245	106.5	426	320	383	469	152.5	610	550	460
22	2.5	303	132.0	581	436	523	639	189.0	830	750	625
24	3	353	153.5	737	553	663	811	222.0	1065	960	800
27	3	459	198.5	1080	810	970	1130	286.0	1545	1390	1160
30	3.5	561	244.0	1460	1100	1320	1530	349.5	2095	1885	1575
33	3.5	694	302.0	1980	1490	1790	2090	432.5	2855	2570	2140
36	4	817	355.5	2560	1920	2300	2690	509.0	3665	3300	2750
42	4.5	1120	487.0	4090	3070	3680	4290	698.0	5865	5275	4395

NO. 5000059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-6. Torque Chart (METRIC Fasteners - Sheet 4 of 5)

Values for Magni Coated Fasteners (Ref 4150701)										
CLASS 8.8 METRIC (HEX/SOCKET HEAD) BOLTS CLASS 8 METRIC NUTS					CLASS 10.9 METRIC (HEX HEAD) BOLTS CLASS 10 METRIC NUTS CLASS 12.9 SOCKET HEAD CAP SCREWS M6 AND ABOVE*					
Size	PITCH	Tensile Stress Area	Clamp Load	Torque (Dry or Loctite® 263™) K=0.17	Torque (Loctite® 262™ OR Vibra-TITE™, 131) K=0.16	Torque (Loctite® 242™, 271™ OR Vibra-TITE™, 111 or 140) K=0.15	Clamp Load	Torque (Dry or Loctite® 263™) K = 0.17	Torque (Lub OR Loctite® 242™ or 271™ OR Vibra-TITE™, 111 or 140) K = 0.16	Torque (Loctite® 262™ OR Vibra-TITE™, 131) K=0.15
		Sq mm	KN	[N.m]	[N.m]	[N.m]	KN	[N.m]	[N.m]	[N.m]
3	0.5	5.03	2.19	1.1	1.1	1.0	3.13			
3.5	0.6	6.78	2.95	1.8	1.7	1.5	4.22			
4	0.7	8.78	3.82	2.6	2.4	2.3	5.47			
5	0.8	14.20	6.18	5.3	4.9	4.6	8.85			
6	1	20.10	8.74	9	8.4	7.9	12.5	13	12	11
7	1	28.90	12.6	15	14	13	18.0	21	20	19
8	1.25	36.60	15.9	22	20	19	22.8	31	29	27
10	1.5	58.00	25.2	43	40	38	36.1	61	58	55
12	1.75	84.30	36.7	75	70	66	52.5	105	100	95
14	2	115	50.0	119	110	105	71.6	170	160	150
16	2	157	68.3	186	175	165	97.8	265	250	235
18	2.5	192	83.5	256	240	225	119.5	365	345	325
20	2.5	245	106.5	362	340	320	152.5	520	490	460
22	2.5	303	132.0	494	465	435	189.0	705	665	625
24	3	353	153.5	627	590	555	222.0	905	850	800
27	3	459	199.5	916	860	810	286.0	1315	1235	1160
30	3.5	561	244.0	1245	1170	1100	349.5	1780	1680	1575
33	3.5	694	302.0	1694	1595	1495	432.5	2425	2285	2140
36	4	817	355.5	2176	2050	1920	509.0	3115	2930	2750
42	4.5	1120	487.0	3477	3275	3070	698.0	4985	4690	4395

NO. 5000059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-7. Torque Chart (METRIC Fasteners - Sheet 5 of 5)

SECTION 2. GENERAL

2.1 MACHINE PREPARATION, INSPECTION, AND MAINTENANCE

General

This section provides the necessary information needed by those personnel that are responsible to place the machine in operation readiness and maintain its safe operating condition. For maximum service life and safe operation, ensure that all the necessary inspections and maintenance have been completed before placing the machine into service. With proper care, maintenance, and inspections performed per JLG's recommendations, and with any and all discrepancies corrected, this product will be fit for continued use.

Preparation, Inspection, and Maintenance

It is important to establish and conform to a comprehensive inspection and preventive maintenance program. The following table outlines the periodic machine inspections and maintenance recommended by JLG Industries, Inc. Consult your national, regional, or local regulations for further requirements for aerial work platforms. The frequency of inspections and maintenance must be increased as environment, severity and frequency of usage requires.

Pre-Start Inspection

It is the User's or Operator's primary responsibility to perform a Pre-Start Inspection of the machine prior to use daily or at each change of operator. Reference the Operator's and Safety Manual for completion procedures for the Pre-Start Inspection. The Operator and Safety Manual must be read in its entirety and understood prior to performing the Pre-Start Inspection.

Pre-Delivery Inspection and Frequent Inspection

The Pre-Delivery Inspection and Frequent Inspection shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

The Pre-Delivery Inspection and Frequent Inspection procedures are performed in the same manner, but at different times. The Pre-Delivery Inspection shall be performed prior to each sale, lease, or rental delivery. The Frequent Inspection shall be accomplished for each machine in service for 3 months or 150 hours (whichever comes first); out of service for a period of more than 3 months; or when purchased used. The frequency of this inspection must be increased as environment, severity and frequency of usage requires.

Reference the JLG Pre-Delivery and Frequent Inspection Form and the Inspection and Preventive Maintenance Schedule for items requiring inspection during the performance of these inspections. Reference the appropriate areas of this manual for servicing and maintenance procedures.

Annual Machine Inspection

The Annual Machine Inspection must be performed on an annual basis, no later than thirteen (13) months from the date of the prior Annual Machine Inspection. JLG Industries recommends this task be performed by a Factory-Trained Service Technician. JLG Industries, Inc. recognizes a Factory-Trained Service Technician as a person who has successfully completed the JLG Service Training School for the subject JLG product model. Reference the machine Service and Maintenance Manual and appropriate JLG inspection form for performance of this inspection.

Reference the JLG Annual Machine Inspection Form and the Inspection and Preventive Maintenance Schedule for items requiring inspection during the performance of this inspection. Reference the appropriate areas of this manual for servicing and maintenance procedures.

For the purpose of receiving safety-related bulletins, it is important that JLG Industries, Inc. has updated ownership information for each machine. When performing each Annual Machine Inspection, notify JLG Industries, Inc. of the current machine ownership.

Preventative Maintenance

In conjunction with the specified inspections, maintenance shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

Reference the Preventive Maintenance Schedule and the appropriate areas of this manual for servicing and maintenance procedures. The frequency of service and maintenance must be increased as environment, severity and frequency of usage requires.

Table 2-1. Inspection and Maintenance

Type	Frequency	Primary Responsibility	Service Qualification	Reference
Pre-Start Inspection	Prior to use each day; or At each Operator change.	User or Operator	User or Operator	Operator and Safety Manual
Pre-Delivery Inspection	Prior to each sale, lease, or rental delivery.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form.
Frequent Inspection	In service for 3 months or 150 hours, whichever comes first; or Out of service for a period of more than 3 months; or purchased used.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form.
Annual Machine Inspection	Annually, no later than 13 months from the date of the prior inspection.	Owner, Dealer, or User	Factory-Trained Service Technician (Recommended)	Service and Maintenance Manual and applicable JLG inspection form.
Preventative Maintenance	At intervals as specified in the Service and Maintenance Manual.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual

2.2 SERVICE AND GUIDELINES

General

The following information is provided to assist you in the use and application of servicing and maintenance procedures contained in this book.

Safety and Workmanship

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

Cleanliness

1. The most important single item in preserving the long service life of a machine is to keep dirt and foreign materials out of the vital components. Precautions have been taken to safeguard against this. Shields, covers, seals, and filters are provided to keep air, fuel, and oil supplies clean; however, these items must be maintained on a scheduled basis in order to function properly.
2. At any time when air, fuel, or oil lines are disconnected, clear adjacent areas as well as the openings and fittings themselves. As soon as a line or component is disconnected, cap or cover all openings to prevent entry of foreign matter.
3. Clean and inspect all parts during servicing or maintenance, and assure that all passages and openings are unobstructed. Cover all parts to keep them clean. Be

sure all parts are clean before they are installed. New parts should remain in their containers until they are ready to be used.

Components Removal and Installation

1. Use adjustable lifting devices, whenever possible, if mechanical assistance is required. All slings (chains, cables, etc.) should be parallel to each other and as near perpendicular as possible to top of part being lifted.
2. Should it be necessary to remove a component on an angle, keep in mind that the capacity of an eyebolt or similar bracket lessens, as the angle between the supporting structure and the component becomes less than 90 degrees.
3. If a part resists removal, check to see whether all nuts, bolts, cables, brackets, wiring, etc., have been removed and that no adjacent parts are interfering.

Component Disassembly and Reassembly

When disassembling or reassembling a component, complete the procedural steps in sequence. Do not partially disassemble or assemble one part, then start on another. Always recheck your work to assure that nothing has been overlooked. Do not make any adjustments, other than those recommended, without obtaining proper approval.

Pressure-Fit Parts

When assembling pressure-fit parts, use a molybdenum disulfide base compound or equivalent to lubricate the mating surface.

Bearings

1. When a bearing is removed, cover it to keep out dirt and abrasives. Clean bearings in nonflammable cleaning solvent and allow to drip dry. Compressed air can be used but do not spin the bearing.
2. Discard bearings if the races and balls (or rollers) are pitted, scored, or burned.
3. If bearing is found to be serviceable, apply a light coat of oil and wrap it in clean (waxed) paper. Do not unwrap reusable or new bearings until they are ready to install.
4. Lubricate new or used serviceable bearings before installation. When pressing a bearing into a retainer or bore, apply pressure to the outer race. If the bearing is to be installed on a shaft, apply pressure to the inner race.

Gaskets

Check that holes in gaskets align with openings in the mating parts. If it becomes necessary to hand-fabricate a gasket, use gasket material or stock of equivalent material and thickness. Be sure to cut holes in the right location, as blank gaskets can cause serious system damage.

Bolt Usage and Torque Application

NOTICE

SELF LOCKING FASTENERS, SUCH AS NYLON INSERT AND THREAD DEFORMING LOCKNUTS, ARE NOT INTENDED TO BE REINSTALLED AFTER REMOVAL.

1. Always use new replacement hardware when installing locking fasteners. Use bolts of proper length. A bolt which is too long will bottom before the head is tight against its related part. If a bolt is too short, there will not be enough thread area to engage and hold the part properly. When replacing bolts, use only those having the same specifications of the original, or one which is equivalent.
2. Unless specific torque requirements are given within the text, standard torque values should be used on heat-treated bolts, studs, and steel nuts, in accordance with recommended shop practices. (See Torque Chart Section 1).

Hydraulic Lines and Electrical Wiring

Clearly mark or tag hydraulic lines and electrical wiring, as well as their receptacles, when disconnecting or removing them from the unit. This will assure that they are correctly reinstalled.

Hydraulic System

1. Keep the system clean. If evidence of metal or rubber particles are found in the hydraulic system, drain and flush the entire system.

2. Disassemble and reassemble parts on clean work surface. Clean all metal parts with non-flammable cleaning solvent. Lubricate components, as required, to aid assembly.

Lubrication

Service applicable components with the amount, type, and grade of lubricant recommended in this manual, at the specified intervals. When recommended lubricants are not available, consult your local supplier for an equivalent that meets or exceeds the specifications listed.

Battery

Clean battery using a non-metallic brush and a solution of baking soda and water. Rinse with clean water. After cleaning, thoroughly dry battery and coat terminals with an anti corrosion compound.

Lubrication and Servicing

Components and assemblies requiring lubrication and servicing are shown in the Lubrication Chart in Section 1.

2.3 LUBRICATION AND INFORMATION

Hydraulic System

1. The primary enemy of a hydraulic system is contamination. Contaminants enter the system by various means, e.g., using inadequate hydraulic oil, allowing moisture, grease, filings, sealing components, sand, etc., to enter when performing maintenance, or by permitting the pump to cavitate due to insufficient system warm-up or leaks in the pump supply (suction) lines..
2. The design and manufacturing tolerances of the component working parts are very close, therefore, even the smallest amount of dirt or foreign matter entering a system can cause wear or damage to the components and generally results in faulty operation. Every precaution must be taken to keep hydraulic oil clean, including reserve oil in storage. Hydraulic system filters should be checked, cleaned, and/or replaced as necessary, at the specified intervals required in the Lubrication Chart in Section 1. Always examine filters for evidence of metal particles.
3. Cloudy oils indicate a high moisture content which permits organic growth, resulting in oxidation or corrosion. If this condition occurs, the system must be drained, flushed, and refilled with clean oil.

4. It is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. Good grade mineral oils, with viscosities suited to the ambient temperatures in which the machine is operating, are recommended for use.

NOTE: *Metal particles may appear in the oil or filters of new machines due to the wear-in of meshing components.*

Hydraulic Oil

1. Refer to Section 1 for recommendations for viscosity ranges.
2. JLG recommends Mobilfluid 424 hydraulic oil, which has an SAE viscosity of 10W-30 and a viscosity index of 152.

NOTE: *Start-up of hydraulic system with oil temperatures below -15 degrees F (-26 degrees C) is not recommended. If it is necessary to start the system in a sub-zero environment, it will be necessary to heat the oil with a low density, 100VAC heater to a minimum temperature of -15 degrees F (-26 degrees C).*

3. The only exception to the above is to drain and fill the system with Mobil DTE 13 oil or its equivalent. This will allow start up at temperatures down to -20 degrees F (-29 degrees C). However, use of this oil will give poor performance at temperatures above 120 degrees F (49 degrees C). Systems using DTE 13 oil should not be operated at temperatures above 200 degrees F (94 degrees C) under any condition.

Changing Hydraulic Oil

1. Filter elements must be changed after the first 50 hours of operation and every 300 hours (unless specified otherwise) thereafter. If it is necessary to change the oil, use only those oils meeting or exceeding the specifications appearing in this manual. If unable to obtain the same type of oil supplied with the machine, consult local supplier for assistance in selecting the proper equivalent. Avoid mixing petroleum and synthetic base oils.
2. Use every precaution to keep the hydraulic oil clean. If the oil must be poured from the original container into another, be sure to clean all possible contaminants from the service container. Always clean the mesh element of the filter and replace the cartridge any time the system oil is changed.
3. While the unit is shut down, a good preventive maintenance measure is to make a thorough inspection of all hydraulic components, lines, fittings, etc., as well as a functional check of each system, before placing the machine back in service.

Lubrication Specifications

Specified lubricants, as recommended by the component manufacturers, are always the best choice, however, multi-purpose greases usually have the qualities which meet a variety of single purpose grease requirements. Should any question arise, regarding the use of greases in maintenance stock, consult your local supplier for evaluation. Refer to Section 1 for an explanation of the lubricant key designations appearing in the Lubrication Chart.

2.4 CYLINDER DRIFT TEST

Theory

When a hydraulic cylinder is supporting a load, cylinder drift may occur as a result of any of the circumstances below:

- Normal leakage of load holding valves or malfunction of load holding valves. See Cylinder Leakage Test and "Cylinder Drift" below for evaluation.
- Damaged or worn piston seals.
- Normal thermal expansion or contraction of the hydraulic oil within cylinders (See Cylinder Thermal Drift below).

The first two circumstances may result in cylinder movement due to oil leaking out of the cylinder externally or by leaking back to tank or due to oil leaking internally from one cylinder chamber to the other.

Thermal expansion or contraction of oil in hydraulic cylinders is a normal occurrence and does not result in oil leaking out of the cylinder or leaking internally from one cylinder chamber to the other. Thermal expansion or contraction is the tendency for materials to change size in response to a change in temperature.

Cylinder Leakage Test

Cylinder oil must be at stabilized ambient temperature before beginning this test.

Measure drift at cylinder rod with a calibrated dial indicator.

In an area free of obstructions, cylinder must have load applied and appropriately positioned to detect drift.

Cylinder leakage is acceptable if it passes this test.

Table 2-2. Cylinder Drift

Cylinder Bore Diameter		Max. Acceptable Drift in 10 Minutes	
inches	mm	inches	mm
3	76.2	0.026	0.66
3.5	89	0.019	0.48
4	101.6	0.015	0.38
5	127	0.009	0.22
6	152.4	0.006	0.15
7	177.8	0.005	0.13
8	203.2	0.004	0.10
9	228.6	0.003	0.08

NOTE: The information is based on 6 drops per minute cylinder leakage.

Cylinder Thermal Drift

The oil in all hydraulic cylinders will expand or contract due to thermal effects over time and may result in changes to the boom and/or platform position while the machine is stationary. These effects occur as the cylinder oil changes temperature, usually from a higher oil temperature as it cools and approaches the ambient air temperature. Results of these effects are related to several factors including cylinder length and change in temperature over the time the cylinder remains stationary.

2.5 PINS AND COMPOSITE BEARING REPAIR GUIDELINES

Filament wound bearings.

1. Pinned joints should be disassembled and inspected if the following occurs:
 - a. Excessive sloppiness in joints.
 - b. Noise originating from the joint during operation.
2. Filament wound bearings should be replaced if any of the following is observed:
 - a. Frayed or separated fibers on the liner surface.
 - b. Cracked or damaged liner backing.
 - c. Bearings that have moved or spun in their housing.
 - d. Debris embedded in liner surface.
3. Pins should be replaced if any of the following is observed (pin should be properly cleaned prior to inspection):
 - a. Detectable wear in the bearing area.
 - b. Flaking, peeling, scoring, or scratches on the pin surface.
 - c. Rusting of the pin in the bearing area.
4. Re-assembly of pinned joints using filament wound bearings.
 - a. Housing should be blown out to remove all dirt and debris... bearings and bearing housings must be free of all contamination.
 - b. Bearing / pins should be cleaned with a solvent to remove all grease and oil...filament wound bearing are a dry joint and should not be lubricated unless otherwise instructed (i.e. sheave pins).
 - c. Pins should be inspected to ensure it is free of burrs, nicks, and scratches which would damage the bearing during installation and operation.

2.6 WELDING ON JLG EQUIPMENT

NOTE: This instruction applies to repairs, or modifications to the machine and to welding performed from the machine on an external structure, or component.

Do the Following When Welding on JLG Equipment

- Disconnect the battery.
- Disconnect the moment pin connection (where fitted).
- Ground only to structure being welded.

Do NOT Do the Following When Welding on JLG Equipment

- Ground on frame and weld on any other area than the chassis.
- Ground on turntable and weld on any other area than the turntable.
- Ground on the platform/support and weld on any other area than the platform/support.
- Ground on a specific boom section and weld on any other area than that specific boom section.
- Allow pins, wear pads, wire ropes, bearings, gearing, seals, valves, electrical wiring, or hoses to be between the grounding position and the welded area.

NOTICE

FAILURE TO COMPLY WITH THE ABOVE REQUIREMENTS MAY RESULT IN COMPONENT DAMAGE (I.E. ELECTRONIC MODULES, SWING BEARING, COLLECTOR RING, BOOM WIRE ROPES ETC.).

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	Inspections	
	Pre-Delivery ¹ or Frequent ² (Quarterly) Inspection	Annual ³ (Yearly) Inspection
Boom Assembly		
Boom Weldments	1,2	1,2
Hose/Cable Carrier Installations	1,2	1,2
Pivot Pins and Pin Retainers	1,2	1,2
Sheaves, Sheave Pins	1,2	1,2
Bearings	1,2	1,2
Wear Pads	1,2	1,2
Covers or Shields	1,2	1,2
Extend/Retract Chain or Cable Systems ⁴	1,2	1,2
Platform Assembly		
Railing	2	2
Gate	1,2,3	1,2,3
Floor	2	2
Rotator	1,2,3,4	1,2,3,4
Lanyard Anchorage Point	1,2,6	1,2,6
Turntable Assembly		
Swing Bearing or Worm Gear	1 ⁵⁰ , 2	1 ⁵⁰ , 2
Oil Coupling	4	4
Swing Drive System	1,4	1,4
Turntable Lock	1,2,3	1,2,3
Hood, Hood Props, Hood Latches	3	3
Chassis Assembly		
Tires	1,2	1,2
Wheel Nuts/Bolts	1 ⁵⁰	1 ⁵⁰
Wheel Bearings		1,2,4,5
Oscillating Axle/Lockout Cylinder Systems		1,2,4,5
Extendable Axle Systems	3	3
Steer Components		1,2
Spindle Thrust Bearing/Washers		1,2
Drive Hubs	1,4	1,4

SECTION 2 - GENERAL

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	Inspections	
	Pre-Delivery ¹ or Frequent ² (Quarterly) Inspection	Annual ³ (Yearly) Inspection
Functions/Controls		
Platform Controls return to neutral/off when released	1,3,6,9	1,3,6,9
Ground Controls return to neutral/off when released	1,3,6,9	1,3,6,9
Function Control Locks, Guards, or Detents	1,3,9	1,3,9
Footswitch (shuts off function when released)	1,3,9	1,3,9
Emergency Stop Switches (Ground & Platform) arrest all platform movement	1,3,6	1,3,6
Function Limit or Cutout Switch Systems	1,3,9	1,3,9
Capacity Indicator	1,3,9	1,3,9
Drive Brakes	1,3,9	1,3,9
Swing Brakes	1,3,9	1,3,9
Auxiliary Power	1,3,9	1,3,9
Power System		
Engine Idle, Throttle, and RPM	1,3,7	1,3,7
Engine Fluids: Oil	4	4
Engine Fluids: Coolant	1,4,7	1,4,7
Air Filter	1,4	1,4
Fuel Filter(s)	1,5	1,5
Drain Oil Build Up in 2-Stage Vaporizer (LP Only)	1,4	1,4
Exhaust System	1,4	1,4
Batteries	1,4	1,4
Battery Fluid	4	4
Battery Charger	1,3	1,3
Intake System	1,2	1,2
Glow Plug (Diesel Only)	1,2,3	1,2,3
Serpentine Belt, Tensioner, Pulleys	1,2,3	1,2,3
Fuel Reservoir, Cap, and Breather	1,2,4	1,2,4
Hydraulic/Electric System		
Hydraulic Pumps	1,2,4	1,2,4
Hydraulic Cylinders	1,2,4,5	1,2,4,5
Cylinder Attachment Pins and Pin Retainers	1,2	1,2
Hydraulic Hoses, Lines, and Fittings	1,2,4	1,2,3,4
Hydraulic Reservoir, Cap, and Breather	1,2,3,4,5	1,2,3,4,5
Hydraulic Filter(s)	1,4,5	1,4,5
Hydraulic Fluid	4,5	4,5
Electrical Connections	1,2	1,2
Instruments, Gauges, Switches, Lights, Horn		1,3

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	Inspections	
	Pre-Delivery ¹ or Frequent ² (Quarterly) Inspection	Annual ³ (Yearly) Inspection
General		
All Decals/Placards Installed, Secure, Legible	9	9
Annual Machine Inspection Due		9
No Unauthorized Modifications or Additions	9	9
All Relevant Safety Publications Incorporated	9	9
General Structural Condition and Welds	2	2
All Fasteners, Pins, Shields, and Covers	1,2	1,2
Grease and Lubricate to Specifications	9	9
Function Test of All Systems	9	9
Paint and Appearance	5	5
Stamp Inspection Date on Frame		9
Notify JLG of Machine Ownership		9
Footnotes:		
¹ Prior to each sale, lease, or delivery		
² In service for 3 months; Out of service for 3 months or more; Purchased used		
³ Annually, no later than 13 months from the date of the prior inspection, Includes all daily and quarterly inspections, mandated by regulating body		
⁴ Replace every 12 years or 7,000 hours		
⁵⁰ Indicates a 50 hour interval required to perform task after initial use of machine. This only occurs once in machine life		
²⁵⁰ Indicates a 250 hour interval required to perform task after initial use of machine. This only occurs once in machine life		
Performance Codes:		
1 - Check for proper and secure: installation, adjustment, or torque		
2 - Visual inspection for damage: (cracks, corrosion, abrasions, distortion, excessive wear, broken welds, gouges, chafing and threads showing)		
3 - Proper operation		
4 - Check for proper sealing, signs of leakage and fluid level		
5 - Clean and free of debris		
6 - Decals installed and legible		
7 - Check for proper tolerances, routing, and lubrication		
8 - Fully Charged		
9 - Verify/Perform		

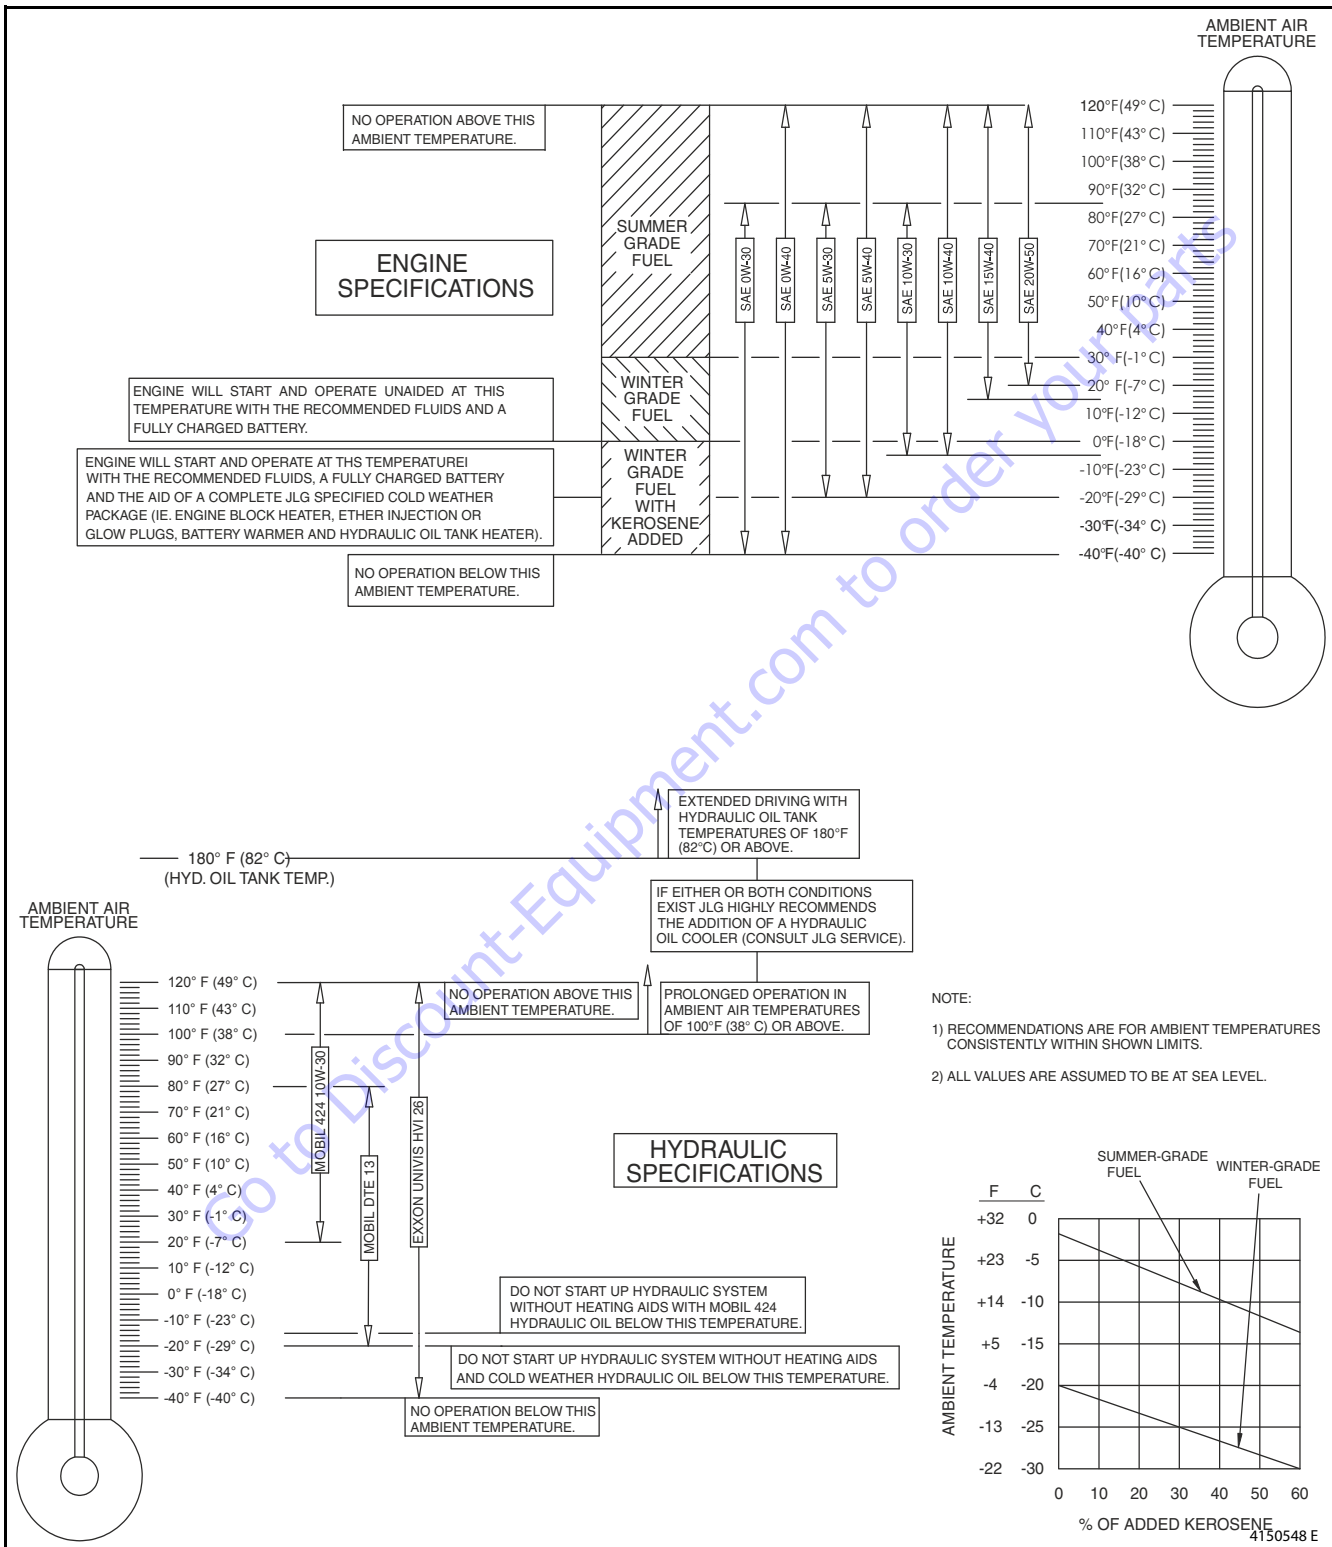


Figure 2-1. Engine and Hydraulic Operating Temperature Specifications - Deutz

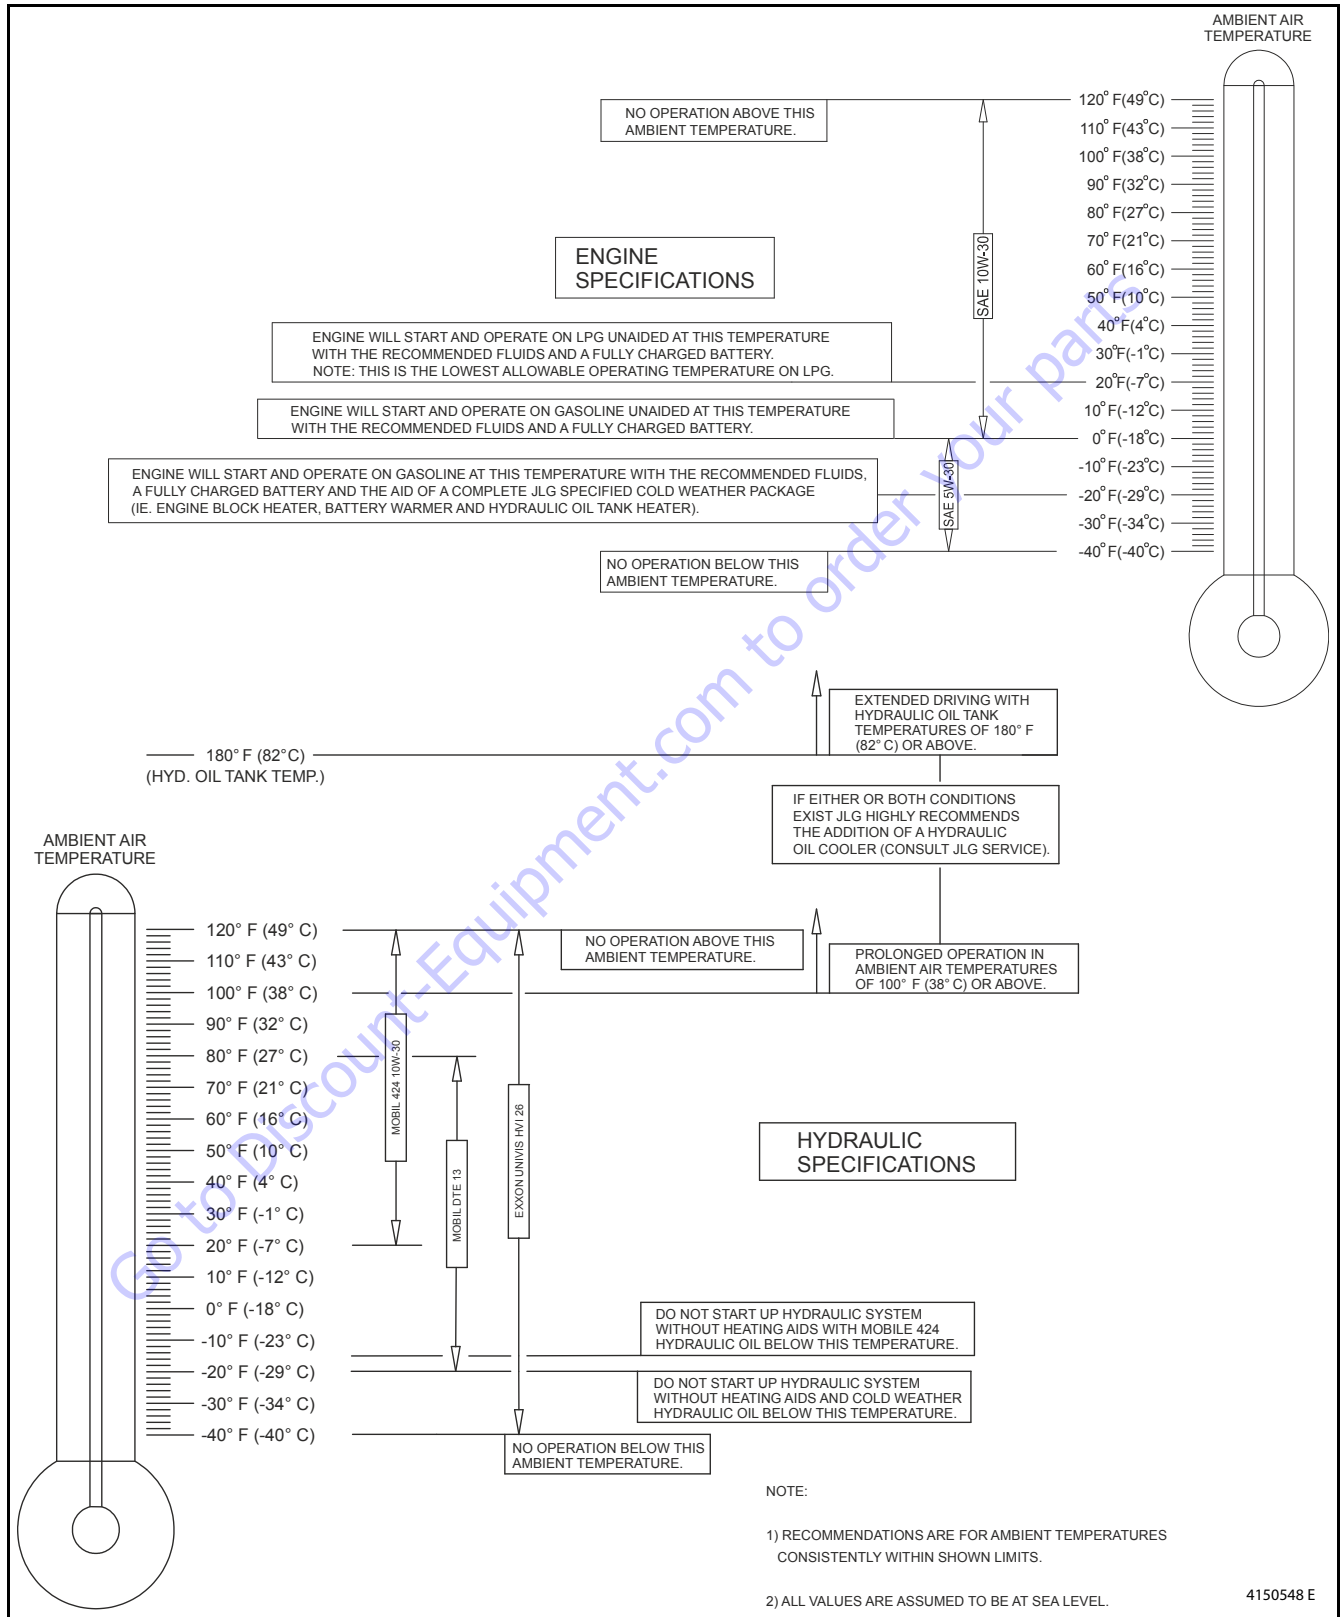


Figure 2-2. Engine and Hydraulic Operating Temperature Specifications - GM

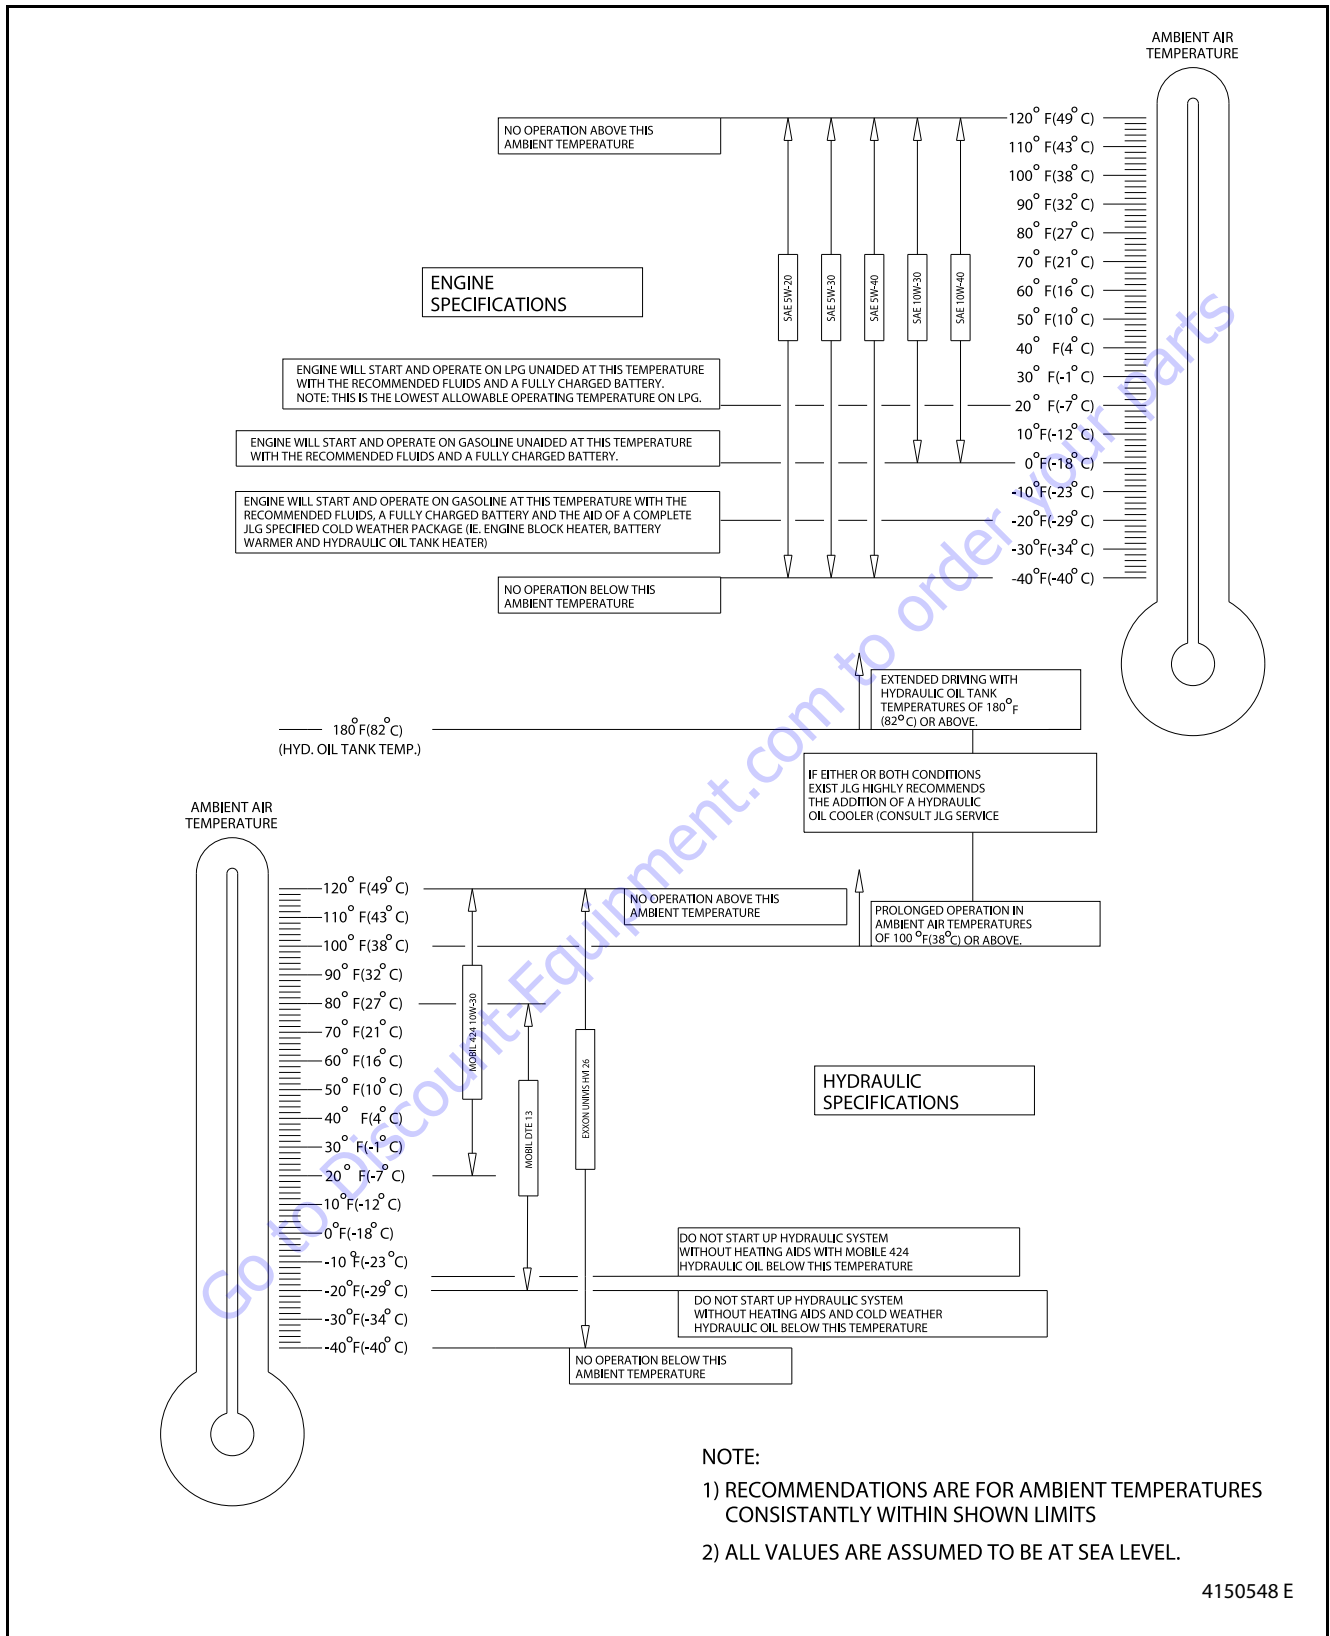


Figure 2-3. Engine and Hydraulic Operating Temperature Specifications - Ford MSG 425

SECTION 3. CHASSIS & TURNTABLE

3.1 TIRES & WHEELS.

Tire Inflation

The air pressure for pneumatic tires must be equal to the air pressure that is stenciled on the side of the JLG product or rim decal for safe and proper operational characteristics.

Tire Damage

For pneumatic tires, JLG Industries, Inc. recommends that when any cut, rip, or tear is discovered that exposes sidewall or tread area cords in the tire, measures must be taken to remove the JLG product from service immediately. Arrangements must be made for replacement of the tire or tire assembly.

For polyurethane foam filled tires, JLG Industries, Inc. recommends that when any of the following are discovered, measures must be taken to remove the JLG product from service immediately and arrangements must be made for replacement of the tire or tire assembly.

- a smooth, even cut through the cord plies which exceeds 3 in. (7.5 cm) in total length.
- any tears or rips (ragged edges) in the cord plies which exceeds 1 in. (2.5 cm) in any direction.
- any punctures which exceed 1 in. in diameter.
- any damage to the bead area cords of the tire.

If a tire is damaged but is within the above noted criteria, the tire must be inspected on a daily basis to ensure the damage has not propagated beyond the allowable criteria.

Tubes may be installed inside of tires that meet the criteria outlined above for useable tires, only to eliminate small air leaks (i.e., bead leaks, small nail puncture, etc.). Radial nail hole repairs up to 3/8 inch diameter may be made by using an industry approved commercial/industrial tire repair procedure, such as an internally applied plug and liner patch repair system, provided the nail hole is at least one inch inside the shoulder. Do not attempt any section repairs or repairs to the shoulder or sidewall areas.

Tire Replacement

JLG recommends a replacement tire be the same size, ply and brand as originally installed on the machine. Please refer to the JLG Parts Manual for the part number of the approved tires for a particular machine model. If not using a JLG approved replacement tire, we recommend that replacement tires have the following characteristics:

- Equal or greater ply/load rating and size of original.
- Tire tread contact width equal or greater than original.

- Wheel diameter, width and offset dimensions equal to the original.
- Approved for the application by the tire manufacturer (including inflation pressure and maximum tire load).

Unless specifically approved by JLG Industries Inc. do not replace a foam filled or ballast filled tire assembly with a pneumatic tire. When selecting and installing a replacement tire, ensure that all tires are inflated to the pressure recommended by JLG. Due to size variations between tire brands, both tires on the same axle should be the same and all four tires should contain the same fill media.

Wheel Replacement

The rims installed on each product model have been designed for stability requirements which consist of track width, tire pressure, and load capacity. Size changes such as rim width, center piece location, larger or smaller diameter, etc., without written factory recommendations, may result in an unsafe condition regarding stability.

Wheel Installation

It is extremely important to apply and maintain proper wheel mounting torque.


⚠ WARNING

WHEEL NUTS MUST BE INSTALLED AND MAINTAINED AT THE PROPER TORQUE TO PREVENT LOOSE WHEELS, BROKEN STUDS, AND POSSIBLE DANGEROUS SEPARATION OF WHEEL FROM THE AXLE. BE SURE TO USE ONLY THE NUTS MATCHED TO THE CONE ANGLE OF THE WHEEL.

Tighten the lug nuts to the proper torque to prevent wheels from coming loose. Use a torque wrench to tighten the fasteners. If you do not have a torque wrench, tighten the fasteners with a lug wrench, then immediately have a service garage or dealer tighten the lug nuts to the proper torque. Over-tightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels. The proper procedure for attaching wheels is as follows:

1. Start all nuts by hand to prevent cross threading. DO NOT use a lubricant on threads or nuts.

- Tighten nuts in the following sequence:

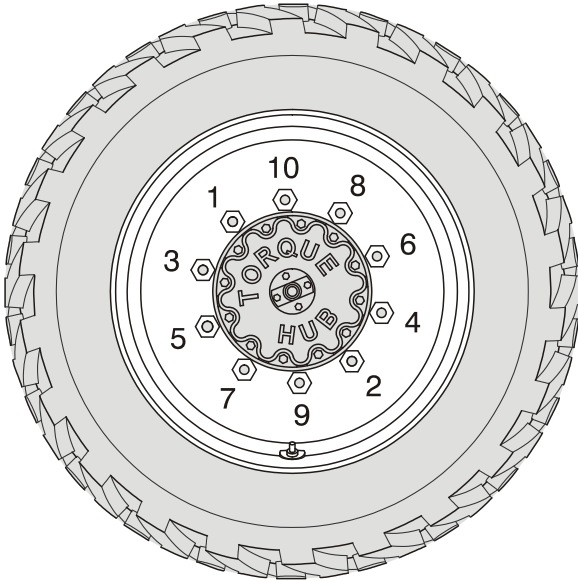

- The tightening of the nuts should be done in stages. Following the recommended sequence, tighten nuts per wheel torque chart.


Table 3-1. Wheel Torque Chart

TORQUE SEQUENCE		
1st Stage	2nd Stage	3rd Stage
70 ft. lbs. (95 Nm)	170 ft. lbs. (225 Nm)	300 ft. lbs. (405 Nm)


- Wheel nuts should be torqued after first 50 hours of operation and after each wheel removal. Check torque every 3 months or 150 hours of operation.

3.2 LOCKOUT CYLINDER BLEEDING

- Start the engine.
- Position the turntable to the normal stowed position.
- Attach clear tubing to bleeder valve nipple.
- Position a small bucket/bottle in front of the lockout cylinder bleeder valve and insert clear tubing.
- Using a 3/8" wrench, loosen the bleeder valve, turning counterclockwise slowly. Bleed air from the top of lockout cylinder. Capture hydraulic oil until a steady unbroken stream of hydraulic oil is viewed. Tighten/close the bleeder valve while stream of hydraulic oil is running.
- Locate the bleeder valve on the opposite side lockout cylinder. Repeat the process.

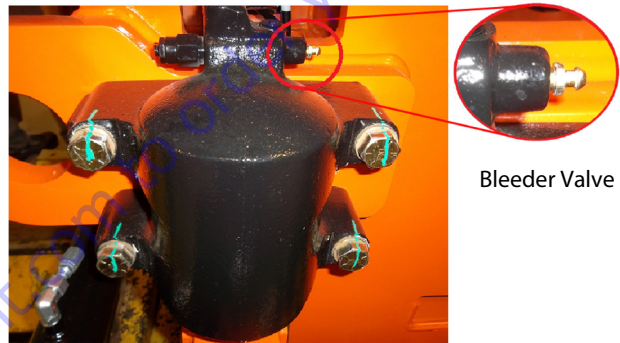


Bleeder Valve

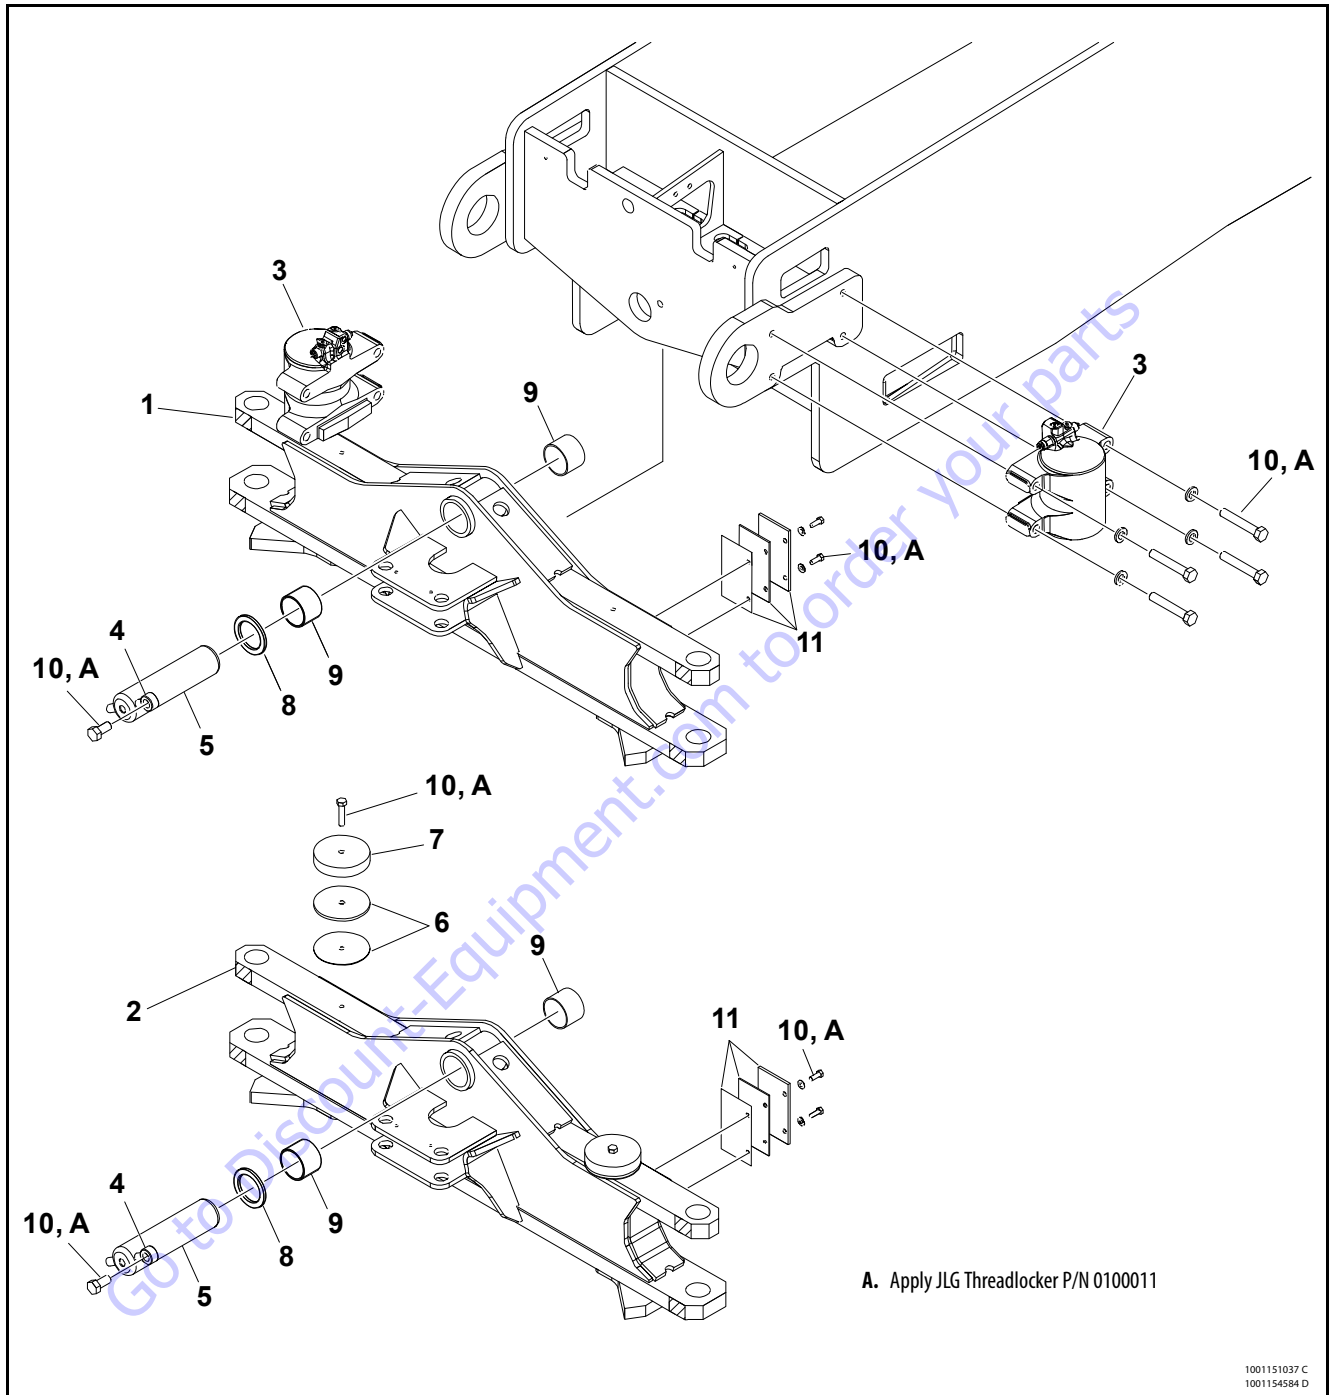

- | | | | |
|--------------------------|-------------------|---------------|----------|
| 1. Oscillating Axle | 4. Keeper Pin | 7. Stop Plate | 10. Bolt |
| 2. Fixed Axle | 5. Axle Pivot Pin | 8. Washer | 11. Shim |
| 3. Axle Lockout Cylinder | 6. Shim | 9. Bushing | |

Figure 3-1. Axle Installation

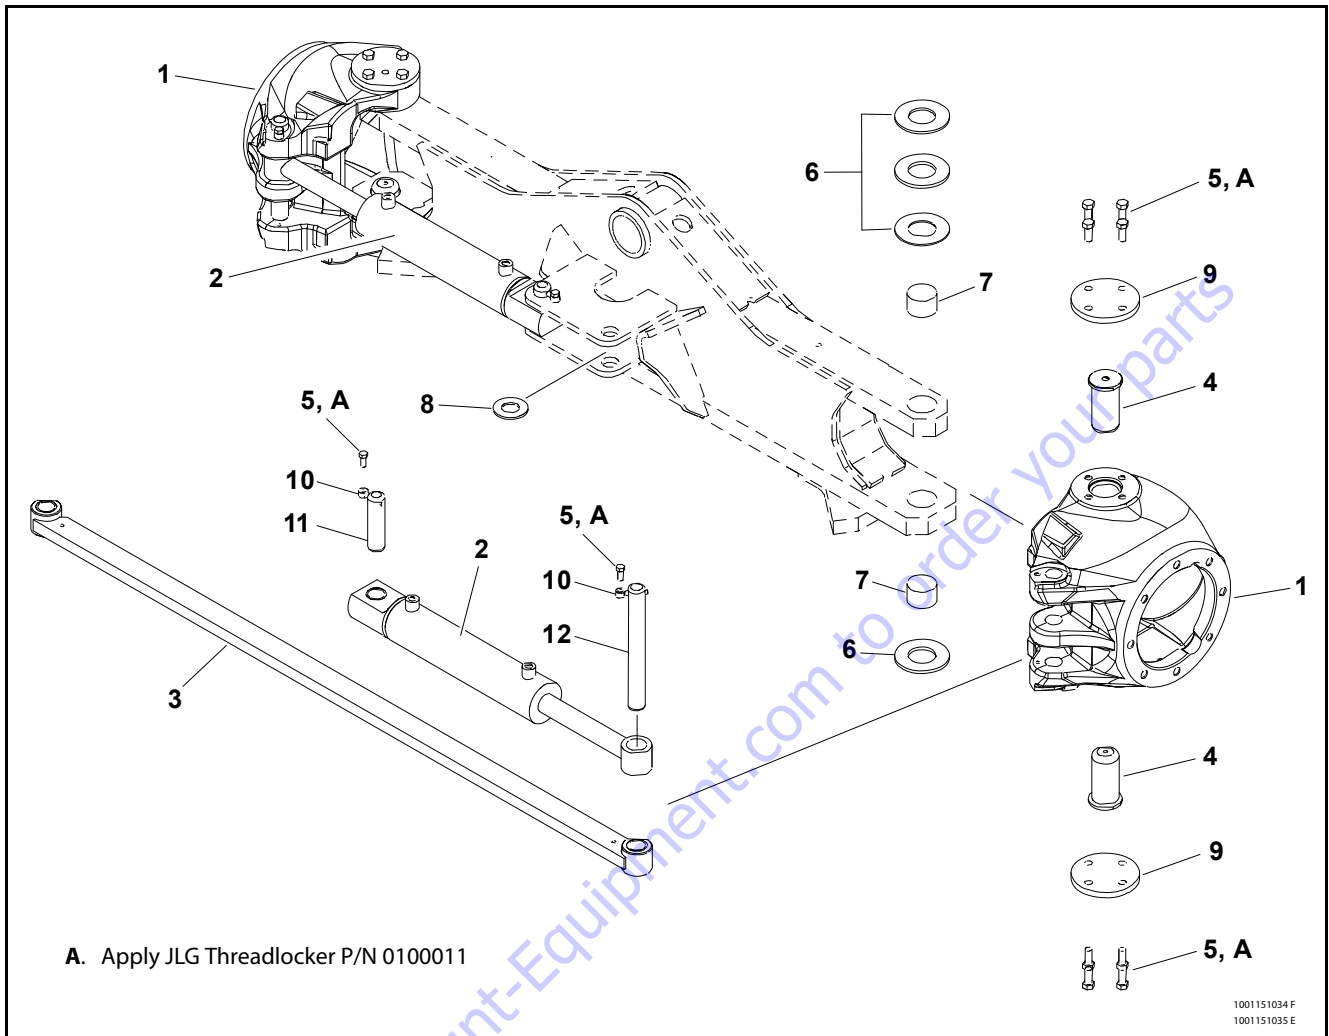

- | | | | |
|-------------------|------------------|----------------------|------------------------|
| 1. Drive Spindle | 4. Kingpin | 7. Composite Bearing | 10. Keeper PIN |
| 2. Steer Cylinder | 5. Bolt | 8. Thrust Washer | 11. Cylinder Pivot Pin |
| 3. Tie Rod | 6. Thrust Washer | 9. Retaining Plate | 12. Cylinder Pivot Pin |

Figure 3-2. Steering Installation


3.3 OSCILLATING AXLE LOCKOUT TEST

NOTICE

LOCKOUT SYSTEM TEST MUST BE PERFORMED QUARTERLY, ANY TIME A SYSTEM COMPONENT IS REPLACED, OR WHEN IMPROPER SYSTEM OPERATION IS SUSPECTED.


NOTE: *Ensure boom is fully retracted, lowered, and centered between drive wheels prior to beginning lockout cylinder test.*

1. Place a 6 inch (15.2 cm) high block with ascension ramp in front of left front wheel.
2. From platform control station, activate machine hydraulic system.
3. Place FUNCTION SPEED CONTROL and DRIVE SPEED/TORQUE SELECT control switches to their respective LOW positions.
4. Place DRIVE control lever to FORWARD position and carefully drive machine up ascension ramp until left front wheel is on top of block.
5. Carefully activate SWING control lever and position boom over right side of machine.
6. With boom over right side of machine, place DRIVE control lever to REVERSE and drive machine off of block and ramp.
7. Have an assistant check to see that left front wheel remains locked in position off of ground.
8. Carefully activate SWING control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary activate DRIVE to release cylinders.
9. Place the 6 inch (15.2 cm) high block with ascension ramp in front of right front wheel.
10. Place DRIVE control lever to FORWARD and carefully drive machine up ascension ramp until right front wheel is on top of block.
11. Carefully activate SWING control lever and position boom over left side of machine.
12. With boom over left side of machine, place DRIVE control lever to REVERSE and drive machine off of block and ramp.
13. Have an assistant check to see that right front wheel remains locked in position off of ground.
14. Carefully activate SWING control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary activate DRIVE to release cylinders.
15. If lockout cylinders do not function properly, have trained personnel correct the malfunction prior to any further operation

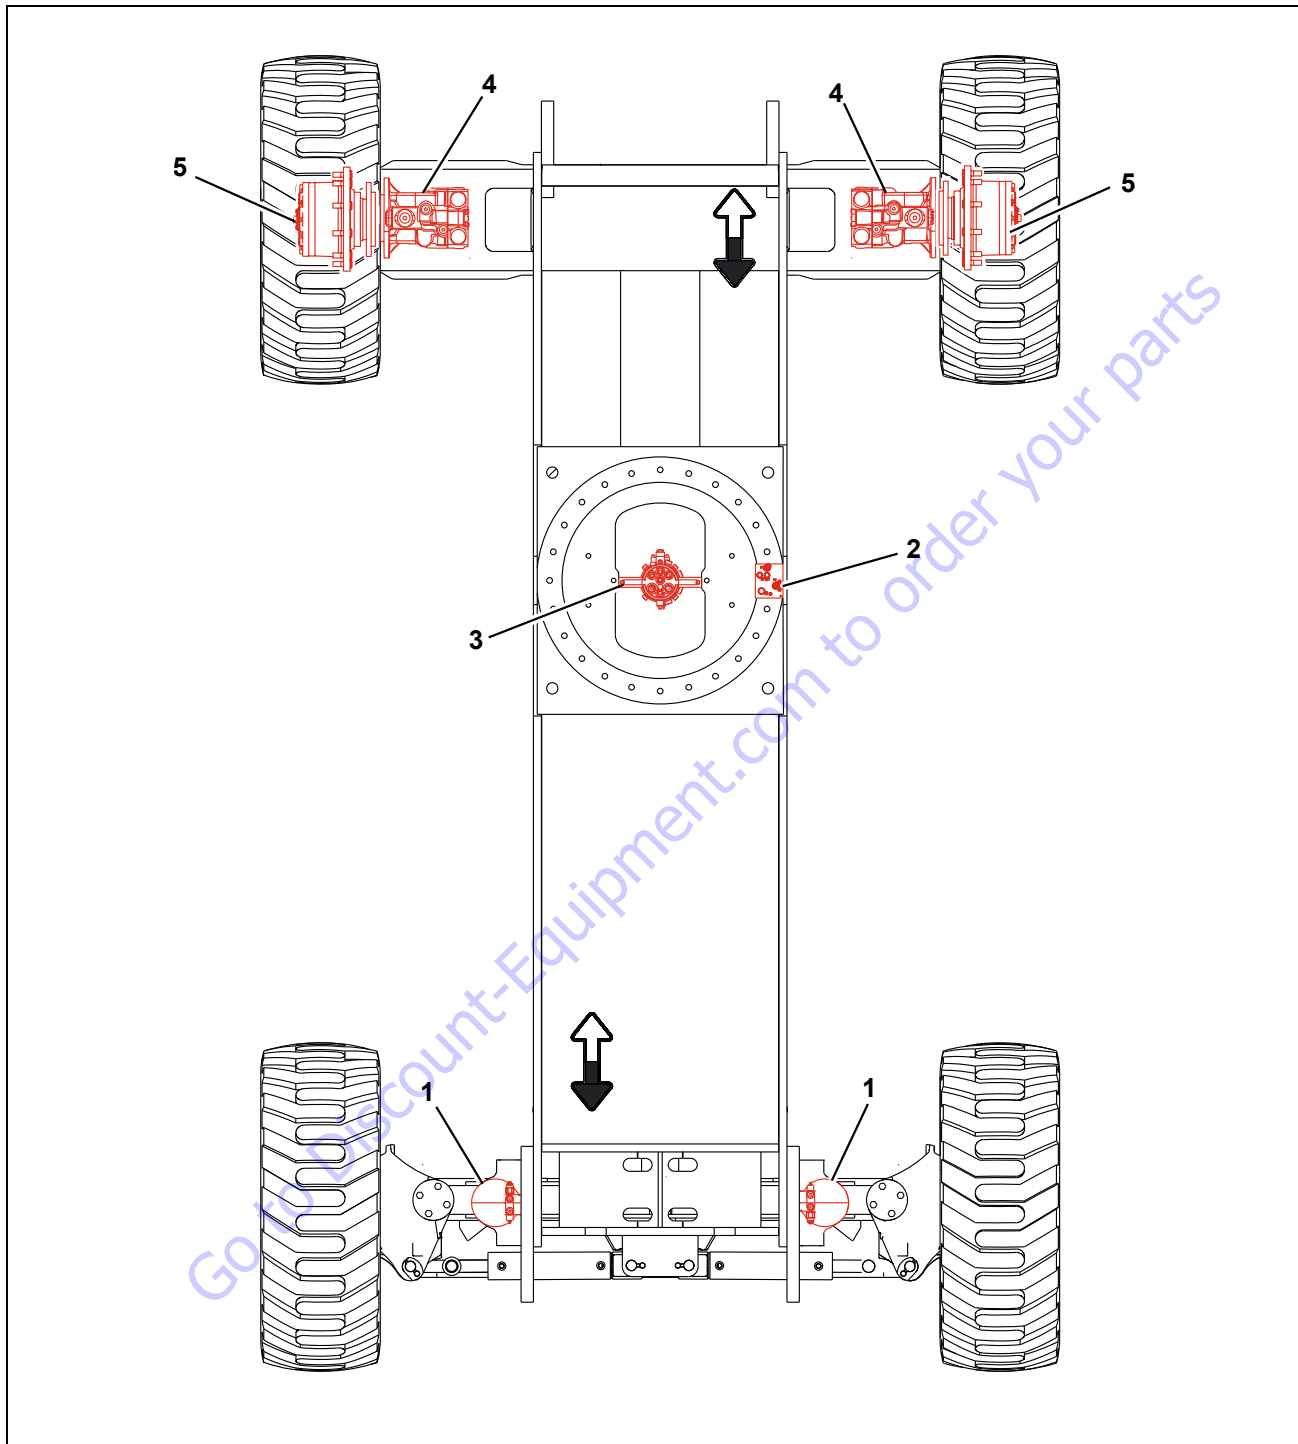

- 1. Axle Lockout Cylinder
- 2. Flow Drive Valve
- 3. Swivel
- 4. Drive Motor
- 5. Drive Hub

Figure 3-3. Chassis Component Location

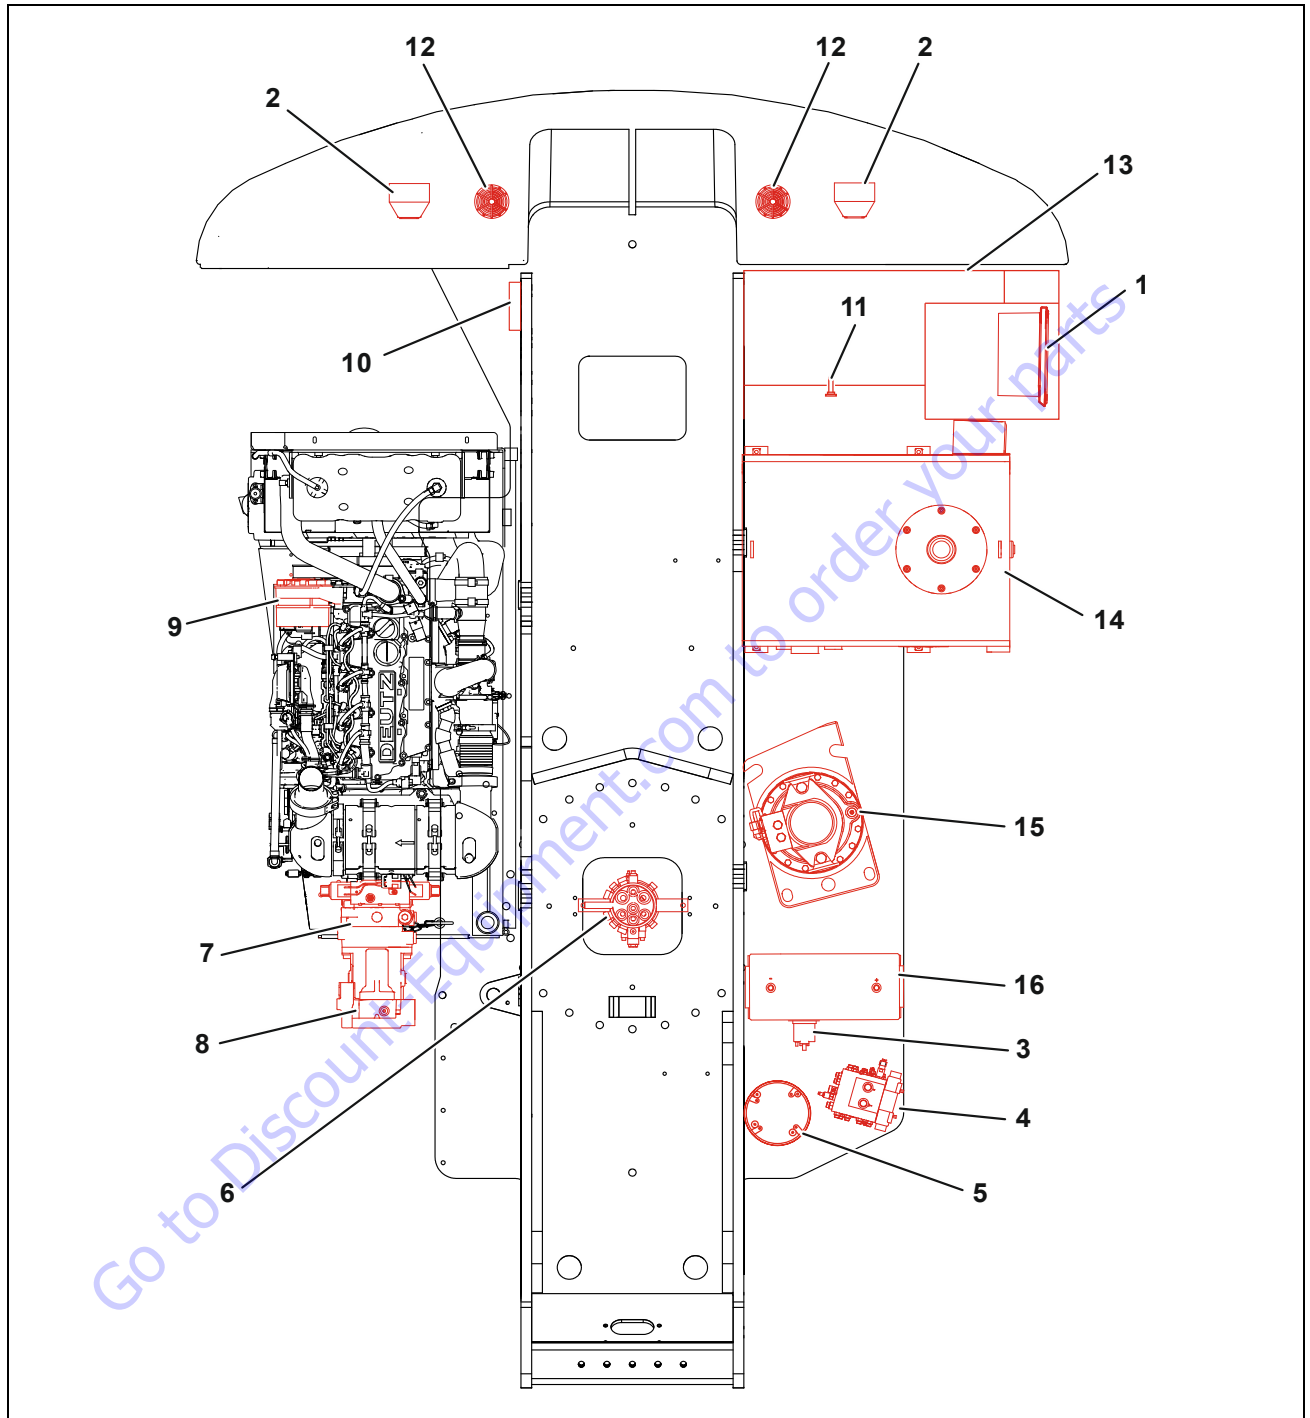

- | | | | |
|--------------------------|-------------------------|---|------------------------|
| 1. Ground Control Box | 5. Auxiliary Power Pump | 9. Generator | 13. Fuel Tank |
| 2. Headlight | 6. Swivel | 10. Deutz Module & Diagnostic Connector | 14. Hydraulic Oil Tank |
| 3. Auxiliary Power Relay | 7. Drive Pumps | 11. Fuel Level Sensor | 15. Swing Drive |
| 4. Main Control Valve | 8. Function Pump | 12. Strobe | 16. Battery |

Figure 3-4. Turntable Component Location

3.4 DRIVE HUB (TORQUE)

Disassembly

1. Position hub over suitable container and remove drain plugs (10) from unit. Allow oil to completely drain, then replace drain plugs.
2. Remove bolts (41) securing cover assembly to hub (7). Remove cover assembly (23) and discard o-ring seal (22).
3. Lift carrier assembly and top thrust washer and thrust bearing(39, 40) from hub. Thrust washer may stick inside cover.
4. Pry ring gear (21) loose from hub and remove it. Remove o-ring seal (22) from hub counterbore and discard it.
5. Remove input gear (37) and thrust spacer (36) from input shaft assembly and remove input shaft assembly from hub.
6. Lift internal gear (12) and thrust washer and thrust bearing (39, 40) from hub. Thrust washer may stick to bottom of carrier.
7. Remove retaining ring (9) from spindle (1) and discard; lift hub from spindle.

CAUTION

EYE PROTECTION SHOULD BE WORN DURING RETAINING RING REMOVAL.

8. Remove inside bearing cone (6) and bearing shim (8).
9. If necessary, pry seal (2) out of hub using screwdriver or pry bar. With seal removed, outside bearing cone (4) can be removed.
10. If necessary, remove inner and outer bearing cups (3, 5) using a suitable slide hammer puller or driven out with a punch.
11. To remove the cluster gears from the carrier, drive the anti-roll pin into the planet shaft of the cluster gear. After the planet shaft is removed, the roll pin should be driven out of the planet shaft.

NOTICE

WHEN REBUILDING TORQUE HUB, REMOVE AND REPLACE ALL O-RINGS AND RETAINING RINGS.

Cleaning and Inspection


1. Thoroughly clean all parts in an approved cleaning solvent.
2. Inspect bearing cups and cones for damage, pitting, corrosion, or excessive wear. If necessary, replace bearings as a complete set ensuring that they remain covered until use.

3. Inspect bearing mounting surfaces on spindle, hub, input shaft and carrier. Replace components as necessary.
4. Inspect all geared components for chipped or broken teeth and for excessive or uneven wear patterns.
5. Inspect carrier for damage, especially in anti-roll pin and planet shaft hole areas.
6. Inspect all planet shafts for scoring or other damage.
7. Inspect all threaded components for damage including stretching, thread deformation, or twisting.
8. Inspect seal mounting area in hub for burrs or sharp edges. Dress applicable surfaces or replace components as necessary.
9. Inspect cover for cracks or other damage, and o-ring sealing area for burrs or sharp edges. Dress applicable surfaces or replace cover as necessary.

Repair

1. Cover Assembly.
 - a. Remove two bolts (25) securing disconnect cap (26) to cover (23) and remove cap.
 - b. Remove two bolts (25) securing cover cap (24) to cover and remove cap.
 - c. Remove disconnect rod (27) from cap and remove o-rings (28, 29) from cover cap. Discard o-rings.
 - d. If necessary, remove pipe plug (30) from cover.
 - e. Clean and inspect parts in accordance with Cleaning and Inspection procedures. Replace parts as necessary.
 - f. If removed, screw pipe plug into cover.
 - g. Slip o-ring (29) over cover cap and against face.
 - h. Place o-ring (28) into cover cap internal groove. Disconnect rod may be used to push o-ring into groove.
 - i. Place cover cap into cover with large hole located over pipe plug. Secure cover cap to cover with two bolts. Torque bolts to 70-80 in. lbs. (7.9-9.0 Nm).
 - j. Place disconnect cap over cover cap with nipple facing out and secure with two bolts. Torque bolts to 70-80 in. lbs. (7.9-9.0 Nm).
 - k. Turn cover over and push disconnect rod into cover cap. Rod will be held in place by friction from o-ring.
2. Carrier Assembly.
 - a. Drive anti-roll pin (19) into planet shaft (17) using a suitable punch.
 - b. Using a suitable press, press planet shaft from carrier (13). After planet shaft is removed, drive anti-roll pin from shaft.
 - c. Remove cluster gear (18) and thrust washers (14) from carriers.

- d. Remove needle rollers (15) from cluster gear bore.
- e. Remove spacer (16) from cluster gear bore and remove second set of needle rollers (15).
- f. Repeat steps (a) through (e) for remaining two cluster gears.
- g. Clean and inspect all parts in accordance with Cleaning and Inspection procedures. Replace parts as necessary.
- h. Apply a coat of grease or petroleum jelly to cluster gear bore.

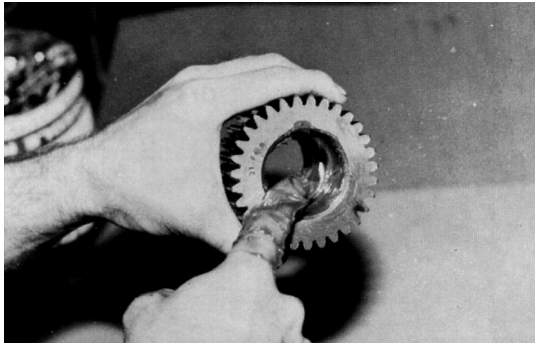


- i. Place needle rollers into cluster gear bore.




- j. Place spacer into opposite side of cluster gear and against needle rollers.



- k. Place second set of needle rollers into cluster gear.
- l. Apply grease or petroleum jelly to tang side of two thrust washers. Place thrust washers against bosses in carrier with washer tang fitting into slot in carrier outside diameter.

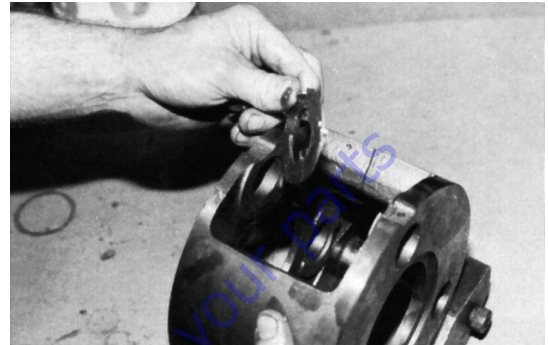

- m. While keeping thrust washers in place, slide cluster gear into carrier with larger gear on side with small pin hole.

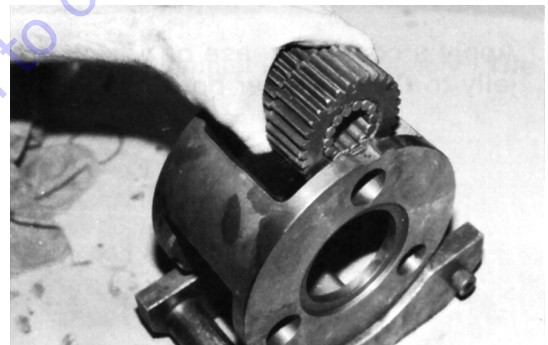


- n. Line up cluster gear and thrust washers with hole in carrier and slide planet shaft through. Ensure chamfered side of hole in planet shaft is lined up with pin hole in carrier.



SECTION 3 - CHASSIS & TURNTABLE

- o. Drive anti-roll pin flush into carrier hole, locking planet shaft into place.

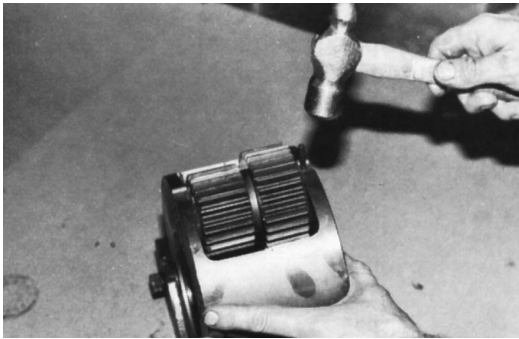

- p. Repeat steps (h) through (o) for remaining two cluster gears.

3. Input Shaft Assembly.

⚠ CAUTION

EYE PROTECTION SHOULD BE WORN DURING RETAINING RING REMOVAL AND INSTALLATION

- a. Carefully remove retaining ring (33) from counterbore in the spindle (1) and discard retaining ring.
- b. Remove two washers (31) and spring (32) from input shaft.
- c. Clean and inspect all parts in accordance with Cleaning and Inspection procedures. Replace parts as necessary.
- d. Place washer (31), spring (32), and washer (31), in that order, onto input shaft.

Assembly

1. Using a suitable press, press new bearing cups (3, 5), with large inside diameters facing out, into hub (7) counterbores.




2. Place bearing cone (4) into bearing cup (3) in small end of hub.



3. Press new seal (2) into hub counterbore with flat metal side facing in. Use a flat object to ensure that seal is pressed evenly and is flush with hub face.




4. Lower hub onto spindle (1) with large open end up.

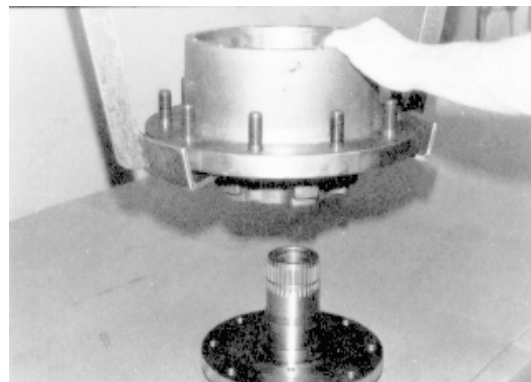


5. Place bearing cone (6) over end of spindle and into bearing cup.



8. The disengage spacer and spring are installed into the counterbore of the spindle.

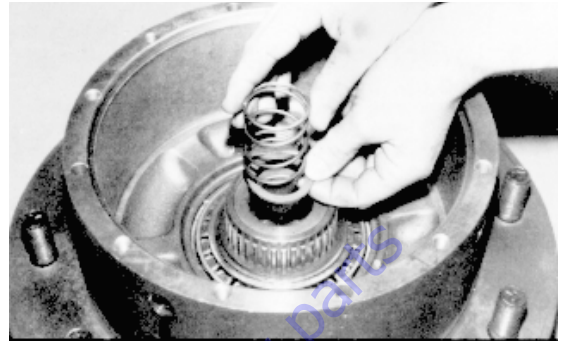

6. Place bearing shim (8) over end of spindle and against bearing cone.

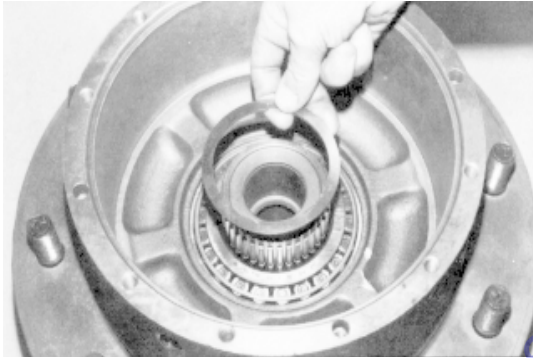

9. Install retaining ring into input shaft groove to secure spacers and spring to shaft.




⚠ CAUTION

EYE PROTECTION SHOULD BE WORN DURING RETAINING RING INSTALLATION.

7. Install retaining ring (9) completely into spindle groove and against bearing shim. Ensure retaining ring is entirely in groove.




10. Place the internal gear (12) onto end of spindle by matching the bore spline, the spindle spline.

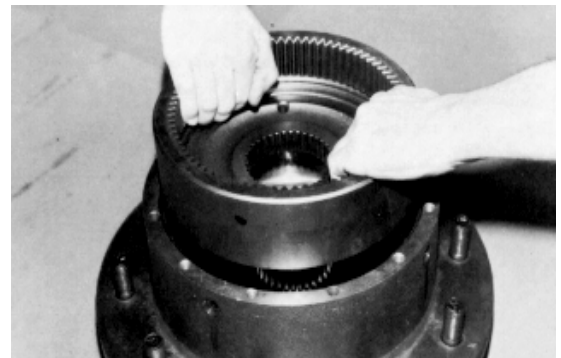


SECTION 3 - CHASSIS & TURNTABLE

11. Install thrust washers and thrust bearing (39, 40) on the portion of the spindle which extends into the internal gear.

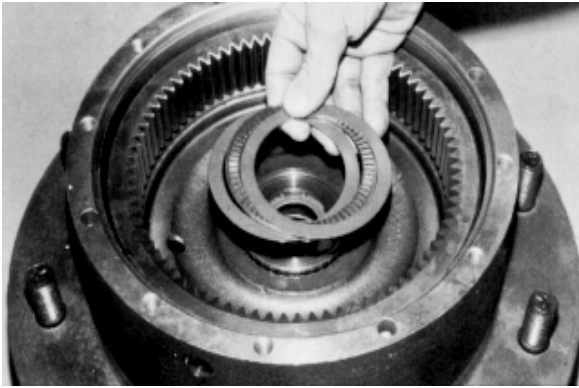


12. The o-ring is placed into the counterbore provided in the hub. Slight stretching may be necessary. Use sufficient grease or petroleum jelly to hold in place.

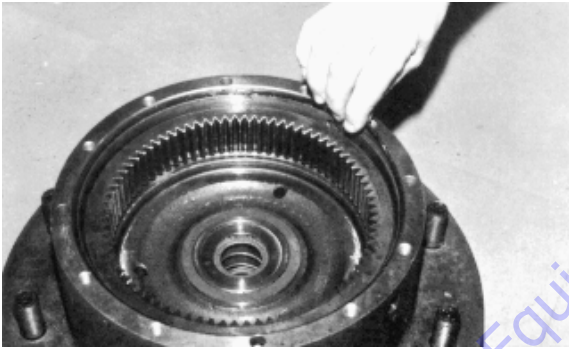


13. Install retaining ring (34) into input shaft retaining ring groove.




14. Place input shaft assembly (35) into spindle bore with unsplined end facing out. The action of the spring should be checked at this point.

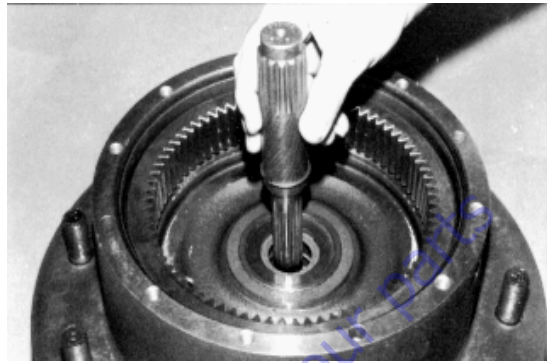


15. Place thrust spacer (36) over input shaft (35) with counterbore side facing spindle.

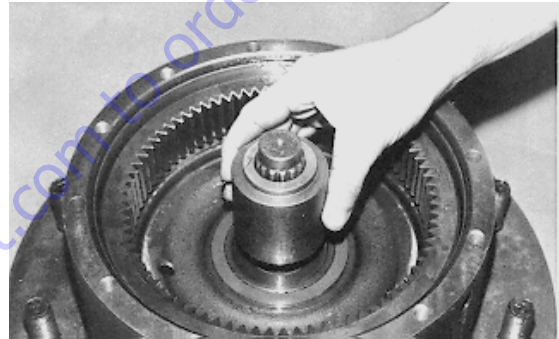


16. Locate the four counter reamed holes in the face of the hub, mark them for later identification.

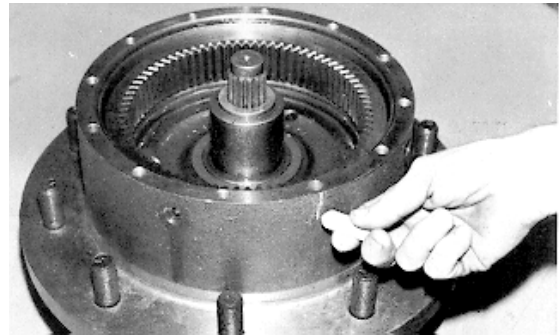


17. Place o-ring (22) into cover assembly counterbore. Use petroleum jelly or grease to hold o-ring in place. Slight stretching of o-ring may be necessary to insure proper seating.

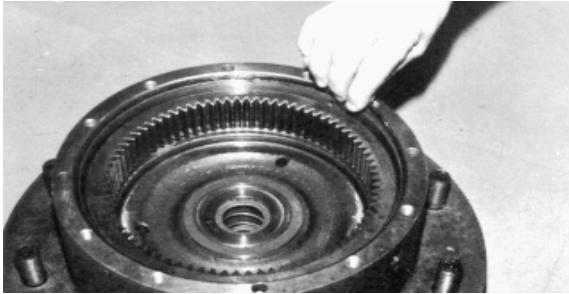


18. Place carrier assembly on a flat surface with large gears up and positioned as shown. Find punch marked tooth on each large gear and locate at 12 o'clock (straight up) from each planet pin. Marked tooth will be located just under carrier on upper two gears.

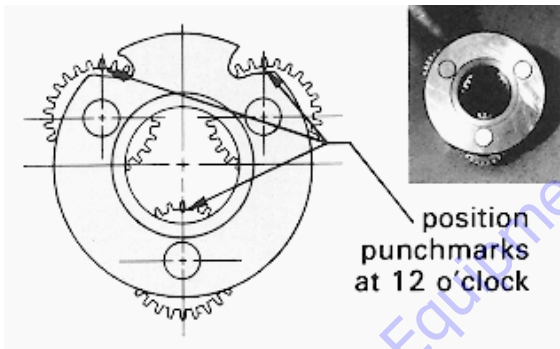

19. With shoulder side of ring gear (21) facing down, place ring gear over (into mesh with) large gears. Ensure punch marks remain in correct location during ring gear installation. The side of the ring gear with 'X' stamped on it should be up.

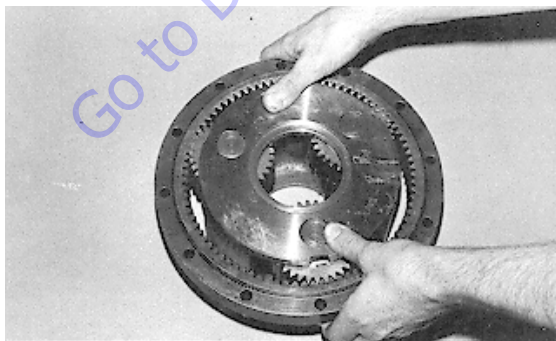


20. While holding ring gear, and cluster gears in mesh, place small side of cluster gears into mesh with internal gear. On ring gear, locate hole marked 'X' over one of the marked counterbored holes in hub.

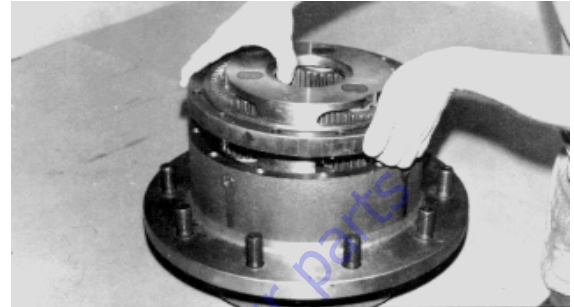

NOTE: If gears do not mesh easily or carrier assembly does not rotate freely, then remove carrier and ring gear and check cluster gear timing.

21. Install input gear (37) into the carrier assembly, meshing with large diameter cluster gears (18). Counterbore in bore of input gear must be to outside of carrier assembly.

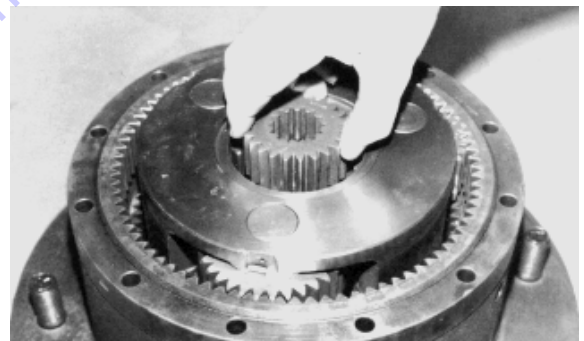


22. After inserting at least one bolt in the proper location, rotate the carrier. Check freedom of rotation and timing.



SECTION 3 - CHASSIS & TURNTABLE

23. Install thrust washers and thrust bearing (39, 40) into carrier counterbore.

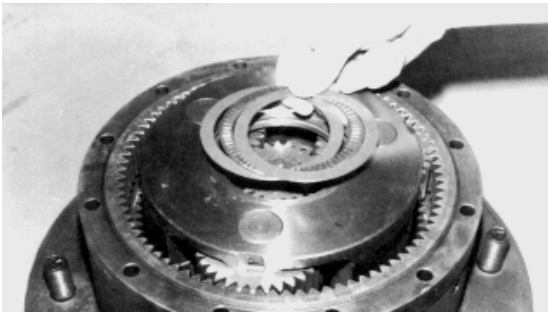


24. Place o-ring (22) into cover assembly counterbore. Use petroleum jelly or grease to hold o-ring in place.




25. Place cover assembly over ring gear with oil level check plug in cover located approximately 90 degrees from oil fill plug in hub.
26. Locate four bolts (42), 90 degrees apart into counter-bored holes in hub marked in step (16). Torque bolts to 47 ft. lbs. (64 Nm).



27. Install bolts (41) in remaining holes. Torque bolts to 47 ft. lbs. (64 Nm).

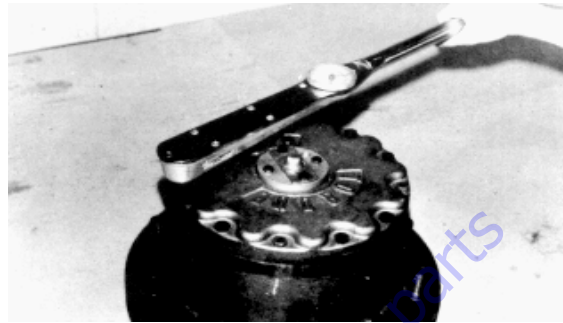

28. Place coupling (1) into spindle and onto input shaft.

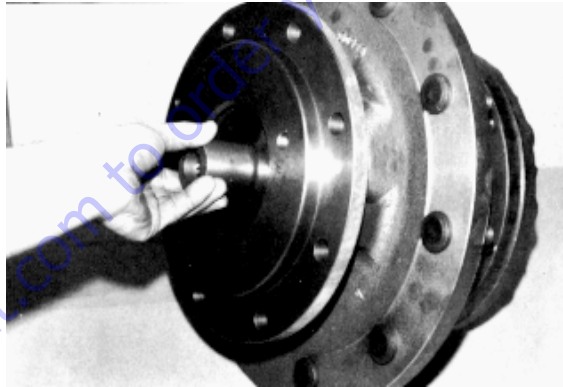

29. Fill hub one-half full of EPGL 90 lubricant before operation.

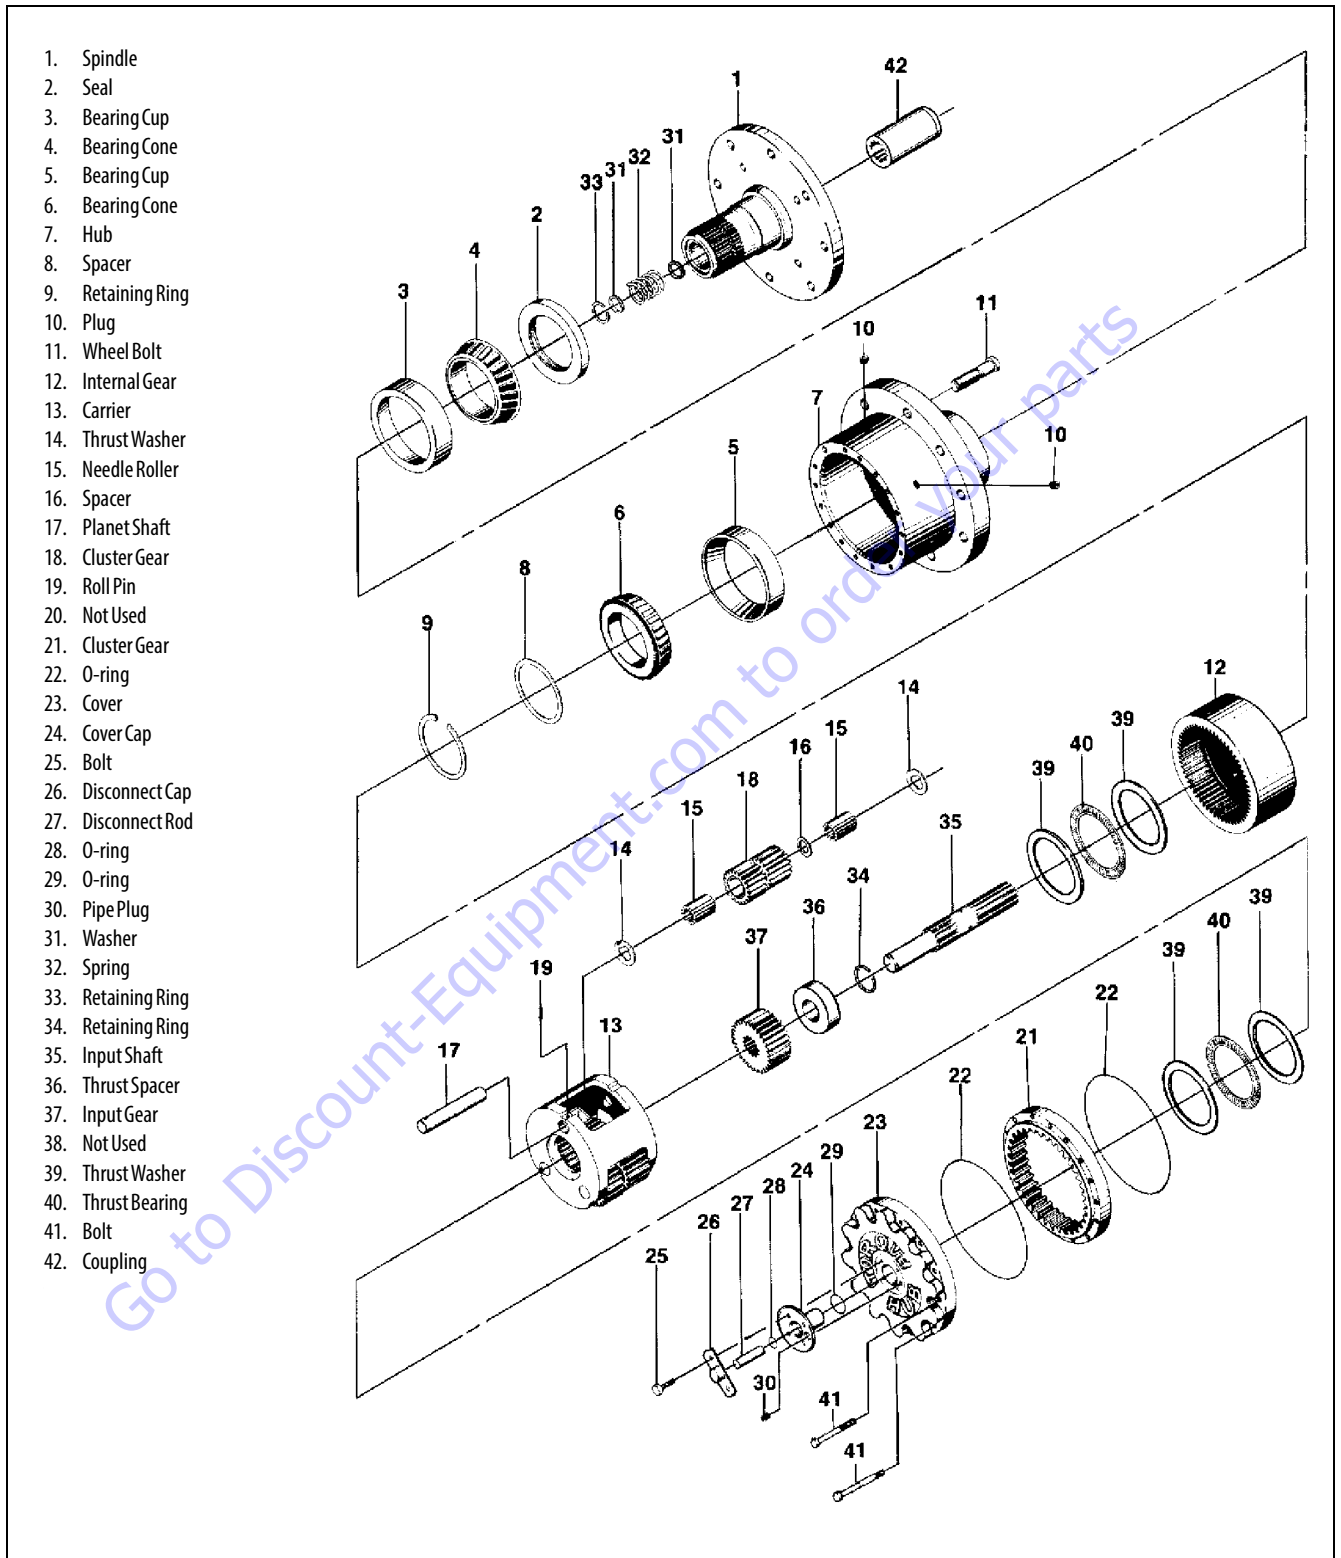


Figure 3-5. Drive Hub (Torque)

3.5 DRIVE BRAKE

Disassembly

1. Supporting brake, remove the six socket head capscrews and washers (13 & 14) in equal increments to ensure the spring pressure within the brake is reduced gradually and evenly.

If a press is available, the cylinder housing (8) can be restrained while removing the six capscrews and washers (13 & 14).

The brake assembly can now be fully dismantled and the parts examined.

2. Remove cylinder housing (8) and piston (9) subassembly and dismantle if required, removing O-ring seals (15 & 17) and backing rings (16 & 18) as necessary.
3. Remove gasket (7) from housing (2).
4. Remove friction plates (3 & 6) and pressure plate (4).
5. Remove two dowel pins (19).
6. Remove springs (22 & 23).
7. Should it be necessary to replace ball bearing (10) or shaft seal (12), reverse remainder of brake subassembly, supporting on face C of housing (2).
8. Remove internal retaining ring (11).
9. Using arbor press or similar to break Loctite seal, remove brake shaft (1) from housing (2) and lay aside.
10. Reverse housing (2) and press out ball bearing (10). Shaft seal (12) can also be removed if necessary.

Inspection

1. Inspect friction plates (3 & 6) and friction surface on pressure plate (4) for wear or damage.
2. Examine friction plates (3) and brake shaft (1) for wear or damage to the splines.
3. Examine input and output splines of brake shaft (1) for wear or damage.
4. Examine compression springs (22 & 23) for damage or fatigue.
5. Check ball bearing (10) for axial float or wear.
6. Examine O-ring seals (15 & 17) and backing rings (16 & 18) for damage.

Assembly


1. Lightly lubricate rotary shaft seal (12) and assemble to housing (2) taking care not to damage seal lip.
2. Apply ring of Loctite 641 or equivalent adhesive to full circumference of housing (2) bearing recess adjacent to shoulder.

Apply complete coverage of Loctite 641 to outside diameter of bearing (10) and assemble fully in housing (2), retaining with internal retaining ring (11). Remove excess adhesive with a clean cloth.

Press shaft (1) through bearing (10), ensuring bearing inner ring is adequately supported.

3. Assemble correct quantity of springs (22 & 23) in orientation required.
4. Lubricate O-ring seals (15 & 17) with Molykote 55M (or equivalent) silicon grease and assemble together with backing rings (16 & 18) to piston (9). To ensure correct brake operation. It is important that the backing rings are assembled opposite to the pressurized side of piston.
5. Correctly orientate piston (9) aligning spaces with the two dowel pin holes and, assemble into cylinder housing (8) taking care not to damage seals and carefully lay aside.
6. Locate 2-off pins (19) in housing (2) followed by pressure plate (4) and friction plates i.e. an inner (3) followed by an outer (6) in correct sequence.
7. Position gasket (7) in correct orientation.
8. Align two holes in cylinder with dowel pins (19) and assemble piston & cylinder sub-assembly to remainder of brake securing with 6 capscrews and washers (13 & 14). Torque to 55 ft.lbs. (75 Nm).

NOTE: The use of a suitable press (hydraulic or arbor) pressing down on cylinder end face B will ease assembly of the capscrews (13).

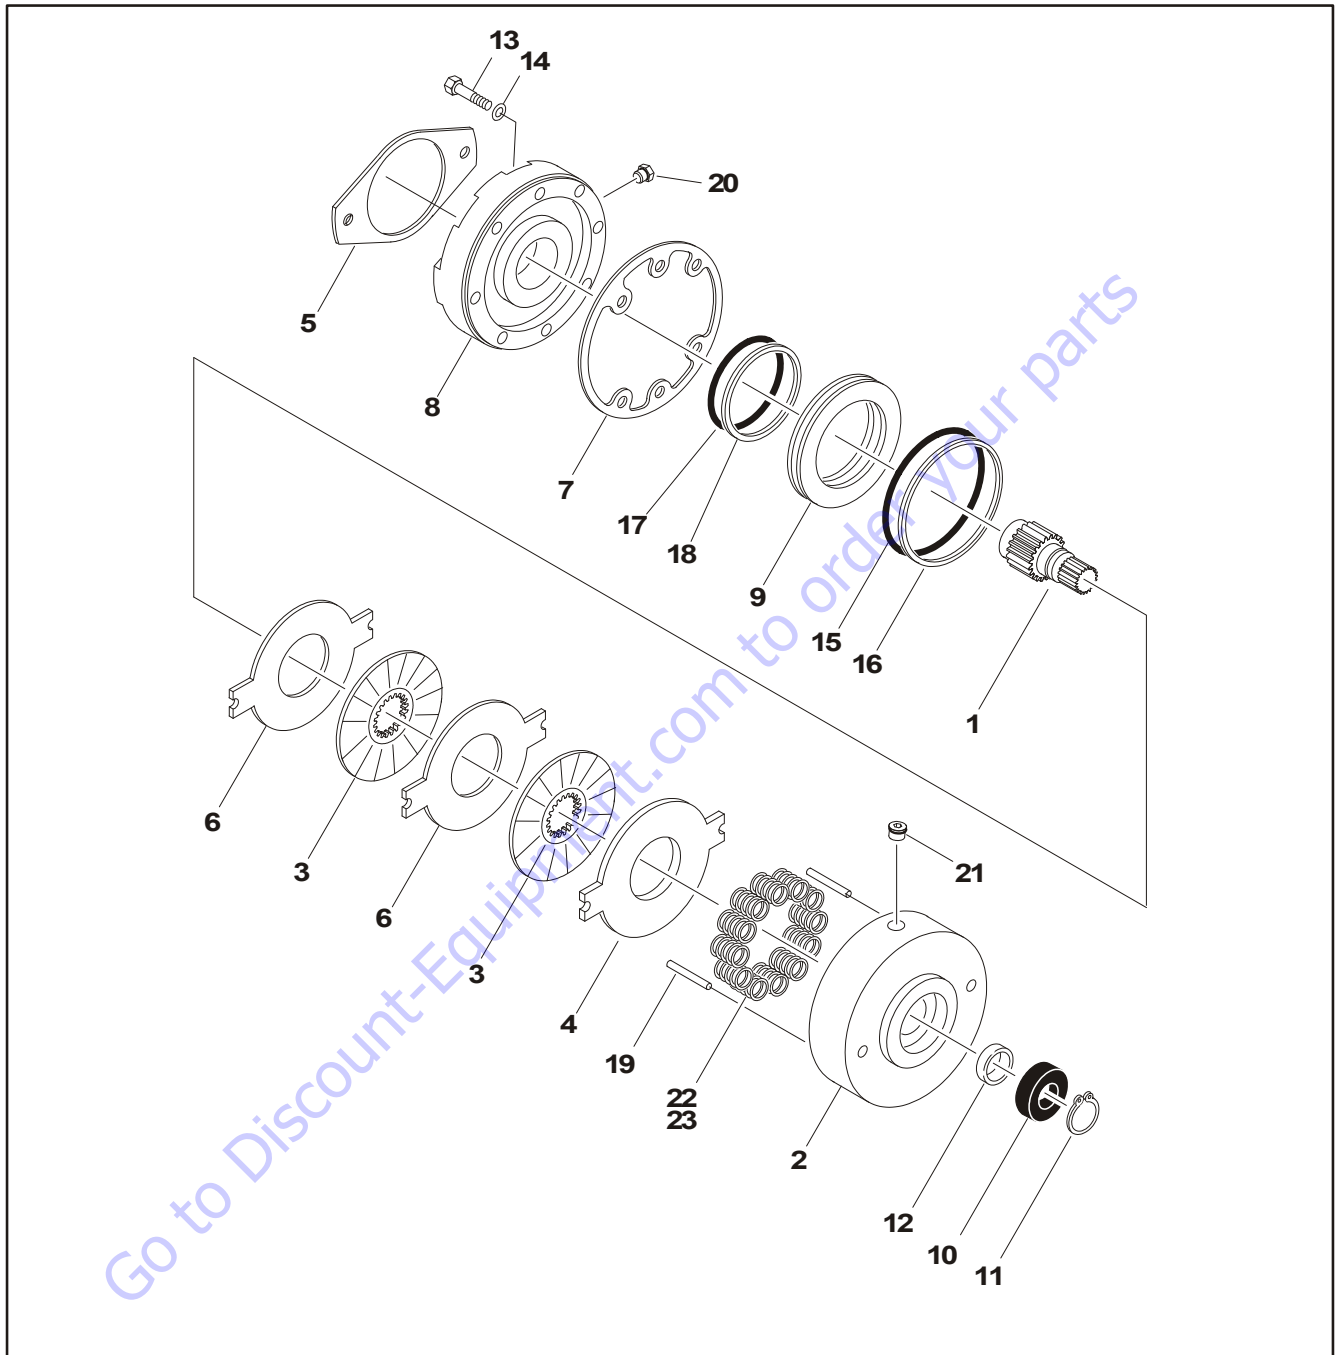

- | | | | | |
|-------------------|------------------|--------------------|-----------------|----------------------|
| 1. Shaft | 6. Outer Plate | 11. Retaining Ring | 16. Backup Ring | 21. Plug |
| 2. Housing | 7. Gasket | 12. Shaft Seal | 17. O-ring | 22. Spring (Natural) |
| 3. Friction Plate | 8. Cylinder | 13. Capscrew | 18. Backup Ring | 23. Spring (Blue) |
| 4. Pressure Plate | 9. Piston | 14. Lockwasher | 19. Dowel Pin | |
| 5. Gasket | 10. Ball Bearing | 15. O-ring | 20. Plug | |

Figure 3-6. Drive Brake

3.6 DRIVE MOTOR

Description

The drive motors are low to medium power, two-position axial piston motors incorporating an integral servo piston. They are designed for operation in both open and closed circuit applications. The standard control is a direct acting single line hydraulic control. The integral servo piston controls motor displacement.

The motors are spring biased to maximum displacement and hydraulically shifted to minimum displacement. Minimum and maximum displacement can be set with fixed internal stops. The large diameter servo piston allows smooth acceleration and deceleration with relatively large circuit orificing.


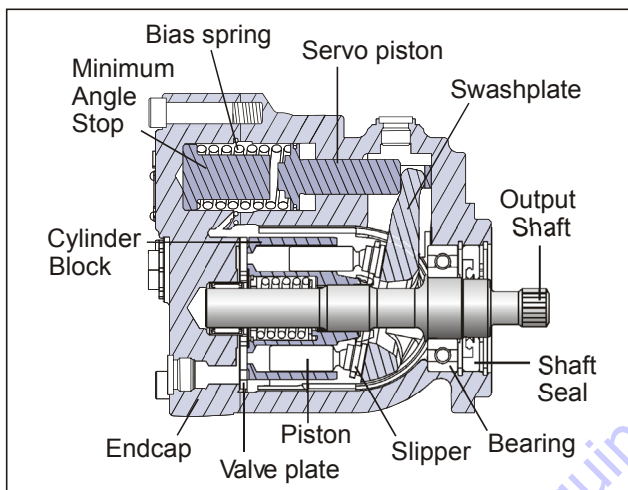


Figure 3-7. Drive Motor Cross Section

Shaft Seal Replacement

REMOVAL

1. Remove the snap ring (1) retaining the shaft seal and support washer.

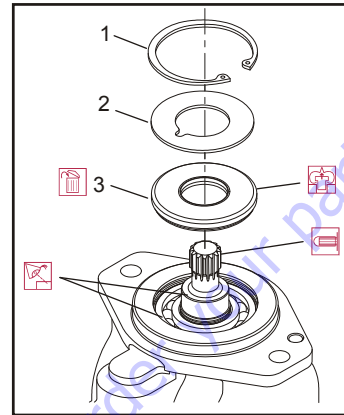

1. Snap Ring
2. Support Washer
3. Shaft Seal

Figure 3-8. Removing the Shaft Seal

2. Remove the support washer (2).
3. Carefully pry out the shaft seal (3).

To avoid damaging the shaft during removal, install a large sheet metal screw into the chuck of a slide hammer. Drive the screw into the seal surface and use the slide hammer to pull the seal.

4. Discard the seal.

INSPECT THE COMPONENTS

Inspect the new seal, the motor housing seal bore, and the sealing area on the shaft for rust, wear, and contamination. Polish the shaft and clean the housing if necessary.


INSTALLATION

1. Cover the shaft splines with an installation sleeve to protect the shaft seal during installation.
2. Install a new shaft seal with the cupped side facing the motor. Press seal into housing until it bottoms out. Press evenly to avoid binding and damaging the seal.
3. Install seal support washer.
4. Install snap ring.
5. Remove the installation sleeve.

Loop Flushing Valve

REMOVAL

- Using a 11/16 in internal hex wrench remove plug (1) and (2).

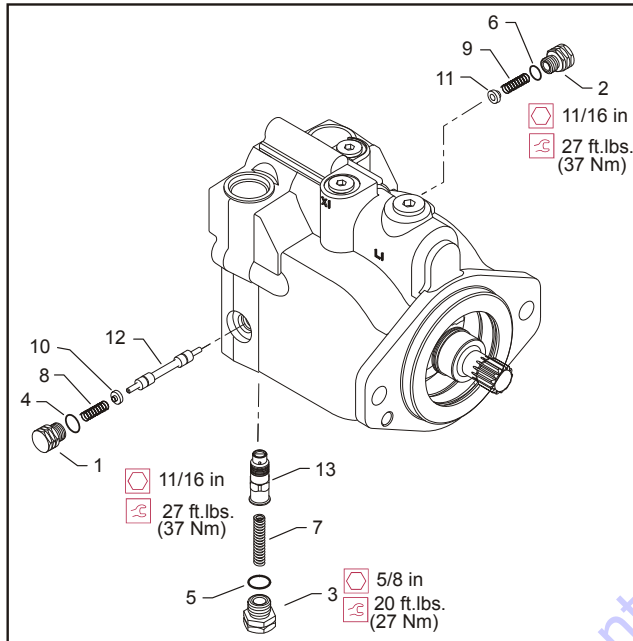

- | | | |
|-----------|------------|--------------------|
| 1. Plug | 6. O-ring | 11. Washer |
| 2. Plug | 7. Spring | 12. Shift Spool |
| 3. Plug | 8. Spring | 13. Orifice Poppet |
| 4. O-ring | 9. Spring | |
| 5. O-ring | 10. Washer | |

Figure 3-9. Loop Flushing Spool

- Using a 1/4 in hex wrench remove plug (3).
- Remove O-rings (4, 5, and 6).
- Using pliers, remove centering springs (7, 8, and 9).
- Remove spring retaining washers (10 and 11).
- Remove shift spool (12).
- Remove orifice poppet (13).

INSPECT THE COMPONENTS

Inspect new O-rings and the sealing area for rust, wear, or contamination. Also check springs and poppet for wear.

INSTALLATION

- Install orifice poppet (13).
- Install shift spool (12).
- Install spring retaining washers onto springs (10 and 11).
- Carefully install centering springs (7, 8, and 9).
- Install new O-rings (6, 4, and 5).
- Using a 1/4 in hex wrench torque plug (3) to 20 ft. lbs. (27 Nm).
- Using a 11/16 in internal hex, torque plugs (2 and 1) to 27 ft.lbs. (37 Nm).

Troubleshooting

Table 3-2. Excessive Noise and/or Vibration

Item	Description	Action
Check oil level in reservoir and oil supply to the motor.	Insufficient hydraulic fluid could lead to cavitation that would cause system noise.	Fill the reservoir to the proper level and ensure that oil supply to the motor is adequate and the lines are unobstructed.
Check for air in the system.	Air trapped within the system lines, or the motor itself, could result in cavitation that would cause system noise.	Ensure that all of the system lines and components are purged of air.
Inspect the output shaft couplings.	A loose or incorrect shaft coupling will produce vibrations that could result in system noise.	Ensure that the correct coupling is used and that it fits properly onto the shaft.
Inspect the output shaft alignment.	Misaligned shafts create excessive frictional vibration that could result in system noise.	Ensure that the shafts are properly aligned.
Hydraulic oil viscosity above limits.	Viscosity above acceptable limits will result in cavitation that would lead to system noise.	Replace hydraulic oil with appropriate fluid for operating conditions.

Table 3-3. System Operating Hot

Item	Description	Action
Check oil level in reservoir and oil supply to the pump.	Insufficient amount of hydraulic fluid will not meet the cooling demands of the system.	Fill the reservoir to the proper level.
Inspect the heat exchanger, (if so equipped).	If the heat exchanger fails, or becomes obstructed, it may not meet the cooling demands of the system.	Ensure that heat exchanger is receiving adequate air flow and that the heat exchanger is in good operating condition. Repair or replace as necessary.
Check the system relief valves.	If a system relief valve becomes unseated for an extended period of time or fails for any other reason, the system could become overheated.	Repair or replace any malfunctioning relief valves as applicable and verify that the loads on the machine are not excessive.

Table 3-4. Won't Shift or Slow to Start

Item	Description	Action
Check the signal line to the servo control port.	Obstructed or restricted flow through the servo control signal lines could result in slow shift or no shift conditions within the motor.	Ensure that the signal lines are not obstructed or restricted and that signal pressure is adequate to shift the motor.
Check that the correct supply and drain orifices are properly installed, and are not obstructed.	Supply and drain orifices determine the shift rate of the motor. The smaller the orifice, the longer the time it takes to shift the motor. Obstruction will also increase shift times.	Ensure that the proper control orifices are installed in the motor and verify that they are not obstructed. Clean or replace as necessary.


Disassembly

NOTE: Removal of the endcap voids warranty.

During assembly, coat all moving parts with a film of clean hydraulic oil. This assures that these parts will be lubricated during start-up.

Replace all O-Rings and gaskets.


It is recommended that all O-rings be replaced. Lightly lubricate all O-rings with clean petroleum jelly prior to assembly.

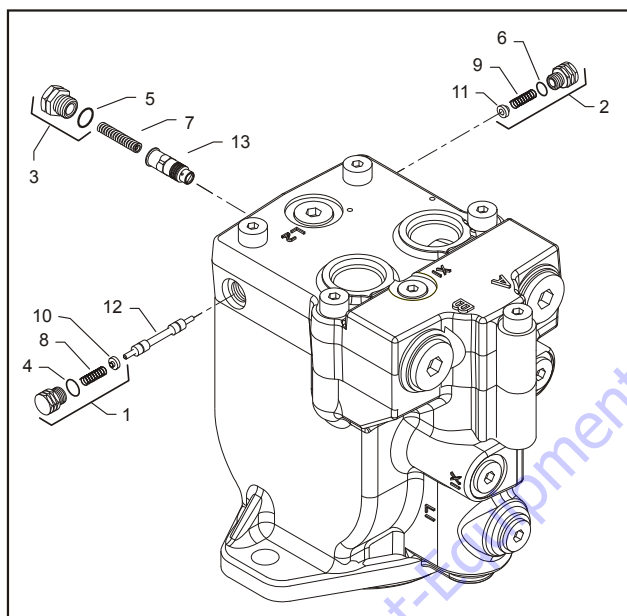

- | | | | |
|-----------|-----------|------------|--------------------|
| 1. Plug | 5. O-ring | 9. Spring | 12. Shift Spool |
| 2. Plug | 6. O-ring | 10. Washer | 13. Orifice Poppet |
| 3. Plug | 7. Spring | 11. Washer | |
| 4. O-ring | 8. Spring | | |

Figure 3-10. Loop Flushing Spool


1. Using a 11/16 in wrench remove plug (1) and (2).
2. Using a 5/8 in hex wrench remove plug (3).
3. Remove O-rings (4, 5, and 6).
4. Using pliers, remove centering springs (7, 8, and 9).
5. Remove spring retaining washers (10 and 11).
6. Remove shift spool (12).
7. Remove orifice poppet (13).

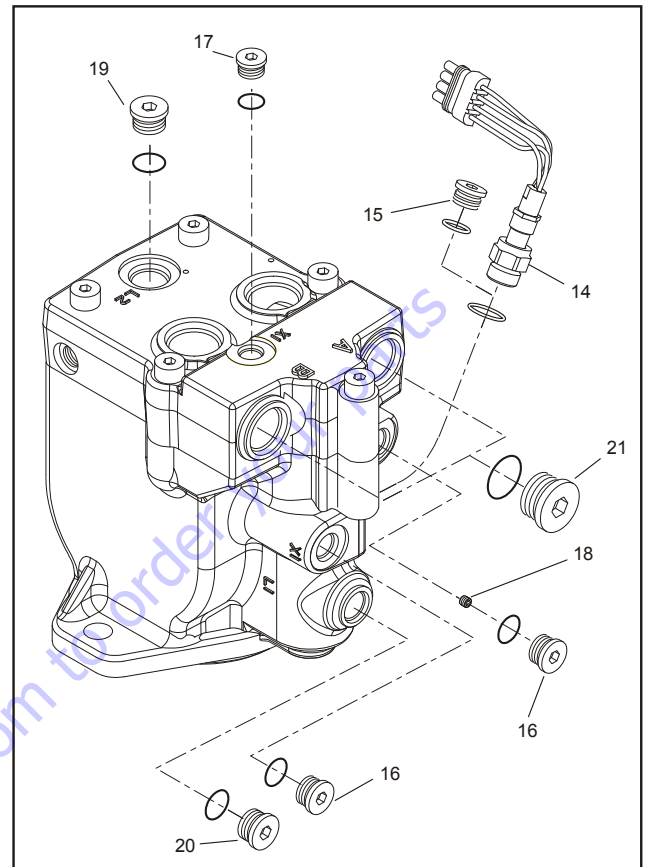

- | | |
|-----------------------|--------------------|
| 14. Lock Nut | 18. Cavity Plug |
| 15. O-ring Plug | 19. Drain Plug |
| 16. Control Line Plug | 20. Drain Plug |
| 17. Control Line Plug | 21. Work Port Plug |

Figure 3-11. Plugs, Fittings, and Speed Sensor

8. Remove all fittings from the unit. Discard any O-rings on the fittings.
9. Using an 11/16 inch hex wrench, loosen the speed sensor lock nut (14) if equipped. Then remove the speed sensor using a 1/2 inch hex wrench. Units without speed sensor have an O-ring plug (15) installed in that location; remove it with a 3/4 inch internal hex wrench.
10. Using a 1/4 inch internal hex wrench, remove control line plugs (16, 17). Discard O-rings. Using a 3 mm hex wrench, remove cavity plug (18, if equipped with two-line control) from X2 cavity.
11. Using a 5/16 inch internal hex wrench, remove drain plugs (19, 20). Discard O-rings.
12. Using a 9/16 inch internal hex wrench, remove work port plugs (21, if equipped with axial ports). Discard O-rings.

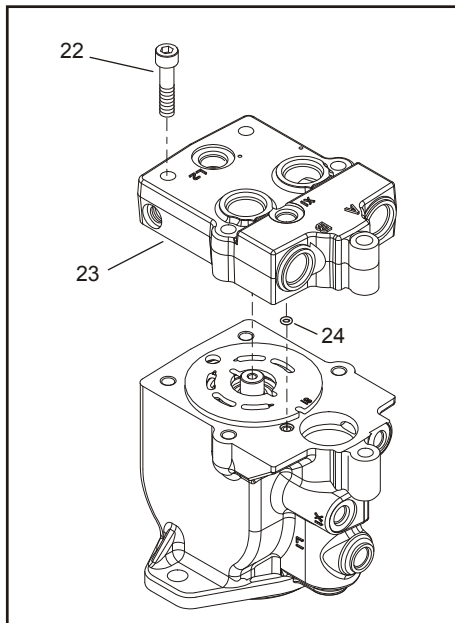


- 22. Screw
- 23. End Cap
- 24. O-ring

Figure 3-12. End Cap

13. Using an 8 mm internal hex wrench, remove the endcap screws (22).
14. Remove the endcap (23). Remove O-ring (24) from the housing or endcap.

When the endcap screws are removed, pressure from the servo spring will cause the endcap to bind on the shaft. Press down on the portion of the endcap covering the servo piston and hold the endcap level while removing.

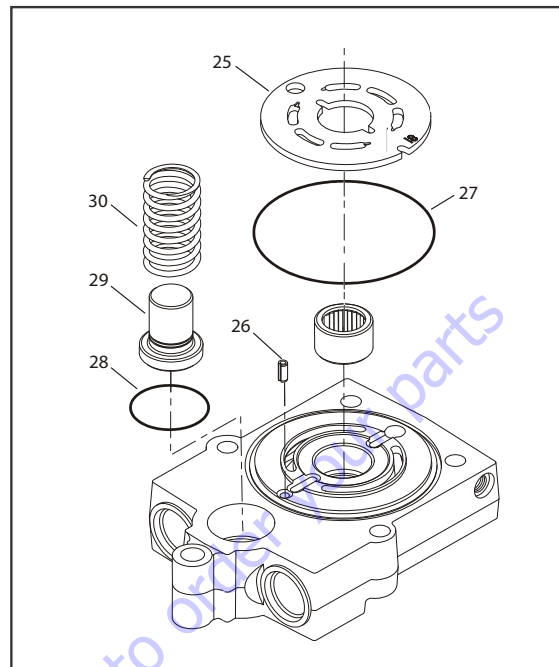

- 25. Valve Plate
- 26. End Cap
- 27. O-ring
- 28. O-ring
- 29. Angle Stop
- 30. Servo Spring

Figure 3-13. Valve Plate & Rear Shaft Bearing

NOTICE

TAKE CARE NOT TO SCRATCH THE SURFACE OF THE VALVE PLATE.


15. Remove the valve plate (25) and timing pin (26) from the endcap.

Each displacement has a unique valve plate. For identification, the last two digits of the valve plate part number are stamped on its surface.

16. Remove and discard the O-rings (27 and 28).
17. Remove the rear shaft bearing (29) from the endcap with a bearing puller.

The bearing may be difficult to remove with a puller. Try this as an alternative: Pack the bearing cavity with heavy grease. After the shaft is removed, insert it into the bearing cavity and tap lightly with a soft mallet on the splined end. The grease will force the bearing out. Use caution not to drive the bearing past the rear shaft journal as the bearing may become trapped on the shaft and damaged.

18. Remove minimum angle stop (29) and servo spring (30) from the housing.

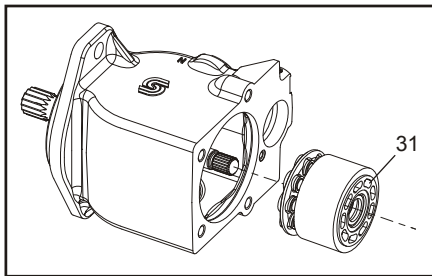

31. Cylinder Kit Assembly


Figure 3-14. Cylinder Kit

19. Turn the housing on its side and remove the cylinder kit assembly (31). Set the assembly aside, being careful not to scratch the running surface.

NOTE: Grooves on the surface of the cylinder kit identify its displacement:

Table 3-5. Displacement Identifiers

# of Grooves	Frame L	Frame K
1	25	38
2	30	45
3	35	--

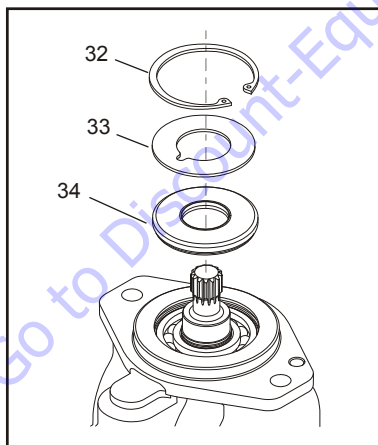


32. Snap Ring
33. Support Washer
34. Shaft Seal

Figure 3-15. Shaft Seal

20. Turn the housing over and remove the snap ring (32) retaining the shaft seal and support washer. Remove the support washer (33) and carefully pry out the shaft seal (34). Discard the seal.


To avoid damaging the shaft during seal removal. Install a large sheet metal screw into the chuck of a slide hammer. Drive the screw into the seal surface and use the slide hammer to pull the seal.

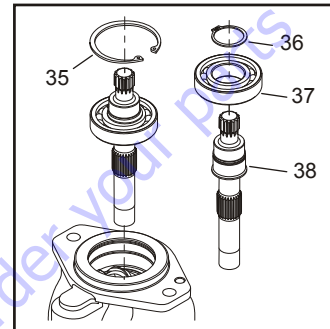

35. Inner Snap Ring
36. Snap Ring
37. Bearing
38. Shaft

Figure 3-16. Shaft & Front Bearing


21. Remove the inner snap ring (35) and the shaft / bearing assembly.
22. Remove the snap-ring (36) retaining the shaft front bearing. Pull the bearing (37) off of the shaft (38).

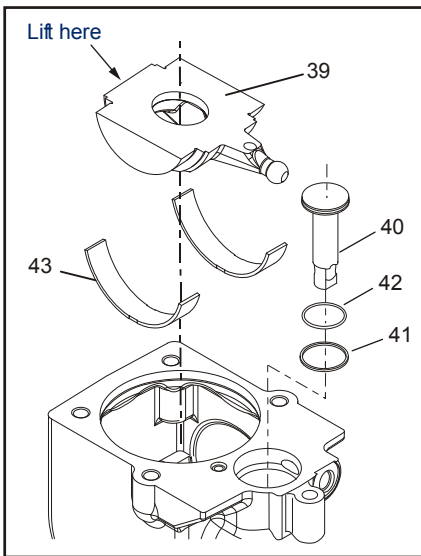

- 39. Swashplate
- 40. Servo Piston
- 41. Piston Seal
- 42. O-ring
- 43. Journal Bearings

Figure 3-17. Swash Plate & Servo Piston

23. Turn housing over and remove the swashplate (39) by lifting on the end opposite the servo lever.
24. Remove the servo piston (40). Remove the piston seal (41) and O-ring (42) from the servo piston. Discard the seal and O-ring.
25. Remove the journal bearings (43) from the housing. If the bearings are to be reused, note the location and orientation of each bearing for reassembly.

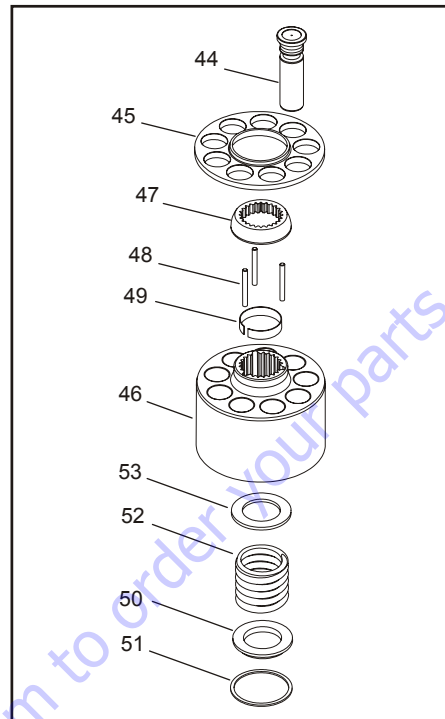

- 44. Piston
- 45. Slipper Retainer
- 46. Cylinder Block
- 47. Ball Guide
- 48. Holddown Pins
- 49. Retaining Ring
- 50. Block Spring Washer
- 51. Spiral Retaining Ring
- 52. Block Spring
- 53. Inner Block Spring Washer

Figure 3-18. Cylinder Kit Disassembly

26. Remove pistons (44) and slipper retainer (45) from the cylinder block (46).

The pistons are not selectively fitted, however units with high hourly usage may develop wear patterns. Number the pistons and bores for reassembly if they are to be reused.
27. Remove the ball guide (47), hold-down pins (48), and retaining ring (49) from the cylinder block.

NOTE: Most repairs do not require block spring removal. Perform this procedure only if you suspect problems with the block spring.

⚠ WARNING

RISK OF PERSONAL INJURY: COMPRESSING THE BLOCK SPRING REQUIRES FORCE OF ABOUT 80 TO 90 LBF (350 TO 400 N). USE A PRESS SUFFICIENT TO MAINTAIN THIS FORCE WITH REASONABLE EFFORT. ENSURE THE SPRING IS SECURE BEFORE ATTEMPTING TO REMOVE THE SPIRAL RETAINING RING. RELEASE THE PRESSURE SLOWLY AFTER THE RETAINING RING IS REMOVED.


- 28. Turn the block over. Using a press, apply pressure on the block spring washer (50) to compress the block spring. Compress the spring enough to safely remove the spiral retaining ring (51). While maintaining pressure, unwind the spiral retaining ring (51). Carefully release the pressure and remove the outer block spring washer (50), block spring (52), and inner block spring washer (53) from the cylinder block.

Inspection

After disassembly, wash all parts (including the end-cap and housing) thoroughly with clean solvent and allow to air dry. Blow out oil passages in the housing and endcap with compressed air. Conduct inspection in a clean area and keep all parts free from contamination. Clean and dry parts again after any rework or resurfacing.

PISTON

Inspect the pistons for damage and discoloration. Discolored pistons may indicate excessive heat; do not reuse.

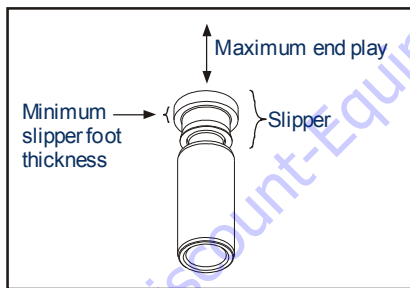

SLIPPERS

Inspect the running surface of the slippers. Replace any piston assemblies with scored or excessively rounded slipper edges. Measure the slipper foot thickness. Replace any piston assemblies with excessively worn slippers. Check the slipper axial end-play. Replace any piston assemblies with excessive end-play.

Minimum slipper foot thickness and maximum axial end-play are given in the table below.

Table 3-6. Slipper Foot Thickness & End Play


Measurement	L Frame mm (in.)	K Frame mm (in.)
Slipper Foot Thickness	2.71 (0.11)	4.07 (0.16)
Piston/Slipper End Play	0.15 (0.006)	

CYLINDER BLOCK

Measure the cylinder block height. Replace blocks worn beyond the minimum height specification. Inspect the running surface of the cylinder block. Replace or resurface worn or scratched blocks. Blocks may be resurfaced to the specifications shown in the drawing, provided resurfacing will not reduce the block height below the minimum specification. Table 3-7, Cylinder Block Measurements.


Table 3-7. Cylinder Block Measurements

Measurement	L25 mm (in.)	L30 mm (in.)	L35 mm (in.)	K38 mm (in.)	K45 mm (in.)
Minimum Cylinder Block Height (A)	50.8 (2.00)	50.8 (2.00)	50.8 (2.00)	54.4 (2.14)	54.4 (2.14)
Cylinder Block Surface Flatness	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)

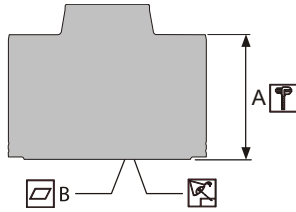


BALL GUIDE AND SLIPPER RETAINER

Inspect the ball guide and slipper retainer for damage, discoloration, or excessive wear. A discolored ball guide or slipper retainer indicates excessive heat. Do not reuse.

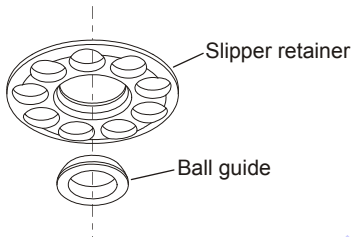


VALVE PLATE

The condition of the valve plate is critical to the efficiency of the motor. Inspect the valve plate surfaces carefully for excessive wear, grooves, or scratches. Replace or resurface grooved or scratched valve plates. Measure the valve plate thickness and replace if worn beyond the minimum specification. Valve plates may be resurfaced to the specifications shown in the drawing, provided resurfacing will not reduce the thickness below the minimum specification.

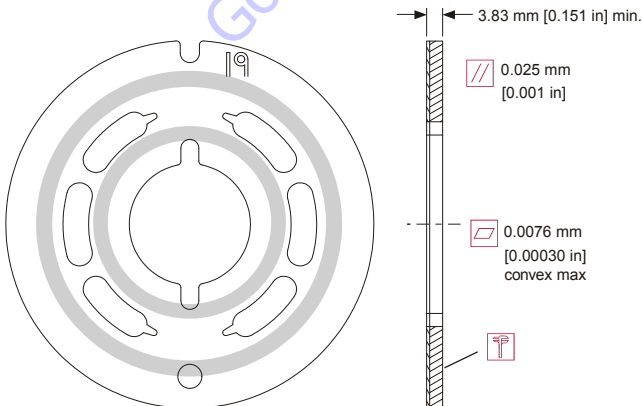

SWASHPLATE AND JOURNAL BEARINGS


Inspect the running face, servo ball-joint, and swashplate journal surfaces for damage or excessive wear. Some material transfer may appear on these surfaces and is acceptable providing the surface condition meets specifications shown. Measure the swashplate thickness from the journals to the running face. Replace swashplate if damaged or worn beyond minimum specification. Replace swashplate if the difference in thickness from one side to the other exceeds specification.

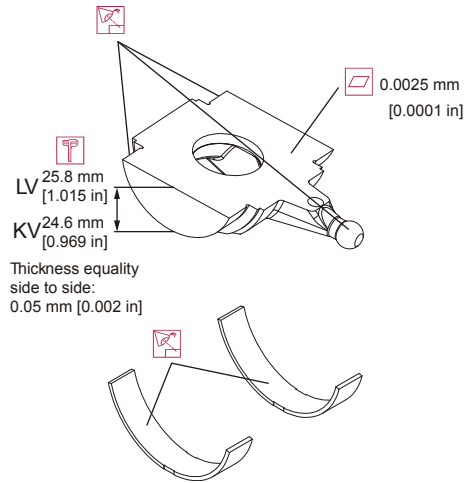

Inspect the journal bearings for damage or excessive wear. Replace journal bearings if scratched, warped, or excessively worn. The polymer wear layer must be smooth and intact.

SHAFT BEARINGS

Inspect bearings for excessive wear or contamination. Rotate the bearings while feeling for uneven movement. Bearings should spin smoothly and freely. Replace bearings that appear worn or do not rotate smoothly.

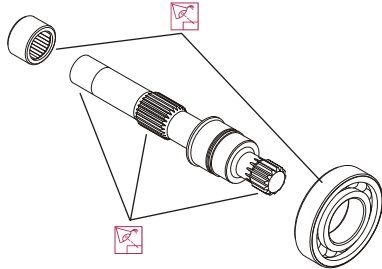


SHAFT

Inspect the motor shaft. Look for damage or excessive wear on the output and block splines. Inspect the bearing surfaces and sealing surface. Replace shafts with damaged or excessively worn splines, bearing surfaces, or sealing surfaces.


SERVO PISTON AND MINIMUM ANGLE STOP

Inspect the minimum angle stop, servo piston head, and servo piston ball-socket for damage or excessive wear. Replace if necessary.

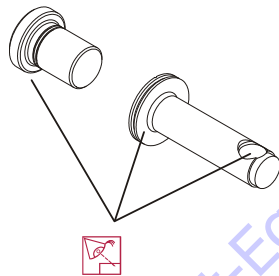

LOOP FLUSHING SPOOL


Inspect the loop flushing spool. Check for cracks or damage. Replace if necessary.

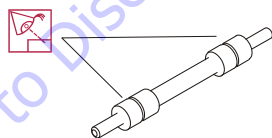

Assembly

1. Install new O-ring (1) and piston seal (2) to the servo piston (3). Install the piston seal over the O-ring.

Installing the piston seal stretches it, making it difficult to install the servo piston in its bore. Allow 30 minutes for the seal to relax after installation. To speed up seal relaxation, compress the seal by installing the piston head into the servo cavity in the end-cap and let it stand for at least five minutes.

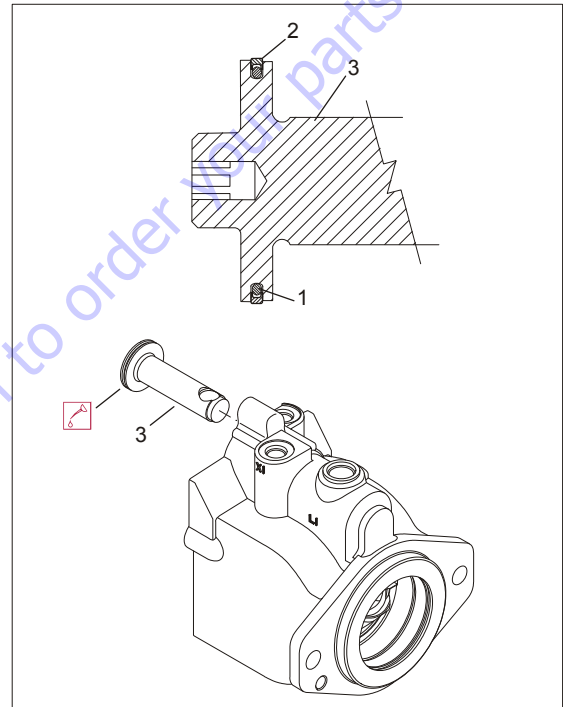

1. O-ring
2. Piston Seal
3. Servo Piston


Figure 3-19. Servo Piston

2. After piston seal has relaxed, lubricate and install servo piston into the housing bore. Align the piston with the ball socket facing the inside of the housing.

⚠ WARNING

RISK OF PERSONAL INJURY: COMPRESSING THE BLOCK SPRING REQUIRES ABOUT 80 TO 90 LBF (350 TO 400 N) OF FORCE. USE A PRESS SUFFICIENT TO MAINTAIN THIS FORCE WITH REASONABLE EFFORT. ENSURE THE SPRING IS SECURE BEFORE ATTEMPTING TO INSTALL THE SPIRAL RETAINING RING. RELEASE THE PRESSURE SLOWLY AFTER THE RETAINING RING IS INSTALLED.


3. Install the inner block spring washer (4), block spring (5), and outer washer (6) into the cylinder block. Using a press, compress the block spring enough to expose the retaining ring groove. Wind the spiral retaining ring (7) into the groove in the cylinder block.

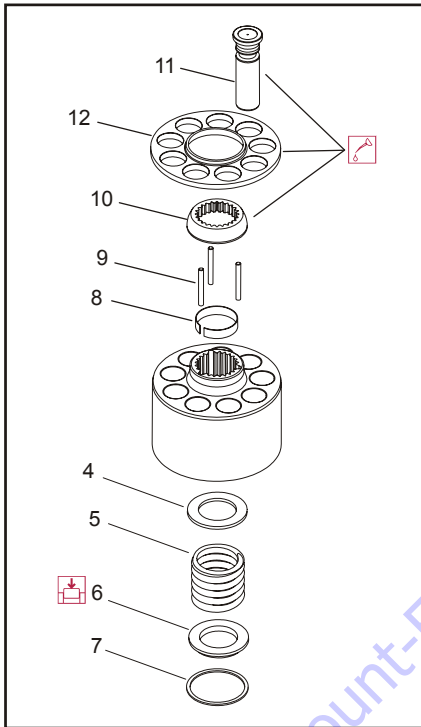

- | | |
|--------------------------|----------------------|
| 4. Block Spring Washer | 9. Holddown Pins |
| 5. Block Spring | 10. Ball Guide |
| 6. Outer Washer | 11. Piston |
| 7. Spiral Retaining Ring | 12. Slipper Retainer |
| 8. Retaining Ring | |

Figure 3-20. Cylinder Kit Assembly

4. Turn the block over and install the retaining ring (8), hold-down pins (9), and ball guide (10) to the cylinder block.
5. Install the pistons (11) to the slipper retainer (12). Install the piston/retainer assembly into the cylinder block. Ensure the concave surface of the retainer seats on the ball guide. If you're reusing the pistons, install them to the original block bores. Lubricate the pistons, slippers, retainer, and ball guide before assembly. Set the cylinder kit aside on a clean surface until needed.
6. Install the journal bearings (13) into the housing seats. Use assembly grease to keep the bearings seated during assembly. Ensure the locating nubs drop into the cavities in the seats. If you're reusing the bearings, install them in the original location and orientation. Lubricate the journal bearings.

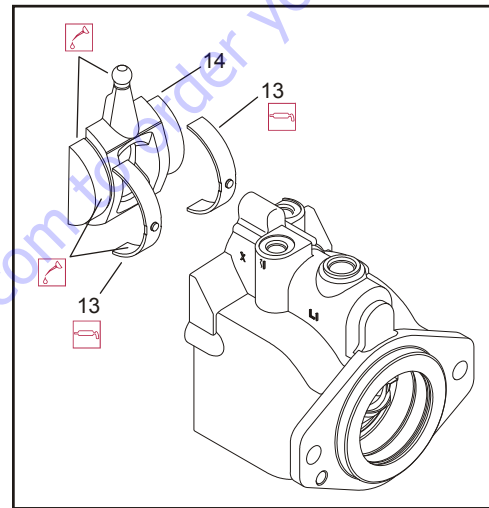


- | |
|----------------------|
| 13. Journal Bearings |
| 14. Swashplate |

Figure 3-21. Swashplate and Journal Bearing

7. Install the swashplate (14) into the housing. Tilt the swashplate and guide the servo lever ball into its socket in the servo piston rod. Ensure the swashplate seats into the journal bearings and moves freely. Lubricate the running surface of the swashplate.

8. Press front shaft bearing (15) onto shaft (16). Press bearing onto shaft with lettering facing out. Lubricate bearing rollers. Install snap-ring (17) onto shaft.

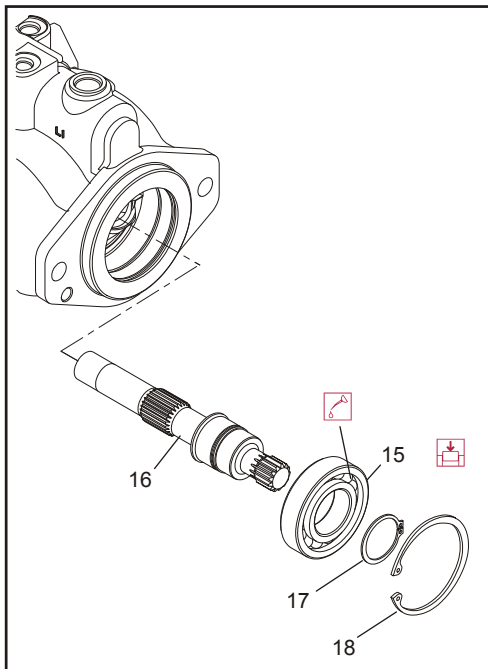


- 15. Front Shaft Bearing
- 16. Shaft
- 17. Snap Ring
- 18. Snap Ring

Figure 3-22. Shaft and Front Bearing

9. While holding the swashplate in place, turn the housing on its side. Install the install shaft/bearing assembly into housing from the flange end. Install the snap-ring (18).


10. Verify swashplate and bearings are properly seated. Install the cylinder kit (19) onto the shaft. Install with the slippers facing the swashplate. Rock the shaft to align the block splines and slide the cylinder kit into place. Orient the motor with the shaft pointing downward and verify the cylinder kit, swashplate, journal bearings, and servo piston are all secure and properly installed.

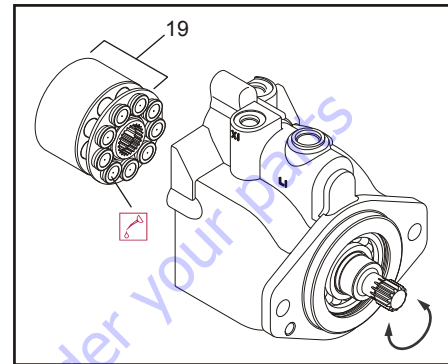

19. Cylinder Kit

Figure 3-23. Cylinder Kit Installation


11. Lubricate and install the servo spring (20), and minimum angle stop (21) into the housing bore.

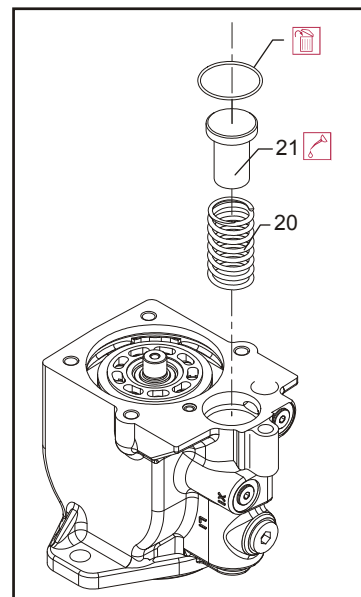

- 20. Servo Spring
- 21. Minimum Angle Stop

Figure 3-24. Servo Spring and Minimum Angle Stop

12. Press the rear shaft bearing (22) into the endcap. Install the bearing with letters facing out. Press until bearing surface is 0.08 ± 0.01 in (2 ± 0.25 mm) above endcap surface.

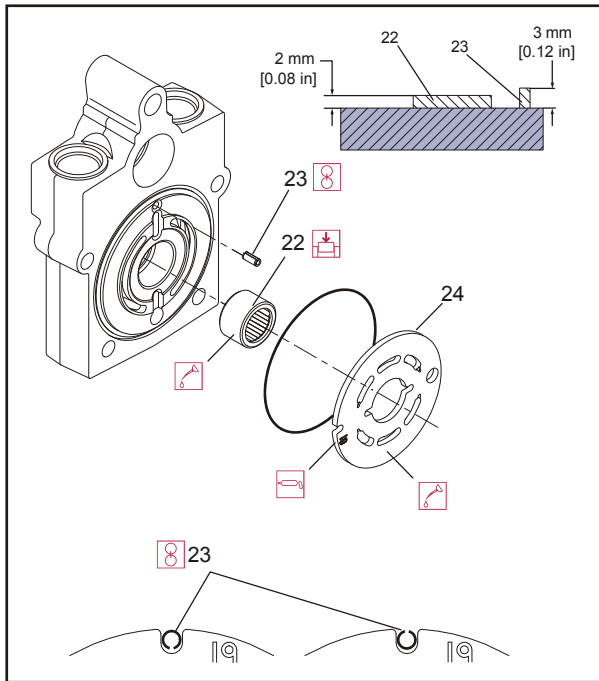


22. Rear Shaft Bearing
23. Timing Pin
24. Valve Plate

Figure 3-25. Valve Plate and Rear Bearing

13. Install timing pin (23) into its bore in the endcap. Install the pin with its groove facing toward or away from the shaft. Press the pin until the end protrudes 0.12 ± 0.01 in (3 ± 0.25 mm) above endcap surface.
14. Install the valve plate (24) onto the endcap. Install the valve plate with the yellow surface toward the cylinder block. Align the slot in the valve plate with the timing pin. Apply a liberal coat of assembly grease to the endcap side of the valve plate to keep it in place during installation.

15. Install the endcap (25) onto the housing with the endcap screws (26). Check to ensure the endcap will properly seat onto the housing without interference. Improper assembly of the internal components may prevent the endcap from seating properly. Ensure the O-rings seat properly when installing the endcap.

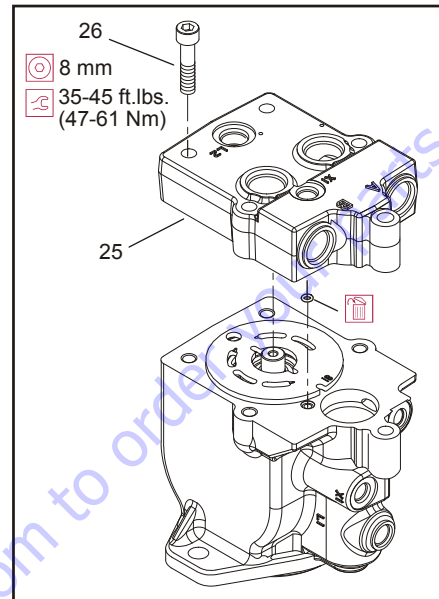


25. End Cap
26. Screw

Figure 3-26. End Cap

16. Using an 8 mm internal hex wrench, tighten the endcap screws. Tighten the screws in opposite corners slowly and evenly to compress the servo spring and properly seat the endcap. Torque endcap screws 35-45 ft.lbs. (47-61 Nm).
17. Before installing the shaft seal, ensure the shaft turns smoothly with less than 120 in.lbs. (13.5 Nm) of force. If the shaft does not turn smoothly within the specified maximum force, disassemble and check the unit.

18. Cover shaft splines with an installation sleeve. Install a new shaft seal (27) with the cup side facing the motor. Press seal into housing until it bottoms out. Press evenly to avoid binding and damaging the seal. Install seal support washer (28) and snap ring (29).

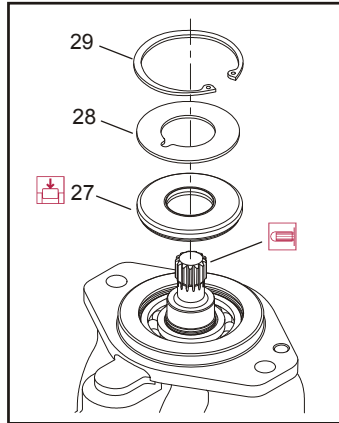

- 27. Shaft Seal
- 28. Seal Support Washer
- 29. Snap Ring

Figure 3-27. Shaft Seal

19. Install remaining plugs and fittings to the housing. Refer to the drawing below for wrench sizes and installation torques.


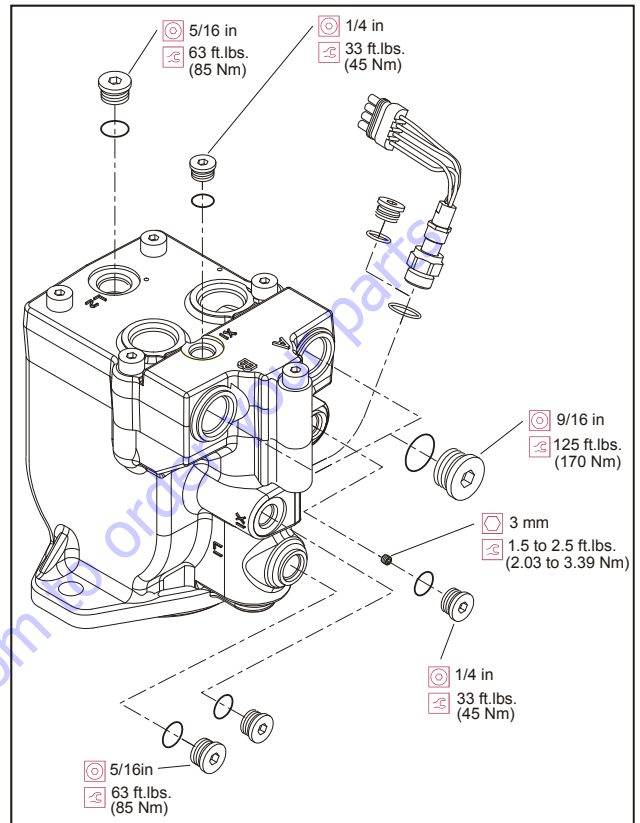


Figure 3-28. Plugs and Fittings Installation

20. Install orifice poppet (30).

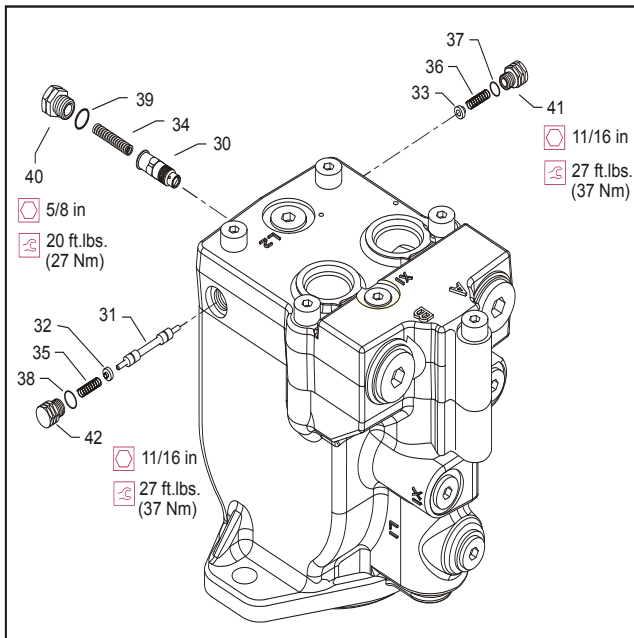

- | | | | |
|--------------------|------------|------------|----------|
| 30. Orifice Poppet | 34. Spring | 37. O-ring | 40. Plug |
| 31. Shift Spool | 35. Spring | 38. O-ring | 41. Plug |
| 32. Spring | 36. Spring | 39. O-ring | 42. Plug |
| 33. Spring | | | |

Figure 3-29. Loop Flushing Spool


21. Install shift spool (31).
22. Install spring retaining washers onto springs (32 and 33).
23. Carefully install centering springs (34, 35, and 36).
24. Install new O-rings (37, 38, and 39).
25. Using a 5/8 in wrench torque plug (40) to 20 ft.lbs. (27 Nm).
26. Using a 11/16 in wrench, torque plugs (41 and 42) to 27 ft.lbs. (37 Nm).

Initial Start-up Procedures

Follow this procedure when starting-up a new motor or when installing a motor that has been removed.

Prior to installing the motor, inspect for damage incurred during shipping. Make certain all system components (reservoir, hoses, valves, fittings, heat exchanger, etc.) are clean prior to filling with fluid.

1. Fill the reservoir with recommended hydraulic fluid. Always filter fluid through a 10 micron filter when pouring into the reservoir. Never reuse hydraulic fluid.
2. Fill the inlet line leading from the pump to the reservoir. Check the inlet line for properly tightened fittings and be certain it is free of restrictions and air leaks.
3. Fill the pump and motor housing with clean hydraulic fluid. Pour filtered oil directly into the upper most case drain port.
4. To ensure the pump and motor stay filled with oil, install case drain lines into the upper most case drain ports.
5. Install a 0 to 500 psi (0 to 35 bar) gauge in the charge pressure gauge port of the pump to monitor system pressure during start up.
6. While watching the pressure gauge, run the engine at the lowest possible speed until system pressure builds to normal levels (minimum 160 psi [11 bar]). Once system pressure is established, increase to full operating speed. If system pressure is not maintained, shut down the prime mover, determine cause, and take corrective action.
7. Operate the hydraulic system for at least fifteen minutes under light load conditions.
8. Check and adjust control settings as necessary after installation.
9. Shut down the prime mover and remove the pressure gauge. Replace plug at the charge pressure gauge port.
10. Check the fluid level in the reservoir; add clean filtered fluid if necessary. The motor is now ready for operation.

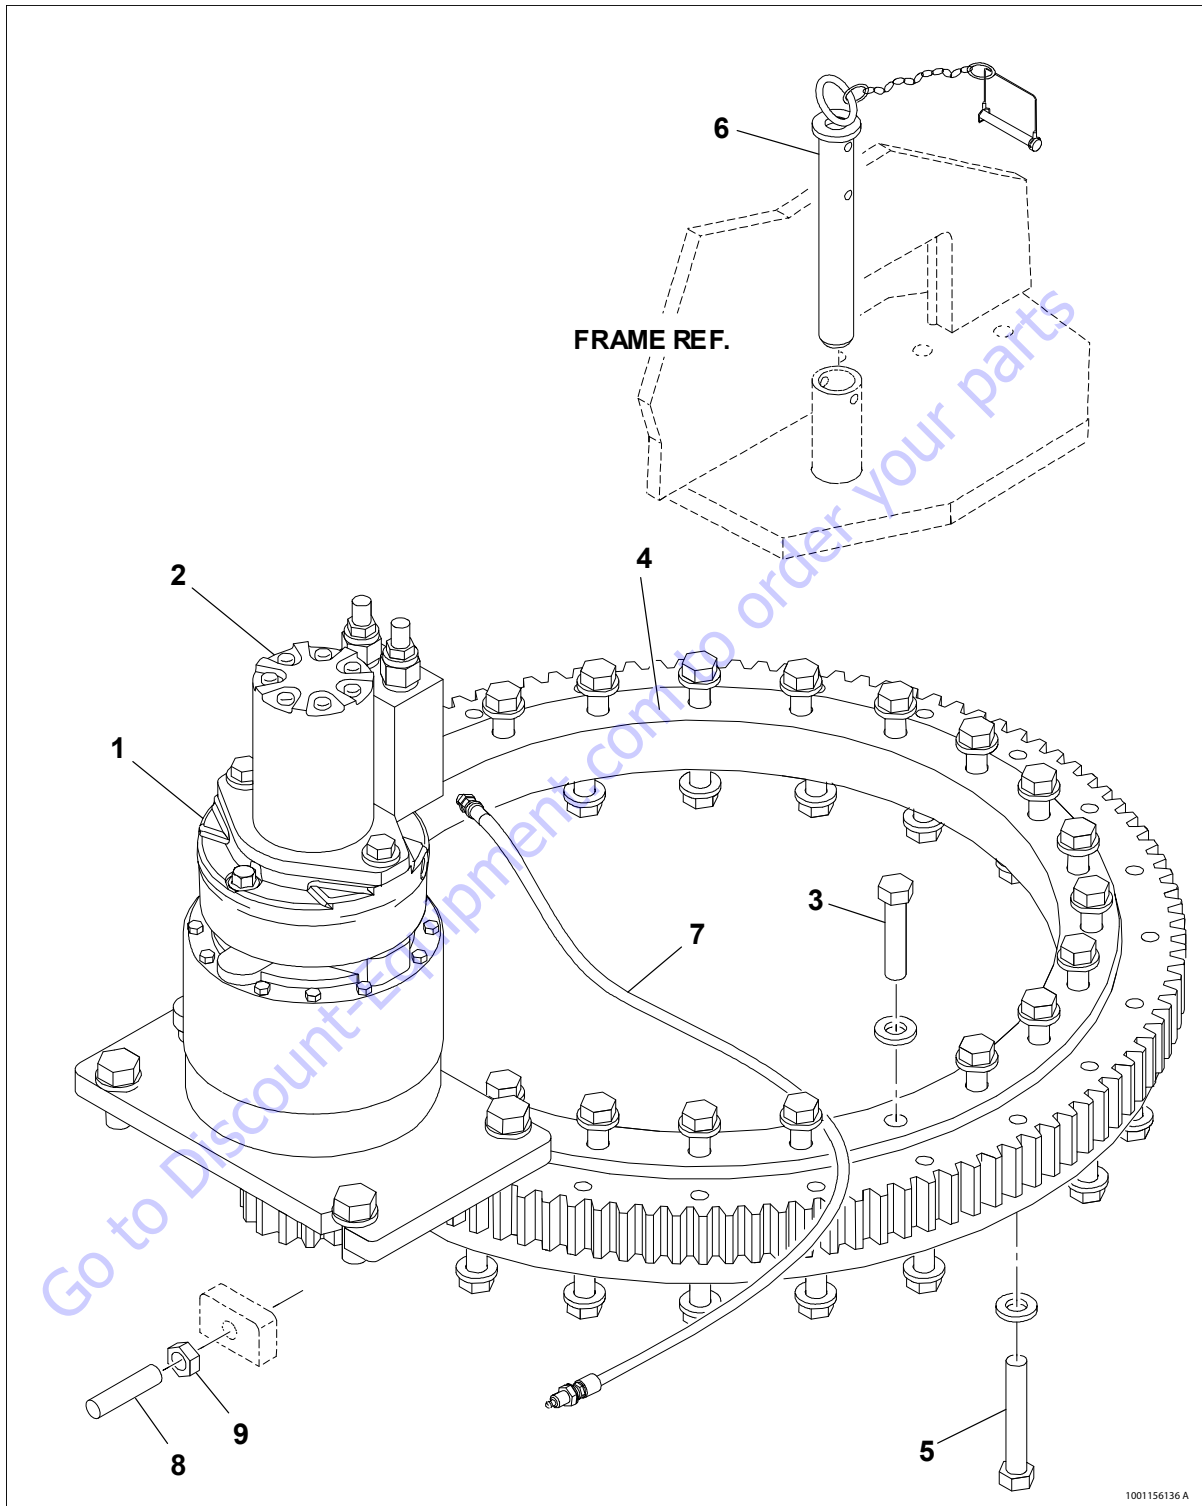

- | | | |
|----------------------------|----------------------------|----------------|
| 1. Swing Drive | 4. Swing Bearing | 7. Grease Line |
| 2. Swing Motor | 5. Outer Race Bearing Bolt | 8. Bolt |
| 3. Inner Race Bearing Bolt | 6. Turntable Lock Pin | 9. Jam Nut |

Figure 3-30. Swing System

3.7 SWING DRIVE

Roll, Leak And Brake Testing

Torque-Hub units should always be roll and leak tested before disassembly and after assembly to make sure that the unit's gears, bearings and seals are working properly. The following information briefly outlines what to look for when performing these tests.

NOTE: *The brake must be released before performing the roll test. This can be accomplished by either pressure testing using the Brake Leak Test procedure below or by tightening the 12 bolts into the piston through the end plate (See Brake Disassembly Procedure).*

NOTE: *Bolts must be removed while performing brake release test.*

Roll Test

The purpose of the roll test is to determine if the unit's gears are rotating freely and properly. You should be able to rotate the gears in your unit by applying constant force to the roll checker. If you feel more drag in the gears only at certain points, then the gears are not rolling freely and should be examined for improper installation or defects. Some gear packages roll with more difficulty than others. Do not be concerned if the gears in your unit seem to roll hard as long as they roll with consistency. Release the pressure at the Brake Housing (6) and remove the test fixtures.

Leak Test (Main Unit)

The purpose of a leak test is to make sure the unit is air tight. You can tell if your unit has a leak if the pressure gauge reading on your air checker starts to fall after the unit has been pressurized and allowed to equalize. Leaks will most likely occur at the pipe plugs, the main seal or wherever o-rings or gaskets are located. The exact location of a leak can usually be detected by brushing a soap and water solution around the main seal and where the o-rings or gaskets meet on the exterior of the unit, then checking for air bubbles. If a leak is detected in a seal, o-ring or gasket, the part must be replaced, and the unit rechecked. Leak test at 10 psi (0.7 bar) for 20 minutes.

Brake Test


The brake test must be performed with the Motor removed and the Brake Test Plate (T-214404) installed. Install the Hex Bolts through Brake Test Plate and torque to 80 - 100 ft. lbs. (108-135 Nm). Install Roll Checking Tool (T-212731) and apply 210 psi (14 bar) to the o-ring port in the side of the Brake Housing. The roll checking fixture should roll freely. Increase the pressure to 3000 psi (207 bar) and perform the Roll Test.

NOTE: *Failure to perform this test may result in damaged or ineffective brake parts.*

Tightening and Torquing Bolts

If an air impact wrench is used to tighten bolts, extreme care should be taken to ensure that the bolts are not tightened beyond their specified torque.

The following steps describe how to tighten and torque bolts or socket head cap screws in a bolt circle.

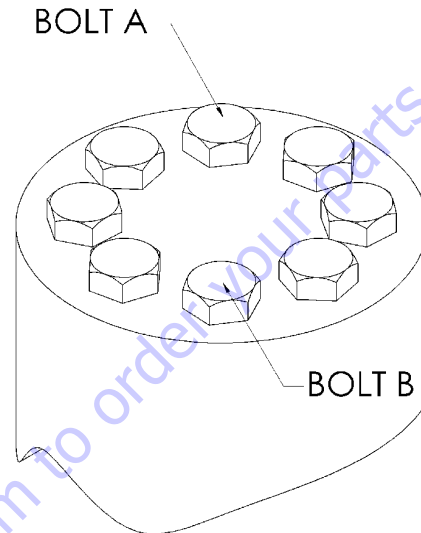


1. Tighten (but do not torque) bolt "A" until snug.
2. Go to the opposite side of the bolt circle and tighten bolt "B" until equally snug.
3. Crisscross around the bolt circle and tighten remaining bolts.
4. Now use a torque wrench to apply the specified torque to bolt "A".
5. Using the same sequence, crisscross around the bolt circle and apply an equal torque to the remaining bolts.

Motor Control Valve Disassembly

NOTE: Refer to Figure 3-31.

1. Place unit on bench with the motor end up.
2. Remove O-ring Plug (1P) and drain the oil from the gear-box.
3. Remove Hydraulic Tubing Assembly (35) by loosening fittings on both ends of tube with a wrench.
4. Using a wrench, loosen jam nuts on Elbow Fittings (30) and remove fittings from Brake (6) and Motor Control Valve (32).
5. Remove O-ring Plugs (23) from Motor Control Valve (32).
6. Remove Motor Control Valve (32) from Motor (31) by removing the four Bolts (21) and washers (22).

Go to Discount-Equipment.com to order your parts

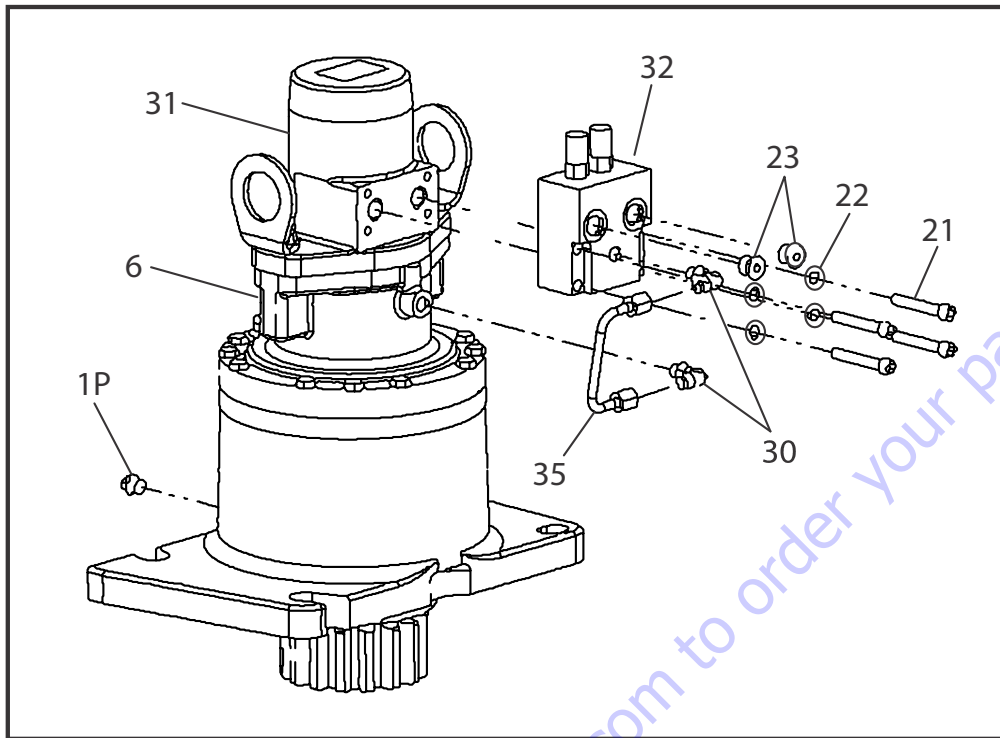

- | | |
|--------------------|-------------------------|
| 1P. O-ring Plug | 30. Elbow Fitting |
| 6. Hydraulic Brake | 31. Hydraulic Motor |
| 21. Hex Bolt | 32. Motor Control Valve |
| 22. Lockwasher | 35. Hydraulic Tubing |
| 23. Plug | |

Figure 3-31. Motor Control Valve

Motor and Brake Disassembly

NOTE: Refer to Figure 3-32.


1. With unit resting on bench with Motor (31) end up, loosen Hex Bolts (29) and remove Lift Lugs (28) from the Motor (31).
2. Pull Motor (31) straight up and remove Motor (31) from Brake Housing (6).
3. Remove O-ring (26) from between Motor (31) and Brake Housing (6).

4. Remove the Springs (8L) from the piston.
5. Apply less than 50 psi (3.45 bar) air to the "brake port" to remove Brake Piston (8A).

CAUTION

THE PISTON MAY MOVE QUICKLY. EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

6. Remove Rotors (8J) and Stators (8K) from Brake Housing (6).

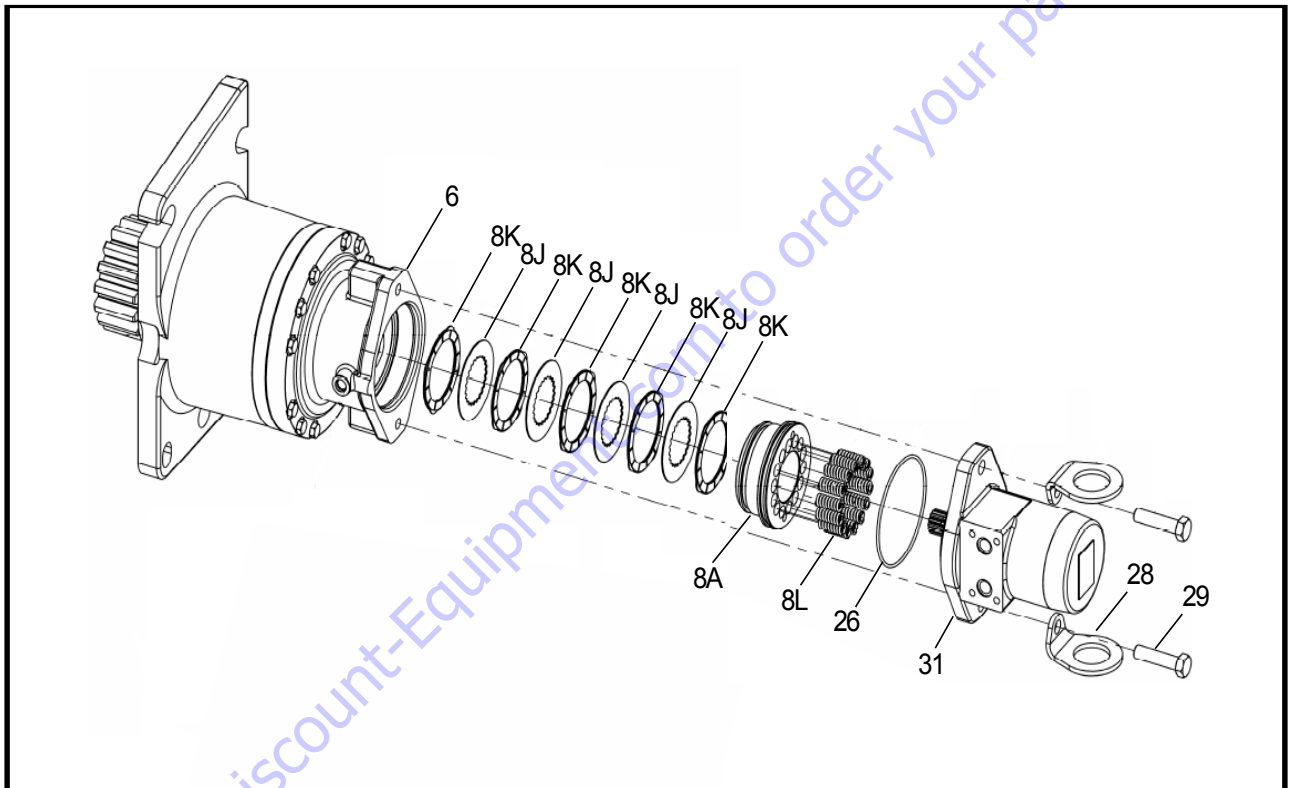


- | | |
|------------------|--------------|
| 6. Brake Housing | 26. O-ring |
| 8A. Brake Piston | 28. Lift Lug |
| 8L. Spring | 29. Hex Bolt |
| 8J. Rotors | 31. Motor |
| 8K. Stator | |

Figure 3-32. Motor and Brake

Main Drive Disassembly

NOTE: Refer to Figure 3-33.

1. Remove Sun Gear (8) with Retaining Ring (44) inside.
2. With the unit resting on the Output Shaft (Pinion) (1A), remove the Bolts (12) from the Brake Housing (6).
3. Remove the Brake Housing (6) from the main assembly.
4. Remove O-ring (5A) from between Brake Housing (6) and Ring Gear (4).
5. Remove Thrust Washer (11) from between Brake Housing (6) and Carrier Subassembly.
6. Remove Ring Gear (4) from Housing (1G).
7. Remove O-ring (5) from between Ring Gear (4) and Housing (1G).
8. Remove Carrier Sub-Assembly.
9. Remove Thrust Washer (11) from between Carrier Sub-Assembly and Internal Gear (2).
10. Remove Internal Gear (2).

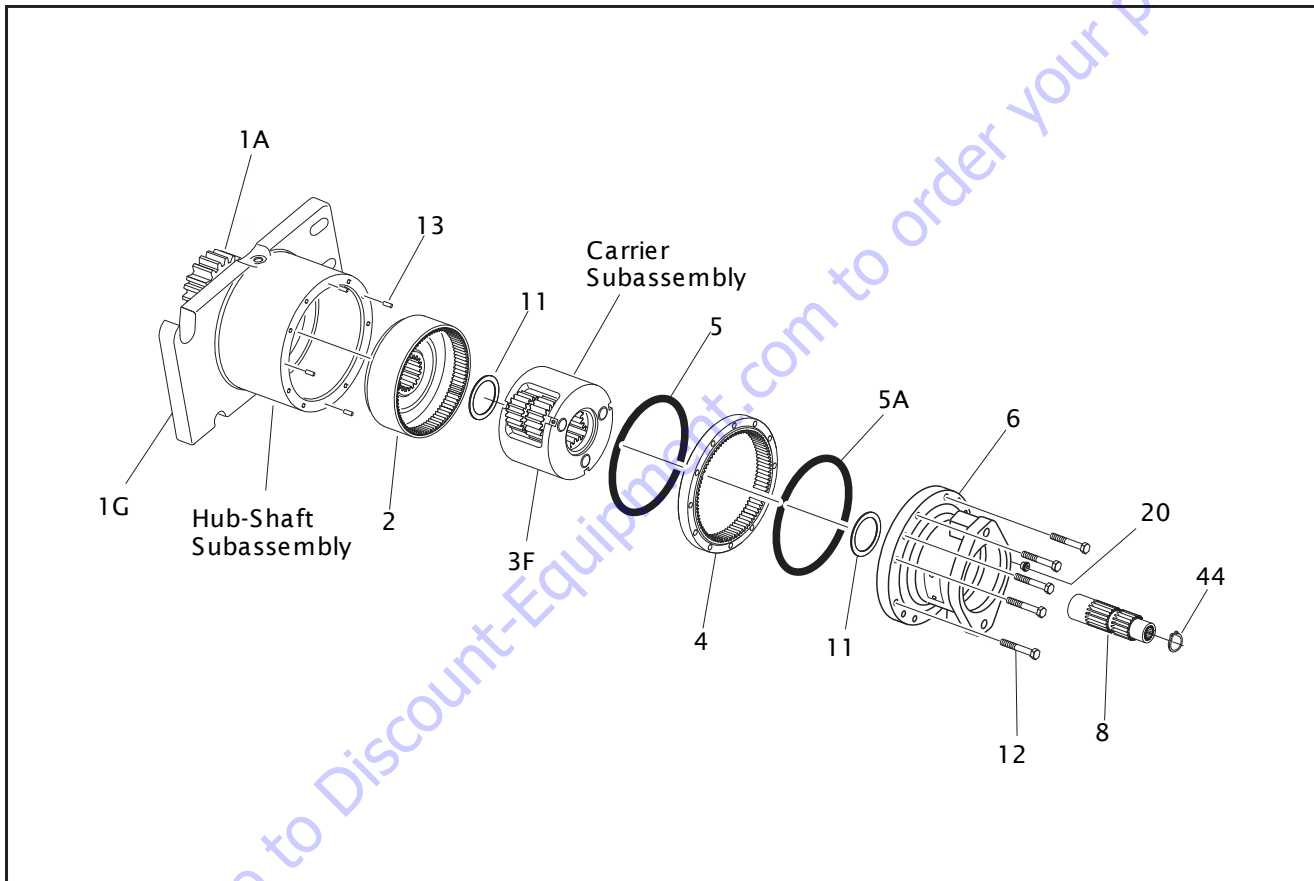

- | | | |
|---------------------------|-------------------|---------------|
| 1A. Output Shaft (Pinion) | 5. O-ring | 12. Bolt |
| 1G. Housing | 5A. O-ring | 13. Dowel Pin |
| 2. Internal Gear | 6. Brake Housing | 20. Pipe Plug |
| 3F. Carrier subassembly | 8. Sun Gear | 44. Ring |
| 4. Ring Gear | 11. Thrust Washer | |

Figure 3-33. Main Drive Assembly

Hub-Shaft Disassembly

NOTE: Refer to Figure 3-34.

1. Using retaining ring pliers remove Retaining Ring (1I) from groove in Output Shaft (1A) and discard.

⚠ CAUTION


EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

2. Remove Thrust Washer (1H).

3. While supporting the Housing (1G) on the Output Shaft (1A) end, press the Output Shaft (1A) out of the Housing (1G).

NOTE: The Lip Seal (1B) will be pressed out of the Housing (1G) by the Bearing Cone (1D) during this step.

4. Remove the Bearing Cone (1E) from the Housing (1G).
5. Use a bearing puller to remove the Bearing Cone (1D) from the Shaft (1A).
6. Bearing Cups (1C & 1F) will remain in Housing (1G).

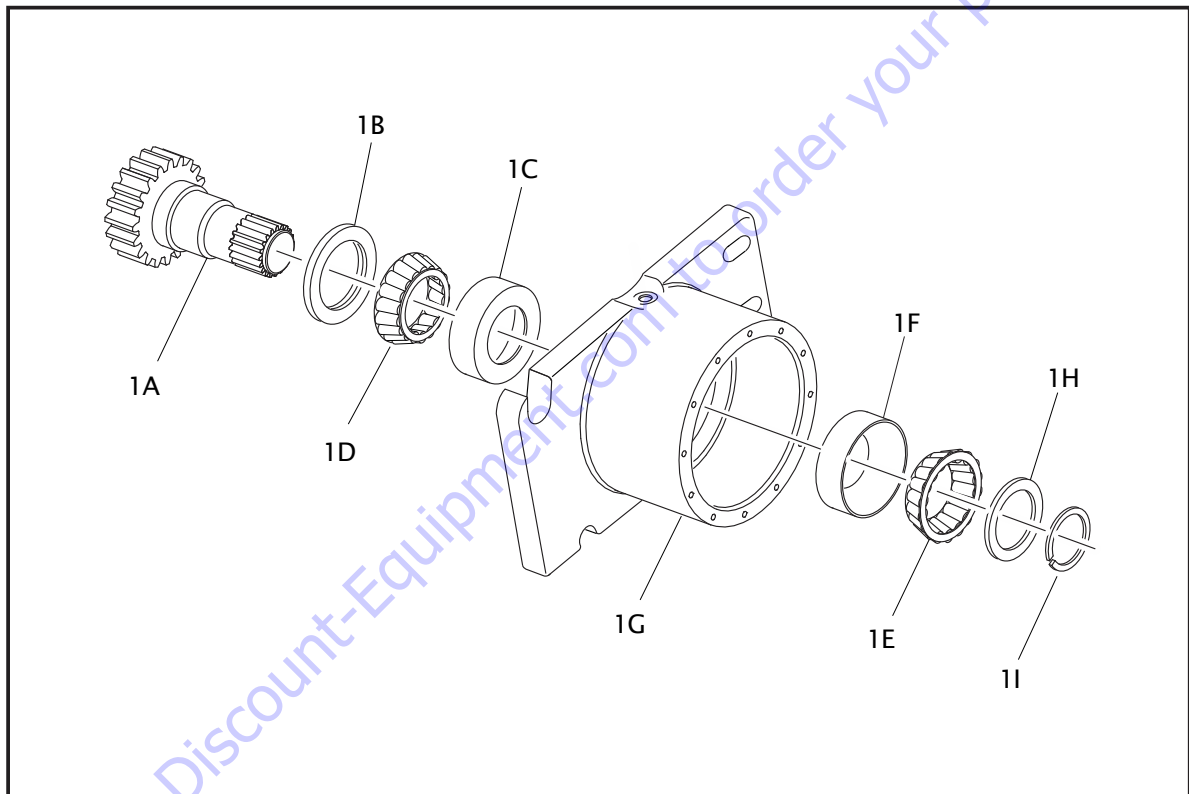

- | | |
|------------------|--------------------|
| 1A. Output Shaft | 1F. Bearing Cup |
| 1B. Lip Seal | 1G. Housing |
| 1C. Bearing Cup | 1H. Thrust Washer |
| 1D. Bearing Cone | 1I. Retaining Ring |
| 1E. Bearing Cone | |

Figure 3-34. Hub-Shaft


Carrier Disassembly

NOTE: Refer to Figure 3-35.

1. Using a 3/16" punch drive the Roll Pin (3G) which holds the Planet Shaft (3E) in the Carrier (3A) down into the Planet Shaft (3E) until it bottoms.

NOTE: Make sure that the Roll Pin has bottomed. Otherwise, damage to the carrier could occur when the Planet Shaft is removed.

2. Remove the Planet Shaft (3E) from the Carrier (3A). Use a small punch to remove the Roll Pin (3D) from the Planet Shaft (3E).
3. Slide the Planet Gear (3F), the two Thrust Washers (3B) out of the Carrier (3A).
4. Remove both rows of Needle Bearings (3C) and the Spacer (3D) from the bore of the Planet Gear (3F).
5. Repeat Steps 1 thru 4 for the remaining two Cluster Gears (3F).

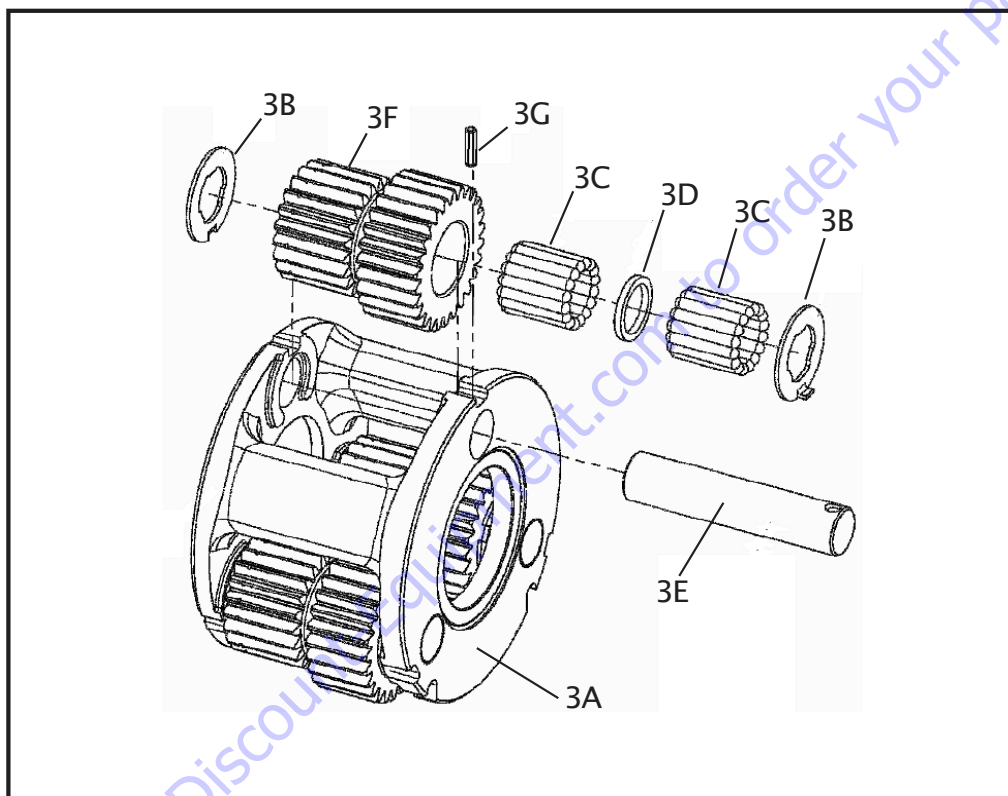

- | | |
|--------------------|------------------|
| 3A. Carrier | 3E. Planet Shaft |
| 3B. Thrust Washers | 3F. Cluster Gear |
| 3C. Needle Bearing | 3G. Roll Pin |
| 3D. Spacer | |

Figure 3-35. Carrier

Hub-Shaft Assembly

NOTE: Refer to Figure 3-34.

1. Press Bearing Cup (1C) into Housing (1G) taking care to insure cup starts square with the bore of Hub (1G).
2. Place Bearing Cone (1D) in Bearing Cup (1C) in Housing (1G).
3. Press or tap Seal (1B) Into the counterbore of Housing (1G) to the point where it becomes flush with the Housing (1G) face. Care should be taken to insure Seal (1B) is being correctly installed (smooth face up). Apply grease to the rubber portion of the seal bore.
4. Invert Hub (1G) and press Bearing Cup (1E) into counterbore of Housing (1G).
5. Carefully lower Housing (1G) onto the Output Shaft (1A) until Bearing Cone (1D) contacts the Output Shaft (1A).
6. Press on the small end of the Bearing Cone (1D), being careful not to contact the bearing cage, until the Bearing Cone (1D) seats on the shoulder of the Output Shaft (1A).
7. Start the Bearing Cone (1F) onto the Output Shaft (1A).
8. Press or tap the Bearing Cone (1F) onto the Output Shaft (1A) until it is just seated in the Bearing Cup (1E). while rotating the Housing (G).
9. Install Bearing Spacer (1H) onto Output Shaft (1A) and against Bearing Cone (1F).
10. Install Retaining Ring (1I) into the groove in the Output Shaft (1A). This Retaining Ring (1I) should never be reused in a repair or rebuild.

WARNING

EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

11. Tap the Retaining Ring (1I) with a soft metal punch to ensure that the Retaining Ring (1I) is completely seated in the groove of the Output Shaft (1A).

WARNING

EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

12. Install O-ring Plug (1P) and torque to 23 to 24 ft.lbs. (31 to 32 Nm).

Carrier Assembly

NOTE: Refer to Figure 3-35.

1. Apply a liberal Coat of grease to the bore of Cluster Gear (3F). This will enable the Needle Rollers (3C) to be held in place during assembly.
2. Install the first row of Needle Rollers (3C) into the bore of Cluster Gear (3F).
3. Insert Spacer (3D) into bore of Cluster Gear (3F) on top of the Needle Rollers (3C).
4. Place second row of Needle Rollers (3C) into bore of Cluster Gear (3F) against Spacer (3D).
5. Place Carrier (3A) so that one of the roll pin holes is straight up.
6. Start Planet Shaft (3E) through the hole in Carrier (3A). Using ample grease to hold it in position, slide one Thrust Washer (3B) over the Planet Shaft (3E) with the tang resting in the cast slot of the Carrier (3A).
7. With large end of Cluster Gear (3F) facing the roll pin hole in the Carrier, place the Cluster Gear into position in carrier (3A) and push Planet Shaft (3E) through the Cluster Gear (3F) without going all the way through.
8. Slide the second Thrust Washer (3B) between the Cluster Gear (3F) and the Carrier (3A) with the tang of the washer located in the cast slot of the Carrier (3A). Finish sliding the Planet Shaft (3E) through the Thrust Washer (3B) and into the Carrier (3A).
9. Position the non-chamfered side on the Planet Shaft (3E) roll pin hole so that it is in line with the hole in the Carrier (3A) using a 1/8" (3 mm) diameter punch.
10. After using a 3/16" (5 mm) punch to align the two roll pin holes. Drive the Roll Pin (3G) through Carrier (3A) and into the Planet Shaft (3E) until the Roll Pin (3G) is flush with the bottom of the cast slot in the Carrier (3A) outside diameter at the thrust washer (3B) tang. Use a 1/4" (6 mm) pin punch to make sure the Roll Pin (3G) is flush in the slot.
11. Repeat Steps 1 thru 10 for the remaining two Cluster Gears(3F).

Main Drive Assembly

NOTE: Refer to Figure 3-33.

1. With the Hub Shaft Sub-Assembly resting on the Shaft (1A) install Internal Gear (2). The spline of the Internal Gear (2) bore will mesh with the spline of the Output Shaft (1A). This will be a tight fit.
2. Inspect the location of the Internal Gear (2) on the Output Shaft (1A). The portion of the Output Shaft (1A) should protrude through the Internal Gear (2) bore.
3. Install 4 Dowel Pins (13) into counter bore holes in Hub (1G).
4. Install Thrust Washer (11) in counter bore of Carrier Sub-Assembly (Small Cluster-Gear end) Use grease to hold in place.
5. Place O-ring (5) into Hub counter-bore. Use grease to hold O-ring in place.

⚠ WARNING

BEWARE OF SHARP EDGES OF THE COUNTER BORE WHILE SEATING THIS O-RING.

6. Place Carrier Sub-Assembly on bench with the large end of Cluster Gears (3F) facing up with one at the 12 o'clock position. Find the punch marked tooth on each gear at the large end and locate at 12 o'clock (straight up) from each planet pin. Marked tooth will be located just under the Carrier on upper two gears. Check the timing through the slots in the carrier (See Carrier Sub-Assembly).
7. With large shoulder side of Ring Gear (4) facing down, place Ring Gear (4) over (into mesh with) cluster gears (3F). Be sure that cluster gear timing marks (punch marks) remain in correct location during Ring Gear (4) installation. The side of the Ring Gear (4) with an "X" or punch mark stamped on it should be up.
8. While holding Ring Gear (4) and Cluster Gears (3F) in mesh, place small end of Cluster Gears (3F) into mesh with the Internal Gear (2). On the Ring Gear (4) locate the hole marked "X", or punch marked, over one of the marked counter-bored holes (Step 5) in Hub (1G). Check timing through the slots in the carrier. Rotate carrier in assembly to check for freedom of rotation.

NOTE: If gears do not mesh easily or Carrier Assembly does not rotate freely, then remove the Carrier and Ring Gear and check the Cluster Gear timing.

9. Install Thrust Washer (11) into the counter-bore on the face of the carrier. Use grease to hold in place.
10. Place O-ring (5A) into counter-bore or Brake Housing (6). Use grease to hold O-Ring in place.

⚠ CAUTION

BEWARE OF SHARP EDGES OF THE COUNTER-BORE WHILE SEATING THIS O-RING.

11. Install the Brake Housing (6), taking care to correctly align Pipe Plug (20) with those in the Hub (1G).
12. Install Bolts (12) through the Brake Housing (6) into the Hub (1G) and torque to 23-27 ft.lbs. (31-37 Nm).
13. With gearbox standing on the pinion end fill gearbox with 43 oz. of ISO VG150/VG220 gear Oil.
14. Install Retaining Ring (44) into the groove in the Sun Gear (8).
15. Install the Sun Gear (8) into mesh with the Planet Gears (3F).
16. Install Pipe Plug (20) into Cover (6) torque to 23 to 24 ft.lbs. (31-32 Nm).

Motor and Brake Assembly

NOTE: Refer to Figure 3-32.

1. Alternate Stators (8K) (O.D. lobes) with Rotors (8J) (I.D. splines) into bore of Brake Housing (6). starting with a Stator (8K) and ending with a Stator (8K).
2. Grease the O-rings (8F) & (8D) and Back-up rings (8H) & (8E). and place them in their respective grooves in the Brake Housing (6) and Piston (8A). Make sure the Back-up rings are correctly positioned.
3. Apply grease sparingly to the Piston O.D. (8A) and the bore of the Brake Housing (6). Insert Piston (8A) into Brake Housing (6) be sure not to damage the O-rings.
4. Install Springs (8L) into the spring pockets of the Piston (8A).
5. Test the brake and perform the roll test. Remove the Brake Test Plate.
6. Install the O-ring (26) onto the pilot of the Motor (31), use grease to keep the O-ring in place.
7. Place Motor (31) into Brake pilot, and line up holes.
8. Assemble Lift Lugs (28) onto Hex Bolts (29). Assemble Hex Bolts (29) with Lift Lugs (28) through the Motor (31) and Brake (6) against Motor flange. Torque to 80-100 ft.lbs. (108-136 Nm).


Motor Control Valve Assembly

NOTE: Refer to Figure 3-31.

1. Lay assembly down with motor ports facing up. Remove the two plastic plugs in the motor ports, being careful not to lose the O-ring in each port. Assemble the Motor control Valve (32) onto the Motor (31) with Bolt (21) and Lock Washers (22). Torque Bolts (21) to 23-27 ft.lbs. (31-37 Nm).

NOTE: Be sure to align the holes in the control valve with the motor ports.

2. Install Elbow Fittings (30) into Brake (6). Do not tighten jam nuts.
3. Install Elbow Fittings (30) into Motor Control Valve (32). Do not tighten jam nuts.
4. Assemble Tube (35) into Elbow Fittings (30) and torque to 13-15 ft.lbs (18-20 Nm). Tighten the jam nuts on the Elbow Fittings (30) and torque to 13-15 ft.lbs. (18-20 Nm).
5. Install one O-ring Plug (23) into Motor Control Valve (32) and torque to 30-31 ft.lbs. (41-42 Nm).
6. Pressure test brake, tube and control valve connections by applying 3000 psi (207 bar) pressure to the open port in the Motor Control Valve (32) and holding for 1 minute. Check for leaks at the control-valve-motor interface and the tube connections. Release pressure and install the remaining O-ring Plug (23) into Motor Control Valve (32) and torque to 30-31 ft.lbs. (41-42 Nm).

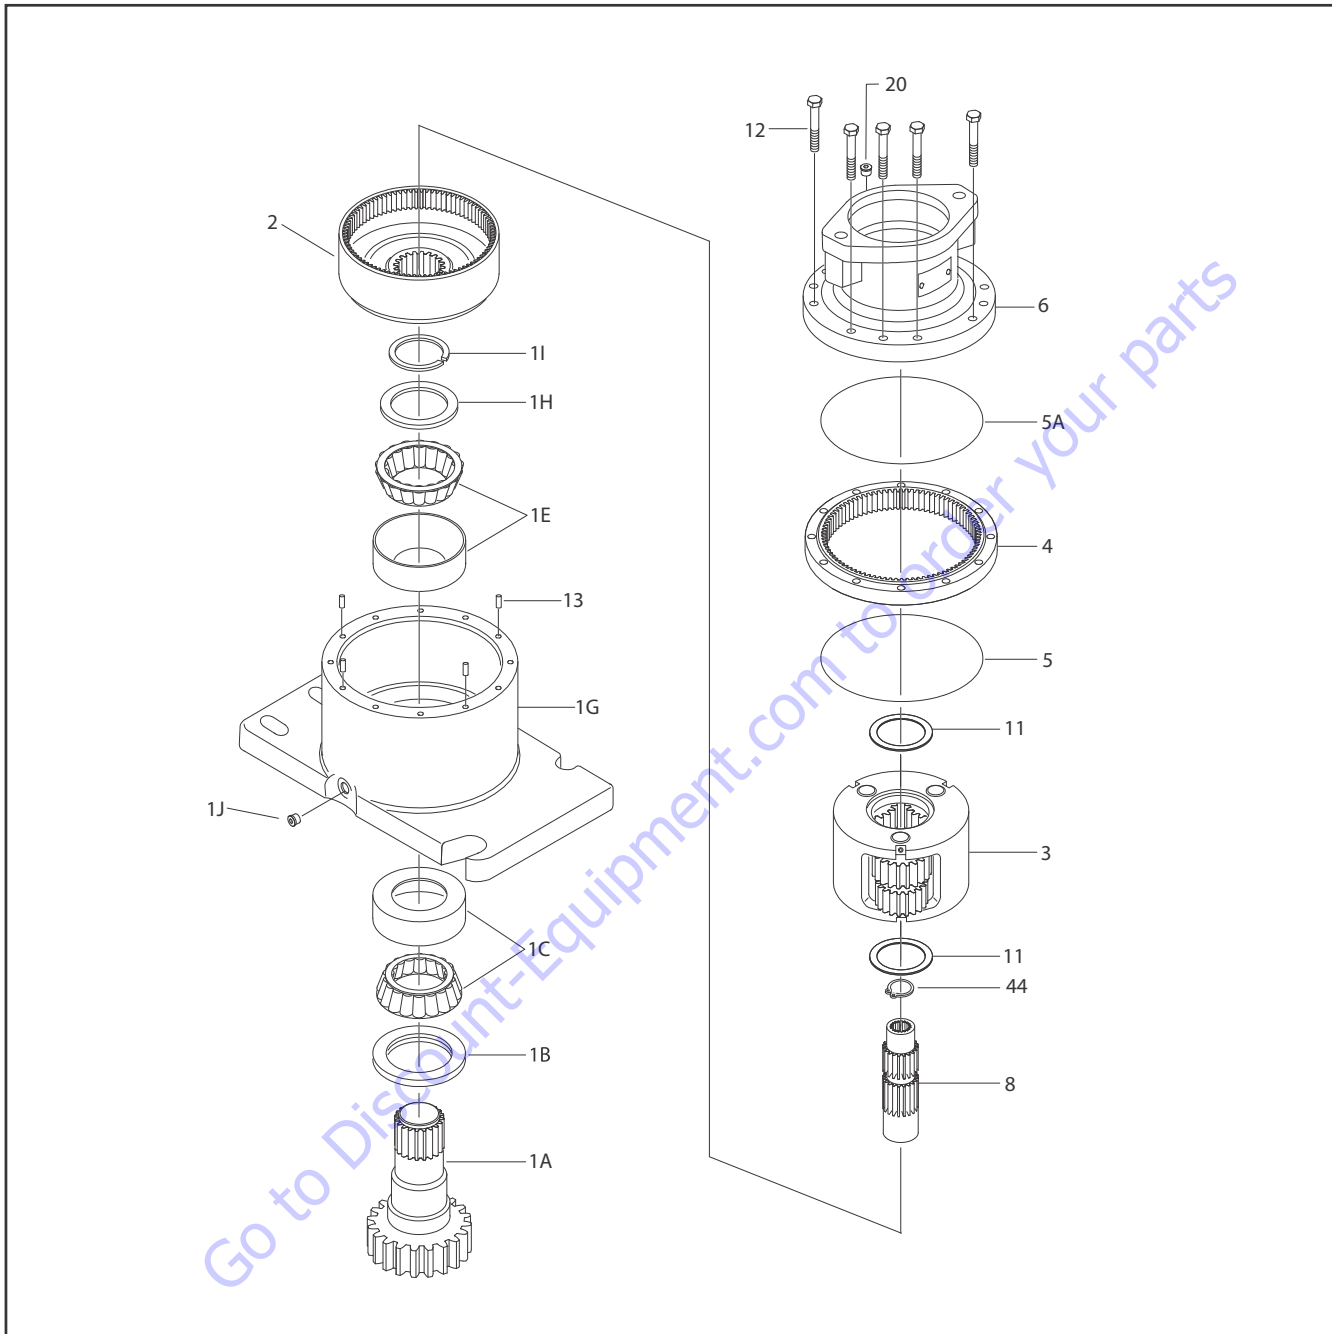

- 1A. Output Shaft
- 1B. Lip Seal
- 1C. Bearing
- 1D. Bearing


- 1G. Housing
- 1H. Thrust Washer
- 1I. Retaining Ring
- 1J. Pipe Plug

- 2. Internal Gear
- 3. Carrier Assembly
- 4. Ring Gear
- 5. O-Ring

- 5A. O-Ring
- 6. Brake Housing
- 8. Sun Gear
- 11. Thrust washer

- 12. Bolt
- 13. Dowel Pin
- 20. Pipe Plug
- 44. Internal Retaining Ring

Figure 3-36. Swing Drive Assembly

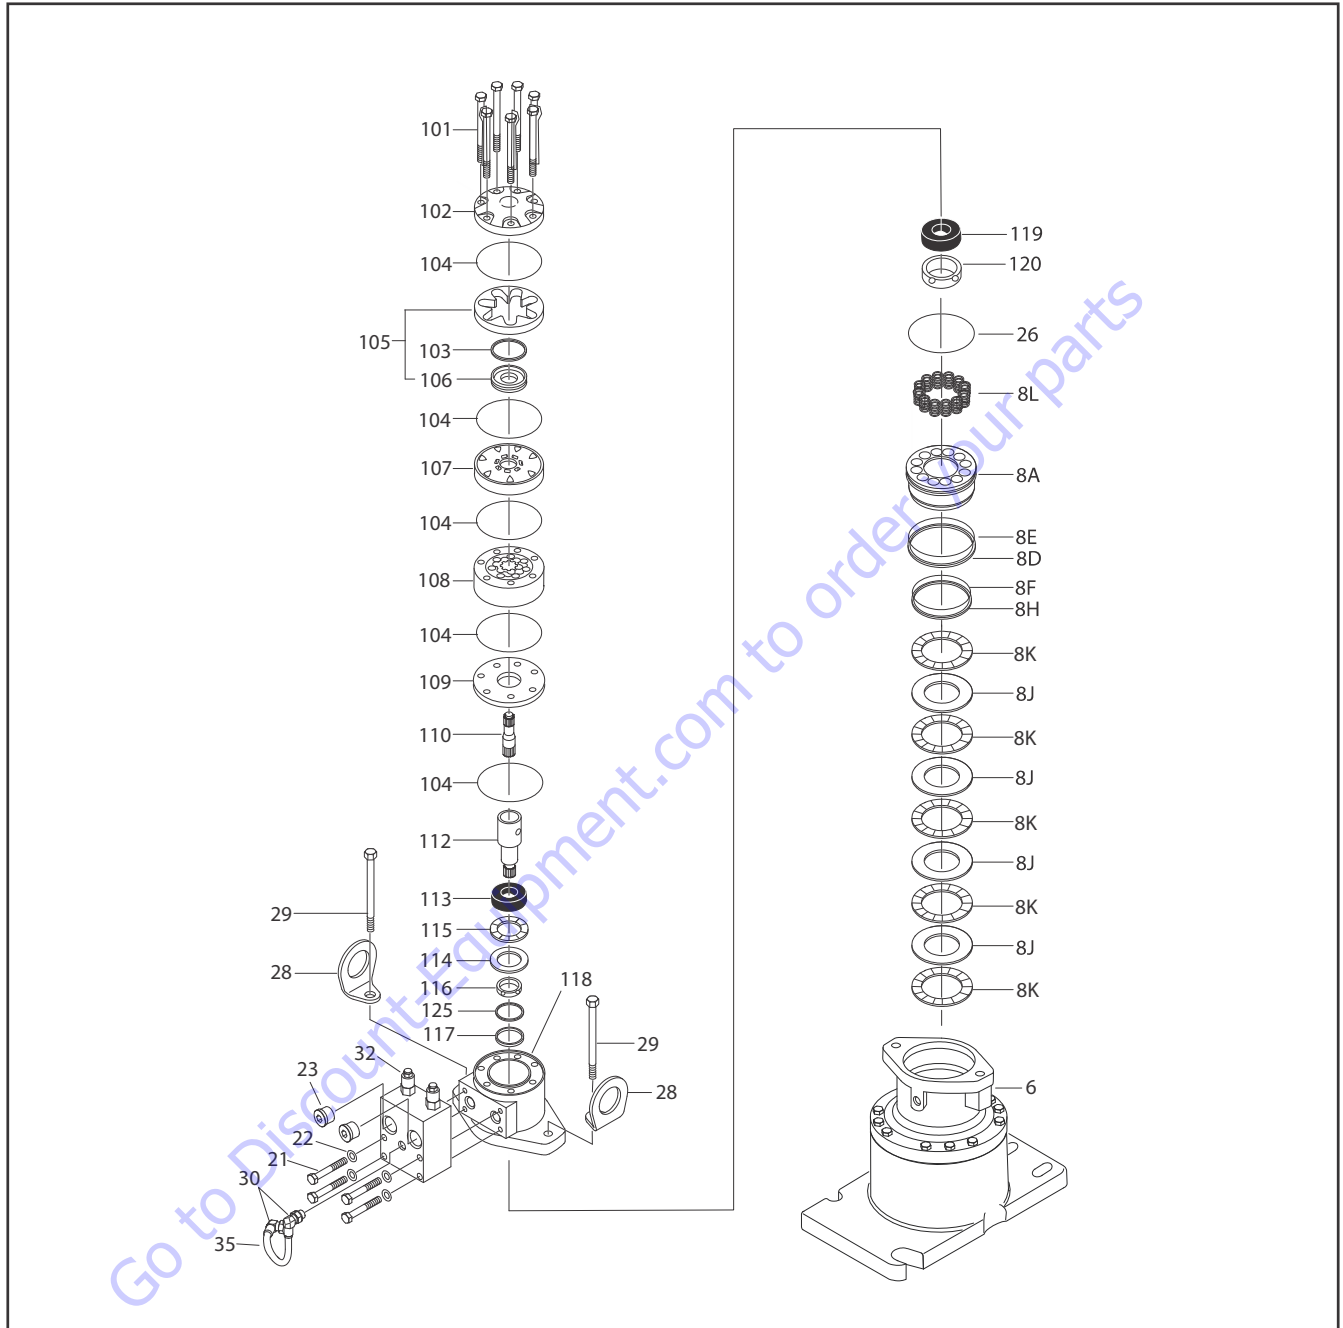


- | | | | | |
|------------------|-------------------|-------------------------------|---------------------|---------------------|
| 6. Brake Housing | 8L. Spring | 35. Tube | 108. Rotor Set | 117. Back-up Washer |
| 8A. Piston | 21. Thrust Washer | 101. Bolt | 109. Wear Plate | 118. Housing |
| 8D. O-Ring | 22. Lock washer | 102. End Cover | 110. Drive Link | 119. Outer Bearing |
| 8E. Back-Up Ring | 23. Pipe Plug | 103. Commutator Seal | 112. Coupling Shaft | 120. Seal |
| 8F. O-Ring | 26. O-Ring | 104. Ring Seal | 113. Inner Bearing | 125. Back-up Washer |
| 8H. Back-up Ring | 28. Lifting lug | 105. Commutator and Ring Assy | 114. Thrust Washer | |
| 8J. Rotor Disc | 29. Bolt | 106. Ring | 115. Thrust Bearing | |
| 8K. Stator Disc | 30. Elbow | 107. Manifold | 116. Inner Seal | |

Figure 3-37. Swing Motor and Brake Assembly

3.8 SWING MOTOR

Disassembly and inspection



1. Place the Torqmotor™ in a soft jawed vice, with coupling shaft (12) pointed down and the vise jaws clamping firmly on the sides of the housing (18) mounting flange or port bosses. Remove manifold port O-Rings (18A) if applicable.

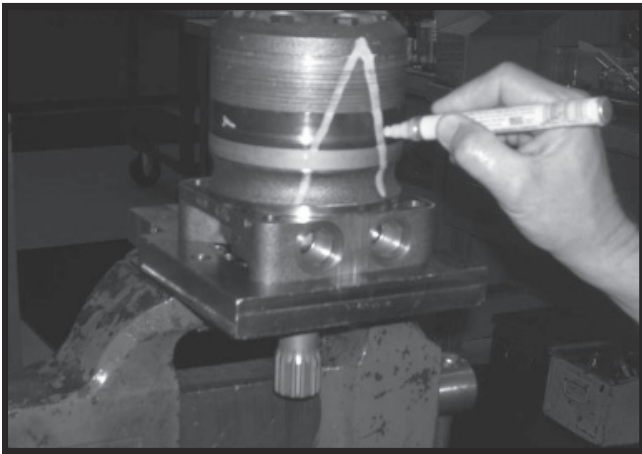

⚠ WARNING

IF THE TORQMOTOR™ IS NOT FIRMLY HELD IN THE VISE, IT COULD BE DISLODGED DURING THE SERVICE PROCEDURES, CAUSING INJURY.

2. Scribe an alignment mark down and across the Torqmotor™ components from end cover (2) to housing (18) to facilitate reassembly orientation where required. Loosen two shuttle or relief valve plugs (21) for disassembly later if included in end cover. 3/16 or 3/8 inch Allen wrench or 1 inch hex socket required.

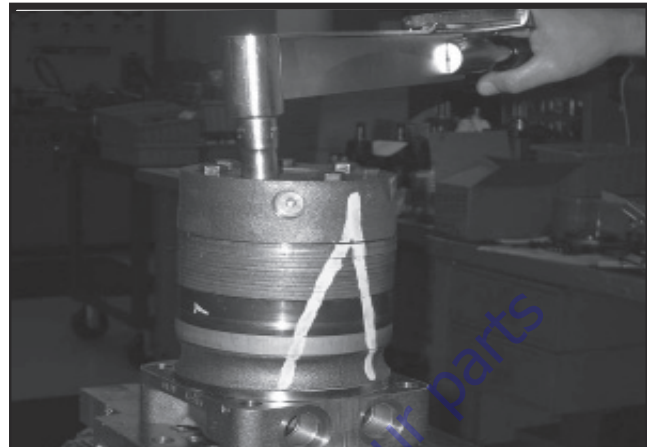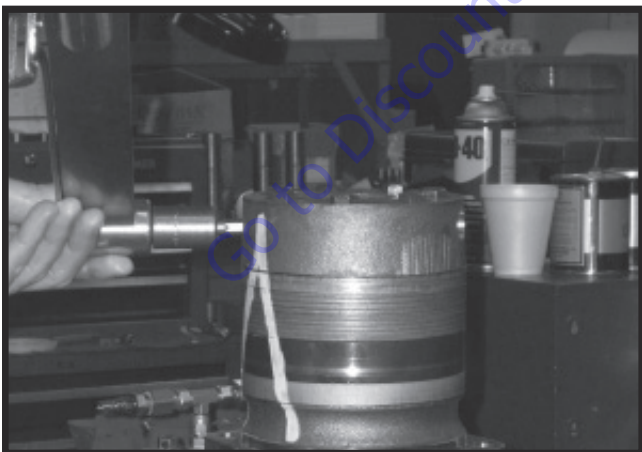


3. Remove the five, six, or seven special ring head bolts (1) using an appropriate 1/2 or 9/16 inch size socket. Inspect bolts for damaged threads, or sealing rings, under the bolt head. Replace damaged bolts.



4. Remove end cover assembly (2) and seal ring (4). Discard seal ring.



NOTE: Refer to the appropriate "alternate cover construction" on the exploded view to determine the end cover construction being serviced.

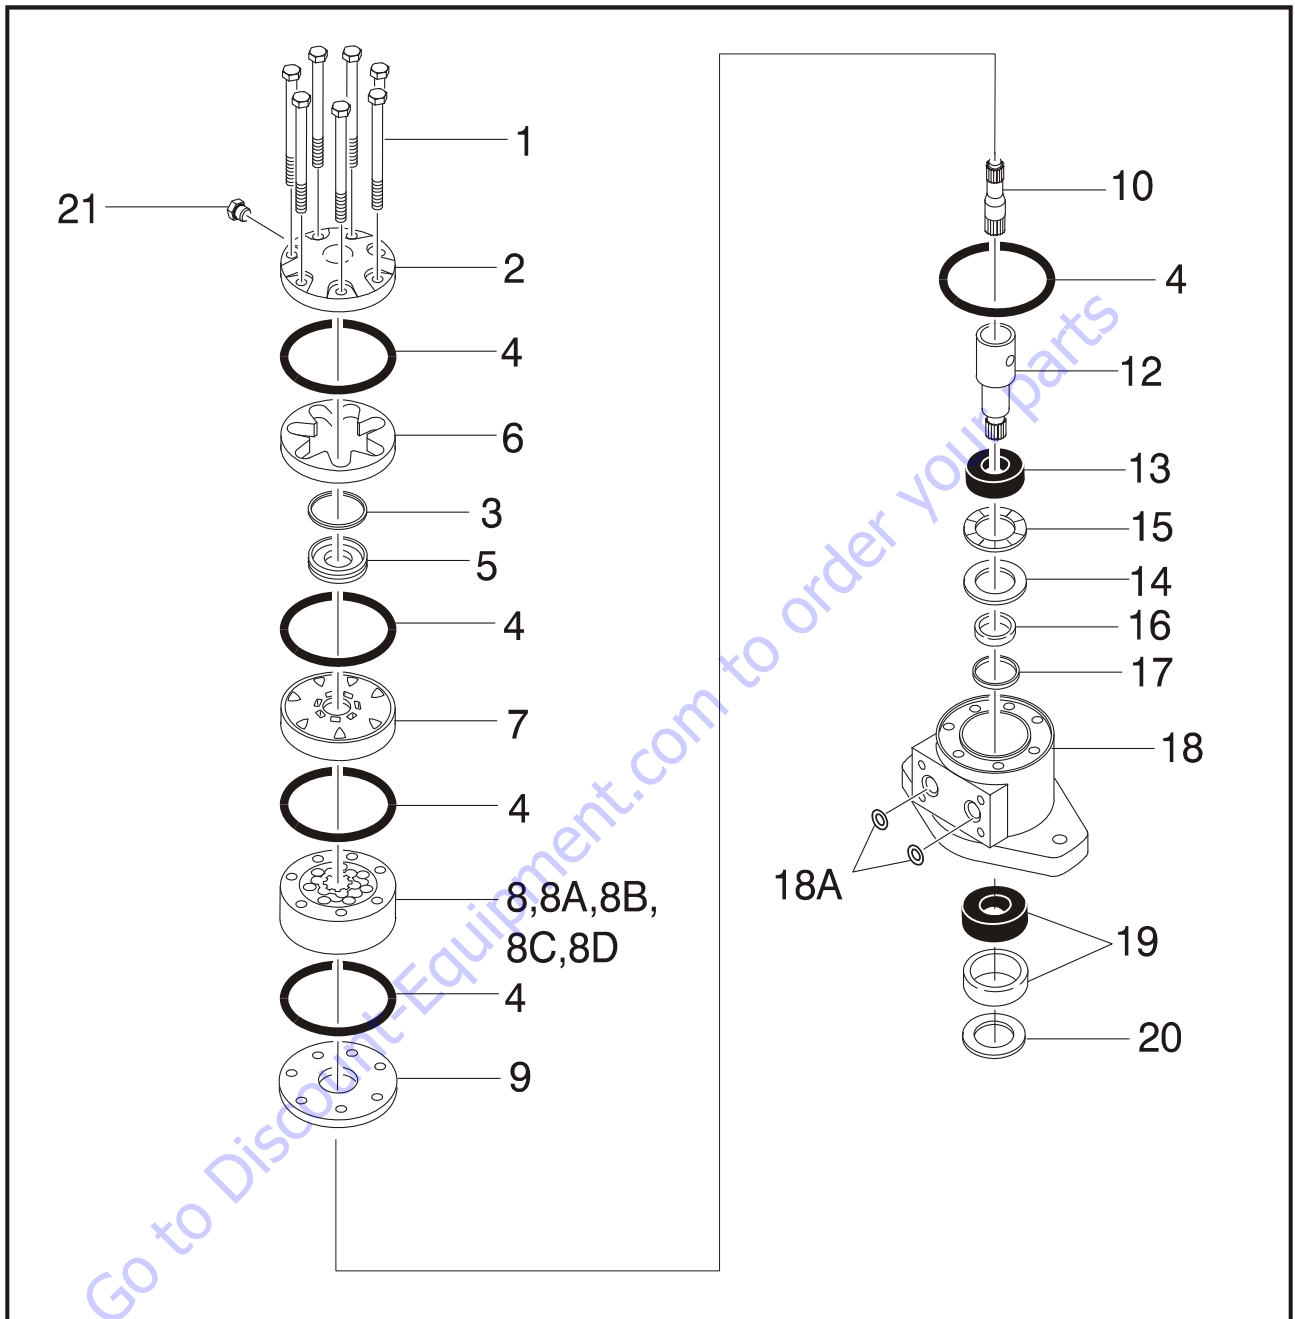


- | | | | |
|-------------------------|---------------------------|----------------------------|----------------------------|
| 1. Special Bolts | 8. Rotor Set | 12. Coupling Shaft | 18A. O-Ring |
| 2. End Cover | 8A. Rotor | 13. Bearing/Bushing, Inner | 19. Bearing/Bushing, Outer |
| 3. Seal Ring-Commutator | 8B. Stator or Stator Vane | 14. Thrust Washer | 20. Dirt & Water Seal |
| 4. Seal Ring | 8D. Stator Half | 15. Thrust Bearing | 21. Plug |
| 5. Commutator Ring | 9. Wear Plate | 16. Seal | |
| 6. Commutator Ring | 10. Drive Link | 17. Back-up Washer | |
| 7. Manifold | 11. Not Used | 18. Housing | |

Figure 3-38. Swing Drive Motor

SECTION 3 - CHASSIS & TURNTABLE

5. If the end cover (2) is equipped with shuttle valve components, remove the two previously loosened plugs (21).

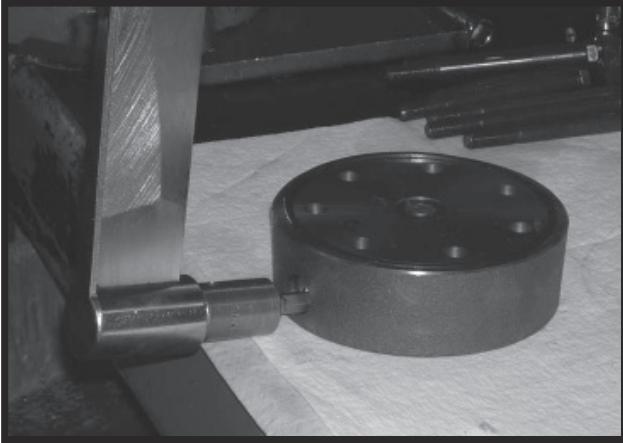


NOTICE

BE READY TO CATCH THE SHUTTLE VALVE OR RELIEF VALVE COMPONENTS THAT WILL FALL OUT OF THE END COVER VALVE CAVITY WHEN THE PLUGS ARE REMOVED.

NOTE: O- ring is not included in seal kit but serviced separately, if required.

NOTE: The insert and if included the orifice plug in the end cover (2) must not be removed as they are serviced as an integral part of the end cover.

6. Thoroughly wash end cover (2) in proper solvent and blow dry. Be sure the end cover valve apertures, including the internal orifice plug, are free of contamination. Inspect end cover for cracks and the bolt head recesses for good bolt head sealing surfaces. Replace end cover as necessary.

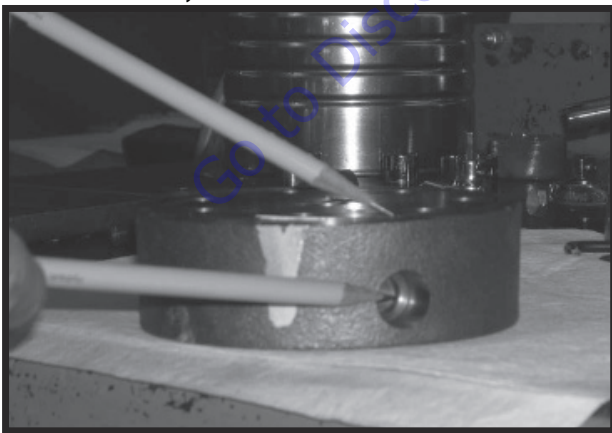


NOTE: A polished pattern (not scratches) on the cover from rotation of the commutator (5) is normal. Discoloration would indicate excess fluid temperature, thermal shock, or excess speed and require system investigation for cause and close

inspection of end cover, commutator, manifold, and rotor set.


7. Remove commutator ring (6). Inspect commutator ring for cracks, or burrs.



8. Remove commutator (5) and seal ring (3) Remove seal ring from commutator, using an air hose to blow air into ring groove until seal ring is lifted out and discard seal ring. Inspect commutator for cracks or burrs, wear, scoring, spalling or brinelling. If any of these conditions exist, replace commutator and commutator ring as a matched set.

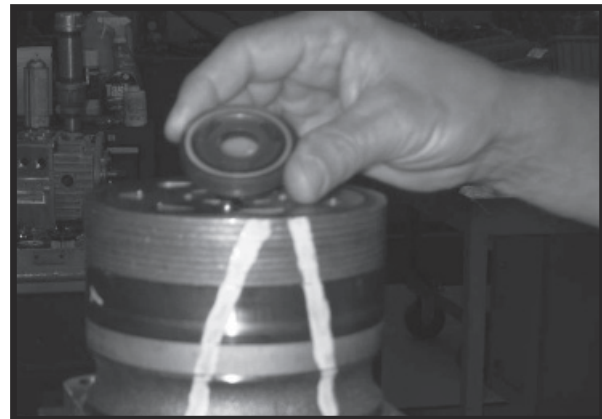


9. Remove manifold (7) and inspect for cracks surface scoring, brinelling or spalling. Replace manifold if any of these conditions exist. A polished pattern on the ground surface from commutator or rotor rotation is normal. Remove and discard the seal rings (4) that are on both sides of the manifold.

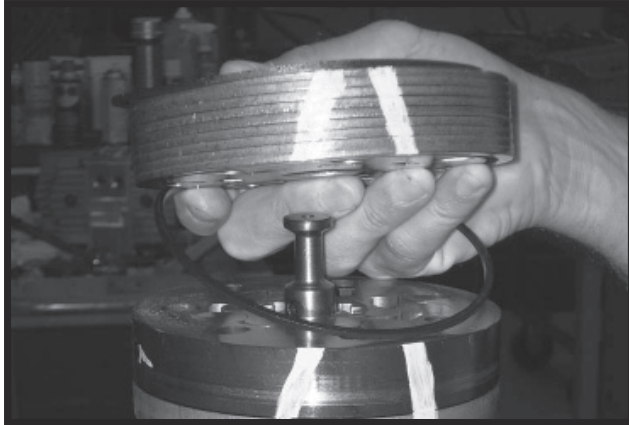

NOTE: The manifold is constructed of plates bonded together to form an integral component not subject to further disassembly for service. Compare configuration of both sides of them as if old to ensure that same surface is reassembled against the rotor set.

10. Remove rotor set (8) and warplane (9), together to retain the rotor set in its assembled form, maintaining the same rotor vane (8C) to stator (8B) contact surfaces. The drive link (10) may come away from the coupling shaft (12) with the rotor set, and wear plate. You may have to shift the rotor set on the warplane to work the drive link out of the rotor (8A) and warplane. Inspect the rotor set in its assembled form for nicks, scoring, or spalling on any surface and for broken or worn splines. If the rotor set component requires replacement, the complete rotor set must be replaced as it is a matched set. Inspect the warplane for cracks, brinelling, or scoring. Discard seal ring (4) that is between the rotor set and wear plate.

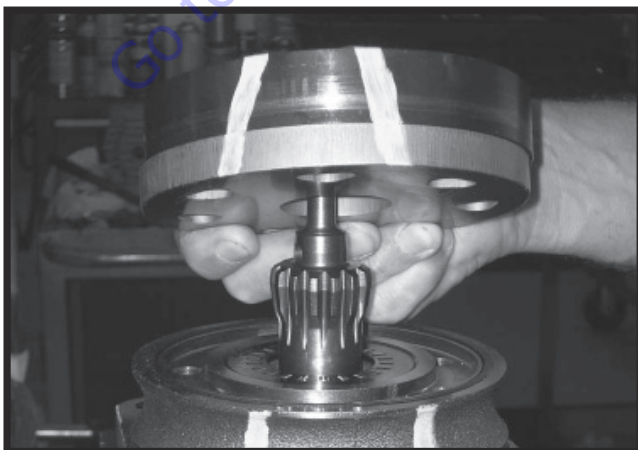


NOTE: The rotor set (8) components may become disassembled during service procedures. Marking the surface of the rotor and stator that is facing UP, with etching ink or grease pencil before removal from Torqmotor™ will ensure correct reassembly of rotor into stator and rotor set into Torqmotor™. Marking all rotor components and mating spline components for exact repositioning at assembly will ensure maximum wear life and performance of rotor set and Torqmotor™.



NOTE: Series TG and TH may have a rotor set with two stator halves (8B & 8D) with a seal ring (4) between them and two sets of seven vanes (8C & 8E). Discard seal ring only if stator halves become disassembled during the service procedures.

NOTE: A polished pattern on the wear plate from rotor rotation is normal.


11. Place rotor set (8) and wear plate (9) on a flat surface and center rotor (8A) in stator (8B) such that two rotor lobes (180 degrees apart) and a roller vane (8C) centerline are on the same stator centerline. Check the rotor lobe to roller vane clearance with a feeler gage at this common centerline. If there is more than 0.005 inches (0.13 mm) of clearance, replace rotor set.

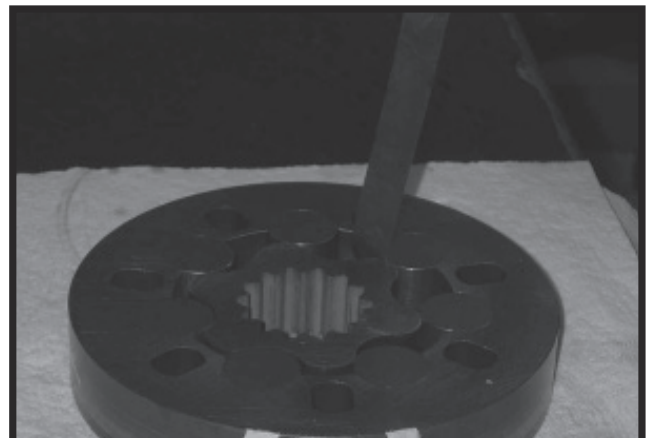


SECTION 3 - CHASSIS & TURNTABLE

NOTE: If rotor set (8) has two stator halves (8B & 8D) and two sets of seven vanes (8C & 8E) as shown in the alternate construction TG rotor set assembly view, check the rotor lobe to roller vane clearance at both ends of rotor.


12. Remove drive link (10) from coupling shaft (12) if it was not removed with rotor set and wear plate. Inspect drive link for cracks and worn or damaged splines. No perceptible lash (play) should be noted between mating spline parts. Remove and discard seal ring (4) from housing (18).

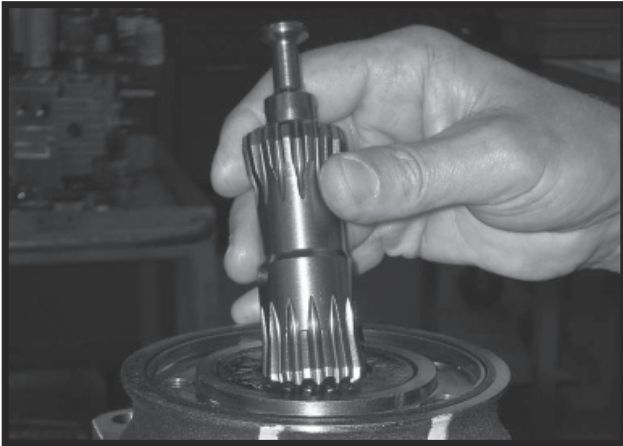


13. Remove thrust bearing (11) from top of coupling shaft (12). Inspect for wear, brinelling, corrosion and a full complement of retained rollers.

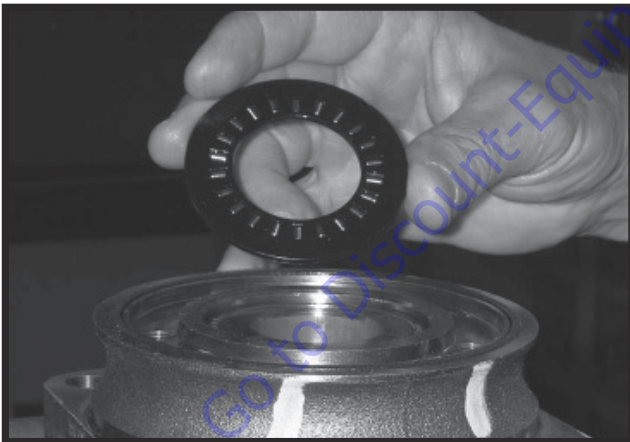

14. Check exposed portion of coupling shaft (12) to be sure you have removed all signs of rust and corrosion which might prevent its withdrawal through the seal and bearing. Crocus cloth or fine emery paper may be used. Remove any key (12A), nut (12B), washer (12C), bolt (12D), lock washer (12E), or retaining ring (12F).

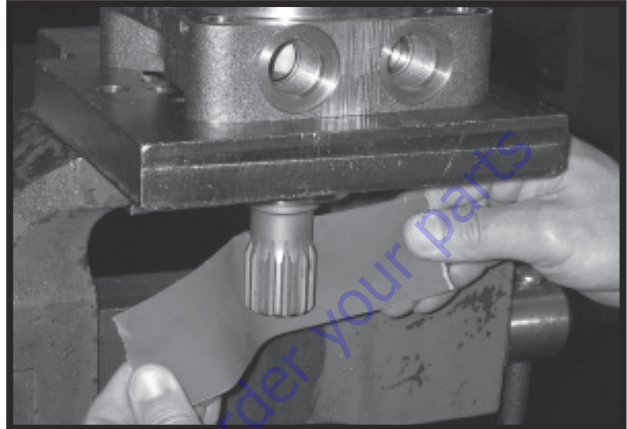

15. Remove coupling shaft (12), by pushing on the output end of shaft. Inspect coupling shaft bearing and seal surfaces for spalling, nicks, grooves, severe wear or corrosion and discoloration. Inspect for damaged or worn internal and external splines or keyway. Replace coupling shaft if any of these conditions exist.

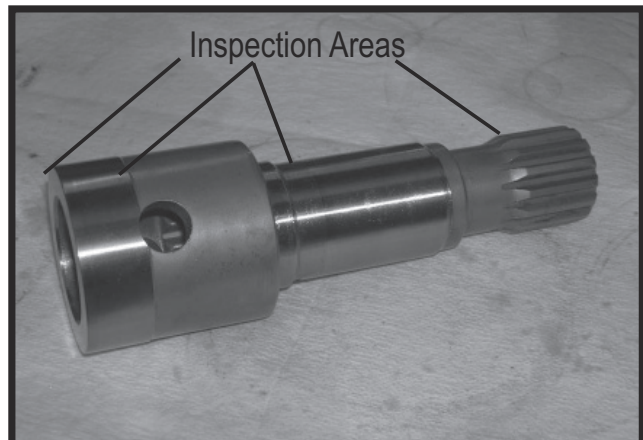

NOTE: Minor shaft wear in seal area is permissible. If wear exceeds 0.020 inches (0.51 mm) diametrically, replace coupling shaft.

NOTE: A slight "polish" is permissible in the shaft bearing areas. Anything more would require coupling shaft replacement.

- 16. Remove and discard seal ring (4) from housing (18).
- 17. Remove thrust bearing (15) and thrust washer (14) Inspect for wear, brinelling, corrosion and a full complement of retained rollers.




- 18. Remove seal (16) and back up washer (17) from Small Frame, housing (18). Discard both.





- 19. Remove housing (18) from vise, invert it and remove and discard seal
- 20. A blind hole bearing or seal puller is required.



- 21. Inspect housing (18) assembly for cracks, the machined surfaces for nicks, burrs, brinelling or corrosion. Remove burrs that can be removed without changing dimensional characteristics. Inspect tapped holes for thread damage. If the housing is defective in these areas, discard the housing assembly.

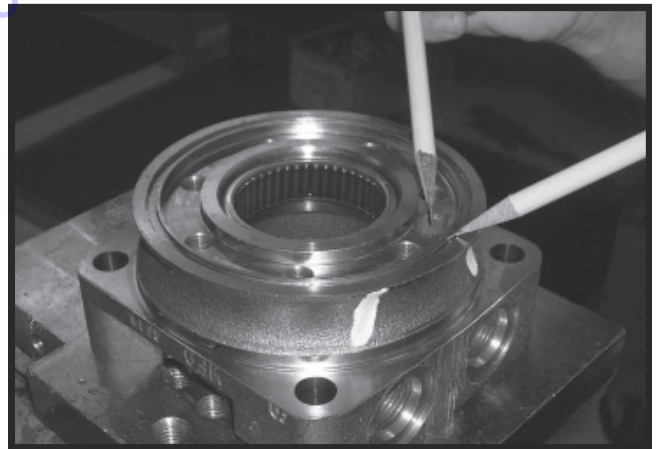


22. If the housing (18) assembly has passed inspection to this point, inspect the housing bearings/bushings (19) and (13) and if they are captured in the housing cavity the two thrust washers (14) and thrust bearing (15). The bearing rollers must be firmly retained in the bearing cages, but must rotate and orbit freely. All rollers and thrust washers must be free of brinelling and corrosion. The bearing rollers must be firmly retained in the bearing cages, but must rotate and orbit freely. All rollers and thrust washers must be free of brinelling and corrosion. The bushing (19) or (13) to coupling shaft diameter clearance must not exceed 0.010 inch (0.025 mm). A bearing, bushing, or thrust washer that does not pass inspection must be replaced. If the housing has passed this inspection the disassembly of the Torqmotor™ is completed.

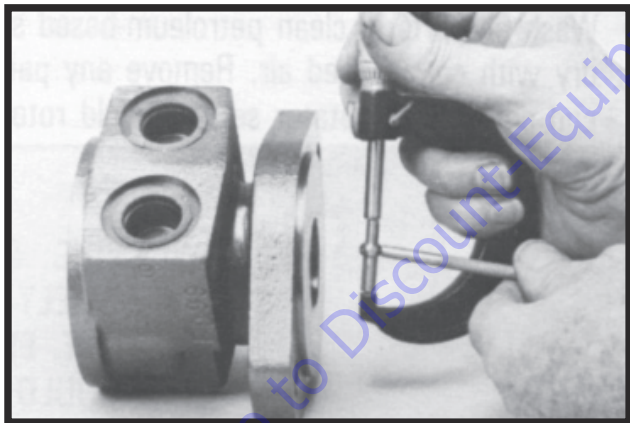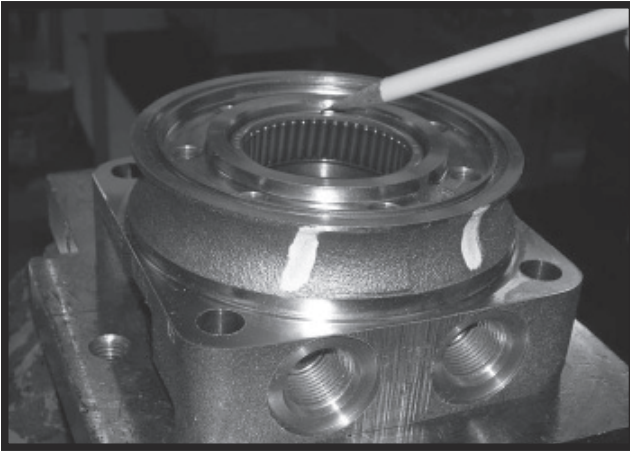

NOTE: The depth or location of bearing/bushing (13) in relation to the housing wear plate surface and the depth or location of bearing/bushing (19) in relation to the beginning of bearing/bushing counter bore should be measured and noted before removing the bearings/ bushings. This will facilitate the correct reassembly of new bearings/bushings.



23. If the bearings, bushing or thrust washers must be replaced use a suitable size bearing puller to remove bearing/bushings (19) and (13) from housing (18) without damaging the housing. Remove thrust washers (14) and thrust bearing (15) if they were previously retained in the housing by bearing (13).

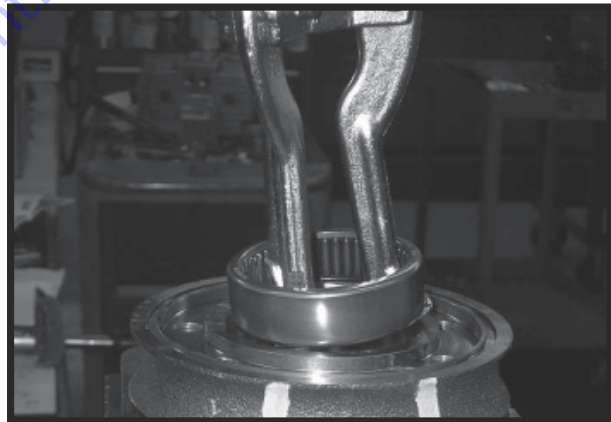

Assembly

Replace all seals and seal rings with new ones each time you reassemble the Torqmotor™ unit. Lubricate all seals and seal rings with SAE 10W40 oil or clean grease before assembly.

NOTE: Individual seals and seal rings as well as a complete seal kit are available. The parts should be available through most OEM parts distributors or Parker approved Torqmotor™ distributors. (Contact your local dealer for availability).

NOTE: Unless otherwise indicated, do not oil or grease parts before assembly.

Wash all parts in clean petroleum-based solvents before assembly. Blow them dry with compressed air. Remove any paint chips from mating surfaces of the end cover, commutator set, manifold rotor set, wear plate and housing and from port and sealing areas.

⚠ DANGER



SINCE THEY ARE FLAMMABLE, BE EXTREMELY CAREFUL WHEN USING ANY SOLVENT. EVEN A SMALL EXPLOSION OR FIRE COULD CAUSE INJURY OR DEATH.

⚠ WARNING

WEAR EYE PROTECTION AND BE SURE TO COMPLY WITH OSHA OR OTHER MAXIMUM AIR PRESSURE REQUIREMENTS.

1. If the housing (18) bearing components were removed for replacement, thoroughly coat and pack a new outer bearing/bushing (19) with clean corrosion resistant grease recommended in the material section. Press the new bearing/bushing into the counterbore at the mounting flange end of the housing, using the appropriate sized bearing mandrel, which will control the bearing/ bushing depth.

Torqmotor™ housings require the use of bearing mandrel to press bearing/ bushing (19) into the housing to a required depth of 0.151/0.161 inches (3.84/4.09 mm) from the end of the bearing counterbore.

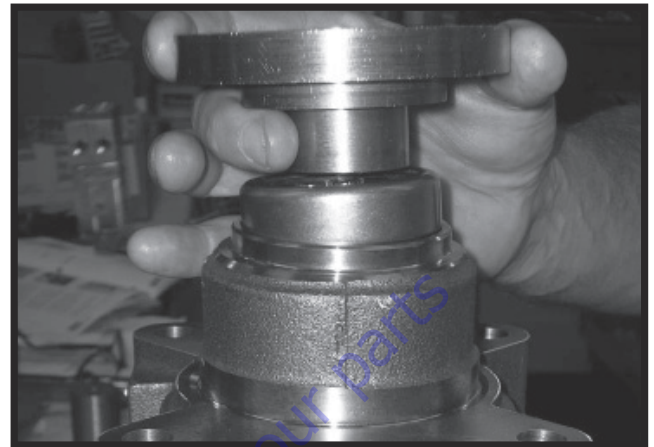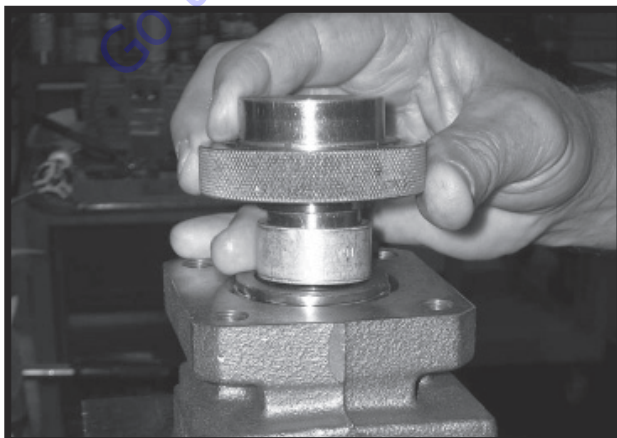


NOTE: Bearing mandrel must be pressed against the lettered end of bearing shell. Take care that the housing bore is square with the press base and the bearing/bushing is not cocked when pressing a bearing/bushing into the housing.

NOTICE

IF THE BEARING MANDREL SPECIFIED IN THE "TOOLS AND MATERIALS REQUIRED FOR SERVICING" SECTION IS NOT AVAILABLE AND ALTERNATE METHODS ARE USED TO PRESS IN BEARING/BUSHING (13) AND (19) THE BEARING/BUSHING DEPTHS SPECIFIED MUST BE ACHIEVED TO INSURE ADEQUATE BEARING SUPPORT AND CORRECT RELATIONSHIP TO ADJACENT COMPONENTS WHEN ASSEMBLED.


NOTICE

BECAUSE THE BEARING/BUSHINGS (13) AND (19) HAVE A PRESS FIT INTO THE HOUSING THEY MUST BE DISCARDED WHEN REMOVED. THEY MUST NOT BE REUSED.

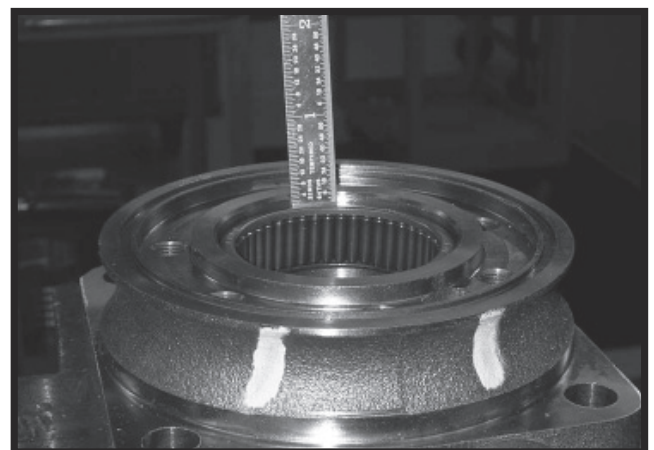



SECTION 3 - CHASSIS & TURNTABLE

2. The Torqmotor™ inner housing bearing/bushing (13) can now be pressed into its counterbore in housing (18) flush to 0.03 inch (.76 mm) below the housing wear plate contact face. Use the opposite end of the bearing mandrel that was used to press in the outer bearing/bushing (19).

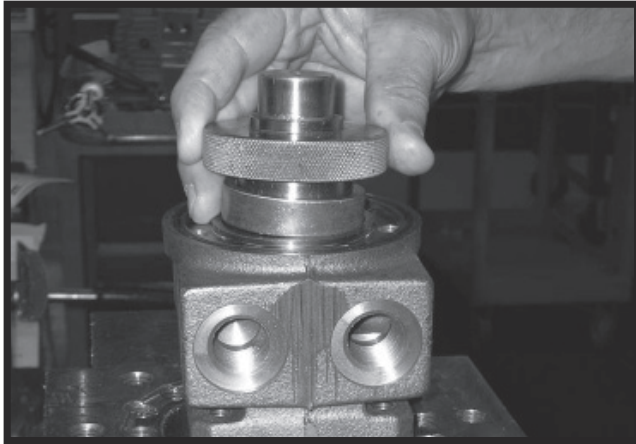


3. Press a new dirt and water seal (20) into the housing (18) outer bearing counterbore.


The Torqmotor™ dirt and water seal (20) must be pressed in until its flange is flush against the housing.

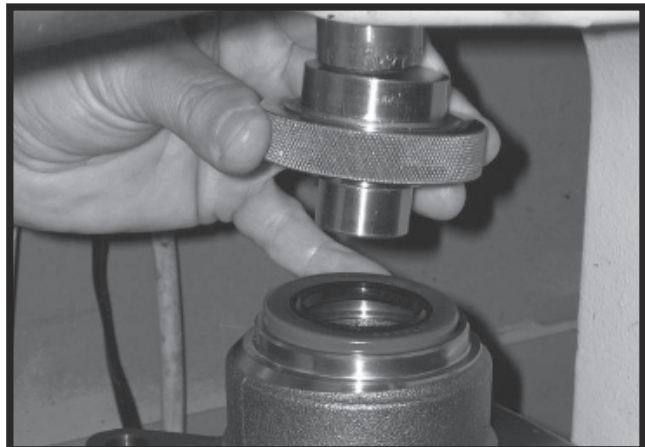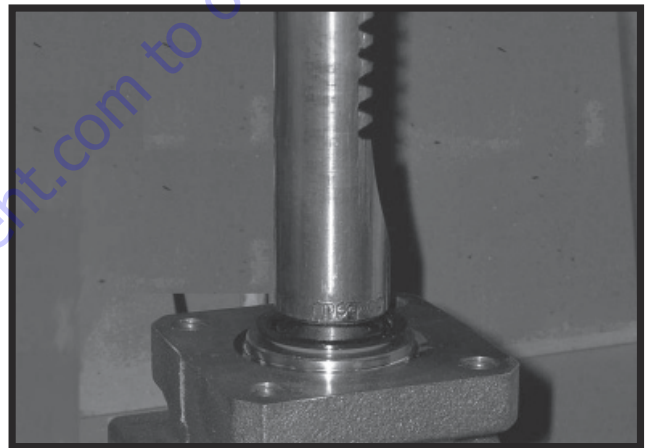

- Place housing (18) assembly into a soft jawed vise with the coupling shaft bore down, clamping against the mounting flange.

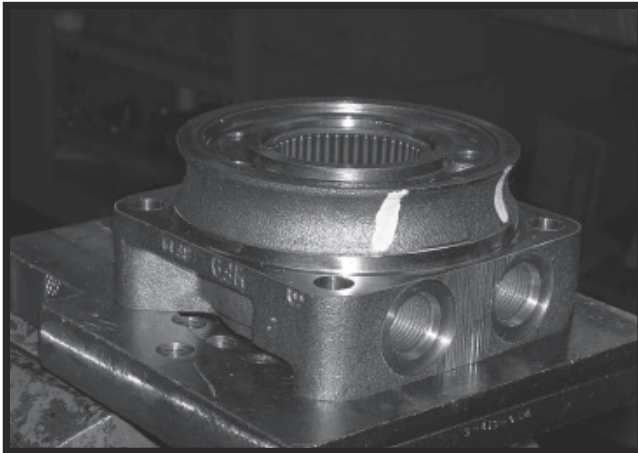


- On the Torqmotor™ assemble a new backup washer (17) and new seal (16) with the seal lip facing toward the inside of Torqmotor™, into their respective counterbores in housing (18) if they were not assembled in procedure 2.

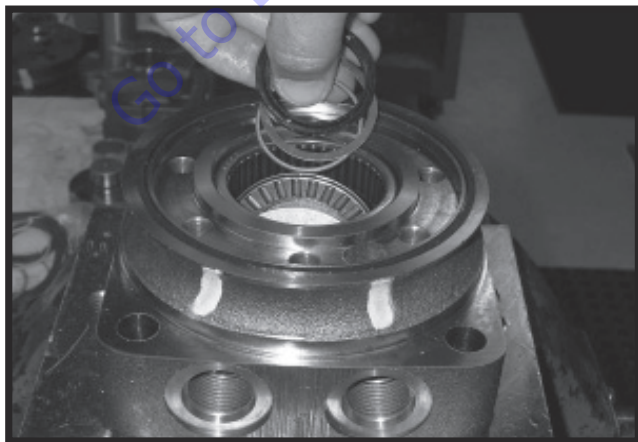

NOTICE


ORIGINAL DESIGN LARGE FRAME, TF & TG TORQMOTORS™ THAT DO NOT HAVE BACKUP WASHER (25) WHEN DISASSEMBLED MUST BE ASSEMBLED WITH A NEW BACKUP WASHER (17), NEW BACKUP WASHER (25), AND NEW SEAL (16).

- Assemble thrust washer (14) then thrust bearing (15) that was removed from the Torqmotor™.

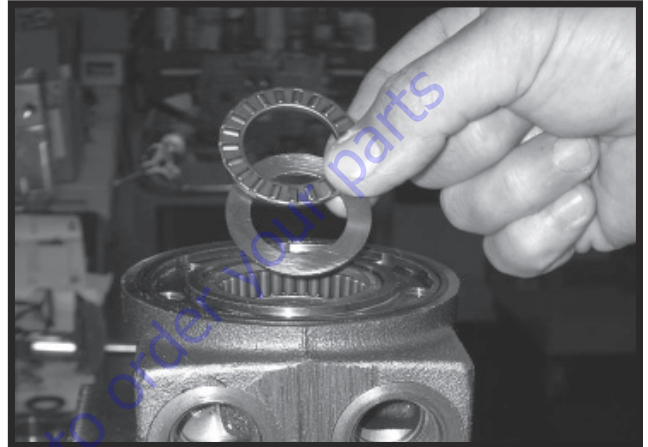


NOTE: Torqmotors™ require one thrust washer (14) with thrust bearing (15). The coupling shaft will be seated directly against the thrust.

- Apply masking tape around splines or keyway on shaft (12) to prevent damage to seal.

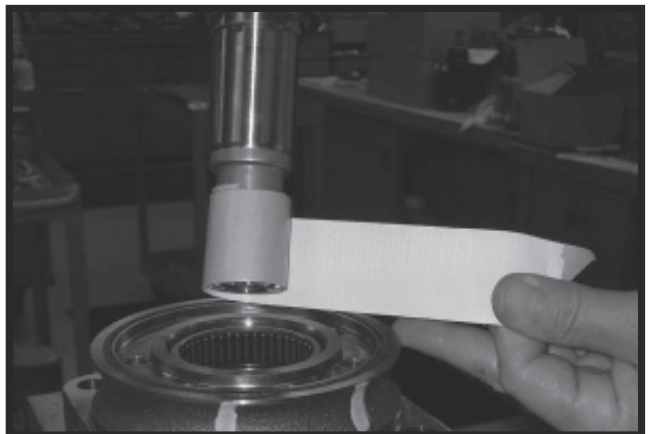

SECTION 3 - CHASSIS & TURNTABLE

8. Be sure that a generous amount of clean corrosion resistant grease has been applied to the lower (outer) housing bearing/bushing (19). Install the coupling shaft (12) into housing (18), seating it against the thrust bearing (15) in the housings.

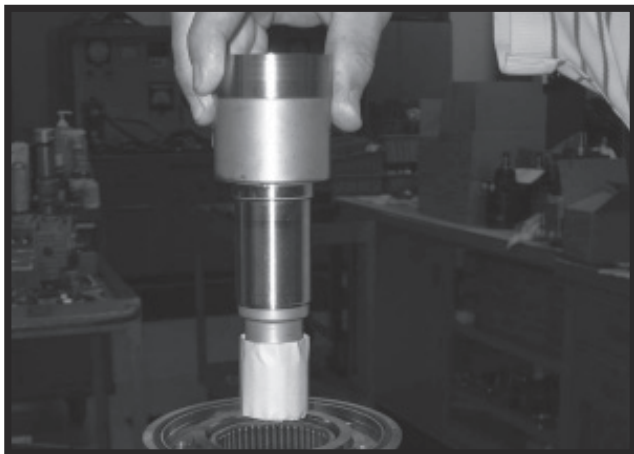

NOTICE

THE OUTER BEARING (19) IS NOT LUBRICATED BY THE SYSTEM'S HYDRAULIC FLUID. BE SURE IT IS THOROUGHLY PACKED WITH THE RECOMMENDED GREASE, PARKER GEAR GREASE SPECIFICATION #045236, E/M LUBRICANT #K-70M.


NOTE: Mobil Mobilith SHC[®] 460

NOTE: A 102Tube (P/N 406010) is included in each seal kit.

NOTE: The coupling shaft (12) will be flush or just below the housing wear plate surface on Torqmotors™ when properly seated. The coupling shaft must rotate smoothly on the thrust bearing package.




9. Apply a small amount of clean grease to a new seal ring (4) and insert it into the housing (18) seal ring groove.

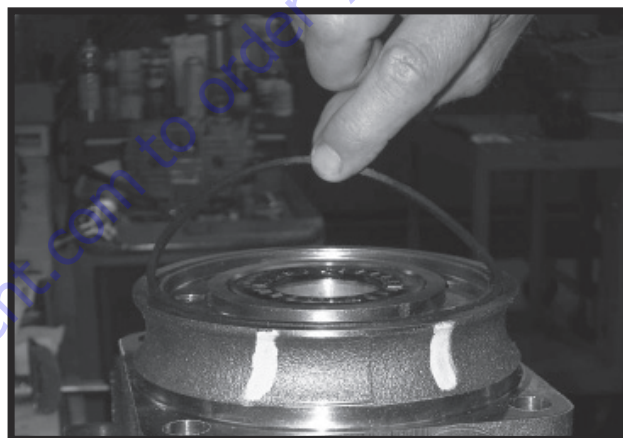


NOTE: One or two alignment studs screwed finger tight into housing (18) bolt holes, approximately 180 degrees apart, will facilitate the assembly and alignment of components as required in the following procedures. The studs can be made by cutting off the heads of either 3/8-24 UNF 2A or 5/16-24 UNF 2A bolts as required that are over 0.5 inch (12.7 mm) longer than the bolts (1) used in the Torqmotor™.

- 10.** Install drive link (10) the long splined end down into the coupling shaft (12) and engage the drive link splines into mesh with the coupling shaft splines.

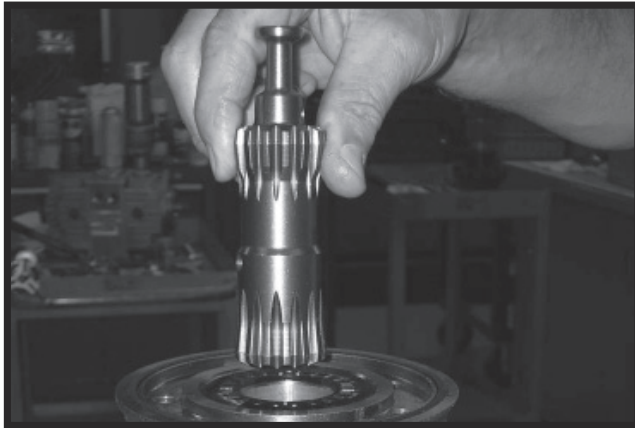


NOTE: Use any alignment marks put on the coupling shaft and drive link before disassembly to assemble the drive link splines in their original position in the mating coupling shaft splines.


- 11.** Assemble wear plate (9) over the drive link (10) and alignment studs onto the housing (18).

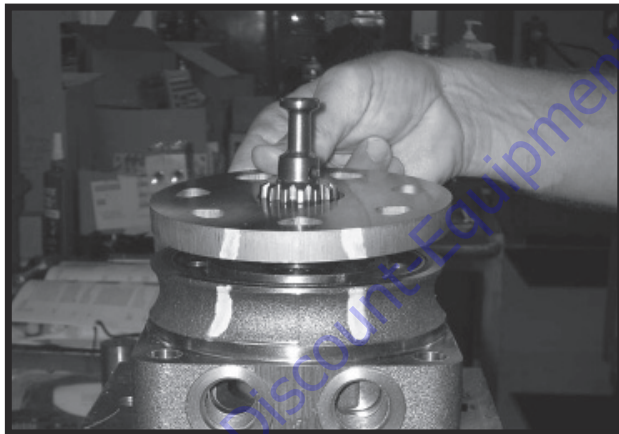

- 12.** Apply a small amount of clean grease to a new seal ring (4) and assemble it into the seal ring groove on the wear plate side of the rotor set stator (8B).

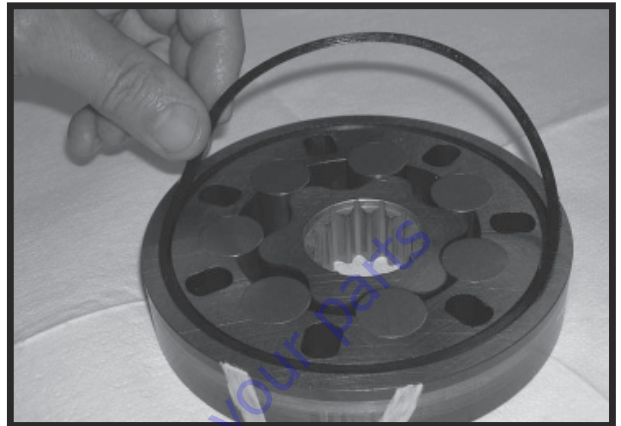

- 13.** Install the assembled rotor set (8) onto wear plate (9) with rotor (8A) counterbore and seal ring side down and the splines into mesh with the drive link splines.

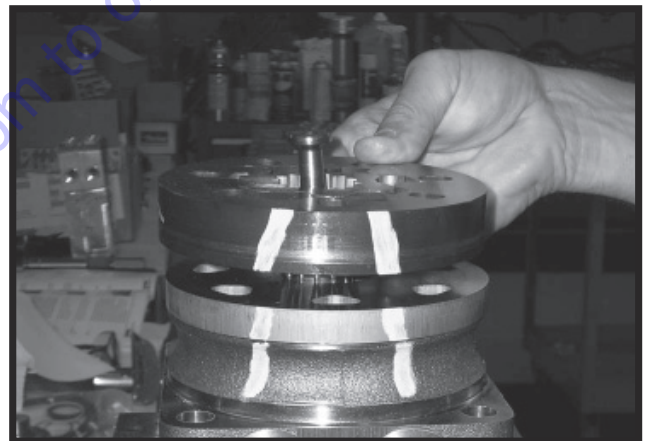


NOTE: It may be necessary to turn one alignment stud out of the housing (18) temporarily to assemble rotor set (8) or manifold (7) over the drive link.

NOTE: If necessary, go to the appropriate, "Rotor Set Component Assembly Procedure."

NOTE: The rotor set rotor counterbore side must be down against wear plate for drive link clearance and to maintain the original rotor-drive link spline contact. A rotor set without a counterbore and that was not etched before disassembly can be reinstalled using the drive link spline pattern on the rotor splines if apparent, to determine which side was down. The rotor set seal ring groove faces toward the wear plate (9).


SECTION 3 - CHASSIS & TURNTABLE

14. Apply clean grease to a new seal ring (4) and assemble it in the seal ring groove in the rotor set contact side of manifold (7).

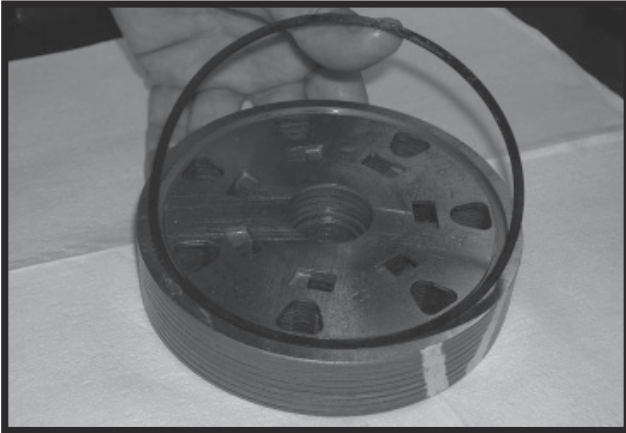

NOTE: The manifold (7) is made up of several plates bonded together permanently to form an integral component. The manifold surface that must contact the rotor set has it's series of irregular shaped cavities on the largest circumference or circle around the inside diameter. The polished impression left on the manifold by the rotor set is another indication of which surface must contact the rotor set.


15. Assemble the manifold (7) over the alignment studs and drive link (10) and onto the rotor set. Be sure the correct manifold surface is against the rotor set.

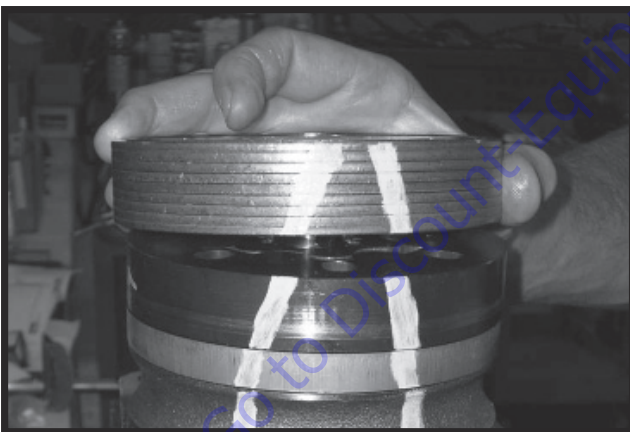


16. Apply grease to a new seal ring (4) and insert it in the seal ring groove exposed on the manifold (7).




17. Assemble the commutator ring (6) over alignment studs onto the manifold.



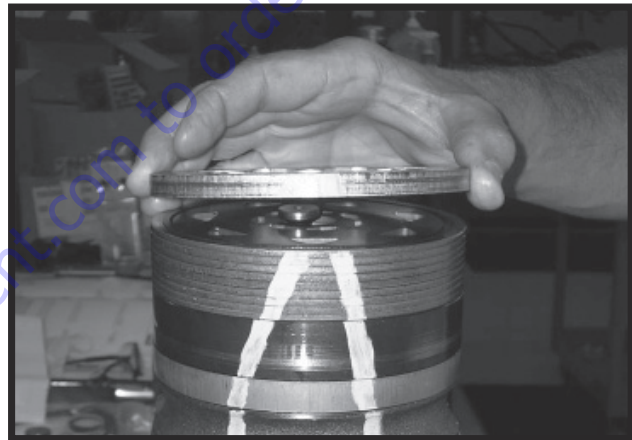


18. Assemble a new seal ring (3) flat side up, into commutator (5) and assemble commutator over the end of drive link (10) onto manifold (7) with seal ring side up.

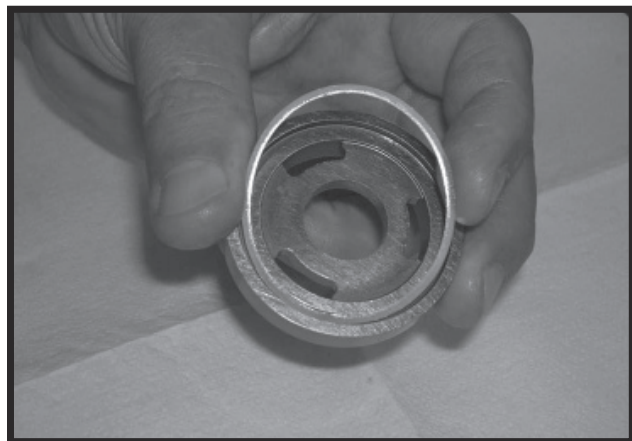


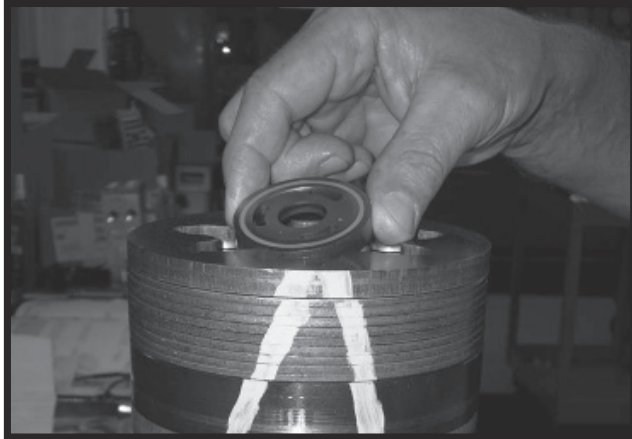


19. Assemble a new seal ring (4) into end cover (2) and assemble end cover over the alignment studs and onto the commutator set. If the end cover has only 5 bolt holes be sure the cover holes are aligned with the 5 threaded holes in housing (18). The correct 5 bolt end cover bolt hole relationship to housing port bosses.

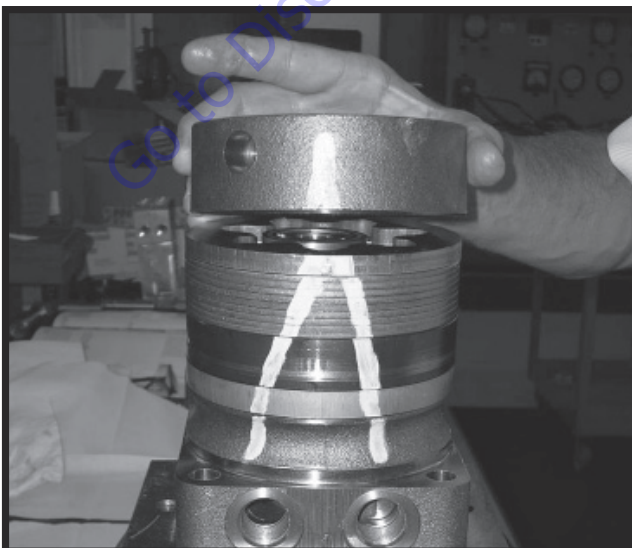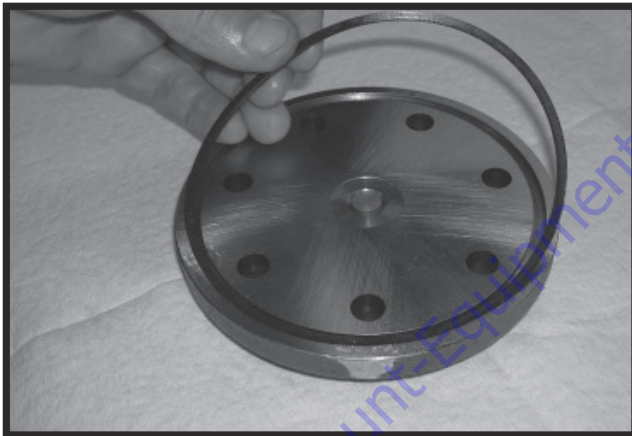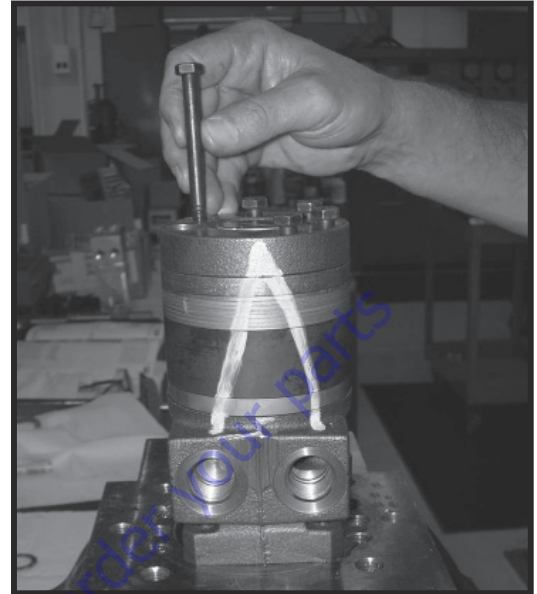

SECTION 3 - CHASSIS & TURNTABLE



20. Assemble the 5 or 7 special bolts (1) and screw in finger tight. Remove and replace the two alignment studs with bolts after the other bolts are in place. Alternately and progressively tighten the bolts to pull the end cover and other components into place with a final torque of 50-55 ft. lbs.(68-75 N m) for the seven 3/8-24 threaded bolts.

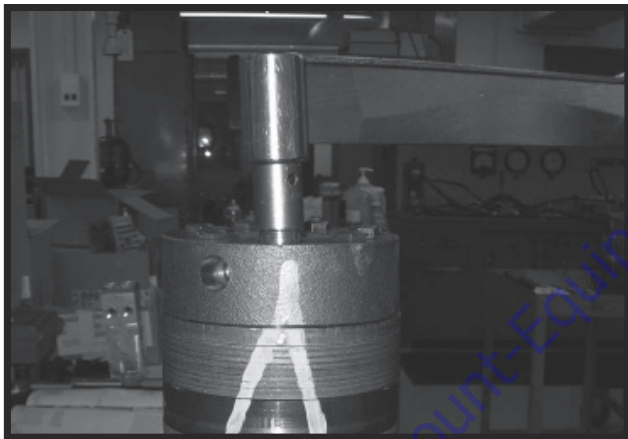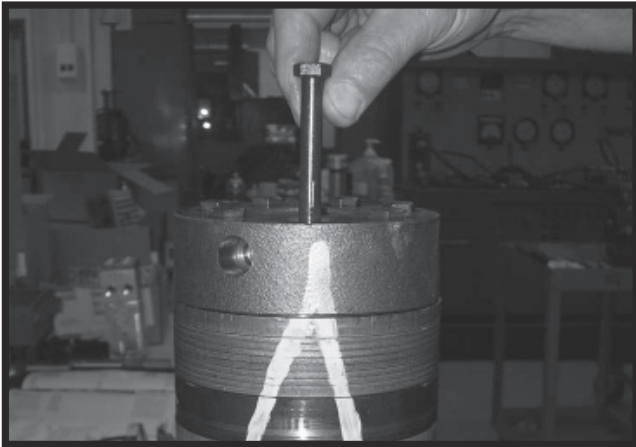

NOTE: The special bolts required for use with the relief or shuttle valve (24) end cover assembly (2) are longer than the bolts required with standard and cover assembly. Refer to the individual service parts lists or parts list charts for correct service part number if replacement is required.

21. Torque the two shuttle valve plug assemblies (21) in end cover assembly to 9-12 ft. lbs. (12-16 Nm) if cover is so equipped.

Torque the two relief valve plug assemblies (21) in end cover assembly to 45-55 ft. lbs.(61-75 Nm) if cover is so equipped.

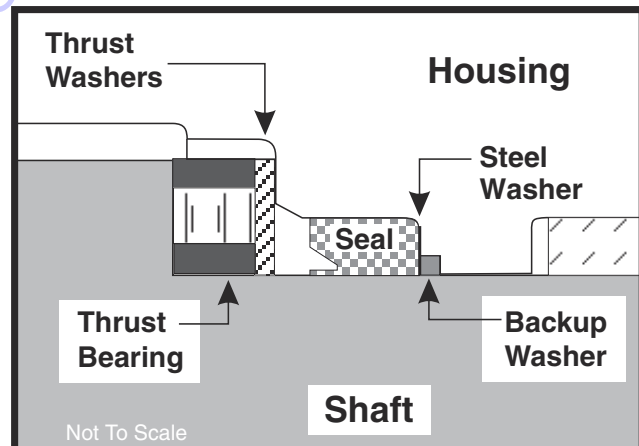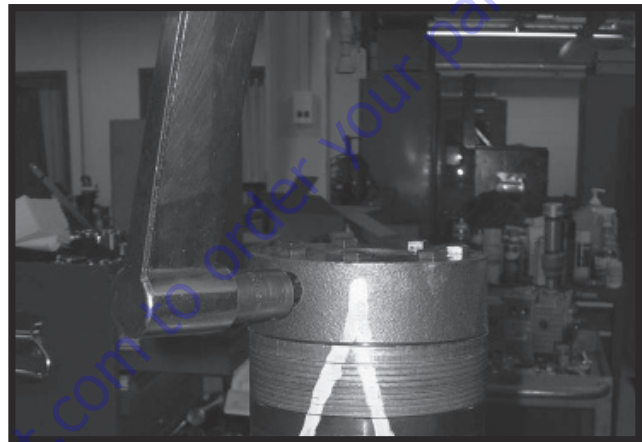


One Piece Stator Construction

A disassembled rotor (8A) stator (8B) and vanes (8C) that cannot be readily assembled by hand can be assembled by the following procedures.

1. Place stator (8B) onto wear plate (9) with seal ring (4) side down, after following Torqmotor™ assembly procedures 1 through 13. Be sure the seal ring is in place.




2. If assembly alignment studs are not being utilized, align stator bolt holes with wear plate and housing bolt holes and turn two bolts (1) finger tight into bolt holes approximately 180 degrees apart to retain stator and wear plate stationary.
3. Assemble the rotor (8A), counterbore down if applicable, into stator (8B), and onto wear plate (9) with rotor splines into mesh with drive link (10) splines.

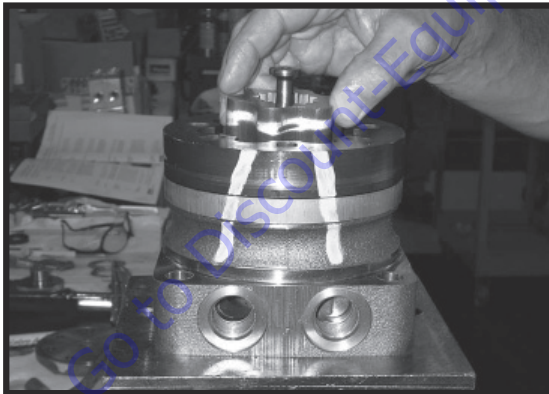

NOTE: If the manifold side of the rotor was etched during Torqmotor disassembly, this side should be up. If the rotor is not etched and does not have a counterbore, use the drive link spline contact pattern apparent on the rotor splines to determine the rotor side that must be against the wear plate.


4. Assemble six vanes (8C), or as many vanes that will readily assemble into the stator vane pockets.

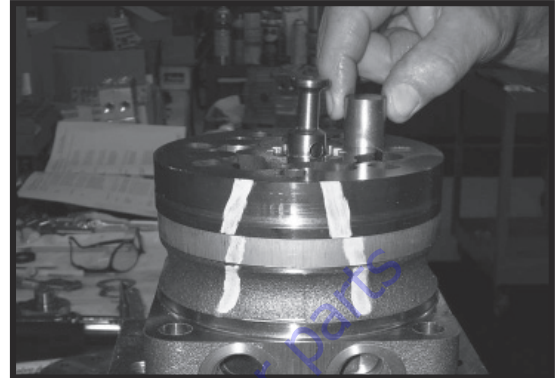

NOTICE

EXCESSIVE FORCE USED TO PUSH THE ROTOR VANES INTO PLACE COULD SHEAR OFF THE COATING APPLIED TO THE STATOR VANE POCKETS.

5. Grasp the output end of coupling shaft (12) with locking pliers or other appropriate turning device and rotate coupling shaft, drive link and rotor to seat the rotor and the assembled vanes (8C) into stator (8B), creating the necessary clearance to assemble the seventh or full complement of seven vanes. Assemble the seven vanes using minimum force.

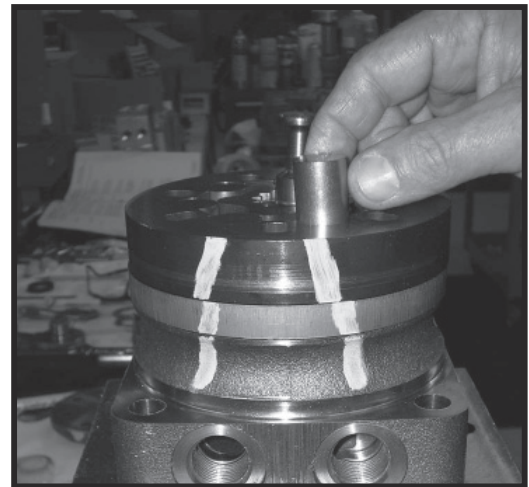

6. Remove the two assembled bolts (1) if used to retain stator and wear plate.


3.9 SWING HUB INSTALLATION

Ensure mounting plate and mounting location of the base plate are clean and painted with a uniform coating of minimum thickness (no runs, drips, etc.).


Procedure For Setting Swing Gear Backlash

Set backlash to 0.010 in. to 0.015 in. (0.254 mm - 0.381 mm) using the following procedure:

1. Place the machine on firm, level ground.
2. Place shim between pinion and bearing at bearing high spot (shown below).

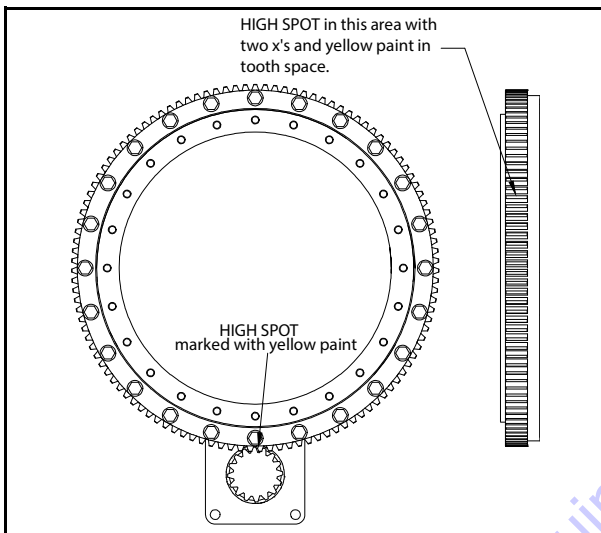


3. Apply JLG Threadlocker P/N 0100019 and torque pivot bolt to 205 ft. lbs. (280 Nm) (shown below).

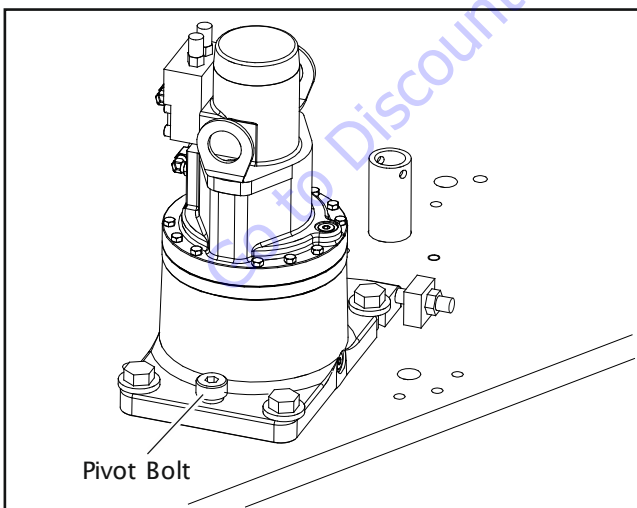


NOTE: Make sure the turntable is properly supported during the following step. The turntable can swing a few degrees when the turntable lock is removed if the turntable is not balanced properly.

4. Remove turntable lock pin.
5. Apply JLG Threadlocker P/N 0100019 and pre-torque swing drive mounting bolts to 30 ft. lbs. (40 Nm).

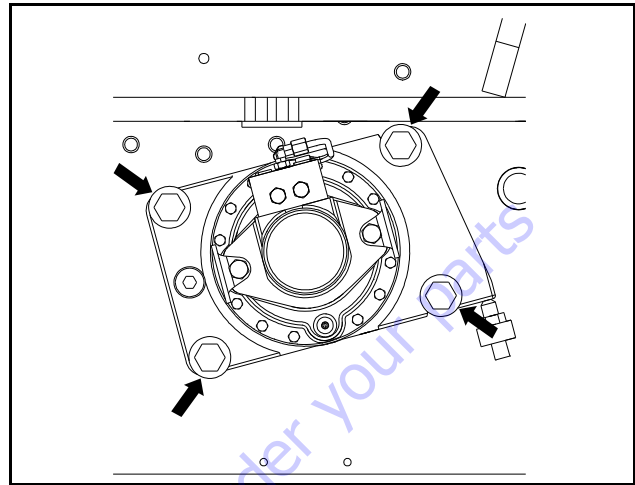


6. Tighten jack bolt until pinion is completely snug against shim and bearing then loosen jack bolt.

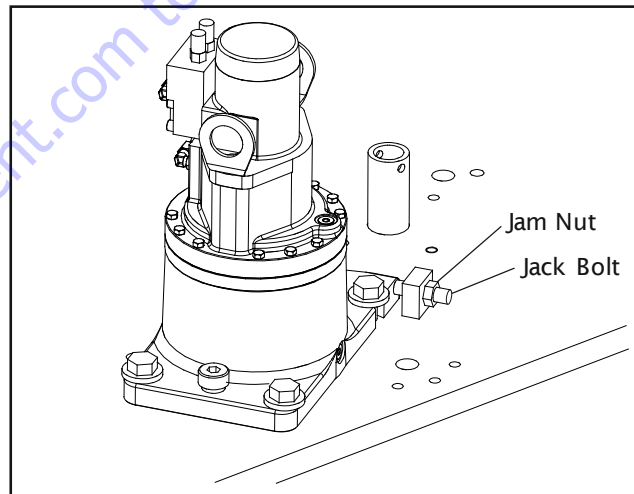


7. Apply JLG Threadlocker P/N 0100019 and torque jack bolt 50 ft. lbs. (68 Nm).
8. Apply JLG Threadlocker P/N 0100019 and tighten jam nut.

9. Torque mounting bolts to 340 ft. lbs. (Nm).

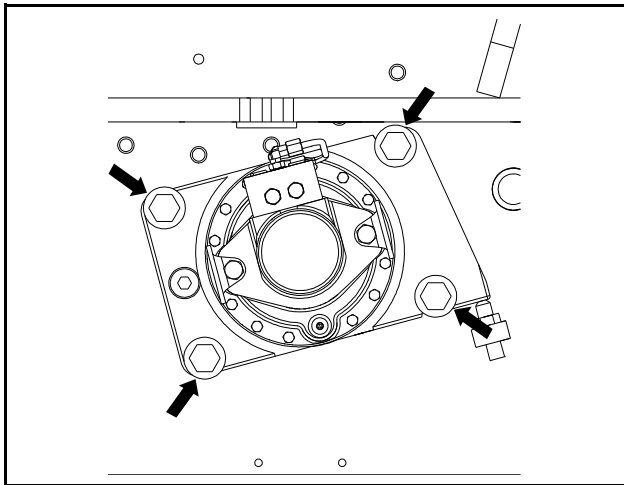


10. Remove shim and discard..

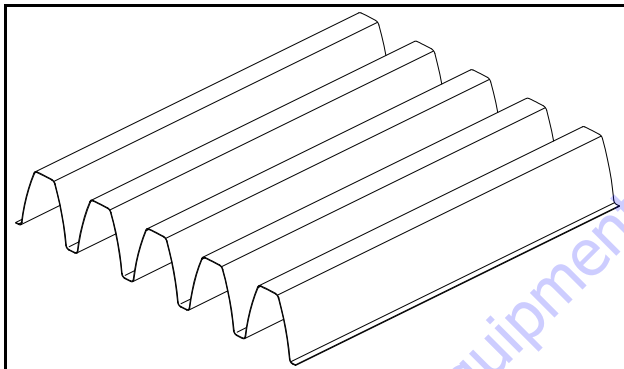


Swing Drive Lubrication

Fill Swing Drive Gearbox with 43 oz (1.27 L) 90w80gear oil with EP additives. Oil should cover the ring gear. Torque pipe plug to 23-25 ft.lbs (31- 33 Nm).

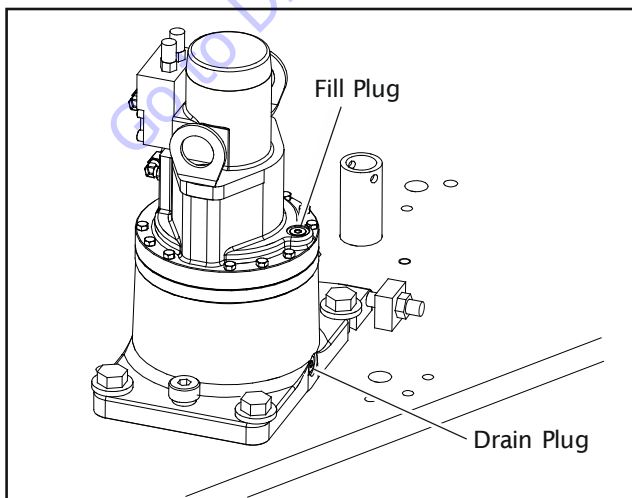

3.10 SWING HUB REMOVAL

1. Disconnect all wiring harness terminals connected to the swing motor.
2. Gently loosen the set screw. Do not remove.
3. Remove the pivot bolt using Allen Wrench.

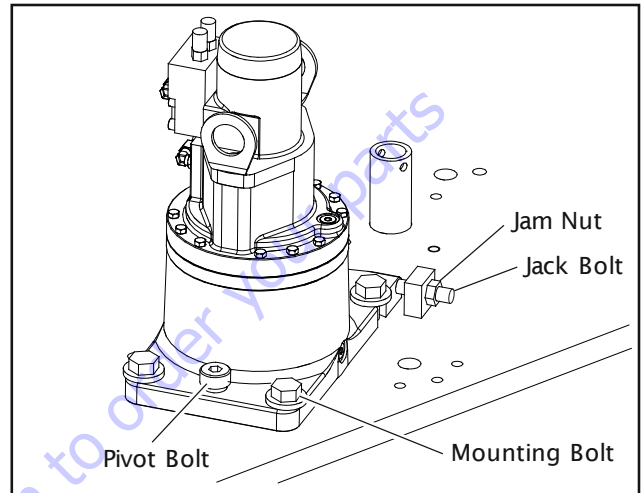

4. Remove the mounting bolts securing swing drive hub to the turntable.
5. Using the suitable lifting device, remove the swing drive hub from mounting plate without damaging the swing gear.
6. Place swing drive hub in the clean area.
7. Refer to Section 3.7, Swing Drive for swing drive maintenance.

3.11 SWING BEARING

Turntable Bearing Mounting Bolt Condition Check

NOTICE

THE SWING BEARING IS ONE OF THE MOST CRITICAL POINTS ON AN AERIAL LIFT. IT IS HERE THAT THE STRESSES OF LIFTING ARE CONCENTRATED, AT THE CENTER OF ROTATION. BECAUSE OF THIS, PROPER MAINTENANCE OF THE SWING BEARING BOLTS IS A MUST FOR SAFE OPERATION.

NOTE: This check is designed to replace the existing bearing bolt torque checks on JLG Lifts in service. This check must be performed after the first 50 hours of machine operation and every 600 hours of machine operation thereafter. If during this check any bolts are found to be missing or loose, replace missing or loose bolts with new bolts and torque to the value specified in the torque chart, after lubricating the bolt threads with JLG Threadlocker P/N 0100019. After replacing and retorquing bolt or bolts recheck all existing bolts for looseness.

1. Check the frame to bearing attach bolts as follows:
 - a. Elevate the fully extended main boom to horizontal. (See Figure 3-40.)
 - b. At the positions indicated on Figure 3-41. try to insert a 0.0015" feeler gauge between the bolt and hardened washer at the arrow indicated position.
 - c. Ensure that the 0.0015" feeler gauge will not penetrate under the bolt head to the bolt shank.
 - d. Swing the turntable 90 degrees, and check some selected bolts at the new position.
 - e. Continue rotating the turntable at 90 degree intervals until a sampling of bolts have been checked in all quadrants.
2. Check the turntable to bearing Attach bolts as follows:
 - a. Elevate the fully retracted main boom to full elevation.
 - b. At the position indicated on Figure 3-39. try to insert the 0.0015" feeler gauge between the bolt head and hardened washer at the arrow indicated position.
 - c. Lower the boom to horizontal and fully extend the boom.
 - d. At the position indicated on Figure 3-41., try and insert the 0.0015" feeler gauge between the bolt head and hardened washer at the arrow indicated position.

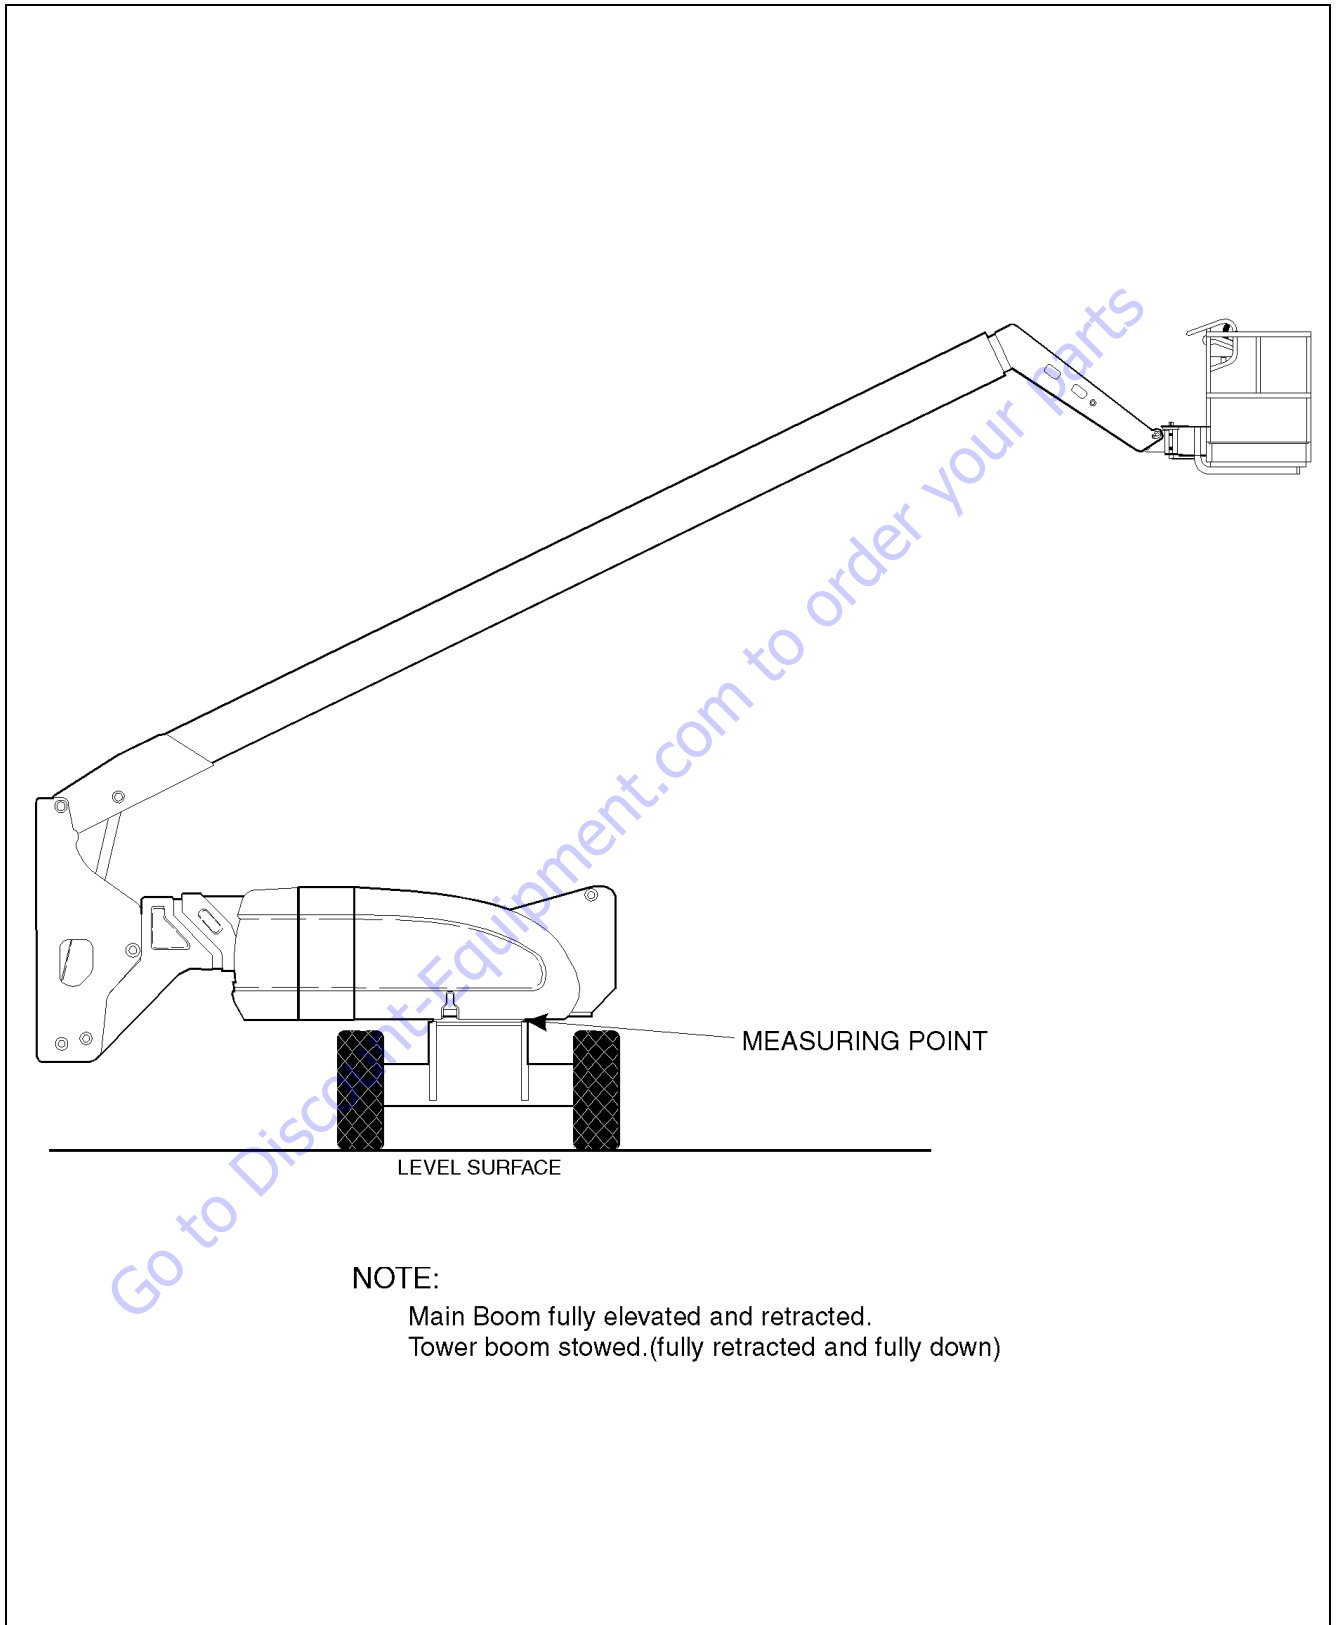


Figure 3-39. Swing Bearing Tolerance Boom Placement (Sheet 1 of 2)

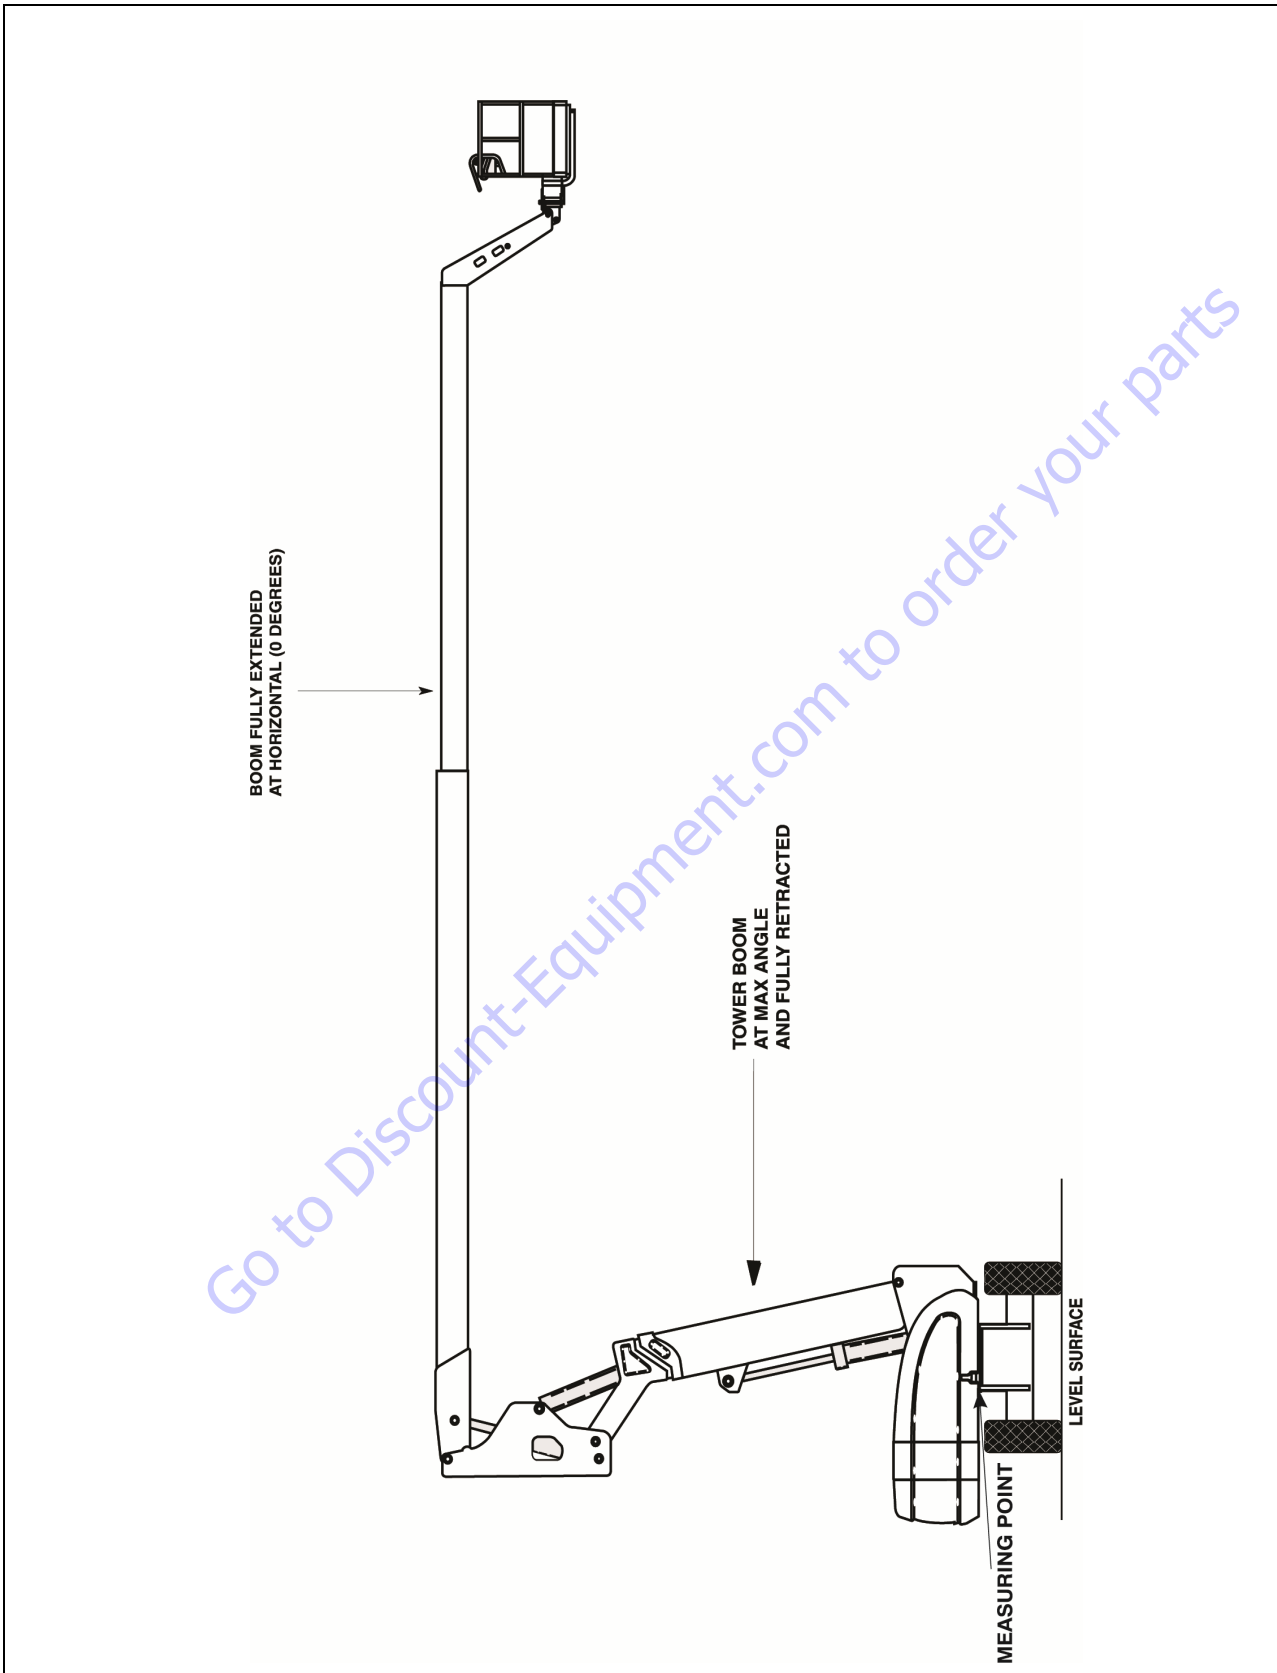


Figure 3-40. Swing Bearing Tolerance Boom Placement (Sheet 2 of 2)

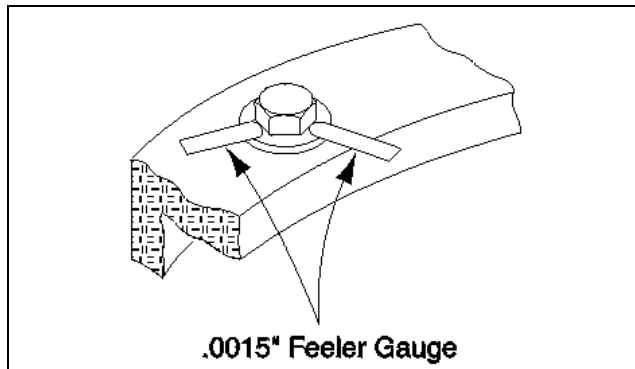


Figure 3-41. Swing Bolt Feeler Gauge Check

Wear Tolerance

1. From the underside of the machine, at rear center, with the main boom fully elevated and fully retracted, and tower boom stowed, as shown in Figure 3-39., Swing Bearing Tolerance Boom Placement (Sheet 1 of 2), using a magnetic base dial indicator, measure and record the distance between the swing bearing and turntable. See Figure 3-42., Swing Bearing Tolerance Measuring Point
2. At the same point, with the main boom at horizontal and fully extended, and the tower boom fully elevated and fully retracted as shown in Figure 3-40., Swing Bearing Tolerance Boom Placement (Sheet 2 of 2). Using a magnetic base dial indicator, measure and record the distance between the swing bearing and turntable. See Figure 3-42., Swing Bearing Tolerance Measuring Point
3. If a difference greater than 0.079 in. (2.00 mm) is determined, the swing bearing should be replaced.
4. If a difference less than 0.079 in. (2.00 mm) is determined, and any of the following conditions exist, the bearing should be removed, disassembled, and inspected for the following:
 - a. Metal particles in the grease.
 - b. Increased drive power required.
 - c. Noise.
 - d. Rough rotation.
5. If bearing inspection shows no defects, reassemble and return to service.

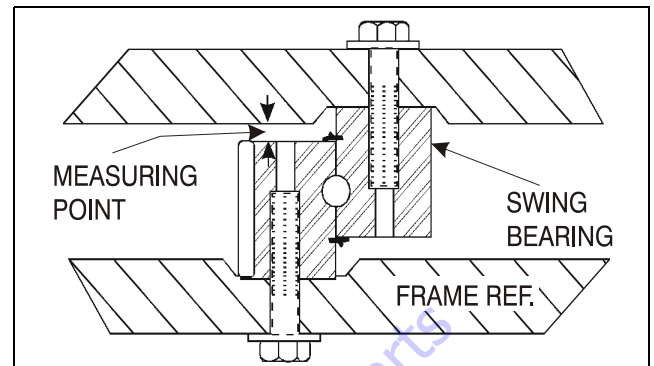


Figure 3-42. Swing Bearing Tolerance Measuring Point

Swing Bearing Replacement

REMOVAL

1. From Ground Control station, operate the boom adequately to provide access to frame opening to rotary coupling.

⚠ WARNING

NEVER WORK BENEATH THE BOOM WITHOUT FIRST ENGAGING BOOM SAFETY PROP OR PROVIDING ADEQUATE OVERHEAD SLING SUPPORT AND/OR BLOCKING.

2. Attach an adequate support sling to the boom and draw all slack from sling. Prop or block the boom if feasible.
3. From inside turntable, remove mounting hardware which attach rotary coupling retaining yoke brackets to turntable.

NOTICE

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID THE ENTRY OF CONTAMINANTS INTO THE SYSTEM.

4. Tag and disconnect the hydraulic lines from the fittings on the top of the rotary coupling. Use a suitable container to retain any residual hydraulic fluid. Immediately cap lines and ports.
5. Attach suitable overhead lifting equipment to the base of the turntable weldment.
6. Use a suitable tool to scribe a line on the inner race of the swing bearing and on the underside of the turntable. This will aid in aligning the bearing upon installation. Remove the bolts and washers which attach the turntable to the bearing inner race. Discard the bolts.
7. Use the lifting equipment to carefully lift the complete turntable assembly from the bearing. Ensure that no damage occurs to the turntable, bearing or frame-mounted components.

8. Carefully place the turntable on a suitably supported trestle.
9. Use a suitable tool to scribe a line on the outer race of the swing bearing and the frame. This line will aid in aligning the bearing upon installation. Remove the bolts and washers which attach the outer race of the bearing to the frame. Discard the bolts. Use suitable lifting equipment to remove the bearing from the frame, then move the bearing to a clean, suitably supported work area.

INSTALLATION

1. Using suitable lifting equipment, carefully lower the swing bearing into position on the frame. Ensure the scribed line of the outer race of the bearing aligns with the scribed line on the frame. If a new swing bearing is used, ensure that the filler plug fitting is at 90 degrees from the fore and aft center line of the frame.

⚠ CAUTION

JLG INDUSTRIES RECOMMENDS THAT ALL REMOVED BEARING BOLTS BE DISCARDED AND REPLACED WITH NEW BOLTS. SINCE THE SWING BEARING IS THE ONLY STRUCTURAL LINK BETWEEN THE FRAME AND TURNTABLE, IT IS IMPERATIVE THAT SUCH REPLACEMENT HARDWARE MEETS JLG SPECIFICATIONS. USE OF GENUINE JLG HARDWARE IS HIGHLY RECOMMENDED.

2. Apply a light coating of JLG Threadlocker P/N 0100019 to the new bearing bolts, and loosely install the bolts and washers through the frame and outer race of bearing.

NOTICE

IF COMPRESSED AIR OR ELECTRICALLY OPERATED IMPACT WRENCH IS USED FOR TIGHTENING THE BEARING ATTACHMENT BOLTS, THE TORQUE SETTING ACCURACY OF THE TOOL SHOULD BE CHECKED PRIOR TO USE.

3. Refer to the Torque Sequence diagram as shown in Figure 3-45., Swing Bearing Torque Sequence. Clean any residue off the new bearing bolts, then apply a light coating of JLG Threadlocker P/N 0100019 and install the bolts and washers through the frame and outer race of the bearing. Tighten the bolts to an initial torque of 190 Ft. lbs. (260 Nm) w/JLG Threadlocker P/N 0100019.
4. Remove the lifting equipment from the bearing.
5. Using suitable lifting equipment, carefully position the turntable assembly above the machine frame.
6. Carefully lower the turntable onto the swing bearing, ensuring that the scribed line of the inner race of the bearing aligns with scribed line on the turntable. If a new swing bearing is used, ensure that the filler plug fitting is at 90 degrees from the fore and aft center line of the turntable.

7. Clean any residue off the new bearing bolts, then apply a light coating of JLG Threadlocker P/N 0100019 and install the bolts and washers through the turntable and inner race of the bearing.
8. Following the Torque Sequence diagram shown in Figure 3-45., Swing Bearing Torque Sequence, tighten the bolts to a torque of 190 ft. lbs. (260 Nm) w/Loctite.
9. Remove the lifting equipment.
10. Install the rotary coupling retaining yoke brackets, apply a light coating of JLG Threadlocker P/N 0100011 to the attaching bolts and secure the yoke to the turntable with the mounting hardware.
11. Connect the hydraulic lines to the rotary coupling as tagged prior to removal.
12. At ground control station, use boom lift control to lower boom to stowed position.
13. Using all applicable safety precautions, activate the hydraulic system and check the swing system for proper and safe operation.

Swing Bearing Torque Values

1. Outer Race - 190 ft. lbs. (260 Nm) w/JLG Threadlocker P/N 0100019.
2. Inner Race - 190 ft. lbs. (260 Nm) w/JLG Threadlocker P/N 0100019.
3. See Swing Bearing Torquing Sequence.

⚠ WARNING

CHECK THE INNER AND OUTER SWING BEARING BOLTS FOR MISSING OR LOOSENESS AFTER FIRST 50 HOURS OF OPERATION, AND EVERY 600 HOURS THEREAFTER.

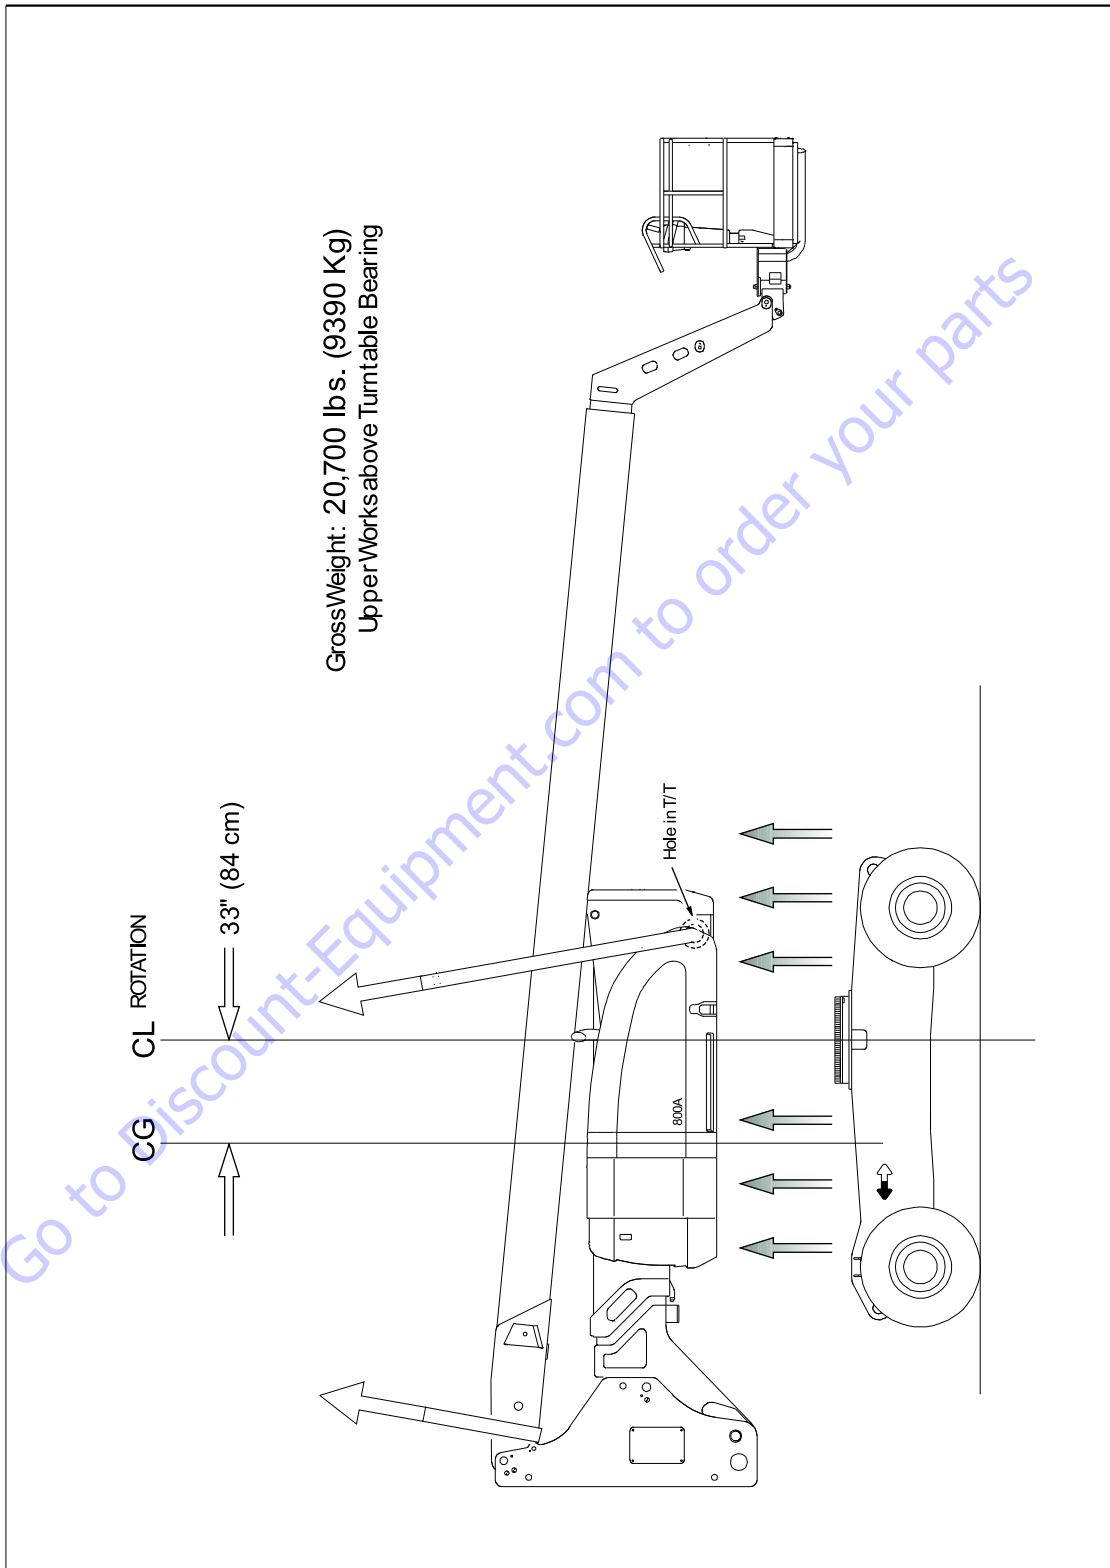


Figure 3-43. Swing Bearing Removal (800A)

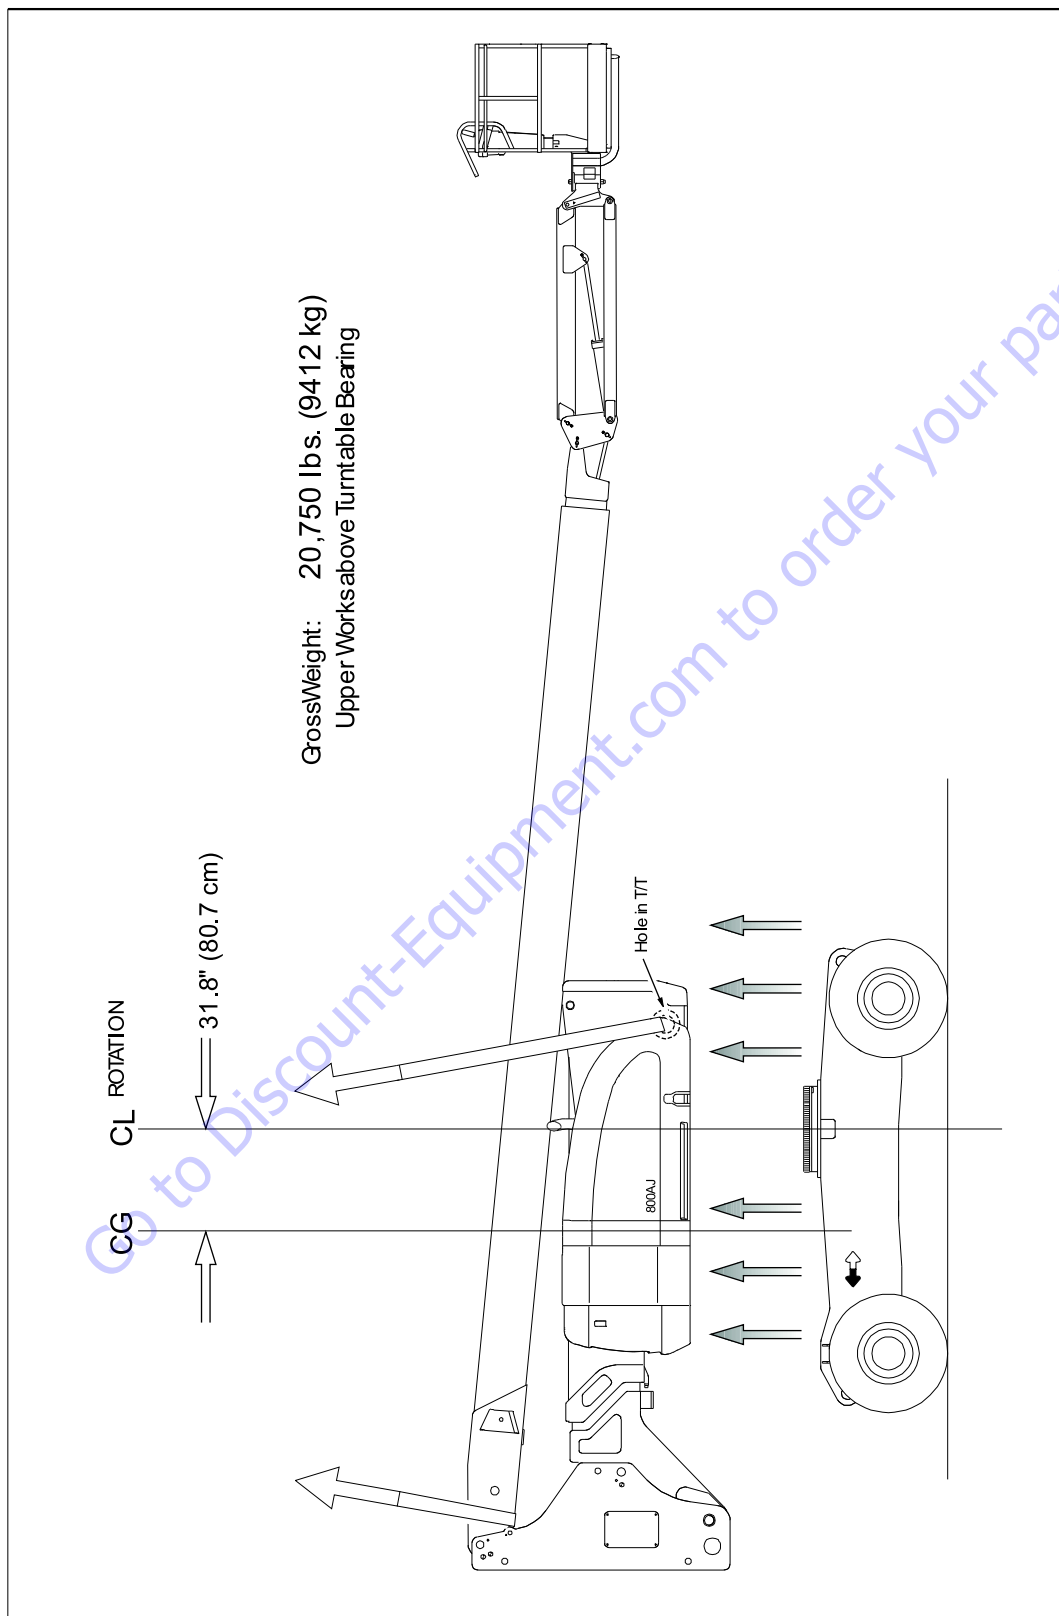


Figure 3-44. Swing Bearing Removal (800AJ)

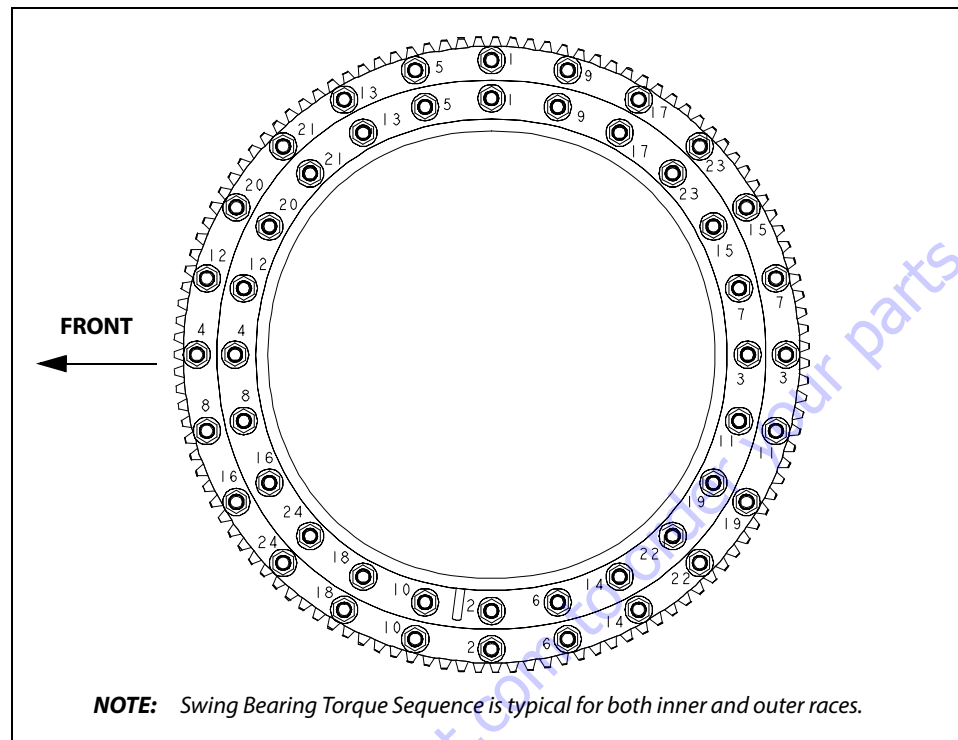


Figure 3-45. Swing Bearing Torque Sequence

3.12 TILT INDICATOR SYSTEM

1. The tilt indicator system measures the turntable angle with respect to level ground. The tilt switch itself has two settings; 5 (or 4 degree dependent upon market) and 8.5 degrees. The tilt angle is dependent on market, Refer Table 6-2, Machine Configuration Programming Information (Software Version P6.22).
2. The smaller angle is used for the purpose of warning the operator by means of the tilt light in the platform display panel.
3. Additionally when used in conjunction with the "above elevation cutout system" or the "transport position interlock system", the tilt switch will cause an alarm to sound, and automatically put the machine in the creep speed mode. With the exception of the speed cutback, this is a warning system only.
4. The machine will continue to function. The operator is responsible to prevent the machine from attaining an unstable position. The 8.5 degree angle is used exclusively for the purpose of automatically shifting the drive motors to the maximum displacement position (slow speed).

3.13 SPARK ARRESTER CLEANING INSTRUCTIONS

1. Remove the cleanout plug in the bottom of spark arrester (muffler).
2. Without causing deformation (or any type of damage to the spark arrester) repeatedly tap on the arrester near the cleanout plug. This may be enough to begin drainage of the spark trap.
3. An industrial vacuum cleaner can do a complete job at this point.
 - a. Or, IN A SAFE AREA, start the engine. Then alternate between low idle and high idle for two to three minutes.
 - b. Or, operate the engine as required by the application for two to three minutes.
 - c. Install the cleanout plug.

3.14 ROTARY COUPLING

Use the following procedure to install the seal kit.

1. If not already removed, remove the axle oscillation valve from the cylinder barrel. The spool of the valve protrudes into the barrel and will damage the spool and seals if left in place.
2. Remove snap ring (7) from end.
3. Remove thrust ring (3) from the same end.
4. Remove center body (1) from housing (3).
5. Cut off old seals (2, 4, 5).
6. Remove proximity switch.
7. Assemble lip seals (2) in direction shown in Figure 3-46., Rotary Coupling Seal Installation.
8. Reassemble O-ring (4).
9. Heat cap seals (5) in hydraulic oil for 5 minutes at 300° F (149° C).
10. Assemble cap seals over O-rings.
11. Reinsert center body into housing (lube with hydraulic oil).
12. Replace thrust ring and snap ring.
13. Install proximity switch as shown in Figure 3-50.


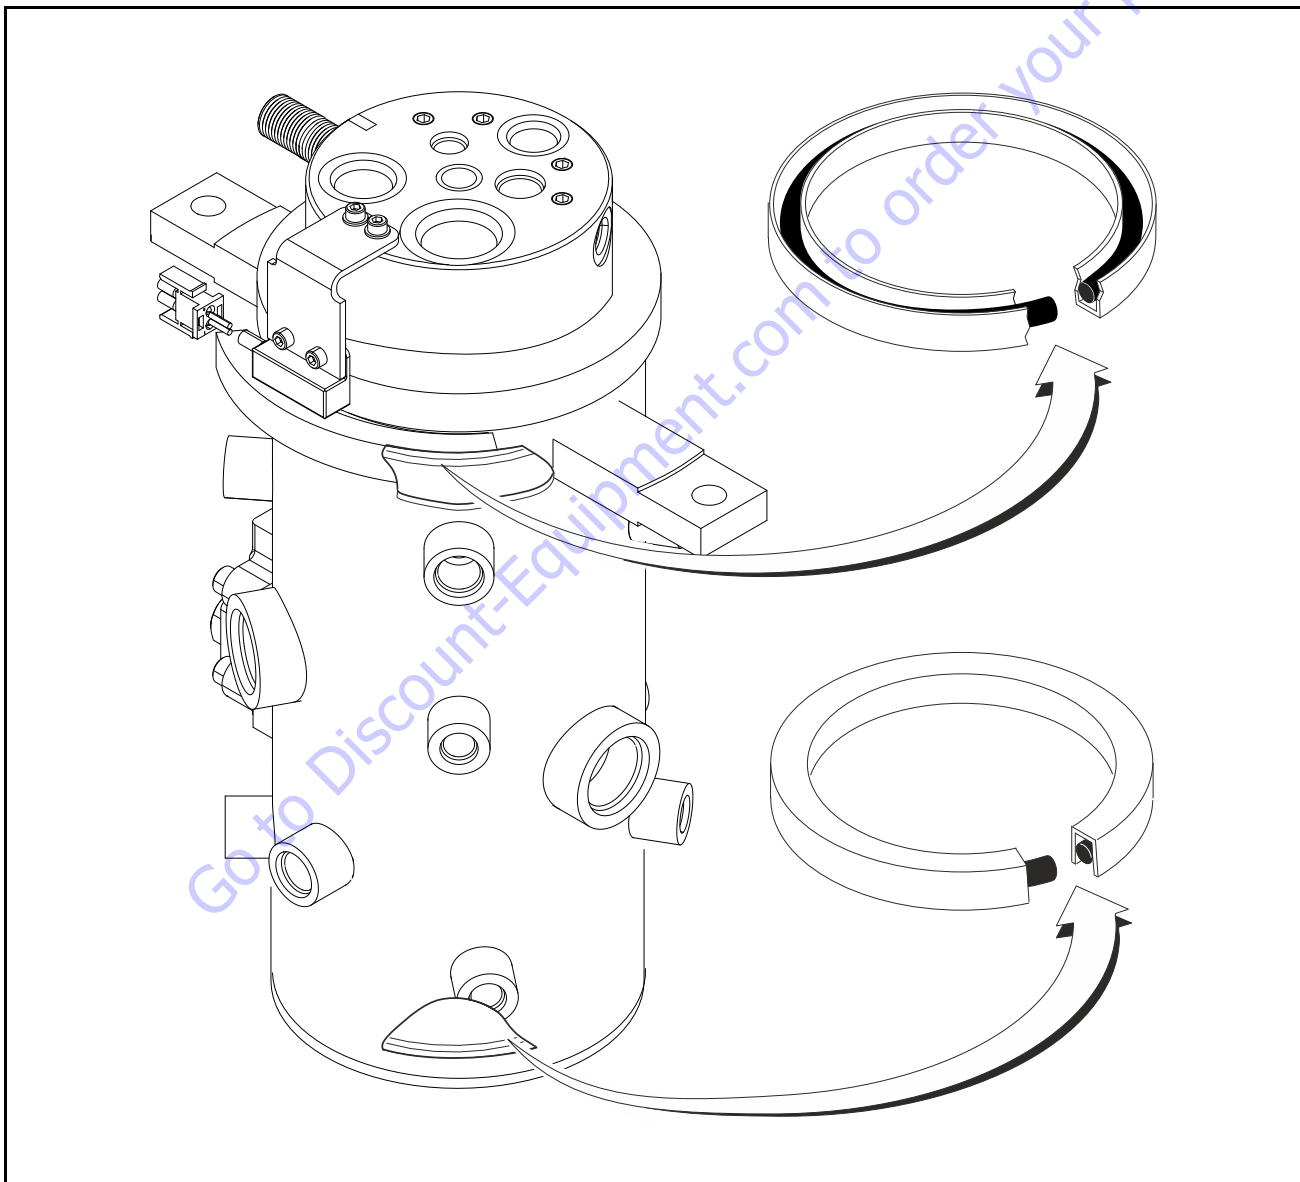


Figure 3-46. Rotary Coupling Seal Installation

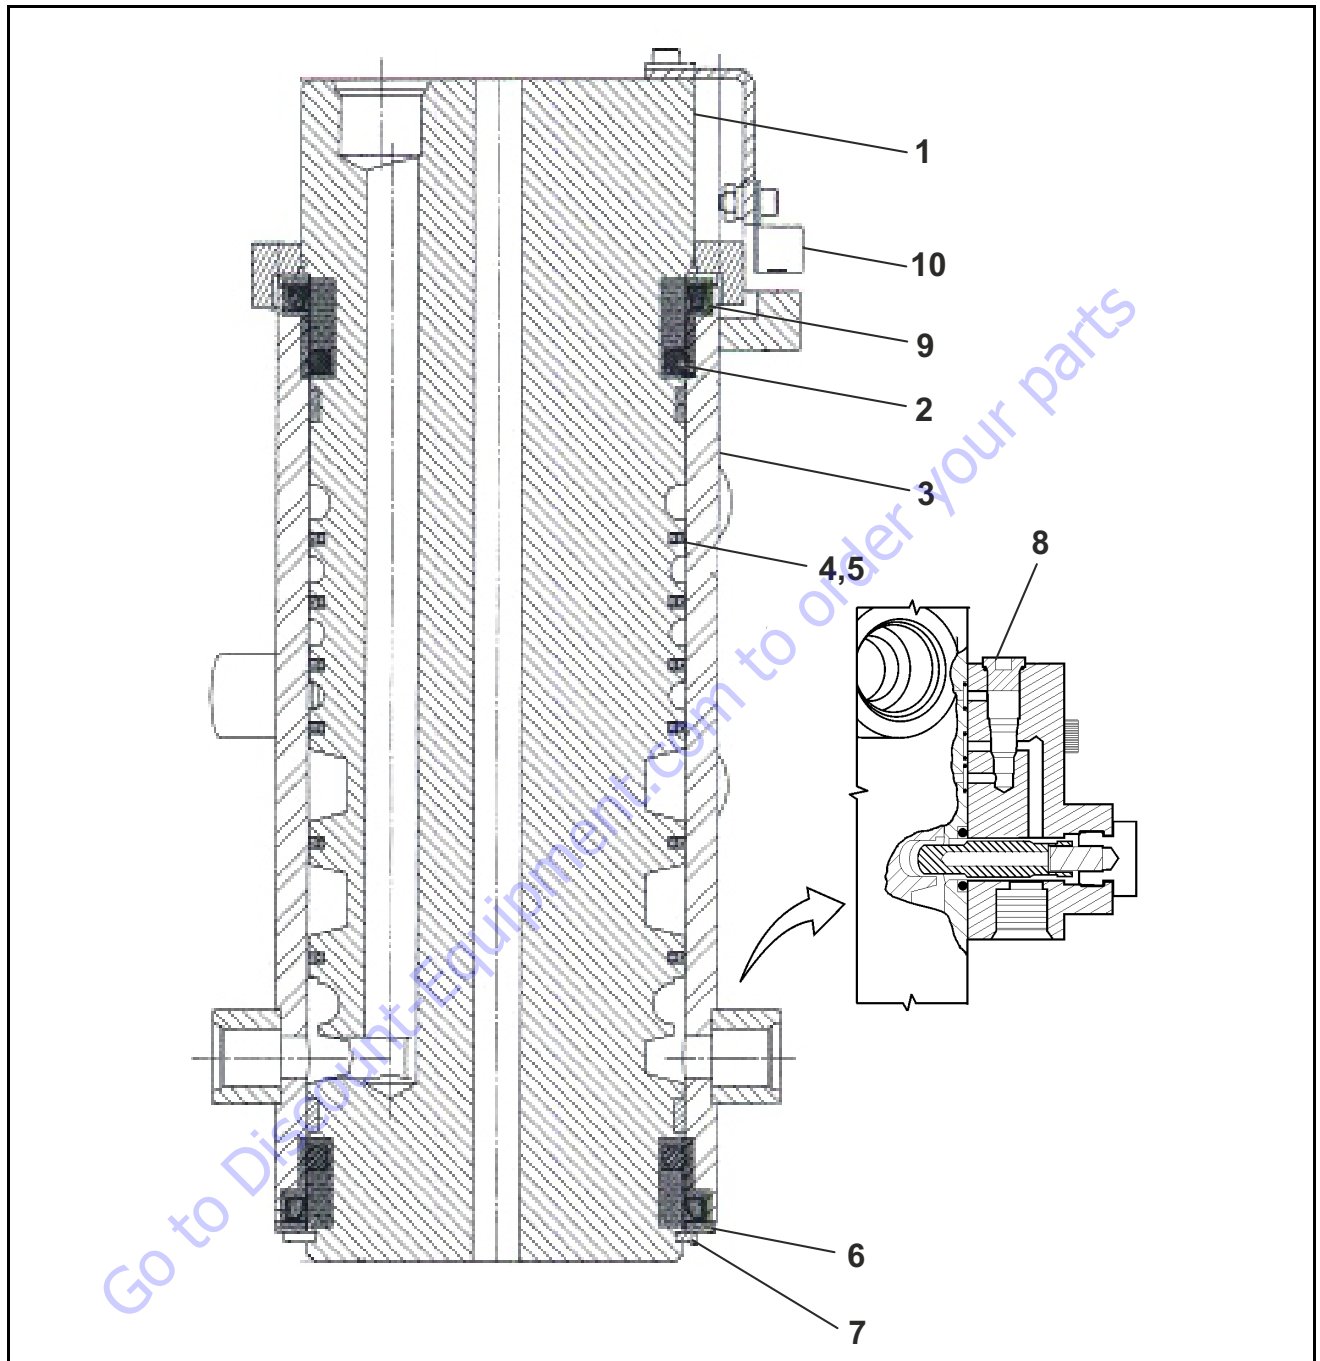

- | | |
|----------------|-----------------------------------|
| 1. Center Body | 6. Thrust Ring |
| 2. Seal | 7. Snap Ring |
| 3. Housing | 8. Valve Block (Axle Oscillation) |
| 4. O-ring | 9. O-ring |
| 5. Seal | 10. Proximity Switch |

Figure 3-47. Rotary Coupling Cutaway

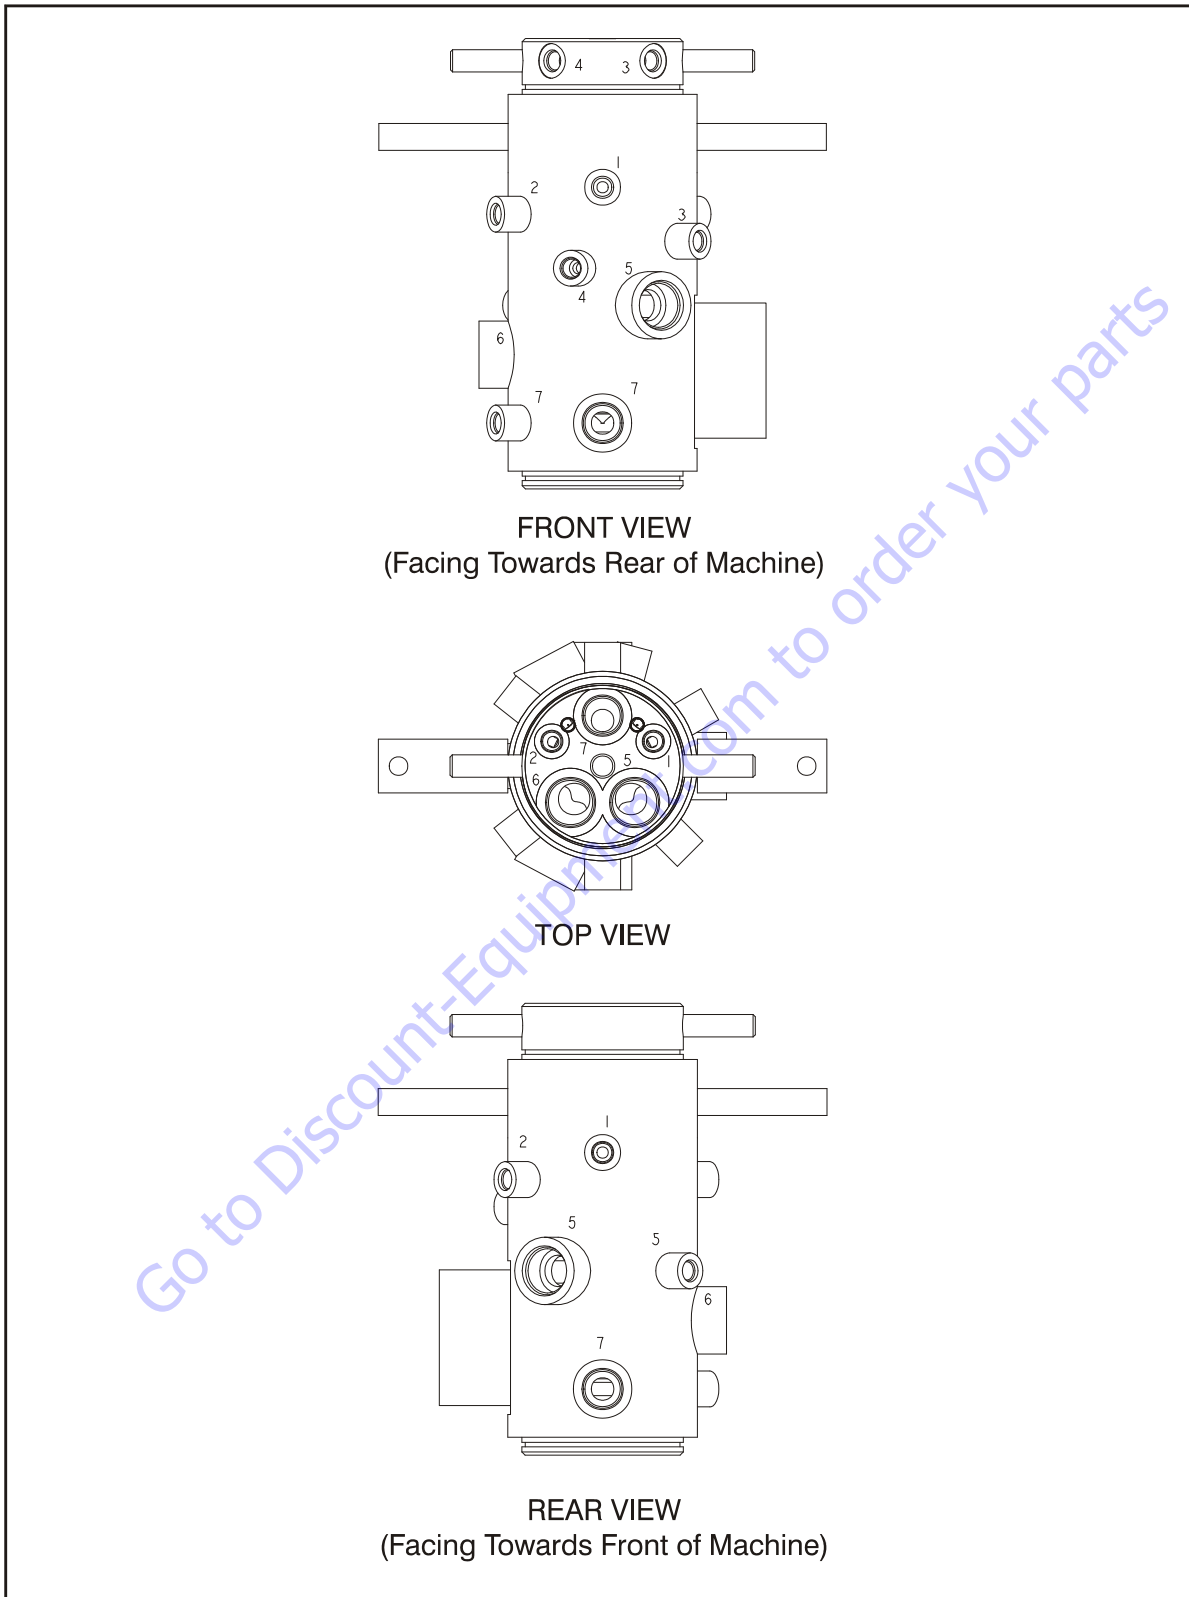


Figure 3-48. Rotary Coupling Port Location (7 Port)


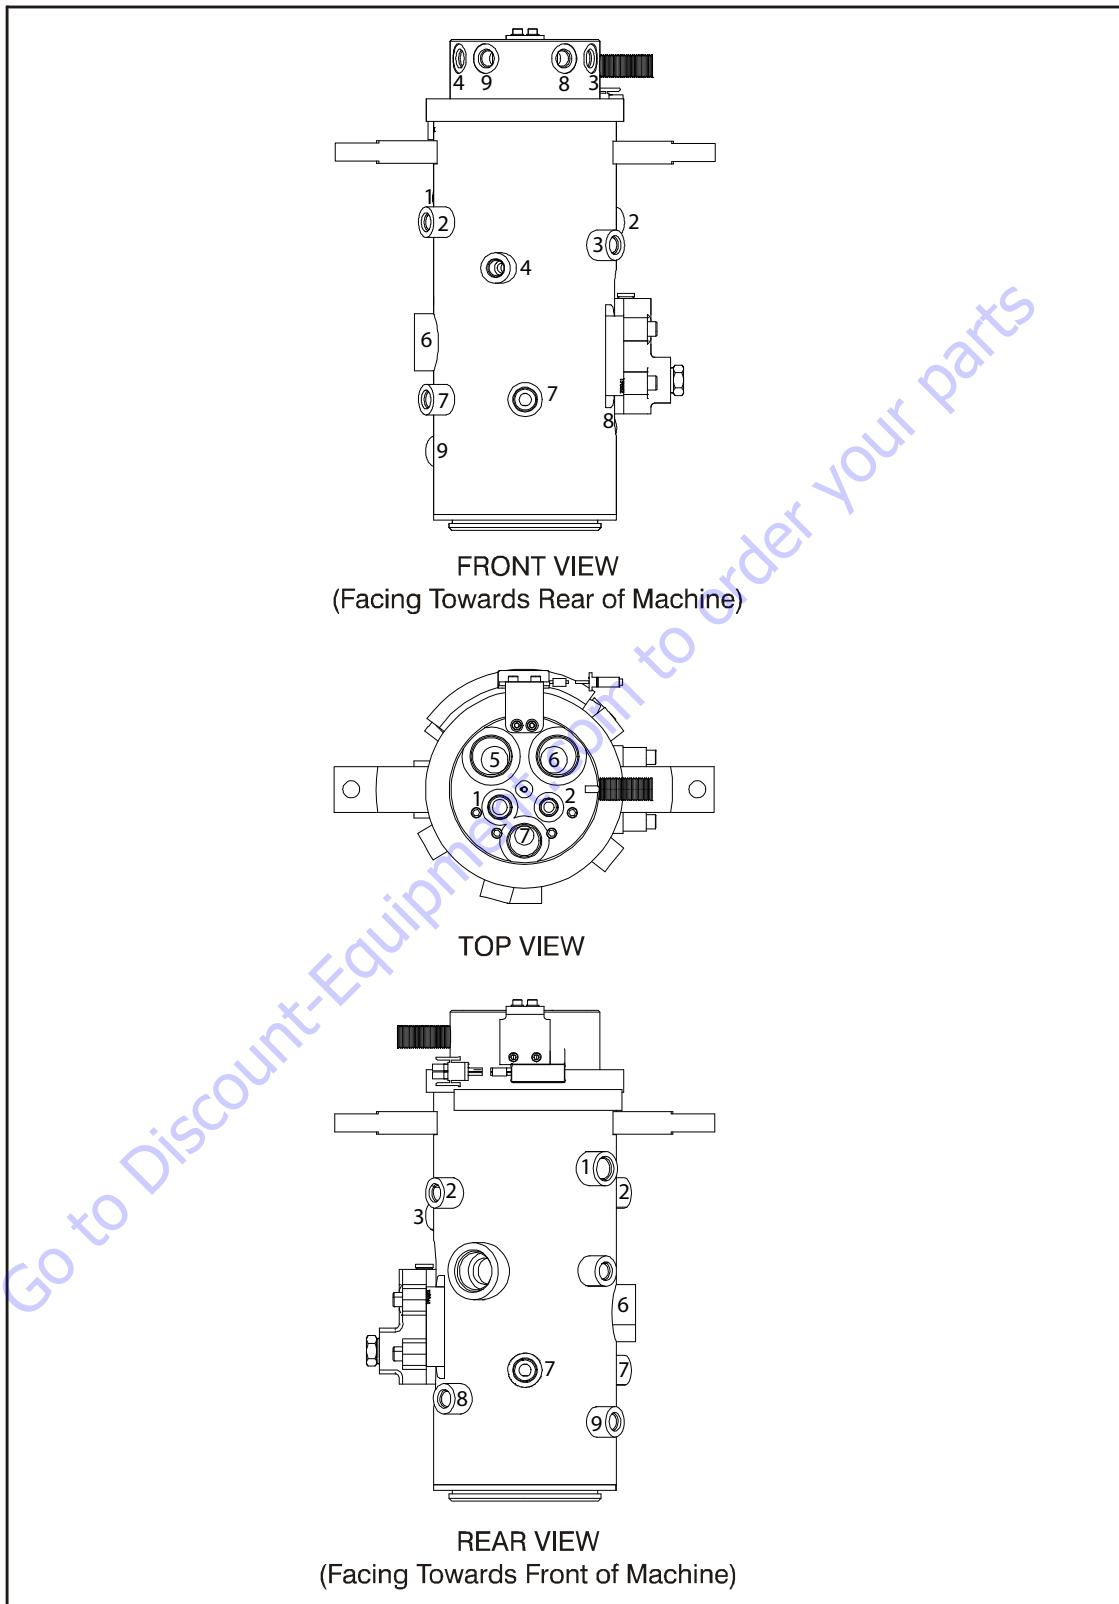


Figure 3-49. Rotary Coupling Port Location (9 Port)

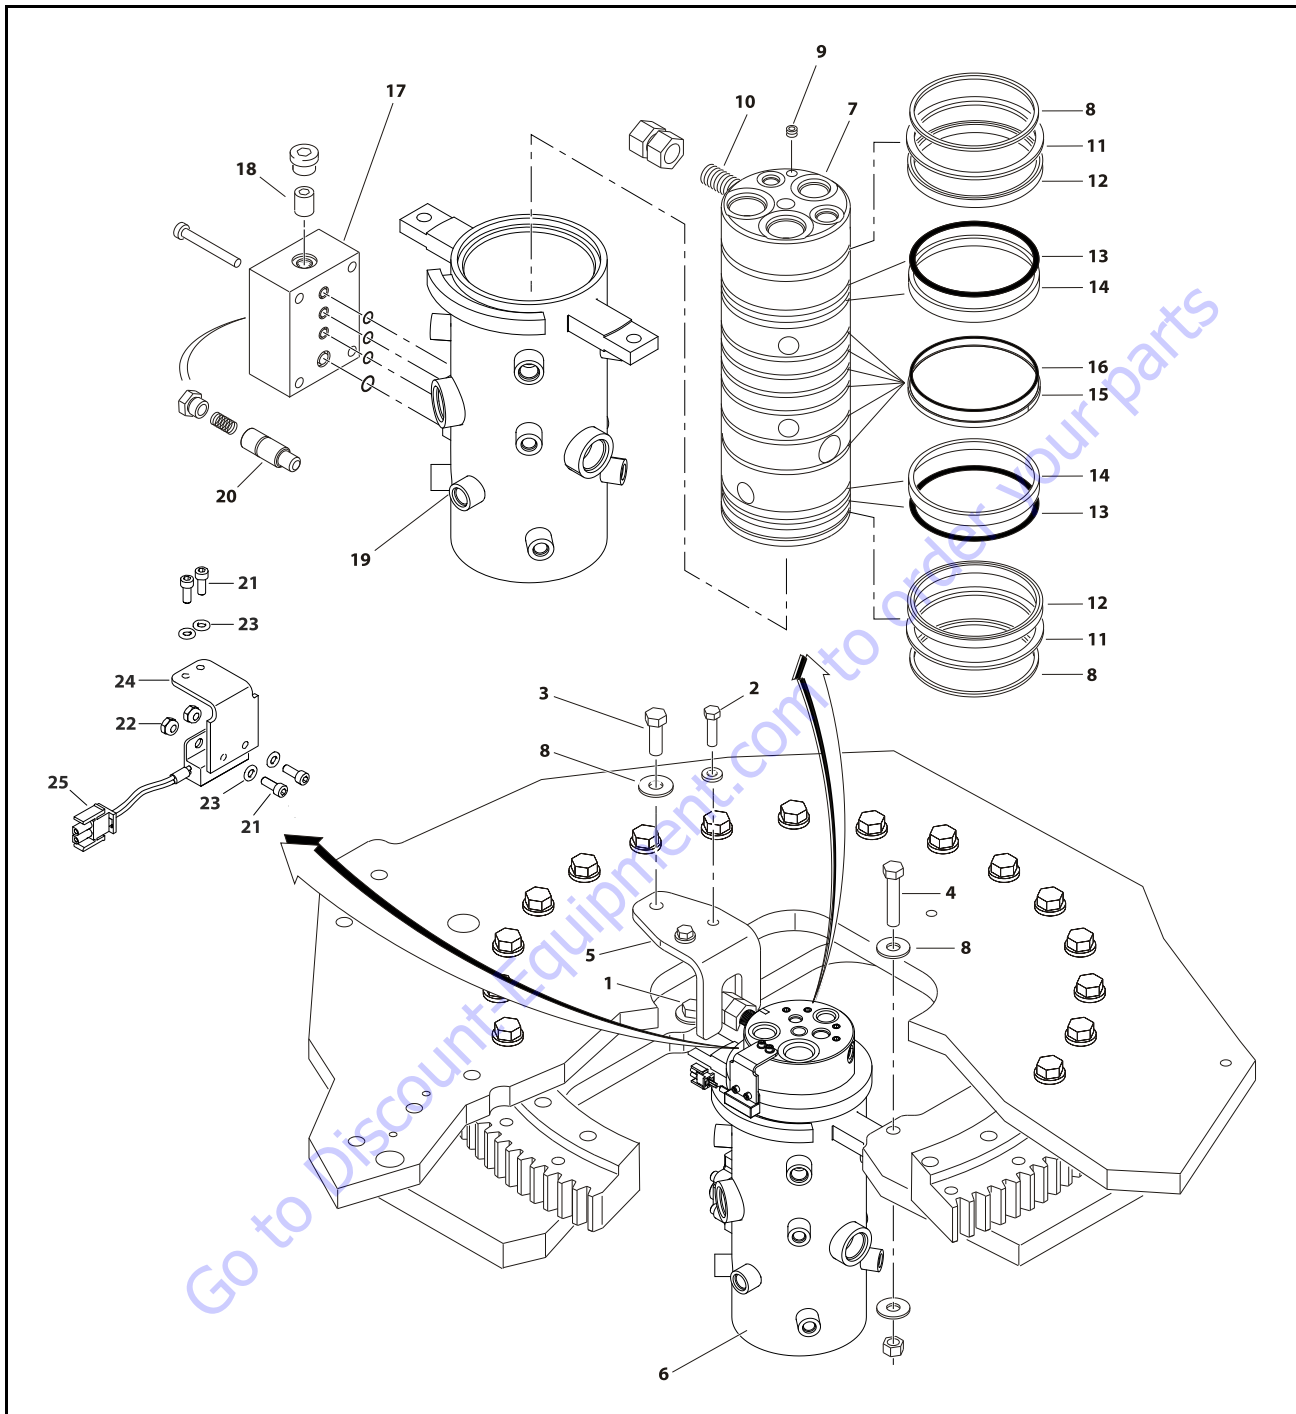

- | | | | | |
|---------------------|--------------------|--------------|-------------------|----------------------|
| 1. JLG Threadlocker | 6. Rotary Coupling | 11. Ring | 16. O-ring | 21. Bolt |
| 2. Bolt | 7. Spool | 12. Seal | 17. Valve | 22. Nut |
| 3. Bolt | 8. Retaining Ring | 13. O-ring | 18. Check Valve | 23. Washer |
| 4. Bolt | 9. Plug | 14. Bearing | 19. Case | 24. Bracket |
| 5. Bracket | 10. Torque Lug | 15. Cap Seal | 20. Plunger Valve | 25. Proximity Switch |

Figure 3-50. Rotary Coupling Installation

Table 3-8. Coupling Port Information Table (7 port)

Port No.	Outlets	Port Size	Description	Operating Pressure PSI (Bar)	Proof Pressure PSI (Bar)
1	1	-8	Brake	450 (31)	675 (46.5)
2	2	-6	2 Speed	4500 (310)	6750 (465)
3	1	-6	Steer	2500 (172)	3750 (258.5)
4	1	-6	Steer	2500 (172)	3750 (258.5)
5	2	1-6, 1-16	Drive Reverse	4500 (310)	6750 (465)
6	1	-16	Drive Forward	4500 (310)	6750 (465)
7	3	2-8, 1-6	Drain	250 (17)	375 (26)

Table 3-9. Coupling Port Information Table (9 port)

Port No.	Outlets	Port Size	Description	Operating Pressure PSI (Bar)	Proof Pressure PSI (Bar)
1	1	-8	Brake	450 (31)	675 (46.5)
2	2	-6	2 Speed	4500 (310)	6750 (465)
3	1	-6	Steer	2500 (172)	3750 (258.5)
4	1	-6	Steer	2500 (172)	3750 (258.5)
5	2	1-6, 1-16	Drive Reverse	4500 (310)	6750 (465)
6	1	-16	Drive Forward	4500 (310)	6750 (465)
7	3	2-8, 1-6	Drain	250 (17)	375 (26)
8	1	-6	Steer	2500 (172)	3750 (258.5)
9	1	-6	Steer	2500 (172)	3750 (258.5)


Go to Discount-Equipment.com to order your parts

3.15 GENERATOR

Maintenance Schedule


EVERY 250 HOURS

Every 250 hours of operation, check the drive belt for proper tension.

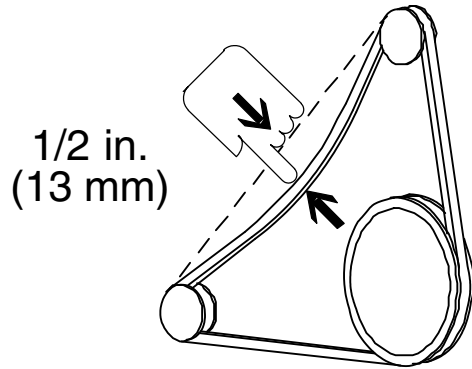


EVERY 500 HOURS

Every 500 hours of operation, service the generator brushes and slip rings. Hostile environments may require more frequent service.

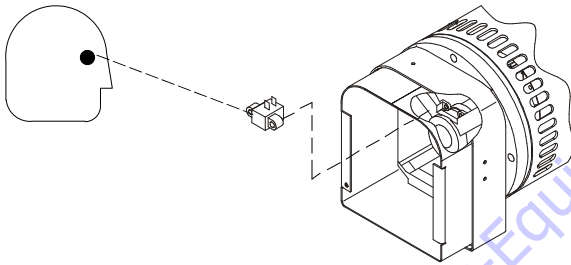

Every 500 hours of service, blow out the inside of the generator. If operating in a hostile environment, clean monthly.

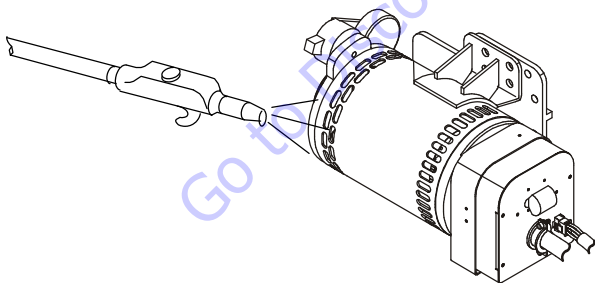


Overload Protection

CAUTION

STOP THE ENGINE WHENEVER CHECKING OR INSPECTING THE CIRCUIT BREAKER.

The circuit breaker protects the generator windings from overload. If the circuit breaker opens, generator output stops. If the circuit breaker continues to open, check for faulty equipment connected to the platform receptacles.

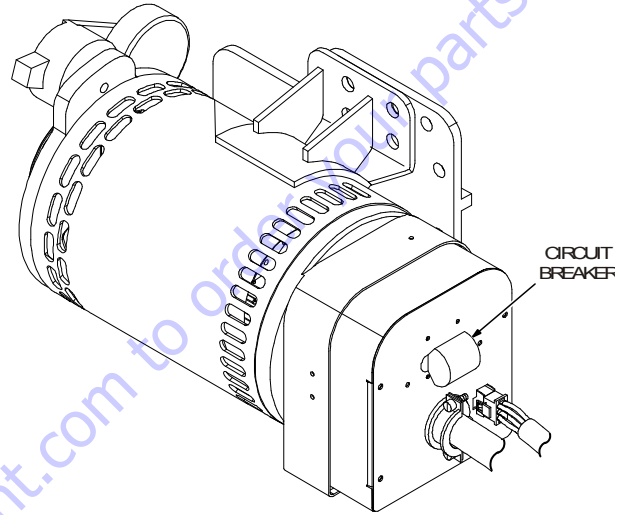

Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings

Refer to Figure 3-51., *Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings.*

INSPECTING BRUSH POSITION

Inspect brush alignment with slip rings. View alignment through the air vents in the stator barrel. The brushes must ride completely on the slip rings.

INSPECTING BRUSHES

Remove the end panel. Inspect the wires. Remove the brush holder assembly. Pull the brushes from the holders.

Replace the brushes if damaged, or if the brush is at or near minimum length.

CLEANING SLIP RINGS

Visually inspect the slip rings. Under normal use, the rings turn dark brown.

If the slip rings are corroded or their surface is uneven, remove the belt to turn the shaft by hand for cleaning.

Clean the rings with 220 grit emery paper. Remove as little material as possible. If the rings are deeply pitted and do not clean up, consult generator factory service.

Reinstall the belt, brush holder assembly, and end panel.

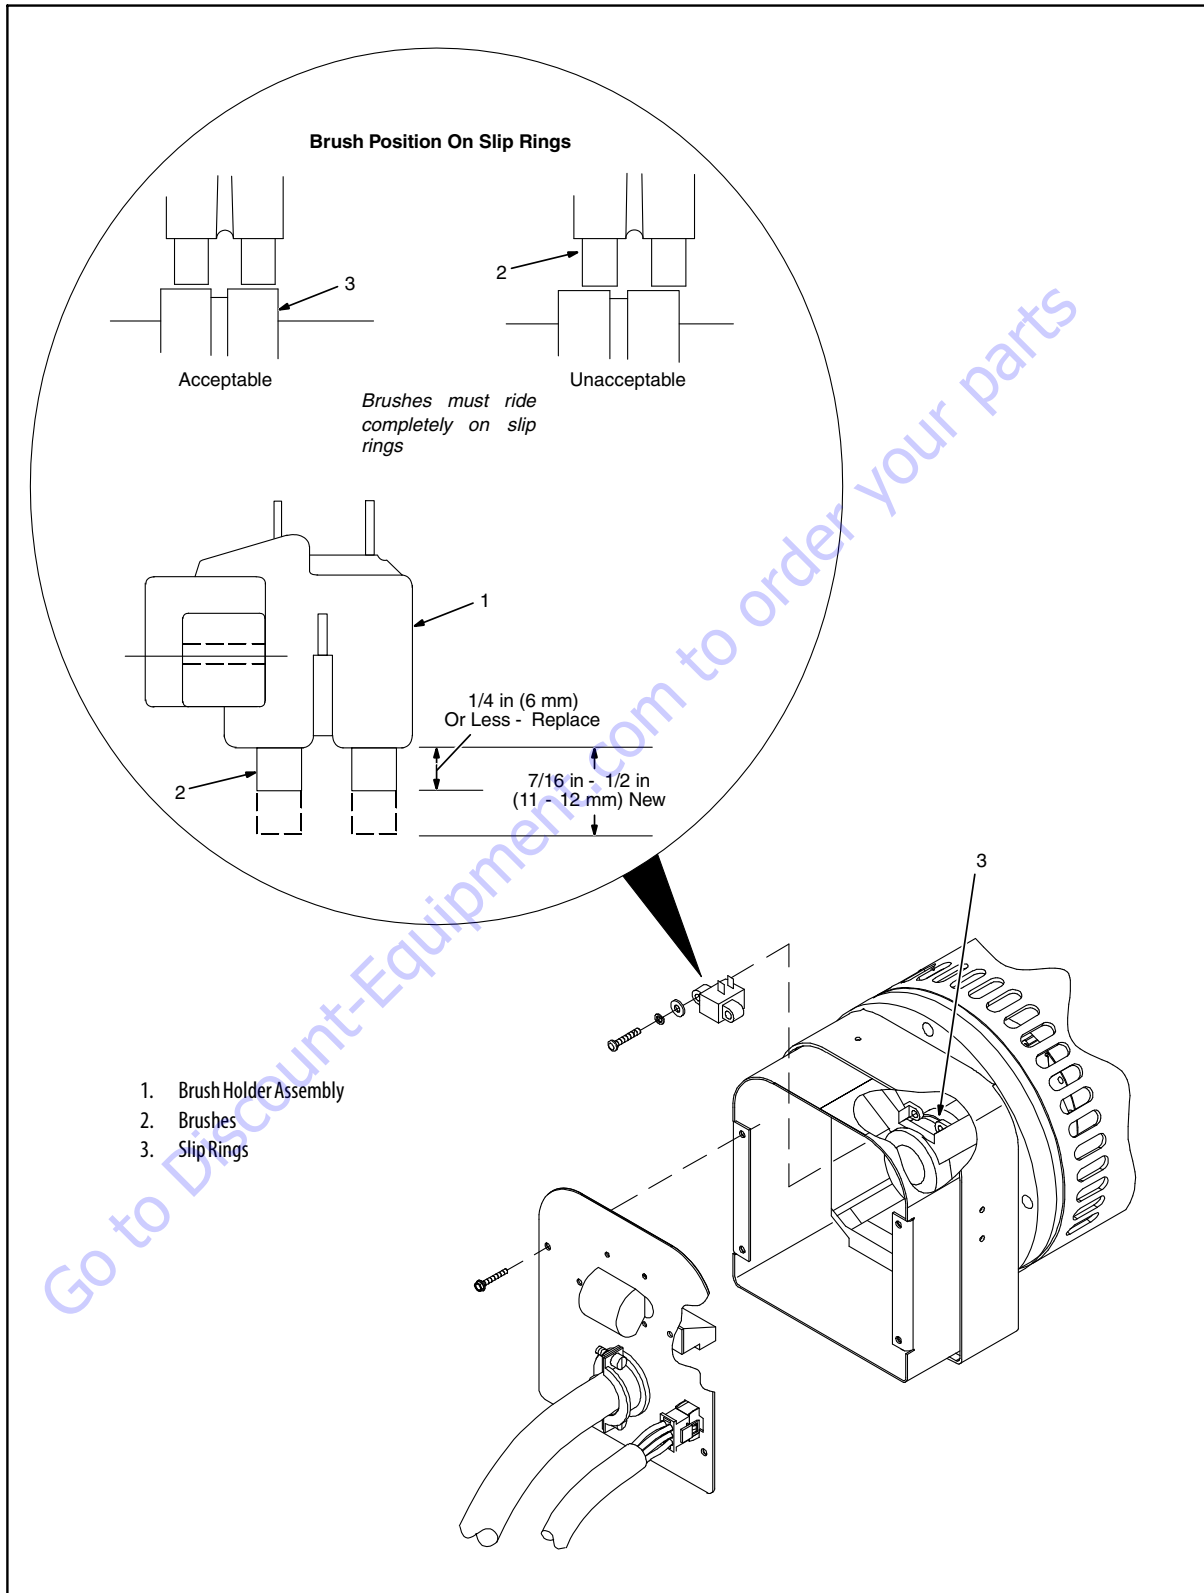


Figure 3-51. Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings

Troubleshooting

Table 3-10. Troubleshooting

Trouble	Remedy
No generator output at platform AC receptacles.	Be sure generator control switch is turned on at platform.
	Check and secure electrical connections at platform, generator, and control box.
	Be sure all equipment is turned off when starting unit.
	Reset circuit breaker CB1.
	Check plug PLG3 connection and/or connections at receptacles RC3 and RC5.
	Be sure + 12 volts DC input voltage is being supplied to control box.
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Disconnect leads 12 and 13 from brushes, and check continuity across slip rings (nominal reading is 26 ohms). Replace generator if rotor is open.
	Disconnect stator weld leads 1, 2, and 3 from circuit breaker CB1, and check continuity between leads. Replace generator if necessary.
	Disconnect plug PLG4 and check continuity between exciter leads 5 and 6. Replace generator if necessary.
	Check power board PC1 and connections, and replace if necessary.
	Check control board PC2 and connections, and replace if necessary.
Low generator output at platform AC receptacles.	Verify generator is running at 3600 rpm (60 Hz) or 3000 rpm (50 Hz).
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Disconnect leads 12 and 13 from brushes, and check continuity across slip rings nominal reading is 26 ohms). Replace generator if rotor is open.
	Disconnect stator weld leads 1, 2, and 3 from circuit breaker CB1, and check continuity between leads. Replace generator if necessary.
	Disconnect plug PLG4 and check continuity between exciter leads 5 and 6. Replace generator if necessary.
	Check power board PC1 and connections, and replace if necessary.
	Check control board PC2 and connections, and replace if necessary.
High generator output at platform AC receptacles.	Verify generator is running at 3600 rpm (60 Hz) or 3000 rpm (50 Hz).
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Check power board PC1 and connections, and replace if necessary.
	Check control board PC2 and connections, and replace if necessary.
Erratic generator output at platform AC receptacles.	Check and secure electrical connections at platform, generator, and control box.
	Verify generator is running at 3600 rpm (60 Hz) or 3000 rpm (50 Hz).
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Disconnect leads 12 and 13 from brushes, and check continuity across slip rings nominal reading is 26 ohms). Replace generator if rotor is open.
	Check power board PC1 and connections, and replace if necessary
	Check control board PC2 and connections, and replace if necessary

Generator Disassembly and Assembly

Refer to Figure 3-53. and Figure 3-54. to determine if trouble is in stator, rotor, control box, or combination of these components.

1. Rotor
2. Stator Assembly

⚠ CAUTION

DO NOT DAMAGE ROTOR OR STATOR WINDINGS DURING DISASSEMBLY AND ASSEMBLY PROCEDURE.

DISASSEMBLY

1. Mark and disconnect all electrical leads, secure using cable ties.

2. Remove brush holder assembly.
3. Disassemble generator parts shown in Figure 3-52.
4. Clean all parts with approved solvent and dry with compressed air, If applicable.
5. Inspect all part for damage. Replace if necessary.

ASSEMBLY

1. Assemble generator parts using torque values in table.
2. Reconnect all leads. Use cable ties to secure leads away from moving or hot parts.

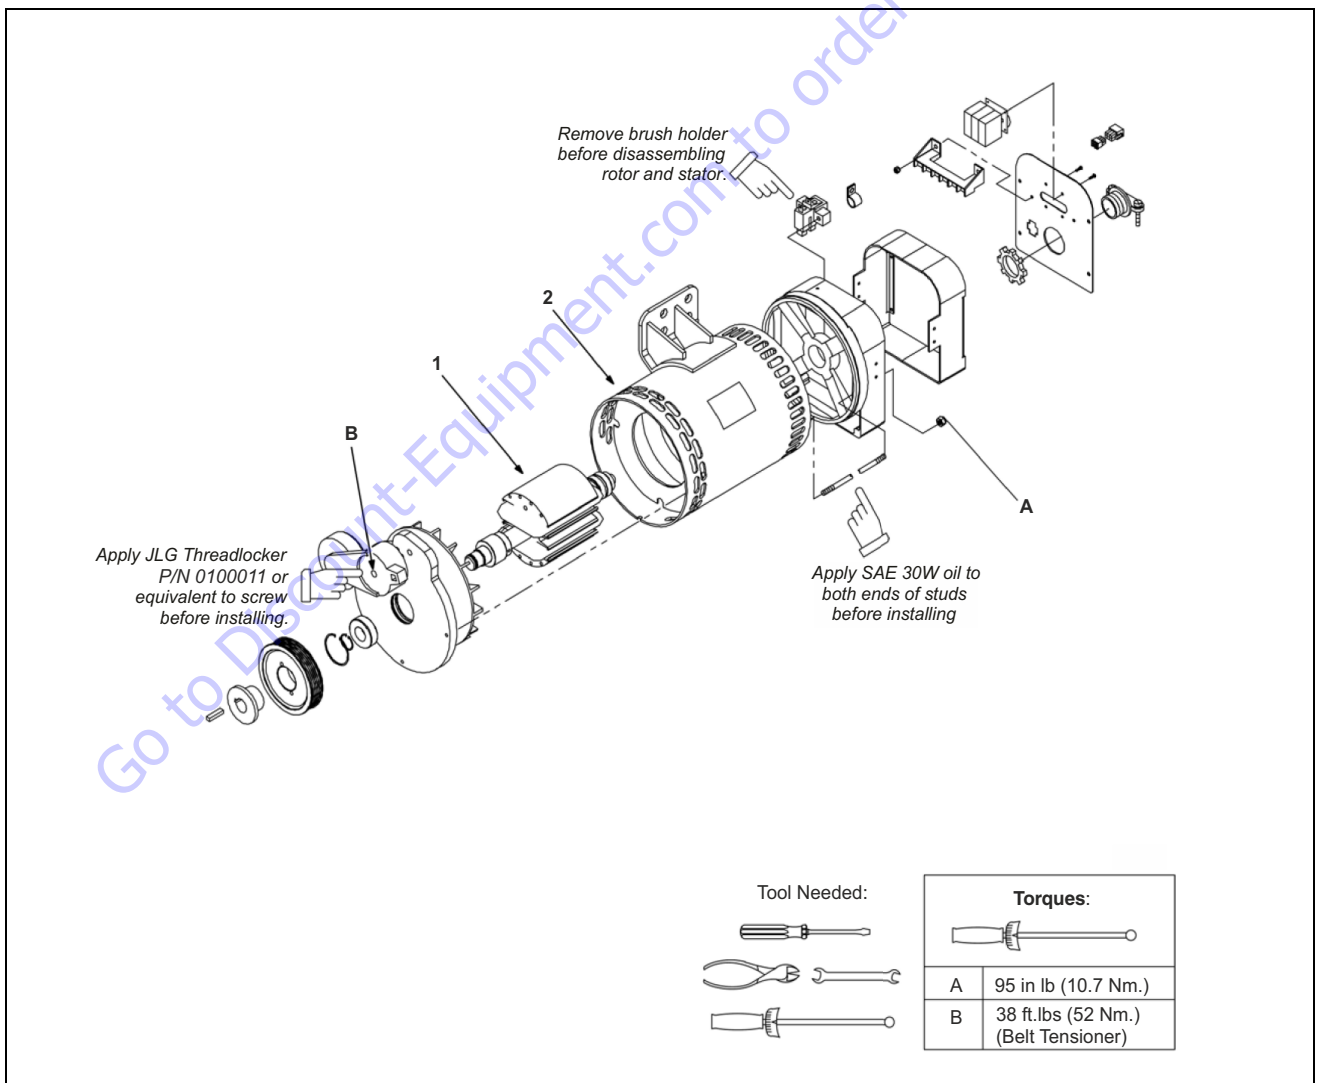


Figure 3-52. Generator Disassembly and Assembly

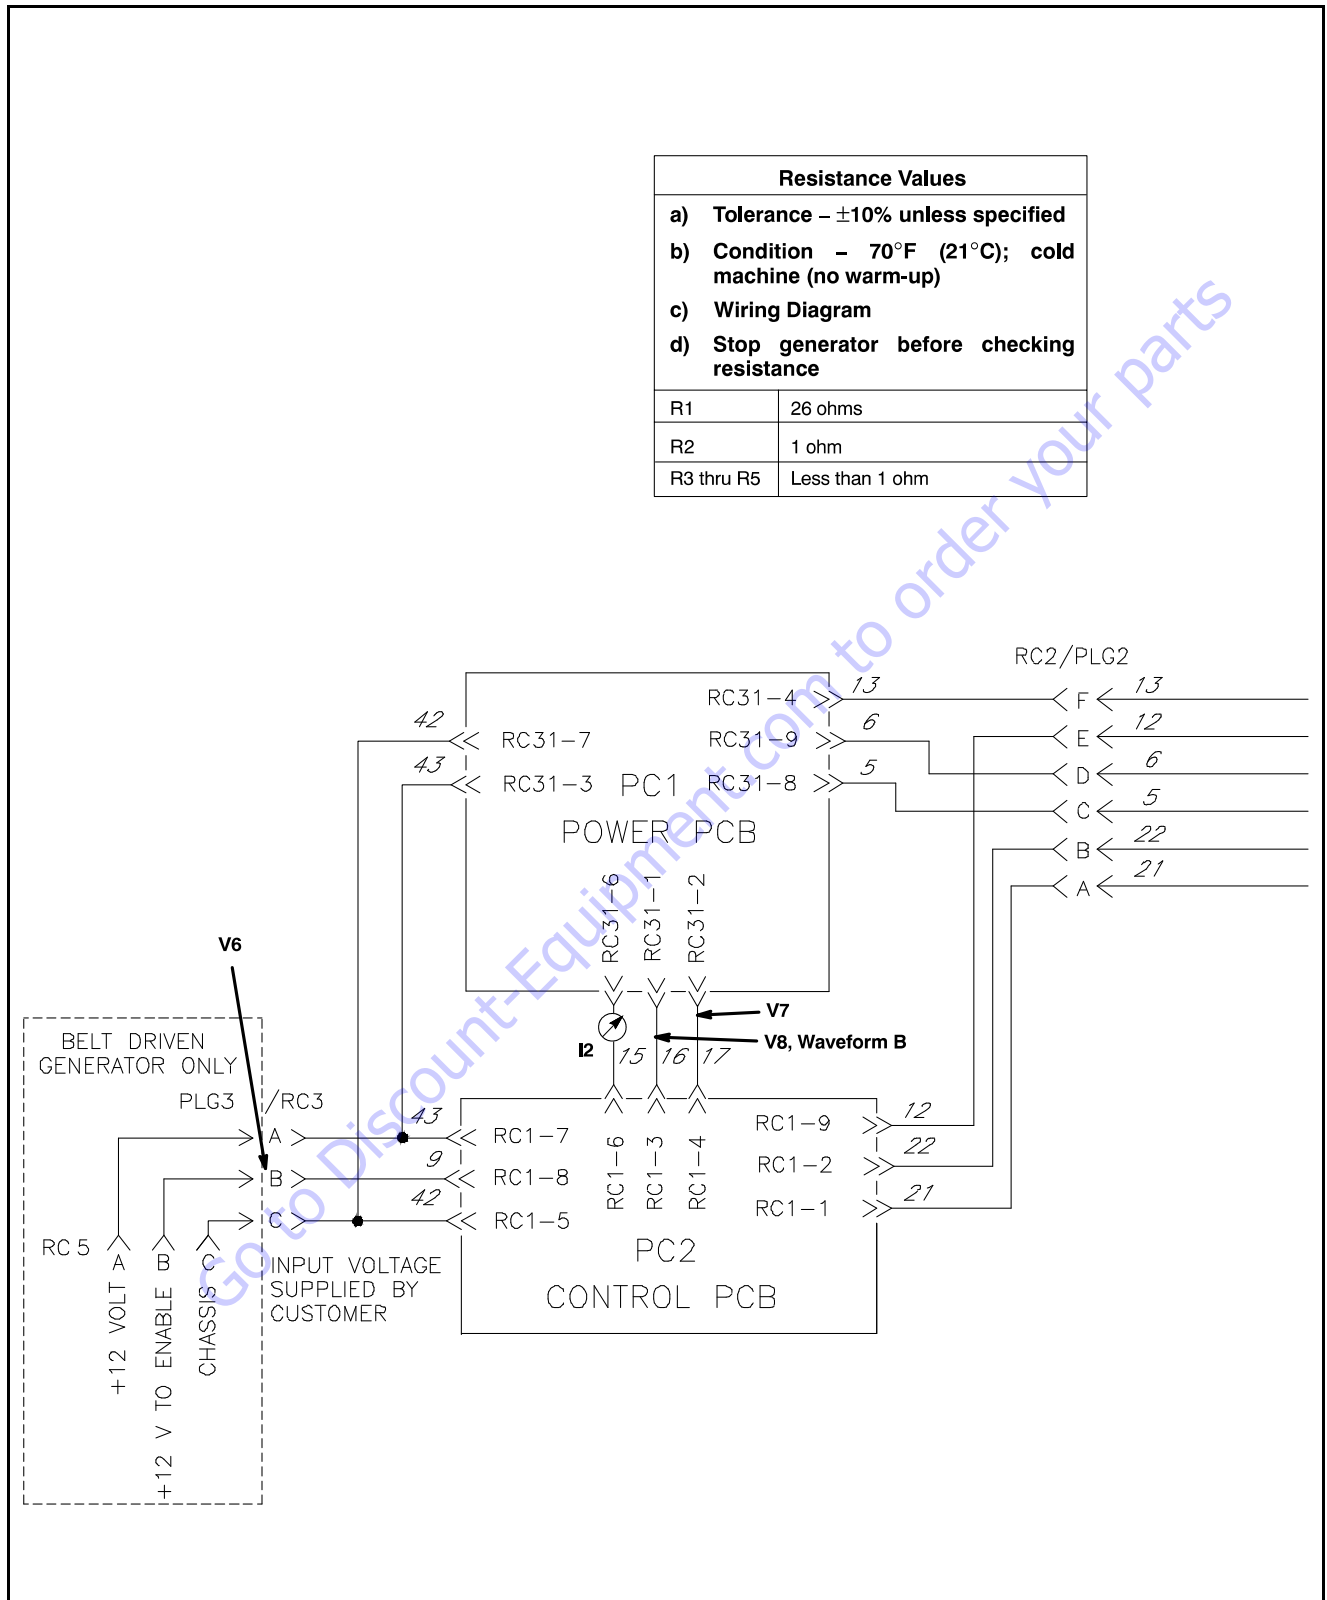


Figure 3-53. Generator Troubleshooting Circuit Diagram (Sheet 1 of 2)

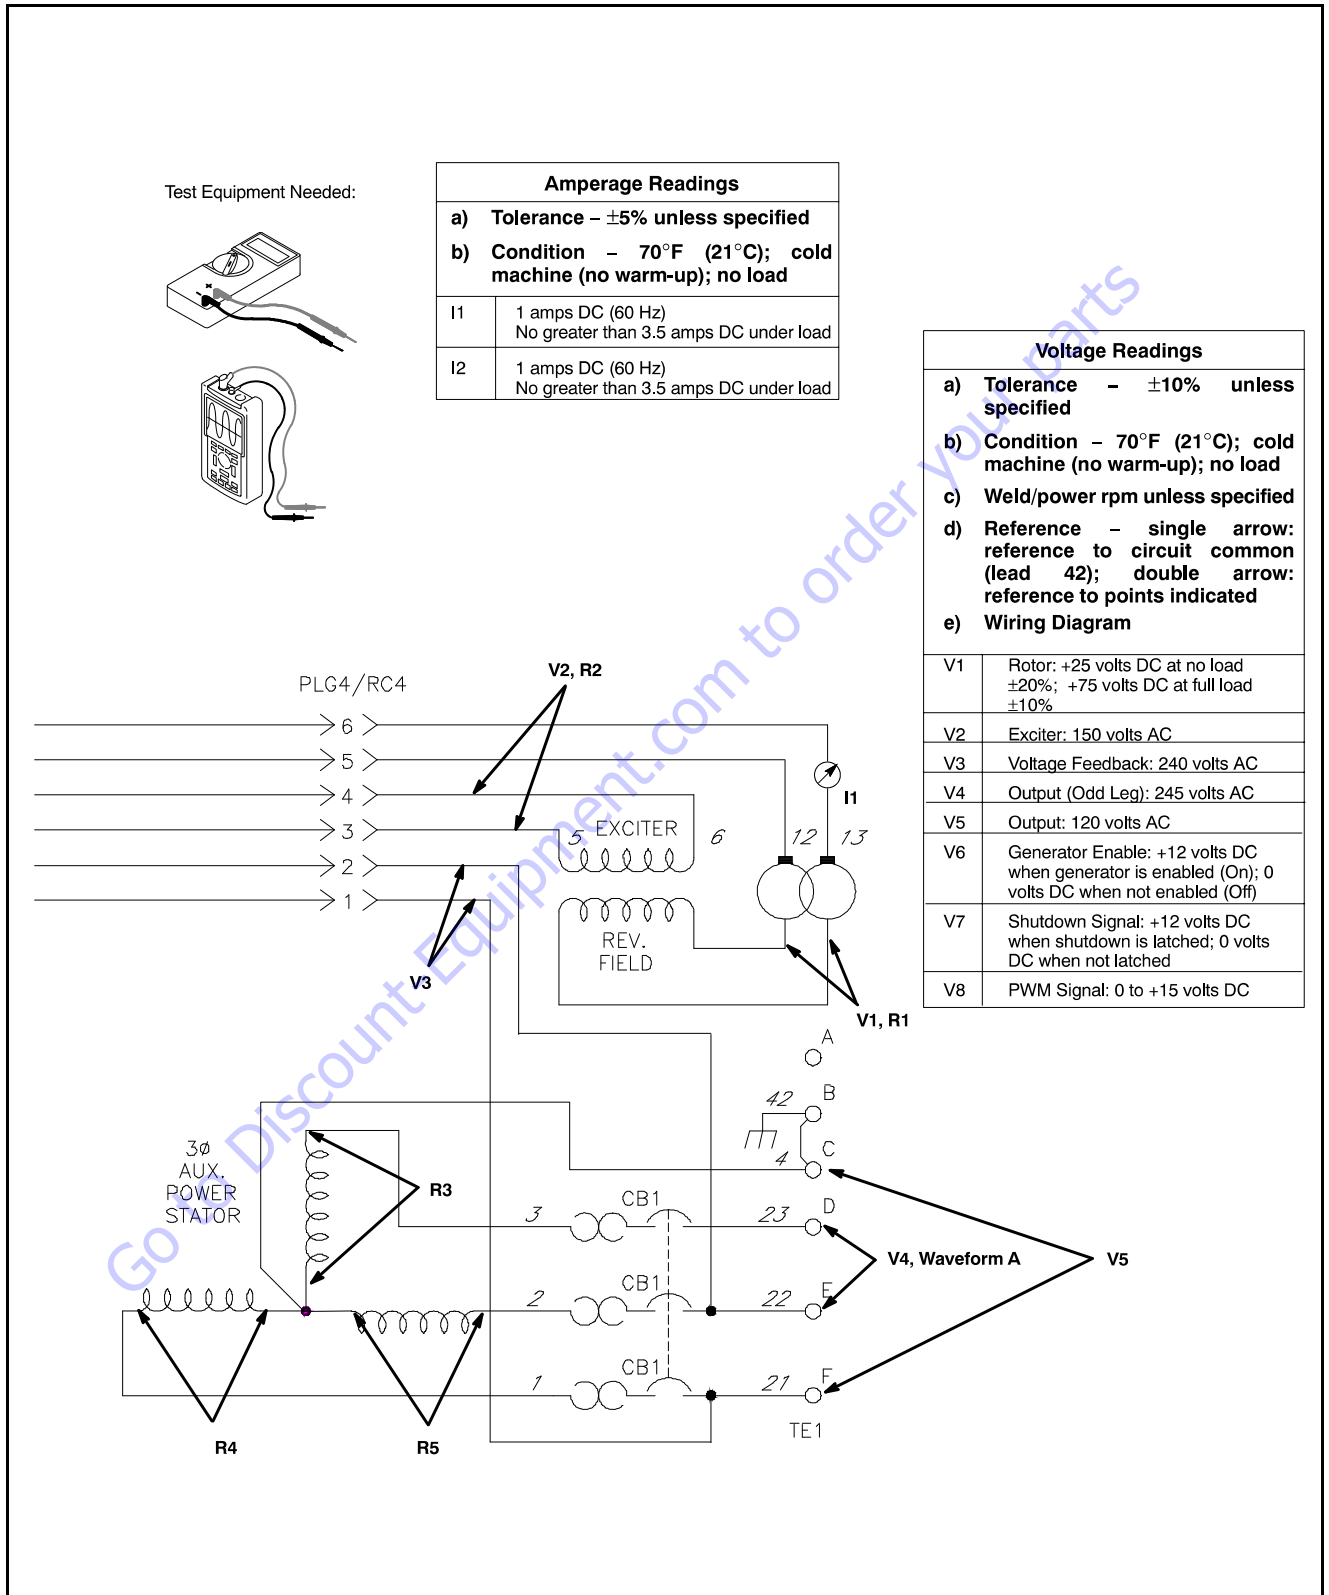


Figure 3-54. Generator Troubleshooting Circuit Diagram (Sheet 2 of 2)

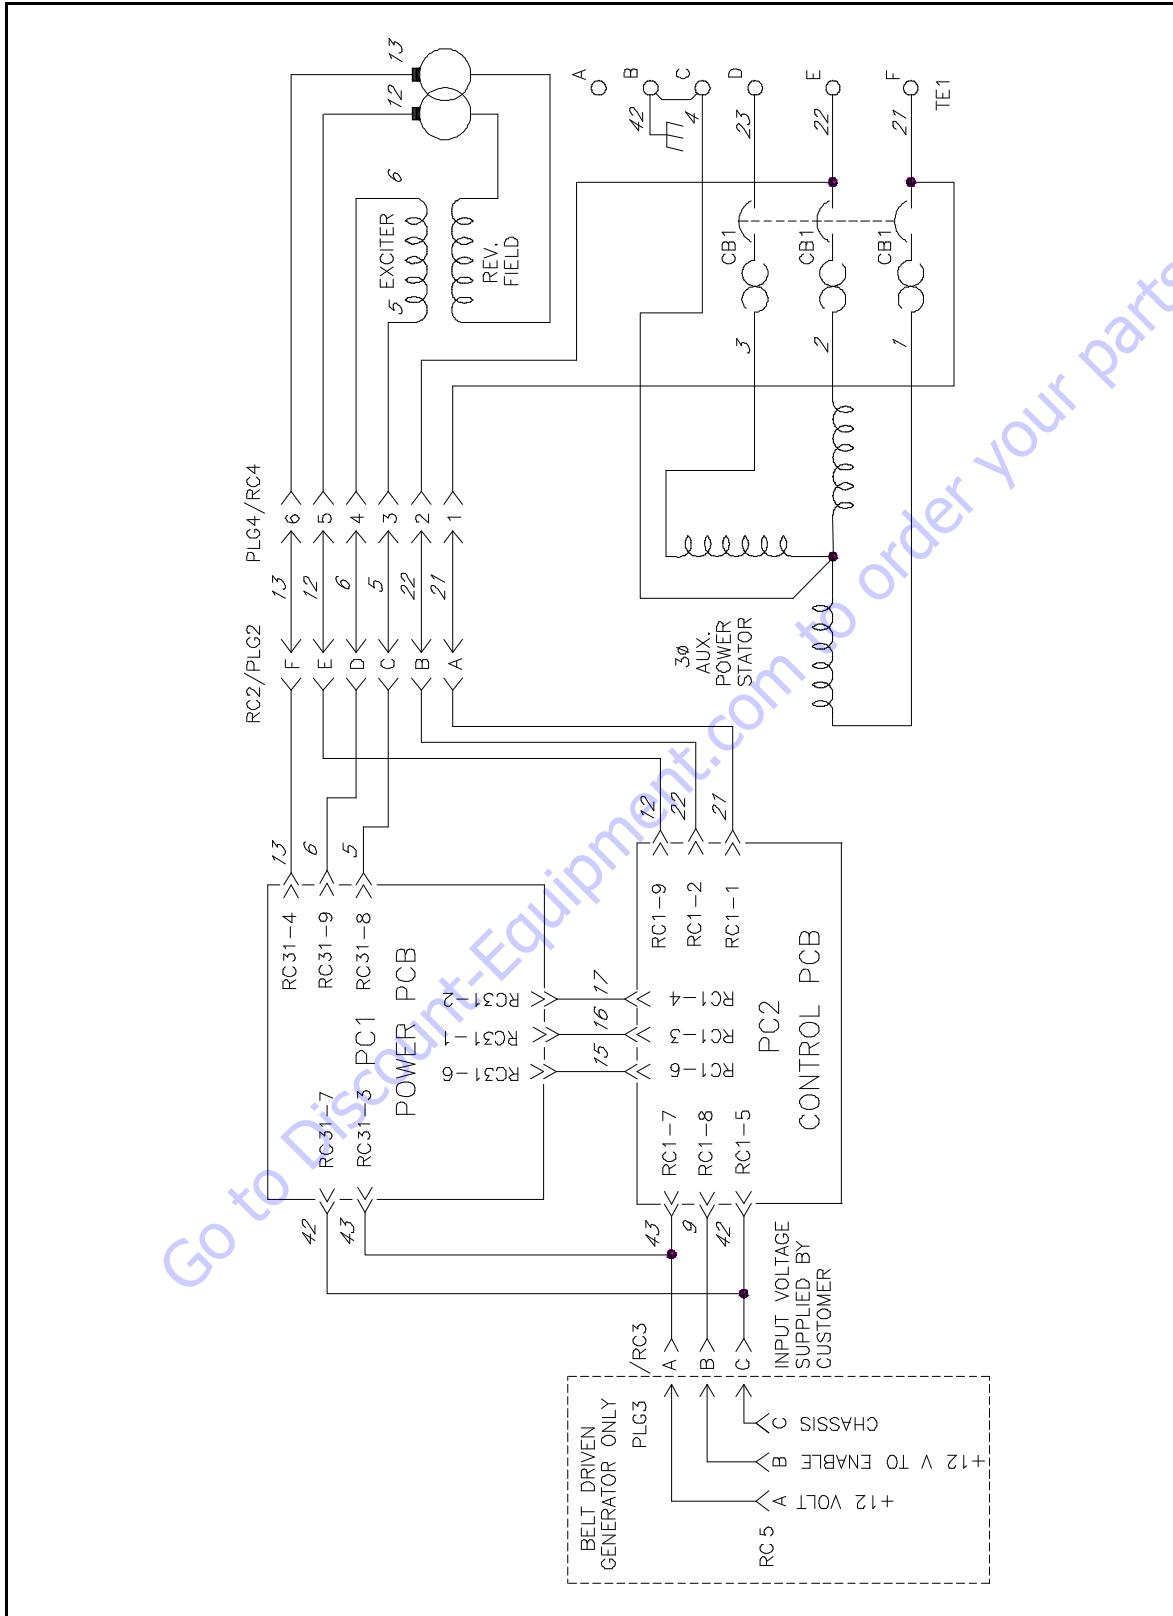


Figure 3-55. Generator Electrical Circuit Diagram

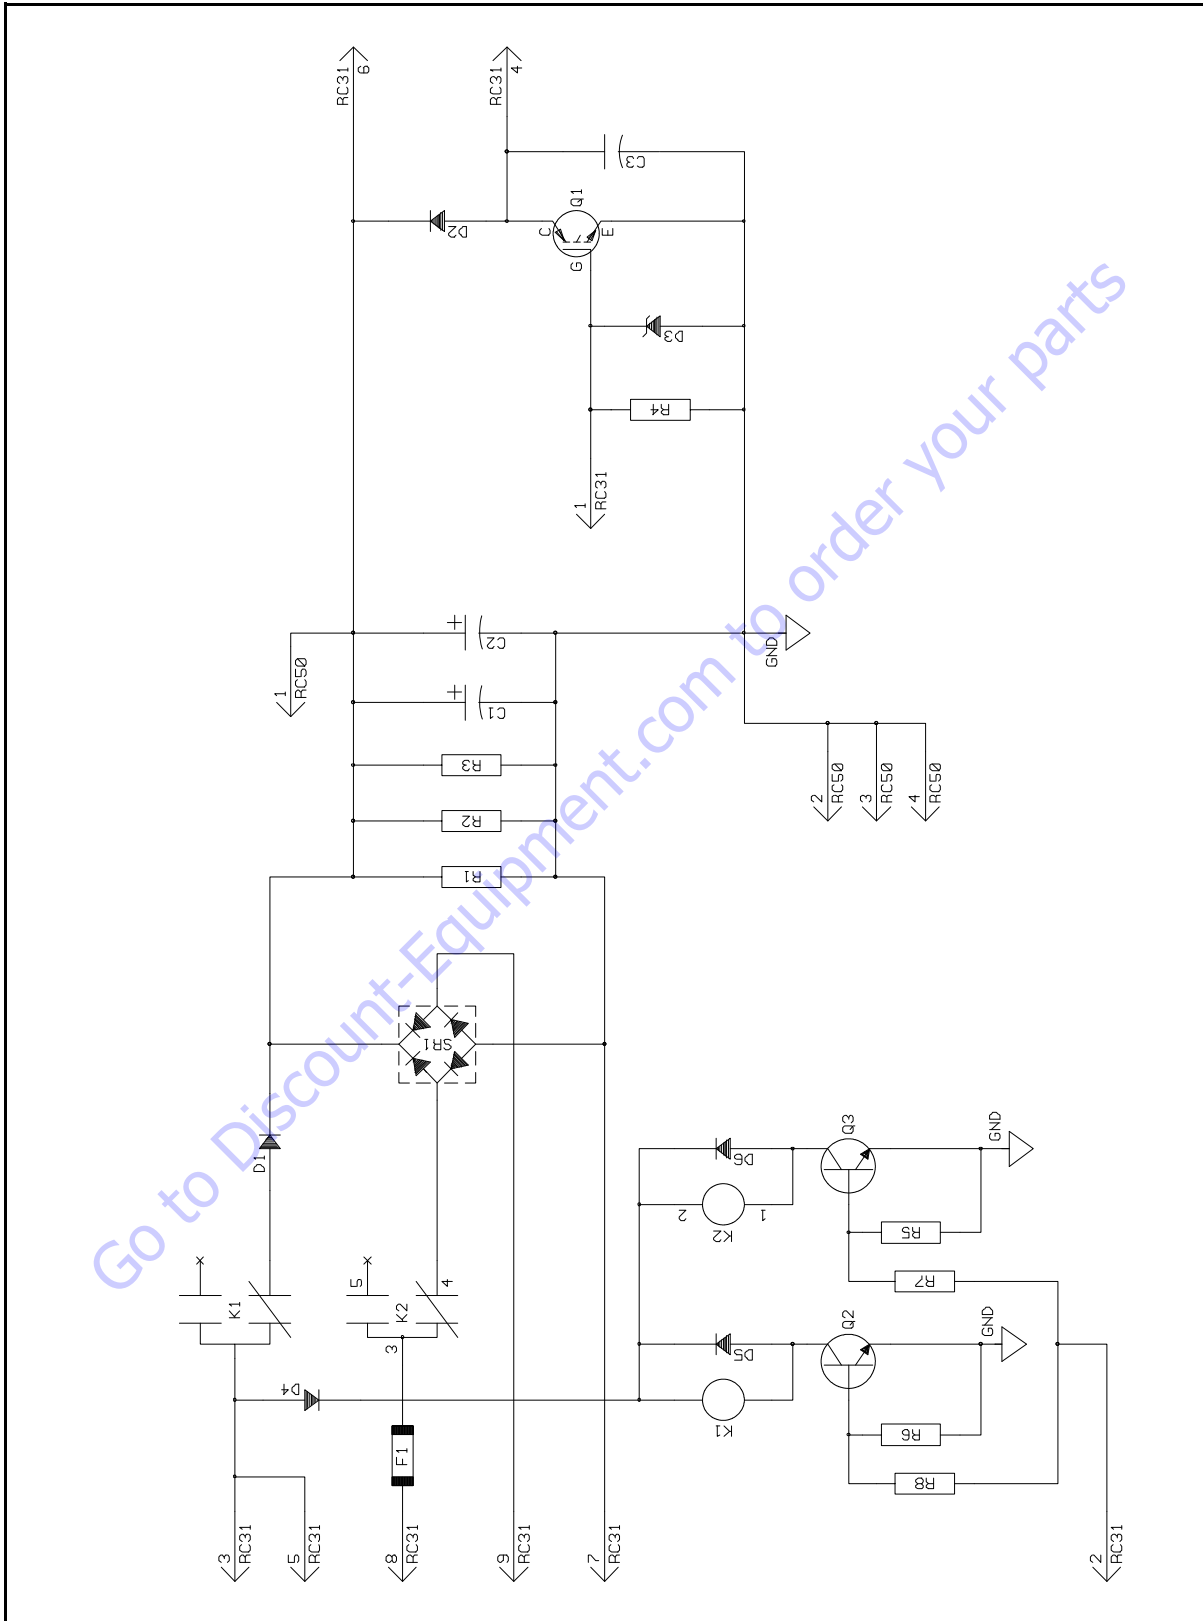


Figure 3-56. Power Board PC1 Electrical Circuit Diagram

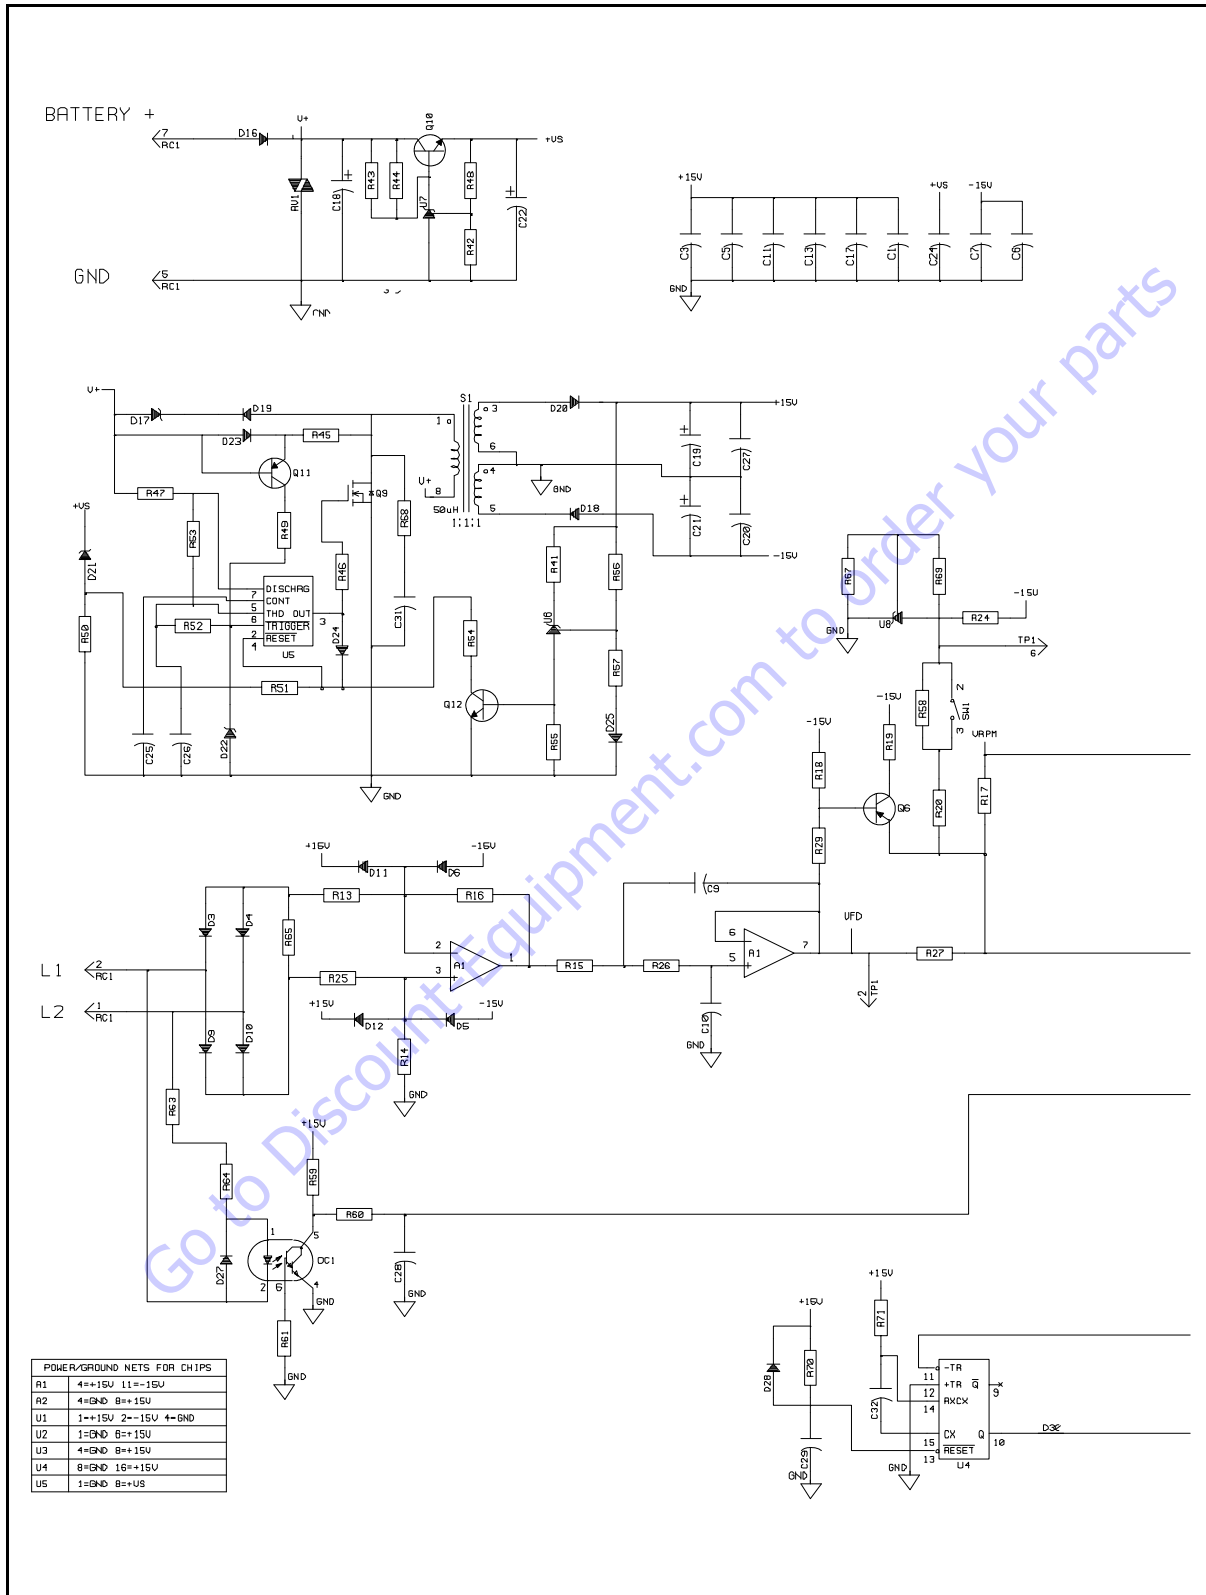


Figure 3-57. Power Board PC2 Electrical Circuit Diagram (Sheet 1 of 2)

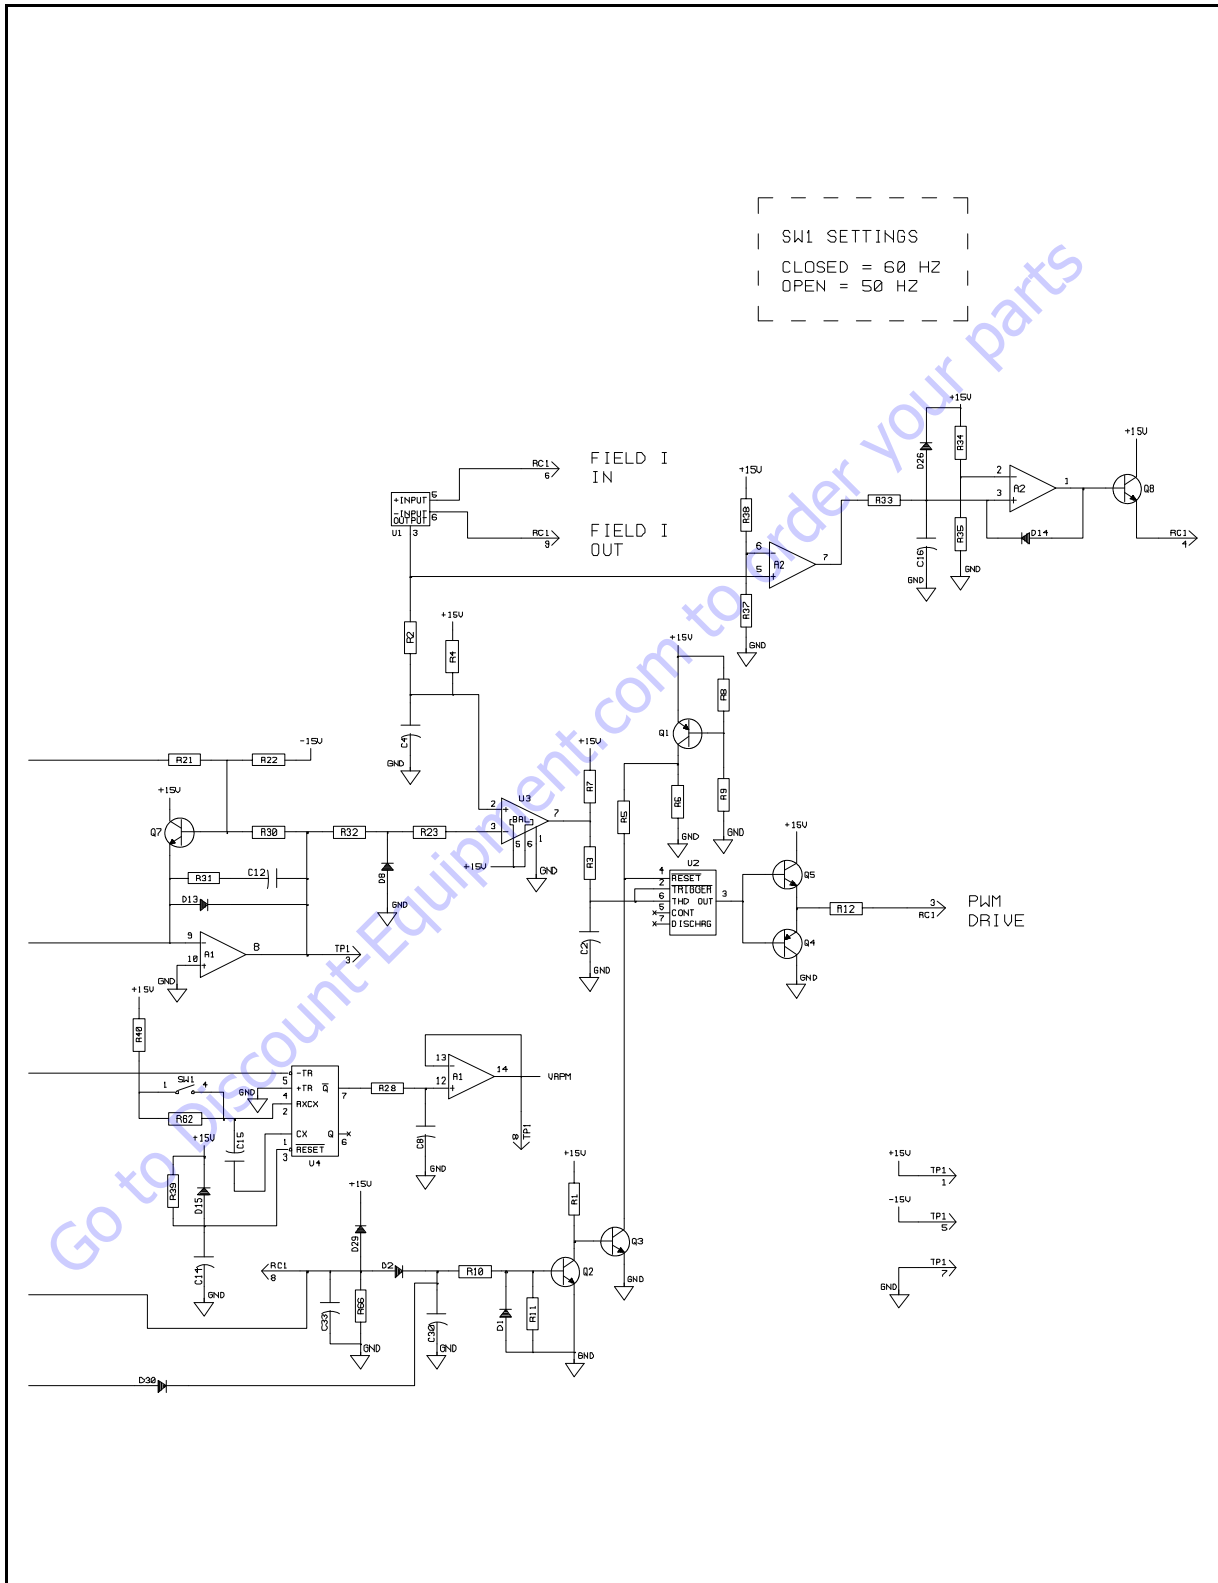


Figure 3-58. Power Board PC2 Electrical Circuit Diagram (Sheet 2 of 2)

SECTION 3 - CHASSIS & TURNTABLE

Lead Connection List for Generator

NOTE: Table shows physical lead connections and should be used with circuit diagram (table replaces wiring diagram).

NOTE: Apply small amount of dielectric grade, nonconductive electric grease to connectors where factory-applied grease had been present.


Table 3-11. Lead Connection List for Generator

Leads	Connections
1A	STATOR TO CB1
2A	STATOR TO CB1
3A	STATOR TO CB1
4A	STATOR TO TE1 (C)
5A	STATOR TO RC4 (3)
5B	PLG2 (C) TO PLG4 (3)
5C	RC2 (C) PLG31 (8)
6A	STATOR TO RC4 (4)
6B	PLG2 (D) TO PLG4 (4)
6C	RC2 (D) PLG31 (9)
9A	RC5 (B) TO PLG3 (B) (Customer Supplied)
9B	RC3 (B) PLG1 (8)
12A	PLG2 (E) TO PLG4 (5)
12B	RC2 (E) PLG1 (9)
12C	RC4 (5) TO BRUSH
13A	PLG2 (F) TO PLG4 (6)
13B	RC2 (F) PLG31 (4)
13C	RC4 (6) TO BRUSH
15A	PLG1 (6) TO PLG31 (6)
16A	PLG1 (3) TO PLG31 (1)
17A	PLG1 (4) TO PLG31 (2)
21A	CB1 TO TE1 (F)
21B	PLG2 (A) TO PLG4 (1)
21C	PLG1 (1) TO RC2 (A)
21D	RC4 (1) TO CB1
22A	CB1 TO TE1 (E)
22B	PLG2 (B) TO PLG4 (2)
22C	PLG1 (2) TO RC2 (B)
22D	RC4 (2) TO CB1
23A	CB1 TO TE1 (D)
42A	RC5 (C) TO PLG3 (C) (Customer Supplied)
42B	RC3 (C) TO CONNECTION POINT 1
42C	PLG31 (7) TO CONNECTION POINT 1
42D	PLG1 (5) TO CONNECTION POINT 1
42F	END BELL SHROUD TO ENGINE MOUNT
42G	CHASSIS TO TE1 (B)
43A	RC5 (A) TO PLG3 (A) (Customer Supplied)
43B	RC3 (A) TO CONNECTION POINT 2
43C	PLG31 (3) TO CONNECTION POINT 2
43D	PLG1 (7) TO CONNECTION POINT 2

3.16 AUXILIARY POWER SYSTEM

The auxiliary power system is intended as a secondary means of moving the boom in the event of primary power loss. This system uses an electric motor/pump unit powered by a 12V (extended upto 24V DC) battery.


The auxiliary pump functions to provide sufficient oil flow to operate the basic machine functions should the main pump or engine fail. The auxiliary pump will operate tower boom lift, tower telescope, main boom lift, main telescope and swing. The Auxiliary Power control switch energizes the electrically operated hydraulic pump.

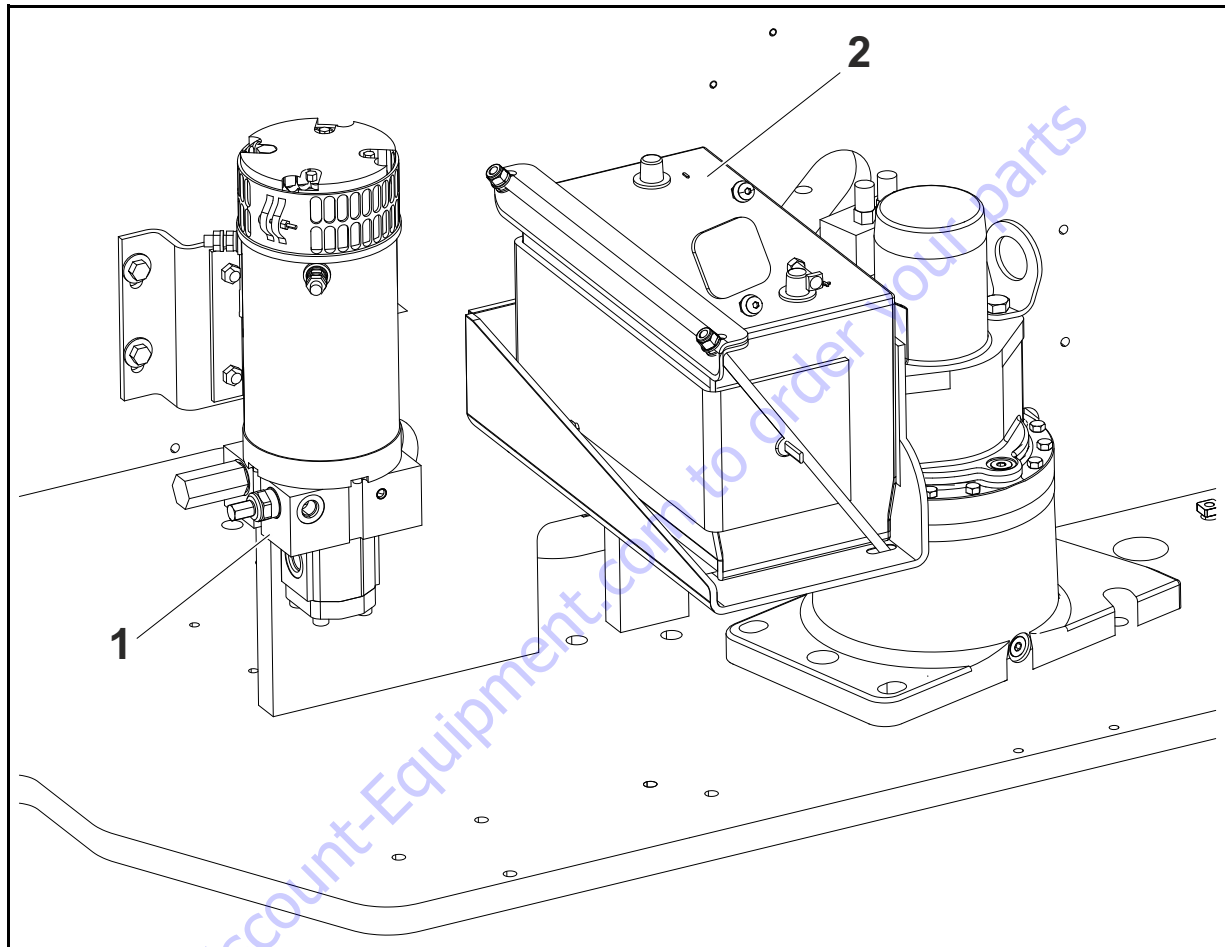

1. Auxiliary Pump
2. Battery


Figure 3-59. Auxiliary Power System

3.17 DEUTZ ENGINE

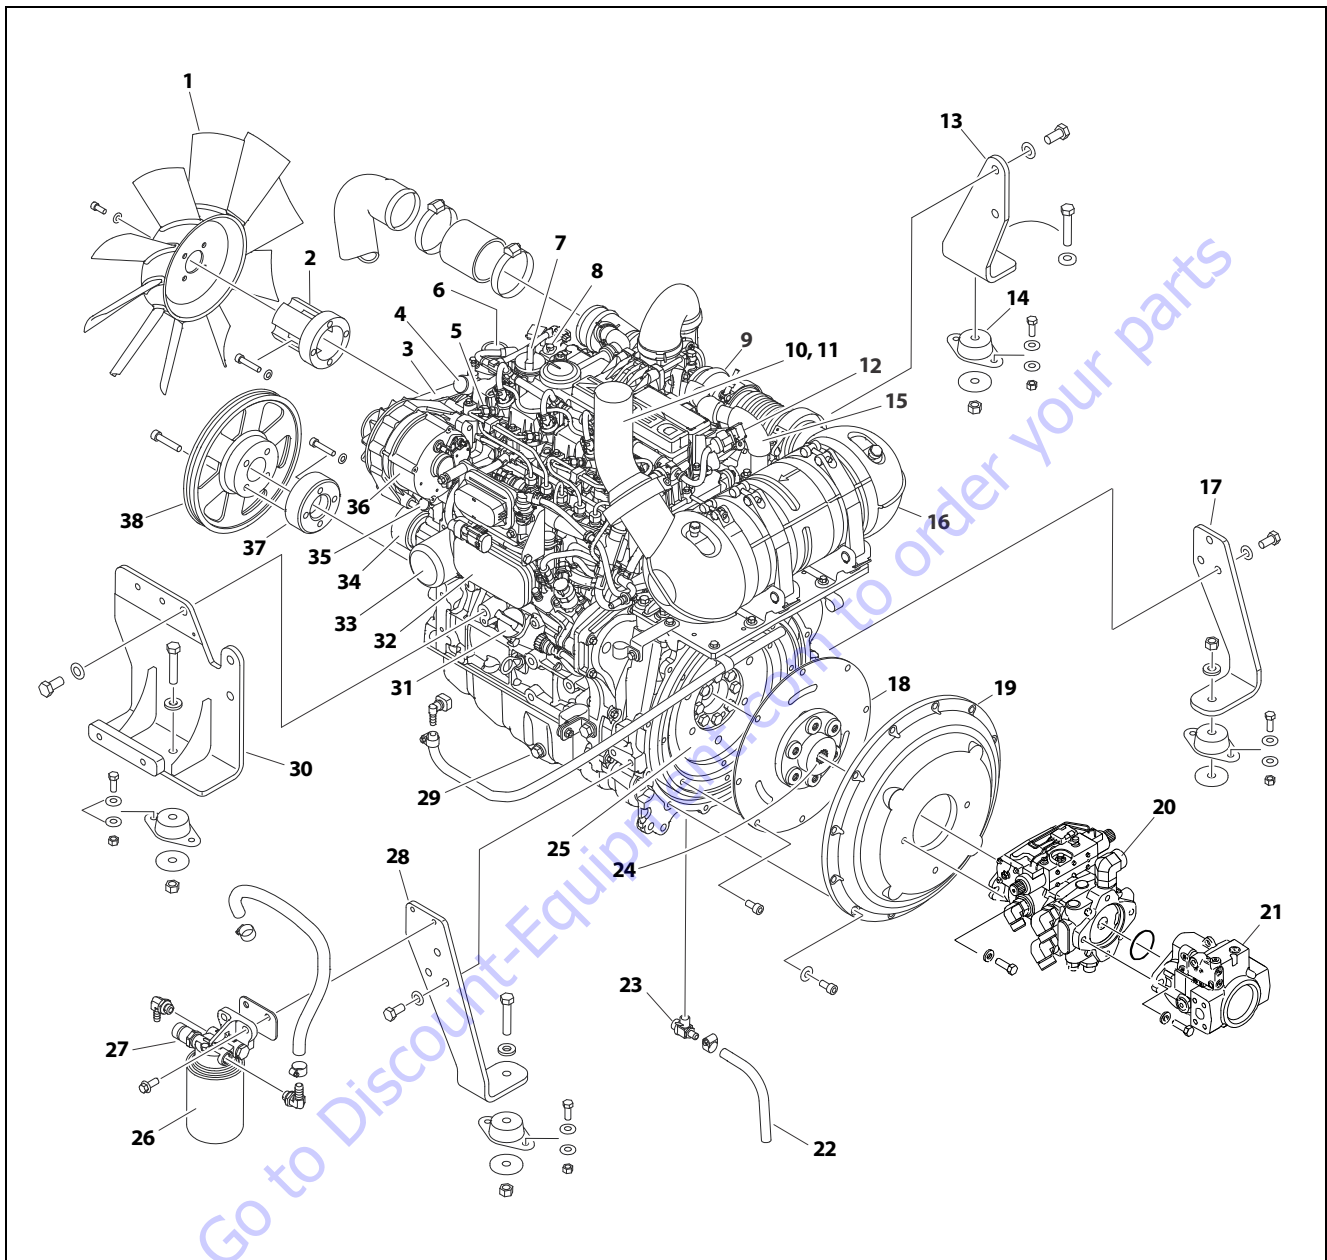

- | | | | | |
|-----------------------|---------------------------------|------------------------|----------------------------------|--------------------|
| 1. Fan | 9. Turbocharger | 17. Rear Engine Mount | 25. Flywheel | 33. Oil Filter |
| 2. Adapter | 10. Exhaust Pipe | 18. Coupling | 26. Fuel Filter | 34. Belt Tensioner |
| 3. Drive Belt | 11. Spark Arrester | 19. Pump Adapter Plate | 27. Pressure Sensor | 35. Plug |
| 4. Water Pump | 12. Pressure Sensor | 20. Pump Assembly | 28. Rear Engine Mount | 36. Alternator |
| 5. Fuel Injector | 13. Front Engine Mount | 21. Gear Pump Assembly | 29. Oil Pan Drain Plug | 37. Adapter |
| 6. Thermostat | 14. Motor Mount | 22. Oil Drain Hose | 30. Front Engine/Generator Mount | 38. Pulley |
| 7. Oil Fill Cap | 15. Shuttle Valve | 23. Oil Drain Valve | 31. Oil Fill Cap | |
| 8. Temperature Sender | 16. Catalytic Converter/Muffler | 24. Pump Coupler | 32. Oil Cooler | |

Figure 3-60. Deutz TD2.9L4 Engine Components - Sheet 1 of 2

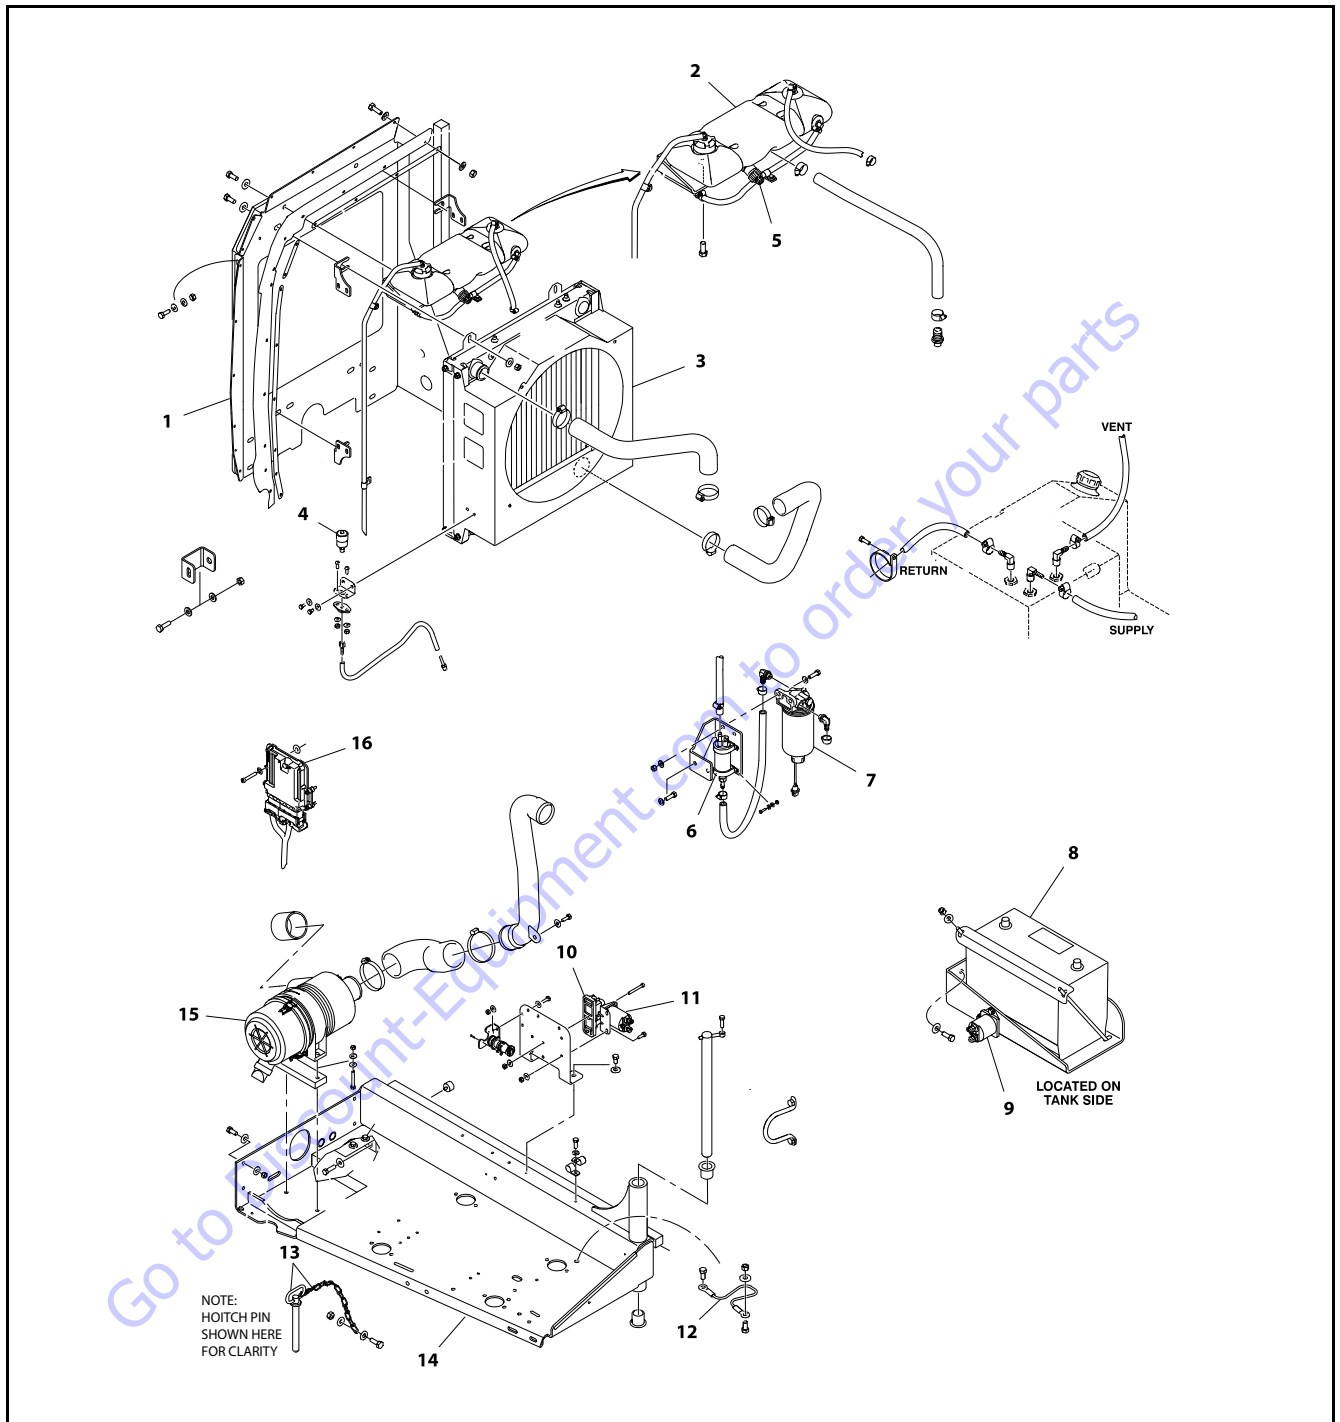

- | | | | |
|---------------------------------|-------------------------|------------------------|-------------------------------|
| 1. Radiator Assembly | 5. Coolant Level Sensor | 9. Battery Relay | 13. Hitch Pin |
| 2. Coolant Recovery Tank | 6. Fuel Pump | 10. Power Module Relay | 14. Engine Tray |
| 3. Air Filter Service Indicator | 7. Fuel Pre-Filter | 11. Relay | 15. Air Filter Assembly |
| 4. Coolant Overflow Hose | 8. Battery | 12. Lanyard | 16. Engine Control Unit (ECU) |

Figure 3-61. Deutz TD2.9L4 Engine Components - Sheet 2 of 2

SECTION 3 - CHASSIS & TURNTABLE

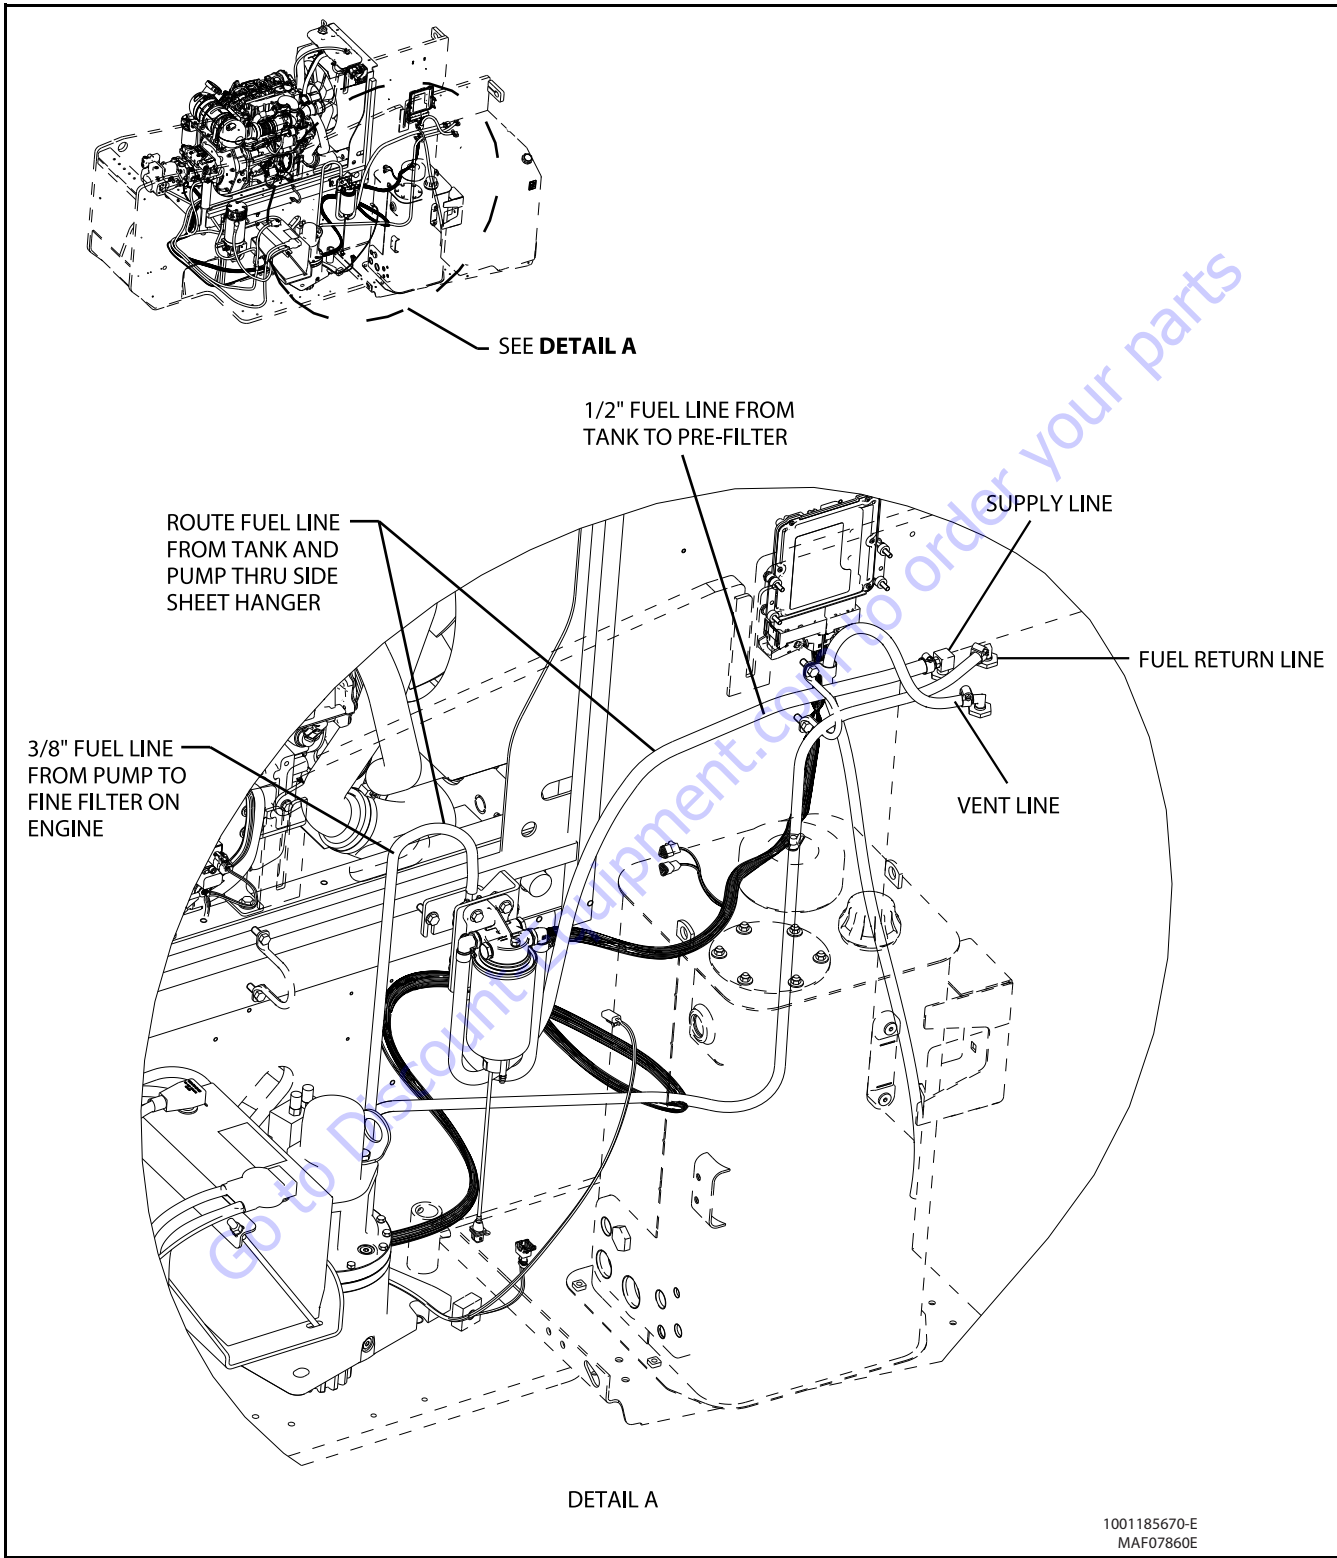


Figure 3-62. Deutz TD2.9L4 Engine Installation (800A) - Sheet 1 of 8

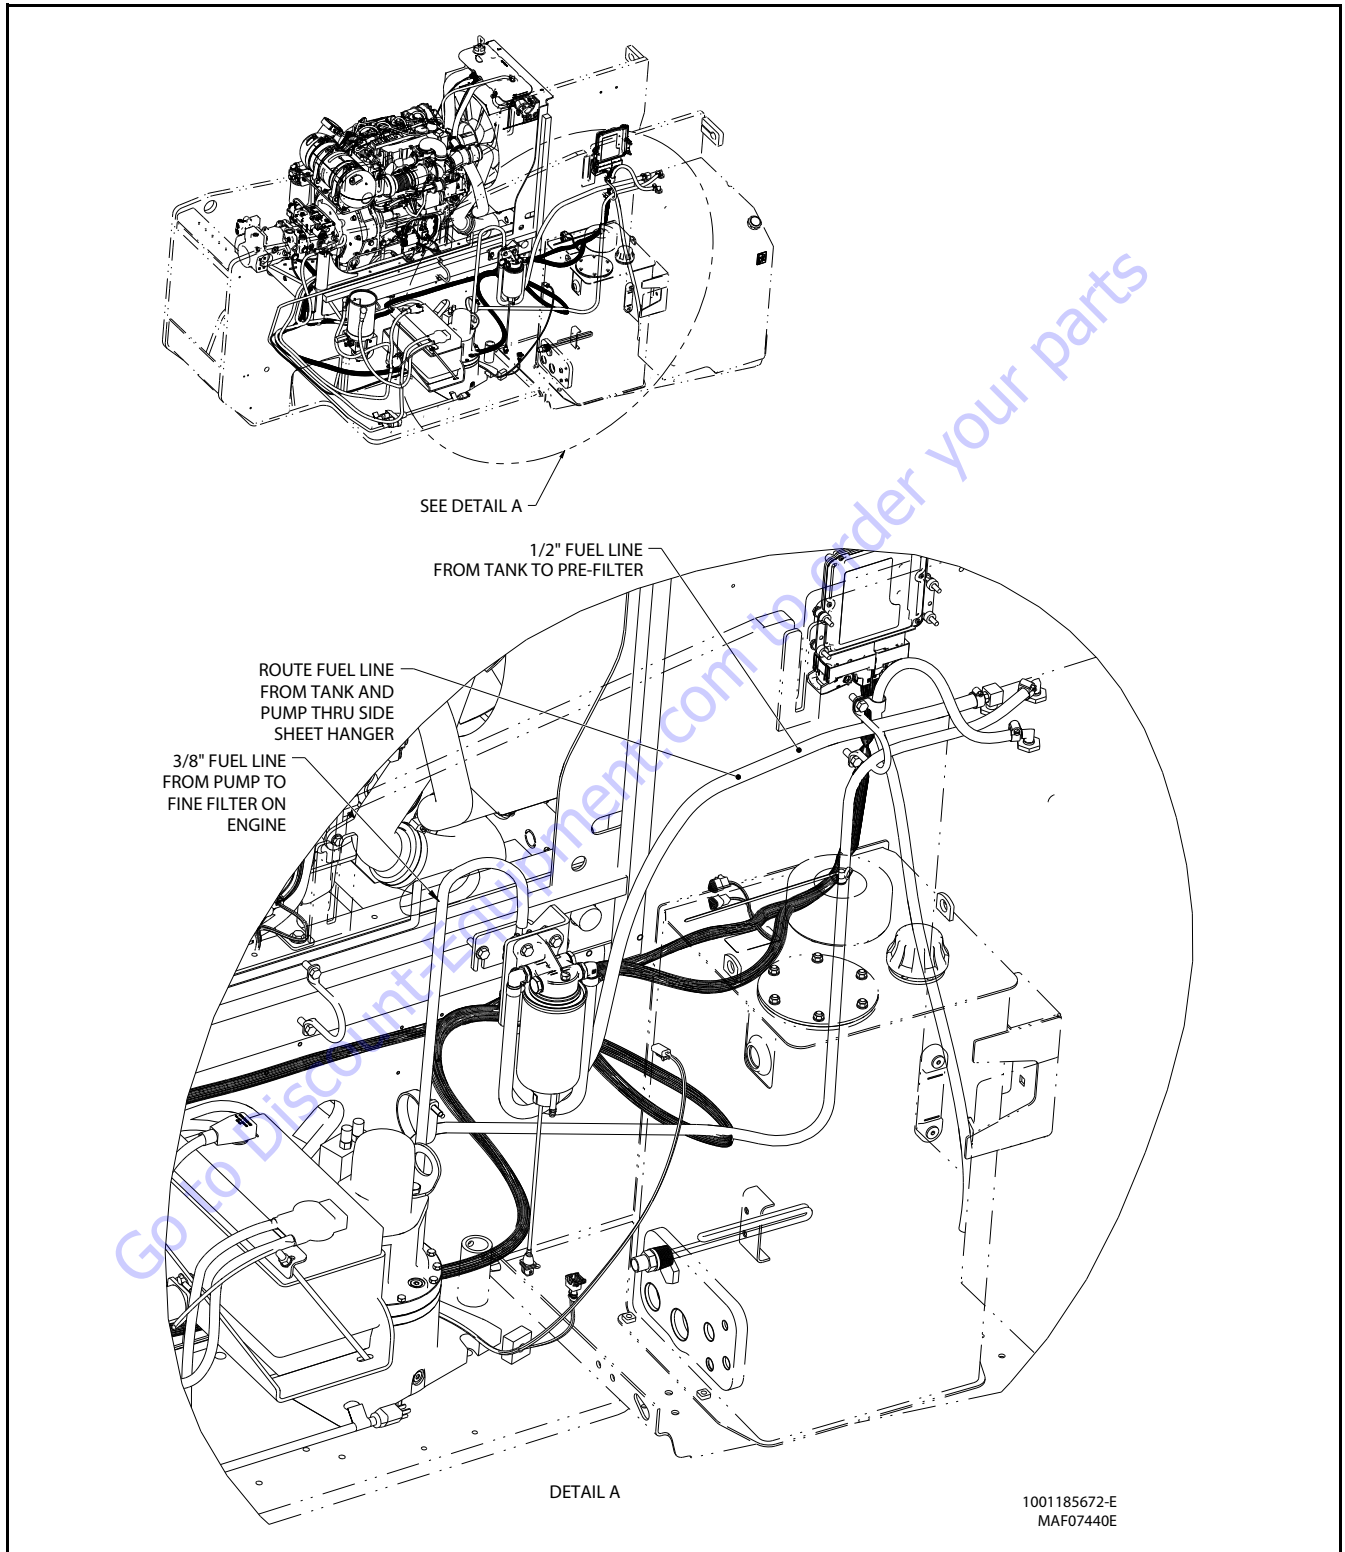


Figure 3-63. Deutz TD2.9L4 Engine Installation (800AJ) - Sheet 2 of 8

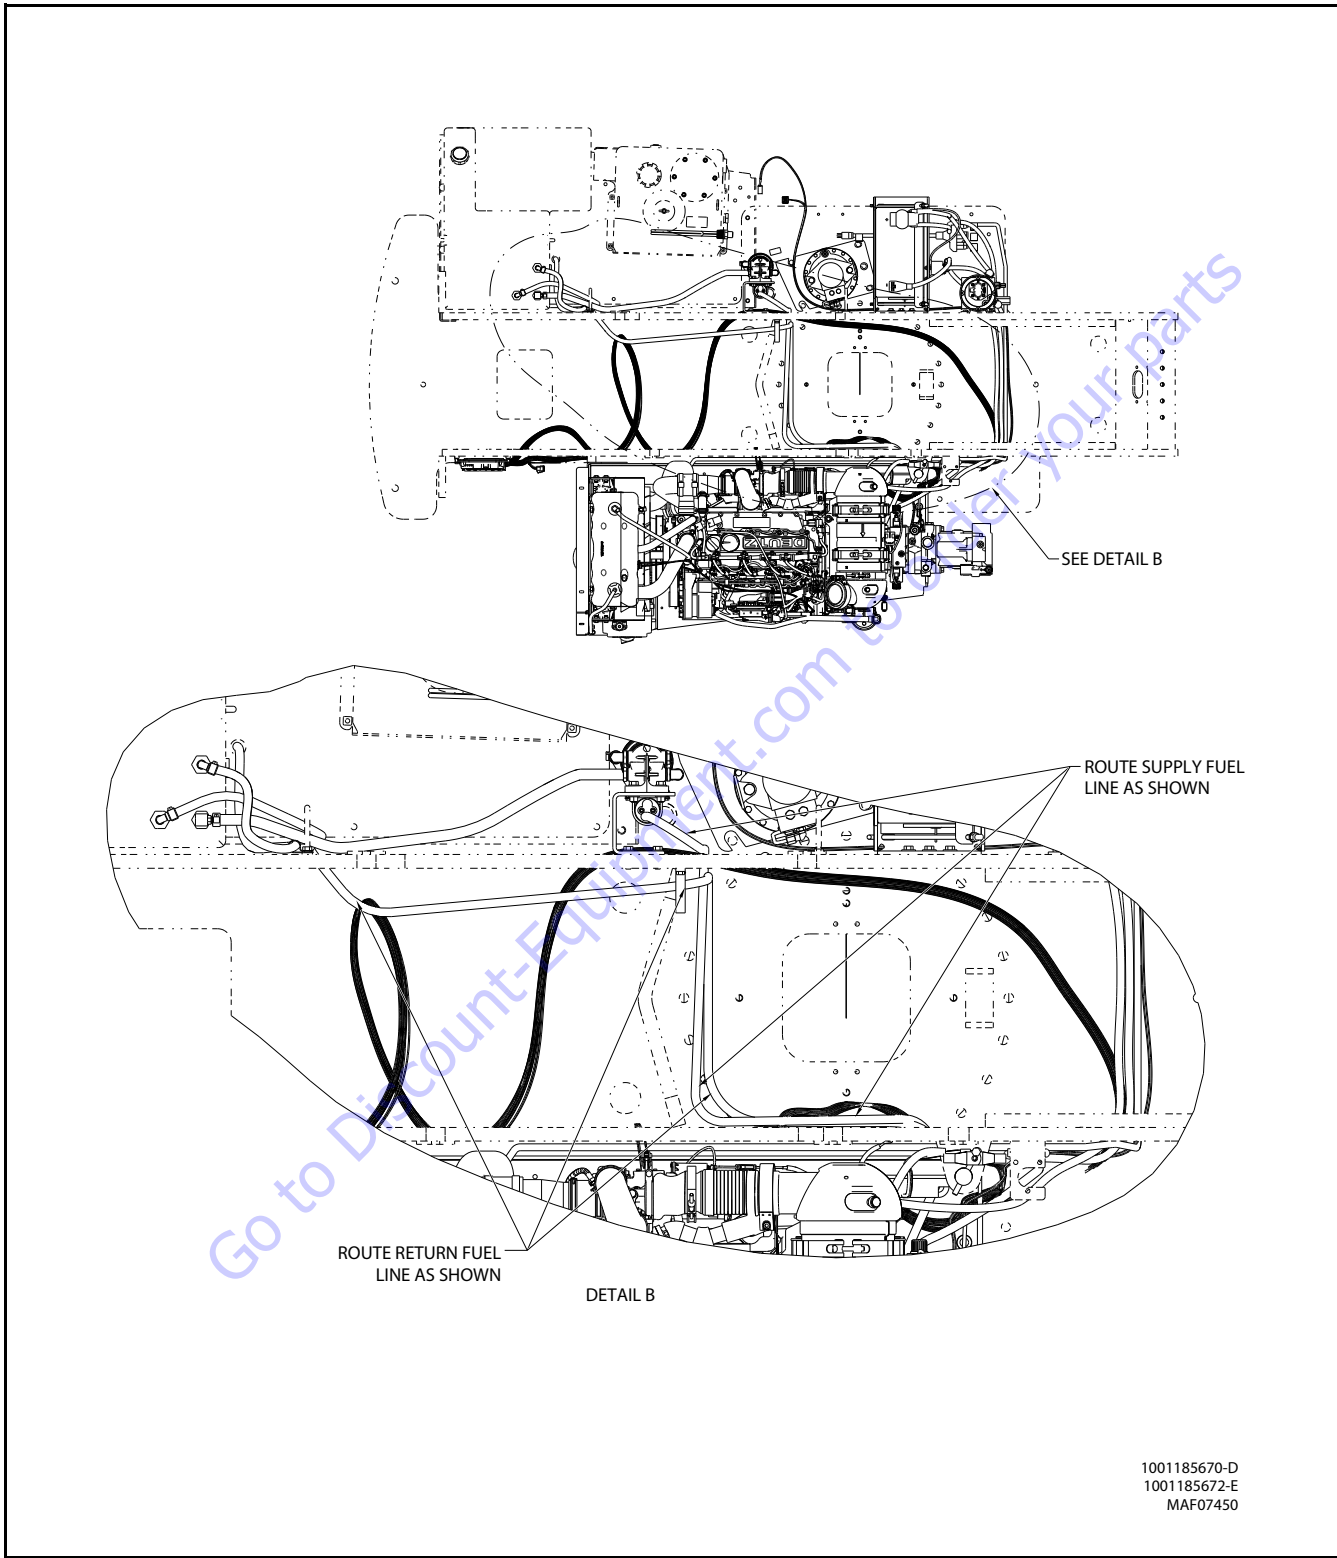


Figure 3-64. Deutz TD2.9L4 Engine Installation - Sheet 3 of 8

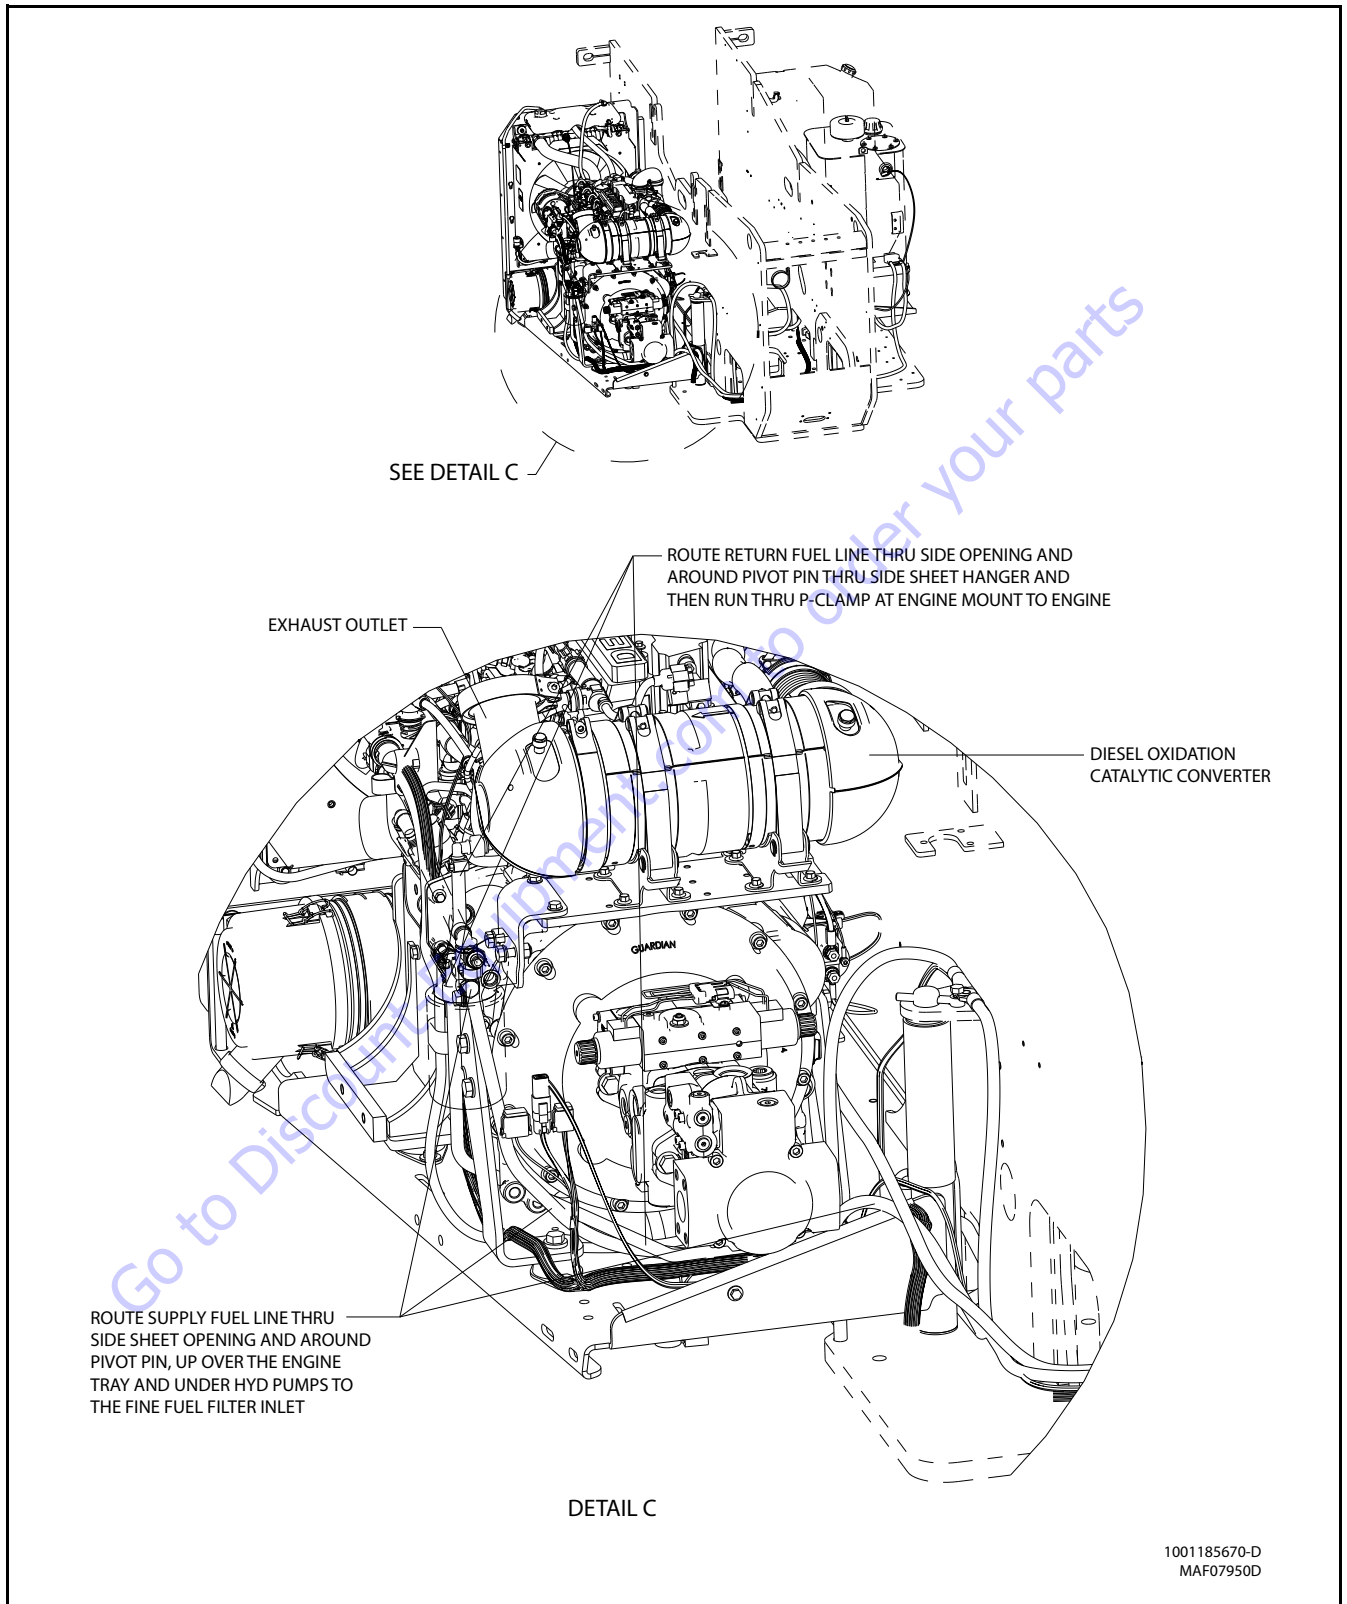


Figure 3-65. Deutz TD2.9L4 Engine Installation (800A) - Sheet 4 of 8

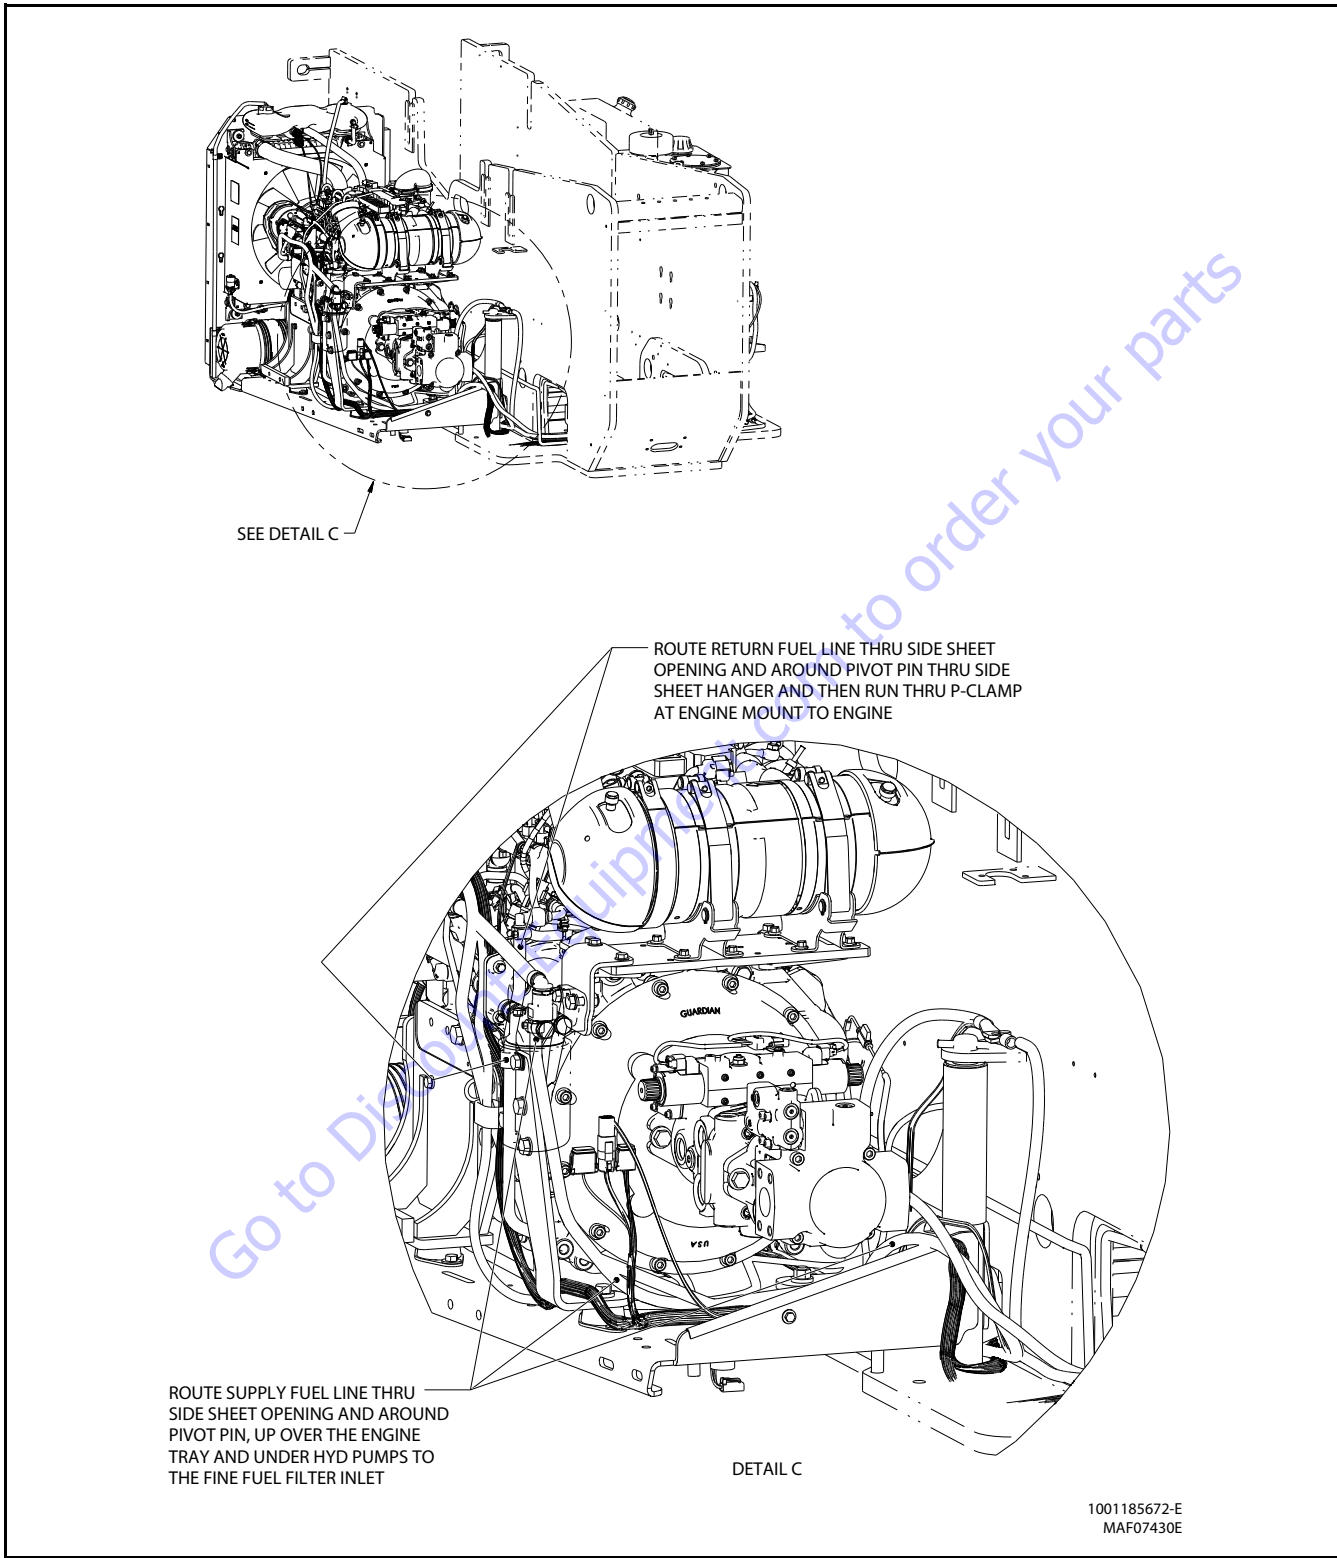


Figure 3-66. Deutz TD2.9L4 Engine Installation (800AJ) - Sheet 5 of 8

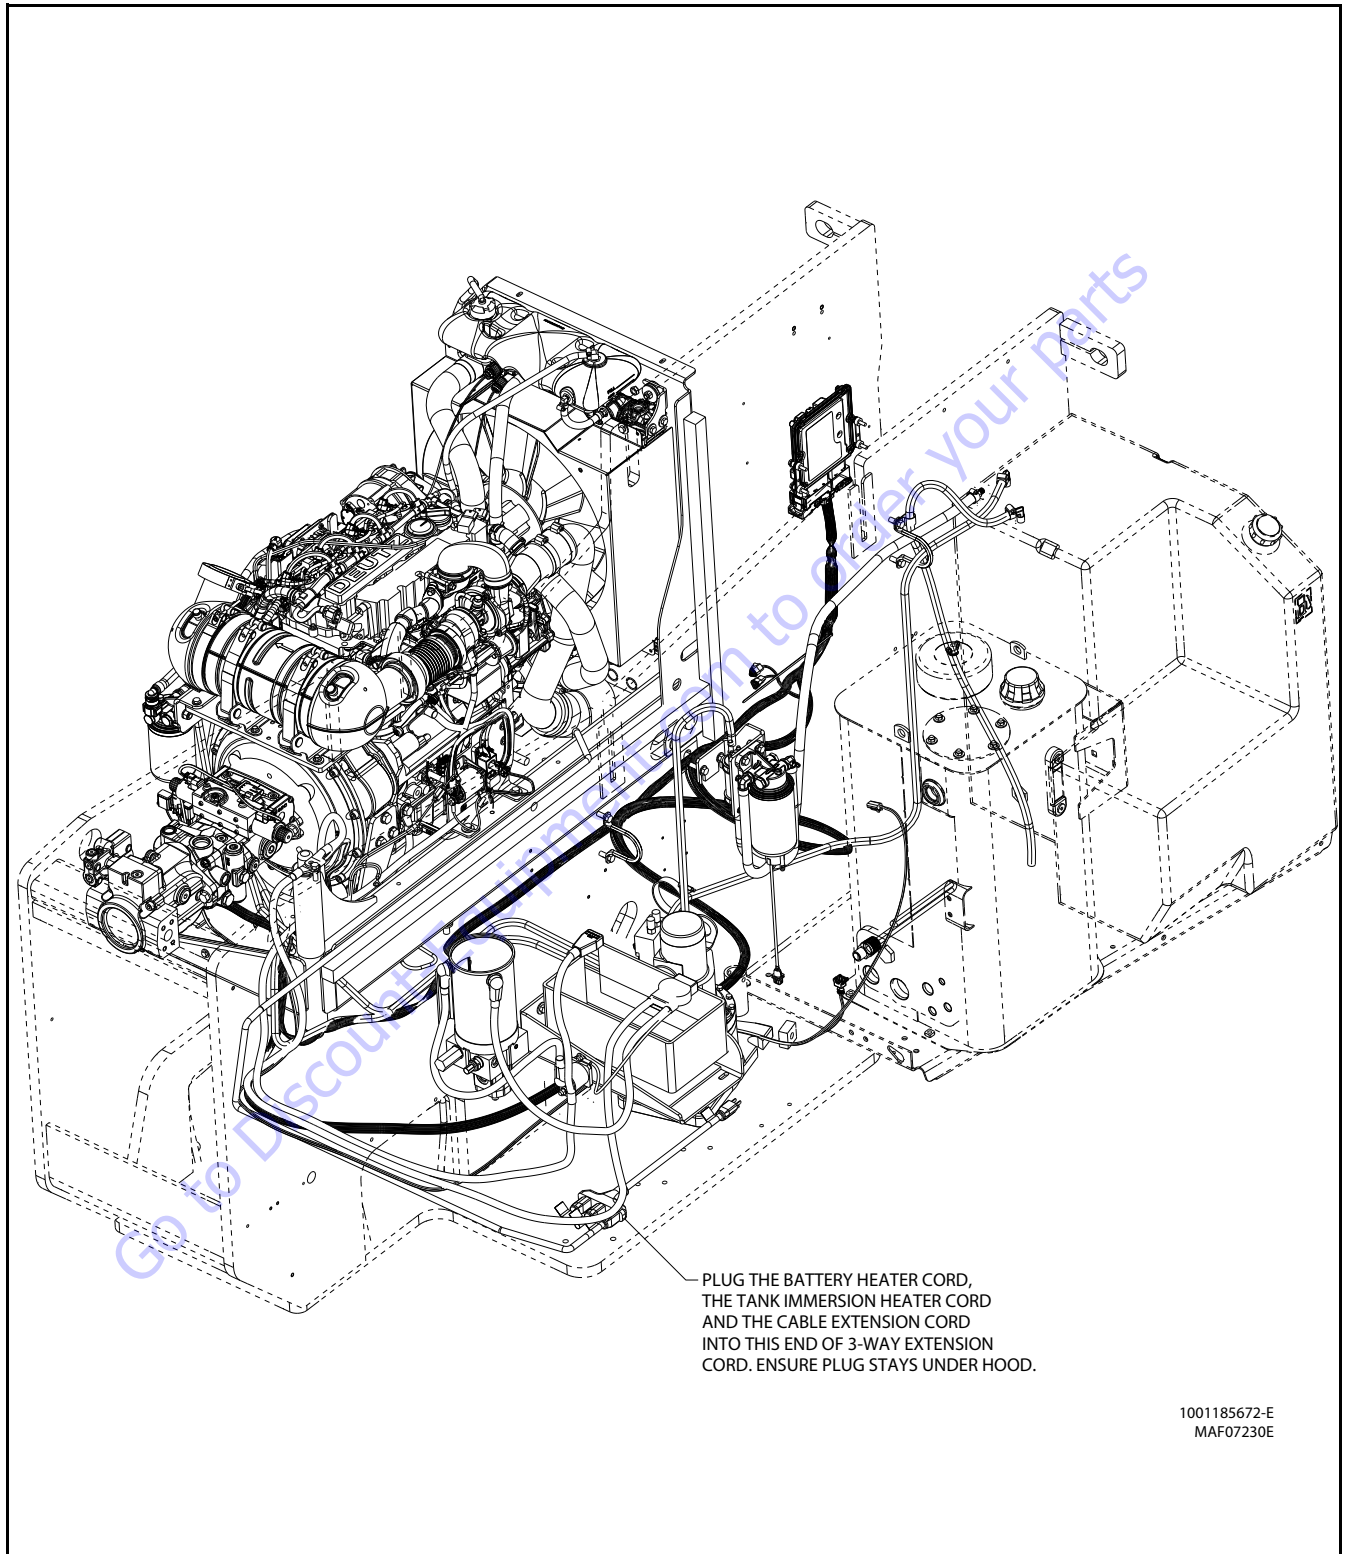


Figure 3-67. Deutz TD2.9L4 Engine Installation (800AJ) - Sheet 6 of 8


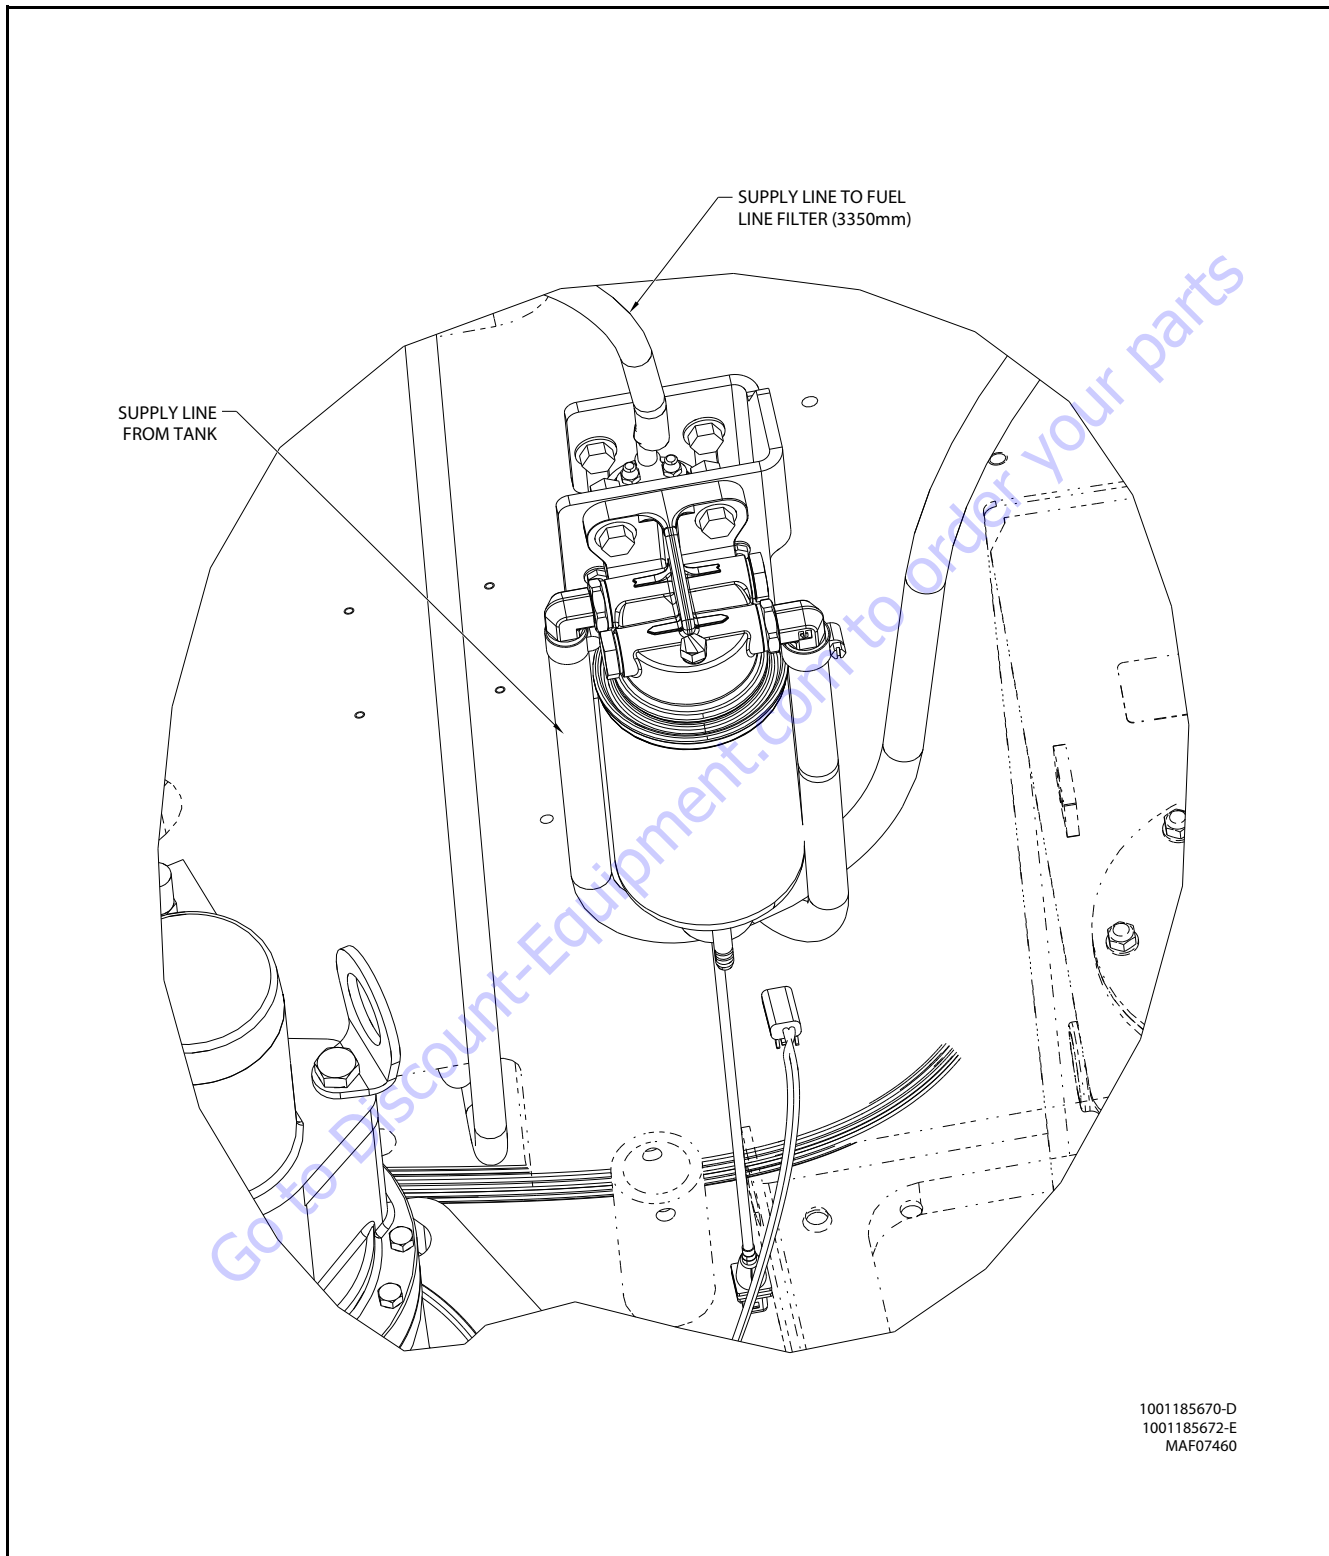


Figure 3-68. Deutz TD2.9L4 Engine Installation- Sheet 7 of 8

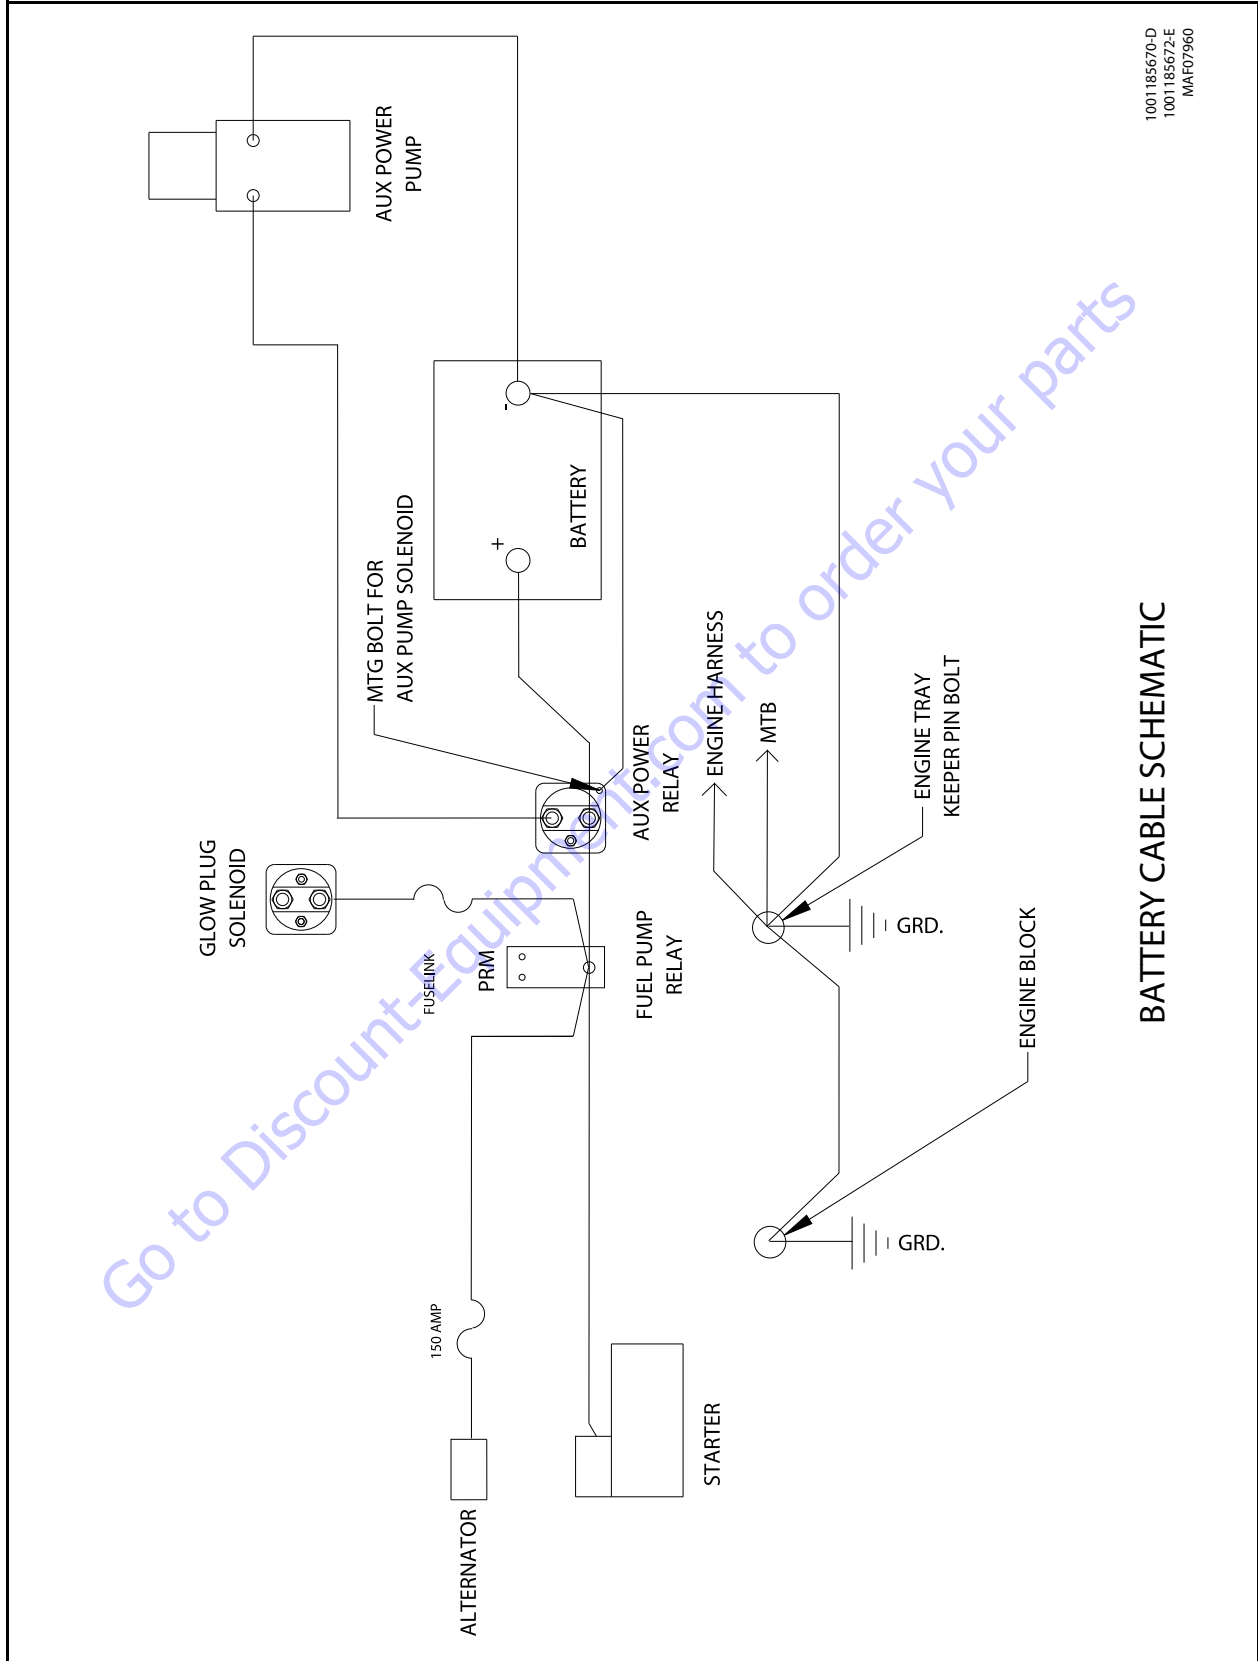

BATTERY CABLE SCHEMATIC

Figure 3-69. Deutz TD2.9L4 Engine Installation -Sheet 8 of 8

SECTION 3 - CHASSIS & TURNTABLE

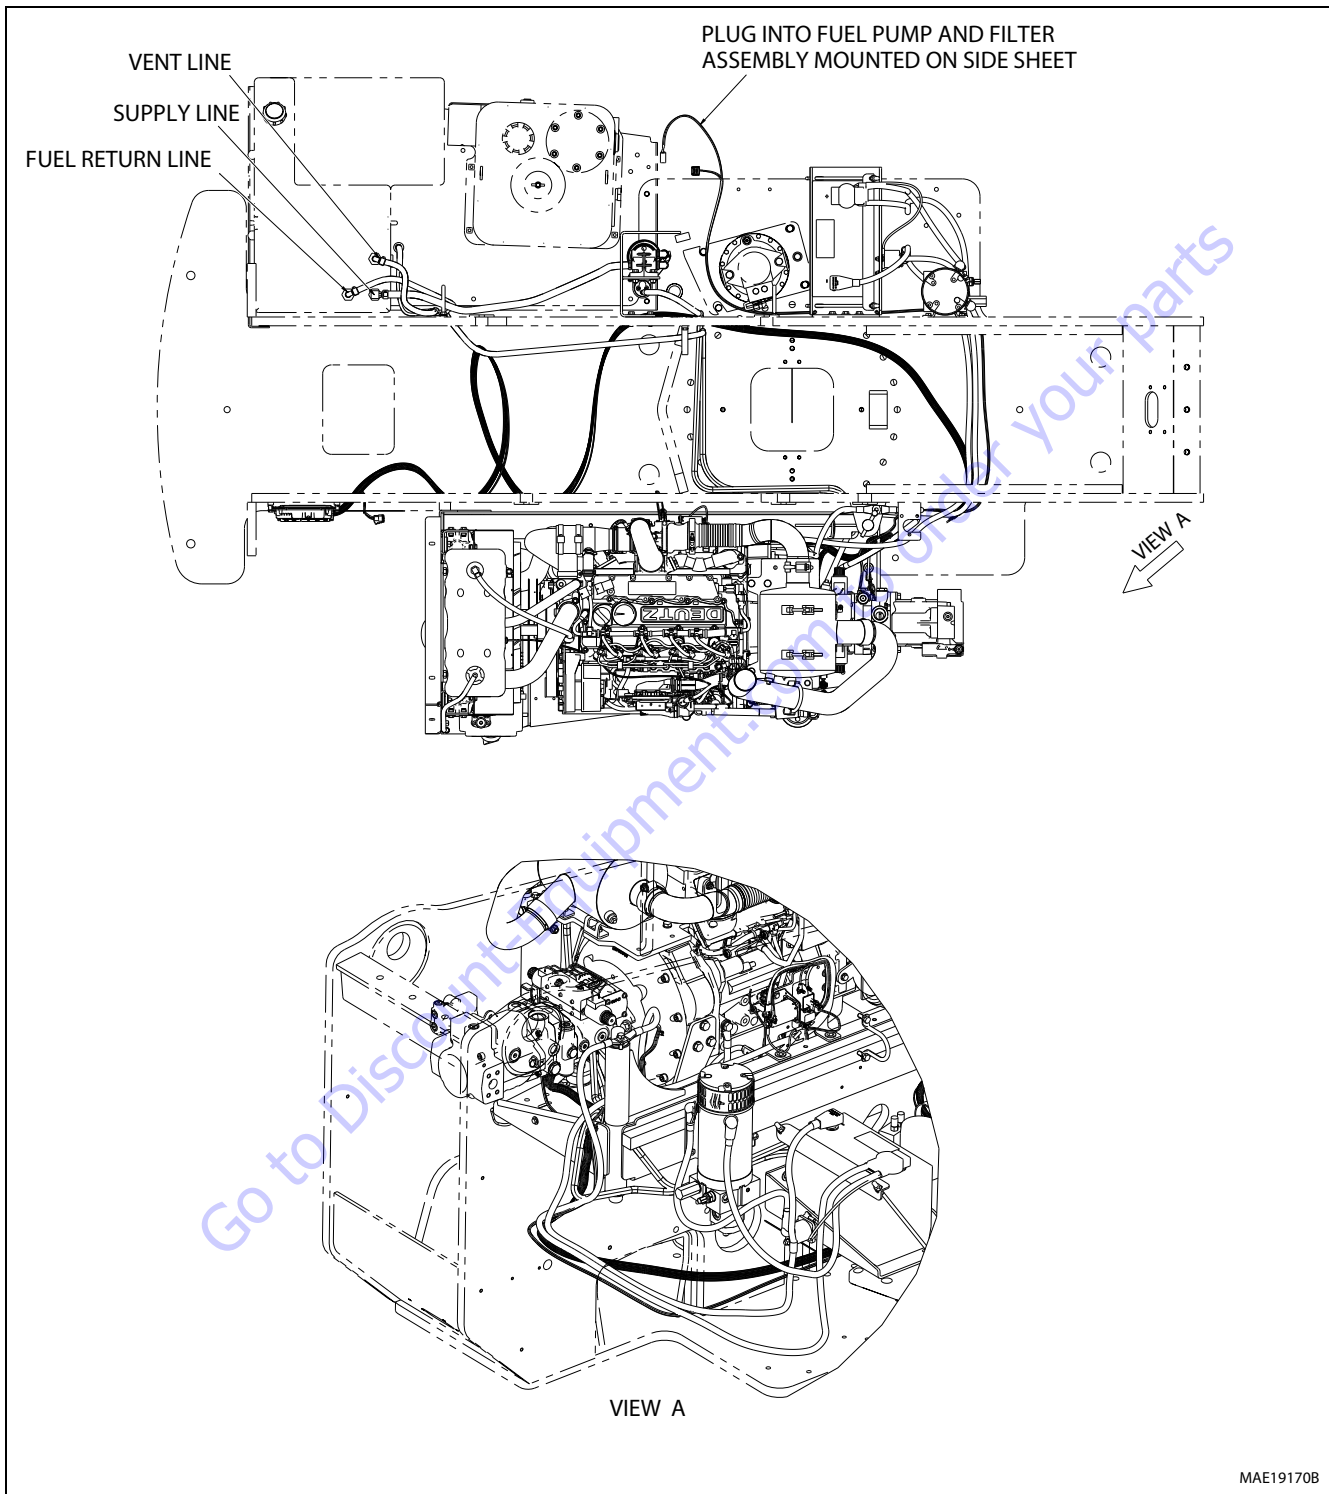


Figure 3-70. Deutz TD2.9L4 China III Engine Installation - Sheet 1 of 7

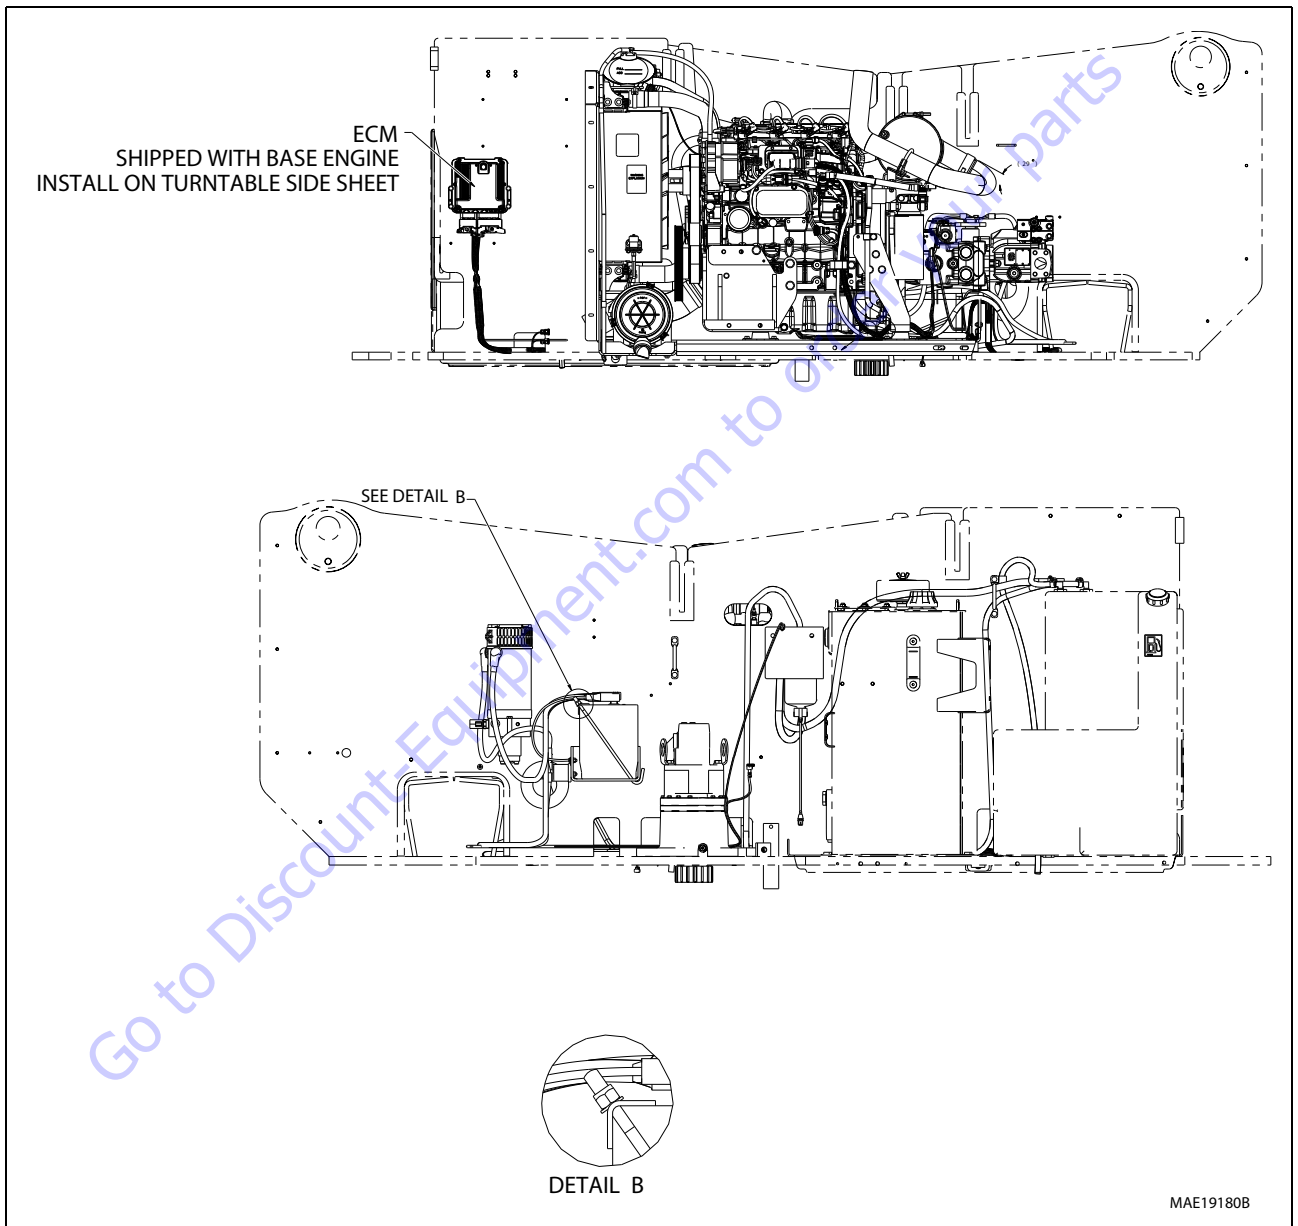


Figure 3-71. Deutz TD2.9L4 China III Engine Installation - Sheet 2 of 7


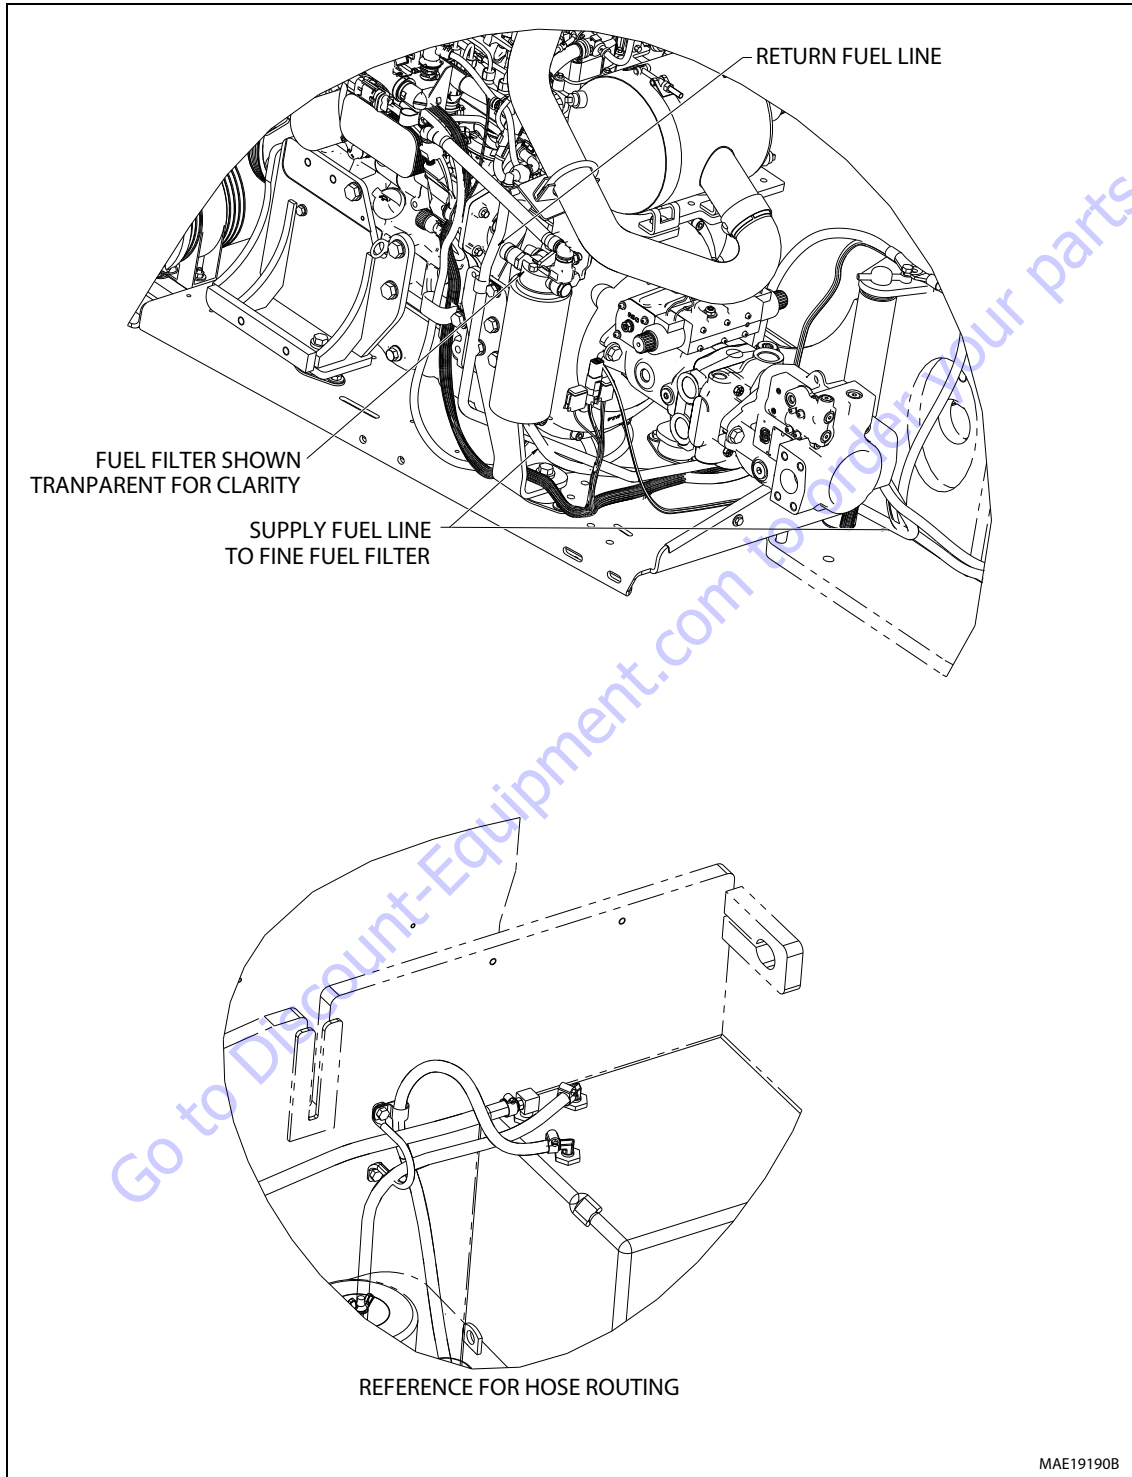


Figure 3-72. Deutz TD2.9L4 China III Engine Installation - Sheet 3 of 7

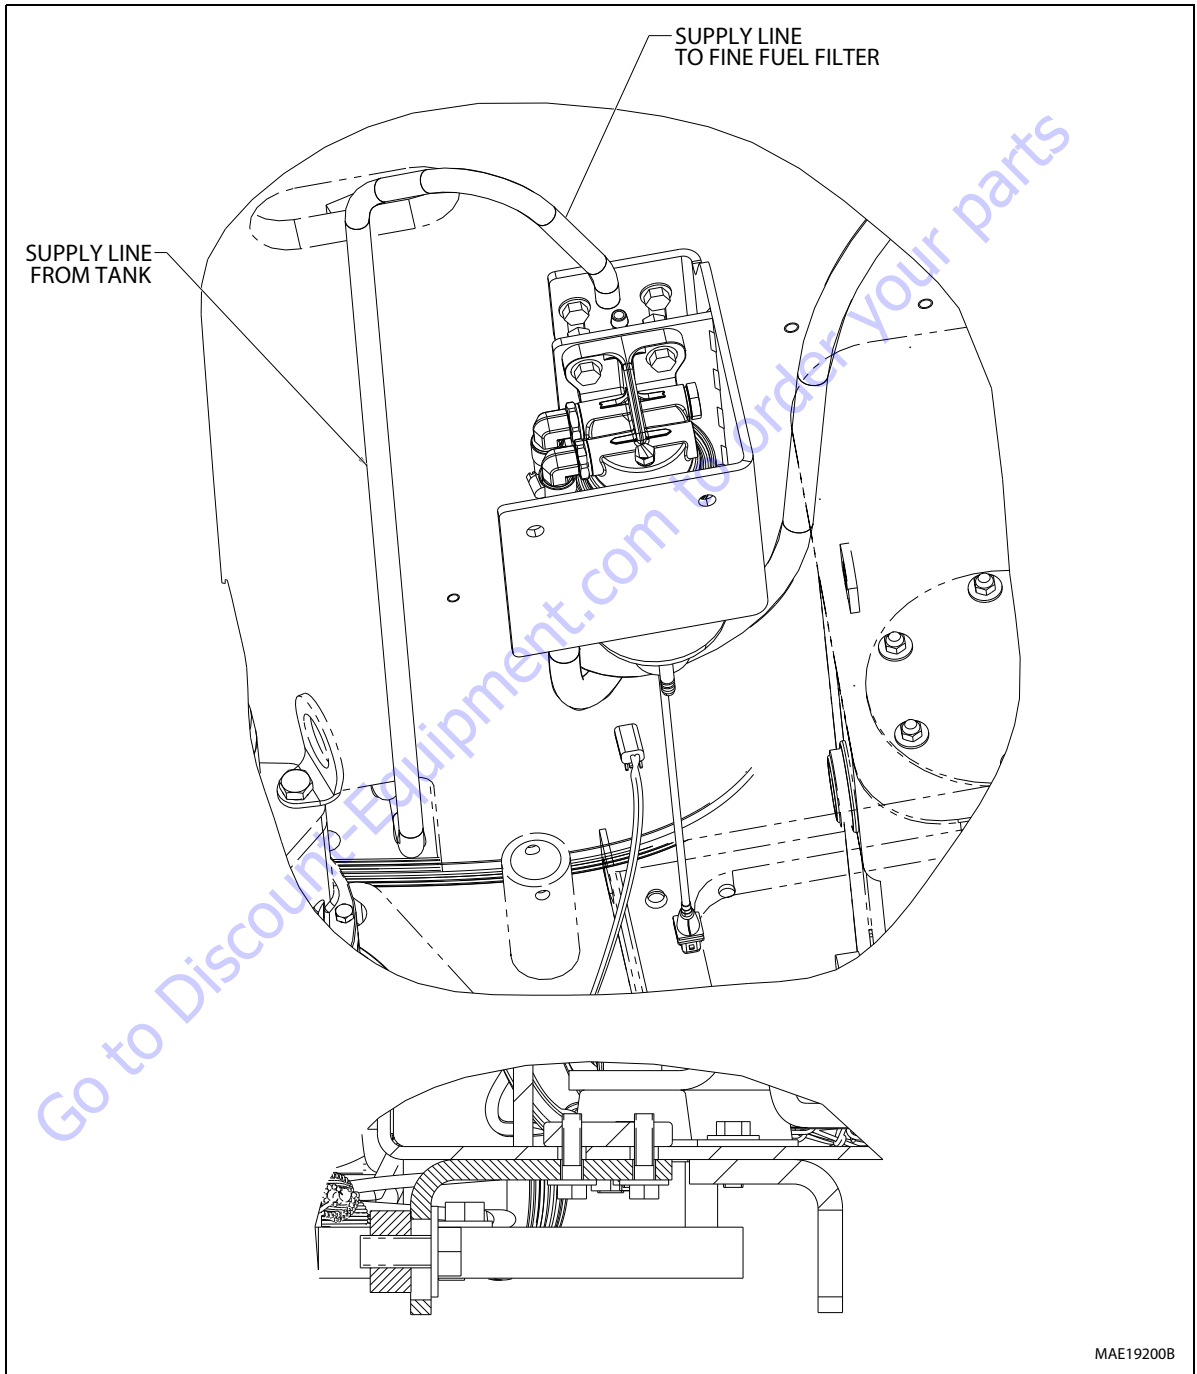

MAE19200B

Figure 3-73. Deutz TD2.9L4 China III Engine Installation - Sheet 4 of 7

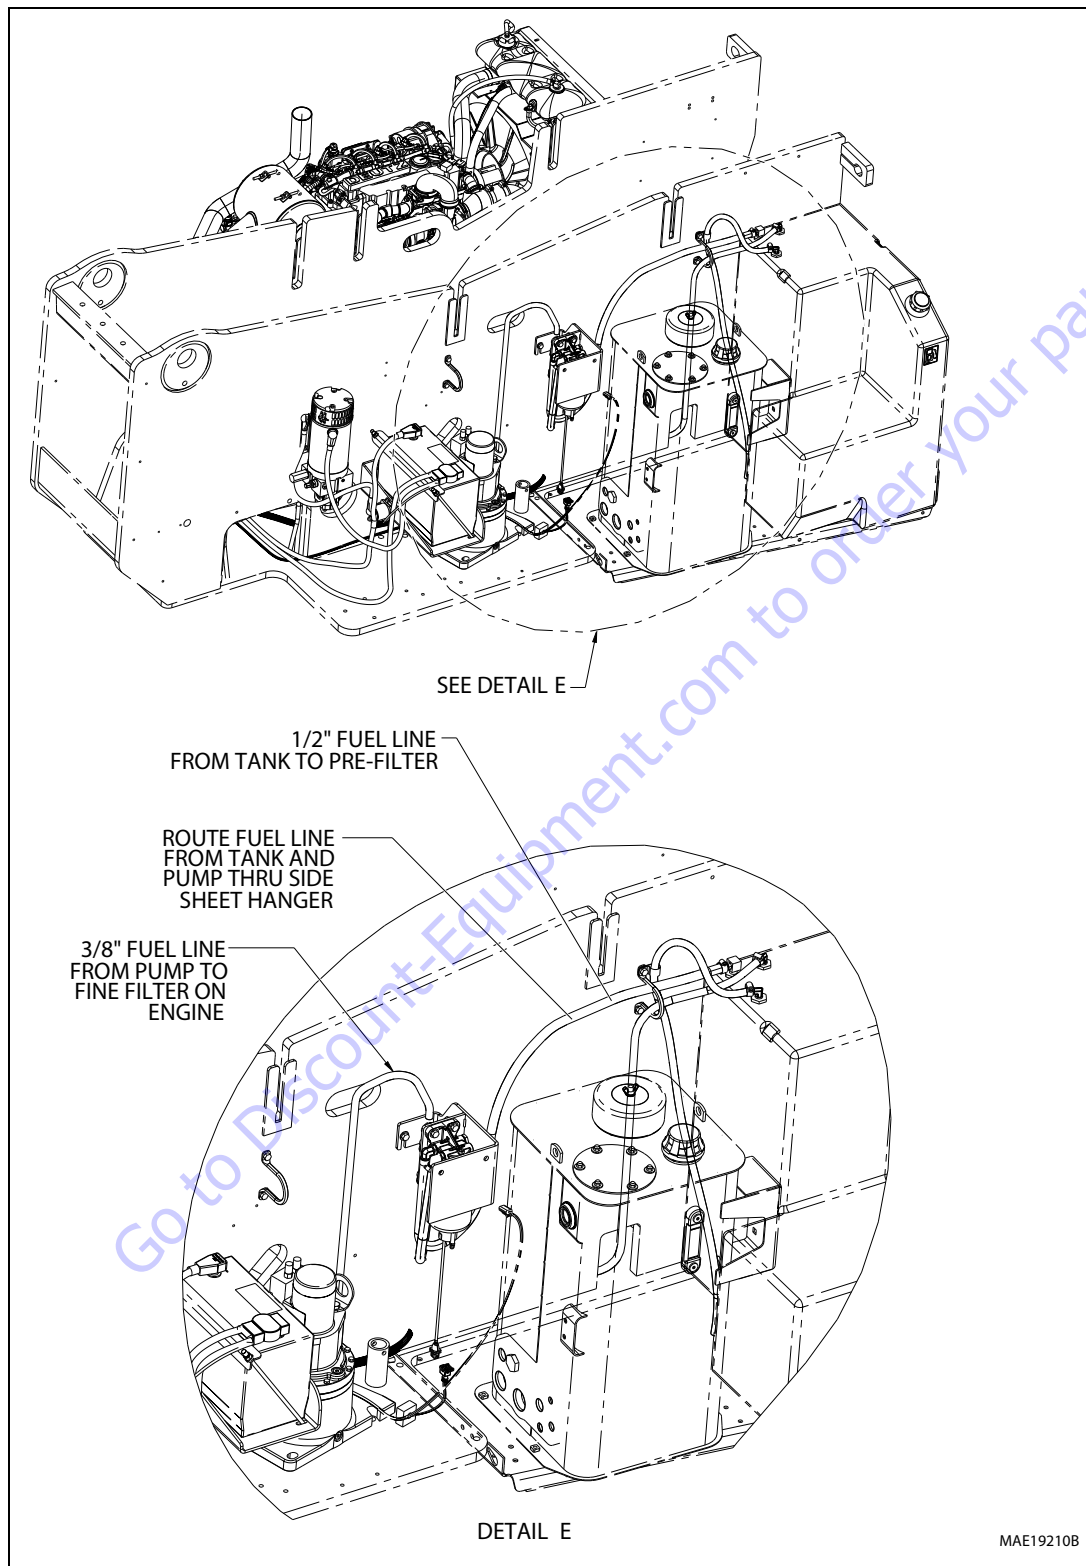


Figure 3-74. Deutz TD2.9L4 China III Engine Installation - Sheet 5 of 7

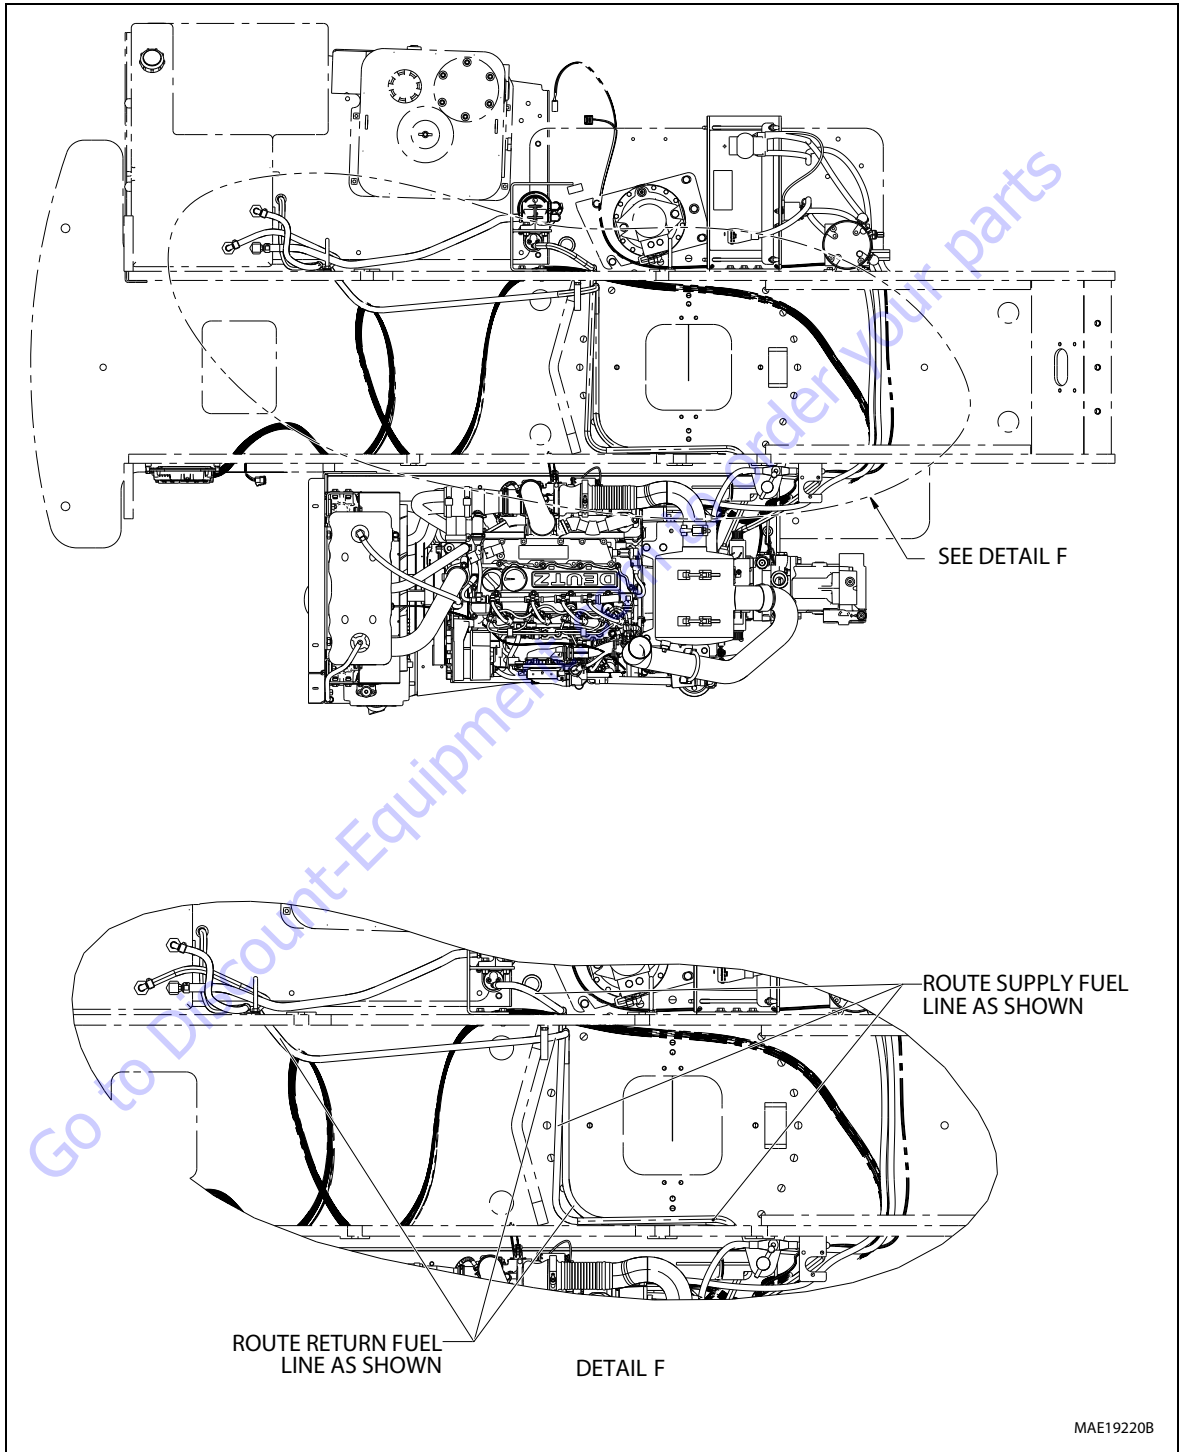


Figure 3-75. Deutz TD2.9L4 China III Engine Installation - Sheet 6 of 7


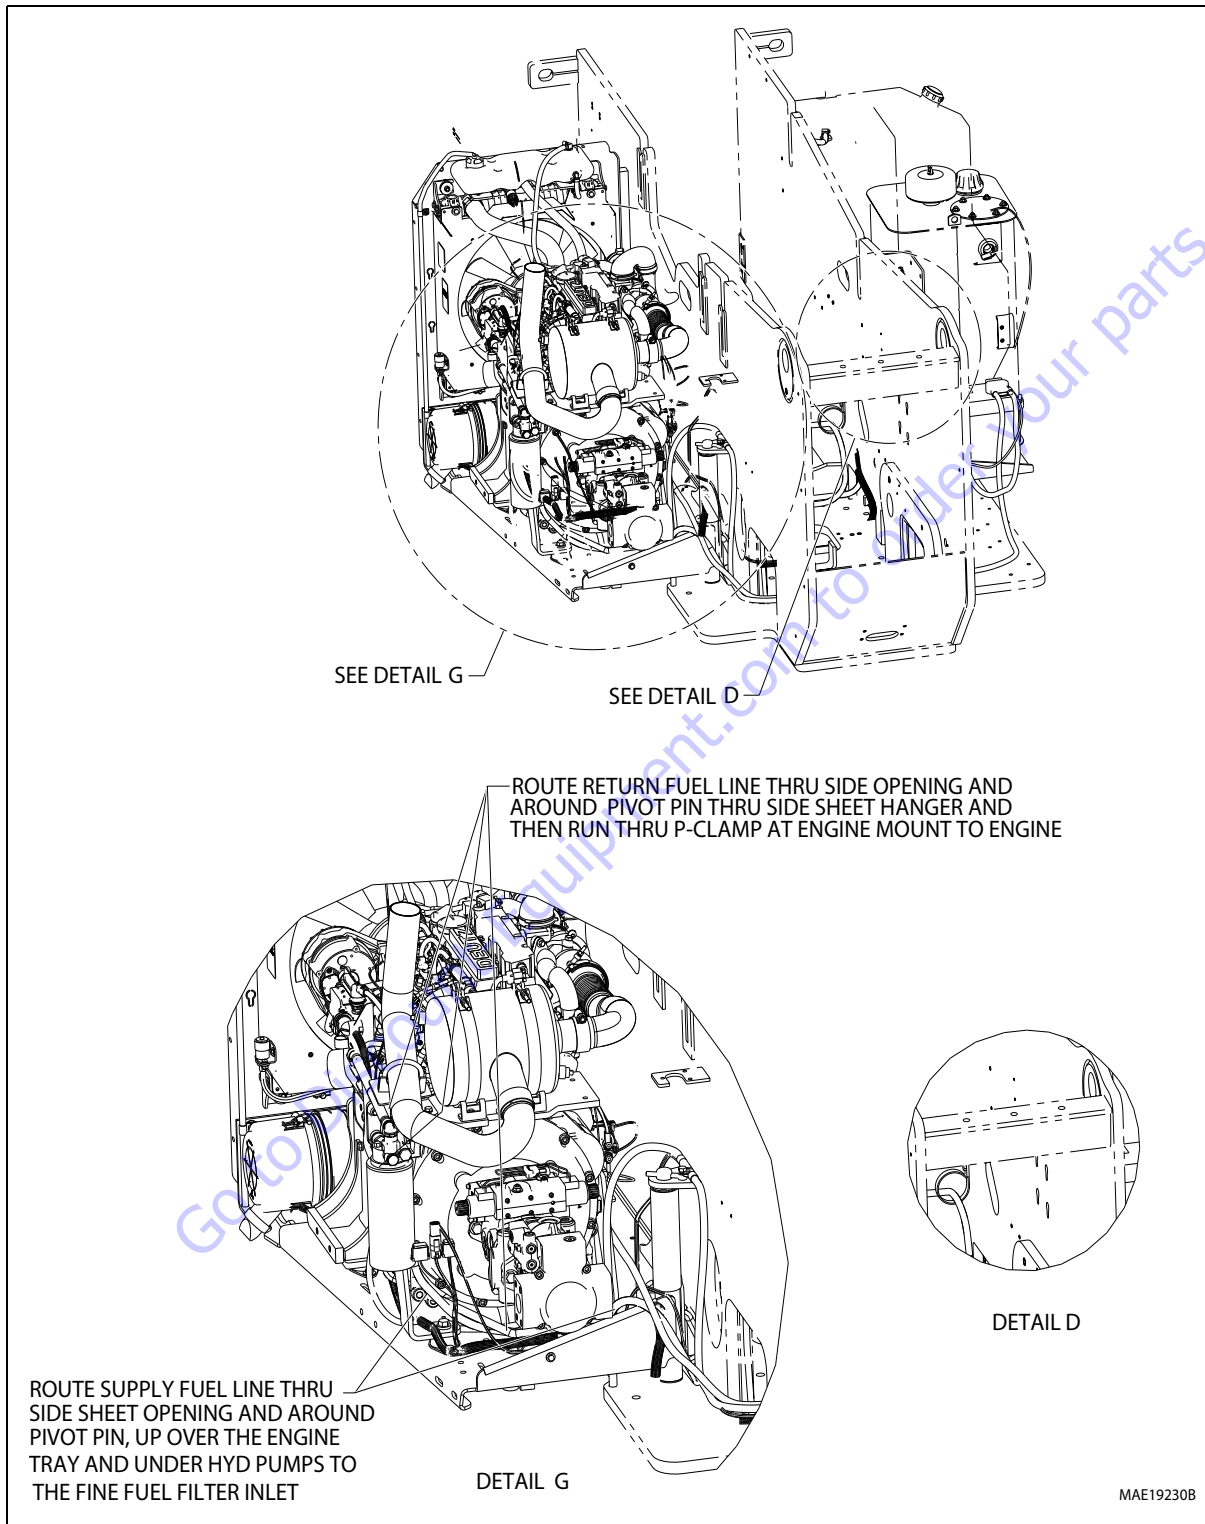



Figure 3-76. Deutz TD2.9L4 China III Engine Installation - Sheet 7 of 7

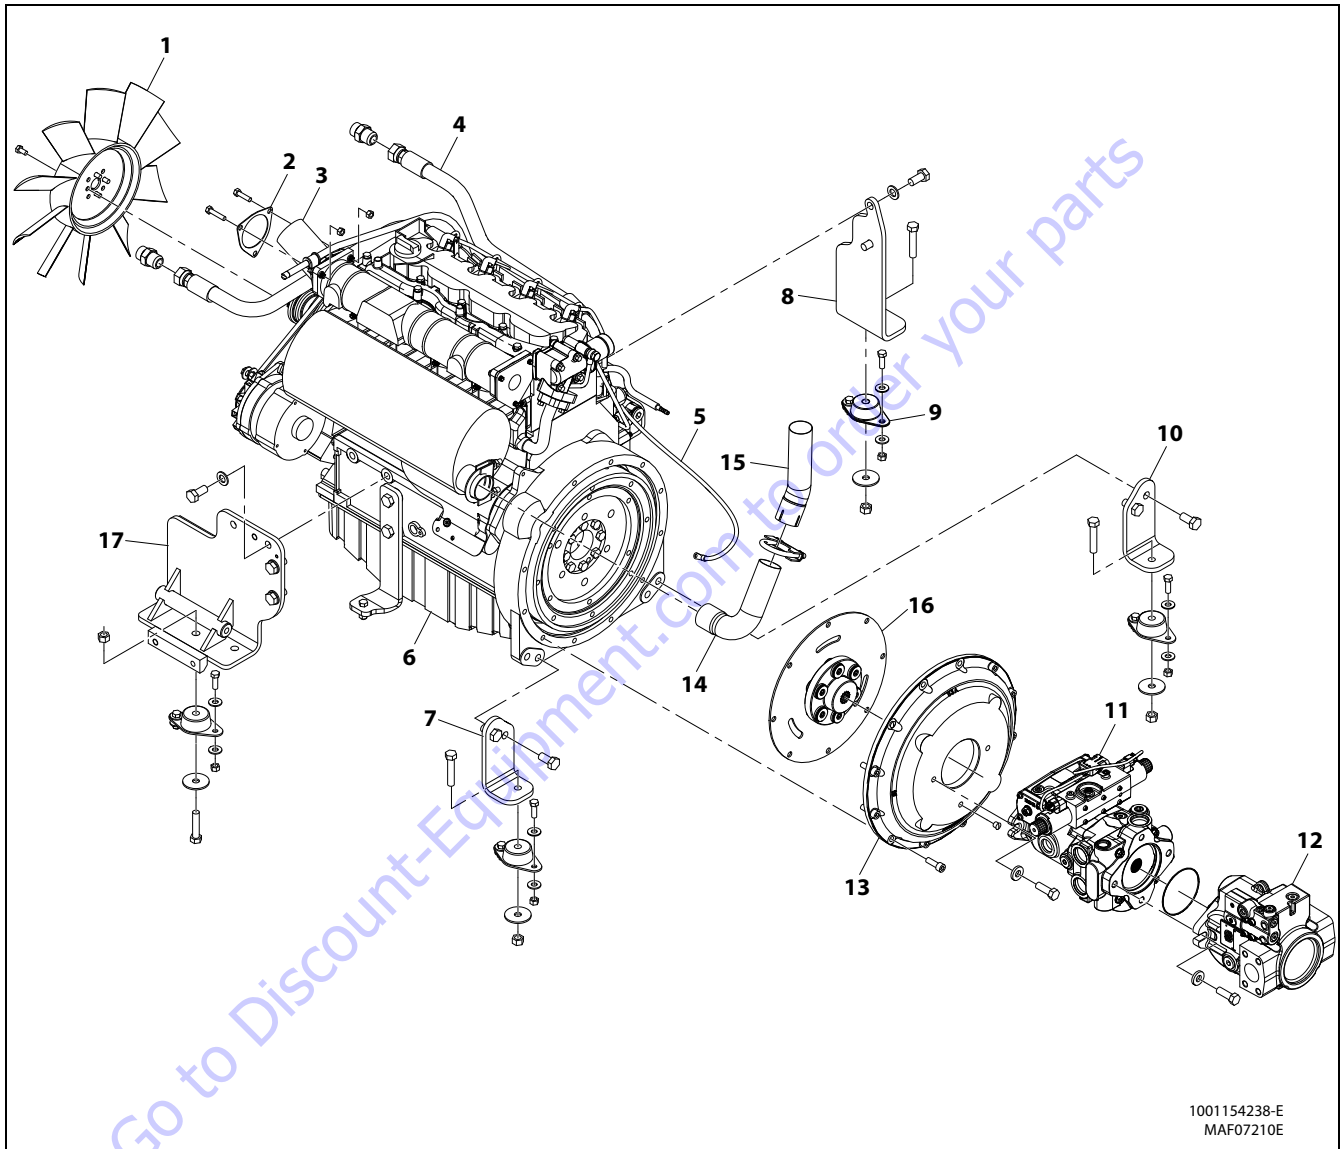

1001154238-E
MAF07210E

- | | | | |
|-----------------------|--------------------------|------------------------|--------------------|
| 1. Fan | 6. Deutz D2011L04 Engine | 10. Engine Support | 14. Exhaust Pipe |
| 2. Air Intake Gasket | 7. Engine Support | 11. Pump Assembly | 15. Exhaust Tube |
| 3. Air Intake Adapter | 8. Engine Support | 12. Gear Pump Assembly | 16. Coupling |
| 4. Oil Cooler Hose | 9. Motor Mount | 13. Pump Adapter Plate | 17. Engine Support |
| 5. Glow Plug Harness | | | |

Figure 3-77. Deutz D2011L04 Engine Components - Sheet 1 of 2

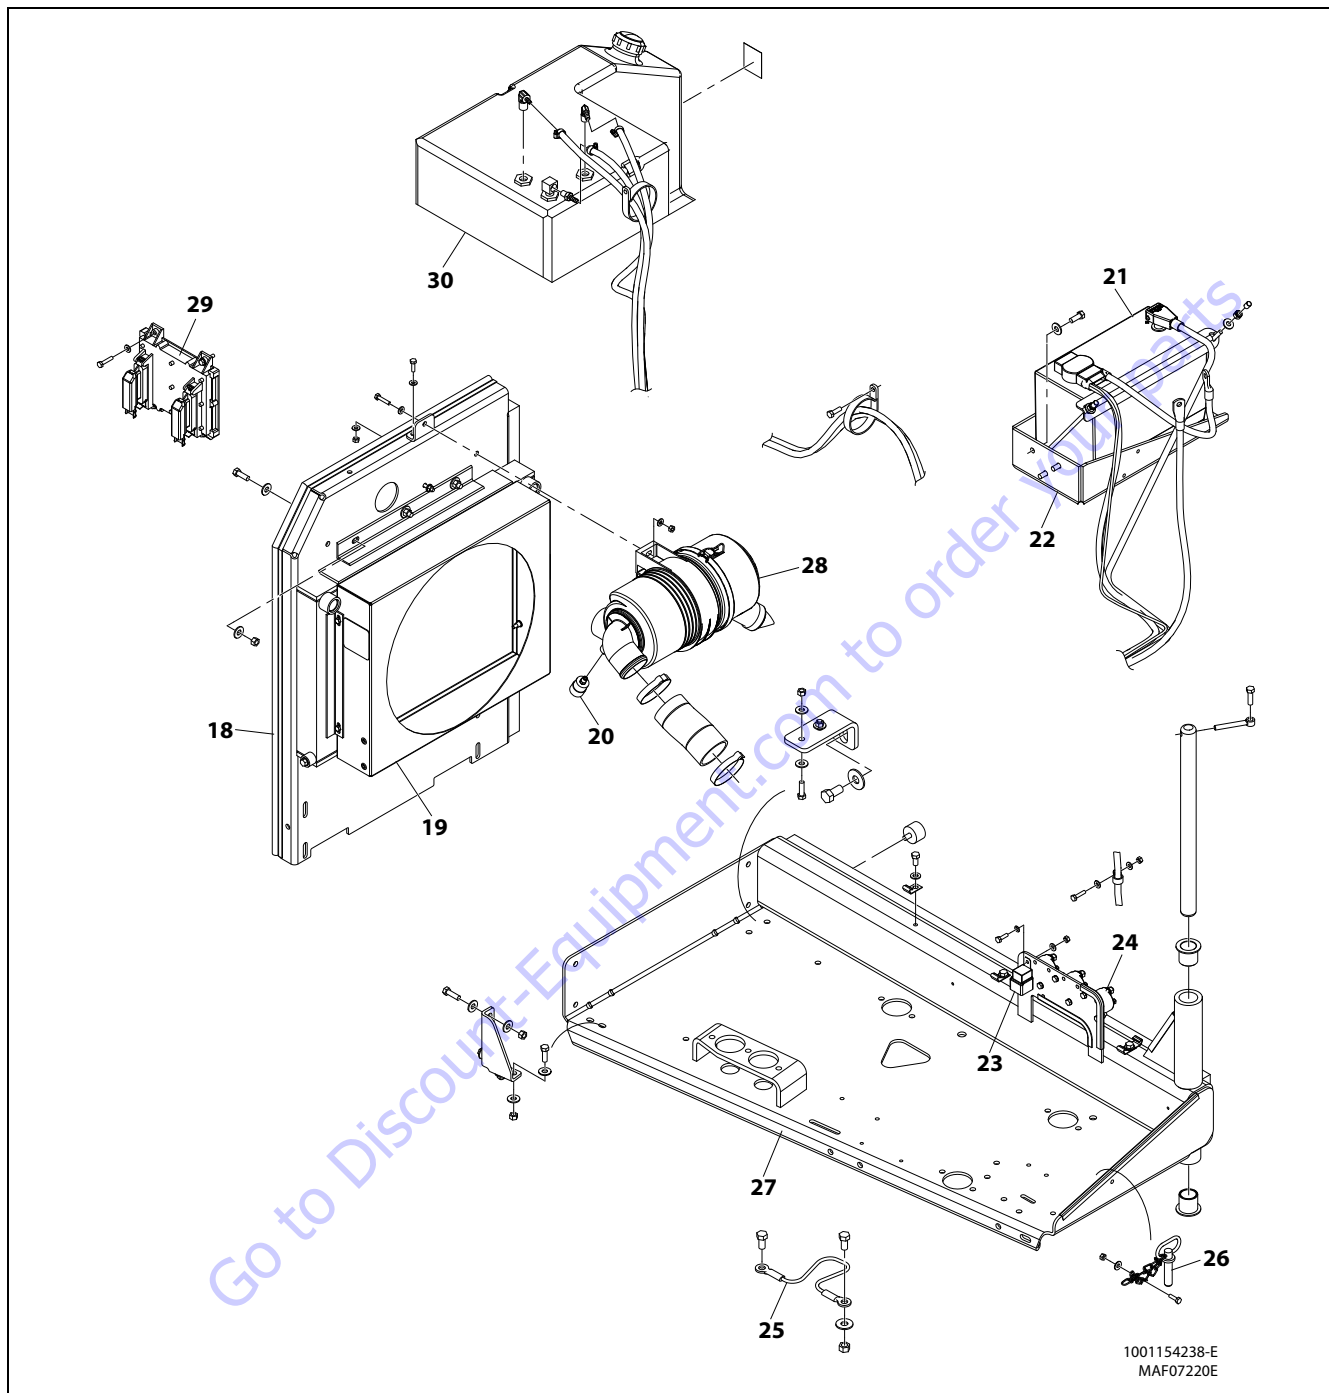

- | | | |
|--------------------------|-------------------|--------------------------|
| 18. Radiator Mounting | 23. Relay | 27. Tray |
| 19. Radiator | 24. Relay | 28. Air Cleaner assembly |
| 20. Air Intake Indicator | 25. Lanyard Cable | 29. Control Module |
| 21. Battery | 26. Hitch Pin | 30. Fuel Tank |
| 22. Bracket | | |

Figure 3-78. Deutz D2011L04 Engine Components - Sheet 2 of 2

3.18 DEUTZ ENGINE - TD2.9L4

NOTE: Refer to engine manufacturer's manual for detailed operating and maintenance instructions.

Check Oil Level

1. Make sure machine and engine are level and switch engine OFF before checking oil level.
2. Remove oil dipstick and wipe with clean cloth.
3. Insert dipstick to the stop and remove again.
4. Check oil level. Top oil level as shown in figure below with an approved grade and type of oil outlined in engine manufacturer's operator's manual.

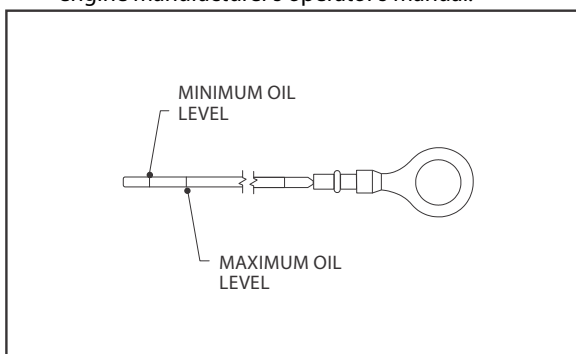


Figure 3-79. Deutz TD2.9L4 Dipstick Markings

5. Replace dipstick until fully seated.

Change Engine Oil

1. Allow engine to warm up. Engine oil should reach approximately 176° F (80° C).
2. Make sure machine and engine are level and switch off engine.
3. Place oil tray under engine.

CAUTION

HOT ENGINE OIL CAN CAUSE BURNS. AVOID CONTACT WITH HOT OIL WHEN DRAINING.

NOTICE

COLLECT USED OIL IN A CONTAINER SUITABLE FOR DISPOSAL OR RECYCLING. DISPOSE OF USED ENGINE OIL IN ACCORDANCE WITH ENVIRONMENTAL REGULATIONS.

4. Open oil drain valve and drain oil.
5. Close oil drain valve.
6. Pour in new engine oil. Refer to Section 1 for capacity and Figure 3-80., Engine Oil Viscosity.


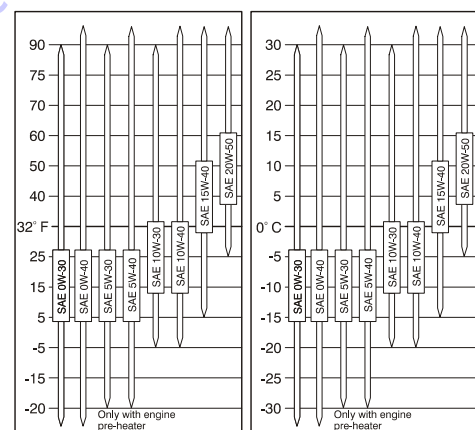



Figure 3-80. Engine Oil Viscosity

Change Oil Filter

1. Wipe area around filter to clean any dirt from area.
2. Using a suitable oil filter removal tool, loosen lube oil filter cartridge and spin off.

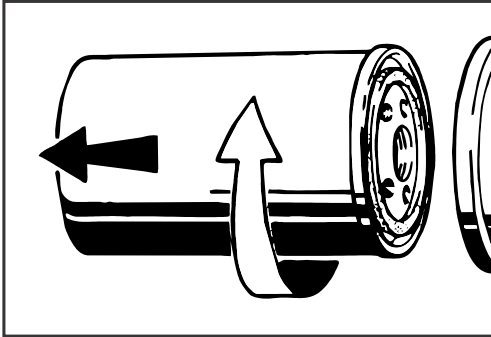

3. Catch any escaping oil.
4. Clean any dirt from filter carrier sealing surface.
5. Lightly coat new oil filter rubber gasket with clean oil
6. Screw in new filter by hand until gasket is flush.
7. Hand-tighten filter another half-turn.

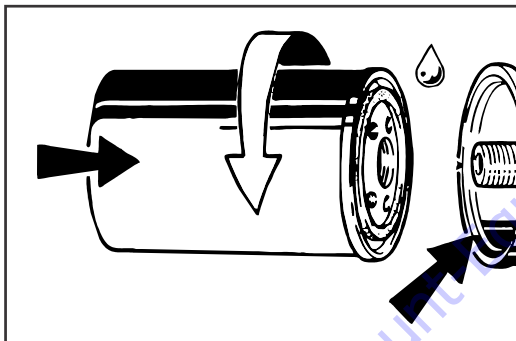


8. Check oil level.
9. Check oil pressure.
10. Check oil filter cartridge for leaks.

Change Fuel Filters


⚠ WARNING

FUEL IS FLAMMABLE AND CAN CAUSE DEATH OR SERIOUS INJURY. MAKE SURE NO OPEN FLAMES OR SPARKS ARE IN THE AREA WHEN WORKING ON FUEL SYSTEM. DO NOT SMOKE WHEN WORKING ON THE FUEL SYSTEMS.

1. Wipe area around filter to clean any dirt from area.
2. Disconnect water sensor connector (Pre-filter Only).
3. Remove fuel filter cartridge. Catch any escaping fuel.

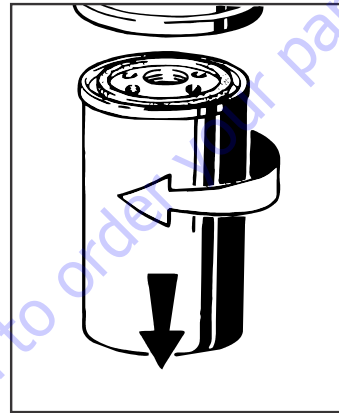

4. Clean dirt from filter carrier sealing surface.
5. Apply light film of oil or diesel fuel to rubber gasket of new filter cartridge.
6. Screw in new filter by hand until gasket is flush. Hand-tighten filter another half-turn.

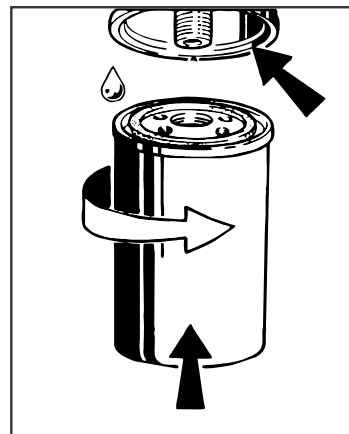

7. Connect water sensor connector (Pre-filter Only).
8. Open fuel shut-off valve.
9. Check for leaks.

3.19 DEUTZ ENGINE - D2011L04


NOTE: Refer to engine manufacturer's manual for detailed operating and maintenance instructions. Limited engine maintenance items are presented here for convenience but detailed engine maintenance items and schedule are included in the engine manufacturer's manual.

Glow Plugs

If the glow plug option is enabled in the JLG Control System, the glow plug and indicator lamp will be energized when the Power/Emergency Stop switch is pulled on if the ambient air temperature is less than 50° F (10° C) and the engine coolant temperature is less than 140° F (60° C). This determination will occur one second after the Power/Emergency Stop switch has been pulled on. The lamp and glow plugs will remain energized for the period of time specified by the setting in the JLG Control System. Engine start shall be disabled during this period. On Deutz engines, the glow plugs will continue (post glow) after the engine has started for three times the machine digit setting.

Check Oil Level

1. Switch the engine off before checking oil level.
2. Make sure the machine and engine are level.
3. Remove the oil dipstick.
4. Wipe the dipstick with non-fibrous, clean cloth.
5. Insert the dipstick to the stop and remove again. Check

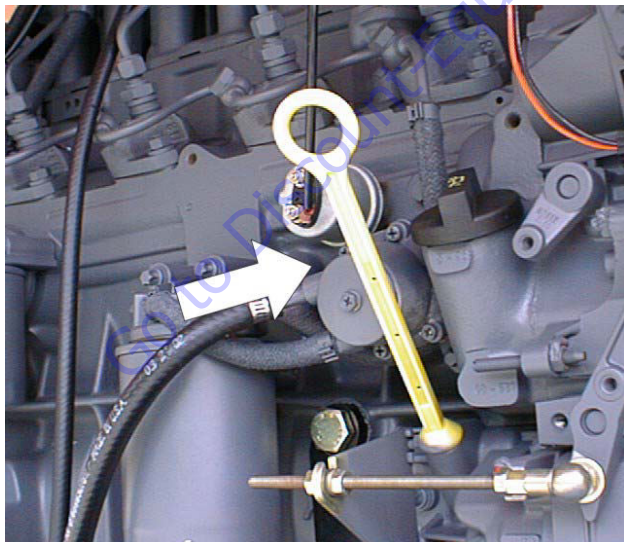

the oil level, and if necessary, top the oil level up to the MAX mark with an approved grade and type of oil as outlined in the engine manufacturer's operator's manual. Refer to Figure 3-81., Deutz D2011I04 Engine Dipstick.

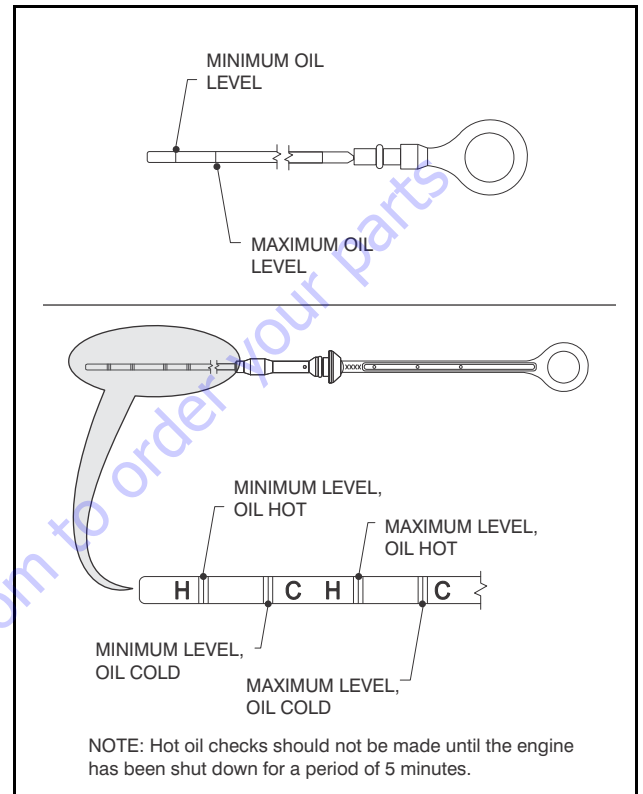


Figure 3-81. Deutz D2011I04 Engine Dipstick

6. Replace the dipstick making sure that it is fully seated in the dipstick tube to seal off the crankcase.

Replacing Engine Oil

1. Allow the engine to warm up. The engine oil should reach approximately 176° F (80° C).
2. Make sure the machine and engine are level.
3. Switch off the engine.
4. Place an oil tray under the engine.

CAUTION

HOT ENGINE OIL CAN CAUSE BURNS, AVOID CONTACT WITH HOT OIL WHEN DRAINING.

NOTICE

COLLECT USED OIL IN A CONTAINER SUITABLE FOR DISPOSAL OR RECYCLING. DISPOSE OF USED ENGINE OIL IN ACCORDANCE WITH ENVIRONMENTAL REGULATIONS.



5. Open the oil drain valve.
6. Drain the oil.
7. Close the oil drain valve.

8. Pour in new engine oil. Refer to Section 1 for capacity and refer to Figure 3-82., Engine Oil Viscosity for the proper grade.



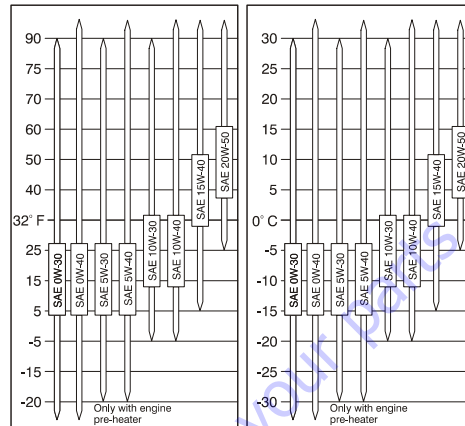


Figure 3-82. Engine Oil Viscosity


Replacing the Oil Filter

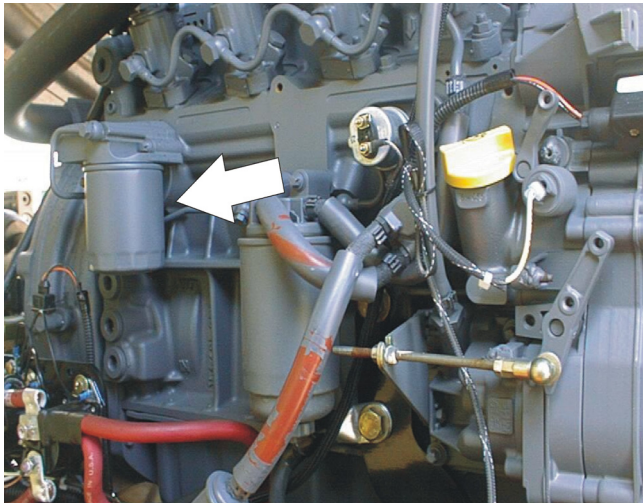


1. Wipe the area around the filter to clean any dirt from the area.
2. Using a suitable oil filter removal tool, loosen lube oil filter element and spin off.

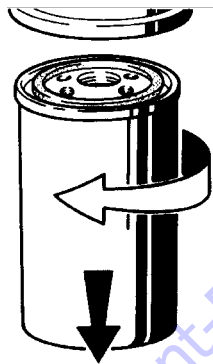

3. Catch any escaping oil.
4. Clean any dirt from filter carrier sealing surface.
5. Lightly coat new oil filter rubber gasket with clean oil.

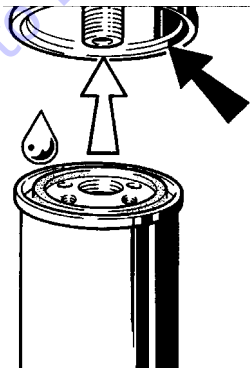


6. Manually screw in the new filter until the gasket is flush.

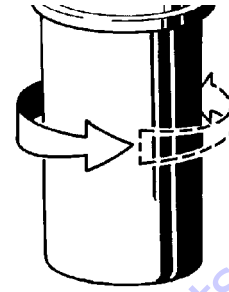

7. Hand-tighten filter another half-turn.
8. Check oil level.
9. Check oil pressure.
10. Check the oil filter cartridge and make sure there are no leaks.

Replacing the Primary Fuel Filter

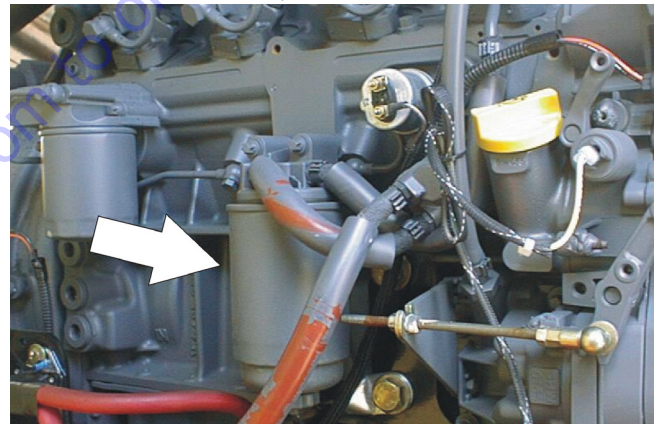

⚠ WARNING

FUEL IS FLAMMABLE AND CAN CAUSE DEATH OR SERIOUS INJURY. MAKE SURE NO OPEN FLAMES OR SPARKS ARE IN THE AREA WHEN WORKING ON FUEL SYSTEM. DO NOT SMOKE WHEN WORKING ON THE FUEL SYSTEMS.

1. Wipe the area around the filter to clean any dirt from the area.
2. Fuel supply from the fuel tank may need to be blocked to prevent fuel flow from the tank.
3. Undo the fuel filter cartridge and spin off.
4. Catch any escaping fuel.
5. Clean any dirt from the filter carrier sealing surface.
6. Apply a light film of oil or diesel fuel to the rubber gasket of the new filter cartridge.
7. Manually screw in the new filter until the gasket is flush.
8. Tighten the fuel filter cartridge with a final half-turn.
9. Check for leaks.

3.20 DUAL FUEL SYSTEM

⚠ CAUTION

IT IS POSSIBLE TO SWITCH FROM ONE FUEL SOURCE TO THE OTHER WITHOUT ALLOWING THE ENGINE TO STOP. EXTREME CARE MUST BE TAKEN AND THE FOLLOWING INSTRUCTIONS MUST BE FOLLOWED.

Changing from Gasoline to LP Gas

1. Start the engine from the ground control station.
2. Open the hand valve on the LP gas supply tank by turning counterclockwise.

⚠ CAUTION

BE SURE ALL GASOLINE IS EXHAUSTED BEFORE SWITCHING TO LP GAS.

3. While the engine is operating, place the two position LPG/Gasoline switch at the platform control station to the LP position. Allow the engine to operate without load until the engine regains smoothness.

Changing from LP Gas to Gasoline

1. With engine operating on LP under a no load condition, throw the LPG/Gasoline switch at the platform control station to the "Gasoline" position. Allow the engine to operate with no load until the engine regains smoothness.
2. Close the hand valve on the LP gas supply tank by turn.

3.21 DEUTZ EMR 2

The EMR2 consists of the sensors, the control unit and the actuator. Engine-side controls as well as the JLG Control System are connected by means of separate cable harnesses to the EMR control unit.

The sensors attached to the engine provide the electronics in the control unit with all the relevant physical parameters in accordance with the information of the current condition of the engine and the preconditions (throttle position etc.), the EMR2 controls an actuator that operates the control rod of the injection pump and thus doses the fuel quantity in accordance with the performance requirements.

The exact position of the regulating rod is reported back and, if necessary, is corrected, by means of the control rod travel sensor, situated together with the rotation magnets in a housing of the actuator.

The EMR2 is equipped with safety devices and measures in the hardware and software in order to ensure emergency running (Limp home) functions.

In order to switch the engine off, the EMR2 is switched in a de-energized fashion over the ignition switch. A strong spring in the actuator presses the control rod in the de-energized condition into the zero position. As a redundancy measure, an additional solenoid serves for switching off and this, independently of the actuator, also moves the control rod in the de-energized condition into the zero position.

After the programming, that is carried out over the ISO9141 interface, the EMR2 possesses a motor-specific data set and this is then fixedly assigned to the engine. Included in this are the various application cases as well as the customer's wishes regarding a particular scope of function.

Each EMR2 module is matched by serial number to the engine. Modules cannot be swapped between engines.

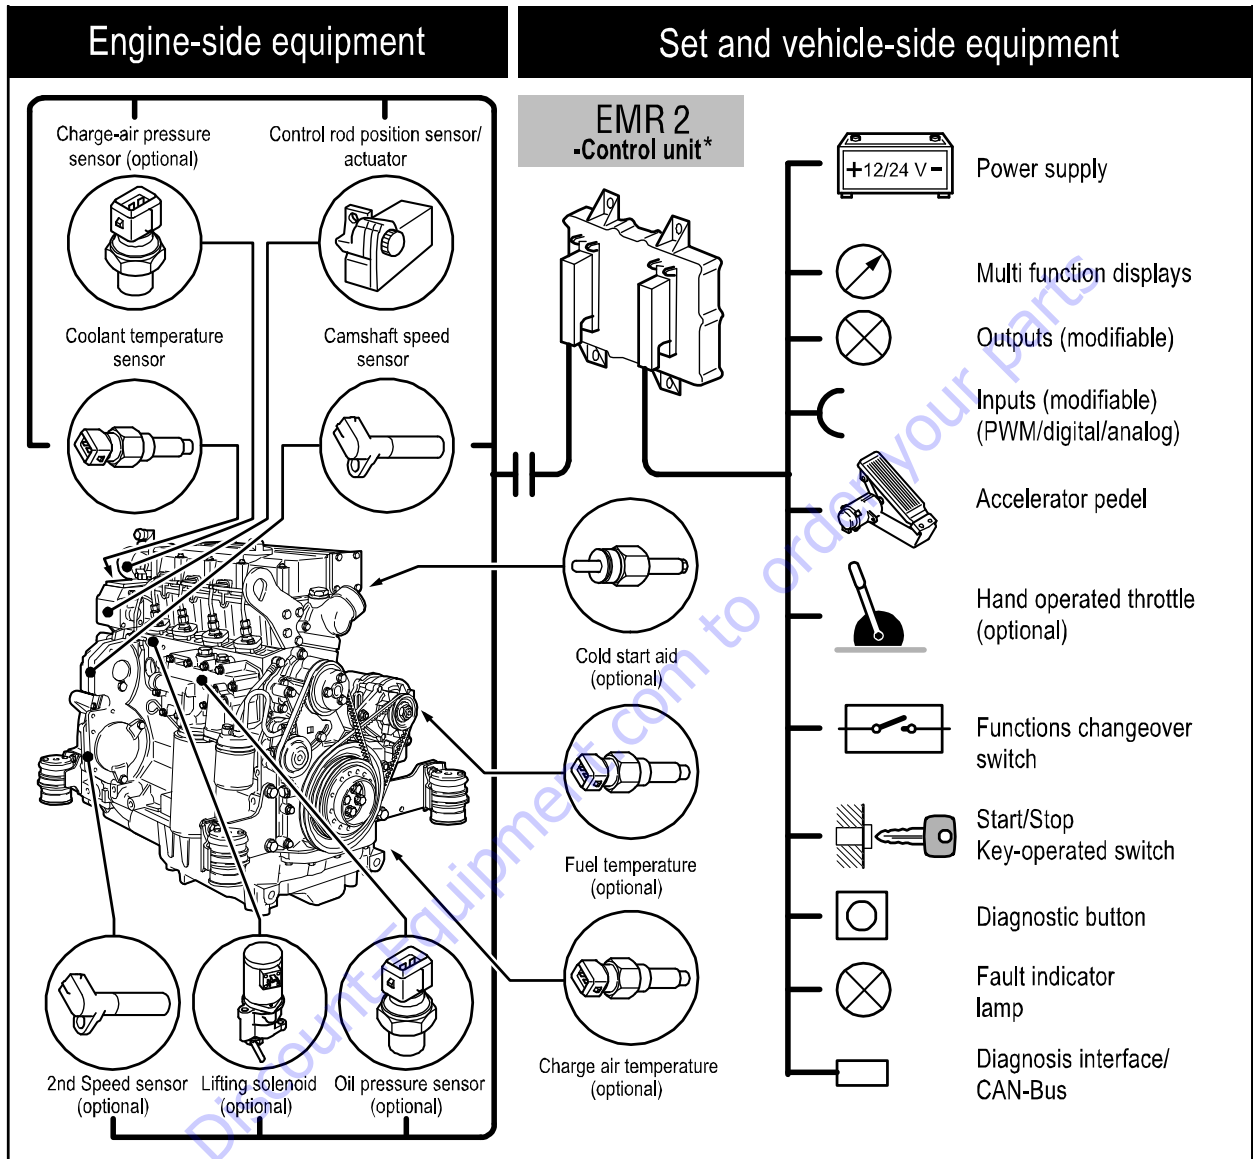


Figure 3-83. EMR 2 Engine Side Equipment

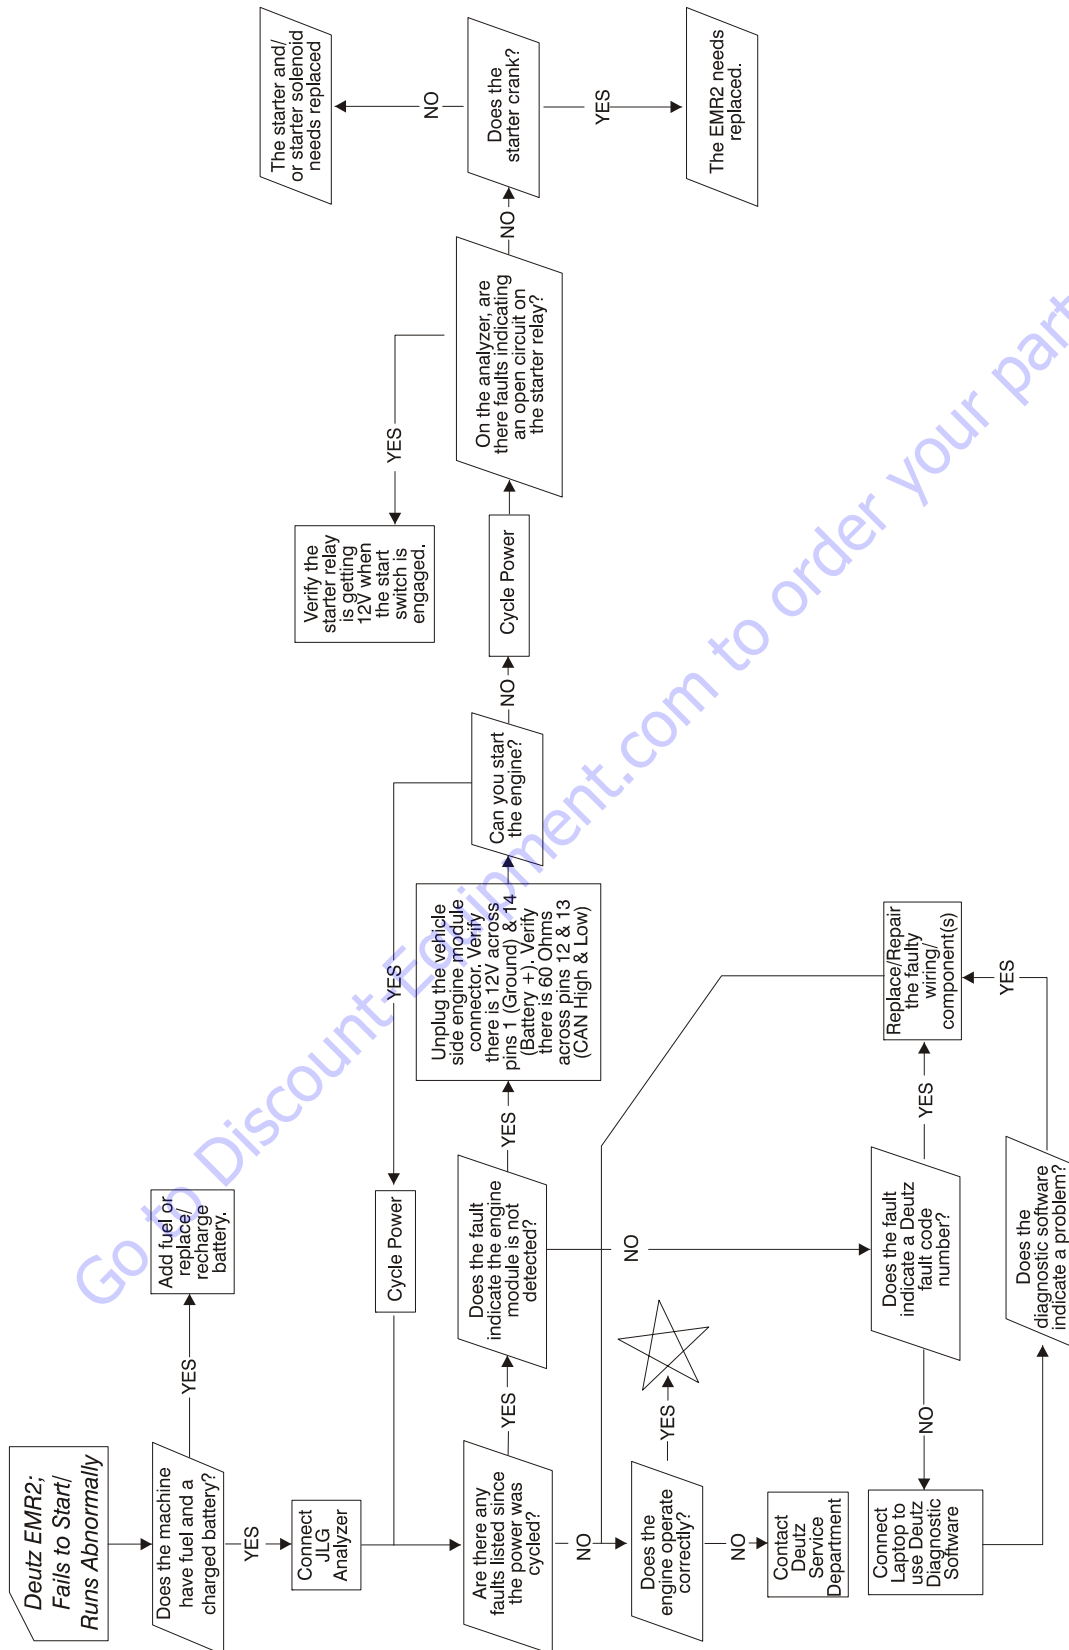


Figure 3-84. Deutz EMR 2 Troubleshooting Flow Chart

