


## SECTION 4 - BOOM & PLATFORM


13. Install 2 bolts in the threaded holes in the flange. Using a bar, rotate the shaft in a clockwise direction until the wear guides are seated inside the housing bore.

### NOTICE

AS THE SHAFT IS ROTATED, BE CAREFUL NOT TO DISENGAGE THE PISTON AND HOUSE GEARING.

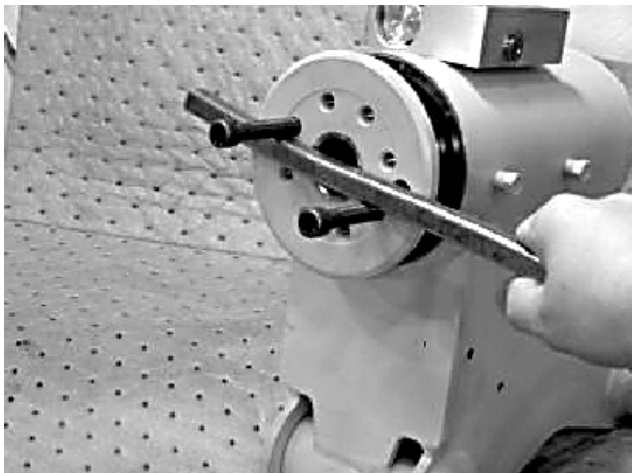


14. Install the stop tube onto the shaft end, if equipped. Stop tube is an available option to limit the rotation of an actuator.
15. Coat the threads on the end of the shaft with anti-seize grease to prevent galling.

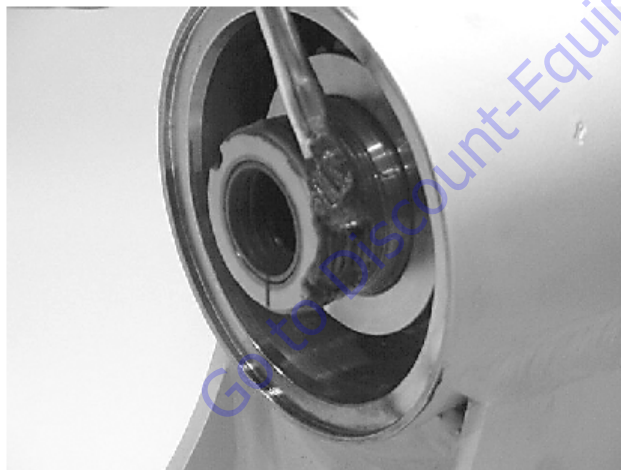


16. Install the O-ring (204) and back-up ring (207) into the inner seal groove on the end cap (4).



17. Thread the end cap (4) onto the shaft (2) end. Make sure the wear guide remains in place on the end cap as it is threaded into the housing (1).

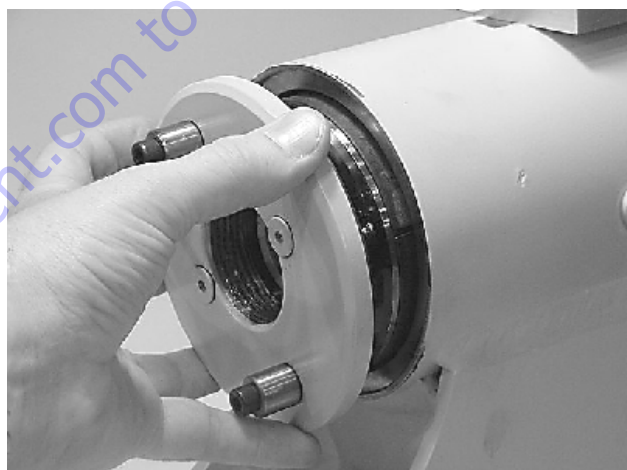

- 18.** Tighten the end cap (4). In most cases the original holes for the lock pins will line up.

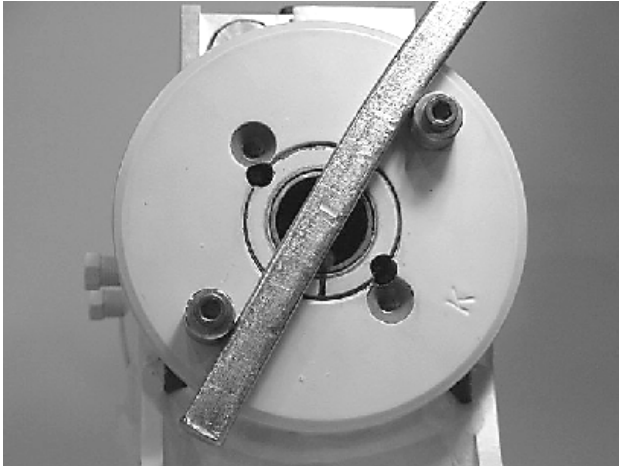

- 20.** Insert the set screws (113) over the lock pins. Tighten them to 25 in. lbs. (2.825 Nm).



- 19.** Place the lock pins (109) provided in the Helac seal kit in the holes with the dimple side up. Then, using a punch, tap the lock pins to the bottom of the hole.



Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts

## Installing Counterbalance Valve

Refer to Figure 4-26., Rotator Counterbalance Valve.

1. Make sure the surface of the actuator is clean, free of any contamination and foreign debris including old JLG Threadlocker P/N 0100011.
2. Make sure the new valve has the O-rings in the counterbores of the valve to seal it to the actuator housing.
3. The bolts that come with the valve are grade 8 bolts. New bolts should be installed with a new valve. JLG

Threadlocker P/N 0100011 should be applied to the shank of the three bolts at the time of installation.

4. Torque the 1/4-inch bolts 110 to 120 in.lbs. (12.4 to 13.5 Nm). Do not torque over 125 in.lbs. (14.1 Nm). Torque the 5/16-inch bolts 140 in.lbs. (15.8 Nm). Do not torque over 145 in.lbs. (16.3 Nm).
5. Make sure the valve is seated against the housing valve flat. If it is raised up on any side or corner, remove the valve to determine what the obstruction is. If possible, test this using a hydraulic hand pump or electric test.

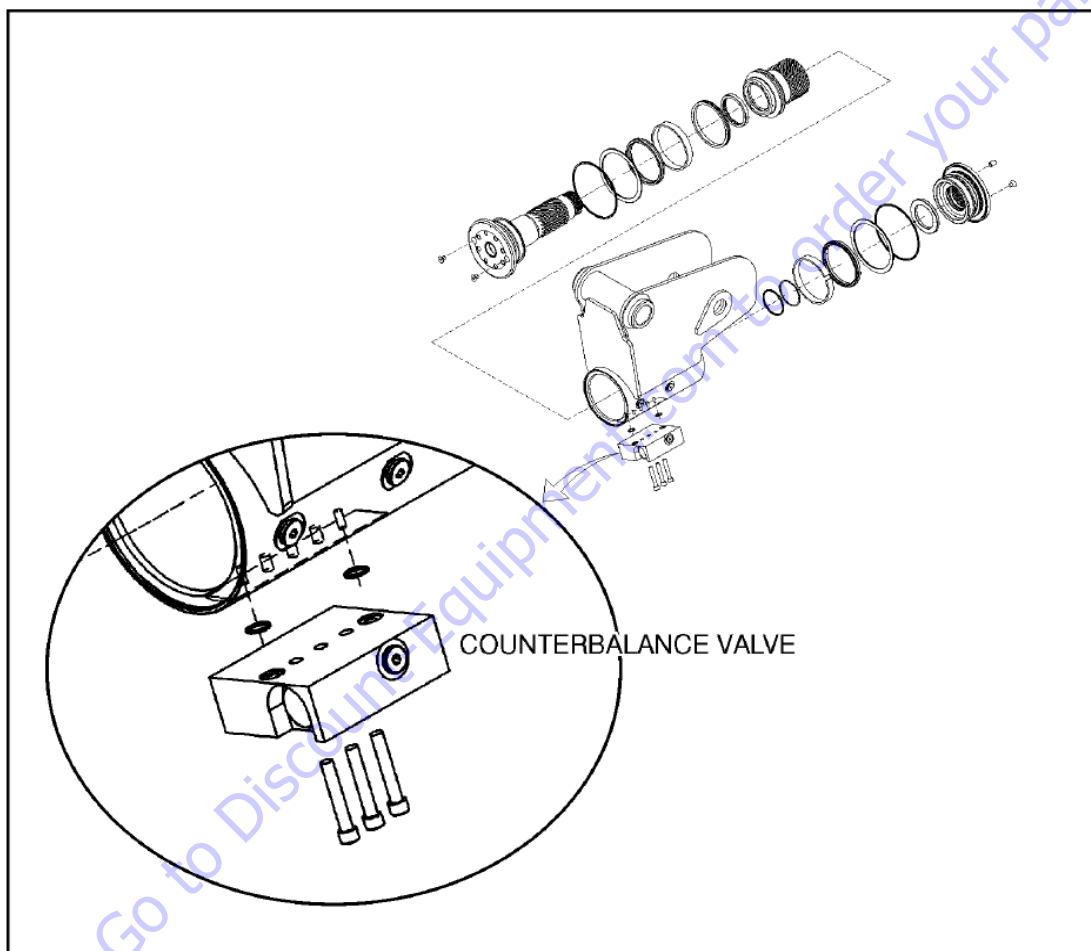


Figure 4-26. Rotator Counterbalance Valve

## Greasing Thrust Washers

1. After the actuator is assembled but before it is put into service, the thrust washer area must be packed with Lithium grease.
2. There are two grease ports located on both the shaft flange and the end cap. They are plugged with cap screws (113) or set screws. Remove the grease port screws from the shaft flange and end cap. (See exploded view)



### NOTICE

**IF A HYDRAULIC TEST BENCH IS NOT AVAILABLE, THE ACTUATOR CAN BE ROTATED BY HAND, OPEN THE PRESSURE PORTS AND USE A PRY BAR WITH CAP SCREWS INSERTED INTO THE SHAFT FLANGE TO TURN THE SHAFT IN THE DESIRED DIRECTION.**

3. Insert the tip of a grease gun into one port and apply grease to the shaft flange. Continue applying until grease flows from the opposite port. Cycle the actuator five times and apply grease again. Repeat this process on the end cap. Insert the cap screws into the grease ports and tighten to 25 in-lbs. (2.8 Nm).



## Testing the Actuator

If the equipment is available, the actuator should be tested on a hydraulic test bench. The breakaway pressure — the pressure at which the shaft begins to rotate — should be approximately 400 psi (28 bar). Cycle the actuator at least 25 times at 3000 psi (210 bar) pressure. After the 25 rotations, increase the pressure to 4500 psi (315 bar) to check for leaks and cracks. Perform the test again at the end of the rotation in the opposite direction.

### TESTING THE ACTUATOR FOR INTERNAL LEAKAGE

If the actuator is equipped with a counterbalance valve, plug the valve ports. Connect the hydraulic lines to the housing ports. Bleed all air from the actuator (see Installation and Bleeding) Rotate the shaft to the end of rotation at 3000 psi (210 bar) and maintain pressure. Remove the hydraulic line from the non-pressurized side.

Continuous oil flow from the open housing port indicates internal leakage across the piston. Replace the line and rotate the shaft to the end of rotation in the opposite direction. Repeat the test procedure outlined above for the other port. If there is an internal leak, disassemble, inspect and repair.


### Installation and Bleeding

After installation of the actuator on the equipment, it is important that all safety devices such as tie rods or safety cables are properly reattached.

To purge air from the hydraulic lines, connect them together to create a closed loop and pump hydraulic fluid through them. Review the hydraulic schematic to determine which hydraulic lines to connect. The linear feet and inside diameter of the hydraulic supply lines together with pump capacity will determine the amount of pumping time required to fully purge the hydraulic system.

Bleeding may be necessary if excessive backlash is exhibited after the actuator is connected to the hydraulic system. The following steps are recommended when a minimum of two gallons (8 liters) is purged.

1. Connect a 3/16" inside diameter x 5/16" outside diameter x 5 foot clear, vinyl drain tube to each of the two bleed nipples. Secure them with hose clamps. Place the vinyl tubes in a clean 5-gallon container to collect the purged oil. The oil can be returned to the reservoir after this procedure is completed.

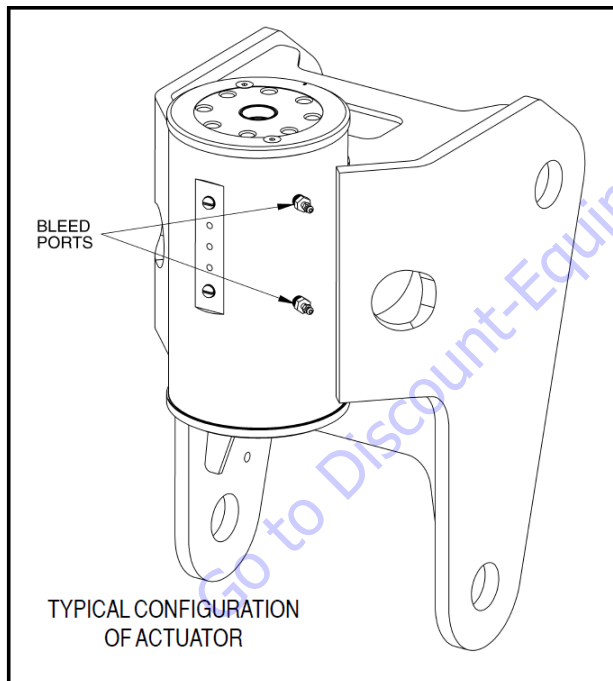

2. With an operator in the platform, open both bleed nipples 1/4 turn. Hydraulically rotate the platform to the end of rotation (either clockwise or counterclockwise), and maintain hydraulic pressure. Oil with small air bubbles will be seen flowing through the tubes. Allow a 1/2 gallon of fluid to be purged from the actuator.
3. Keep the fittings open and rotate the platform in the opposite direction to the end position. Maintain hydraulic pressure until an additional 1/4 gallon of fluid is pumped into the container.
4. Repeat steps 2 & 3. After the last 1/2 gallon is purged, close both bleed nipples before rotating away from the end position.

### 4.17 FOOT SWITCH ADJUSTMENT

Adjust so that functions will operate when pedal is at center of travel. If switch operates within last 1/4 in. (6.35 mm) of travel, top or bottom, it should be adjusted.

## Troubleshooting

**Table 4-1. Troubleshooting**


Problem	Cause	Solution
1. Shaft rotates slowly or not at all	<ul style="list-style-type: none"> <li>a. Insufficient torque output</li> <li>b. Low rate of fluid flow</li> <li>c. Control or counterbalance valve has internal leak</li> <li>d. Piston and/or shaft seal leak</li> <li>e. Corrosion build-up on the thrust surfaces</li> <li>f. Swollen seals and composite bearings caused by incompatible hydraulic fluid</li> </ul>	<ul style="list-style-type: none"> <li>a. Verify correct operating pressure. Do not exceed OEM's pressure specifications. Load may be above maximum capacity of the actuator.</li> <li>b. Inspect ports for obstructions and hydraulic lines for restrictions and leaks.</li> <li>c. Disconnect hydraulic lines and bypass valve. Leave valve ports open and operate the actuator through housing ports (do not exceed OEM's operating pressure). The valve must be replaced if a steady flow of fluid is seen coming from the valve ports.</li> <li>d. Remove the plug and the housing's valve ports. Operate the actuator through the housing ports. Conduct the internal leakage test.</li> <li>e. Re-build the actuator. Remove all rust then polish. Replacement parts may be needed.</li> <li>f. Re-build the actuator. Use fluid that is compatible with seals and bearings.</li> </ul>
2. Operation is erratic or not responsive	<ul style="list-style-type: none"> <li>a. Air in actuator</li> </ul>	<ul style="list-style-type: none"> <li>a. Purge air from actuator. See bleeding procedures.</li> </ul>
3. Shaft will not fully rotate	<ul style="list-style-type: none"> <li>a. Twisted or chipped gear teeth</li> <li>b. Port fittings are obstructing the piston</li> </ul>	<ul style="list-style-type: none"> <li>a. Check for gear binding. Actuator may not be able to be rebuilt and may need to be replaced. Damage could be a result of overload or shock.</li> <li>b. Check thread length of port fittings. Fittings should during stroke not reach inside the housing bore.</li> </ul>
4. Selected position cannot be maintained	<ul style="list-style-type: none"> <li>a. Control or counterbalance valve has internal leak</li> <li>b. Piston and/or shaft seal leak</li> <li>c. Air in actuator</li> </ul>	<ul style="list-style-type: none"> <li>a. Disconnect hydraulic lines and bypass valve. Leave valve ports open and operate the actuator through housing ports (do not exceed OEM's operating pressure). The valve must be replaced if a steady flow of fluid is seen coming from the valve ports.</li> <li>b. Remove the plug and the housing's valve ports. Operate the actuator through the housing ports. Conduct the internal leakage test.</li> <li>c. Purge air from actuator. See bleeding procedures</li> </ul>

## 4.18 SKYGUARD®


### Operation

SkyGuard provides enhanced control panel protection. When the SkyGuard sensor is activated, functions in use at the time of actuation will reverse or cutout. The SkyGuard Function Table provides more details on these functions.


Consult the following illustrations to determine which type of SkyGuard the machine is equipped with. Regardless of the type, SkyGuard function according to the SkyGuard Function Table does not change.

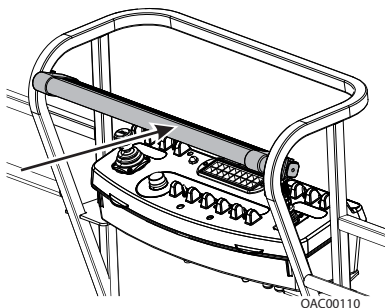

SkyGuard

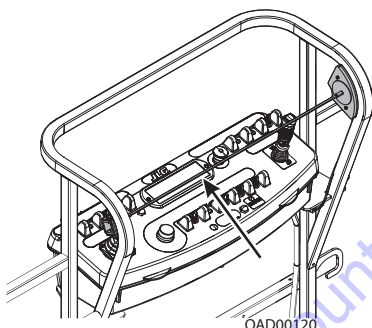

SkyGuard SkyLine™

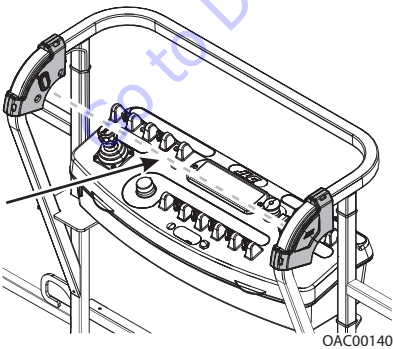

SkyGuard SkyEye™



### WARNING

THE MACHINE OPERATOR IS REQUIRED TO PERFORM A DAILY FUNCTION TEST TO ENSURE PROPER OPERATION OF THE SKYGUARD SYSTEM.

### Function Test

#### SKYGUARD ONLY

Perform this function test if **SkyGuard only** is selected in machine setup (refer to Table 6-2).

From the Platform Control Console in an area free from obstructions:

1. Operate the telescope out function, then activate SkyGuard sensor.
2. Once sensor has been activated, ensure telescope out function stops then telescope in function operates for a short duration. Additionally, verify Soft Touch/SkyGuard indicator light flashes and horn sounds. If machine is equipped with SkyGuard beacon, ensure it flashes when sensor activates.
3. With SkyGuard sensor still engaged, press and hold yellow Soft Touch/SkyGuard override button. Operate a function to verify operation can be resumed.
4. Disengage SkyGuard sensor, release controls, and recycle footswitch. Ensure normal operation available.

In Ground Mode:

1. Operation is allowed regardless of SkyGuard activation.

#### BOTH SKYGUARD AND SOFT TOUCH

Perform this procedure if **both SkyGuard and Soft Touch** are selected in machine setup (refer to Table 6-2).

From the Platform Control Console in an area free from obstructions:

**NOTE:** Machine will treat Soft Touch/SkyGuard override switch as if it is a Soft Touch and SkyGuard switch.

1. Operate the telescope out function, then activate SkyGuard sensor.
2. Once sensor has been activated, ensure telescope out function stops. Additionally, verify Soft Touch/SkyGuard indicator light flashes and horn sounds. If machine is equipped with SkyGuard beacon, ensure it flashes when sensor activates.
3. With SkyGuard sensor still engaged, press and hold yellow Soft Touch/SkyGuard override button. Operate a function to verify operation can be resumed.
4. Disengage SkyGuard sensor, release controls, and recycle footswitch. Ensure sure normal operation is available.

In Ground Mode:

1. Operation is allowed regardless of SkyGuard activation.

**SOFT TOUCH ONLY**

If **Soft Touch only** is selected in machine setup (refer to Table 6-2), machine will treat the Soft Touch/SkyGuard override switch as if it is a Soft Touch switch.

**SKYGUARD NOT SELECTED IN MACHINE SETUP**

If the SkyGuard system is installed on the machine, but no option is selected in the machine setup (refer to Table 6-2), SkyGuard sensor status will be ignored. No function cutout or reversal will be implemented.

**Diagnostics & Troubleshooting**

If SkyGuard does not function when the sensor is engaged, first verify the configuration under the MACHINE SETUP: SKYGUARD OPTION menu using the hand-held Analyzer. Ensure the selected configuration matches the actual system installed on the machine. If not, select the correct configuration, then verify operation.

Additionally, use the handheld analyzer to navigate to the DIAGNOSTICS: FEATURES → SKYGUARD INPUTS menu to determine additional SkyGuard fault information.

Engage the SkyGuard sensor and observe the Analyzer to determine if the switch/relay closes.

If the status of the switch/relay remains OPEN while the SkyGuard sensor is actively engaged, it is possible the sensor has failed and should be replaced immediately.

If the status of the switch/relay remains CLOSED while the SkyGuard sensor is actively engaged, a power or ground wire may not be making good contact or may be loose or broken. Additionally, there is a low probability that both relays may have failed.

If the switch/relay status is in disagreement, then one may have failed or is not installed correctly. In this case, the machine will be inoperable.

**FAULT CODES**

Refer to Table 6-13 for more fault code information

- **0039** - SkyGuard switch activation fault
- **2563** - switch disagreement fault

**Table 4-2. SkyGuard Function Table**

Drive Forward	Drive Reverse	Steer	Swing	Tower Lift Up	Tower Tele Out	Tower Lift Down	Boom Tele In	Boom Lift Up	Boom Lift Down	Boom Tele In	Boom Tele Out	Jib Lift	Basket Level	Basket Rotate
R*/C**	R	C	R	R	C	C	C	R	R	R	C	C	C	C
R = Indicates Reversal is Activated														
C = Indicates Cutout is Activated														
*DOS (Drive Orientation System) Enabled														
** DOS Not Enabled, machine is driving straight without steering, and any other hydraulic function is active														
<b>Note:</b> If SkyGuard is enabled with the SOft Touch system, functions will cutout instead of reversing.														



### 4.19 BOLT-ON EXTERNAL FALL ARREST

The Bolt-On External Fall Arrest system is designed to provide a lanyard attach point while allowing the operator to access areas outside the platform. Exit/Enter the platform through the gate area only. The system is designed for use by one person.

Personnel must use fall protection at all times. A full body harness is required with lanyard not to exceed 6 ft. (1.8 M) in length, that limits the maximum arrest force to 900 lbs. (408 kg).

Bolt-On External Fall Arrest System capacity is 310 lb (140 kg) - one (1) person maximum.

Do not move the platform during use of the Bolt-On External Fall Arrest system.

**⚠ WARNING**

DO NOT OPERATE ANY MACHINE FUNCTIONS WHILE OUTSIDE OF PLATFORM. BE CAREFUL WHEN ENTERING/EXITING THE PLATFORM AT ELEVATION.

**⚠ WARNING**

IF THE BOLT-ON EXTERNAL FALL ARREST SYSTEM IS USED TO ARREST A FALL OR IS OTHERWISE DAMAGED, THE ENTIRE SYSTEM MUST BE REPLACED AND THE PLATFORM FULLY INSPECTED BEFORE RETURNING TO SERVICE. REFER TO THE SERVICE MANUAL FOR REMOVAL AND INSTALLATION PROCEDURES.

THE BOLT-ON EXTERNAL FALL ARREST SYSTEM REQUIRES AN ANNUAL INSPECTION AND CERTIFICATION. THE ANNUAL INSPECTION AND CERTIFICATION MUST BE PERFORMED BY A QUALIFIED PERSON OTHER THAN THE USER.

#### Inspection Before Use

The Bolt-On External Fall Arrest system must be inspected before each use of the aerial work platform. Replace components if there are any signs of wear or damage.

Before each use, perform a visual inspection of the following components:

- Cable: Inspect cable for proper tension, broken strands, kinks, or any signs of corrosion.


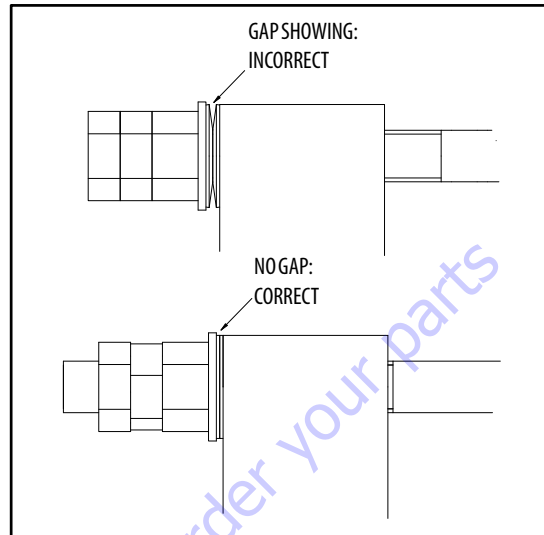


Figure 4-27. Bolt-On External Fall Arrest Cable Tension


- Fittings & Brackets: Ensure all fittings are tight and there are no signs of fractures. Inspect brackets for any damage.
- Attachment Ring: No cracks or signs of wear are acceptable. Any signs of corrosion requires replacement.
- Attaching Hardware: Inspect all attaching hardware to ensure there are no missing components and hardware is properly tightened.
- Platform Rails: No visible damage is acceptable.

#### Installation


1. Install the retaining hardware (bolts, nuts, and washers) and secure the brackets to the platform rail. Tighten the nuts but do not torque them yet.

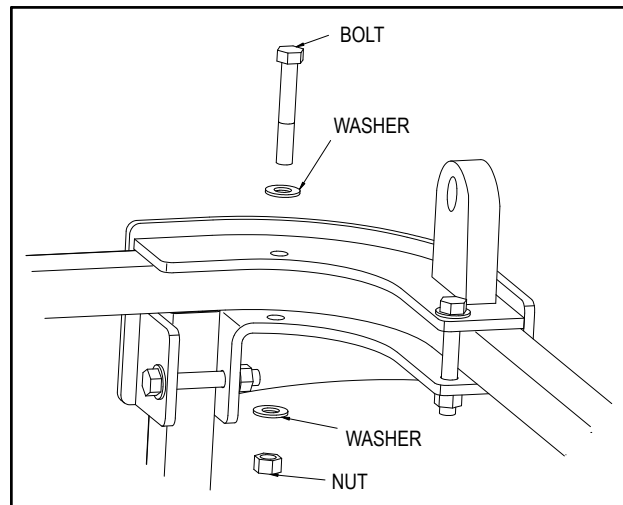


2. Attach the fall arrest cable to the right hand bracket Using the attaching bolt and nut. Orient the bolt as shown below. Do not tighten the nut so cable can still rotate.

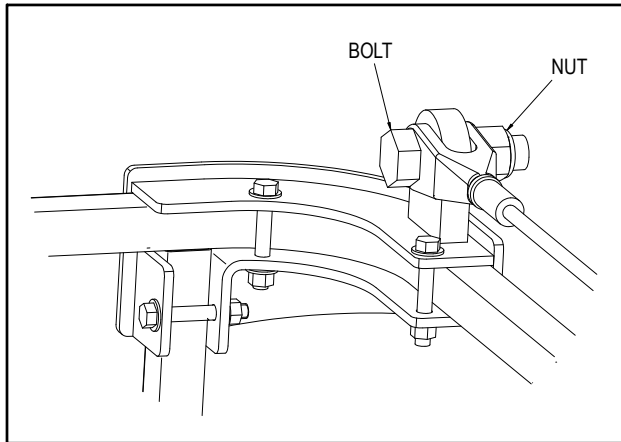

3. Install the Attachment Ring onto the cable.
4. Without twisting the fall arrest cable, pull it thru the left hand bracket and mark the top of the swaged cable end. Install the fall arrest cable through the left hand bracket and secure it using the belleville washers, washer, retaining nut, and jam nuts. Orient the hardware as shown below and with the belleville washers so the gap is present at the outside diameter of the washers. install the nuts onto the cable finger tight so the mark on the cable does not move.

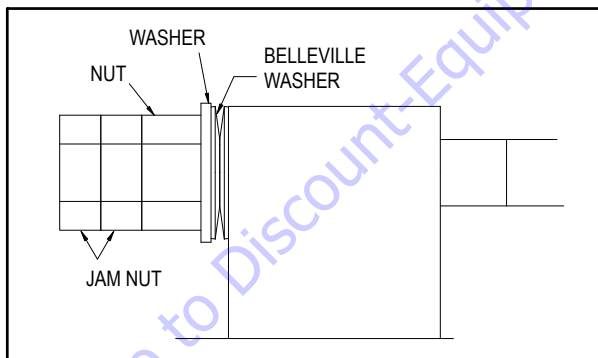

5. Use the two jam nuts to prevent the cable from rotating while the nut is tightened. Tighten the nut until the belleville washers are fully compressed and no gap is present at the outside diameter of the washers. Ensure the cable has not rotated during tightening.

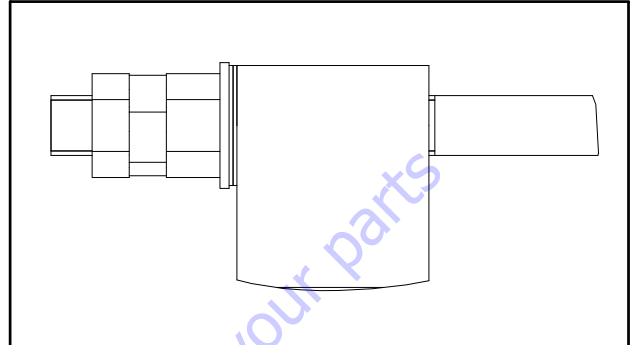

6. Tighten the first jam nut against the retaining nut to keep the nut from loosening. Tighten the remaining jam nut against the first jam nut.
7. Torque the nuts and bolts securing the brackets to 15 ft.lbs. (20 Nm).

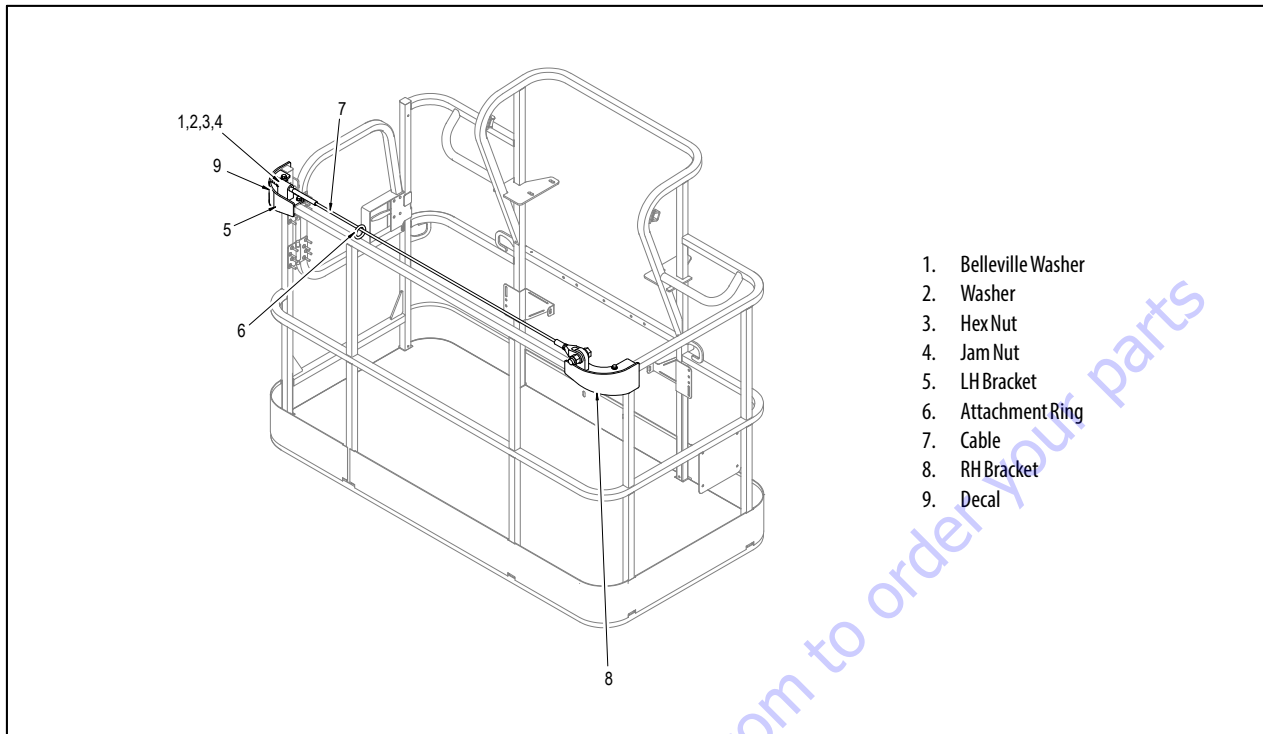


Figure 4-28. Bolt-On External Fall Arrest System

Go to Discount-Equipment.com to order your parts



## SECTION 5. BASIC HYDRAULICS INFORMATION & SCHEMATICS

### 5.1 LUBRICATING O-RINGS IN THE HYDRAULIC SYSTEM


When assembling connectors in the hydraulic that use o-ring fittings, it is necessary to lubricate all fittings with hydraulic oil prior to assembly. To lubricate the fittings, use one of the following procedures.

**NOTE:** All O-ring fittings must be pre-lubricated with hydraulic oil prior to assembly.

#### Cup and Brush

The following is needed to correctly oil the o-ring in this manner:

- A small container for hydraulic oil
- Small paint brush

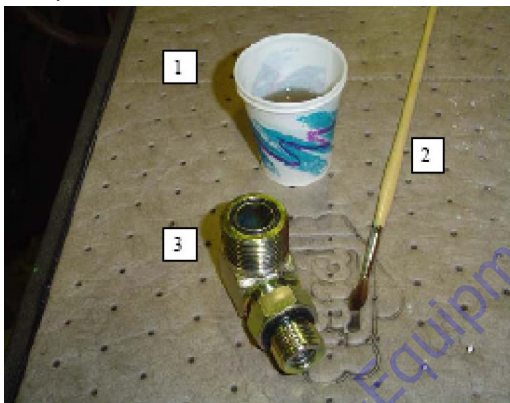

1. Hold the fitting in one hand while using the brush with the other hand to dip into the container. Remove excess hydraulic oil from the brush so an even film of oil is applied on the o-ring.



2. Holding the fitting over the hydraulic oil container, brush an even film of oil around the entire o-ring in the fitting, making sure the entire o-ring is completely saturated.



3. Turn the o-ring on the other side of the fitting and repeat the previous step, ensuring the entire o-ring is coated with hydraulic oil.



### Dip Method

**NOTE:** This method works best with Face Seal o-rings, but will work for all o-ring fitting types.

The following is needed to correctly oil the o-ring in this manner:

- A small leak proof container
  - Sponge cut to fit inside the container
  - A small amount of hydraulic oil to saturate the sponge.
1. Place the sponge inside the container and add hydraulic oil to the sponge until it is fully saturated.
  2. Dip the fitting into the sponge using firm pressure. Upon lifting the fitting, a small droplet will form and drip from the bottom of the fitting. This should signify an even coating of oil on the fitting.



3. O-ring Boss type fittings will require more pressure in able to immerse more of the fitting into the saturated sponge. This will also cause more oil to be dispersed from the sponge.



### Spray Method

This method requires a pump or trigger spray bottle.

1. Fill the spray bottle with hydraulic oil.
2. Hold the fitting over a suitable catch can.
3. Spray the entire o-ring surface with a medium coat of oil.



### Brush-on Method

This method requires a sealed bottle brush.

1. Fill the bottle with hydraulic oil.
2. Using slight pressure to the body of the spray bottle, invert the bottle so the brush end is in the downward position.
3. Brush hydraulic oil on the entire o-ring, applying an even coat of oil.



## 5.2 HYDRAULIC CONNECTION ASSEMBLY AND TORQUE SPECIFICATION

### Tapered Thread Types

NPTF = national tapered fuel (Dry Seal) per SAE J476/J512

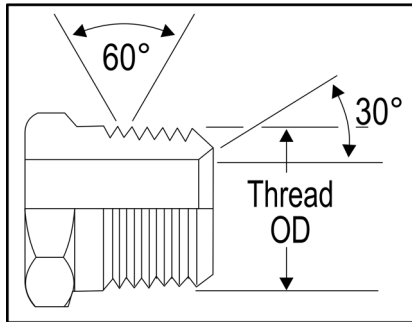


Figure 5-1. NPTF Thread

BSPT = British standard pipe tapered per ISO7-1

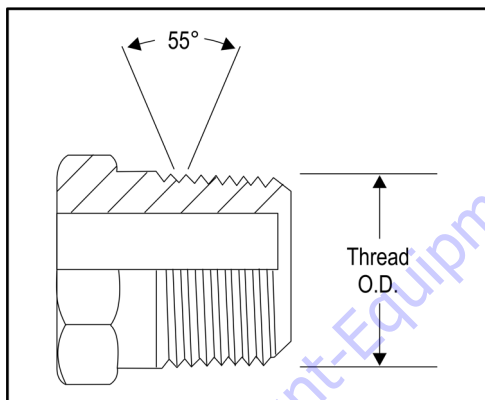


Figure 5-2. BSPT Thread

### Straight Thread Types, Tube and Hose Connections

JIC = 37° flare per SAE J514

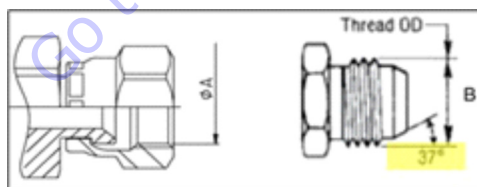


Figure 5-3. JIC Thread

SAE = 45° flare per SAE J512

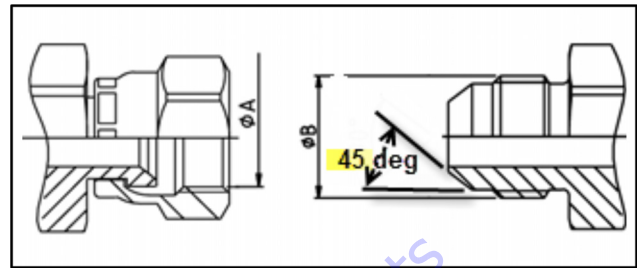


Figure 5-4. SAE Thread

ORFS = o-ring face seal per SAE J1453

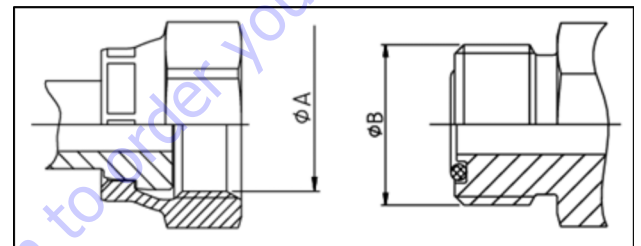


Figure 5-5. ORFS Thread

MBTL = metric flareless bite type fitting, pressure rating L (medium) per ISO 8434, DIN 2353

MBTS = metric flareless bite type fitting, pressure rating S (high) per ISO 8434, DIN 2353

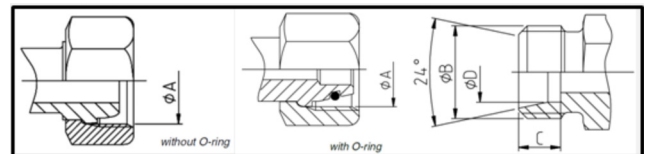


Figure 5-6. MTBL-MBTS Thread

BH = bulkhead connection – JIC, ORFS, MBTL, or MBTS types

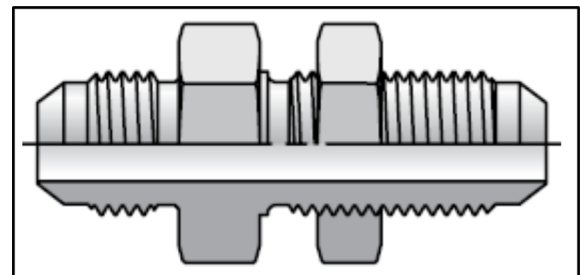


Figure 5-7. Bulkhead Thread

### Straight Thread Types, Port Connections

ORB = o-ring boss per SAE J1926, ISO 11926

MPP = metric pipe parallel o-ring boss per SAE J2244, ISO 6149, DIN 3852

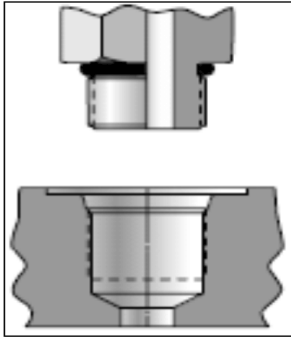


Figure 5-8. ORB-MPP Thread

MFF = metric flat face port per ISO 9974-1

BSPB = British standard parallel pipe per ISO 1179-1, DIN 3852-2

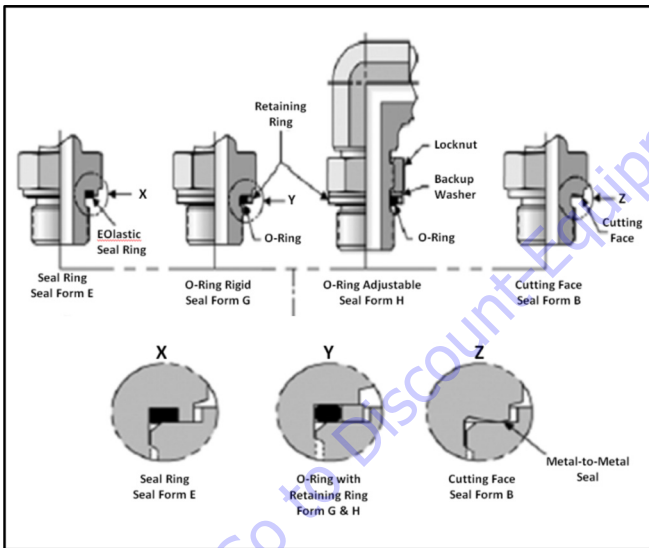


Figure 5-9. MFF-BSPB Thread

### Flange Connection Types

FL61 = code 61 flange per SAE J518, ISO 6162

FL62 = code 62 flange per SAE J518, ISO 6162

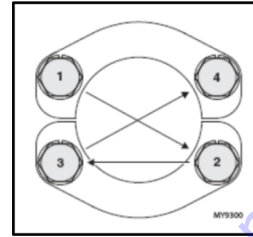


Figure 5-10. ORB-MPP Thread

### Tightening Methods

Torque = Application of a twisting force to the applicable connection by use of a precise measurement instrument (i.e. torque wrench).

Finger Tight = The point where the connector will no longer thread onto the mating part when tightened by hand or fingers. Finger Tight is relative to user strength and will have some variance. The average torque applied by this method is 3 ft-lbs [4 N-m] Also referred to as 'Hand Tight.'

TFFT = Turns From Finger Tight; Application of a preload to a connection by first tightening the connection by hand (fingers) and applying an additional rotation counted by a defined number of turns by use of a tool.

FFWR = Flats from Wrench Resistance; Application of a preload to a connection by tightening to the point of initial wrench resistance and turning the nut a described number of 'flats'. A 'flat' is one side of the hexagonal tube nut and equates to 1/6 of a turn. Also referred to as the 'Flats Method.'



## Assembly And Torque Specifications

Prior to selecting the appropriate torque from the tables within this section, it is necessary to properly identify the connector being installed. Refer to the Figures and Tables in this section.

### GENERAL TUBE TYPE FITTING ASSEMBLY INSTRUCTIONS

1. Take precautions to ensure that fittings and mating components are not damaged during storage, handling or assembly. Nicks and scratches in sealing surfaces can create a path for leaks which could lead to component contamination and/or failure.
2. When making a connection to tubing, compression or flare, inspect the tube in the area of the fitting attachment to ensure that the tube has not been damaged.
3. The assembly process is one of the leading causes for contamination in air and hydraulic systems. Contamination can prevent proper tightening of fittings and adapters from occurring.
  - a. Avoid using dirty or oily rags when handling fittings.
  - b. If fittings are disassembled, they should be cleaned and inspected for damage. Replace fittings as necessary before re-installing.
  - c. Sealing compounds should be applied where specified; however, care should be taken not to introduce sealant into the system.
  - d. Avoid applying sealant to the area of the threads where the sealant will be forced into the system. This is generally the first two threads of a fitting.
  - e. Sealant should only be applied to the male threads.
  - f. Straight thread fittings do not require sealants. O-rings or washers are provided for sealing.
  - g. When replacing or installing an O-ring, care is to be taken while transferring the O-ring over the threads as it may become nicked or torn. When replacing an O-ring on a fitting, the use of a thread protector is recommended.
  - h. When installing fittings with O-rings, lubrication shall be used to prevent scuffing or tearing of the O-ring. See O-ring Installation (Replacement) in this section.
4. Take care to identify the material of parts to apply the correct torque values.
  - a. Verify the material designation in the table headings.
  - b. If specifications are given only for steel fittings and components, the values for alternate materials shall be as follows: Aluminum and Brass- reduce steel values by 35%; Stainless Steel- Use the main limit for steel.
5. To achieve the specified torque, the torque wrench is to be held perpendicular to the axis of rotation.
6. Refer to the appropriate section in this manual for more specific instructions and procedures for each type of fitting connection

**Assembly Instructions for American Standard Pipe Thread Tapered (NPTF) Connections.**

1. Inspect components to ensure male and female port threads are free of rust, splits, dirt, foreign matter, or burrs.
2. Apply a suitable thread sealant, such as Loctite 567, to the male pipe threads if not already applied. Ensure the first 1 to 2 threads are uncovered to prevent system contamination.
3. Assemble connection hand tight.
4. Mark fittings, male and female.

**⚠ CAUTION**

**OVER TIGHTENING MAY CAUSE DEFORMATION OF THE PIPE FITTING AND DAMAGE TO THE JOINING FITTING, FLANGE OR COMPONENT MAY OCCUR.**


**NEVER BACK OFF (LOOSEN) PIPE THREADED CONNECTORS TO ACHIEVE ALIGNMENT. MEET THE MINIMUM REQUIRED TURNS AND USE THE LAST TURN FOR ALIGNMENT.**

5. Rotate male fitting the number of turns per Table 5-1, NPTF Pipe Thread. See FFWR and TFFT Methods for TFFT procedure requirements.

**NOTE:** TFFT values provided in Table 5-1, NPTF Pipe Thread are applicable for the following material configurations:

- STEEL fittings with STEEL mating components
- STEEL fittings with ALUMINUM or BRASS mating components
- ALUMINUM or BRASS fittings with STEEL mating components
- ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.

**Table 5-1. NPTF Pipe Thread**

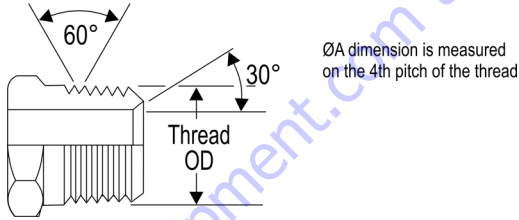

TYPE/FITTING IDENTIFICATION					Turns From Finger Tight (TFFT)**
Material	Dash Size	Thread Size	ØA*		
		(UNF)	(in)	(mm)	
STEEL, ALUMINUM, OR BRASS FITTINGS WITH STEEL, ALUMINUM, OR BRASS MATING COMPONENTS	2	1/8-27	0.40	10.24	2 to 3
	4	1/4-18	0.54	13.61	2 to 3
	6	3/8-18	0.67	17.05	2 to 3
	8	1/2-14	0.84	21.22	2 to 3
	12	3/4-14	1.05	26.56	2 to 3
	16	1-11 1/2	1.31	33.22	1.5 to 2.5
	20	1 1/4-11 1/2	1.65	41.98	1.5 to 2.5
	24	1 1/2-11 1/2	1.89	48.05	1.5 to 2.5
	32	2-11 1/2	2.37	60.09	1.5 to 2.5

\* ØA thread dimension for reference only.

\*\* See FFWR and TFFT Methods subsection for TFFT procedure requirements.

### Assembly Instructions for British Standard Pipe Thread Tapered (BSPT) Connections

1. Inspect components to ensure male and female port threads are free of rust, splits, dirt, foreign matter, or burrs.
2. Apply a suitable thread sealant, such as Loctite 567, to the male pipe threads if not already applied. Ensure the first 1 to 2 threads are uncovered to prevent system contamination.
3. Assemble connection hand tight.
4. Mark fittings, male and female.

**⚠ CAUTION**

**OVER TIGHTENING MAY CAUSE DEFORMATION OF THE PIPE FITTING AND DAMAGE TO THE JOINING FITTING, FLANGE OR COMPONENT MAY OCCUR.**

**NEVER BACK OFF (LOOSEN) PIPE THREADED CONNECTORS**


**TO ACHIEVE ALIGNMENT. MEET THE MINIMUM REQUIRED TURNS AND USE THE LAST TURN FOR ALIGNMENT.**

5. Rotate male fitting the number of turns per Table 5-2, BSPT Pipe Thread. See FFWR and TFFT Methods for TFFT procedure requirements.

**NOTE:** TFFT values provided in Table 5-2, BSPT Pipe Thread are applicable for the following material configurations:

- STEEL fittings with STEEL mating components
- STEEL fittings with ALUMINUM or BRASS mating components
- ALUMINUM or BRASS fittings with STEEL mating components
- ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.

Table 5-2. BSPT Pipe Thread

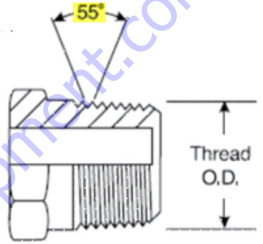

TYPE/FITTING IDENTIFICATION					Turns From Finger Tight (TFFT)**
MATERIAL	Dash Size	Thread Size	ØA*		
		(BSPT)	(in)	(mm)	
STEEL, ALUMINUM, OR BRASS FITTINGS WITH STEEL, ALUMINUM, OR BRASS MATING COMPONENTS	2	1/8-28	0.38	9.73	2 to 3
	4	1/4-19	0.52	13.16	2 to 3
	6	3/8-19	0.66	16.66	2 to 3
	8	1/2-14	0.83	20.96	2 to 3
	12	3/4-14	1.04	26.44	2 to 3
	16	1-11	1.31	33.25	1.5 to 2.5
	20	1 1/4-11	1.65	41.91	1.5 to 2.5
	24	1 1/2-11	1.88	47.80	1.5 to 2.5
32	2-11	2.35	59.61	1.5 to 2.5	

\* ØA thread dimension for reference only.  
 \*\* See Appendix B for TFFT procedure requirements.

### Assembly Instructions for 37° (JIC) Flare Fittings

1. Inspect the flare for obvious visual squareness and concentricity issues with the tube OD. Ensure surface is smooth, free of rust, weld and brazing splatter, splits, dirt, foreign matter, or burrs. If necessary replace fitting or adapter.

**⚠ CAUTION**

**DO NOT FORCE A MISALIGNED OR SHORT HOSE/TUBE INTO ALIGNMENT. IT PUTS UNDESIRABLE STRAIN ONTO THE JOINT EVENTUALLY LEADING TO LEAKAGE.**

2. Align tube to fitting and start threads by hand.

**⚠ CAUTION**

**THE TORQUE METHOD SHOULD NOT BE USED ON LUBRICATED OR OILY FITTINGS. NO LUBRICATION OR SEALANT IS REQUIRED. THE LUBRICATION WOULD CAUSE INCREASED CLAMPING FORCE AND CAUSE FITTING DAMAGE.**


3. Torque assembly to value listed in Table Table 5-3, 37° Flare (JIC)Thread - Steel or Table 5-4, 37° Flare (JIC)Thread - Aluminum/Brass while using the Double Wrench Method per Double Wrench Method. Refer to FFWR and TFFT Methods for procedure requirements if using the FFWR method.

**NOTE:** *Torque values provided in Table Table 5-3, 37° Flare (JIC)Thread - Steel and Table 5-4, 37° Flare (JIC)Thread - Aluminum/Brass are segregated based on the material configuration of the connection.*

ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS' indicate either the following material configurations:

- STEEL fittings with ALUMINUM or BRASS mating components
- ALUMINUM or BRASS fittings with STEEL mating components
- ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.

Table 5-3. 37° Flare (JIC) Thread - Steel

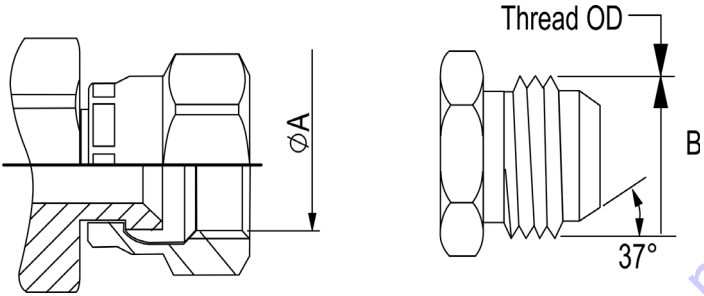


Type/Fitting Identification							Torque						Flats from Wrench Resistance (F.F.W.R)**
MATERIAL	Dash Size	Thread Size	ØA*		ØB*		[Ft-Lb]			[N-m]			
		(UNF)	(in)	(mm)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max	
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.28	7.00	0.31	7.75	6	7	7	8	9	10	--
	3	3/8-24	0.34	8.60	0.37	9.50	8	9	10	11	12	14	--
	4	7/16-20	0.39	10.00	0.44	11.10	13	14	14	18	19	19	1-1/2 to 1-3/4
	5	1/2-20	0.46	11.60	0.50	12.70	14	15	15	19	20	21	1 to 1-1/2
	6	9/16-18	0.51	13.00	0.56	14.30	22	23	24	30	31	33	1 to 1-1/2
	8	3/4-16	0.69	17.60	0.75	19.10	42	44	46	57	60	63	1-1/2 to 1-3/4
	10	7/8-14	0.81	20.50	0.87	22.20	60	63	66	81	85	89	1 to 1-1/2
	12	1 1/16-12	0.97	24.60	1.06	27.00	84	88	92	114	120	125	1 to 1-1/2
	14	1 3/16-12	1.11	28.30	1.19	30.10	100	105	110	136	142	149	1 to 1-1/2
	16	1 5/16-12	1.23	31.30	1.31	33.30	118	124	130	160	168	176	3/4 to 1
	20	1 5/8-12	1.54	39.20	1.63	41.30	168	176	185	228	239	251	3/4 to 1
	24	1 7/8-12	1.80	45.60	1.87	47.60	195	205	215	264	278	291	3/4 to 1
32	2 1/2-12	2.42	61.50	2.50	63.50	265	278	292	359	377	395	3/4 to 1	

\* ØA and ØB thread dimensions for reference only.

\*\* See Appendix B for FFWR procedure requirements.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-4. 37° Flare (JIC) Thread - Aluminum/Brass**

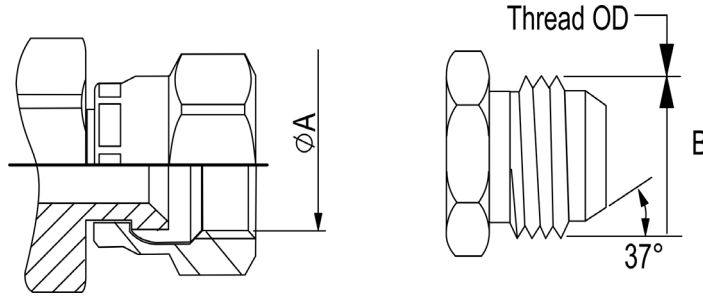

TYPE/FITTING IDENTIFICATION							Torque						Flats from Wrench Resistance (F.F.W.R)**
MATERIAL	Dash Size	Thread Size (UNF)	ØA*		ØB*		[Ft-Lb]			[N-m]			
			(in)	(mm)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max	
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.28	7.00	0.31	7.75	4	4	5	5	6	7	--
	3	3/8-24	0.34	8.60	0.37	9.50	5	6	7	7	8	9	--
	4	7/16-20	0.39	10.00	0.44	11.10	8	9	9	11	12	13	1-1/2 to 1-3/4
	5	1/2-20	0.46	11.60	0.50	12.70	9	10	10	12	13	14	1 to 1-1/2
	6	9/16-18	0.51	13.00	0.56	14.30	14	15	16	19	20	21	1 to 1-1/2
	8	3/4-16	0.69	17.60	0.75	19.10	27	29	30	37	39	41	1-1/2 to 1-3/4
	10	7/8-14	0.81	20.50	0.87	22.20	39	41	43	53	56	58	1 to 1-1/2
	12	11/16-12	0.97	24.60	1.06	27.00	55	57	60	74	78	81	1 to 1-1/2
	14	13/16-12	1.11	28.30	1.19	30.10	65	68	72	88	93	97	1 to 1-1/2
	16	15/16-12	1.23	31.30	1.31	33.30	77	81	84	104	109	114	3/4 to 1
	20	15/8-12	1.54	39.20	1.63	41.30	109	115	120	148	155	163	3/4 to 1
	24	17/8-12	1.80	45.60	1.87	47.60	127	133	139	172	180	189	3/4 to 1
32	2 1/2-12	2.42	61.50	2.50	63.50	172	181	189	234	245	257	3/4 to 1	

\* ØA and ØB thread dimensions for reference only.

\*\* See FFWR and TFFT Methods for FFWR procedure requirements.

**Assembly Instructions for 45° SAE Flare Fittings**

1. Inspect the flare for obvious visual squareness and concentricity issues with the tube OD. Ensure surface is smooth, free of rust, weld and brazing splatter, splits, dirt, foreign matter, or burrs. If necessary replace fitting or adapter.

**⚠ CAUTION**

**DO NOT FORCE A MISALIGNED OR SHORT HOSE/TUBE INTO ALIGNMENT. IT PUTS UNDESIRABLE STRAIN ONTO THE JOINT EVENTUALLY LEADING TO LEAKAGE.**

2. Align tube to fitting.
3. Tighten fitting by hand until hand tight.

**⚠ CAUTION**

**THE TORQUE METHOD SHOULD NOT BE USED ON LUBRICATED OR OILY FITTINGS. NO LUBRICATION OR SEALANT IS REQUIRED. THE LUBRICATION WOULD CAUSE INCREASED CLAMPING FORCE AND CAUSE FITTING DAMAGE.**

Torque fitting to value listed in Table 5-5, 45° Flare (SAE) - Steel and Table 5-6, 45° Flare (SAE) - Aluminum/Brass while using the Double Wrench Method outlined in this section. Refer to FFWR and TFFT Methods for procedure requirements if using the TFFT method.


**NOTE:** *Torque values provided in Table 5-5, 45° Flare (SAE) - Steel and Table 5-6, 45° Flare (SAE) - Aluminum/Brass are segregated based on the material configuration of the connection.*

ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS' indicate either the following material configurations:

- STEEL fittings with ALUMINUM or BRASS mating components
- ALUMINUM or BRASS fittings with STEEL mating components
- ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**


**Table 5-5. 45° Flare (SAE) - Steel**

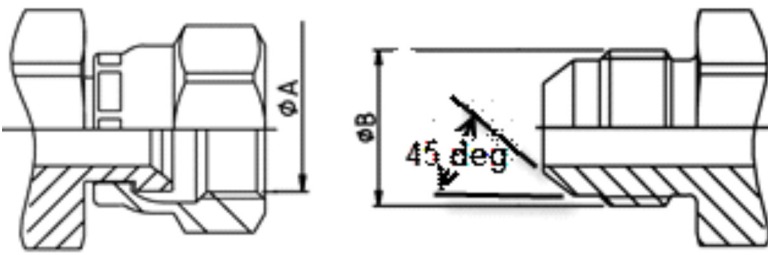

TYPE/FITTING IDENTIFICATION							Torque					
MATERIAL	Dash Size	Thread Size	ØA*		ØB*		[Ft-Lb]			[N-m]		
		(UNF)	(in)	(mm)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	4	7/16-20	0.39	9.90	0.44	11.10	13	14	14	18	19	19
	6	5/8-18	0.56	14.30	0.63	15.90	22	23	24	30	31	33
	8	3/4-16	0.69	17.50	0.75	19.10	42	44	46	57	60	62
	10	7/8-14	0.81	20.60	0.87	22.20	60	63	66	81	85	89
	12	1 1/16-14	0.98	25.00	1.06	27.00	84	88	92	114	119	125

\* ØA and ØB thread dimensions for reference only.  
 \*\* See FFWR and TFFT Methods for FFWR procedure requirements.

**Table 5-6. 45° Flare (SAE) - Aluminum/Brass**

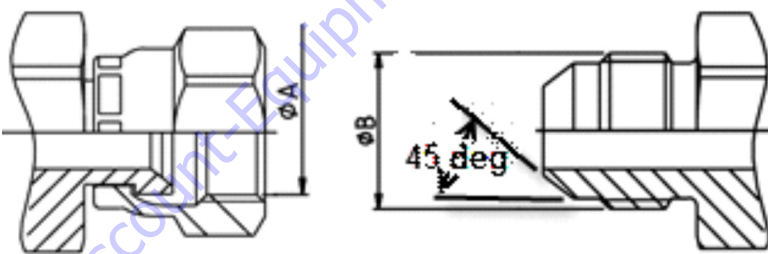

TYPE/FITTING IDENTIFICATION							Torque					
MATERIAL	Dash Size	Thread Size	ØA*		ØB*		[Ft-Lb]			[N-m]		
		(UNF)	(in)	(mm)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	4	7/16-20	0.39	9.90	0.44	11.10	8	9	9	11	12	12
	6	5/8-18	0.56	14.30	0.63	15.90	14	15	15	19	20	20
	8	3/4-16	0.69	17.50	0.75	19.10	27	29	30	37	39	41
	10	7/8-14	0.81	20.60	0.87	22.20	39	41	43	53	56	58
	12	1 1/16-14	0.98	25.00	1.06	27.00	55	58	61	75	79	83

\* ØA and ØB thread dimensions for reference only.  
 \*\* See FFWR and TFFT Methods for TFFT procedure requirements.



### Assembly Instructions for O-Ring Face Seal (ORFS) Fittings

1. Ensure proper O-ring is installed. If O-ring is missing install per O-ring Installation (Replacement).
2. Ensure surface is smooth, free of rust, weld and brazing splatter, splits, dirt, foreign matter, or burrs. If necessary replace fitting or adapter.

**⚠ CAUTION**

**CARE TO BE TAKEN WHEN LUBRICATING O-RING. AVOID ADDING OIL TO THE THREADED CONNECTION OF THE FITTING. THE LUBRICATION WOULD CAUSE INCREASED CLAMPING FORCE AND CAUSE FITTING DAMAGE.**

3. Pre-lubricate the O-ring with Hydraulic Oil.
4. Place the tube assembly against the fitting body so that the flat face comes in contact with the O-ring. Hand thread the nut onto the fitting body.


5. Torque nut to value listed in Table 5-7, O-ring Face Seal (ORFS) - Steel or Table 5-8, O-ring Face Seal (ORFS) - Aluminum/Brass while using the Double Wrench Method. Refer to FFWR and TFFT Methods for procedure requirements if using the FFWR method.

**NOTE:** Torque values provided in Table 5-7, O-ring Face Seal (ORFS) - Steel and Table 5-8, O-ring Face Seal (ORFS) - Aluminum/Brass are segregated based on the material configuration of the connection.

ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS' indicate either the following material configurations:

- STEEL fittings with ALUMINUM or BRASS mating components
- ALUMINUM or BRASS fittings with STEEL mating components
- ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components

**Table 5-7. O-ring Face Seal (ORFS) - Steel**

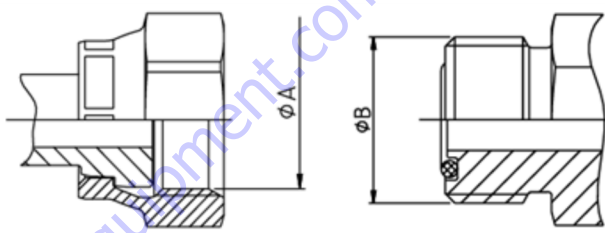


TYPE/FITTING IDENTIFICATION							Torque						Flats from Wrench Resistance (F.F.W.R)**	
MATERIAL	Dash Size	Thread Size (UNF)	ØA*		ØB*		[Ft-Lb]			[N-m]			Tube Nuts	Swivel & Hose Ends
			(in)	(mm)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max		
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	4	9/16-18	0.51	13.00	0.56	14.20	18	19	20	25	26	27	1/4 to 1/2	1/2 to 3/4
	6	11/16-16	0.63	15.90	0.69	17.50	30	32	33	40	43	45	1/4 to 1/2	1/2 to 3/4
	8	13/16-16	0.75	19.10	0.81	20.60	40	42	44	55	57	60	1/4 to 1/2	1/2 to 3/4
	10	1-14	0.94	23.80	1.00	25.40	60	63	66	81	85	89	1/4 to 1/2	1/2 to 3/4
	12	13/16-12	1.11	28.20	1.19	30.10	85	90	94	115	122	127	1/4 to 1/2	1/2 to 3/4
	16	17/16-12	1.34	34.15	1.44	36.50	110	116	121	149	157	164	1/4 to 1/2	1/2 to 3/4
	20	1 1/16-12	1.59	40.50	1.69	42.90	150	158	165	203	214	224	1/4 to 1/2	1/2 to 3/4
	24	2-12	1.92	48.80	2.00	50.80	230	242	253	312	328	343	1/4 to 1/2	1/2 to 3/4
	32	2 1/2-12	2.43	61.67	2.50	63.50	375	394	413	508	534	560	1/4 to 1/2	1/2 to 3/4

\* ØA and ØB thread dimensions for reference only.

\*\* See FFWR and TFFT Methods for FFWR procedure requirements.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-8. O-ring Face Seal (ORFS) - Aluminum/Brass**

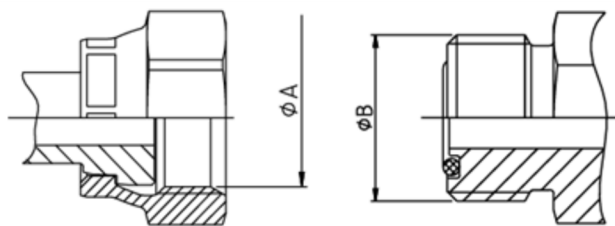

TYPE/FITTING IDENTIFICATION							Torque						Flats from Wrench Resistance (F.F.W.R)**	
MATERIAL	Dash Size	Thread Size	ØA*		ØB*		[Ft-Lb]			[N-m]			Tube Nuts	Swivel & Hose Ends
		(UNF)	(in)	(mm)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max		
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	4	9/16-18	0.51	13.00	0.56	14.20	12	13	13	16	18	18	1/4 to 1/2	1/2 to 3/4
	6	11/16-16	0.63	15.90	0.69	17.50	20	21	22	27	28	30	1/4 to 1/2	1/2 to 3/4
	8	13/16-16	0.75	19.10	0.81	20.60	26	28	29	35	38	39	1/4 to 1/2	1/2 to 3/4
	10	1-14	0.94	23.80	1.00	25.40	39	41	43	53	56	58	1/4 to 1/2	1/2 to 3/4
	12	13/16-12	1.11	28.20	1.19	30.10	55	58	61	75	79	83	1/4 to 1/2	1/2 to 3/4
	16	17/16-12	1.34	34.15	1.44	36.50	72	76	79	98	103	107	1/4 to 1/2	1/2 to 3/4
	20	1 11/16-12	1.59	40.50	1.69	42.90	98	103	108	133	140	146	1/4 to 1/2	1/2 to 3/4
	24	2-12	1.92	48.80	2.00	50.80	12	13	13	16	18	18	1/4 to 1/2	1/2 to 3/4
	32	2 1/2-12	2.43	61.67	2.50	63.50	20	21	22	27	28	30	1/4 to 1/2	1/2 to 3/4

\* ØA and ØB thread dimensions for reference only.

\*\* See FFWR and TFFT Methods for FFWR procedure requirements.

## Assembly Instructions for DIN 24° Flare Bite Type Fittings (MBTL and MBTS)

**⚠ CAUTION**

**A NON-SQUARE TUBE END CAN CAUSE IMPROPERLY SEATED FITTINGS AND LEAKAGE.**

1. Inspect the components to ensure free of contamination, external damage, rust, splits, dirt, foreign matter, or burrs. Ensure tube end is visibly square. If necessary replace fitting or tube.
2. Lubricate thread and cone of fitting body or hardened pre-assembly tool, as well as the progressive ring and nut threads.
3. Slip nut and progressive ring over tube, assuring that they are in the proper orientation.
4. Push the tube end into the coupling body.
5. Slide collet into position and tighten until finger tight. Mark nut and tube in the finger-tight position. Tighten nut to the number of flats listed in Table Table 5-9, DIN 24°Cone (MBTL & MBTS) while using the Double Wrench Method. The tube must not turn with the nut.

Go to Discount-Equipment.com to order your parts

SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

Table 5-9. DIN 24° Cone (MBTL & MBTS)

TYPE/FITTING IDENTIFICATION								DIN 24° CONE FLARELESS BITE FITTING (With or Without O-Ring)									
MATERIAL	TYPE	Tube O.D.	Thread M Size	ØA*	ØB*	C*	ØD*	Torque						Flats from Wrench Resistance (F.F.W.R)**			
		(mm)	(Metric)	(mm)	(mm)	(mm)	(mm)	[Ft-Lb]			[N-m]						
								Min	Nom	Max	Min	Nom	Max				
STEEL FITTINGS WITH STEEL MATING COMPONENTS	DIN 24° CONE FLARELESS BITE (MBTL) FITTING	6	M12x1.5	10.50	12.00	7.00	6.20	FFWR is the recommended method of fitting assembly.  Torque values are application specific due to variability in the fitting supplier, coating, lubrication, and other physical characteristics of the connection.  Refer to the specific procedure in the						1.5 to 1.75			
		8	M14x1.5	12.50	14.00	7.00	8.20							1.5 to 1.75			
		10	M16x1.5	14.50	16.00	7.00	10.20							1.5 to 1.75			
		12	M18x1.5	16.50	18.00	7.00	12.20							1.5 to 1.75			
		15	M22x1.5	20.50	22.00	7.00	15.20							1.5 to 1.75			
		18	M26x1.5	24.50	26.00	7.50	18.20							1.5 to 1.75			
		22	M30x2	27.90	30.00	7.50	22.20							1.5 to 1.75			
		28	M36x2	33.90	36.00	7.50	28.20							1.5 to 1.75			
		35	M45x2	42.90	45.00	10.50	35.30							1.5 to 1.75			
	42	M52x2	49.90	52.00	11.00	42.30	1.5 to 1.75										
	DIN 24° CONE FLARELESS BITE (MBTS) FITTING	TYPE	Tube O.D.	Thread M Size	ØA*	ØB*	C*	ØD*	Torque						Flats from Wrench Resistance (F.F.W.R)**		
			(mm)	(Metric)	(mm)	(mm)	(mm)	(mm)	[Ft-Lb]			[N-m]					
									Min	Nom	Max	Min	Nom	Max			
					6	M14x1.5	12.50	14.00	7.00	6.20	FFWR is the recommended method of fitting assembly.  Torque values are application specific due to variability in the fitting supplier, coating, lubrication, and other physical characteristics of the connection.  Refer to the specific procedure in the						1.5 to 1.75
					8	M16x1.5	14.50	16.00	7.00	8.20							1.5 to 1.75
					10	M18x1.5	16.50	18.00	7.50	10.20							1.5 to 1.75
					12	M20x1.5	18.50	20.00	7.50	12.20							1.5 to 1.75
					14	M22x1.5	20.50	22.00	8.00	14.20							1.5 to 1.75
16					M24x1.5	22.50	24.00	8.50	16.20	1.5 to 1.75							
20	M30x2	27.90			30.00	10.50	20.20	1.5 to 1.75									
25	M36x2	33.90			36.00	12.00	25.20	1.5 to 1.75									
30	M42x2	39.90			42.00	13.50	30.20	1.5 to 1.75									
38	M52x2	49.90	52.00	16.00	38.30	1.5 to 1.75											

\* ØA, ØB, C, & ØD thread dimensions for reference only.

\*\* See Appendix B for FFWR procedure requirements.


### **Assembly Instructions for Bulkhead (BH) Fittings**

1. Ensure threads and surface are free of rust, weld and brazing splatter, splits, burrs or other foreign material. If necessary replace fitting or adapter.
2. Remove the locknut from the bulkhead assembly.
3. Insert the bulkhead side of the fitting into the panel or bulkhead bracket opening.
4. Hand thread the locknut onto the bulkhead end of the fitting body.
5. Torque nut onto fitting per Table 5-10 and Table 5-11 while using the Double Wrench Method.

Go to [Discount-Equipment.com](http://Discount-Equipment.com) to order your parts


SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

Table 5-10. Bulkhead Fittings (BH) - INCH

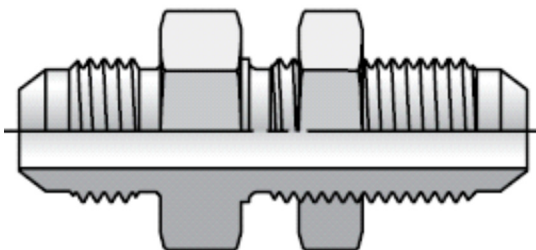

TYPE/FITTING IDENTIFICATION				FASTENING JAM NUT for Bulkhead Connectors						
MATERIAL	TYPE	Dash Size	Thread Size	Torque						
				[Ft-Lb]			[N-m]			
			(UNF)	Min	Nom	Max	Min	Nom	Max	
STEEL FITTINGS	O-RING FACE SEAL (ORFS) BULKHEAD FITTING	4	9/16-18	15	16	17	20	22	23	
		6	11/16-16	25	27	28	34	37	38	
		8	13/16-16	55	58	61	75	79	83	
		10	1-14	85	90	94	115	122	127	
		12	13/16-12	135	142	149	183	193	202	
		14	15/16-12	170	179	187	230	243	254	
		16	17/16-12	200	210	220	271	285	298	
		20	111/16-12	245	258	270	332	350	366	
	24	2-12	270	284	297	366	385	403		
	37° FLARE (JIC) BULKHEAD FITTING	TYPE	Dash Size	Thread Size	Torque					
					[Ft-Lb]			[N-m]		
		(UNF)	Min	Nom	Max	Min	Nom	Max		
		3	3/8-24	8	9	9	11	12	12	
		4	7/16-20	13	14	14	18	19	19	
		5	1/2-20	20	21	22	27	28	30	
		6	9/16-18	25	27	28	34	37	38	
		8	3/4-16	50	53	55	68	72	75	
		10	7/8-14	85	90	94	115	122	127	
		12	11/16-12	135	142	149	183	193	202	
		14	13/16-12	170	179	187	230	243	254	
16		15/16-12	200	210	220	271	285	298		
20	15/8-12	245	258	270	332	350	366			
24	17/8-12	270	284	297	366	385	403			
32	21/2-12	310	326	341	420	442	462			

Table 5-11. Bulkhead Fittings (BH) - METRIC

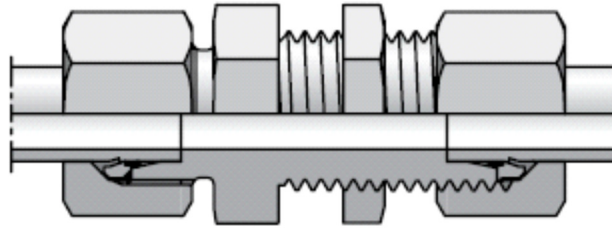

TYPE/FITTING IDENTIFICATION				FASTENING JAM NUT for Bulkhead Connectors					
MATERIAL	TYPE	Connecting Tube O.D.	Thread M Size	Torque					
				[Ft-Lb]			[N-m]		
		(mm)	(metric)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS	DIN 24° CONE FLARELESS BITE (MBTL) BULKHEAD FITTING	6	M12x1.5	14	15	16	19	20	22
		8	M14x1.5	17	18	19	23	24	26
		10	M16x1.5	22	23	24	30	31	33
		12	M18x1.5	35	37	39	47	50	53
		15	M22x1.5	44	47	50	60	64	68
		18	M26x1.5	70	75	80	95	102	108
		22	M30x2	115	120	125	156	163	169
		28	M36x2	150	157	164	203	213	222
		35	M45x2	155	162	169	210	220	229
		42	M52x2	220	230	240	298	312	325
	DIN 24° CONE FLARELESS BITE (MBTS) BULKHEAD FITTING	Connecting Tube O.D.	Thread M Size	Torque					
		(mm)	(metric)	[Ft-Lb]			[N-m]		
				Min	Nom	Max	Min	Nom	Max
		6	M14x1.5	17	15	16	23	20	22
		8	M16x1.5	22	18	19	30	24	26
		10	M18x1.5	35	23	24	47	31	33
		12	M20x1.5	40	35	37	54	47	50
		14	M22x1.5	44	47	50	60	64	68
		16	M24x1.5	70	75	80	95	102	108
		20	M30x2	115	120	125	156	163	169
25	M36x2	150	157	164	203	213	222		
30	M42x2	155	162	169	210	220	229		
38	M52x2	220	230	240	298	312	325		

## Assembly Instructions for O-Ring Boss (ORB)

### Fittings

1. Inspect components to ensure that male and female port threads are free of rust, splits, dirt, foreign matter, or burrs.
2. Ensure proper O-ring is installed. If O-ring is missing install per O-ring Installation (Replacement).

**⚠ CAUTION**


**CARE TO BE TAKEN WHEN LUBRICATING O-RING. AVOID ADDING OIL TO THE THREADED CONNECTION OF THE FITTING. THE LUBRICATION WOULD CAUSE INCREASED CLAMPING FORCE AND CAUSE FITTING DAMAGE.**

3. Pre-lubricate the O-ring with Hydraulic Oil.
4. For Non-Adjustable and Plugs, thread the fitting by hand until contact.
5. For Adjustable fittings, refer to Adjustable Stud End Assembly for proper assembly.

6. Torque the fitting or nut to value listed in Table 5-12 thru Table 5-17 while using the Double Wrench Method.
  - a. The table headings identify the straight thread O-ring port and the type on the other side of the fitting. The torque will be applied to the straight thread O-ring port.
  - b. Torque values provided in Table 5-12 thru Table 5-17 are segregated based on the material configuration of the connection. 'ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS' indicate either the following material configurations:
    - STEEL fittings with ALUMINUM or BRASS mating components
    - ALUMINUM or BRASS fittings with STEEL mating components
    - ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.
7. Inspect to ensure the O-ring is not pinched and the washer is seated flat on the counter bore of the port.



Table 5-12. O-ring Boss (ORB) - Table 1 of 6

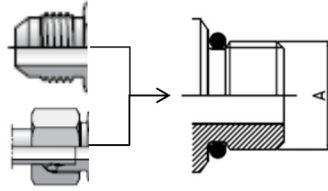


TYPE/FITTING IDENTIFICATION					HEX TYPE PLUGS & STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	(85)	(90)	(94)	10	10	11
	3	3/8-24	0.37	9.52	(155)	(163)	(171)	18	18	19
	4	7/16-20	0.44	11.11	22	23	24	29	31	33
	5	1/2-20	0.50	12.70	23	25	26	32	34	35
	6	9/16-18	0.56	14.28	29	31	32	40	42	43
	8	3/4-16	0.75	19.10	52	55	57	70	75	77
	10	7/8-14	0.87	22.22	85	90	94	115	122	127
	12	1 1/16-12	1.06	27.00	135	142	149	185	193	202
	14	1 3/16-12	1.19	30.10	175	184	193	235	249	262
	16	1 5/16-12	1.31	33.30	200	210	220	270	285	298
	20	1 5/8-12	1.63	41.30	250	263	275	340	357	373
	24	1 7/8-12	1.87	47.60	305	321	336	415	435	456
32	2 1/2-12	2.50	63.50	375	394	413	510	534	560	
TYPE/FITTING IDENTIFICATION					HEX TYPE PLUGS & STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	(55)	(58)	(61)	6	7	7
	3	3/8-24	0.37	9.52	(101)	(106)	(111)	11	12	13
	4	7/16-20	0.44	11.11	14	15	16	19	20	22
	5	1/2-20	0.50	12.70	15	16	17	20	22	23
	6	9/16-18	0.56	14.28	19	20	21	26	27	28
	8	3/4-16	0.75	19.10	34	36	37	46	49	50
	10	7/8-14	0.87	22.22	55	58	61	75	79	83
	12	1 1/16-12	1.06	27.00	88	93	97	119	126	132
	14	1 3/16-12	1.19	30.10	114	120	126	155	163	171
	16	1 5/16-12	1.31	33.30	130	137	143	176	186	194
	20	1 5/8-12	1.63	41.30	163	171	179	221	232	243
	24	1 7/8-12	1.87	47.60	198	208	218	268	282	296
32	2 1/2-12	2.50	63.50	244	256	268	331	347	363	

\* ØA Thread OD dimension for reference only.

\*\* Removal Torque for Zero Leak Gold® Hollow Hex Plugs is significantly higher than install torque, typically 1.5-3.5X install torque.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-13. O-ring Boss (ORB) - Table 2 of 6**

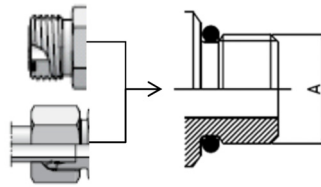

TYPE/FITTING IDENTIFICATION					STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	--	--	--	--	--	--
	3	3/8-24	0.37	9.52	--	--	--	--	--	--
	4	7/16-20	0.44	11.11	26	27	28	35	37	38
	5	1/2-20	0.50	12.70	30	32	33	40	43	45
	6	9/16-18	0.56	14.28	35	37	39	46	50	53
	8	3/4-16	0.75	19.10	60	63	66	80	85	89
	10	7/8-14	0.87	22.22	100	105	110	135	142	149
	12	1 1/16-12	1.06	27.00	135	142	149	185	193	202
	14	1 3/16-12	1.19	30.10	175	184	193	235	249	262
	16	1 5/16-12	1.31	33.30	200	210	220	270	285	298
	20	1 5/8-12	1.63	41.30	250	263	275	340	357	373
	24	1 7/8-12	1.87	47.60	305	321	336	415	435	456
32	2 1/2-12	2.50	63.50	375	394	413	510	534	560	
TYPE/FITTING IDENTIFICATION					STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	--	--	--	--	--	--
	3	3/8-24	0.37	9.52	--	--	--	--	--	--
	4	7/16-20	0.44	11.11	17	18	18	23	24	24
	5	1/2-20	0.50	12.70	20	21	21	27	28	28
	6	9/16-18	0.56	14.28	23	24	24	31	33	33
	8	3/4-16	0.75	19.10	39	41	43	53	56	58
	10	7/8-14	0.87	22.22	65	69	72	88	94	98
	12	1 1/16-12	1.06	27.00	88	93	97	119	126	132
	14	1 3/16-12	1.19	30.10	114	120	126	155	163	171
	16	1 5/16-12	1.31	33.30	130	137	143	176	186	194
	20	1 5/8-12	1.63	41.30	163	171	179	221	232	243
	24	1 7/8-12	1.87	47.60	198	208	218	268	282	296
32	2 1/2-12	2.50	63.50	244	256	268	331	347	363	

\* ØA Thread OD dimension for reference only.

\*\*Removal Torque for Zero Leak Gold® Hollow Hex Plugs is significantly higher than install torque, typically 1.5-3.5X install torque.

Table 5-14. O-ring Boss (ORB) - Table 3 of 6


TYPE/FITTING IDENTIFICATION					ADJUSTABLE STUD END with 37° (JIC) or L series DIN (MBTL) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	(60)	(63)	(66)	7	7	7
	3	3/8-24	0.37	9.52	(100)	(105)	(110)	11	12	12
	4	7/16-20	0.44	11.11	15	16	17	20	22	23
	5	1/2-20	0.50	12.70	21	22	23	28	30	31
	6	9/16-18	0.56	14.28	29	31	32	40	42	43
	8	3/4-16	0.75	19.10	52	55	57	70	75	77
	10	7/8-14	0.87	22.22	85	90	94	115	122	127
	12	1 1/16-12	1.06	27.00	135	142	149	185	193	202
	14	1 3/16-12	1.19	30.10	175	184	193	235	249	262
	16	1 5/16-12	1.31	33.30	200	210	220	270	285	298
	20	1 5/8-12	1.63	41.30	250	263	275	340	357	373
	24	1 7/8-12	1.87	47.60	305	321	336	415	435	456
32	2 1/2-12	2.50	63.50	375	394	413	510	534	560	
TYPE/FITTING IDENTIFICATION					ADJUSTABLE STUD END with 37° (JIC) or L series DIN (MBTL) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	(39)	(41)	(43)	4	5	5
	3	3/8-24	0.37	9.52	(65)	(69)	(72)	7	8	8
	4	7/16-20	0.44	11.11	10	11	11	14	15	15
	5	1/2-20	0.50	12.70	14	15	15	19	20	20
	6	9/16-18	0.56	14.28	19	20	21	26	27	28
	8	3/4-16	0.75	19.10	34	36	37	46	49	50
	10	7/8-14	0.87	22.22	55	58	61	75	79	83
	12	1 1/16-12	1.06	27.00	88	93	97	119	126	132
	14	1 3/16-12	1.19	30.10	114	120	126	155	163	171
	16	1 5/16-12	1.31	33.30	130	137	143	176	186	194
	20	1 5/8-12	1.63	41.30	163	171	179	221	232	243
	24	1 7/8-12	1.87	47.60	198	208	218	268	282	296
32	2 1/2-12	2.50	63.50	244	256	268	331	347	363	

\* ØA Thread OD dimension for reference only.

\*\* Removal Torque for Zero Leak Gold® Hollow Hex Plugs is significantly higher than install torque, typically 1.5-3.5X install torque.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-15. O-ring Boss (ORB) - Table 4 of 6**

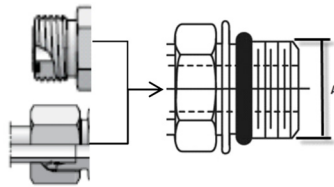


TYPE/FITTING IDENTIFICATION					ADJUSTABLE STUD END with (ORFS) or S series DIN (MBTS) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	--	--	--	--	--	--
	3	3/8-24	0.37	9.52	--	--	--	--	--	--
	4	7/16-20	0.44	11.11	15	16	17	20	22	23
	5	1/2-20	0.50	12.70	30	32	33	40	43	45
	6	9/16-18	0.56	14.28	35	37	39	46	50	53
	8	3/4-16	0.75	19.10	60	63	66	80	85	89
	10	7/8-14	0.87	22.22	100	105	110	135	142	149
	12	1 1/16-12	1.06	27.00	135	142	149	185	193	202
	14	1 3/16-12	1.19	30.10	175	184	193	235	249	262
	16	1 5/16-12	1.31	33.30	200	210	220	270	285	298
	20	1 5/8-12	1.63	41.30	250	263	275	340	357	373
	24	1 7/8-12	1.87	47.60	305	321	336	415	435	456
32	2 1/2-12	2.50	63.50	375	394	413	510	534	560	
TYPE/FITTING IDENTIFICATION					ADJUSTABLE STUD END with (ORFS) or S series DIN (MBTS) opposite end					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	--	--	--	--	--	--
	3	3/8-24	0.37	9.52	--	--	--	--	--	--
	4	7/16-20	0.44	11.11	10	11	11	14	15	15
	5	1/2-20	0.50	12.70	20	21	21	27	28	28
	6	9/16-18	0.56	14.28	23	24	24	31	33	33
	8	3/4-16	0.75	19.10	39	41	43	53	56	58
	10	7/8-14	0.87	22.22	65	69	72	88	94	98
	12	1 1/16-12	1.06	27.00	88	93	97	119	126	132
	14	1 3/16-12	1.19	30.10	114	120	126	155	163	171
	16	1 5/16-12	1.31	33.30	130	137	143	176	186	194
	20	1 5/8-12	1.63	41.30	163	171	179	221	232	243
	24	1 7/8-12	1.87	47.60	198	208	218	268	282	296
32	2 1/2-12	2.50	63.50	244	256	268	331	347	363	

\* ØA Thread OD dimension for reference only.

\*\*Removal Torque for Zero Leak Gold® Hollow Hex Plugs is significantly higher than install torque, typically 1.5-3.5X install torque.

SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

Table 5-16. O-ring Boss (ORB) - Table 5 of 6




TYPE/FITTING IDENTIFICATION					HOLLOW HEX PLUGS					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	(30)	(32)	(33)	3	4	4
	3	3/8-24	0.37	9.52	(55)	(58)	(61)	6	7	7
	4	7/16-20	0.44	11.11	10	11	11	14	15	15
	5	1/2-20	0.50	12.70	14	15	16	19	20	22
	6	9/16-18	0.56	14.28	34	36	38	46	49	52
	8	3/4-16	0.75	19.10	60	63	66	80	85	89
	10	7/8-14	0.87	22.22	100	105	110	135	142	149
	12	1 1/16-12	1.06	27.00	135	142	149	185	193	202
	14	1 3/16-12	1.19	30.10	175	184	193	235	249	262
	16	1 5/16-12	1.31	33.30	200	210	220	270	285	298
	20	1 5/8-12	1.63	41.30	250	263	275	340	357	373
	24	1 7/8-12	1.87	47.60	305	321	336	415	435	456
32	2 1/2-12	2.50	63.50	375	394	413	510	534	560	
TYPE/FITTING IDENTIFICATION					HOLLOW HEX PLUGS					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	(20)	(21)	(21)	2	2	2
	3	3/8-24	0.37	9.52	(36)	(38)	(40)	4	4	5
	4	7/16-20	0.44	11.11	6	7	7	8	9	9
	5	1/2-20	0.50	12.70	9	10	10	12	14	14
	6	9/16-18	0.56	14.28	22	24	25	30	33	34
	8	3/4-16	0.75	19.10	39	41	43	53	56	58
	10	7/8-14	0.87	22.22	65	69	72	88	94	98
	12	1 1/16-12	1.06	27.00	88	93	97	119	126	132
	14	1 3/16-12	1.19	30.10	114	120	126	155	163	171
	16	1 5/16-12	1.31	33.30	130	137	143	176	186	194
	20	1 5/8-12	1.63	41.30	163	171	179	221	232	243
	24	1 7/8-12	1.87	47.60	198	208	218	268	282	296
32	2 1/2-12	2.50	63.50	244	256	268	331	347	363	

\* ØA Thread OD dimension for reference only.

\*\*Removal Torque for Zero Leak Gold® Hollow Hex Plugs is significantly higher than install torque, typically 1.5-3.5X install torque.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-17. O-ring Boss (ORB) - Table 6 of 6**

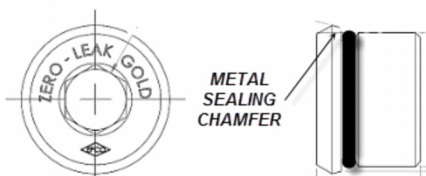

TYPE/FITTING IDENTIFICATION					ZERO LEAK GOLD® HOLLOW HEX PLUGS					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	2	3	4	3	4	5
	3	3/8-24	0.37	9.52	3	4	5	4	5	7
	4	7/16-20	0.44	11.11	7	8	9	9	11	12
	5	1/2-20	0.50	12.70	9	10	11	12	14	15
	6	9/16-18	0.56	14.28	11	12	13	15	16	18
	8	3/4-16	0.75	19.10	28	30	32	38	41	43
	10	7/8-14	0.87	22.22	46	48	50	62	65	68
	12	1 1/16-12	1.06	27.00	51	54	57	69	73	77
	14	1 3/16-12	1.19	30.10	Fitting size greater than -12 not typically specified on JLG applications. Consult specific service procedure if encountered.					
	16	1 5/16-12	1.31	33.30						
	20	1 5/8-12	1.63	41.30						
	24	1 7/8-12	1.87	47.60						
32	2 1/2-12	2.50	63.50							
TYPE/FITTING IDENTIFICATION					ZERO LEAK GOLD® HOLLOW HEX PLUGS					
MATERIAL	Dash Size	Thread Size	ØA*		Torque					
		(UNF)	(in)	(mm)	Min	Nom	Max	Min	Nom	Max
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	2	5/16-24	0.31	7.93	2	3	4	3	4	5
	3	3/8-24	0.37	9.52	3	4	5	4	5	7
	4	7/16-20	0.44	11.11	7	8	9	9	11	12
	5	1/2-20	0.50	12.70	9	10	11	12	14	15
	6	9/16-18	0.56	14.28	11	12	13	15	16	18
	8	3/4-16	0.75	19.10	28	30	32	38	41	43
	10	7/8-14	0.87	22.22	46	48	50	62	65	68
	12	1 1/16-12	1.06	27.00	51	54	57	69	73	77
	14	1 3/16-12	1.19	30.10	Fitting size greater than -12 not typically specified on JLG applications. Consult specific service procedure if encountered.					
	16	1 5/16-12	1.31	33.30						
	20	1 5/8-12	1.63	41.30						
	24	1 7/8-12	1.87	47.60						
32	2 1/2-12	2.50	63.50							

\* ØA Thread OD dimension for reference only.

\*\*Removal Torque for Zero Leak Gold® Hollow Hex Plugs is significantly higher than install torque, typically 1.5-3.5X install torque.

## Assembly Instructions for Adjustable Port End Metric (MFF) Fittings

1. Inspect components to ensure that male and female threads and surfaces are free of rust, splits, dirt, foreign matter, or burrs.
2. If O-ring is not pre-installed, install proper size, taking care not to damage it. See O-ring Installation (Replacement) for instructions.

### CAUTION

**CARE TO BE TAKEN WHEN LUBRICATING O-RING. AVOID ADDING OIL TO THE THREADED CONNECTION OF THE FITTING. THE LUBRICATION WOULD CAUSE INCREASED CLAMPING FORCE AND CAUSE FITTING DAMAGE.**

3. Pre-lubricate the O-ring with Hydraulic Oil.
4. For Non-Adjustable Fittings and Plugs, thread the fitting by hand until contact.
5. For Adjustable fittings, refer to Adjustable Stud End Assembly for proper assembly.

6. Torque the fitting or nut to value listed in Table 5-18, Table 5-19, Table 5-20, Table 5-21, Table 5-22, or Table 5-23 while using the Double Wrench Method.
  - a. The table headings identify the Metric port and the type on the other side of the fitting. The torque will be applied to the Metric port.
  - b. Torque values provided in Table 5-18, Table 5-19, Table 5-20, Table 5-21, Table 5-22, and Table 5-23 are segregated based on the material configuration of the connection. 'ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS' indicate either the following material configurations:
    - STEEL fittings with ALUMINUM or BRASS mating components
    - ALUMINUM or BRASS fittings with STEEL mating components
    - ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.
7. Inspect to ensure the O-ring is not pinched and the washer is seated flat on the counter bore of the port.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-18. Metric Flat Face Port (MFF) - L Series - Table 1 of 3**

TYPE/FITTING IDENTIFICATION			FORM A (SEALING WASHER) STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end						FORM B (CUTTING FACE) STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end					
MATERIAL	Thread M Size	Connecting Tube O.D.	Torque						Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
	(metric)	(mm)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	7	8	8	9	11	11	13	14	14	18	19	19
	M12x1.5	8	15	16	17	20	22	23	22	23	24	30	31	33
	M14x1.5	10	26	28	29	35	38	39	33	35	36	45	47	49
	M16x1.5	12	33	35	36	45	47	49	48	51	53	65	69	72
	M18x1.5	15	41	43	45	55	58	61	59	62	65	80	84	88
	M22x1.5	18	48	51	53	65	69	72	103	108	113	140	146	153
	M27x2	22	66	70	73	90	95	99	140	147	154	190	199	209
	M33x2	28	111	117	122	150	159	165	251	264	276	340	358	374
	M42x2	35	177	186	195	240	252	264	369	388	406	500	526	550
	M48x2	42	214	225	235	290	305	319	465	489	512	630	663	694
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	4	5	5	5	7	7	8	9	9	11	12	12
	M12x1.5	8	10	11	11	14	15	15	14	15	16	19	20	22
	M14x1.5	10	17	18	19	23	24	26	21	22	23	28	30	31
	M16x1.5	12	21	22	23	28	30	31	31	33	34	42	45	46
	M18x1.5	15	27	28	29	37	38	39	38	40	42	52	54	57
	M22x1.5	18	31	33	34	42	45	46	67	70	73	91	95	99
	M27x2	22	43	45	47	58	61	64	91	96	100	123	130	136
	M33x2	28	72	76	79	98	103	107	163	171	179	221	232	243
	M42x2	35	115	121	127	156	164	172	240	252	264	325	342	358
	M48x2	42	139	146	153	188	198	207	302	318	332	409	431	450



Table 5-19. Metric Flat Face Port (MFF) - L Series - Table 2 of 3

TYPE/FITTING IDENTIFICATION			FORM A (SEALING WASHER) STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end						FORM B (CUTTING FACE) STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end					
MATERIAL	Thread M Size	Connecting Tube O.D.	Torque						Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
	(metric)	(mm)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	13	14	14	18	19	19	13	14	15	18	19	20
	M12x1.5	8	18	19	20	25	26	27	18	19	20	25	26	28
	M14x1.5	10	33	35	36	45	47	49	30	31	32	40	42	44
	M16x1.5	12	41	43	45	55	58	61	41	43	45	55	58	61
	M18x1.5	15	52	55	57	70	75	77	52	54	57	70	74	77
	M22x1.5	18	92	97	101	125	132	137	66	70	73	90	95	99
	M27x2	22	133	140	146	180	190	198	133	139	146	180	189	198
	M33x2	28	229	241	252	310	327	342	229	240	252	310	326	341
	M42x2	35	332	349	365	450	473	495	332	348	365	450	473	495
	M48x2	42	398	418	438	540	567	594	398	418	438	540	567	594
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	8	9	9	11	12	12	8	9	9	11	12	12
	M12x1.5	8	12	13	13	16	18	18	12	13	13	16	18	18
	M14x1.5	10	21	22	23	28	30	31	19	20	21	26	27	29
	M16x1.5	12	27	28	29	37	38	39	26	28	29	36	38	39
	M18x1.5	15	34	36	37	46	49	50	34	35	37	46	48	50
	M22x1.5	18	60	63	66	81	85	89	43	45	47	59	61	64
	M27x2	22	86	91	95	117	123	129	86	91	95	117	123	129
	M33x2	28	149	157	164	202	213	222	149	157	164	202	213	222
	M42x2	35	216	227	237	293	308	321	216	227	237	293	308	321
	M48x2	42	259	272	285	351	369	386	259	272	285	351	369	386

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-20. Metric Flat Face Port (MFF) - L Series - Table 3 of 3**

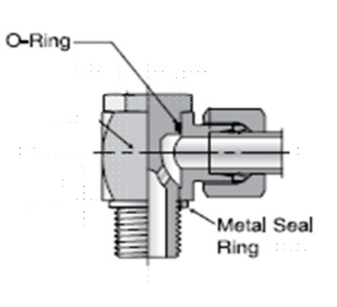
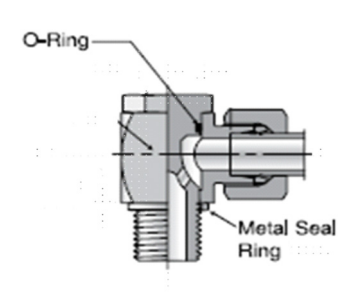
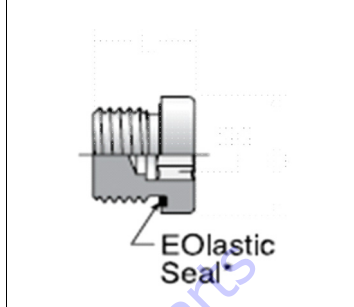
																					
TYPE/FITTING IDENTIFICATION		BANJO FITTINGS with L series DIN (MBTL) opposite end							HIGH PRESSURE BANJO FITTINGS with L series DIN (MBTL) opposite end							FORM E (EOlastic SEALING RING) HOLLOW HEX PLUGS					
MATERIAL	Thread M Size	Connecting Tube O.D.	Torque						Torque						Torque						
	(metric)	(mm)	[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]			
			Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	13	14	14	18	19	19	13	14	14	18	19	19	9	10	10	12	14	14	
	M12x1.5	8	26	28	29	35	38	39	33	35	36	45	47	49	18	19	20	25	26	27	
	M14x1.5	10	37	39	41	50	53	56	41	43	45	55	58	61	26	28	29	35	38	39	
	M16x1.5	12	44	46	48	60	62	65	59	62	65	80	84	88	41	43	45	55	58	61	
	M18x1.5	15	59	62	65	80	84	88	74	78	81	100	106	110	48	51	53	65	69	72	
	M22x1.5	18	89	94	98	120	127	133	103	108	113	140	146	153	66	70	73	90	95	99	
	M27x2	22	96	101	106	130	137	144	236	248	260	320	336	353	100	105	110	135	142	149	
	M33x2	28	--	--	--	--	--	--	266	280	293	360	380	397	166	175	183	225	237	248	
	M42x2	35	--	--	--	--	--	--	398	418	438	540	567	594	266	280	293	360	380	397	
	M48x2	42	--	--	--	--	--	--	516	542	568	700	735	770	266	280	293	360	380	397	
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	8	9	9	11	12	12	8	9	9	11	12	12	6	7	7	8	9	9	
	M12x1.5	8	17	18	19	23	24	26	21	22	23	28	30	31	12	13	13	16	18	18	
	M14x1.5	10	24	26	27	33	35	37	27	28	29	37	38	39	17	18	19	23	24	26	
	M16x1.5	12	29	30	31	39	41	42	38	40	42	52	54	57	27	28	29	37	38	39	
	M18x1.5	15	38	40	42	52	54	57	48	51	53	65	69	72	31	33	34	42	45	46	
	M22x1.5	18	58	61	64	79	83	87	67	70	73	91	95	99	43	45	47	58	61	64	
	M27x2	22	62	66	69	84	89	94	153	161	169	207	218	229	65	69	72	88	94	98	
	M33x2	28	--	--	--	--	--	--	173	182	190	235	247	258	108	114	119	146	155	161	
	M42x2	35	--	--	--	--	--	--	259	272	285	351	369	386	173	182	190	235	247	258	
	M48x2	42	--	--	--	--	--	--	335	352	369	454	477	500	173	182	190	235	247	258	

Table 5-21. Metric Flat Face Port (MFF) - S Series - Table 1 of 3

TYPE/FITTING IDENTIFICATION			FORM A (SEALING WASHER) STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end						FORM B (CUTTING FACE) STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end					
MATERIAL	Thread M Size	Connecting Tube O.D.	Torque						Torque					
	(metric)	(mm)	[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
			Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	M12x1.5	6	15	16	17	20	22	23	26	28	29	35	38	39
	M14x1.5	8	26	28	29	35	38	39	41	43	45	55	58	61
	M16x1.5	10	33	35	36	45	47	49	52	55	57	70	75	77
	M18x1.5	12	41	43	45	55	58	61	81	85	89	110	115	121
	M20x1.5	14	41	43	45	55	58	61	111	117	122	150	159	165
	M22x1.5	16	48	51	53	65	69	72	125	132	138	170	179	187
	M27x2	20	66	70	73	89	95	99	199	209	219	270	283	297
	M33x2	25	111	117	122	150	159	165	302	317	332	410	430	450
	M42x2	30	177	186	195	240	252	264	398	418	438	540	567	594
	M48x2	38	214	225	235	290	305	319	516	542	568	700	735	770
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	M12x1.5	6	10	11	11	14	15	15	17	18	19	23	24	26
	M14x1.5	8	17	18	19	23	24	26	27	28	29	37	38	39
	M16x1.5	10	21	22	23	28	30	31	34	36	37	46	49	50
	M18x1.5	12	27	28	29	37	38	39	53	56	58	72	76	79
	M20x1.5	14	27	28	29	37	38	39	72	76	79	98	103	107
	M22x1.5	16	31	33	34	42	45	46	81	86	90	110	117	122
	M27x2	20	43	45	47	58	61	64	129	136	142	175	184	193
	M33x2	25	72	76	79	98	103	107	196	206	216	266	279	293
	M42x2	30	115	121	127	156	164	172	259	272	285	351	369	386
	M48x2	38	139	146	153	188	198	207	335	352	369	454	477	500




**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-22. Metric Flat Face Port (MFF) - S Series - Table 2 of 3**

TYPE/FITTING IDENTIFICATION			FORM E (EOLASTIC SEALING RING) STUD ENDS AND HEX TYPE PLUGS with (ORFS) or S series DIN (MBTS) opposite end						FORM G/H (O-RING W/ RETAINING RING) STUD ENDS & ADJUSTABLE STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end					
MATERIAL	Thread M Size (metric)	Connecting Tube O.D. (mm)	Torque						Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
			Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	26	28	29	35	38	39	26	28	29	35	38	39
	M12x1.5	8	33	35	36	45	47	49	41	43	45	55	58	61
	M14x1.5	10	52	55	57	70	75	77	52	55	57	70	75	77
	M16x1.5	12	66	70	73	90	95	99	66	70	73	90	95	99
	M18x1.5	15	92	97	101	125	132	137	92	97	101	125	132	137
	M22x1.5	18	100	105	110	135	142	149	100	105	110	135	142	149
	M27x2	22	133	140	146	180	190	198	133	140	146	180	190	198
	M33x2	28	229	241	252	310	327	342	229	241	252	310	327	342
	M42x2	35	332	349	365	450	473	495	332	349	365	450	473	495
	M48x2	42	398	418	438	540	567	594	398	418	438	540	567	594
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	17	18	19	23	24	26	17	18	19	23	24	26
	M12x1.5	8	21	23	23	29	31	32	27	28	29	37	38	39
	M14x1.5	10	34	36	37	46	49	50	34	36	37	46	49	50
	M16x1.5	12	43	45	47	58	61	64	43	45	47	58	61	64
	M18x1.5	15	60	63	66	81	85	89	60	63	66	81	85	89
	M22x1.5	18	65	69	72	88	94	98	65	69	72	88	94	98
	M27x2	22	86	91	95	117	123	129	86	91	95	117	123	129
	M33x2	28	149	157	164	202	213	222	149	157	164	202	213	222
	M42x2	35	216	227	237	293	308	321	216	227	237	293	308	321
	M48x2	42	259	272	285	351	369	386	259	272	285	351	369	386

SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

Table 5-23. Metric Flat Face Port (MFF) - L Series - Table 3 of 3

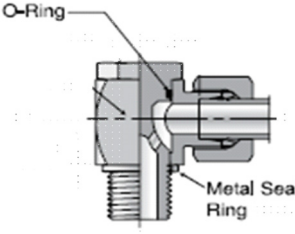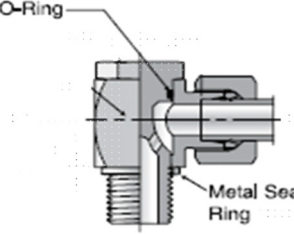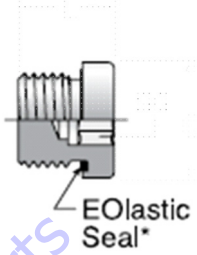																										
TYPE/FITTING IDENTIFICATION			BANJO FITTINGS with S series DIN (MBTS) opposite end									HIGH PRESSURE BANJO FITTINGS with S series DIN (MBTS) opposite end									FORM E (EOLASTIC SEALING RING) HOLLOW HEX PLUGS					
MATERIAL	Thread M Size	Connecting Tube O.D.	Torque									Torque									Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]								
	(metric)	(mm)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max						
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	26	28	29	35	38	39	33	35	36	45	47	49	--	--	--	--	--	--						
	M12x1.5	8	37	39	41	50	53	56	41	43	45	55	58	61	--	--	--	--	--	--						
	M14x1.5	10	44	46	48	60	62	65	59	62	65	80	84	88	--	--	--	--	--	--						
	M16x1.5	12	59	62	65	80	84	88	74	78	81	100	106	110	--	--	--	--	--	--						
	M18x1.5	15	81	85	89	110	115	121	92	97	101	125	132	137	59	62	65	80	84	88						
	M22x1.5	18	89	94	98	120	127	133	100	105	110	135	142	149	--	--	--	--	--	--						
	M27x2	22	100	105	110	135	142	149	236	248	260	320	336	353	--	--	--	--	--	--						
	M33x2	28	--	--	--	--	--	--	266	280	293	360	380	397	--	--	--	--	--	--						
	M42x2	35	--	--	--	--	--	--	398	418	438	540	567	594	--	--	--	--	--	--						
	M48x2	42	--	--	--	--	--	--	516	542	568	700	735	770	--	--	--	--	--	--						
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	M10x1	6	17	18	19	23	24	26	21	22	23	28	30	31	--	--	--	--	--	--						
	M12x1.5	8	24	26	27	33	35	37	27	28	29	37	38	39	--	--	--	--	--	--						
	M14x1.5	10	29	30	31	39	41	42	38	40	42	52	54	57	--	--	--	--	--	--						
	M16x1.5	12	38	40	42	52	54	57	48	51	53	65	69	72	--	--	--	--	--	--						
	M18x1.5	15	53	56	58	72	76	79	60	63	66	81	85	89	38	40	42	52	54	57						
	M22x1.5	18	58	61	64	79	83	87	65	69	72	88	94	98	--	--	--	--	--	--						
	M27x2	22	65	69	72	88	94	98	153	161	169	207	218	229	--	--	--	--	--	--						
	M33x2	28	--	--	--	--	--	--	173	182	190	235	247	258	--	--	--	--	--	--						
	M42x2	35	--	--	--	--	--	--	259	272	285	351	369	386	--	--	--	--	--	--						
	M48x2	42	--	--	--	--	--	--	335	352	369	454	477	500	--	--	--	--	--	--						

## Assembly Instructions for Metric ISO 6149 (MPP)

### Port Assembly Stud Ends

1. Inspect components to ensure that male and female threads and surfaces are free of rust, splits, dirt, foreign matter, or burrs.
2. If O-ring is not preinstalled, install proper size, taking care not to damage it. See O-ring Installation (Replacement) for instructions.

**⚠ CAUTION**




**CARE TO BE TAKEN WHEN LUBRICATING O-RING. AVOID ADDING OIL TO THE THREADED CONNECTION OF THE FITTING. THE LUBRICATION WOULD CAUSE INCREASED CLAMPING FORCE AND CAUSE FITTING DAMAGE.**

3. Pre-lubricate the O-ring with Hydraulic Oil.
4. For Non-Adjustable Fittings and Plugs, thread the fitting by hand until contact.
5. For Adjustable fittings, refer to Adjustable Stud End Assembly for proper assembly.

6. Torque the fitting or nut to value listed in Table 5-24 while using the Double Wrench Method.
  - a. The table headings identify the Metric port and the type on the other side of the fitting. The torque will be applied to the Metric port.
  - b. Torque values provided in Table 5-24 are segregated based on the material configuration of the connection. 'ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS' indicate either the following material configurations:
    - STEEL fittings with ALUMINUM or BRASS mating components
    - ALUMINUM or BRASS fittings with STEEL mating components
    - ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.
7. Inspect to ensure the O-ring is not pinched and the washer is seated flat on the counter bore of the port.




Go to Discount-Equipment.com to order your parts

Table 5-24. Metric Pipe Parallel O-Ring Boss (MPP)

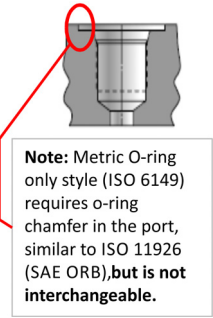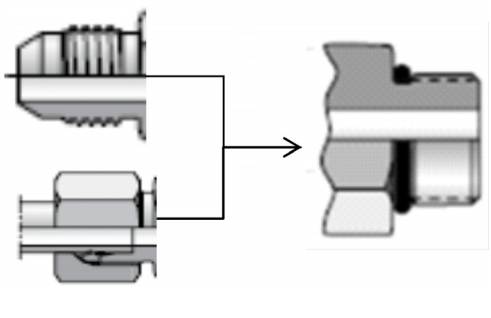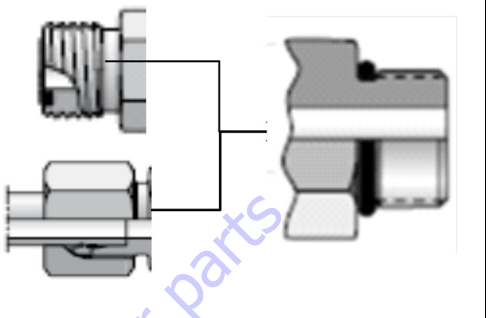 <p><b>Note:</b> Metric O-ring only style (ISO 6149) requires o-ring chamfer in the port, similar to ISO 11926 (SAE ORB), but is not interchangeable.</p>														
<b>TYPE/FITTING IDENTIFICATION</b>			<b>STUD ENDS</b> with 37° (JIC) or L series DIN (MBTL) opposite end						<b>STUD ENDS</b> with (ORFS) or S series DIN (MBTS) opposite end					
<b>MATERIAL</b>	<b>Thread M Size</b>	<b>Connecting Tube O.D.</b>	<b>Torque</b>						<b>Torque</b>					
			<b>[Ft-Lb]</b>			<b>[N-m]</b>			<b>[Ft-Lb]</b>			<b>[N-m]</b>		
	<b>(metric)</b>	<b>(mm)</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>
<b>STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN- LUBRICATED THREADS</b>	M8x1	4	6	7	7	8	9	9	8	9	9	10	12	12
	M10x1	6	11	12	12	15	16	16	15	16	17	20	22	23
	M12x1.5	8	18	19	20	25	26	27	26	28	29	35	38	39
	M14x1.5	10	26	28	29	35	38	39	33	35	36	45	47	49
	M16x1.5	12	30	32	33	40	43	45	41	43	45	55	58	61
	M18x1.5	15	33	35	36	45	47	49	52	55	57	70	75	77
	M20x1.5	--	--	--	--	--	--	--	59	62	65	80	84	88
	M22x1.5	18	44	46	48	60	62	65	74	78	81	100	106	110
	M27x2	22	74	78	81	100	106	110	125	132	138	170	179	187
	M30x2	--	95	100	105	130	136	142	175	184	193	237	249	262
	M33x2	25	120	126	132	160	171	179	230	242	253	310	328	343
	M38x2	--	135	142	149	183	193	202	235	247	259	319	335	351
	M42x2	30	155	163	171	210	221	232	245	258	270	330	350	366
M48x2	38	190	200	209	260	271	283	310	326	341	420	442	462	
M60x2	50	230	242	253	315	328	343	370	389	407	500	527	552	

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-24. Metric Pipe Parallel O-Ring Boss (MPP)**

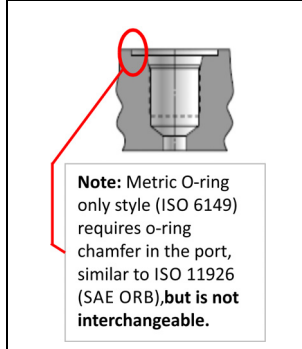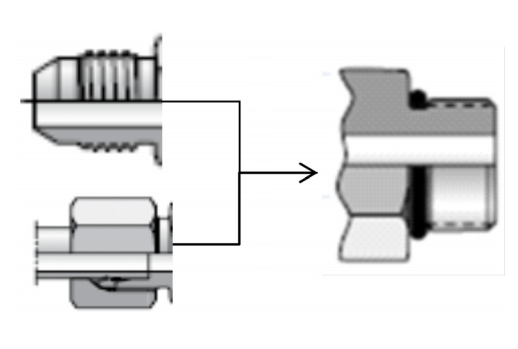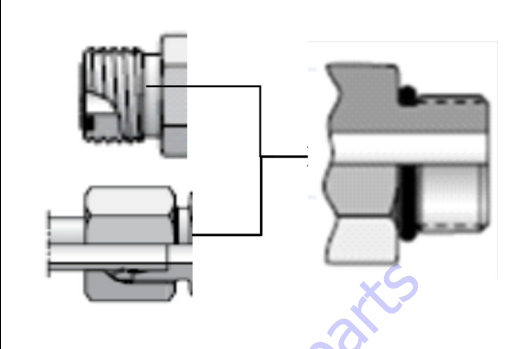 <p><b>Note:</b> Metric O-ring only style (ISO 6149) requires o-ring chamfer in the port, similar to ISO 11926 (SAE ORB), but is not interchangeable.</p>														
<b>TYPE/FITTING IDENTIFICATION</b>			<b>STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end</b>						<b>STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end</b>					
<b>MATERIAL</b>	<b>Thread M Size</b>	<b>Connecting Tube O.D.</b>	<b>Torque</b>						<b>Torque</b>					
			<b>[Ft-Lb]</b>			<b>[N-m]</b>			<b>[Ft-Lb]</b>			<b>[N-m]</b>		
	<b>(metric)</b>	<b>(mm)</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>	<b>Min</b>	<b>Nom</b>	<b>Max</b>
<b>ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS</b>	M8x1	4	4	5	5	5	7	7	5	6	6	7	8	8
	M10x1	6	7	8	8	9	11	11	10	11	11	14	15	15
	M12x1.5	8	12	13	13	16	18	18	17	18	19	23	24	26
	M14x1.5	10	17	18	19	23	24	26	21	22	23	28	30	31
	M16x1.5	12	20	21	21	27	28	28	27	28	29	37	38	39
	M18x1.5	15	21	22	23	28	30	31	34	36	37	46	49	50
	M20x1.5	--	--	--	--	--	--	--	30	40	42	41	54	57
	M22x1.5	18	29	30	31	39	41	42	48	51	53	65	69	72
	M27x2	22	48	51	53	65	69	72	81	86	90	110	117	122
	M30x2	--	62	65	68	84	88	92	114	120	125	155	163	169
	M33x2	25	78	82	86	106	111	117	150	157	164	203	213	222
	M38x2	--	88	93	97	119	126	132	153	161	168	207	218	228
	M42x2	30	101	106	111	137	144	150	159	168	176	216	228	239
M48x2	38	124	130	136	168	176	184	202	212	222	274	287	301	
M60x2	50	150	157	164	203	213	222	241	253	265	327	343	359	



### Assembly Instructions for Adjustable Port End (BSPP) Fittings

1. Inspect components to ensure that male and female threads and surfaces are free of rust, splits, dirt, foreign matter, or burrs.
2. If O-ring is not pre-installed, install proper size, taking care not to damage it. See O-ring Installation (Replacement) for instructions.

#### CAUTION

**CARE TO BE TAKEN WHEN LUBRICATING O-RING. AVOID ADDING OIL TO THE THREADED CONNECTION OF THE FITTING. THE LUBRICATION WOULD CAUSE INCREASED CLAMPING FORCE AND CAUSE FITTING DAMAGE.**

3. Pre-lubricate the O-ring with Hydraulic Oil.
4. For Non-Adjustable Fittings and Plugs, thread the fitting by hand until contact.
5. For Adjustable fittings, refer to Adjustable Stud End Assembly for proper assembly.

6. Torque the fitting or nut to value listed in Table 5-25, Table 5-26, Table 5-27, Table 5-28, Table 5-29, or Table 5-30 while using the Double Wrench Method.
  - a. The table headings identify the BSPP port and the type on the other side of the fitting. The torque will be applied to the BSPP port.
  - b. Torque values provided in Table 5-25, Table 5-26, Table 5-27, Table 5-28, Table 5-29, and Table 5-30 are segregated based on the material configuration of the connection. 'ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS' indicate either the following material configurations:
    - STEEL fittings with ALUMINUM or BRASS mating components
    - ALUMINUM or BRASS fittings with STEEL mating components
    - ALUMINUM or BRASS fittings with ALUMINUM or BRASS mating components.
7. Inspect to ensure the O-ring is not pinched and the washer is seated flat on the counter bore of the port.

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-25. British Standard Parallel Pipe Port (BSPP) - L Series - Table 1 of 3**

TYPE/FITTING IDENTIFICATION			FORM A**(SEALING WASHER) STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end						FORM B**(CUTTING FACE) STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end					
MATERIAL	BSPP Thread G Size	Connecting Tube O.D.	Torque						Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
	(metric)	(mm)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	G1/8A	6	7	8	8	9	11	11	13	14	14	18	19	19
	G1/4A	8	26	28	29	35	38	39	26	28	29	35	38	39
	G1/4A	10	26	28	29	35	38	39	26	28	29	35	38	39
	G3/8A	12	33	35	36	45	47	49	52	55	57	70	75	77
	G1/2A	15	48	51	53	65	69	72	103	108	113	140	146	153
	G1/2A	18	48	51	53	65	69	72	74	78	81	100	106	110
	G3/4A	22	66	70	73	90	95	99	133	140	146	180	190	198
	G1A	28	111	117	122	150	159	165	243	255	267	330	346	362
	G1-1/4A	35	177	186	195	240	252	264	398	418	438	540	567	594
	G1-1/2A	42	214	225	235	290	305	319	465	489	512	630	663	694
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	G1/8A	6	4	5	5	5	7	7	8	9	9	11	12	12
	G1/4A	8	17	18	19	23	24	26	17	18	19	23	24	26
	G1/4A	10	17	18	19	23	24	26	17	18	19	23	24	26
	G3/8A	12	21	22	23	28	30	31	34	36	37	46	49	50
	G1/2A	15	31	33	34	42	45	46	67	70	73	91	95	99
	G1/2A	18	31	33	34	42	45	46	48	51	53	65	69	72
	G3/4A	22	42	45	47	57	61	64	86	91	95	117	123	129
	G1A	28	72	76	79	98	103	107	158	166	174	214	225	236
	G1-1/4A	35	115	121	127	156	164	172	259	272	285	351	369	386
	G1-1/2A	42	139	146	153	188	198	207	302	318	333	409	431	451

\*Typical for JLG Straight Male Stud Fittings

\*\* Non typical for JLG Straight Male Stud Fittings, reference only.

\*\*\* Typical for JLG Adjustable Fittings

SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS




Table 5-26. British Standard Parallel Pipe Port (BSPP) - L Series - Table 2 of 3

TYPE/FITTING IDENTIFICATION			FORM E* (EOLASTIC SEALING RING) STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end						FORM G/H*** (O-RING W/ RETAINING RING) STUD ENDS & ADJUSTABLE STUD ENDS with 37° (JIC) or L series DIN (MBTL) opposite end								
MATERIAL	BSPP Thread G Size	Connecting Tube O.D.	Torque									Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]					
	(metric)	(mm)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max			
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	G1/8A	6	13	14	14	18	19	19	13	14	14	18	19	19			
	G1/4A	8	26	28	29	35	38	39	26	28	29	35	38	39			
	G1/4A	10	26	28	29	35	38	39	26	28	29	35	38	39			
	G3/8A	12	52	55	57	70	75	77	52	55	57	70	75	77			
	G1/2A	15	66	70	73	90	95	99	66	70	73	90	95	99			
	G1/2A	18	66	70	73	90	95	99	66	70	73	90	95	99			
	G3/4A	22	133	140	146	180	190	198	133	140	146	180	190	198			
	G1A	28	229	241	252	310	327	342	229	241	252	310	327	342			
	G1-1/4A	35	332	349	365	450	473	495	332	349	365	450	473	495			
	G1-1/2A	42	398	418	438	540	567	594	398	418	438	540	567	594			
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	G1/8A	6	8	9	9	11	12	12	8	9	9	11	12	12			
	G1/4A	8	17	18	19	23	24	26	17	18	19	23	24	26			
	G1/4A	10	17	18	19	23	24	26	17	18	19	23	24	26			
	G3/8A	12	34	36	37	46	49	50	34	36	37	46	49	50			
	G1/2A	15	43	45	47	58	61	64	43	45	47	58	61	64			
	G1/2A	18	43	45	47	58	61	64	43	45	47	58	61	64			
	G3/4A	22	86	91	95	117	123	129	86	91	95	117	123	129			
	G1A	28	149	157	164	202	213	222	149	157	164	202	213	222			
	G1-1/4A	35	216	227	237	293	308	321	216	227	237	293	308	321			
	G1-1/2A	42	259	272	285	351	369	386	259	272	285	351	369	386			

\*Typical for JLG Straight Male Stud Fittings  
 \*\* Non typical for JLG Straight Male Stud Fittings, reference only.  
 \*\*\* Typical for JLG Adjustable Fittings

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-27. British Standard Parallel Pipe Port (BSPP) - L Series - Table 3 of 3**

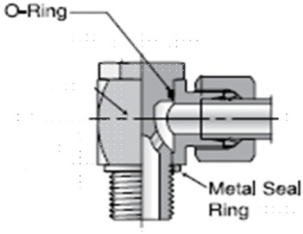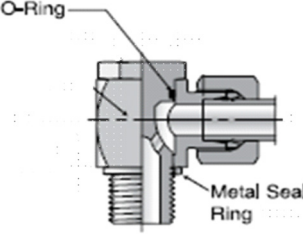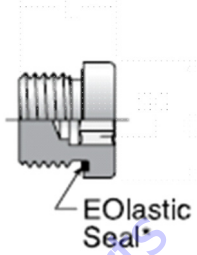																										
TYPE/FITTING IDENTIFICATION			BANJO FITTINGS with L series DIN (MBTL) opposite end									HIGH PRESSURE BANJO FITTINGS with L series DIN (MBTL) opposite end									FORM E (EOlastic SEALING RING) HOLLOW HEX PLUGS					
MATERIAL	BSPP Thread G Size	Connecting Tube O.D.	Torque									Torque									Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]								
			Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max						
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	G 1/8A	6	13	14	14	18	19	19	13	14	14	18	19	19	10	11	11	13	15	15						
	G 1/4A	8	30	32	33	40	43	45	33	35	36	45	47	49	22	23	24	30	31	33						
	G 1/4A	10	30	32	33	40	43	45	33	35	36	45	47	49	22	23	24	30	31	33						
	G 3/8A	12	48	51	53	65	69	72	52	55	57	70	75	77	44	46	48	60	62	65						
	G 1/2A	15	66	70	73	90	95	99	89	94	98	120	127	133	59	62	65	80	84	88						
	G 1/2A	18	66	70	73	90	95	99	89	94	98	120	127	133	59	62	65	80	84	88						
	G 3/4A	22	92	97	101	125	132	137	170	179	187	230	243	254	103	108	113	140	146	153						
	G 1A	28	--	--	--	--	--	--	236	248	260	320	336	353	148	156	163	200	212	221						
	G 1-1/4A	35	--	--	--	--	--	--	398	418	438	540	567	594	295	313.5	332	400	425	450						
	G 1-1/2A	42	--	--	--	--	--	--	516	542	568	700	735	770	332	349	365	450	473	495						
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	G 1/8A	6	8	9	9	11	12	12	8	9	9	11	12	12	6	7	7	8	9	9						
	G 1/4A	8	20	21	21	27	28	28	21	22	23	28	30	31	14	15	16	19	20	22						
	G 1/4A	10	20	21	21	27	28	28	21	22	23	28	30	31	14	15	16	19	20	22						
	G 3/8A	12	31	33	34	42	45	46	34	36	37	46	49	50	29	30	31	39	41	42						
	G 1/2A	15	43	45	47	58	61	64	58	61	64	79	83	87	38	40	42	52	54	57						
	G 1/2A	18	43	45	47	58	61	64	58	61	64	79	83	87	38	40	42	52	54	57						
	G 3/4A	22	60	63	66	81	85	89	111	117	122	150	159	165	67	70	73	91	95	99						
	G 1A	28	--	--	--	--	--	--	153	161	169	207	218	229	96	101	106	130	137	144						
	G 1-1/4A	35	--	--	--	--	--	--	259	272	285	351	369	386	216	227	237	293	308	321						
	G 1-1/2A	42	--	--	--	--	--	--	335	352	369	454	477	500	216	227	237	293	308	321						

\* Typical for JLG Straight Male Stud Fittings

\*\* Non typical for JLG Straight Male Stud Fittings, reference only.

\*\*\* Typical for JLG Adjustable Fittings

Table 5-28. British Standard Parallel Pipe Port (BSPP) - S Series - Table 1 of 3

TYPE/FITTING IDENTIFICATION			FORM A** (SEALING WASHER) STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end						FORM B** (CUTTING FACE) STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end					
MATERIAL	BSPP Thread G Size	Connecting Tube O.D.	Torque						Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
	(metric)	(mm)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	G 1/4A	6	26	28	29	35	38	39	41	43	45	55	58	61
	G 1/4A	8	26	28	29	35	38	39	41	43	45	55	58	61
	G 3/8A	10	33	35	36	45	47	49	66	70	73	90	95	99
	G 3/8A	12	33	35	36	45	47	49	66	70	73	90	95	99
	G 1/2A	14	48	51	53	65	69	72	111	117	122	150	159	165
	G 1/2A	16	48	51	53	65	69	72	96	101	106	130	137	144
	G 3/4A	20	66	70	73	90	95	99	199	209	219	270	283	297
	G 1A	25	111	117	122	150	159	165	251	264	276	340	358	374
	G 1-1/4A	30	177	186	195	240	252	264	398	418	438	540	567	594
	G 1-1/2A	38	214	225	235	290	305	319	516	542	568	700	735	770
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	G 1/4A	6	17	18	19	23	24	26	27	28	29	37	38	39
	G 1/4A	8	17	18	19	23	24	26	27	28	29	37	38	39
	G 3/8A	10	21	22	23	28	30	31	43	45	47	58	61	64
	G 3/8A	12	21	22	23	28	30	31	43	45	47	58	61	64
	G 1/2A	14	31	33	34	42	45	46	72	76	79	98	103	107
	G 1/2A	16	31	33	34	42	45	46	62	66	69	84	89	94
	G 3/4A	20	43	45	47	58	61	64	129	136	142	175	184	193
	G 1A	25	72	76	79	98	103	107	163	171	179	221	232	243
	G 1-1/4A	30	115	121	127	156	164	172	259	272	285	351	369	386
	G 1-1/2A	38	139	146	153	188	198	207	335	352	369	454	477	500

\* Typical for JLG Straight Male Stud Fittings

\*\* Non typical for JLG Straight Male Stud Fittings, reference only.

\*\*\* Typical for JLG Adjustable Fittings

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

**Table 5-29. British Standard Parallel Pipe Port (BSPP) - S Series - Table 2 of 3**

TYPE/FITTING IDENTIFICATION			FORM E* (EOLASTIC SEALING RING) STUD ENDS AND HEX TYPE PLUGS with (ORFS) or S series DIN (MBTS) opposite end						FORM G/H*** (O-RING W/ RETAINING RING) STUD ENDS & ADJUSTABLE STUD ENDS with (ORFS) or S series DIN (MBTS) opposite end								
MATERIAL	BSPP Thread G Size	Connecting Tube O.D.	Torque									Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]					
	(metric)	(mm)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max			
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	G 1/4A	6	41	43	45	55	58	61	26	28	29	35	38	39			
	G 1/4A	8	41	43	45	55	58	61	26	28	29	35	38	39			
	G 3/8A	10	59	62	65	80	84	88	52	55	57	70	75	77			
	G 3/8A	12	59	62	65	80	84	88	52	55	57	70	75	77			
	G 1/2A	14	85	90	94	115	122	127	66	70	73	90	95	99			
	G 1/2A	16	85	90	94	115	122	127	66	70	73	90	95	99			
	G 3/4A	20	133	140	146	180	190	198	133	140	146	180	190	198			
	G 1A	25	229	241	252	310	327	342	229	241	252	310	327	342			
	G 1-1/4A	30	332	349	365	450	473	495	332	349	365	450	473	495			
	G 1-1/2A	38	398	418	438	540	567	594	398	418	438	540	567	594			
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	G 1/4A	6	27	28	29	37	38	39	17	18	19	23	24	26			
	G 1/4A	8	27	28	29	37	38	39	17	18	19	23	24	26			
	G 3/8A	10	38	40	42	52	54	57	34	36	37	46	49	50			
	G 3/8A	12	38	40	42	52	54	57	34	36	37	46	49	50			
	G 1/2A	14	55	58	61	75	79	83	43	45	47	58	61	64			
	G 1/2A	16	55	58	61	75	79	83	43	45	47	58	61	64			
	G 3/4A	20	86	91	95	117	123	129	86	91	95	117	123	129			
	G 1A	25	149	157	164	202	213	222	149	157	164	202	213	222			
	G 1-1/4A	30	216	227	237	293	308	321	216	227	237	293	308	321			
	G 1-1/2A	38	259	272	285	351	369	386	259	272	285	351	369	386			

\* Typical for JLG Straight Male Stud Fittings

\*\* Non typical for JLG Straight Male Stud Fittings, reference only.

\*\*\* Typical for JLG Adjustable Fittings

Table 5-30. British Standard Parallel Pipe Port (BSPP) - S Series - Table 3 of 3

TYPE/FITTING IDENTIFICATION			BANJO FITTINGS with S series DIN (MBTS) opposite end						HIGH PRESSURE BANJO FITTINGS with S series DIN (MBTS) opposite end						JIS/BSPP O-RING ONLY					
MATERIAL	BSPP Thread G Size	Connecting Tube O.D.	Torque						Torque						Torque					
			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
			Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
(metric)	(mm)																			
STEEL FITTINGS WITH STEEL MATING COMPONENTS; UN-LUBRICATED THREADS	G1/4A	6	30	32	33	40	43	45	33	35	36	45	47	49	Fitting type not typically specified on JLG applications. Refer to the specific procedure in this Service Manual.					
	G1/4A	8	30	32	33	40	43	45	33	35	36	45	47	49						
	G3/8A	10	48	51	53	65	69	72	52	55	57	70	75	77						
	G3/8A	12	48	51	53	65	69	72	52	55	57	70	75	77						
	G1/2A	14	66	70	73	90	95	99	89	94	98	120	127	133						
	G1/2A	16	66	70	73	90	95	99	89	94	98	120	127	133						
	G3/4A	20	92	97	101	125	132	137	170	179	187	230	243	254						
	G1A	25	--	--	--	--	--	--	236	248	260	320	336	353						
	G1-1/4A	30	--	--	--	--	--	--	398	418	438	540	567	594						
	G1-1/2A	38	--	--	--	--	--	--	516	542	568	700	735	770						
ALUMINUM/BRASS FITTINGS OR ALUMINUM/BRASS MATING COMPONENTS; UN-LUBRICATED THREADS	G1/4A	6	20	21	21	27	28	28	22	22	23	30	30	31	Fitting type not typically specified on JLG applications. Refer to the specific procedure in this Service Manual.					
	G1/4A	8	20	21	21	27	28	28	22	22	23	30	30	31						
	G3/8A	10	31	33	34	42	45	46	34	36	37	46	49	50						
	G3/8A	12	31	33	34	42	45	46	34	36	37	46	49	50						
	G1/2A	14	43	45	47	58	61	64	58	61	64	79	83	87						
	G1/2A	16	43	45	47	58	61	64	58	61	64	79	83	87						
	G3/4A	20	60	63	66	81	85	89	111	117	122	150	159	165						
	G1A	25	--	--	--	--	--	--	153	161	169	207	218	229						
	G1-1/4A	30	--	--	--	--	--	--	259	272	285	351	369	386						
	G1-1/2A	38	--	--	--	--	--	--	335	352	368	454	477	499						

Note: BSPP O-ring only style (ISO 228-1) requires o-ring chamfer in the port, similar to ISO 11926 (SAE ORB), but is not interchangeable. Not typically used on JLG machines.

\* Typical for JLG Straight Male Stud Fittings

\*\* Non typical for JLG Straight Male Stud Fittings, reference only.

\*\*\* Typical for JLG Adjustable Fittings

**Assembly Instructions for Flange Connections:  
(FL61 and FL62)**

1. Make sure sealing surfaces are free of rust, splits, scratches, dirt, foreign matter, or burrs.
2. See Figure for O-ring installation instructions.
3. Pre-lubricate the O-ring with Hydraulic Oil.
4. Position flange and clamp halves.
5. Place lock washers on bolt and bolt through clamp halves.
6. Tighten all bolts by hand.
7. Torque bolts in diagonal sequence in two or more increments to the torque listed on Table Table 5-31 and Table 5-32.

Go to Discount-Equipment.com to order your parts





SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

Table 5-31. Flange Code (FL61 & FL62) -Inch Fasteners

TYPE/FITTING IDENTIFICATION		STEEL 4-BOLT FLANGE SAE J518 (INCH FASTENERS)																
TYPE	Inch Flange SAE Dash Size	Flange Size		A*		Bolt Thread Size	Fastener Torque for Flanges Equipped with GRADE 5 Screws						Fastener Torque for Flanges Equipped with GRADE 8 Screws					
		(in)	(mm)	(in)	(mm)		[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
							Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
CODE 61 SPLIT FLANGE (FL61)	8	0.50	13	1.50	38.10	5/16-18	18	19	19	24	25	26	24	25	26	32	34	35
	12	0.75	19	1.88	47.75	3/8-16	32	33	35	43	45	47	44	46	49	60	63	66
	16	1.00	25	2.06	52.32	3/8-16	32	33	35	43	45	47	44	46	49	60	63	66
	20	1.25	32	2.31	58.67	7/16-14	52	54	57	70	74	77	68	71	75	92	97	101
	24	1.50	38	2.75	69.85	1/2-13	77	81	85	105	110	116	111	116	122	150	158	165
	32	2.00	51	3.06	77.72	1/2-13	77	81	85	105	110	116	111	116	122	150	158	165
	40	2.50	64	3.50	88.90	1/2-13	77	81	85	105	110	116	111	116	122	150	158	165
	48	3.00	76	4.19	106.43	5/8-11	155	163	170	210	221	231	218	228	239	295	310	325
	56	3.50	89	4.75	120.65	5/8-11	155	163	170	210	221	231	218	228	239	295	310	325
	64	4.00	102	5.13	130.30	5/8-11	155	163	170	210	221	231	218	228	239	295	310	325
	80	5.00	127	6.00	152.40	5/8-11	155	163	170	210	221	231	218	228	239	295	310	325
CODE 62 SPLIT FLANGE (FL62)	8	0.50	13	1.59	40.39	5/16-18	--	--	--	--	--	--	24	25	26	32	34	35
	12	0.75	19	2.00	50.80	3/8-16	--	--	--	--	--	--	44	46	49	60	63	66
	16	1.00	25	2.25	57.15	7/16-14	--	--	--	--	--	--	68	71	75	92	97	101
	20	1.25	32	2.62	66.55	1/2-13	--	--	--	--	--	--	111	116	122	150	158	165
	20	1.25	32	2.62	66.55	--	--	--	--	--	--	--	--	--	--	--	--	--
	24	1.50	38	3.12	79.25	5/8-11	--	--	--	--	--	--	218	228	239	295	310	325
	32	2.00	51	3.81	96.77	3/4-10	--	--	--	--	--	--	332	348	365	450	473	495

\* A dimension for reference only.

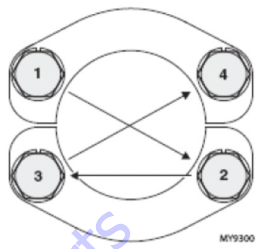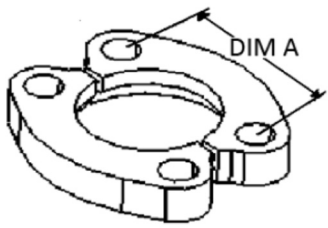


M19300

SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

Table 5-32. Flange Code (FL61 & FL62) - Metric Fasteners

TYPE/FITTING IDENTIFICATION						STEEL 4-BOLT FLANGE SAE J518 (INCH FASTENERS)												
TYPE	Inch Flange SAE Dash Size	Flange Size		A*		Bolt Thread Size (Metric)	Fastener Torque for Flanges Equipped with CLASS 8.8 Screws						Fastener Torque for Flanges Equipped with CLASS 10.9 Screws					
		(in)	(mm)	(in)	(mm)		[Ft-Lb]			[N-m]			[Ft-Lb]			[N-m]		
							Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
CODE 61 SPLIT FLANGE (FL61)	8	0.50	13	1.50	38.10	(Metric)	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max	Min	Nom	Max
	12	0.75	19	1.88	47.75	M8x1.25	18	19	19	24	25	26	18	19	19	24	25	26
	16	1.00	25	2.06	52.32	M10x1.5	37	39	41	50	53	55	37	39	41	50	53	55
	20	1.25	32	2.31	58.67	M10x1.5	37	39	41	50	53	55	37	39	41	50	53	55
	24	1.50	38	2.75	69.85	M10x1.5	37	39	41	50	53	55	37	39	41	50	53	55
	32	2.00	51	3.06	77.72	M12x1.75	68	71	75	92	97	101	68	71	75	92	97	101
	40	2.50	64	3.50	88.90	M12x1.75	68	71	75	92	97	101	68	71	75	92	97	101
	48	3.00	76	4.19	106.43	M12x1.75	68	71	75	92	97	101	68	71	75	92	97	101
	56	3.50	89	4.75	120.65	M16x2	155	163	170	210	221	231	155	163	170	210	221	231
	64	4.00	102	5.13	130.30	M16x2	155	163	170	210	221	231	155	163	170	210	221	231
	80	5.00	127	6.00	152.40	M16x2	155	163	170	210	221	231	155	163	170	210	221	231
CODE 62 SPLIT FLANGE (FL62)	8	0.50	13	1.59	40.39	M8x1.25	--	--	--	--	--	--	24	25	26	32	34	35
	12	0.75	19	2.00	50.80	M10x1.5	--	--	--	--	--	--	52	54	57	70	74	77
	16	1.00	25	2.25	57.15	M12x1.75	--	--	--	--	--	--	96	101	105	130	137	143
	20	1.25	32	2.62	66.55	M12x1.75	--	--	--	--	--	--	96	101	105	130	137	143
	20	1.25	32	2.62	66.55	M14x2	--	--	--	--	--	--	133	139	146	180	189	198
	24	1.50	38	3.12	79.25	M16x2	--	--	--	--	--	--	218	228	239	295	310	325
	32	2.00	51	3.81	96.77	M20x2.5	--	--	--	--	--	--	406	426	446	550	578	605

\* A dimension for reference only.

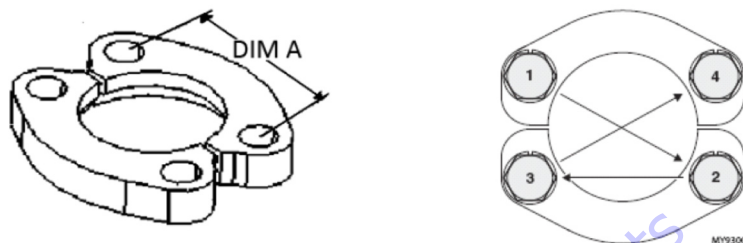

### Double Wrench Method

To prevent undesired hose or connector rotation, two wrenches must be used; one torque wrench and one back-up wrench. If two wrenches are not used, inadvertent component rotation may occur which absorbs torque and causes improper joint load and leads to leaks. For hose connections,

the 'layline' printed on the hose is a good indicator of proper hose installation. A twisted lay-line usually indicates the hose is twisted. See Figure 5-12. for double wrench method requirements.

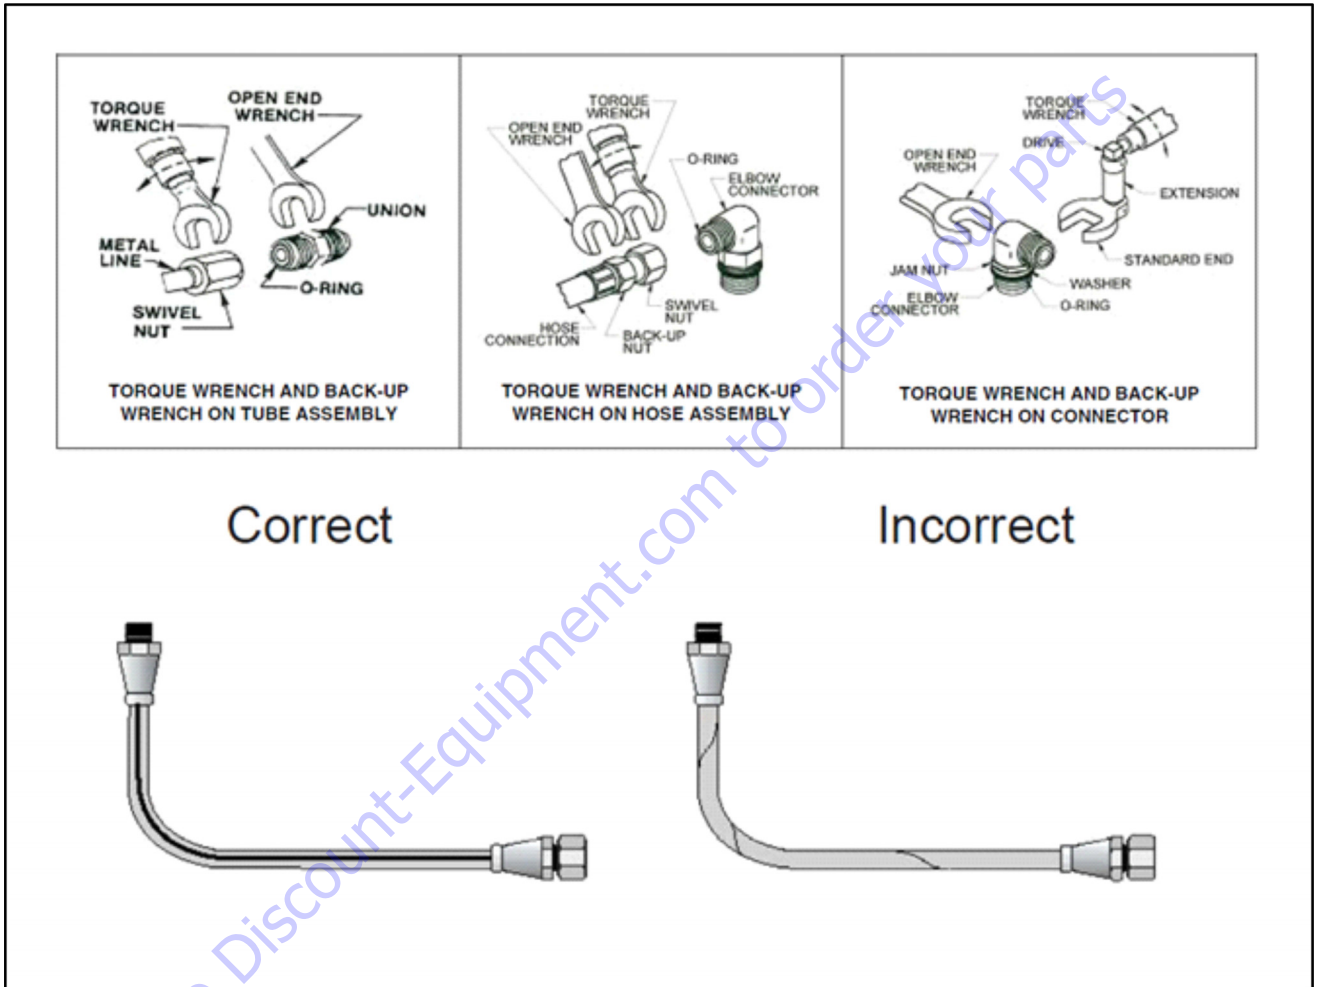


Figure 5-12. Double Wrench Method

## FFWR and TFFT Methods

### FFWR (FLATS FROM WRENCH RESISTANCE METHOD)

1. Tighten the swivel nut to the mating fitting until no lateral movement of the swivel nut can be detected; finger tight condition.
2. Mark a dot on one of the swivel hex nut flats and another dot in line on the connecting tube adapter. See Figure B.1.
3. Use the double wrench method per Appendix A, turn the swivel nut to tighten as shown in Figure B.1. The nut is to be rotated clockwise the number of hex flats as defined by the applicable Table in Section 5.0.
4. After the connection has been properly tightened, mark a straight line across the connecting parts, not covering the dots, to indicate the connection has been properly tightened. See Figure 5-13.

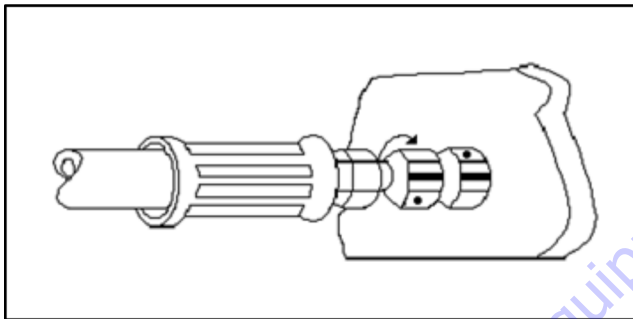


Figure 5-13. FFWR Method

### TFFT (TURNS FROM FINGER TIGHT METHOD)

1. Tighten the swivel nut to the mating fitting until no lateral movement of the swivel nut can be detected; finger tight condition.
2. Mark a dot on one of the swivel hex nut flats and another dot in line on the connecting tube adapter.
3. Use the double wrench method per Appendix A, turn the swivel nut to tighten. The nut is to be rotated clockwise the number of turns as defined by the applicable Table in Section 5.0.
4. After the connection has been properly tightened, mark a straight line across the connecting parts, not covering the dots, to indicate the connection has been properly tightened.

## Adjustable Stud End Assembly

For Adjustable Stud End Connections; the following assembly steps are to be performed:

1. Lubricate the o-ring with a light coat of hydraulic oil.
2. Position #1 – The o-ring should be located in the groove adjacent to the face of the back-up washer. The washer and o-ring should be positioned at the extreme top end of the groove as shown.
3. Position #2 – Position the locknut to just touch the back-up washer as shown. The locknut in this position will eliminate potential back up washer damage during the next step.
4. Position #3 – Install the connector into the straight thread box port until the metal back-up washer contacts the face of the port as shown.
5. Position #4 – Adjust the connector to the proper position by turning out (counterclockwise) up to a maximum of one turn as shown to provide proper alignment with the mating connector, tube assembly, or hose assembly.
6. Position #5 – Using two wrenches, use the backup wrench to hold the connector in the desired position and then use the torque wrench to tighten the locknut to the appropriate torque.
7. Visually inspect, where possible, the joint to ensure the o-ring is not pinched or bulging out from under the washer and that the backup washer is properly seated flat against the face of the port.

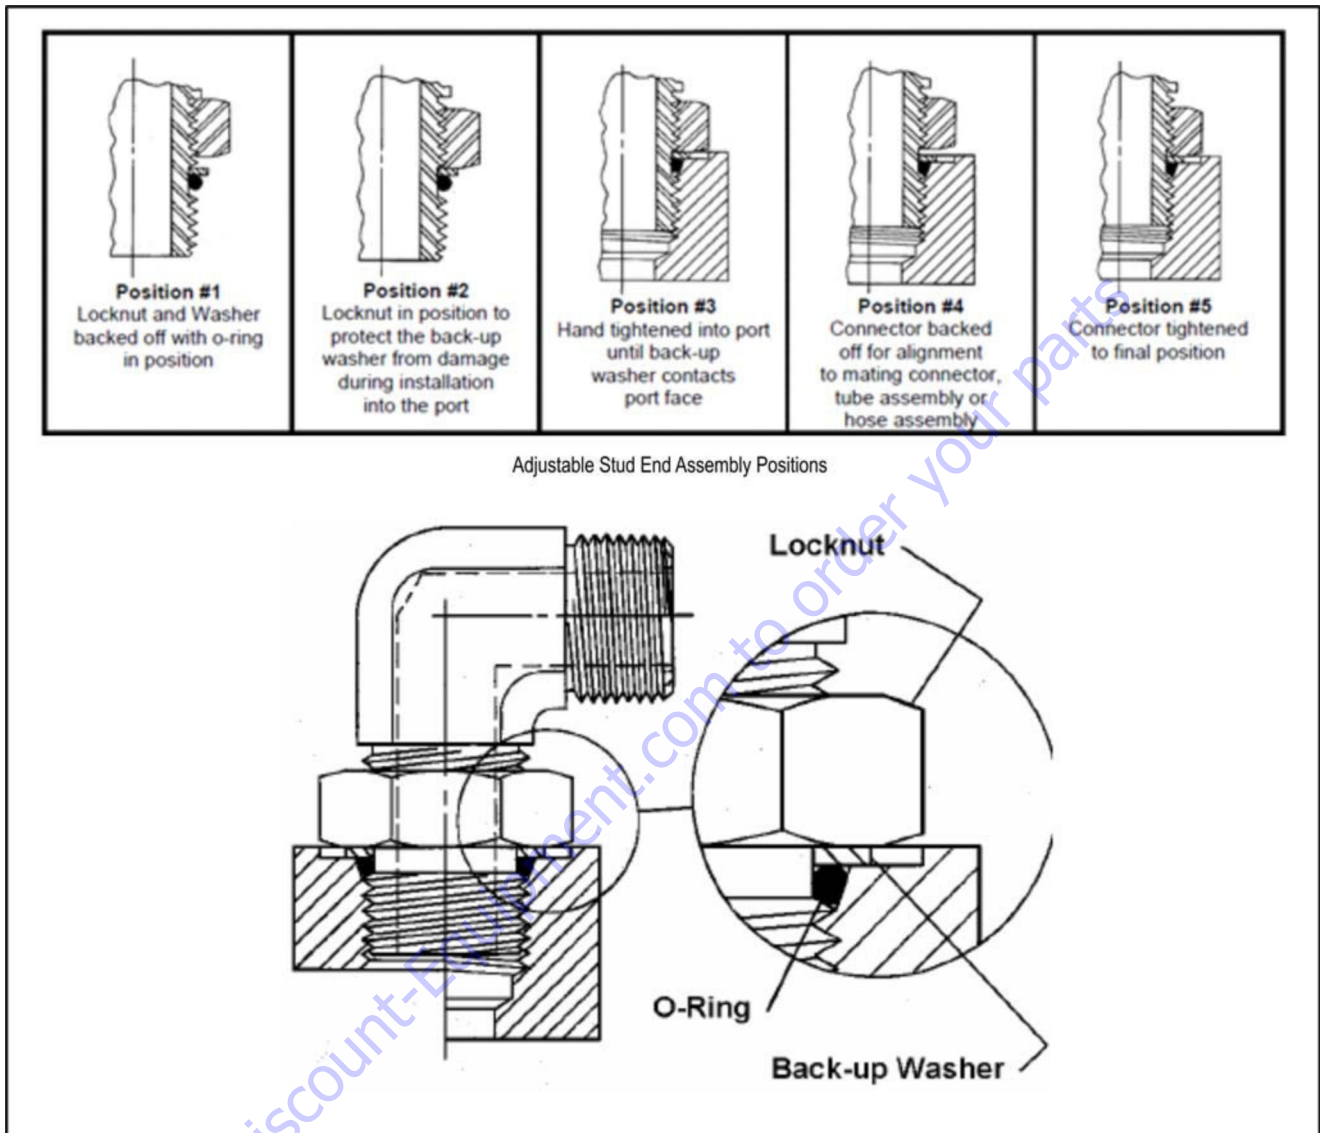


Figure 5-14. Adjustable Stud End Assembly

### O-ring Installation (Replacement)

Care must be taken when installing O-rings over threads during replacement or installation. O-rings could become nicked or torn. A damaged O-ring could lead to leakage problems.

1. Inspect O-ring for tears or nicks. If any are found replace O-ring.
2. Ensure proper O-ring to be installed. Many O-rings look the same but are of different material, different hardness, or are slightly different diameters or widths.
3. Use a thread protector when replacing O-rings on fittings.
4. In ORB; ensure O-ring is properly seated in groove. On straight threads, ensure O-ring is seated all the way past the threads prior to installation.
5. Inspect O-ring for any visible nicks or tears. Replace if found.

## 5.3 HYDRAULIC CYLINDERS

### Axle Lockout Cylinder

#### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

#### ⚠ WARNING

ROD CAN FALL OUT OF BARREL AND CAUSE INJURY OR DAMAGE TO THE EQUIPMENT. BE CAREFUL WHEN REMOVING AXLE CYLINDER. OPENING BLEED VALVE CAN CAUSE ROD TO FALL OUT OF BARREL.

1. Open bleeder valve. Rotate rod and remove from barrel.
2. Remove wiper. Do not scratch barrel bore.
3. Remove two wear rings and rod seal from grooves of rod bore. Do not scratch barrel bore.
4. Remove counterbalance valve.

#### CLEANING AND INSPECTION

1. Inspect bore and rod for scoring, pitting, or excessive wear.
2. Remove minor surface blemishes with wet sandpaper. Pitting requires replacement of barrel and rod.
3. Clean all parts with approved solvent and dry with compressed air.

#### ASSEMBLY

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.

#### NOTICE


WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

1. Install two new wear rings and rod seal in rod bore grooves. Make sure they are not twisted.
2. Install new wiper in barrel.
3. Lubricate rod bore with clean hydraulic fluid.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE ROD. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE ROD AND CYLINDER BARREL SURFACES.

4. Install rod in bore and push to top of the bore.
5. Install counterbalance valve. Torque to 22 ft.lbs. (30 Nm).
6. Bleed system.

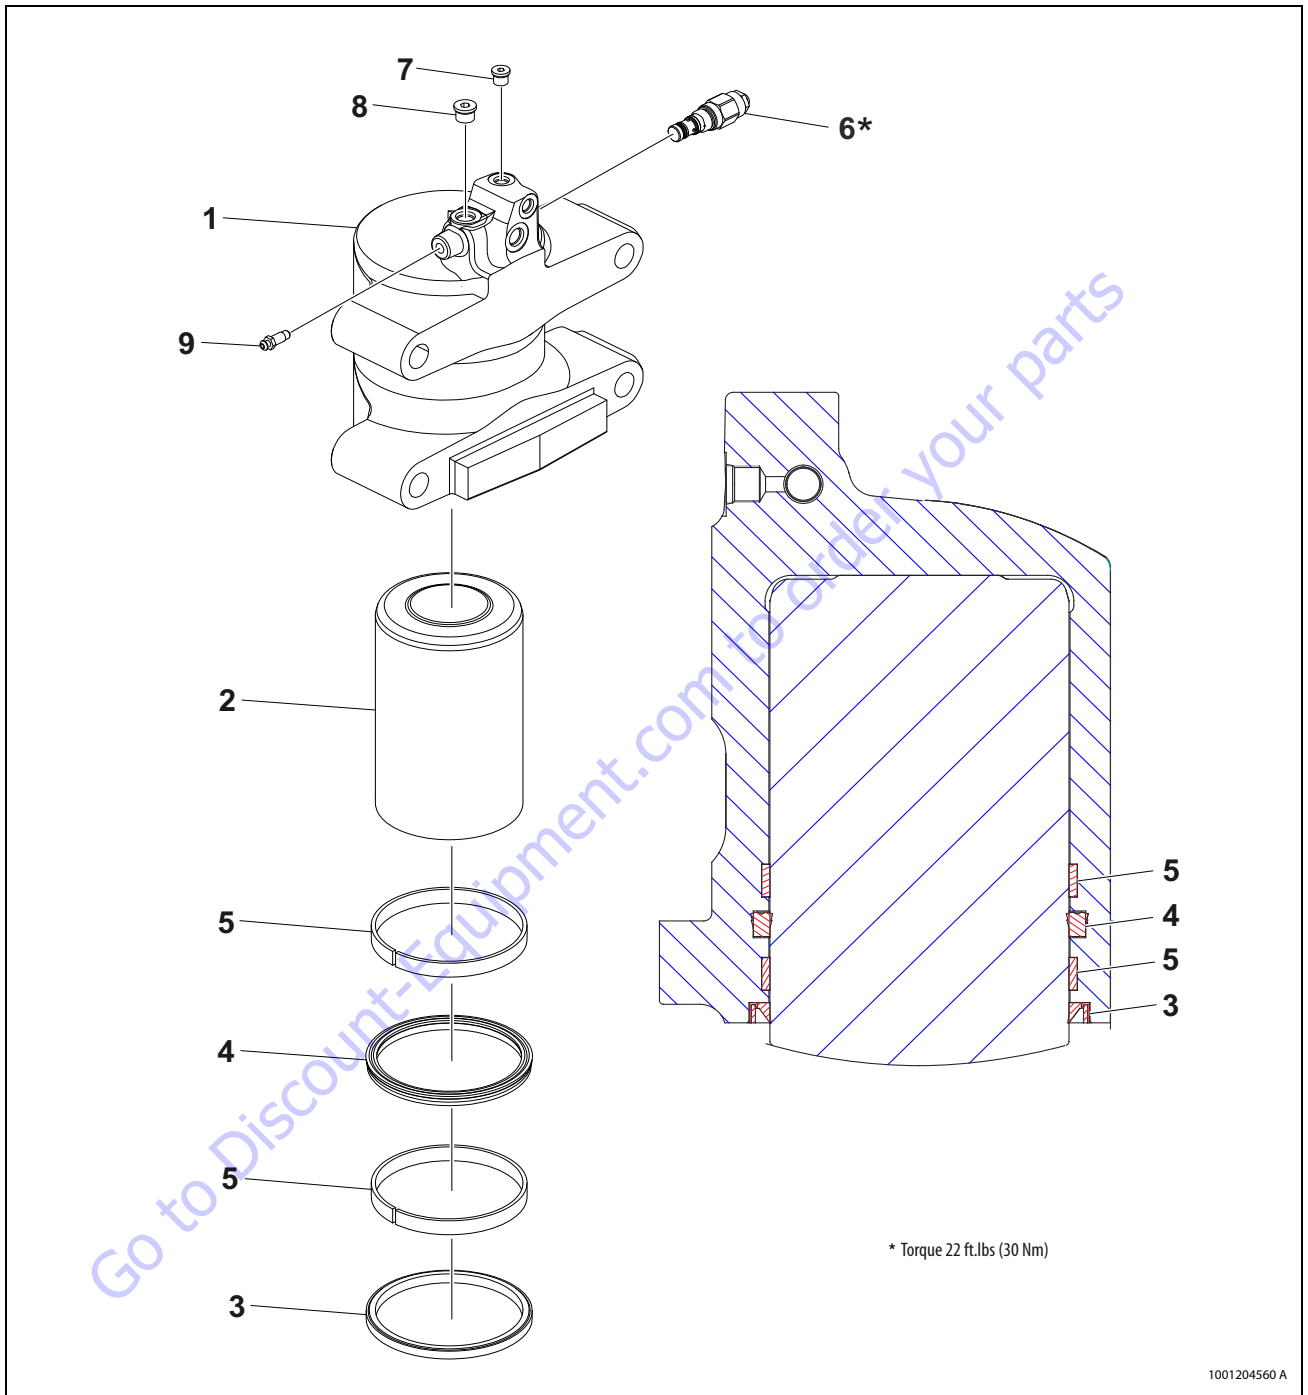

- |              |                         |
|--------------|-------------------------|
| 1. Barrel    | 6. Counterbalance Valve |
| 2. Rod       | 7. O-ring Plug          |
| 3. Wiper     | 8. O-ring Plug          |
| 4. Rod Seal  | 9. Bleeder Valve        |
| 5. Wear Ring |                         |

Figure 5-15. Axle Lockout Cylinder

**Platform Level Cylinder (800AJ - SN 0300183034 to Present, 800A - SN 0300183034 through 0300245050)**

**DISASSEMBLY**

**NOTICE**

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

**WARNING**

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove cartridge valve and fittings from the cylinder port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

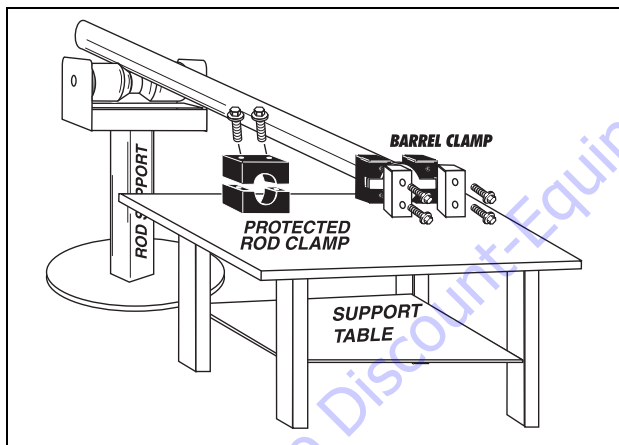


Figure 5-16. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

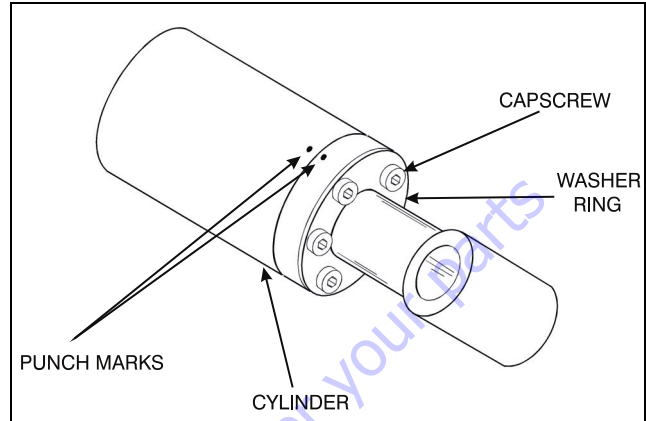


Figure 5-17. Capscrew Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


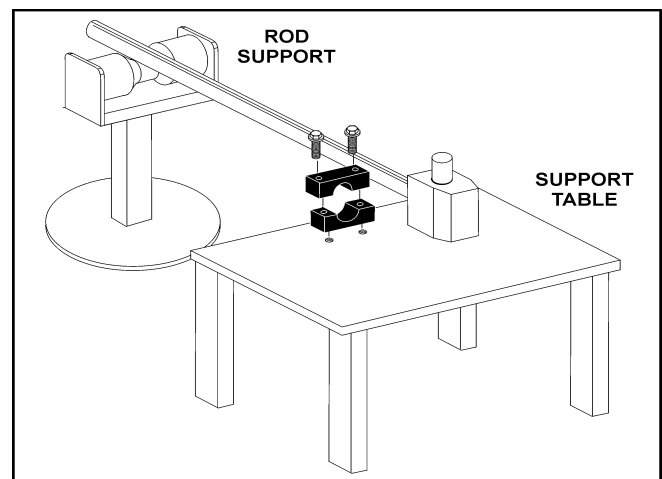


Figure 5-18. Cylinder Rod Support




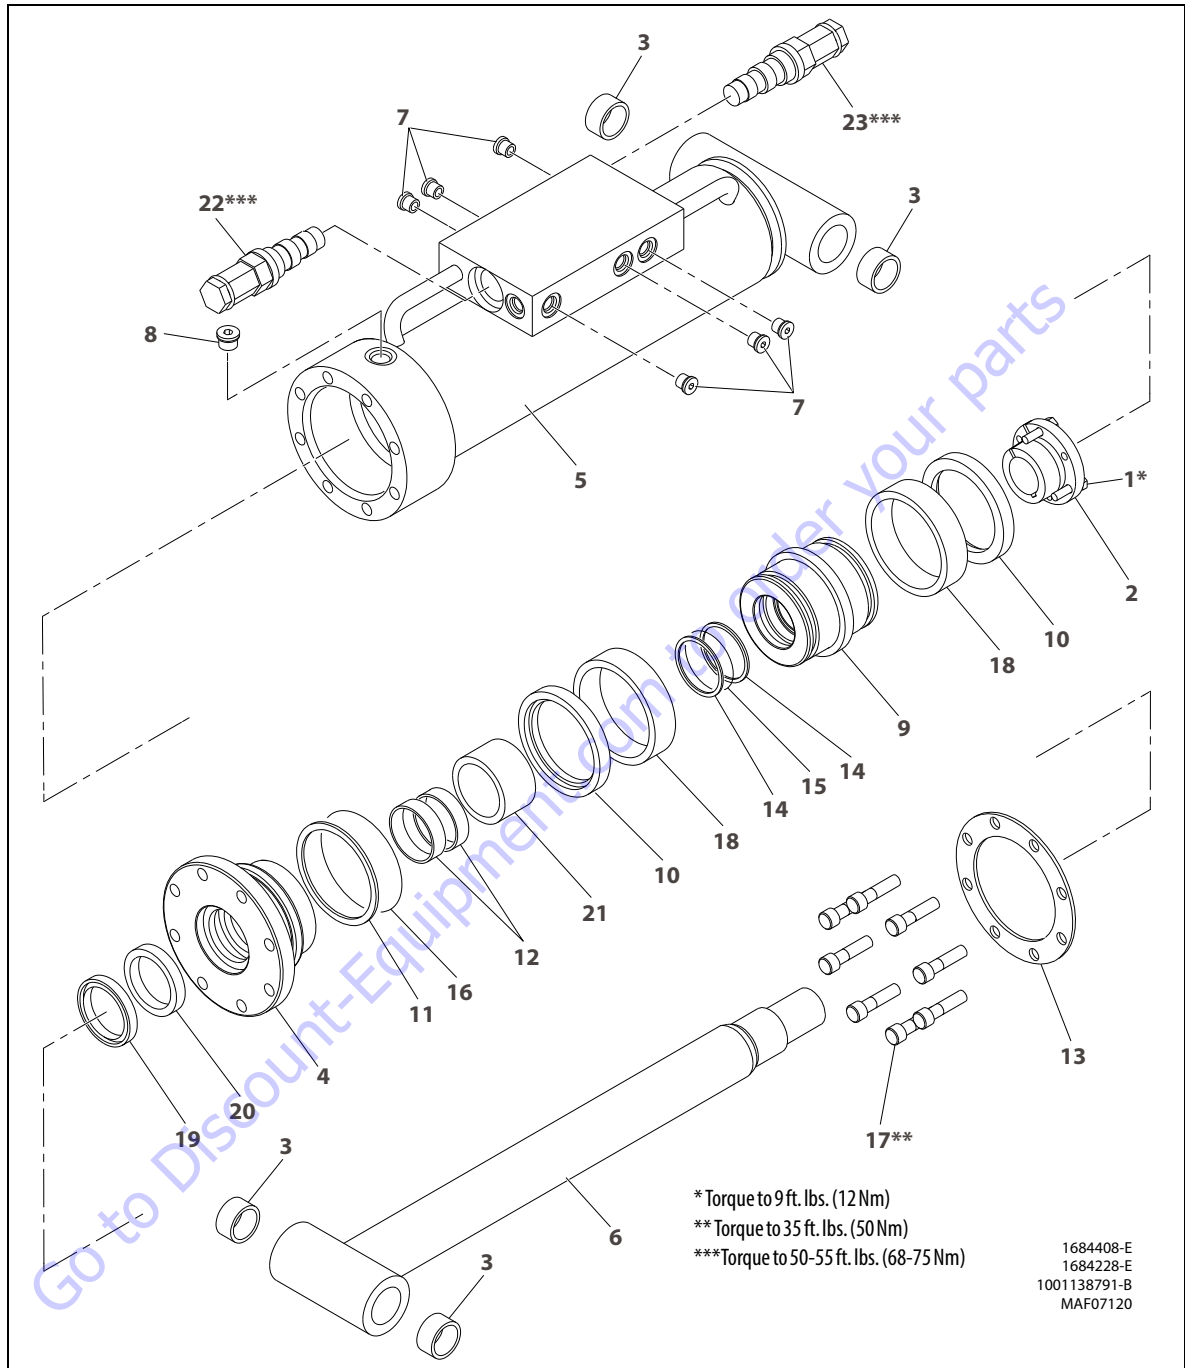

- |                    |               |                 |              |                     |
|--------------------|---------------|-----------------|--------------|---------------------|
| 1. Capscrew        | 6. Rod        | 11. Backup Ring | 16. O-ring   | 21. Tube Spacer     |
| 2. Tapered Bushing | 7. Plug       | 12. Wear Ring   | 17. Capscrew | 22. Cartridge Valve |
| 3. Bushing         | 8. Plug       | 13. Washer Ring | 18. Seal     | 23. Cartridge Valve |
| 4. Head            | 9. Piston     | 14. Backup Ring | 19. Wiper    |                     |
| 5. Barrel          | 10. Lock Ring | 15. O-ring      | 20. Seal     |                     |

**Figure 5-19. Platform Level Cylinder (800A - SN 0300183034 through 0300245050, 800AJ - SN 0300183034 through 0300240878)**

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

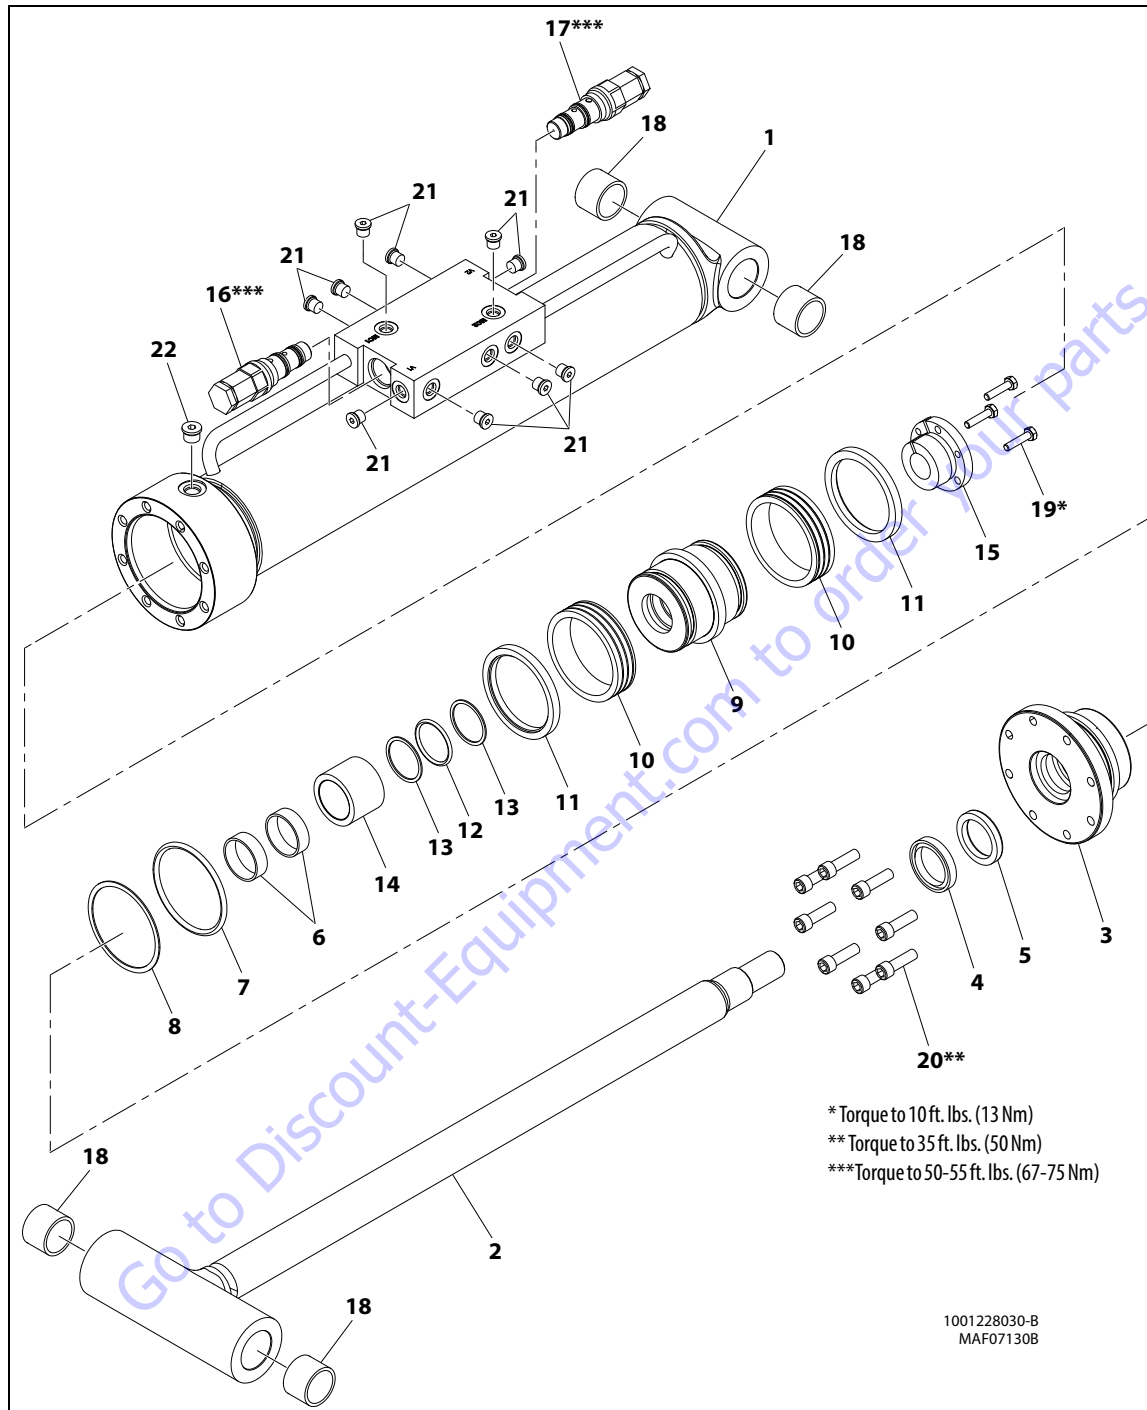

- |           |                |                     |                     |          |
|-----------|----------------|---------------------|---------------------|----------|
| 1. Barrel | 6. Wear Ring   | 11. Lock Ring       | 16. Cartridge Valve | 21. Plug |
| 2. Rod    | 7. O-ring      | 12. O-ring          | 17. Cartridge Valve | 22. Plug |
| 3. Head   | 8. Backup Ring | 13. Backup Ring     | 18. Bushing         |          |
| 4. Wiper  | 9. Piston      | 14. Tube Spacer     | 19. Capscrew        |          |
| 5. Seal   | 10. seal       | 15. Tapered Bushing | 20. Capscrew        |          |

**Figure 5-20. Platform Level Cylinder (800AJ - SN 0300240879 to Present)**

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
10. Remove the bushing from the piston.

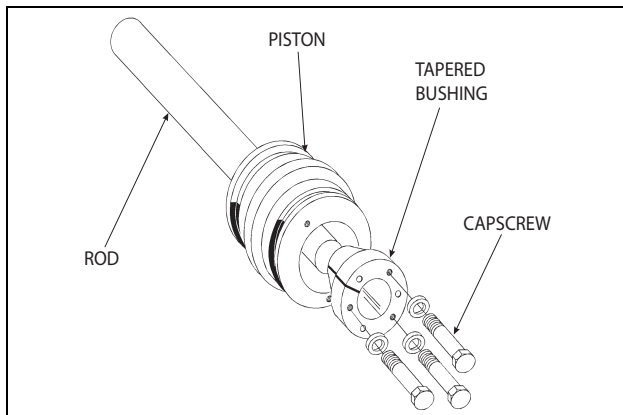


Figure 5-21. Tapered Bushing Removal


11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-rings, seal rings, and backup rings.
13. Remove piston spacer, if applicable, from the rod.
14. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

### CLEANING AND INSPECTION

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

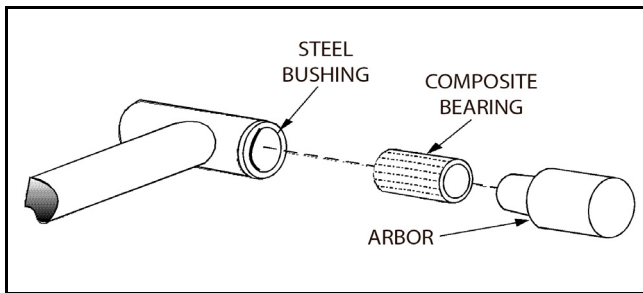

**Figure 5-22. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

### ASSEMBLY

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

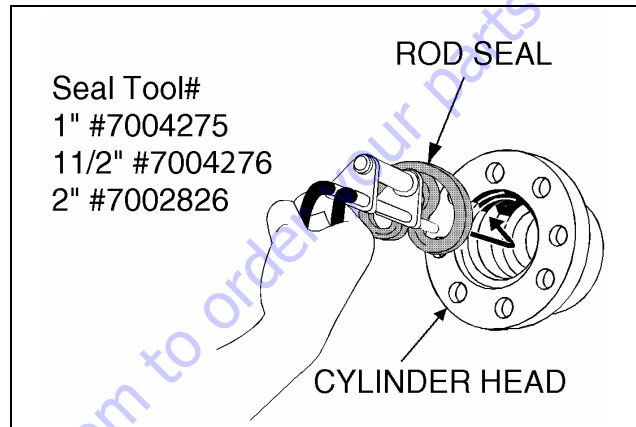

**Figure 5-23. Rod Seal Installation**

### NOTICE

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

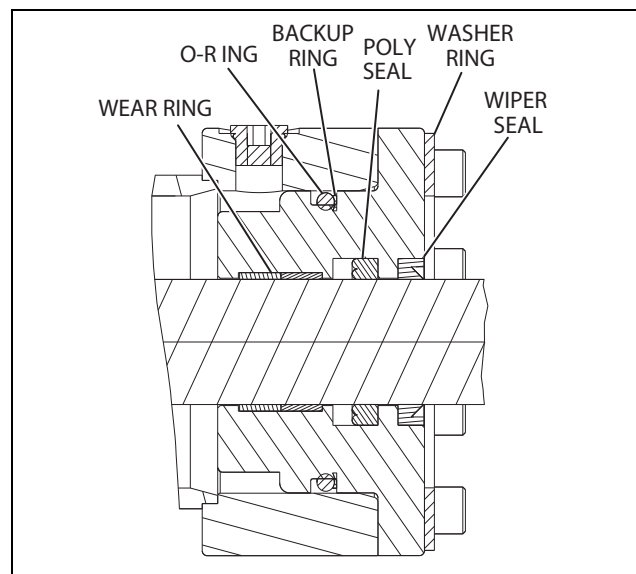

**Figure 5-24. Cylinder Head Seal Installation**

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

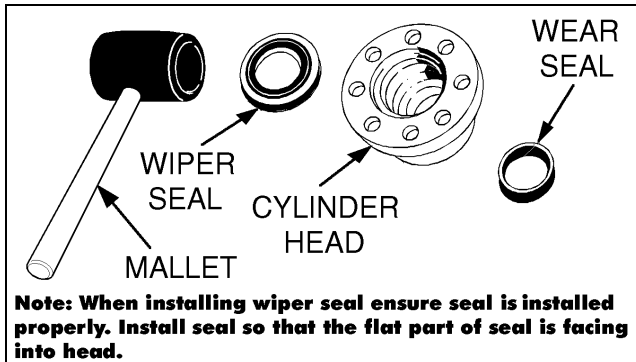


Figure 5-25. Wiper Seal Installation

3. Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

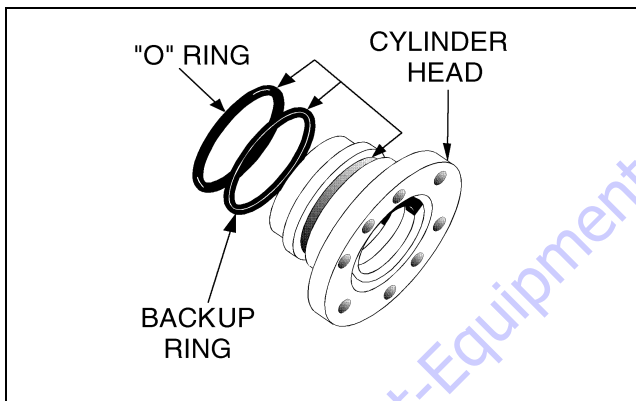


Figure 5-26. Installation of Head Seal Kit

4. Install washer ring onto rod if applicable, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
6. Place a new o-ring and back-up rings in the inner piston diameter groove.
7. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
8. Thread piston onto rod until it abuts the spacer end and install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

9. Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

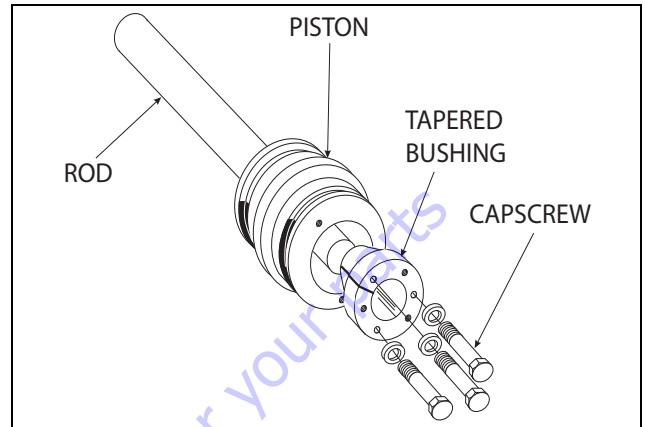


Figure 5-27. Tapered Bushing Installation

10. Tighten the capscrews evenly and progressively and torque capscrews as shown in Figure 5-19. and Figure 5-20.

11. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;

- a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
- b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

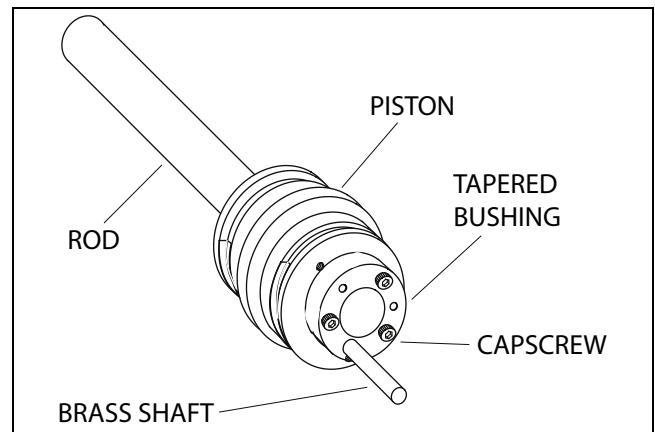


Figure 5-28. Seating the Tapered Bearing

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

12. Rotate the capscrews evenly and progressively in rotation to torque as shown in Figure 5-19, and Figure 5-20.
13. Remove the cylinder rod from the holding fixture.

### NOTICE

WHEN INSTALLING HYDROLOCK PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO HYDROLOCK PISTON SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

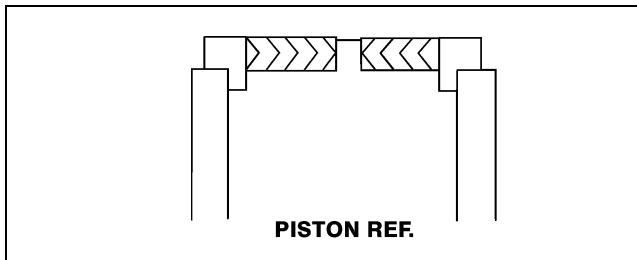


Figure 5-29. Hydrolock Piston Seal Installation

14. Place new hydrolock seal and guidelock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

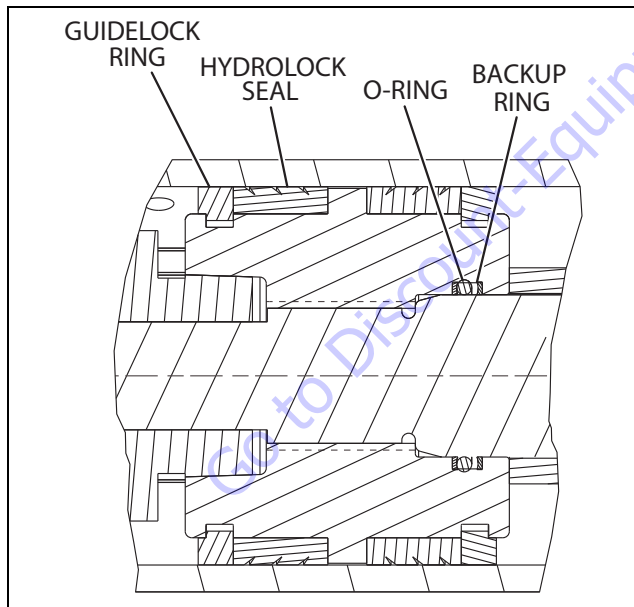


Figure 5-30. Piston Seal Kit Installation

15. Position the cylinder barrel in a suitable holding fixture.

### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

16. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
17. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

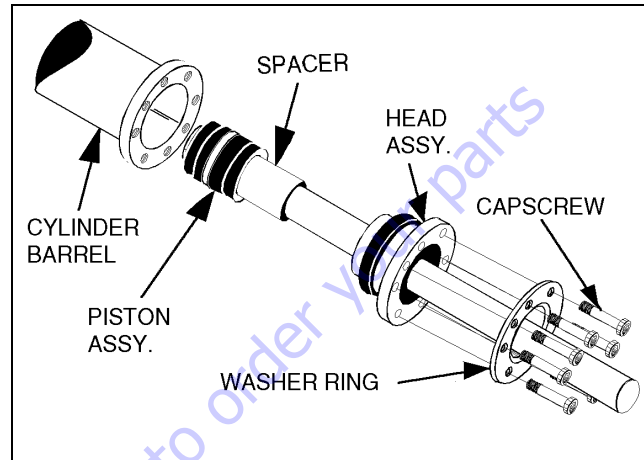


Figure 5-31. Rod Assembly Installation

18. Apply JLG Threadlocker if applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts to 35 ft.lbs. (50 Nm).
19. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves.
20. If applicable, install the cartridge-type holding valve and fittings in the rod port block, using new o-rings as applicable. Torque valve to 50-55 ft.lbs. (68-75 Nm).

**Platform Level Cylinder (800A - SN 0300245051 to Present)**

**DISASSEMBLY**

**NOTICE**

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

**WARNING**

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove the counterbalance valves and plugs from the cylinder port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.


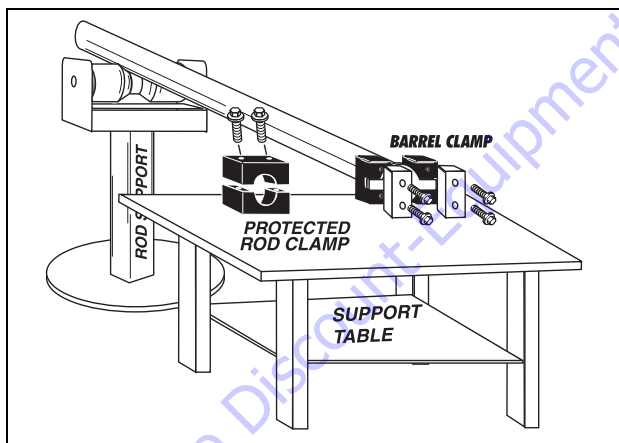


Figure 5-32. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using a hook spanner, unscrew the cylinder head from the barrel.

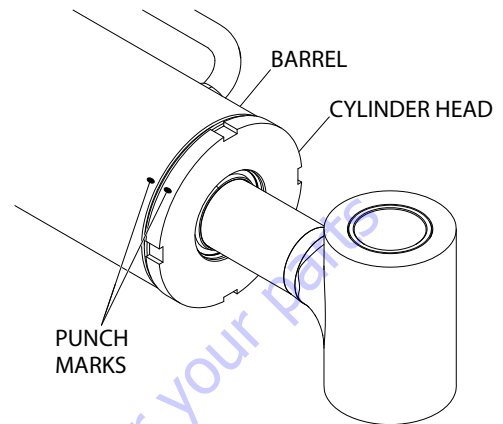

MAF00070

Figure 5-33. Cylinder Head Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


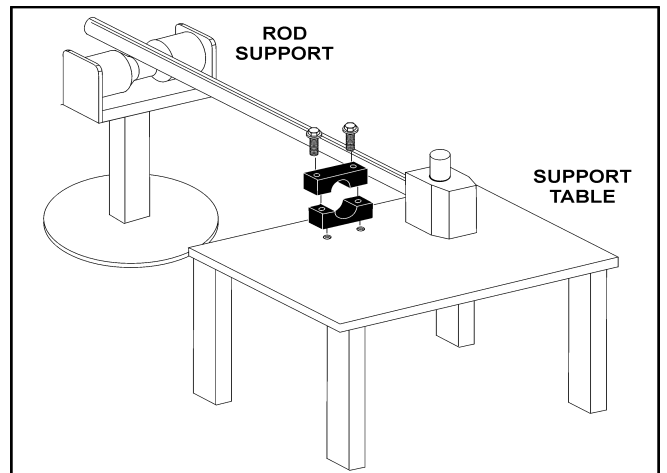


Figure 5-34. Cylinder Rod Support



- |           |                 |                 |                 |                     |
|-----------|-----------------|-----------------|-----------------|---------------------|
| 1. Barrel | 6. Rod Seal     | 11. O-ring      | 15. Ball        | 19. Cartridge Valve |
| 2. Rod    | 7. Backup Ring  | 12. Piston      | 16. Setscrew    | 20. Cartridge Valve |
| 3. Head   | 8. Spacer       | 13. Piston Seal | 17. Spacer Tube | 21. Plug            |
| 4. Wiper  | 9. O-ring       | 14. O-ring      | 18. Bushing     |                     |
| 5. Seal   | 10. Backup Ring |                 |                 |                     |

Figure 5-35. Platform Level Cylinder (800A - SN 0300245051 to Present)

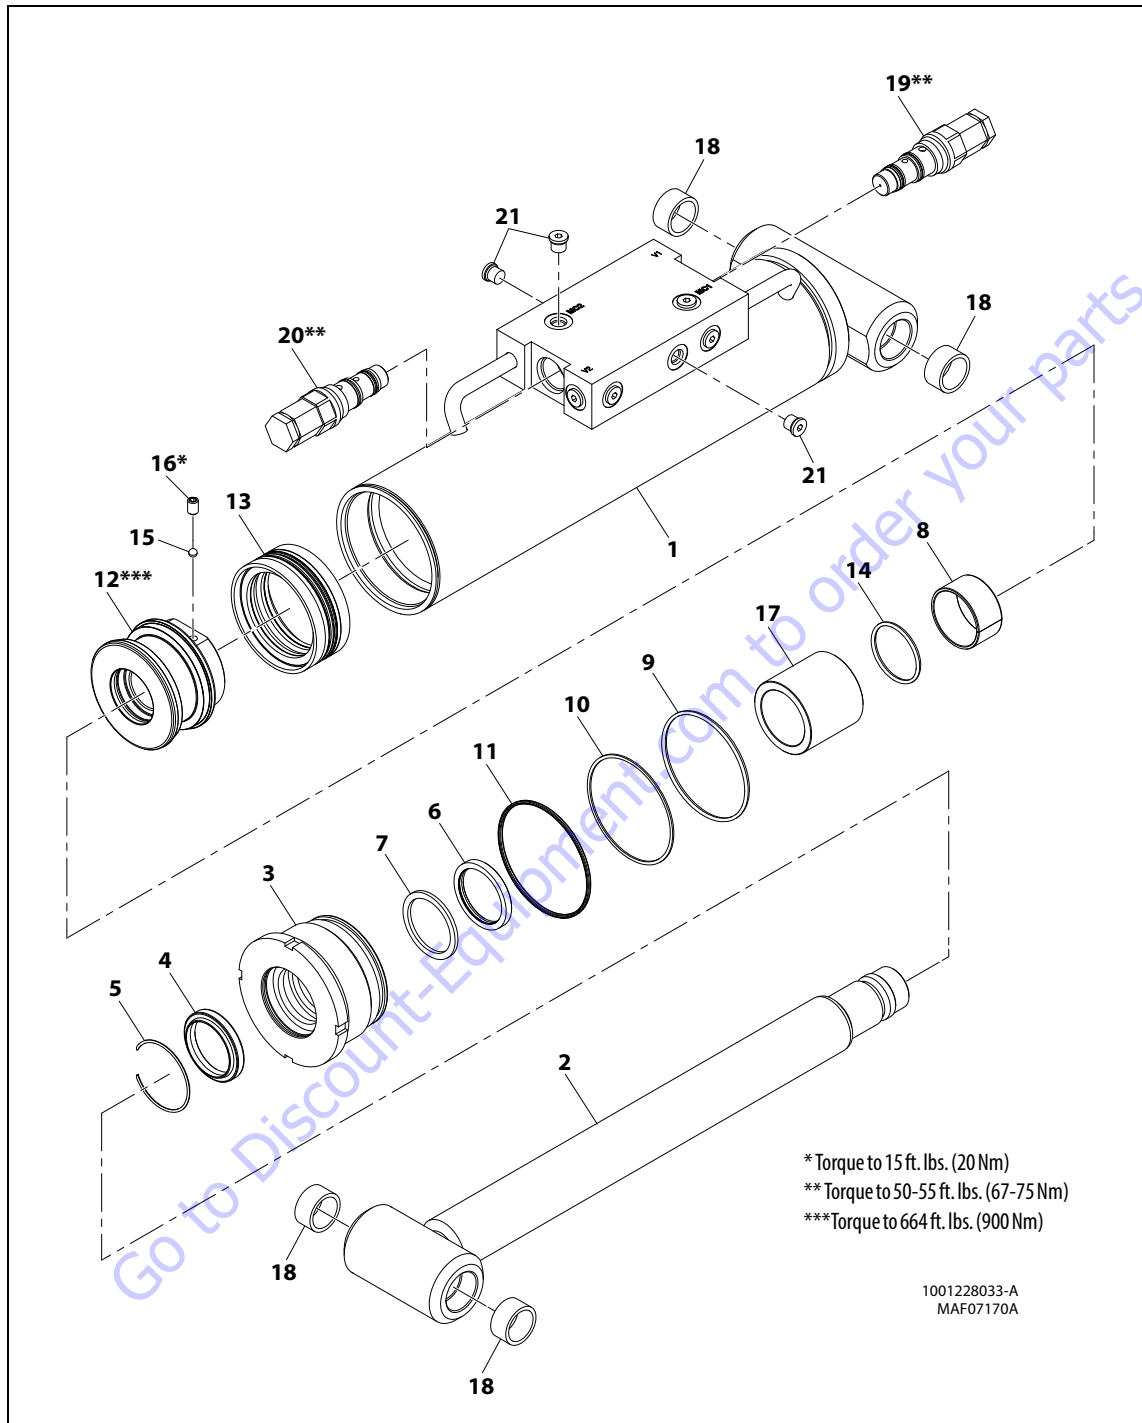


8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Loosen and remove the setscrew and ball which attaches the piston to the rod.
10. Screw the piston counterclockwise by hand and remove the piston from cylinder rod.
11. Remove and discard the piston seal.
12. Remove the rod from the holding fixture. Remove the cylinder head. Discard the o-rings, backup ring, rod seal, bearing, retaining ring and wiper seal.

**CLEANING AND INSPECTION**

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect threaded portion of barrel for damage. Dress threads as necessary.
6. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
7. Inspect threaded portion of piston for damage. Dress threads as necessary.
8. Inspect seal grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
9. Inspect cylinder head inside diameter for scoring, tapering, ovality or other damage. Replace if necessary.
10. Inspect threaded portion of head for damage. Dress threads as necessary.
11. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
12. Inspect cylinder head outside diameter for scoring, tapering, ovality or other damage. Replace if necessary.
13. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inner side of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

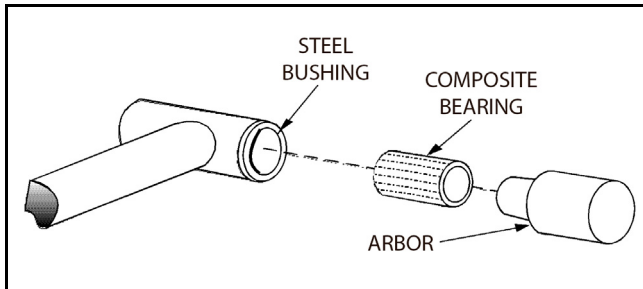

**Figure 5-36. Composite Bearing Installation**


14. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
15. If applicable, inspect port block fittings and holding valve. Replace as necessary.
16. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
17. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

### ASSEMBLY

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

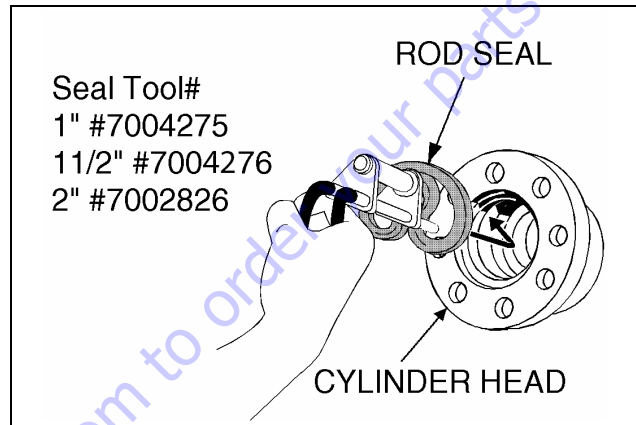

**Figure 5-37. Rod Seal Installation**

### NOTICE

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

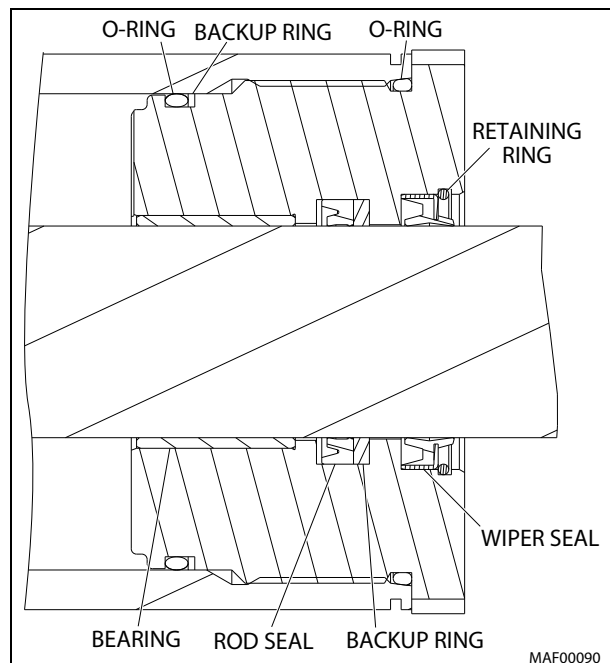

**Figure 5-38. Cylinder Head Seal Installation**

- Use a soft mallet to tap a new wiper seal into the applicable cylinder head groove. Install a new retaining ring, rod seal, backup ring and bearing into the applicable inside diameter of the cylinder head groove.

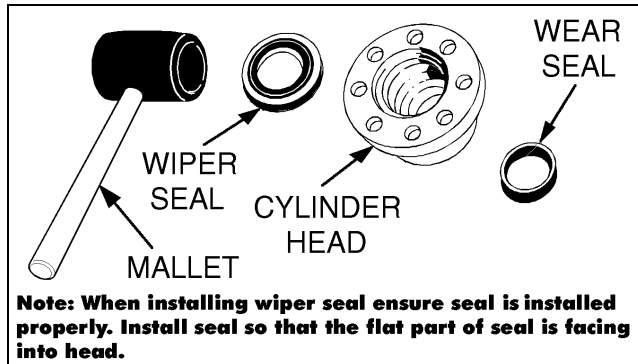


Figure 5-39. Wiper Seal Installation

- Place new o-rings and backup ring in the applicable outside diameter groove of the cylinder head.

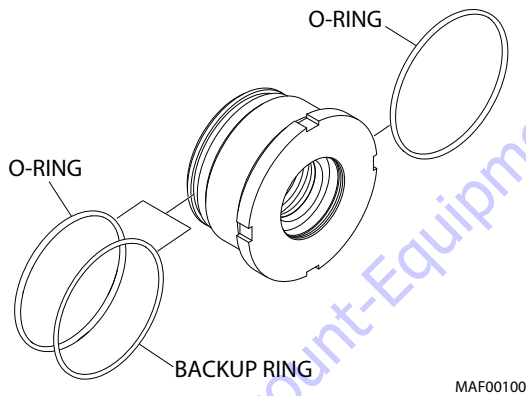


Figure 5-40. Wiper Seal Installation

- Carefully install the cylinder head on the rod, ensuring that the wiper seal, retaining ring and rod seals are not damaged or dislodged. Push the head along the rod to the rod end.
- Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
- Place a new o-ring in the applicable inside diameter of the piston.
- Carefully thread the piston on the cylinder rod, ensuring that the o-ring is not damaged or dislodged and torque piston to 664 ft. lbs (900 Nm).
- Secure piston using ball and setscrew. Torque setscrew to 15 ft. lbs (20 Nm).

- Remove the cylinder rod from the holding fixture. Place new piston seal in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

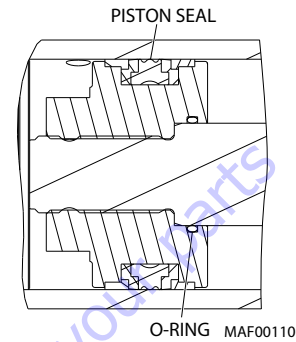


Figure 5-41. Piston Seal Kit Installation

- Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

- With barrel clamped securely, and while adequately supporting the rod, insert the piston loading end into the barrel cylinder. Ensure that the piston loading piston seal are not damaged or dislodged.
- Continue pushing the rod into the barrel until the cylinder head can be inserted into the cylinder barrel.
- Screw the cylinder head into the barrel using a hook spanner.
- Caulk at the machined area of the cylinder barrel end so that it locks the cylinder head in place and it does not unscrew from the barrel.

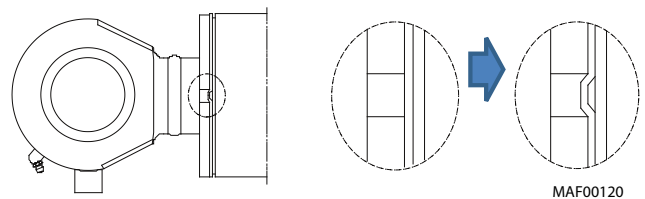


Figure 5-42. Caulking

- After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the reinstallation of any holding valve or valves.
- Install the new plugs into the cylinder port block. Install the counterbalance valves in the rod port block and torque to 50-55 ft. lbs. (67-75 Nm).

## Upright Level Cylinder

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove the cartridge valve and fittings from the cylinder port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

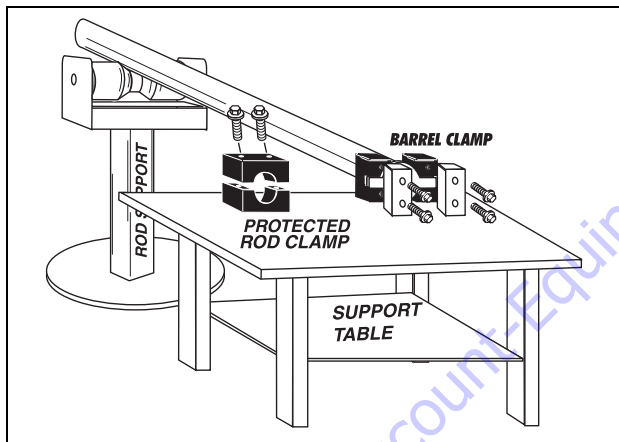


Figure 5-43. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

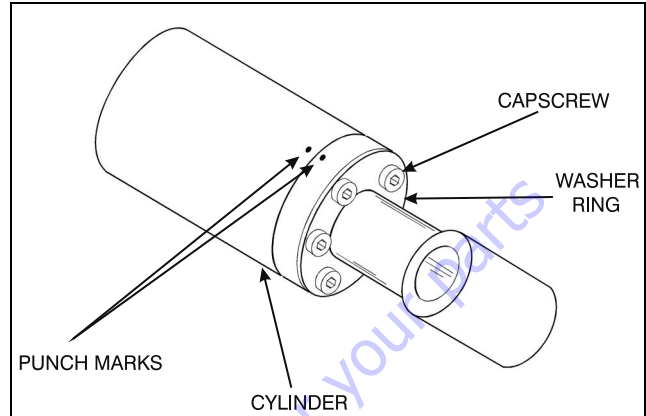


Figure 5-44. Capscrew Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


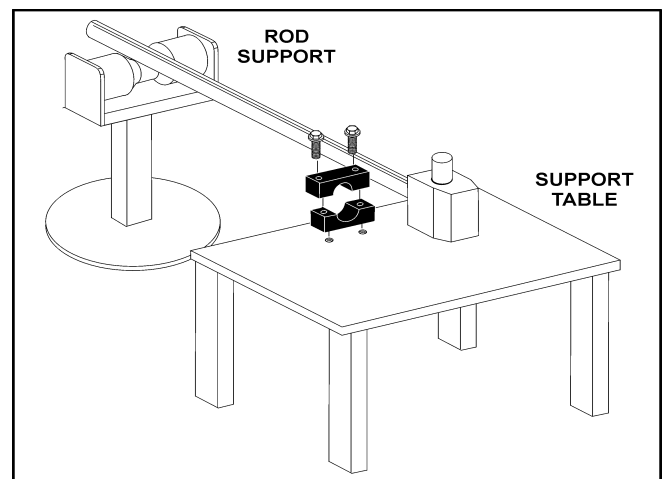



Figure 5-45. Cylinder Rod Support

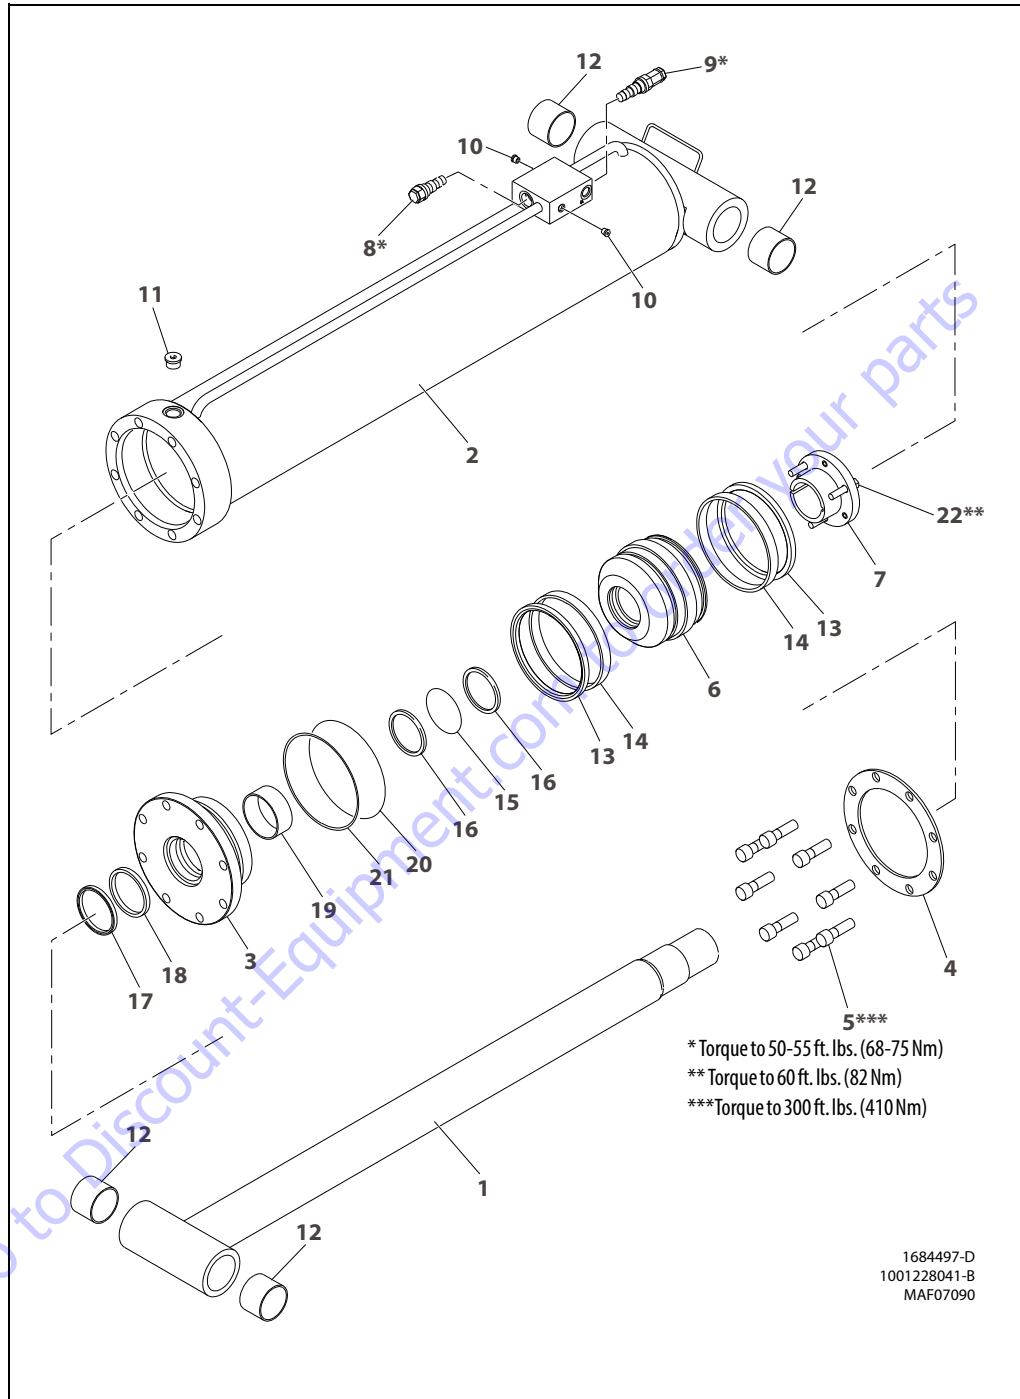

- |                |                    |                 |                 |                 |
|----------------|--------------------|-----------------|-----------------|-----------------|
| 1. Rod         | 6. Piston          | 11. O-ring Plug | 15. Washer Ring | 19. Wear Ring   |
| 2. Barrel      | 7. Tapered Bushing | 12. Bushing     | 16. Backup Ring | 20. O-ring      |
| 3. Head        | 8. Cartridge Valve | 13. Lock Ring   | 17. Wiper       | 21. Backup Ring |
| 4. Washer Ring | 9. Cartridge Valve | 14. Seal        | 18. Rod Seal    | 22. Bolt        |
| 5. Bolt        | 10. O-ring Plug    |                 |                 |                 |

Figure 5-46. Upright Level Cylinder

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
10. Remove the bushing from the piston.

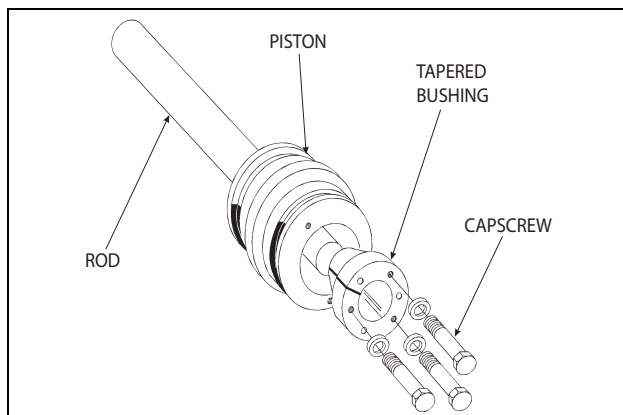


**Figure 5-47. Tapered Bushing Removal**

11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-rings, seal rings, and backup rings.
13. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

**CLEANING AND INSPECTION**

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

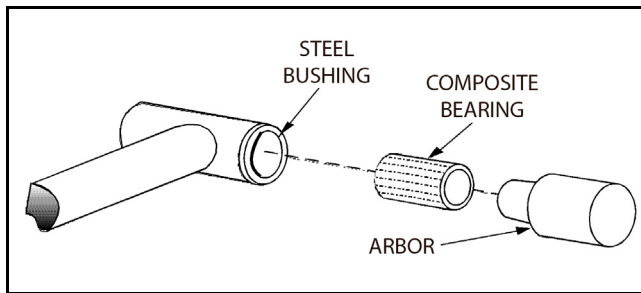

**Figure 5-48. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

**ASSEMBLY**

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

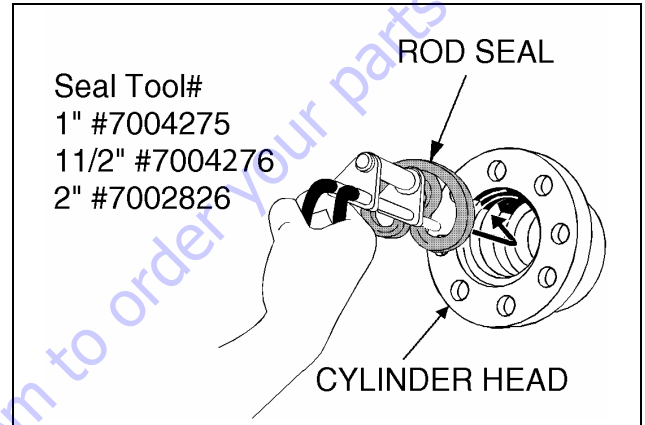

**Figure 5-49. Rod Seal Installation**

**NOTICE**

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

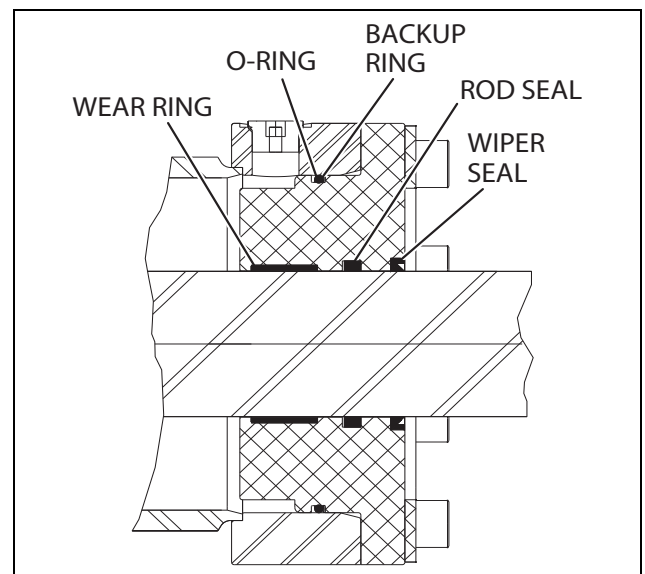

**Figure 5-50. Cylinder Head Seal Installation**

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

- Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

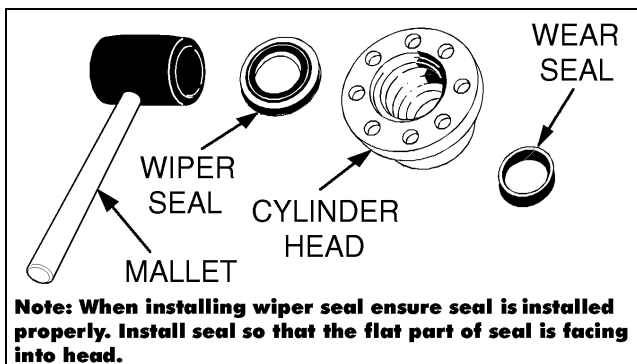


Figure 5-51. Wiper Seal Installation

- Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

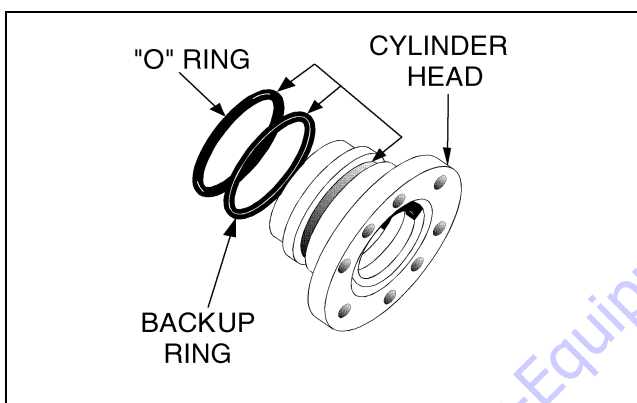


Figure 5-52. Installation of Head Seal Kit

- Install washer ring onto rod, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
- Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
- Place a new o-ring and back-up rings in the inner piston diameter groove.
- Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
- Thread piston onto rod and install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

- Install the bolt in tapered bushing.

- Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

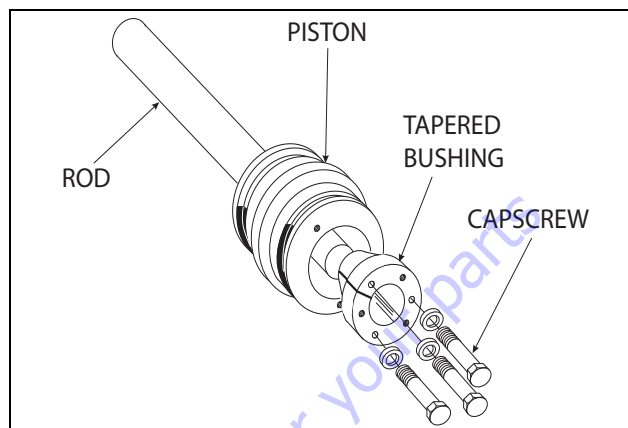


Figure 5-53. Tapered Bushing Installation

- Tighten the capscrews evenly and progressively in rotation to 60 ft.lbs. (82 Nm).
- After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
  - Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
  - Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

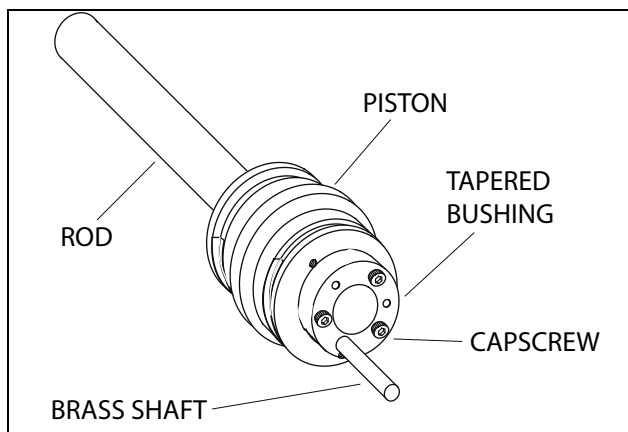


Figure 5-54. Seating the Tapered Bearing



13. Rotate the capscrews evenly and progressively in rotation to 60 ft.lbs. (82 Nm).
14. Remove the cylinder rod from the holding fixture.

**NOTICE**

WHEN INSTALLING HYDROLOCK PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO HYDROLOCK PISTON SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

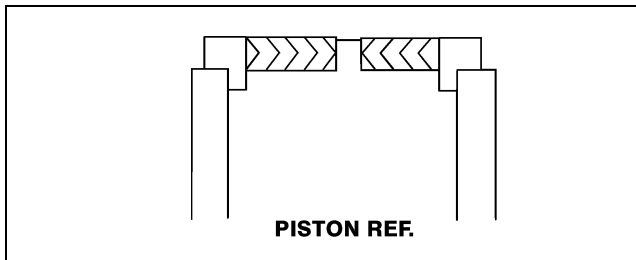


Figure 5-55. Hydrolock Piston Seal Installation

15. Place new hydrolock seal and guidelock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

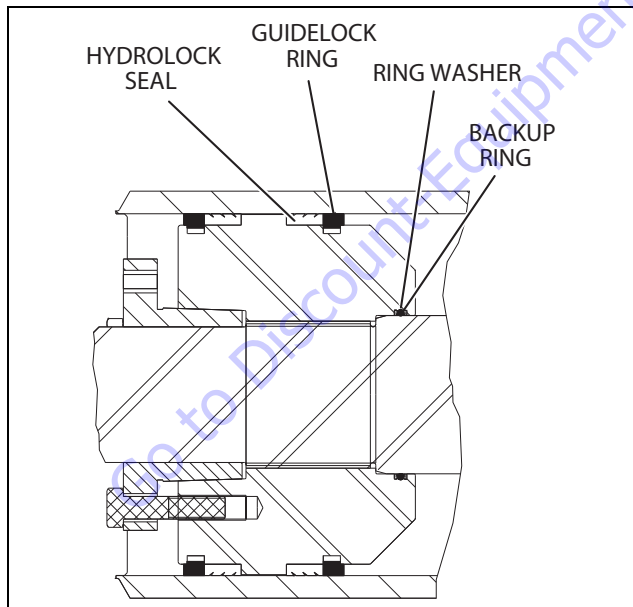


Figure 5-56. Piston Seal Kit Installation

16. Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

17. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
18. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

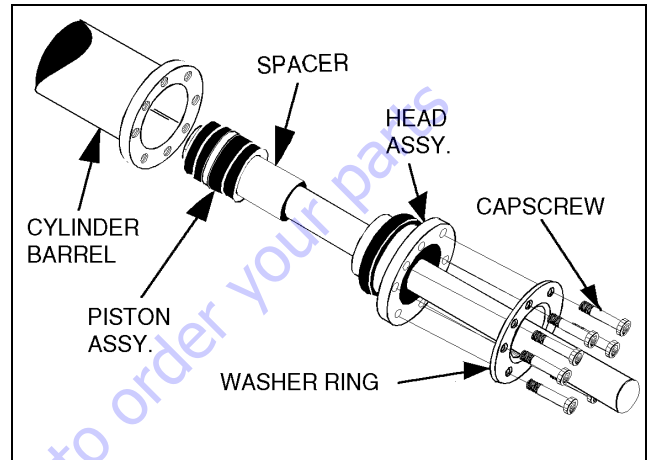


Figure 5-57. Rod Assembly Installation

19. Apply JLG Threadlocker if applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts to 300 ft.lbs. (410 Nm).
20. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves.
21. If applicable, install the cartridge-type holding valve and fittings in the rod port block, using new o-rings as applicable. Torque valves to 50-55 ft.lbs. (68-75 Nm).

## Jib Lift Cylinder (800AJ Only)

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove the counterbalance holding valve and fittings from the cylinder port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

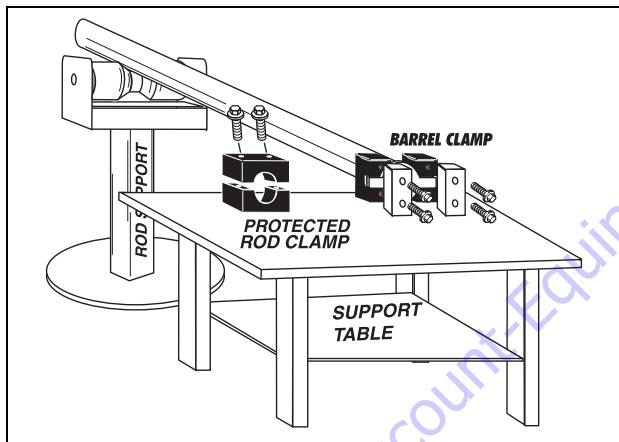


Figure 5-58. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

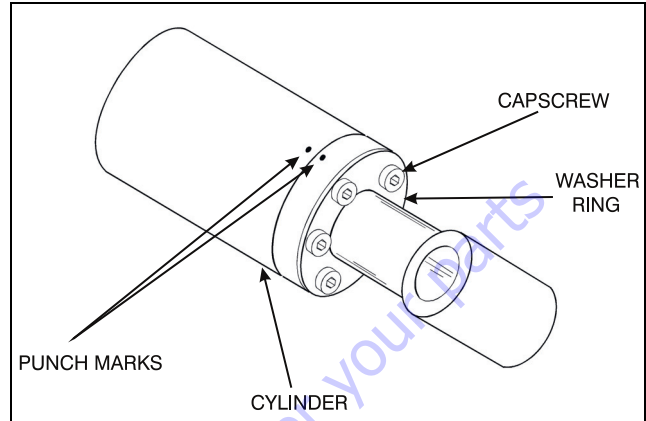


Figure 5-59. Capscrew Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


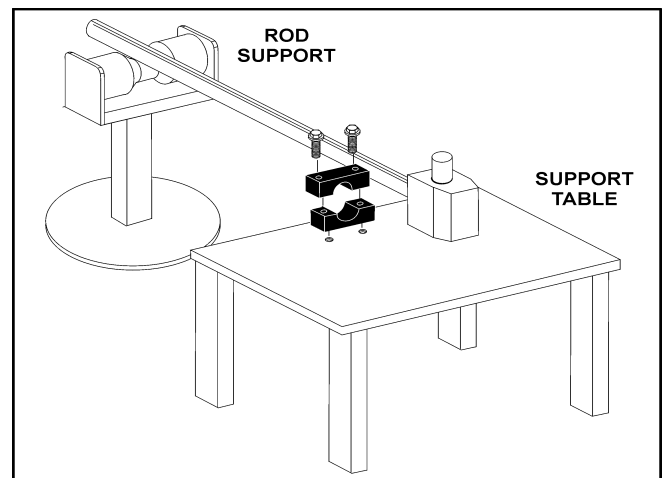



Figure 5-60. Cylinder Rod Support

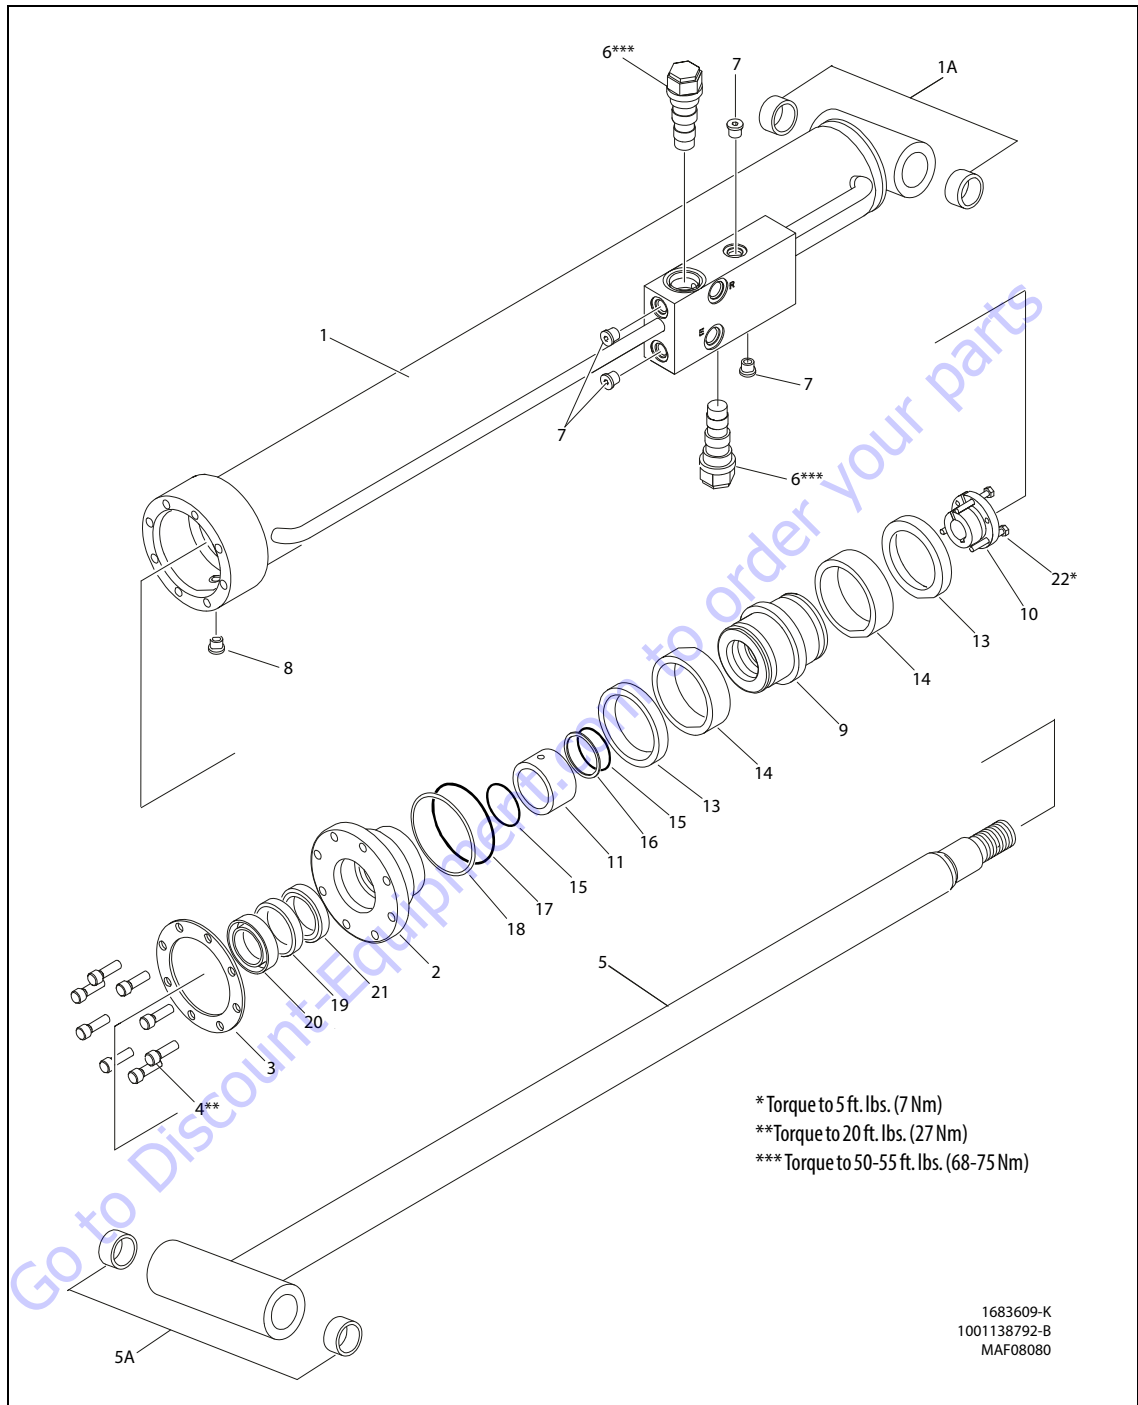

- |                |                         |                     |                 |                |
|----------------|-------------------------|---------------------|-----------------|----------------|
| 1. Barrel      | 5. Rod                  | 9. Piston           | 14. Piston Seal | 19. Rod Seal   |
| 1A. Bushing    | 5A. Bushing             | 10. Tapered Bushing | 15. O-ring      | 20. Wiper Seal |
| 2. Head        | 6. Counterbalance Valve | 11. Tube Spacer     | 16. Backup Ring | 21. Wear Ring  |
| 3. Ring Washer | 7. O-ring Plug          | 12. Setscrew        | 17. O-ring      | 22. Capscrew   |
| 4. Bolt        | 8. O-ring Plug          | 13. Lock Ring       | 18. Backup Ring |                |


Figure 5-61. Jib Lift Cylinder (SN 0300183034 through 0300245050)

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

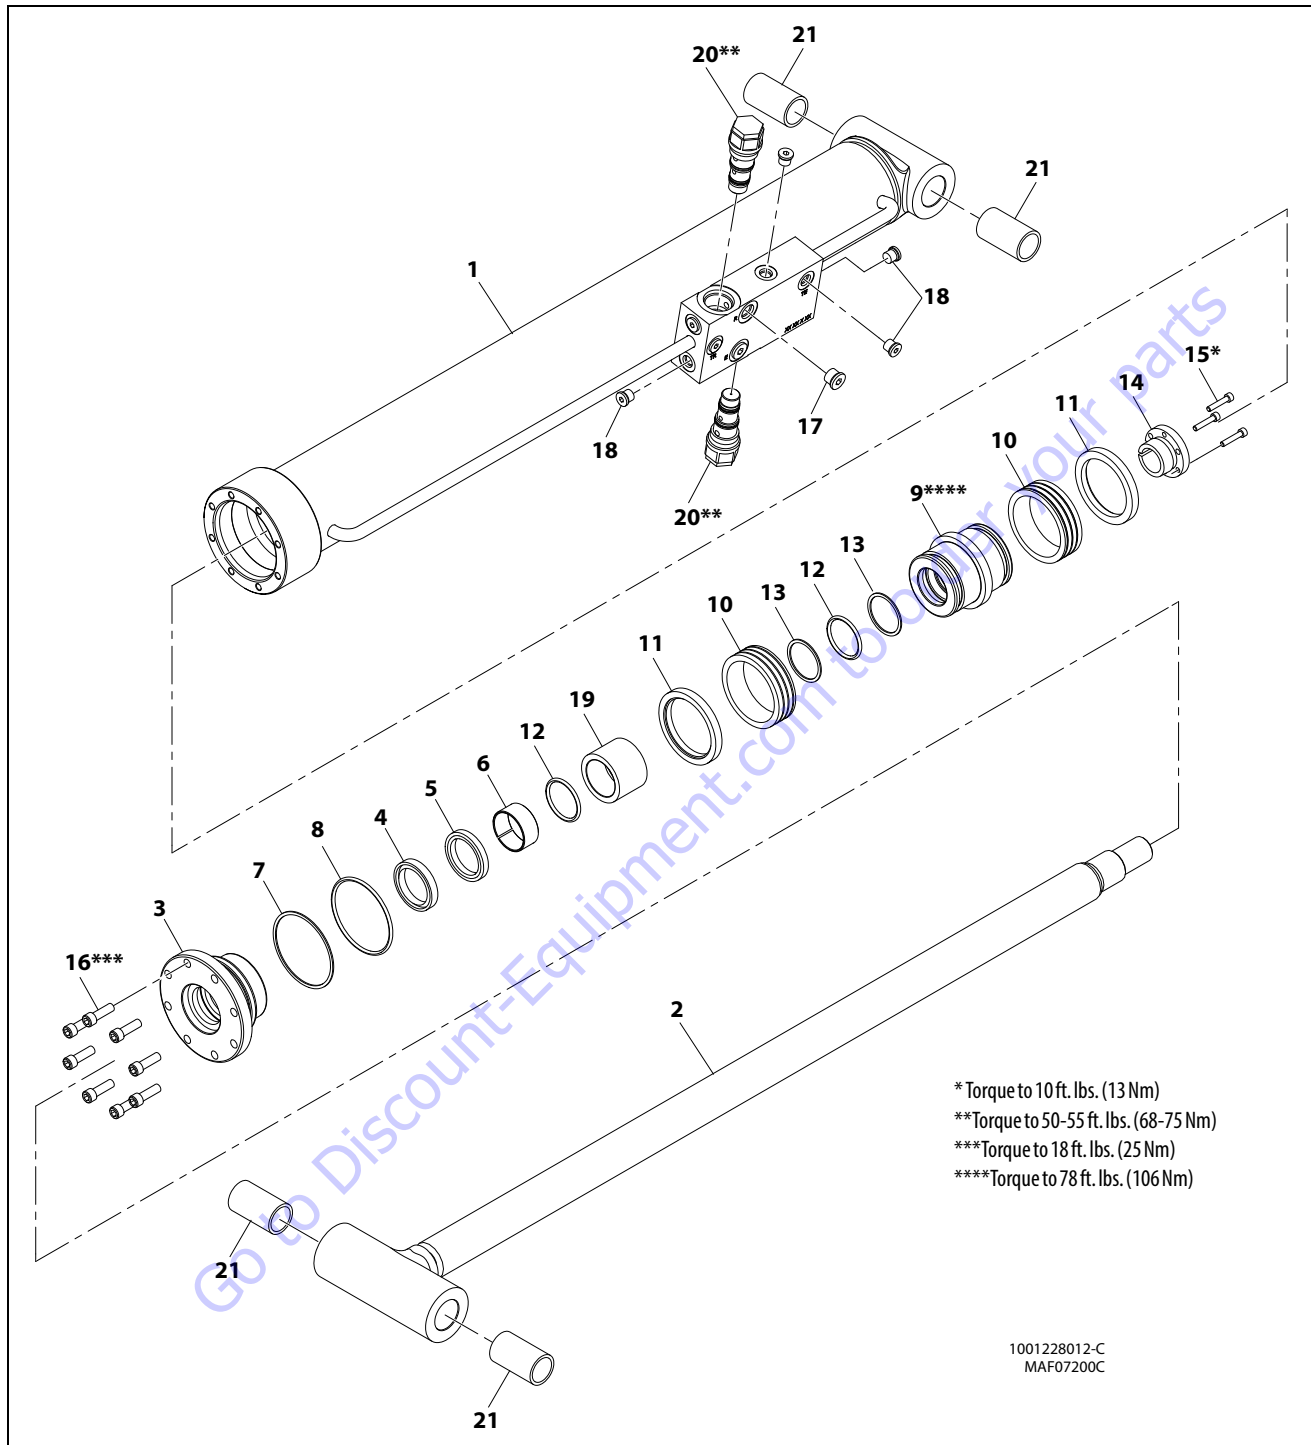

- |               |                 |                     |                 |                          |
|---------------|-----------------|---------------------|-----------------|--------------------------|
| 1. Barrel     | 6. Wear Ring    | 11. Lock Ring       | 16. Capscrew    | 20. Counterbalance Valve |
| 2. Rod        | 7. Backup Ring  | 12. O-ring          | 17. O-ring Plug | 21. Bushing              |
| 3. Head       | 8. O-ring       | 13. Backup Ring     | 18. O-ring Plug |                          |
| 4. Rod Seal   | 9. Piston       | 14. Tapered Bushing | 19. Tube Spacer |                          |
| 5. Wiper Seal | 10. Piston Seal | 15. Capscrew        |                 |                          |


**Figure 5-62. Jib Lift Cylinder (SN 0300245051 through 0300245146)**

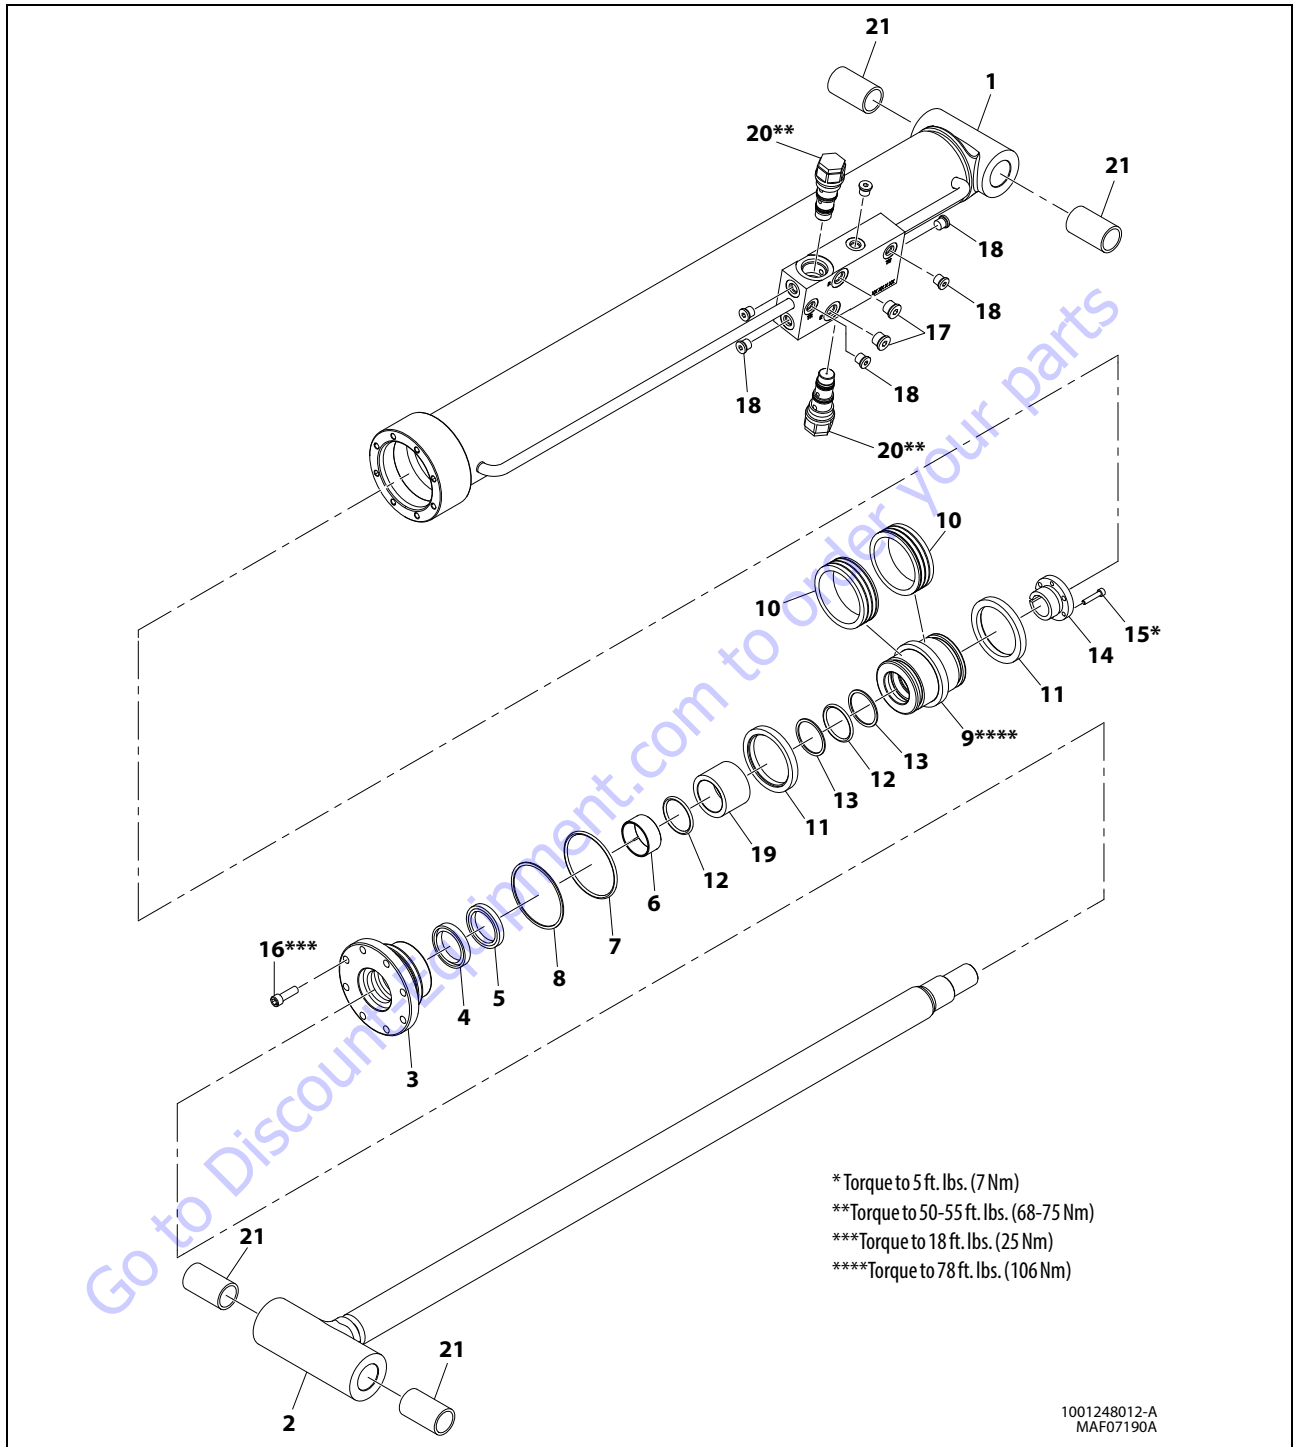

- |               |                 |                     |                 |                          |
|---------------|-----------------|---------------------|-----------------|--------------------------|
| 1. Barrel     | 6. Wear Ring    | 11. Lock Ring       | 16. Capscrew    | 20. Counterbalance Valve |
| 2. Rod        | 7. O-ring       | 12. O-ring          | 17. O-ring Plug | 21. Bushing              |
| 3. Head       | 8. Backup Ring  | 13. Backup Ring     | 18. O-ring Plug |                          |
| 4. Wiper Seal | 9. Piston       | 14. Tapered Bushing | 19. Tube Spacer |                          |
| 5. Rod Seal   | 10. Piston Seal | 15. Capscrew        |                 |                          |

Figure 5-63. Jib Lift Cylinder (SN 0300245051 through 0300245146, SN 0300245147 to Present)

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
10. Remove the bushing from the piston.

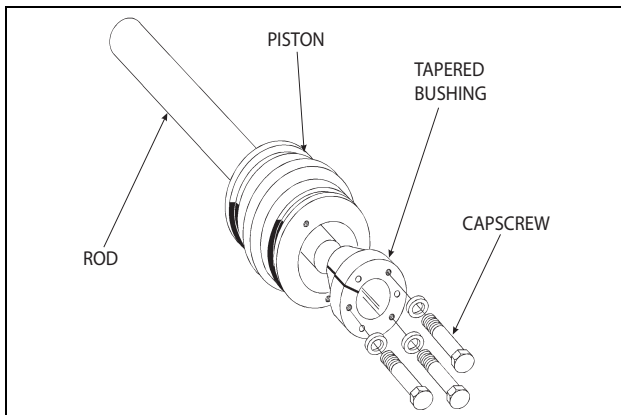


**Figure 5-64. Tapered Bushing Removal**

11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-rings, seal rings, and backup rings.
13. Remove piston spacer, if applicable, from the rod.
14. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

**CLEANING AND INSPECTION**

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

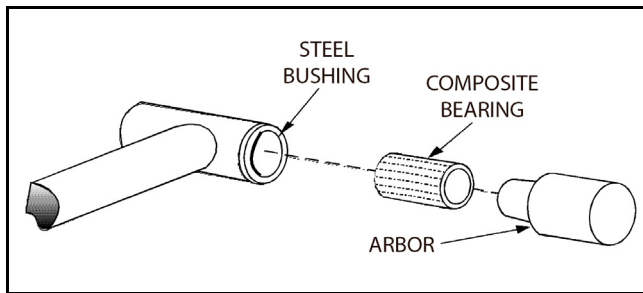

**Figure 5-65. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

**ASSEMBLY**

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

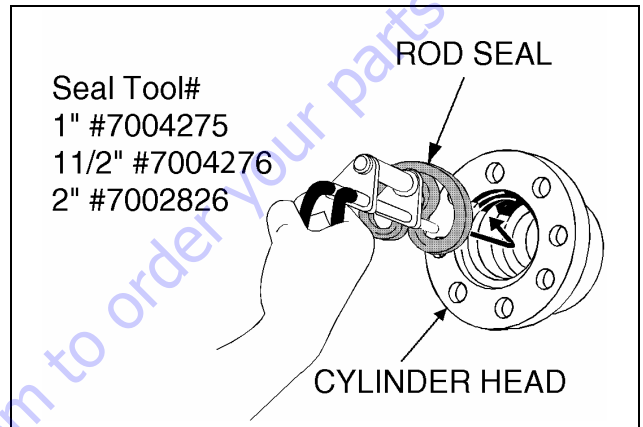

**Figure 5-66. Rod Seal Installation**

**NOTICE**

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

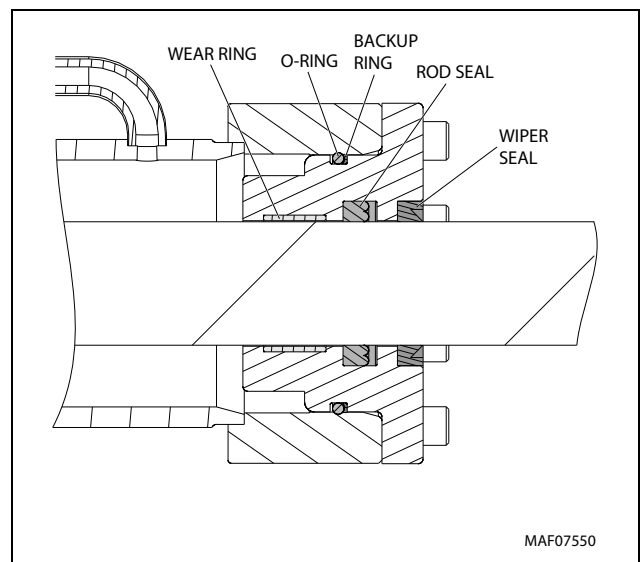

**Figure 5-67. Cylinder Head Seal Installation**

- Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

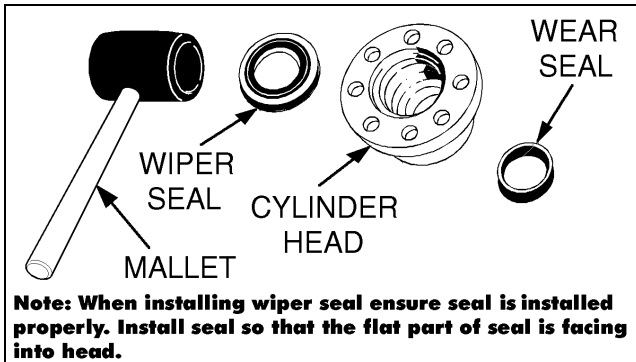


Figure 5-68. Wiper Seal Installation

- Place a new o-ring and back-up ring in the applicable outside diameter groove of the cylinder head.

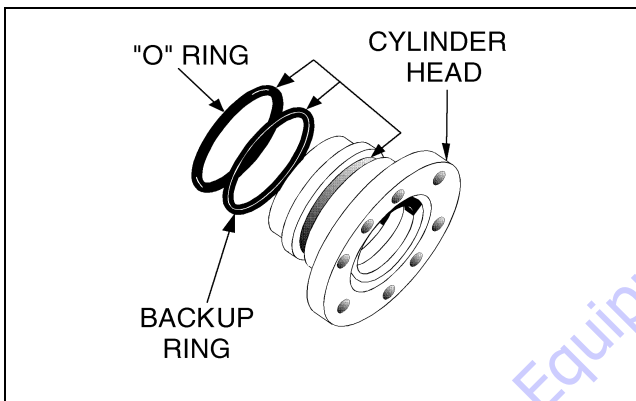


Figure 5-69. Installation of Head Seal Kit

- Install washer ring onto rod if applicable. Carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
- Carefully slide the piston spacer on the rod.
- Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
- Place a new o-ring and back-up rings in the inner piston diameter groove.
- Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
- Thread piston onto rod until it abuts the spacer end. Torque piston as shown in Figure 5-61., Figure 5-62. and Figure 5-63. Install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

- Install the bolts in tapered bushing.
- Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

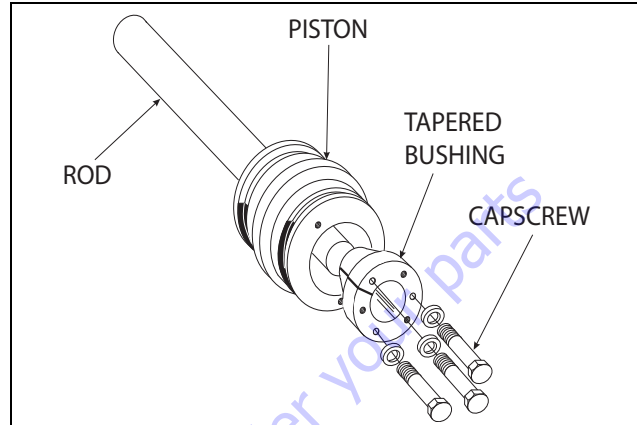


Figure 5-70. Tapered Bushing Installation

- Tighten the capscrews evenly and progressively in rotation and torque as shown in Figure 5-61., Figure 5-62. and Figure 5-63.
- After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
  - Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
  - Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

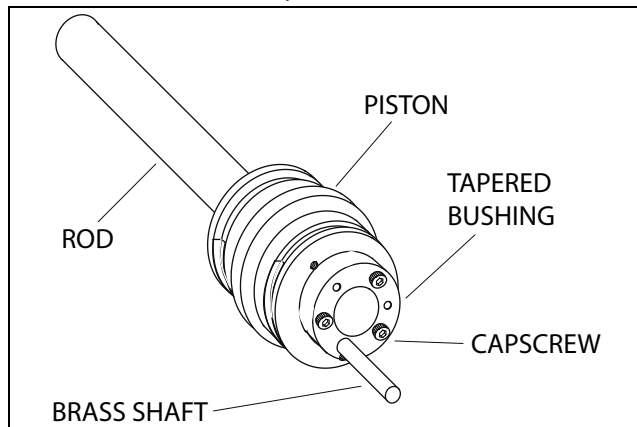


Figure 5-71. Seating the Tapered Bearing



14. Rotate the capscrews evenly and progressively in rotation and torque as shown in Figure 5-61., Figure 5-62. and Figure 5-63.
15. Remove the cylinder rod from the holding fixture.

**NOTICE**

WHEN INSTALLING HYDROLOCK PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO HYDROLOCK PISTON SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

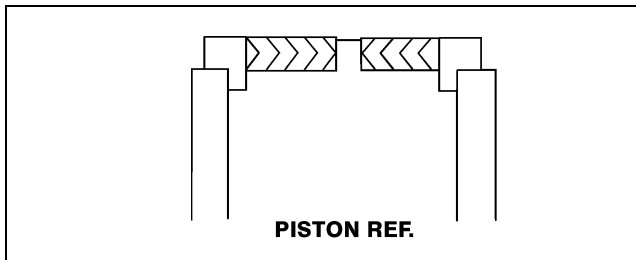


Figure 5-72. Hydrolock Piston Seal Installation

16. Place new hydrolock seal and guidelock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

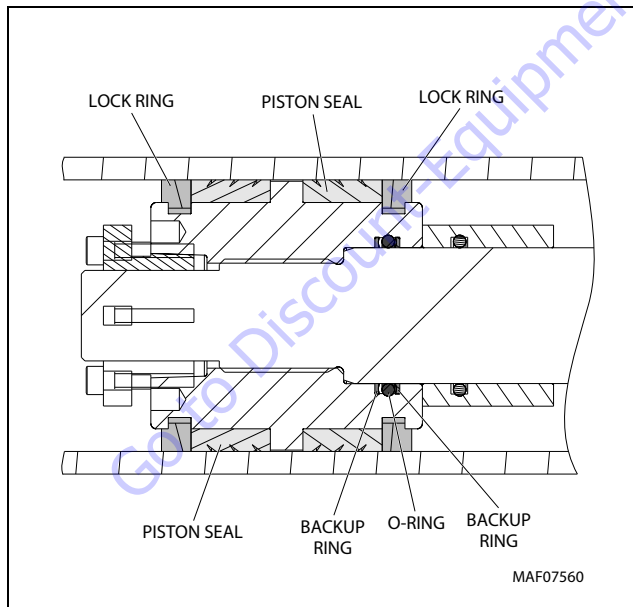


Figure 5-73. Piston Seal Kit Installation

17. Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

18. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
19. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

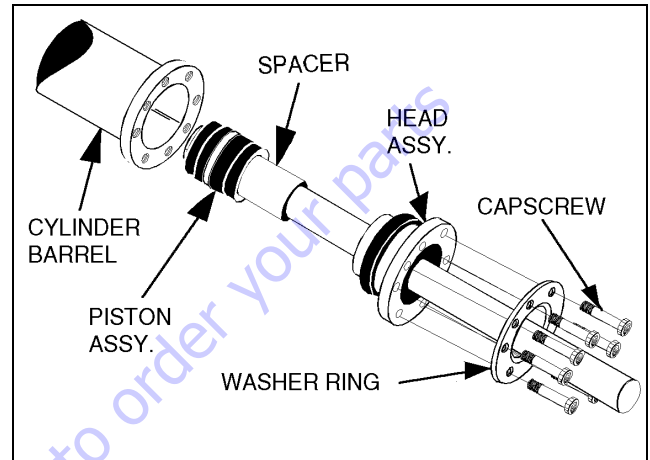


Figure 5-74. Rod Assembly Installation

20. Apply JLG Threadlocker if applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts as shown in Figure 5-61., Figure 5-62. and Figure 5-63.
21. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves.
22. If applicable, install the cartridge-type holding valve and fittings in the rod port block, using new o-rings as applicable. Torque valves as shown in Figure 5-61., Figure 5-62. and Figure 5-63.

## Main Boom Lift Cylinder

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove the cartridge valve and fittings from the cylinder port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

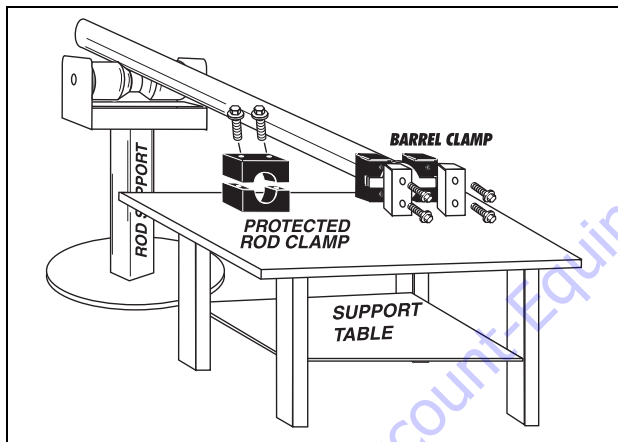


Figure 5-75. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

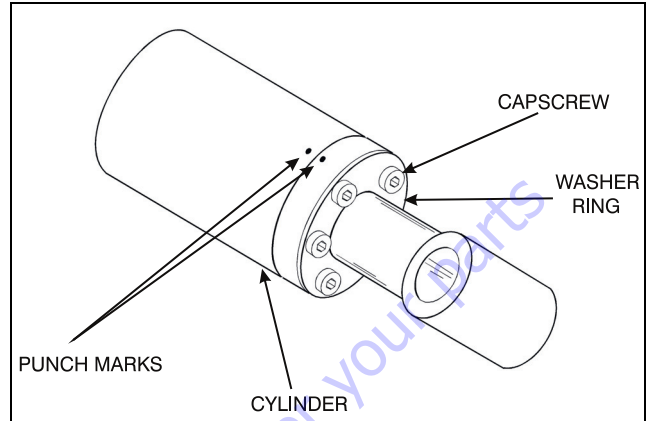


Figure 5-76. Capscrew Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


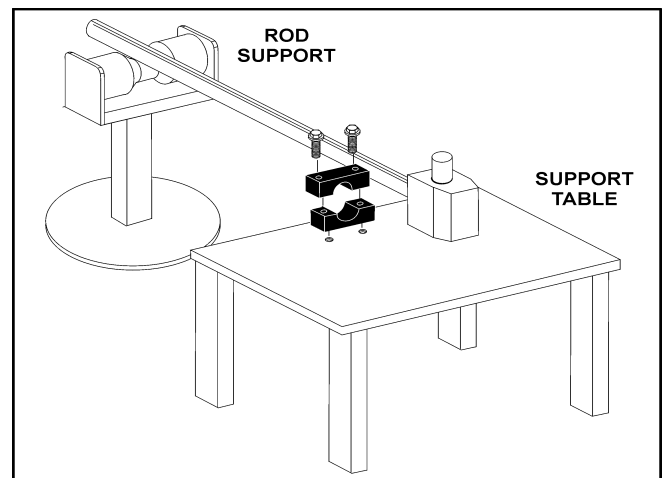



Figure 5-77. Cylinder Rod Support

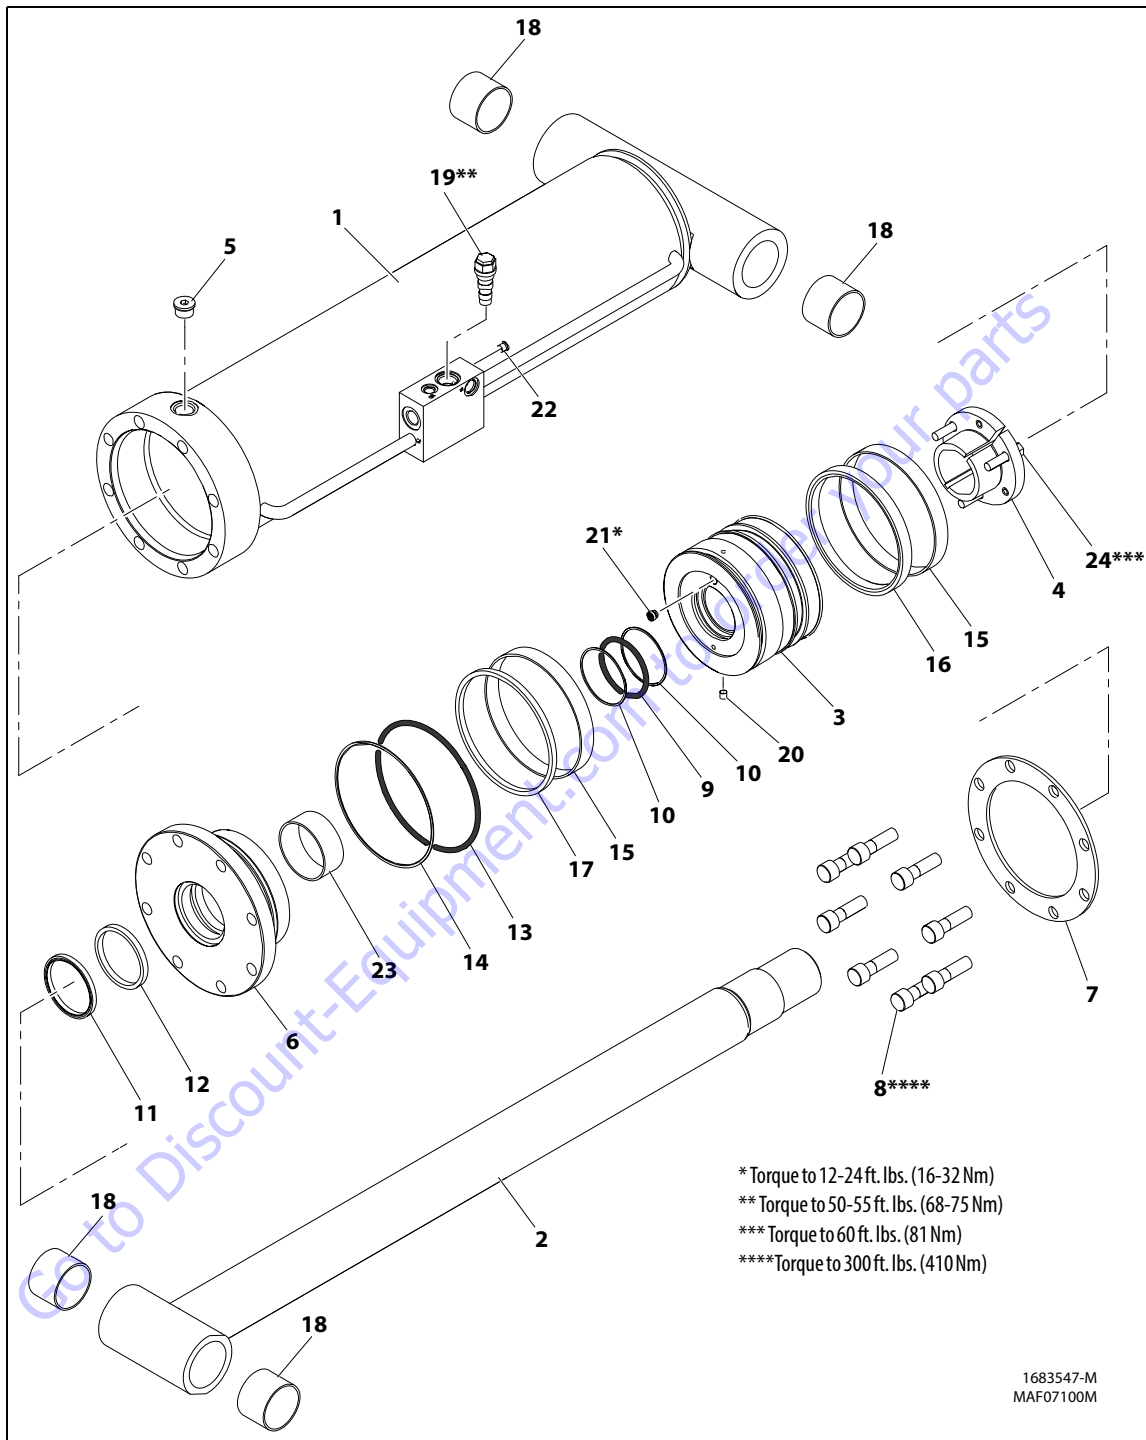

- |                    |                 |                 |                     |                 |
|--------------------|-----------------|-----------------|---------------------|-----------------|
| 1. Barrel          | 6. Head         | 11. Wiper       | 16. T-Seal          | 21. Check Valve |
| 2. Rod             | 7. Washer Ring  | 12. Rod Seal    | 17. Seal            | 22. Plug        |
| 3. Piston          | 8. Bolt         | 13. O-ring      | 18. Bushing         | 23. Wear Ring   |
| 4. Tapered Bushing | 9. O-ring       | 14. Backup Ring | 19. Cartridge Valve | 24. Bolt        |
| 5. O-ring Plug     | 10. Backup Ring | 15. Wear Ring   | 20. Orifice         |                 |

Figure 5-78. Main Boom Lift Cylinder (SN 0300183034 through 0300239885)

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

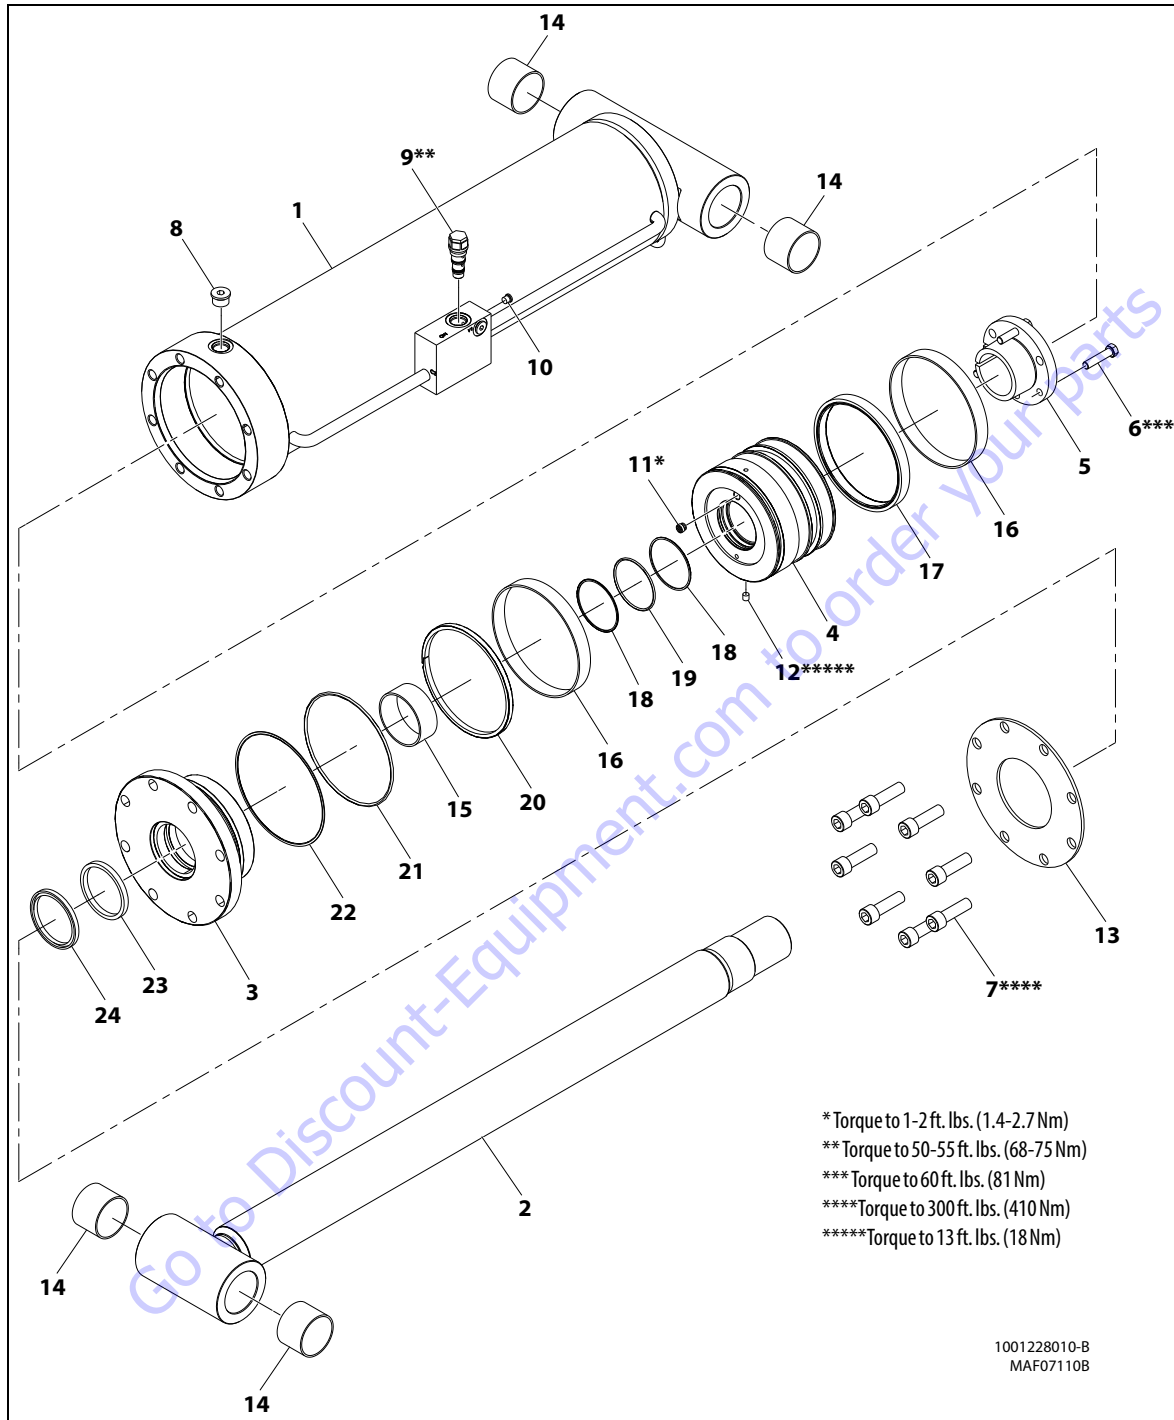

- |                    |                    |                 |                 |                 |
|--------------------|--------------------|-----------------|-----------------|-----------------|
| 1. Barrel          | 6. Bolt            | 11. Check Valve | 16. Wear Ring   | 21. O-ring      |
| 2. Rod             | 7. Bolt            | 12. Orifice     | 17. T-Seal      | 22. Backup Ring |
| 3. Head            | 8. Plug            | 13. Washer Ring | 18. Backup Ring | 23. Rod Seal    |
| 4. Piston          | 9. Cartridge Valve | 14. Bushing     | 19. O-ring      | 24. Wiper       |
| 5. Tapered Bushing | 10. Plug           | 15. Wear Ring   | 20. Seal        |                 |

**Figure 5-79. Main Boom Lift Cylinder (SN 0300239886 to Present)**

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
10. Remove the bushing from the piston.

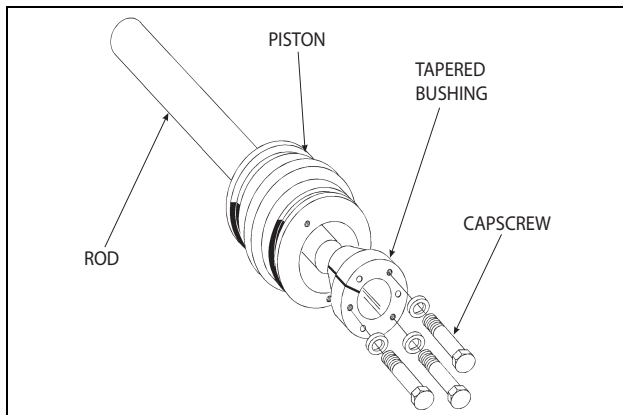


Figure 5-80. Tapered Bushing Removal


11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-rings, seal rings, and backup rings.
13. Remove check valve from the piston.
14. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

## CLEANING AND INSPECTION

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

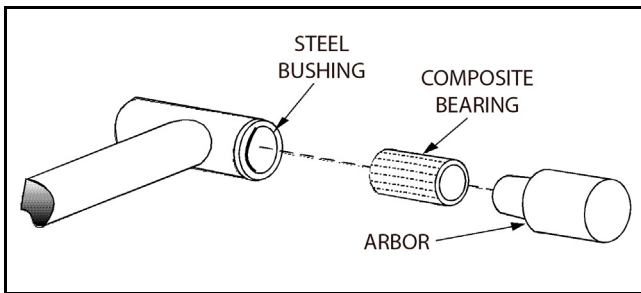

**Figure 5-81. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

### ASSEMBLY

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

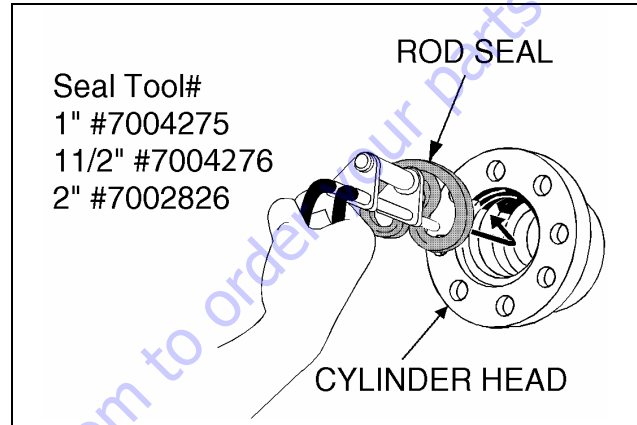

**Figure 5-82. Rod Seal Installation**

### NOTICE

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

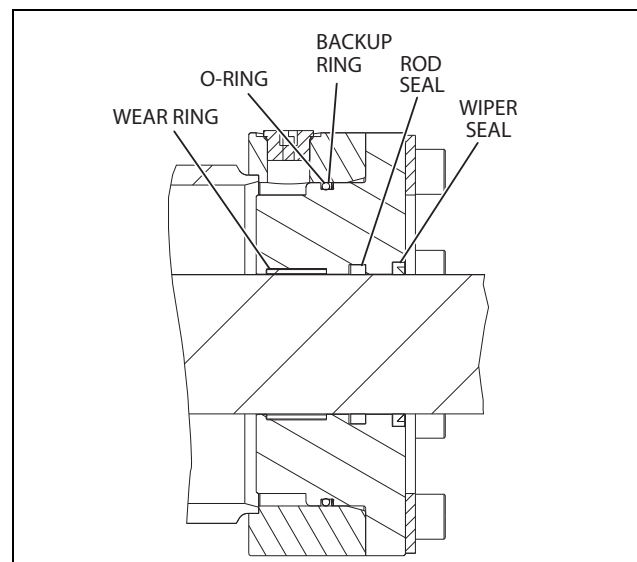

**Figure 5-83. Cylinder Head Seal Installation**

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

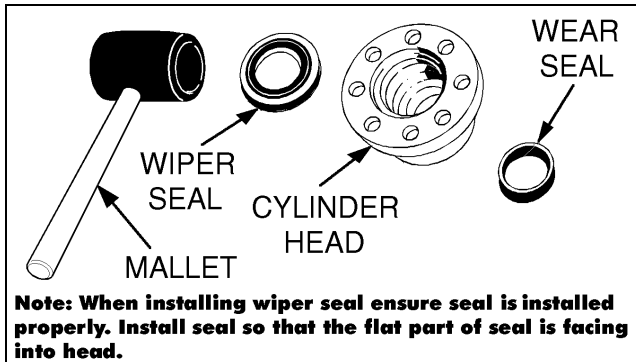


Figure 5-84. Wiper Seal Installation

3. Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

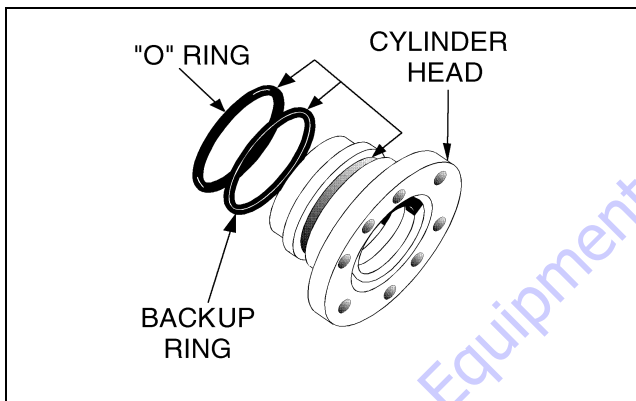


Figure 5-85. Installation of Head Seal Kit

4. Install washer ring onto rod, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
6. Place a new o-ring and back-up rings in the inner piston diameter groove.
7. Install orifice and check valve on the piston and torque as shown in Figure 5-78. and Figure 5-79.
8. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
9. Thread piston onto rod hand tight and install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

10. Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

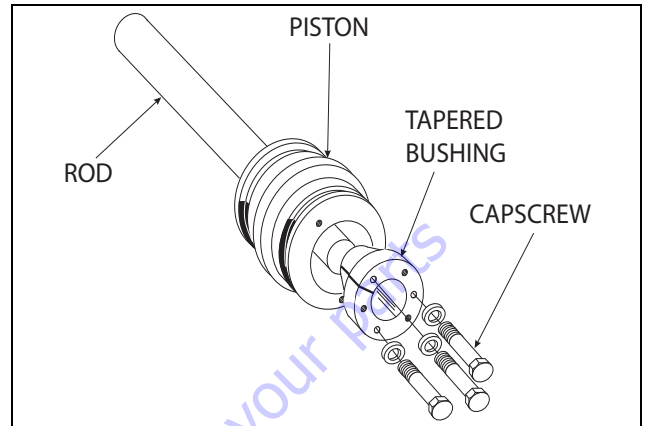


Figure 5-86. Tapered Bushing Installation

11. Tighten the capscrews evenly and progressively in rotation to 60 ft.lbs. (81 Nm).
12. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
  - a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
  - b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

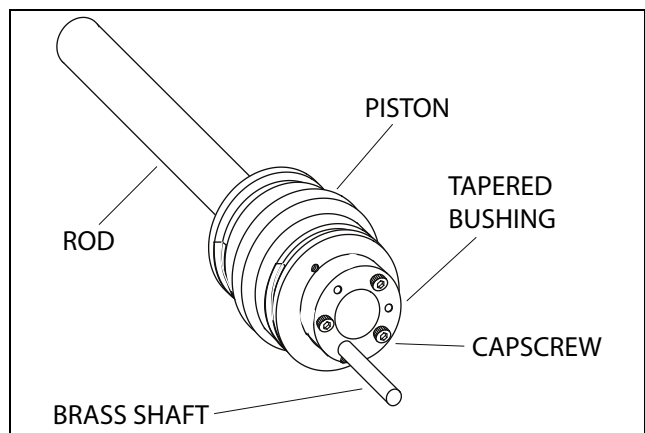


Figure 5-87. Seating the Tapered Bearing

13. Rotate the capscrews evenly and progressively in rotation to 60 ft.lbs. (81 Nm).
14. Remove the cylinder rod from the holding fixture.
15. Place new T-seal and wear rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

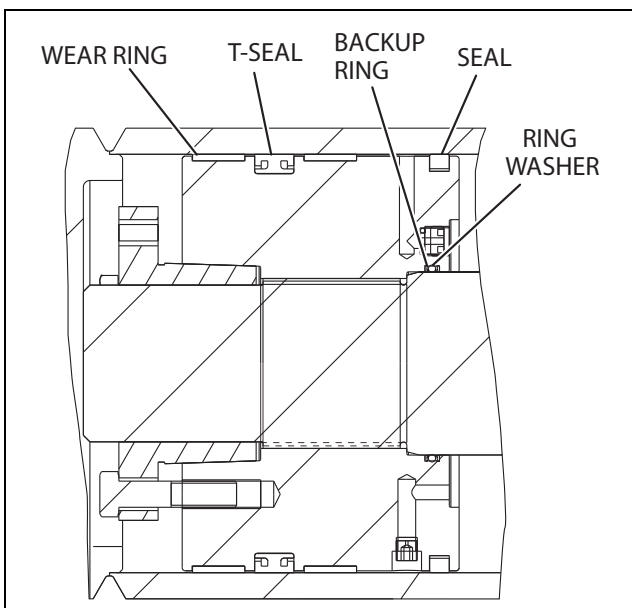


Figure 5-88. Piston Seal Kit Installation

16. Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

**EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.**

17. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
18. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

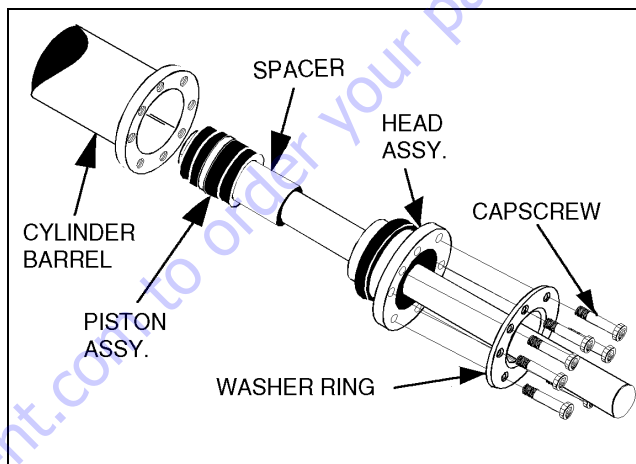


Figure 5-89. Rod Assembly Installation

19. Apply JLG Threadlocker as applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts to 300 ft.lbs. (410 Nm).
20. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves.
21. If applicable, install the cartridge-type holding valve and fittings in the rod port block, using new o-rings as applicable. Torque valves to 50-55 ft.lbs. (68-75 Nm).



## Tower Boom Lift Cylinder

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove the cartridge valve and fittings from the cylinder rod port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

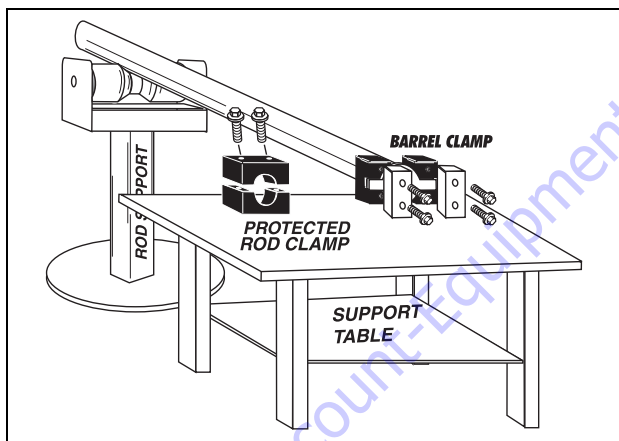


Figure 5-90. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

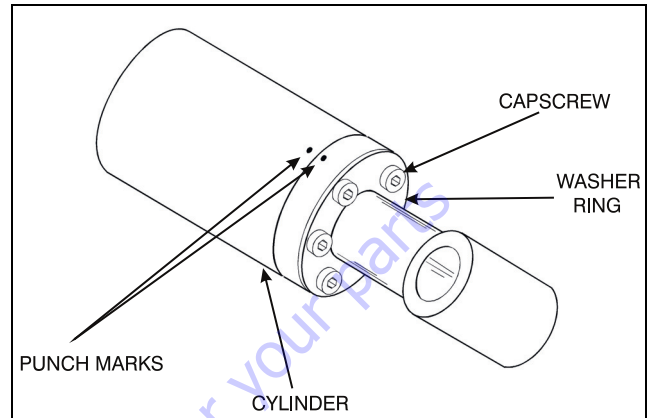


Figure 5-91. Capscrew Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


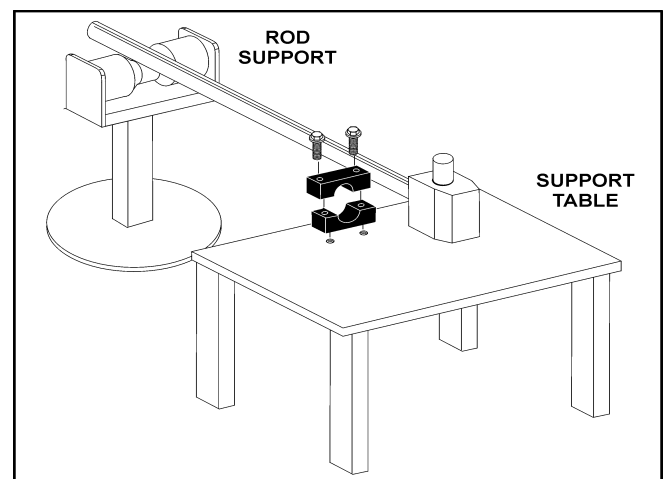


Figure 5-92. Cylinder Rod Support

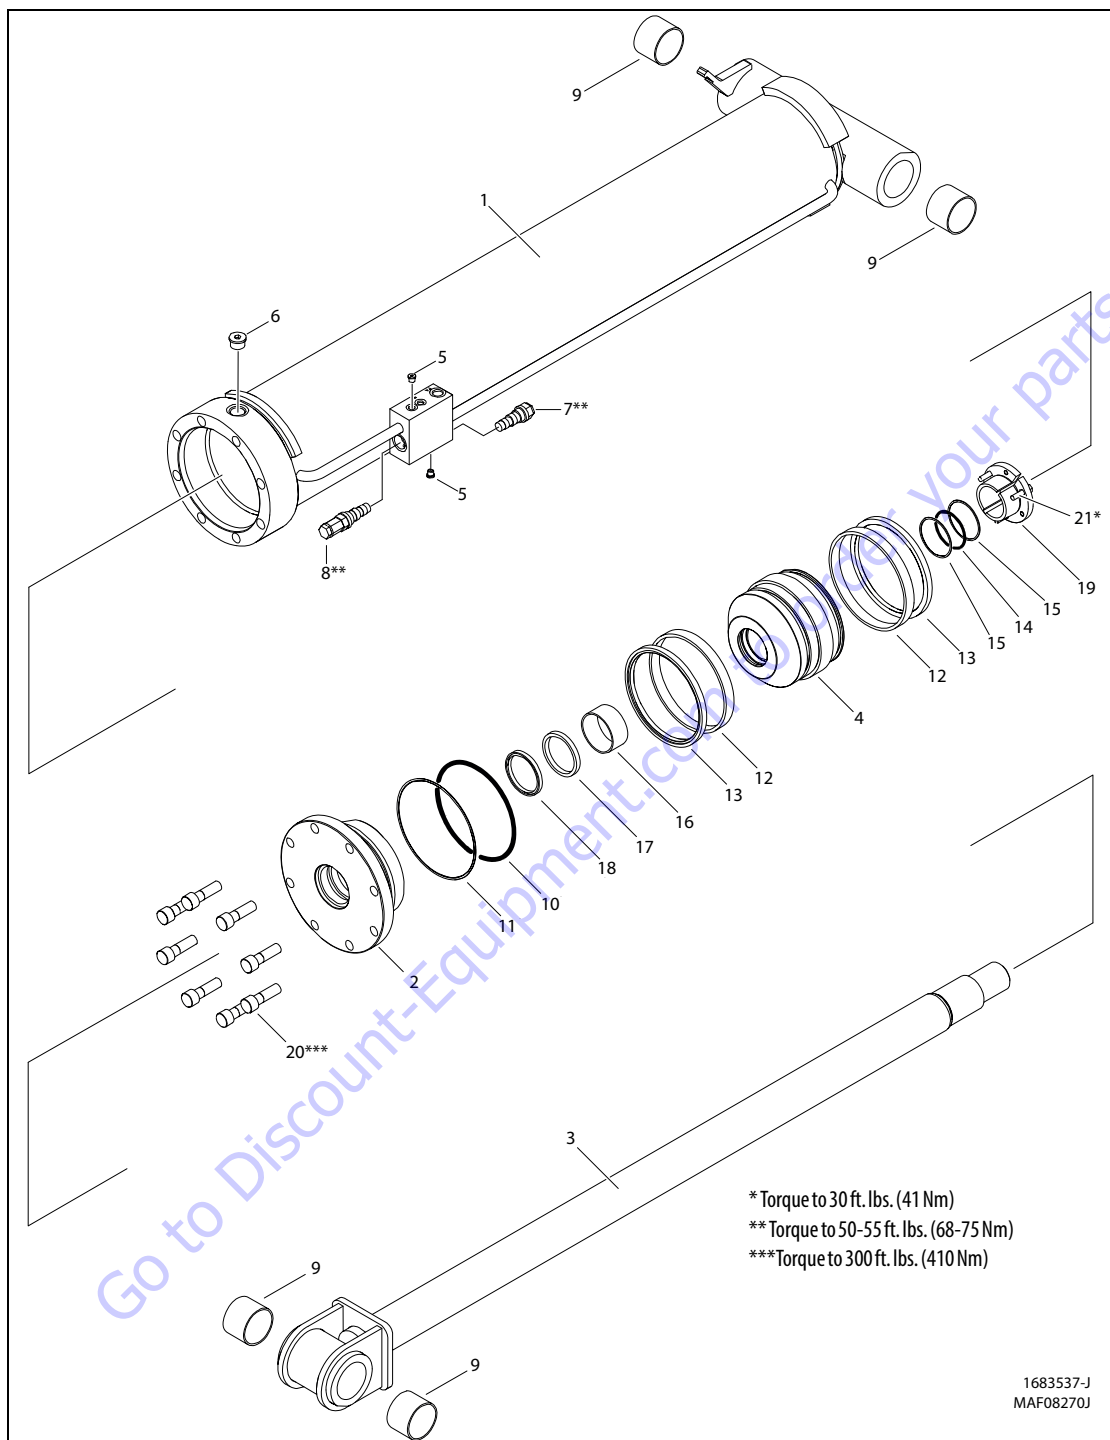

- |                |                    |               |                 |                     |
|----------------|--------------------|---------------|-----------------|---------------------|
| 1. Barrel      | 6. O-ring Plug     | 10. O-ring    | 14. O-ring      | 18. Wiper           |
| 2. Head        | 7. Cartridge Valve | 11. Lock Ring | 15. Backup Ring | 19. Tapered Bushing |
| 3. Rod         | 8. Cartridge Valve | 12. Seal      | 16. Wear Ring   | 20. Capscrew        |
| 4. Piston      | 9. Bushing         | 13. Lock Ring | 17. Seal        | 21. Bolt            |
| 5. O-ring Plug |                    |               |                 |                     |

Figure 5-93. Tower Boom Lift Cylinder

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
10. Remove the bushing from the piston.

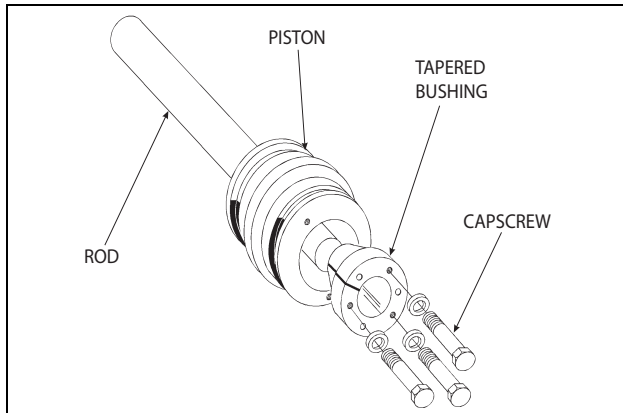


Figure 5-94. Tapered Bushing Removal


11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-rings, seal rings, and backup rings.
13. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

## CLEANING AND INSPECTION

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

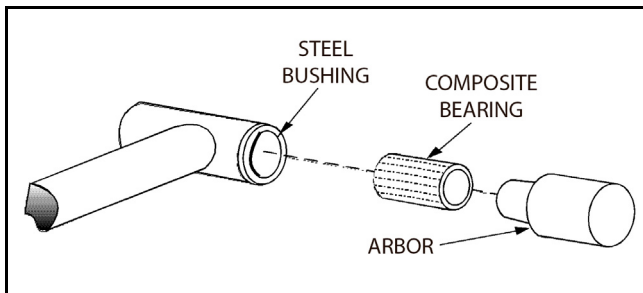

**Figure 5-95. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

### ASSEMBLY

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

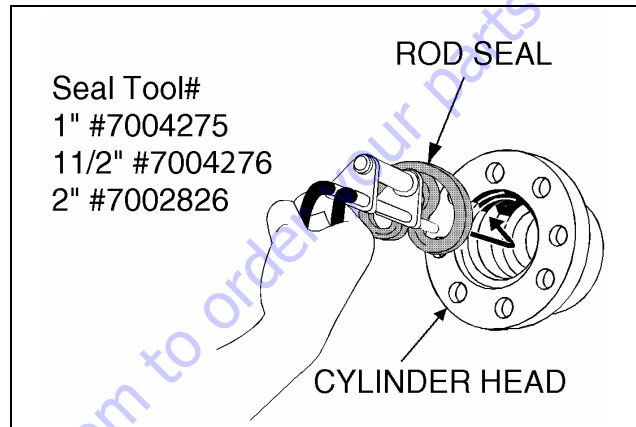

**Figure 5-96. Rod Seal Installation**

### NOTICE

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

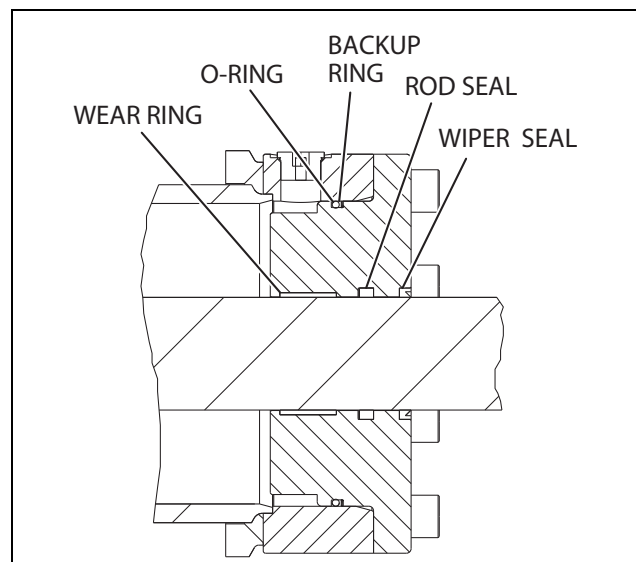

**Figure 5-97. Cylinder Head Seal Installation**

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

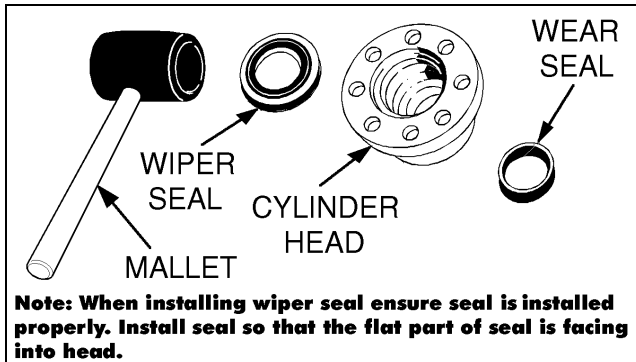


Figure 5-98. Wiper Seal Installation

3. Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

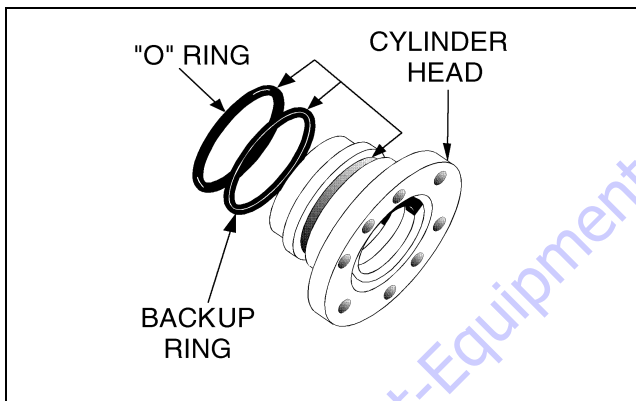


Figure 5-99. Installation of Head Seal Kit

4. Carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
6. Place a new o-ring and back-up rings in the inner piston diameter groove.
7. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
8. Thread piston onto rod hand tight and install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

9. Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

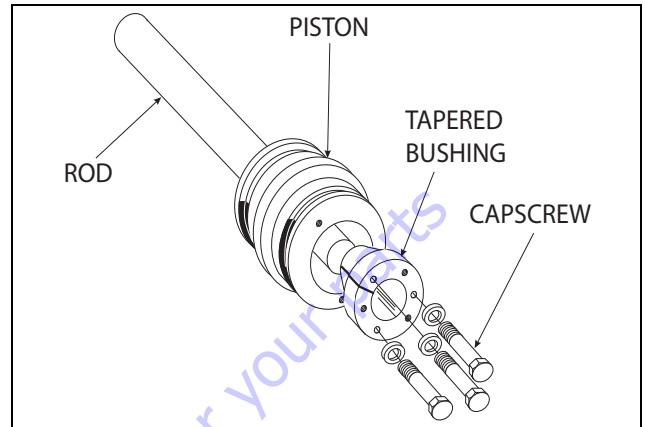


Figure 5-100. Tapered Bushing Installation

10. Tighten the capscrews evenly and progressively in rotation to 30 ft.lbs. (41 Nm).
11. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
  - a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
  - b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

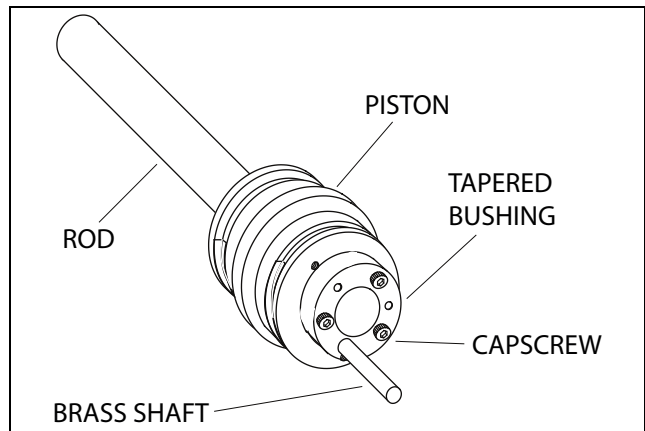


Figure 5-101. Seating the Tapered Bearing

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

12. Rotate the capscrews evenly and progressively in rotation to 30 ft.lbs. (41 Nm).
13. Remove the cylinder rod from the holding fixture.

### NOTICE

WHEN INSTALLING HYDROLOCK PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO HYDROLOCK PISTON SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

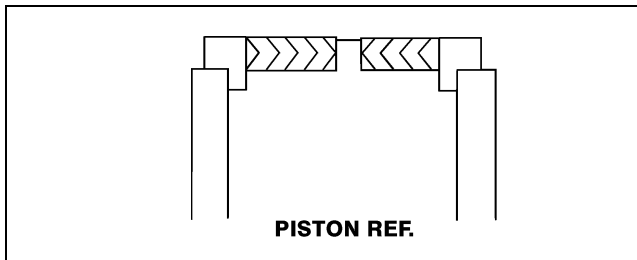


Figure 5-102. Hydrolock Piston Seal Installation

14. Place new hydrolock seal and guidelock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

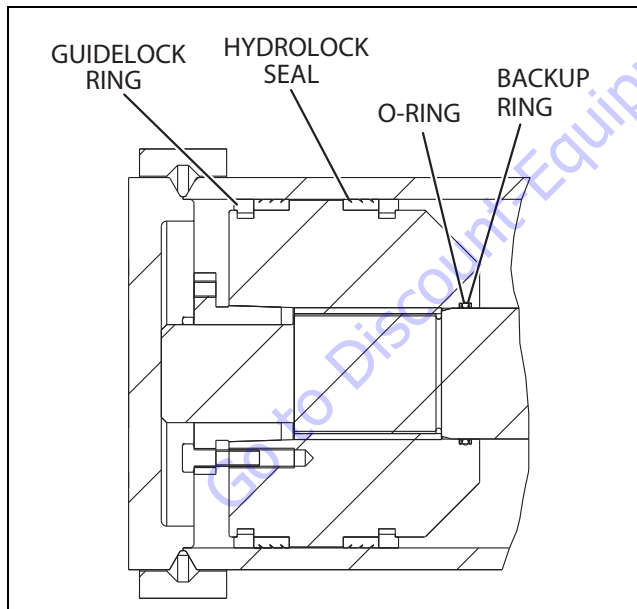


Figure 5-103. Piston Seal Kit Installation

15. Position the cylinder barrel in a suitable holding fixture.

### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

16. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
17. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

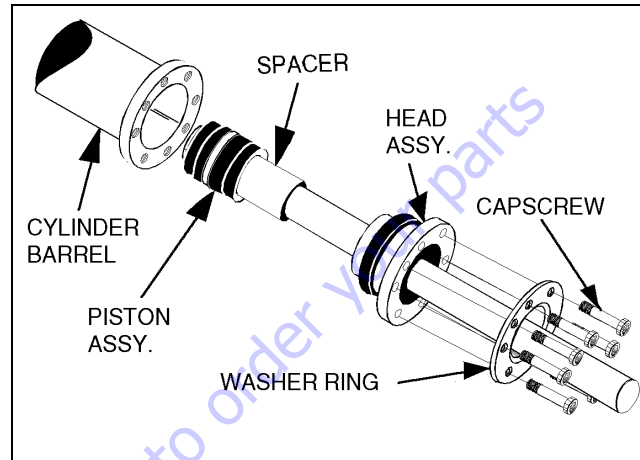


Figure 5-104. Rod Assembly Installation

18. Apply JLG Threadlocker if applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts to 300 ft.lbs. (410 Nm).
19. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves.
20. If applicable, install the cartridge-type holding valve and fittings in the rod port block, using new o-rings as applicable. Torque valves to 50-55 ft.lbs. (68-75 Nm).

## Master Cylinder (800A)

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Place the cylinder barrel into a suitable holding fixture.

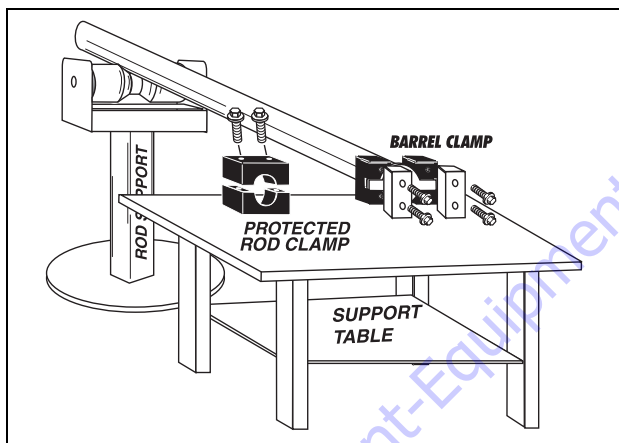


Figure 5-105. Cylinder Barrel Support

4. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

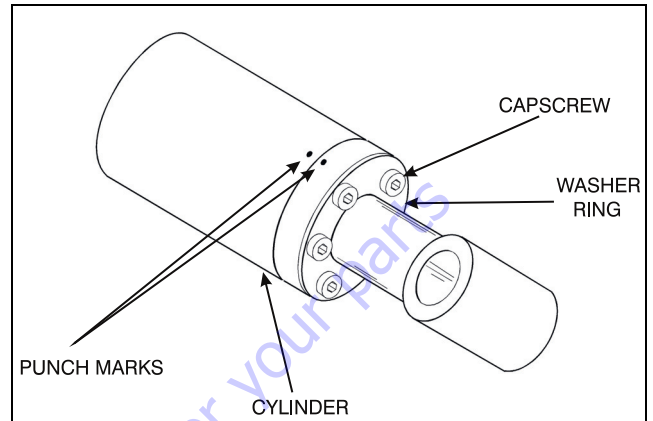


Figure 5-106. Capscrew Removal

5. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

6. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


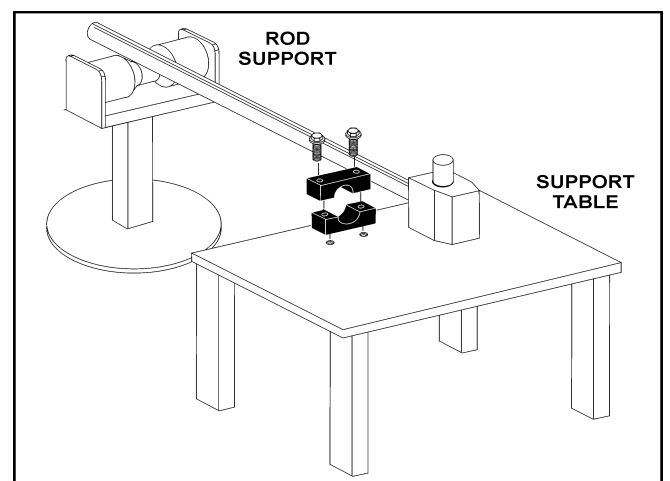


Figure 5-107. Cylinder Rod Support



- |                    |              |                 |                 |              |
|--------------------|--------------|-----------------|-----------------|--------------|
| 1. Tapered Bushing | 6. Barrel    | 10. Backup Ring | 14. O-ring      | 18. Wiper    |
| 2. Bushing         | 7. Rod       | 11. O-ring      | 15. Washer Ring | 19. Seal     |
| 3. Bushing         | 8. Piston    | 12. Wear Ring   | 16. Setscrew    | 20. T-Seal   |
| 4. Tube Spacer     | 9. Wear Ring | 13. Backup Ring | 17. Capscrew    | 21. Capscrew |
| 5. Head            |              |                 |                 |              |

Figure 5-108. Master Cylinder (800A)

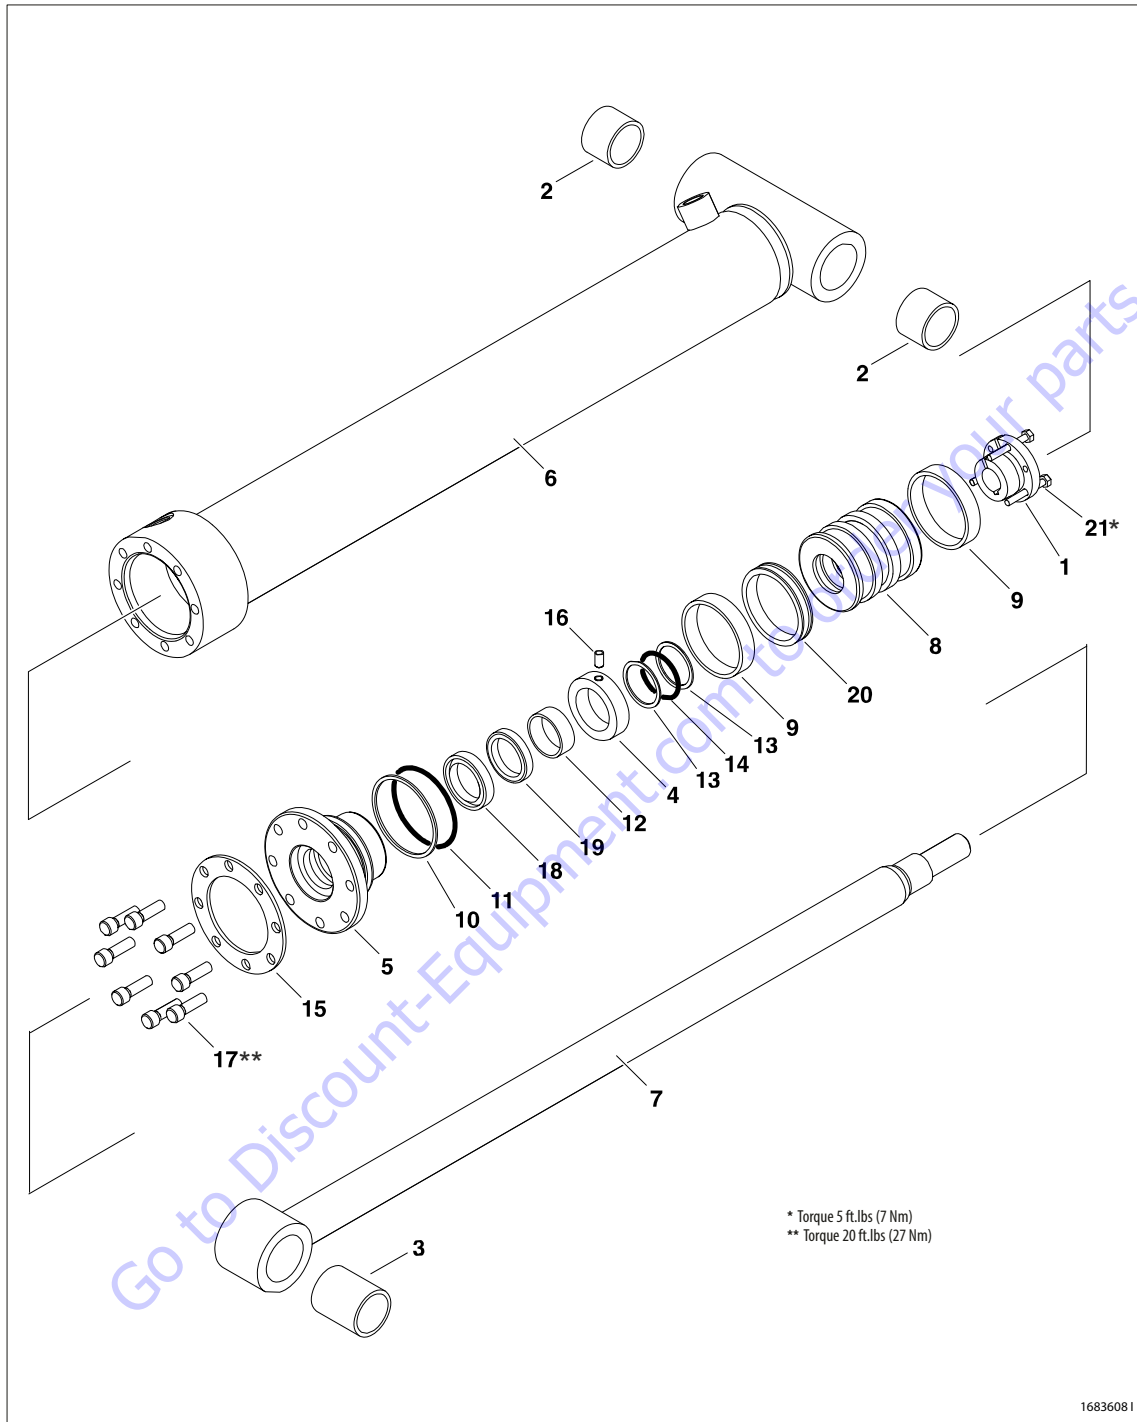

7. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
8. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
9. Remove the bushing from the piston.

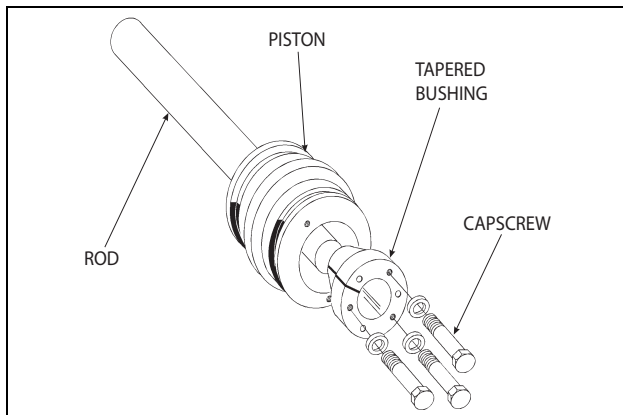


Figure 5-109. Tapered Bushing Removal


10. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
11. Remove and discard the piston o-rings, seal rings, and backup rings.
12. Remove the setscrew from the piston spacer. Remove spacer from the rod.
13. Remove the rod from the holding fixture. Remove capscrews and washer ring. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

### CLEANING AND INSPECTION

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

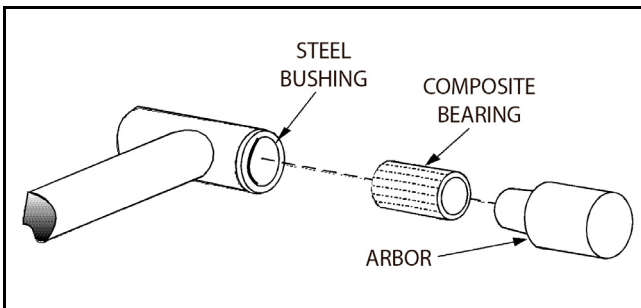

**Figure 5-110. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

### ASSEMBLY

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

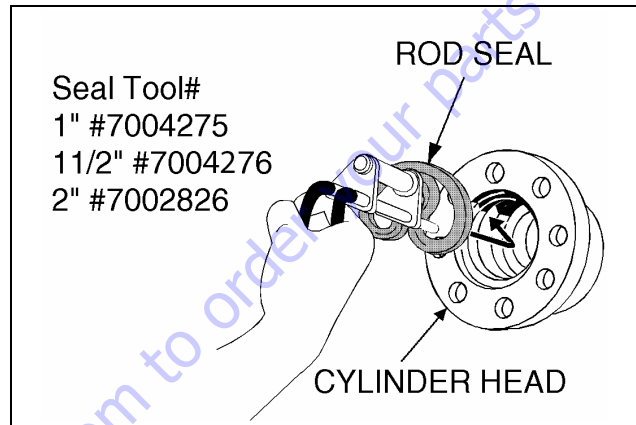

**Figure 5-111. Rod Seal Installation**

### NOTICE

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

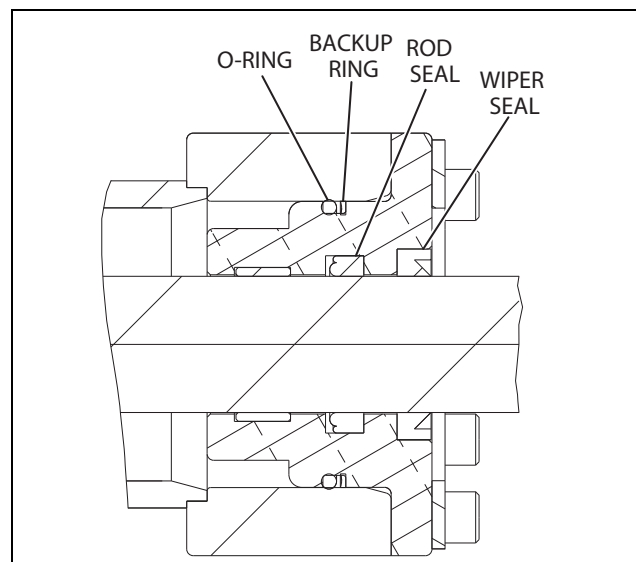

**Figure 5-112. Cylinder Head Seal Installation**

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

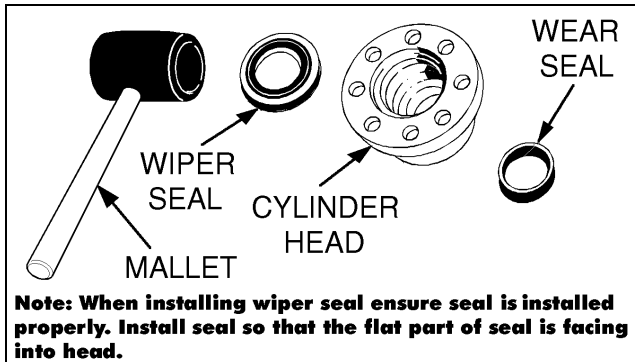


Figure 5-113. Wiper Seal Installation

3. Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

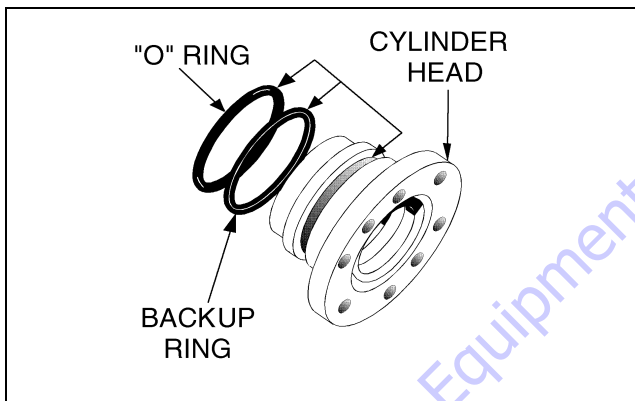


Figure 5-114. Installation of Head Seal Kit

4. Install washer ring onto rod, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
6. Place a new o-ring and back-up rings in the inner piston diameter groove.
7. Carefully slide piston spacer onto the cylinder rod. Install setscrew on the spacer.
8. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
9. Thread piston onto rod until it abuts the spacer end and install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

10. Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

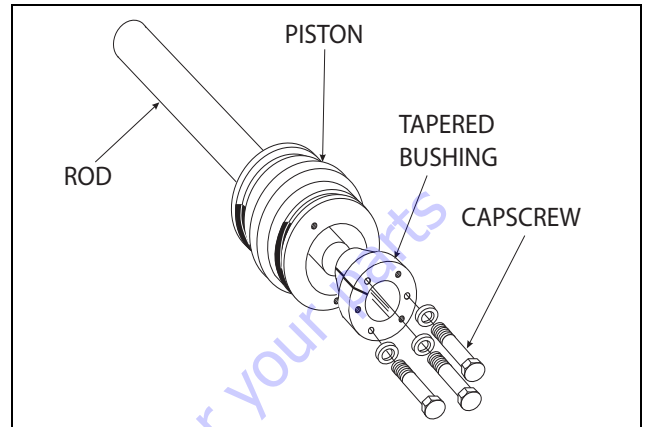


Figure 5-115. Tapered Bushing Installation

11. Tighten the capscrews evenly and progressively in rotation to 5 ft.lbs. (7 Nm).
12. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
  - a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
  - b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

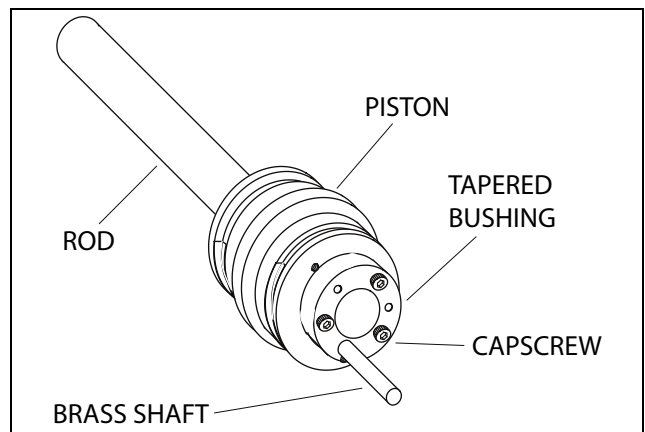


Figure 5-116. Seating the Tapered Bearing

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

13. Rotate the capscrews evenly and progressively in rotation to 5 ft.lbs. (7 Nm).
14. Remove the cylinder rod from the holding fixture.
15. Place new T-seal and wear rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

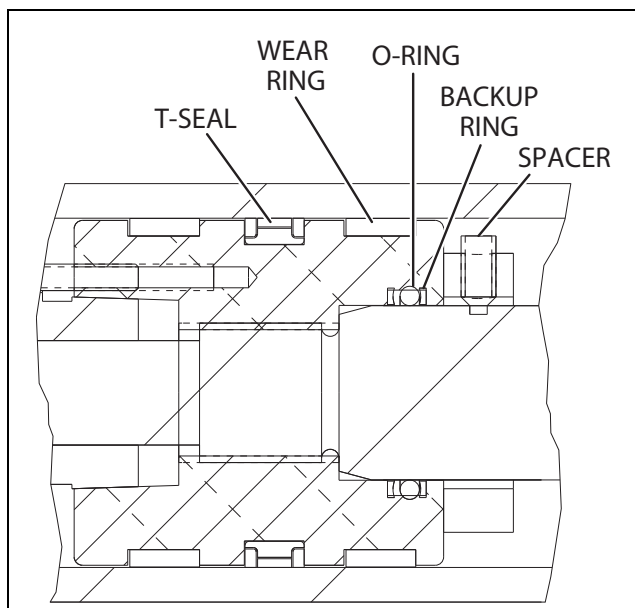


Figure 5-117. Piston Seal Kit Installation

16. Position the cylinder barrel in a suitable holding fixture.

### NOTICE

**EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.**

17. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
18. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

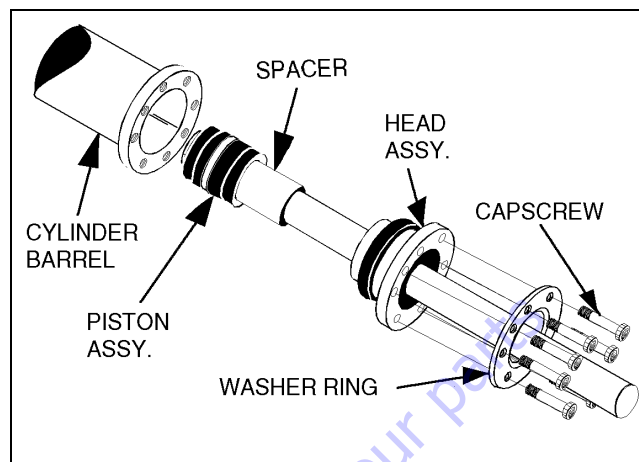


Figure 5-118. Rod Assembly Installation

19. Apply JLG Threadlocker P/N 0100011 to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts to 20 ft.lbs. (27 Nm).
20. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves, if applicable.

## Master Cylinder (800AJ)

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Place the cylinder barrel into a suitable holding fixture.

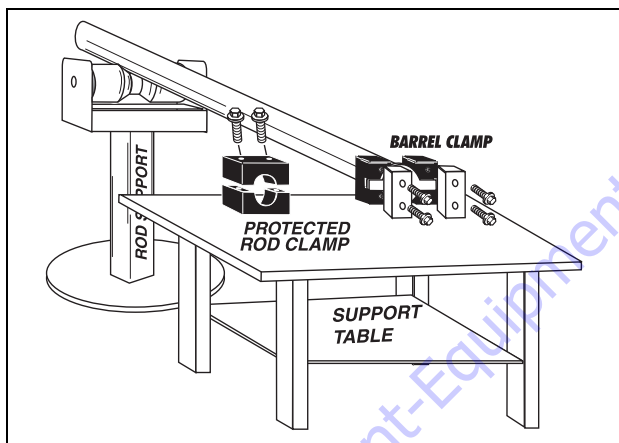


Figure 5-119. Cylinder Barrel Support

4. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

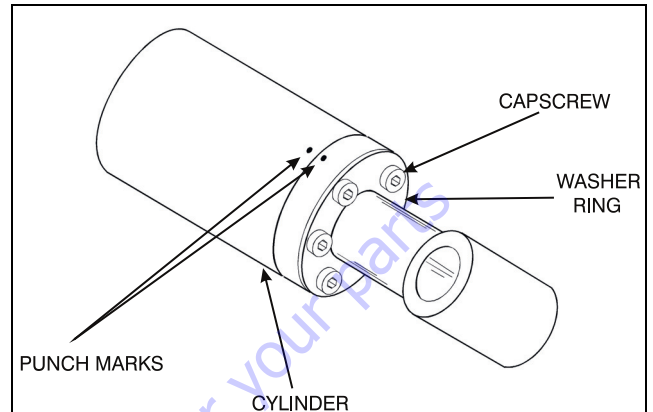


Figure 5-120. Capscrew Removal

5. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

6. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


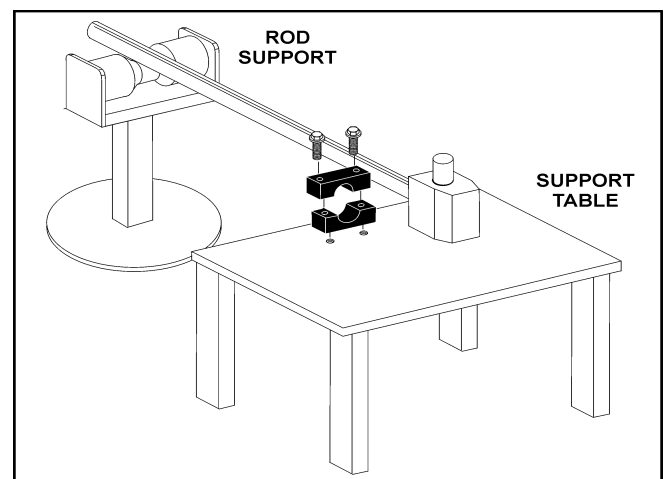



Figure 5-121. Cylinder Rod Support

**SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS**

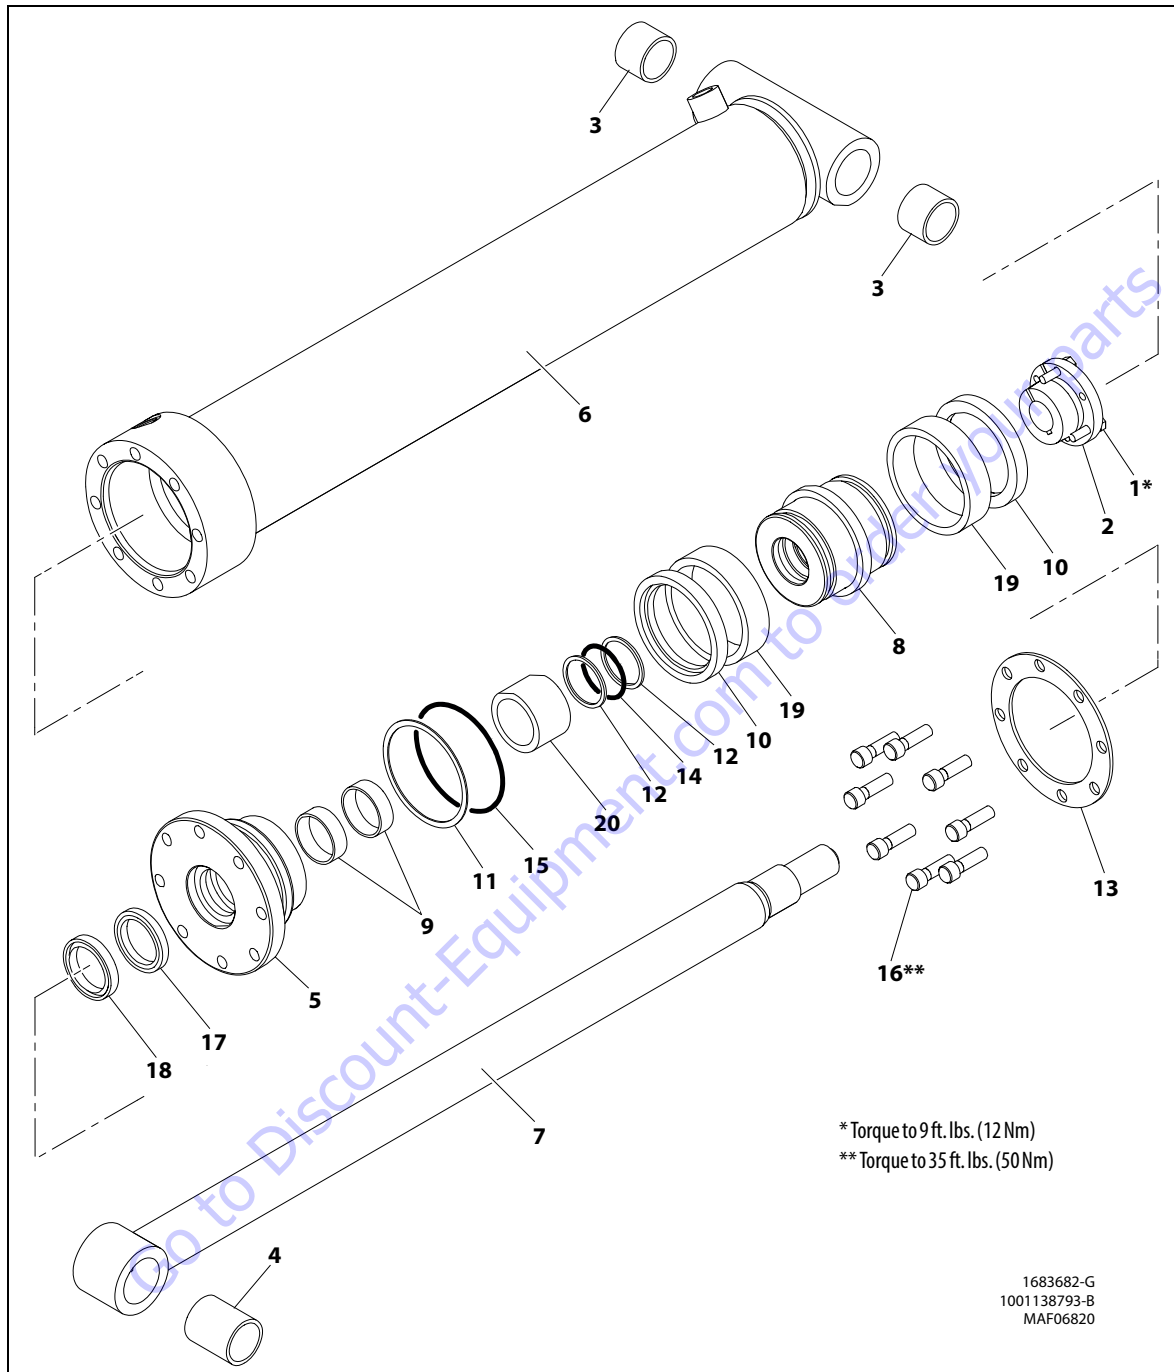

- |                    |           |                 |                 |                 |
|--------------------|-----------|-----------------|-----------------|-----------------|
| 1. Capscrew        | 5. Head   | 9. Wear Ring    | 13. Washer Ring | 17. Rod Seal    |
| 2. Tapered Bushing | 6. Barrel | 10. Lock Ring   | 14. O-ring      | 18. Wiper       |
| 3. Bushing         | 7. Rod    | 11. Backup Ring | 15. O-ring      | 19. Seal        |
| 4. Bushing         | 8. Piston | 12. Backup Ring | 16. Capscrew    | 20. Tube Spacer |

**Figure 5-122. Master Cylinder (SN 0300183034 through 0300243317)**

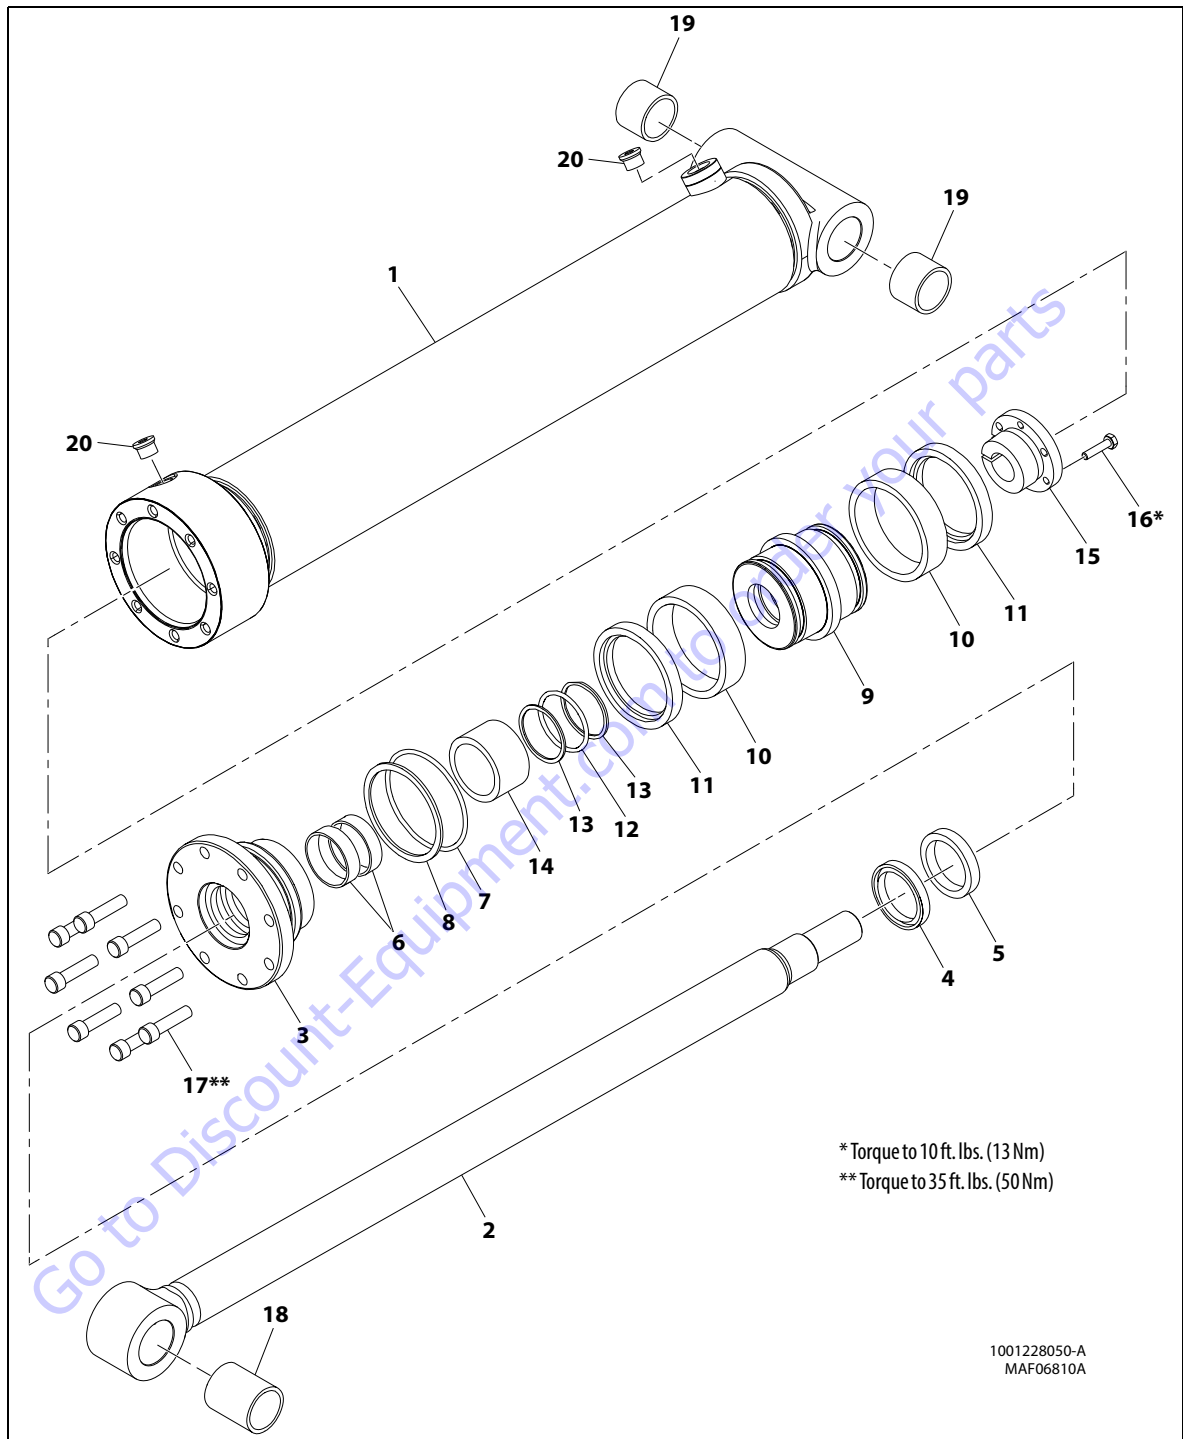


\*Torque to 10 ft. lbs. (13 Nm)  
 \*\*Torque to 35 ft. lbs. (50 Nm)

1001228050-A  
 MAF06810A

- |           |                |               |                     |              |
|-----------|----------------|---------------|---------------------|--------------|
| 1. Barrel | 5. Rod Seal    | 9. Piston     | 13. Backup Ring     | 17. Capscrew |
| 2. Rod    | 6. Wear Ring   | 10. Wear Ring | 14. Tube Spacer     | 18. Bushing  |
| 3. Head   | 7. O-ring      | 11. Lock Ring | 15. Tapered Bushing | 19. Bushing  |
| 4. Wiper  | 8. Backup Ring | 12. O-ring    | 16. Capscrew        | 20. Plug     |

Figure 5-123. Master Cylinder (SN 0300243318 to Present)

7. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
8. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
9. Remove the bushing from the piston.

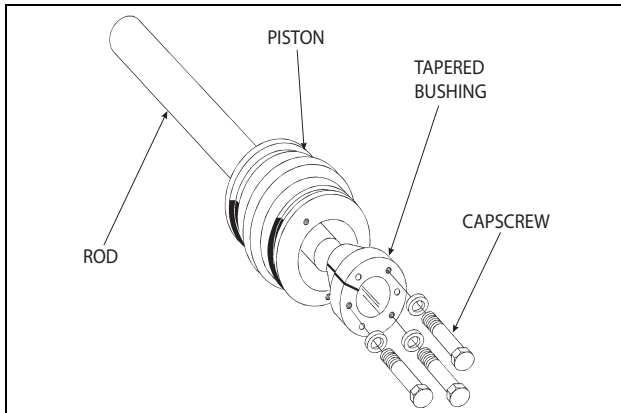

**Figure 5-124. Tapered Bushing Removal**


10. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
11. Remove and discard the piston o-rings, seal rings, and backup rings.
12. Remove piston spacer from the rod.
13. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

**CLEANING AND INSPECTION**

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.



**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

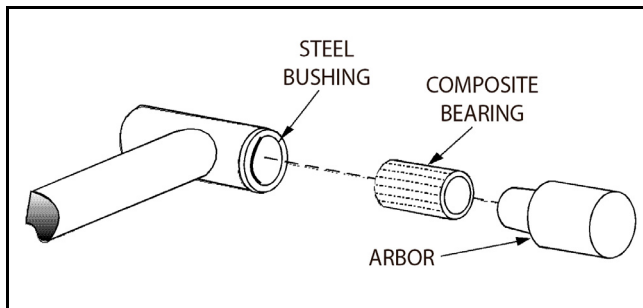

**Figure 5-125. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

**ASSEMBLY**

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

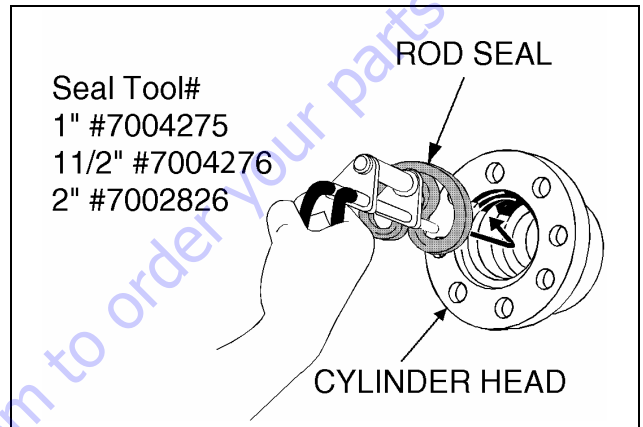

**Figure 5-126. Rod Seal Installation**

**NOTICE**

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

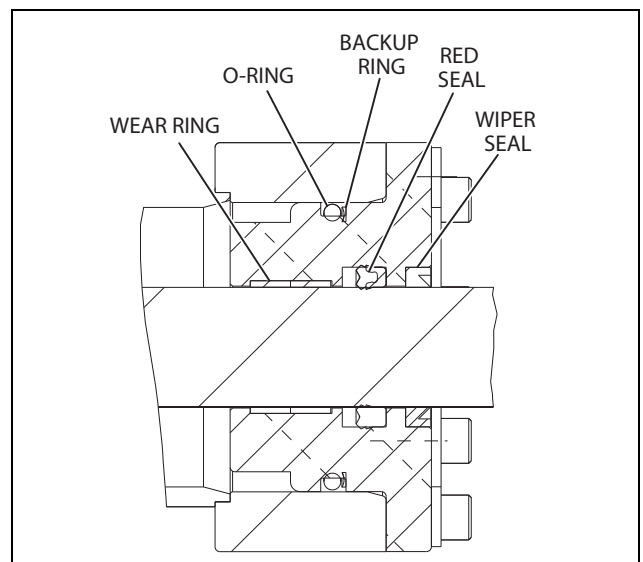

**Figure 5-127. Cylinder Head Seal Installation**

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

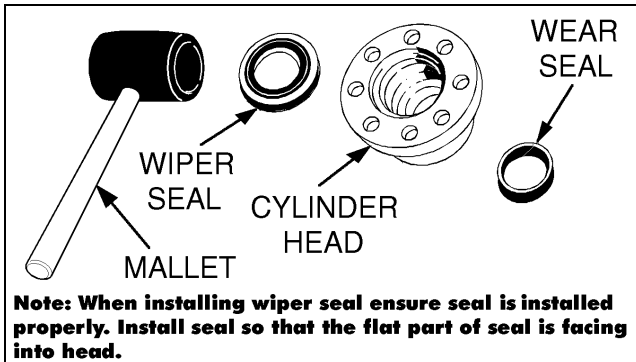


Figure 5-128. Wiper Seal Installation

3. Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

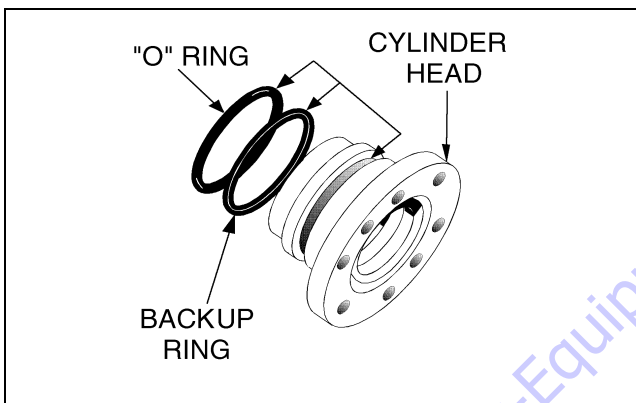


Figure 5-129. Installation of Head Seal Kit

4. Install washer ring onto rod if applicable, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
6. Place a new o-ring and back-up rings in the inner piston diameter groove.
7. Install piston spacer onto the cylinder rod.
8. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
9. Thread piston onto rod until it abuts the spacer end and install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

10. Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

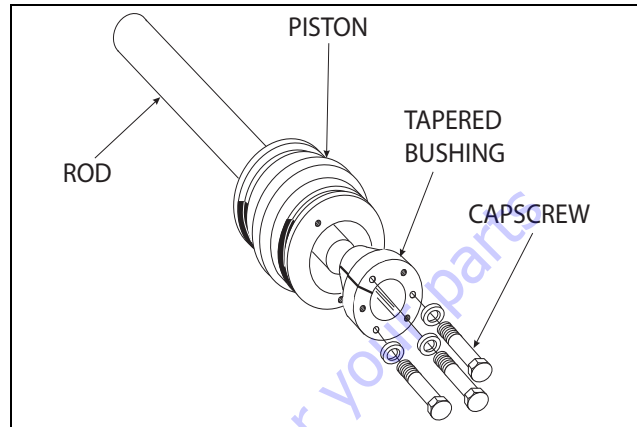


Figure 5-130. Tapered Bushing Installation

11. Tighten the capscrews evenly and progressively in rotation and torque as shown in Figure 5-122. and Figure 5-123.
12. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
  - a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
  - b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

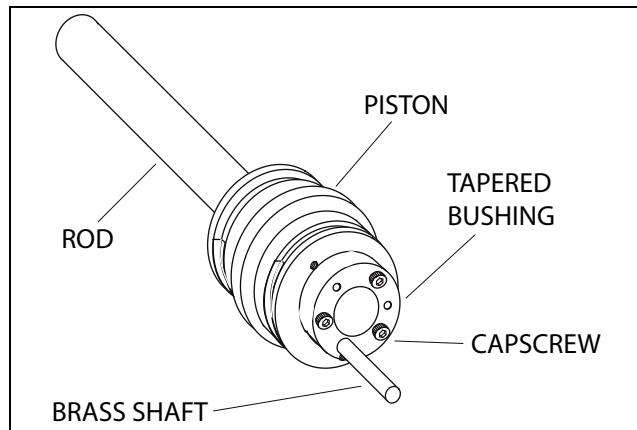


Figure 5-131. Seating the Tapered Bearing

13. Rotate the capscrews evenly and progressively in rotation and torque as shown in Figure 5-122. and Figure 5-123.
14. Remove the cylinder rod from the holding fixture.

**NOTICE**

WHEN INSTALLING HYDROLOCK PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO HYDROLOCK PISTON SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

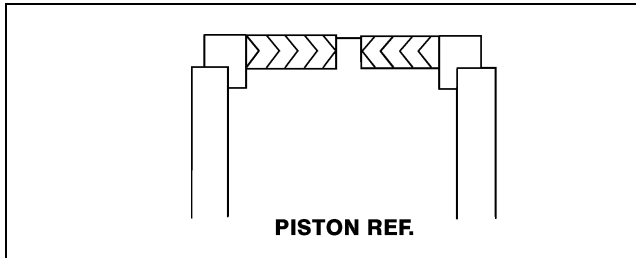


Figure 5-132. Hydrolock Piston Seal Installation

15. Place new guidelock rings and hydrolock seal or wear ring as applicable in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

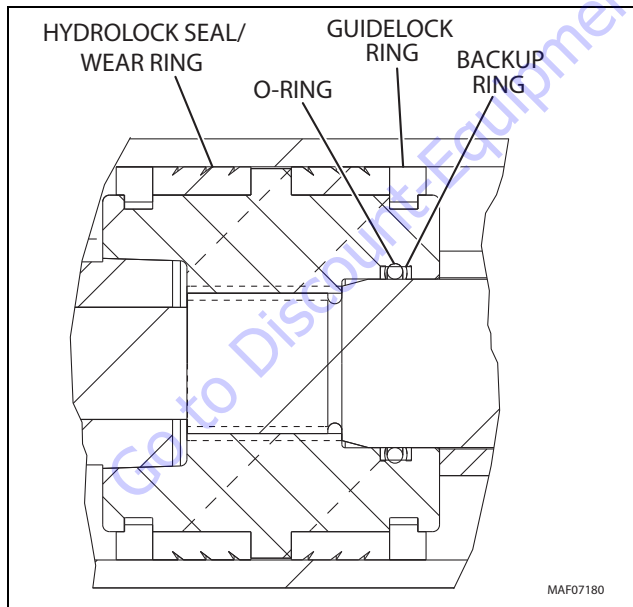


Figure 5-133. Piston Seal Kit Installation

16. Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

17. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
18. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

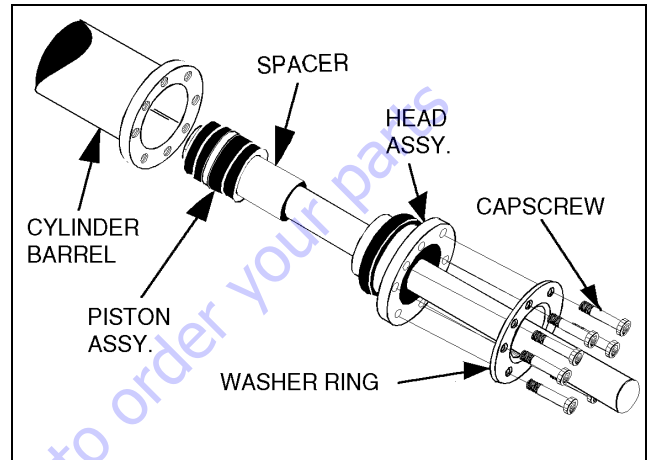


Figure 5-134. Rod Assembly Installation

19. Apply JLG Threadlocker if applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts to 35 ft.lbs. (50 Nm).

## Steer Cylinder

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Place the cylinder barrel into a suitable holding fixture.

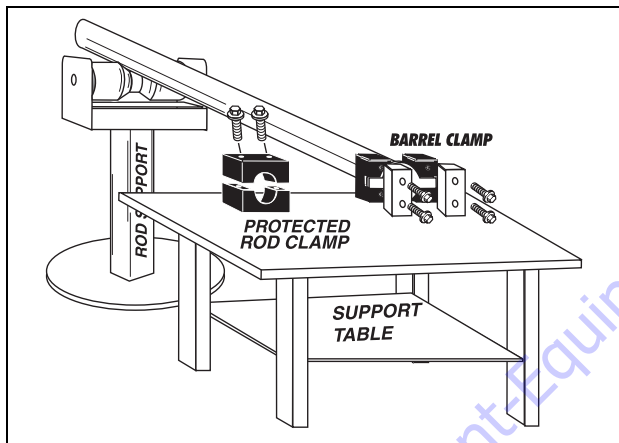


Figure 5-135. Cylinder Barrel Support

4. Using a hook spanner, loosen the spanner nut retainer and remove spanner nut from cylinder barrel.

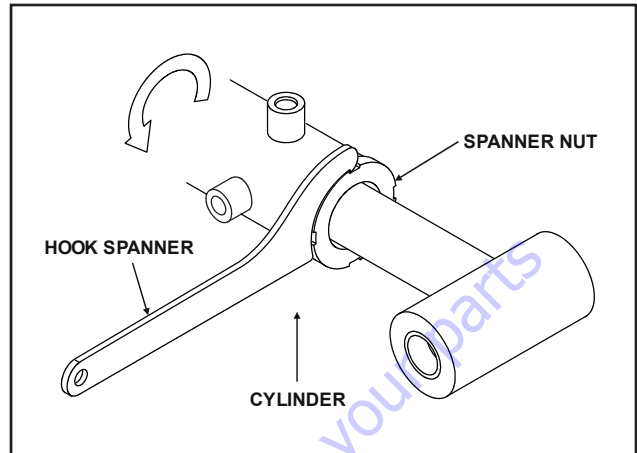


Figure 5-136. Spanner Nut Removal

5. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

6. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


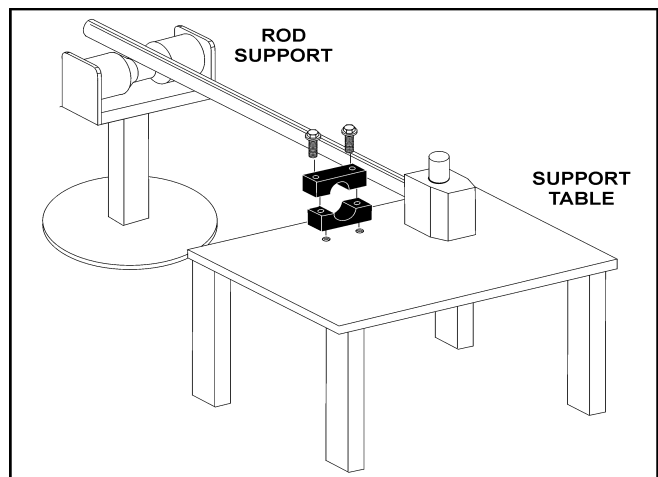


Figure 5-137. Cylinder Rod Support

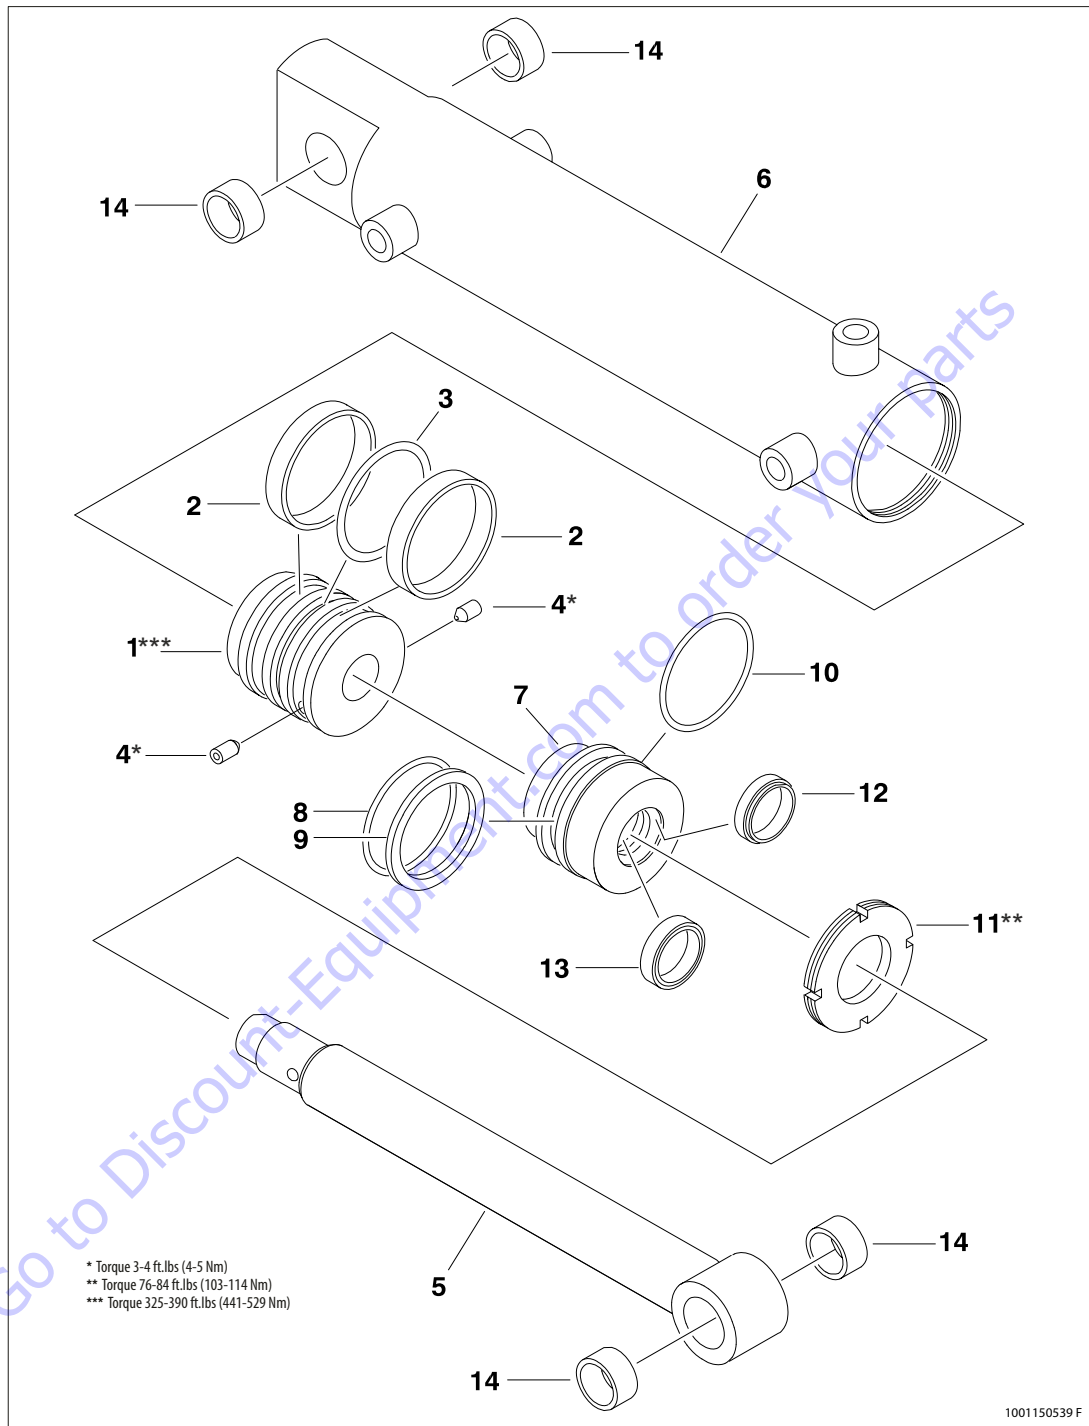

- |              |                |                 |
|--------------|----------------|-----------------|
| 1. Piston    | 6. Barrel      | 11. Spanner Nut |
| 2. Wear Ring | 7. Head        | 12. Wiper Seal  |
| 3. Seal      | 8. O-ring      | 13. Rod Seal    |
| 4. Setscrew  | 9. Backup Ring | 14. Bushing     |
| 5. Rod       | 10. C-Ring     |                 |

Figure 5-138. Steer Cylinder


7. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
8. Remove the setscrews from the piston.
9. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
10. Remove and discard the piston seal and wear rings.
11. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-ring, back-up ring, c-ring, rod seal, and wiper seal.

**Cleaning and Inspection**

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of barrel for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.

11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

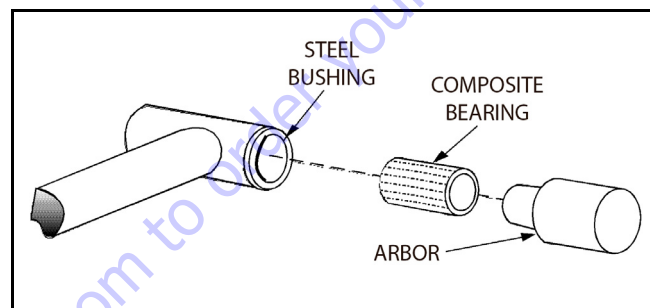

**Figure 5-139. Composite Bearing Installation**

12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

**ASSEMBLY**

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.

1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

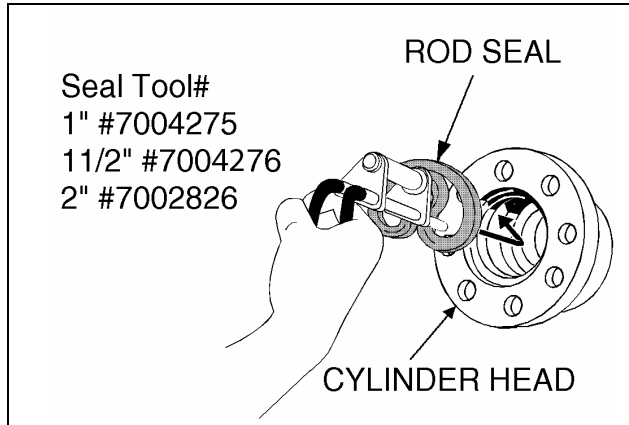


Figure 5-140. Rod Seal Installation

**NOTICE**

WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

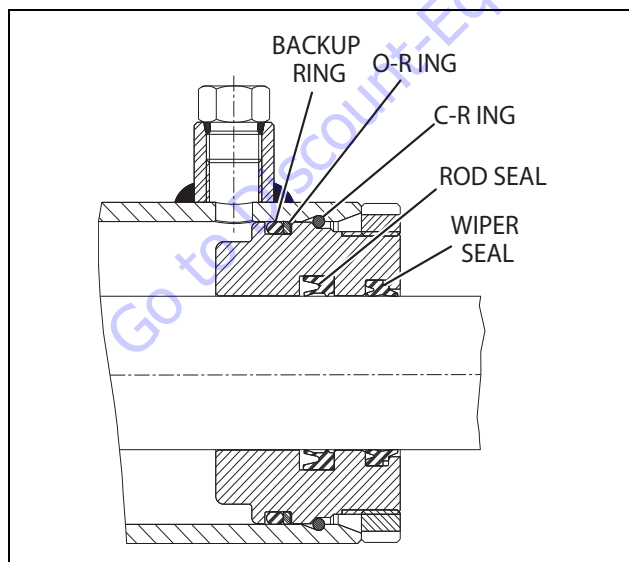


Figure 5-141. Cylinder Head Seal Installation

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

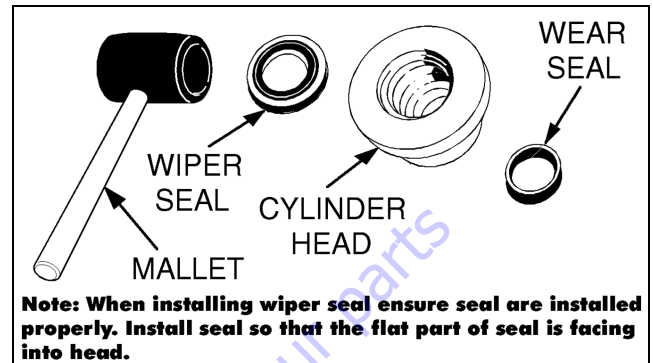


Figure 5-142. Wiper Seal Installation

3. Place a new o-ring, back-up ring and c-ring in the applicable outside diameter groove of the cylinder head.

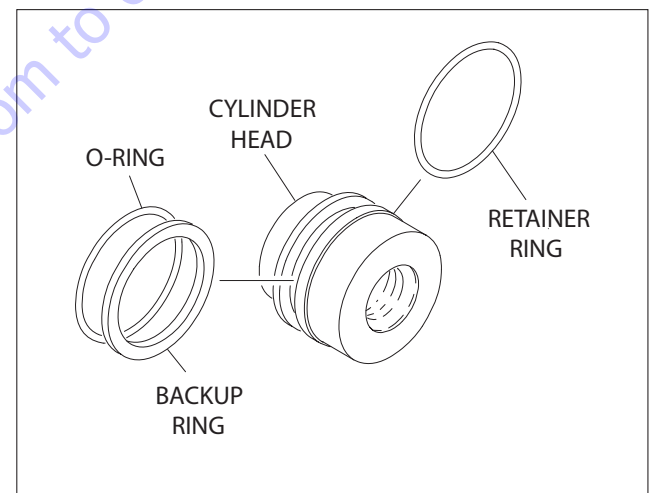


Figure 5-143. Installation of Head Seal Kit

4. Install spanner nut onto rod. Carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
6. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
7. Install the setscrews on the piston.
8. Remove the cylinder rod from the holding fixture.

9. Place new seal and wear ring in the outer piston diameter grooves. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

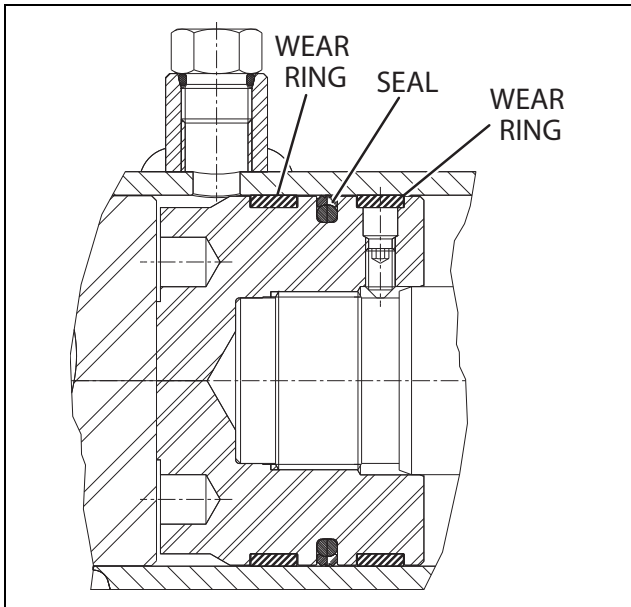


Figure 5-144. Piston Seal Kit Installation

10. Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

**EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.**

11. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
12. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.
13. Secure spanner nut into the cylinder barrel. Torque nut to 325-390 ft.lbs. (441-529 Nm).
14. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the reinstallation of any holding valve or valves, if applicable.



**Main Boom Telescope Cylinder (800A  
SN 0300183034 through 0300245050,  
800AJ SN 0300183034 to Present)**

**DISASSEMBLY**

**NOTICE**

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

**WARNING**

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove capscrews and valve assembly from the barrel end. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

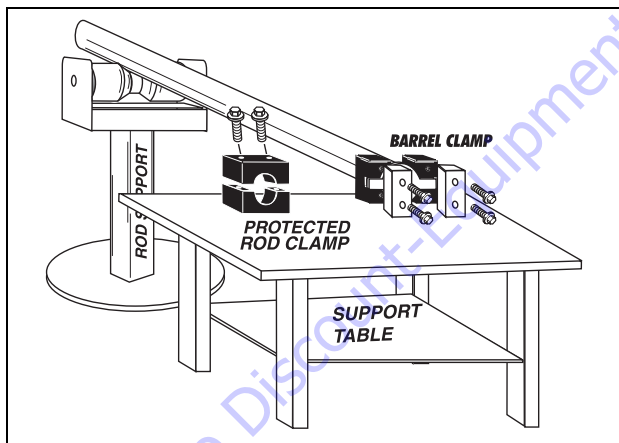


Figure 5-145. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

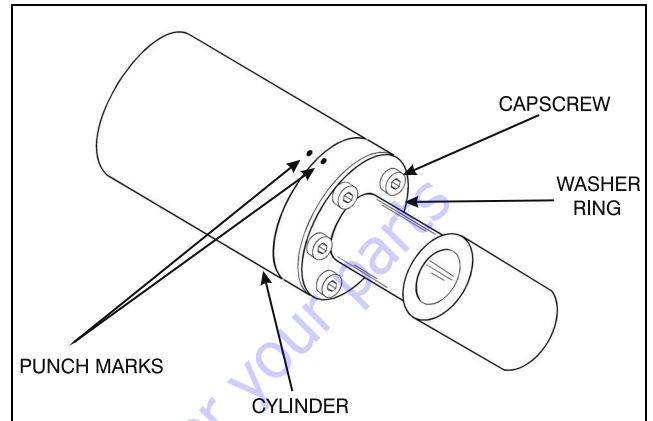


Figure 5-146. Capscrew Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.



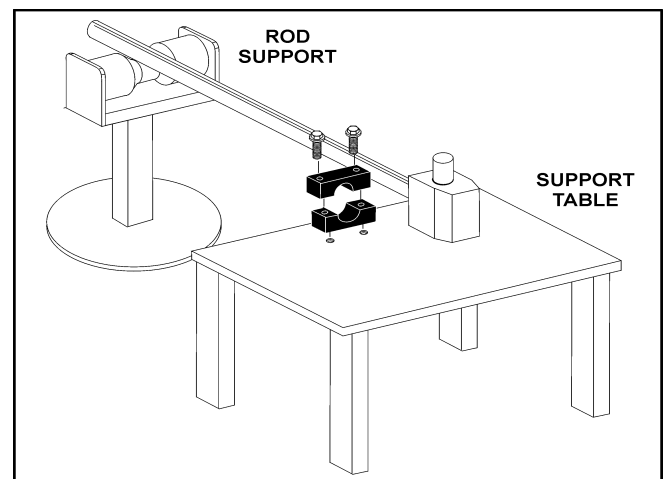


Figure 5-147. Cylinder Rod Support

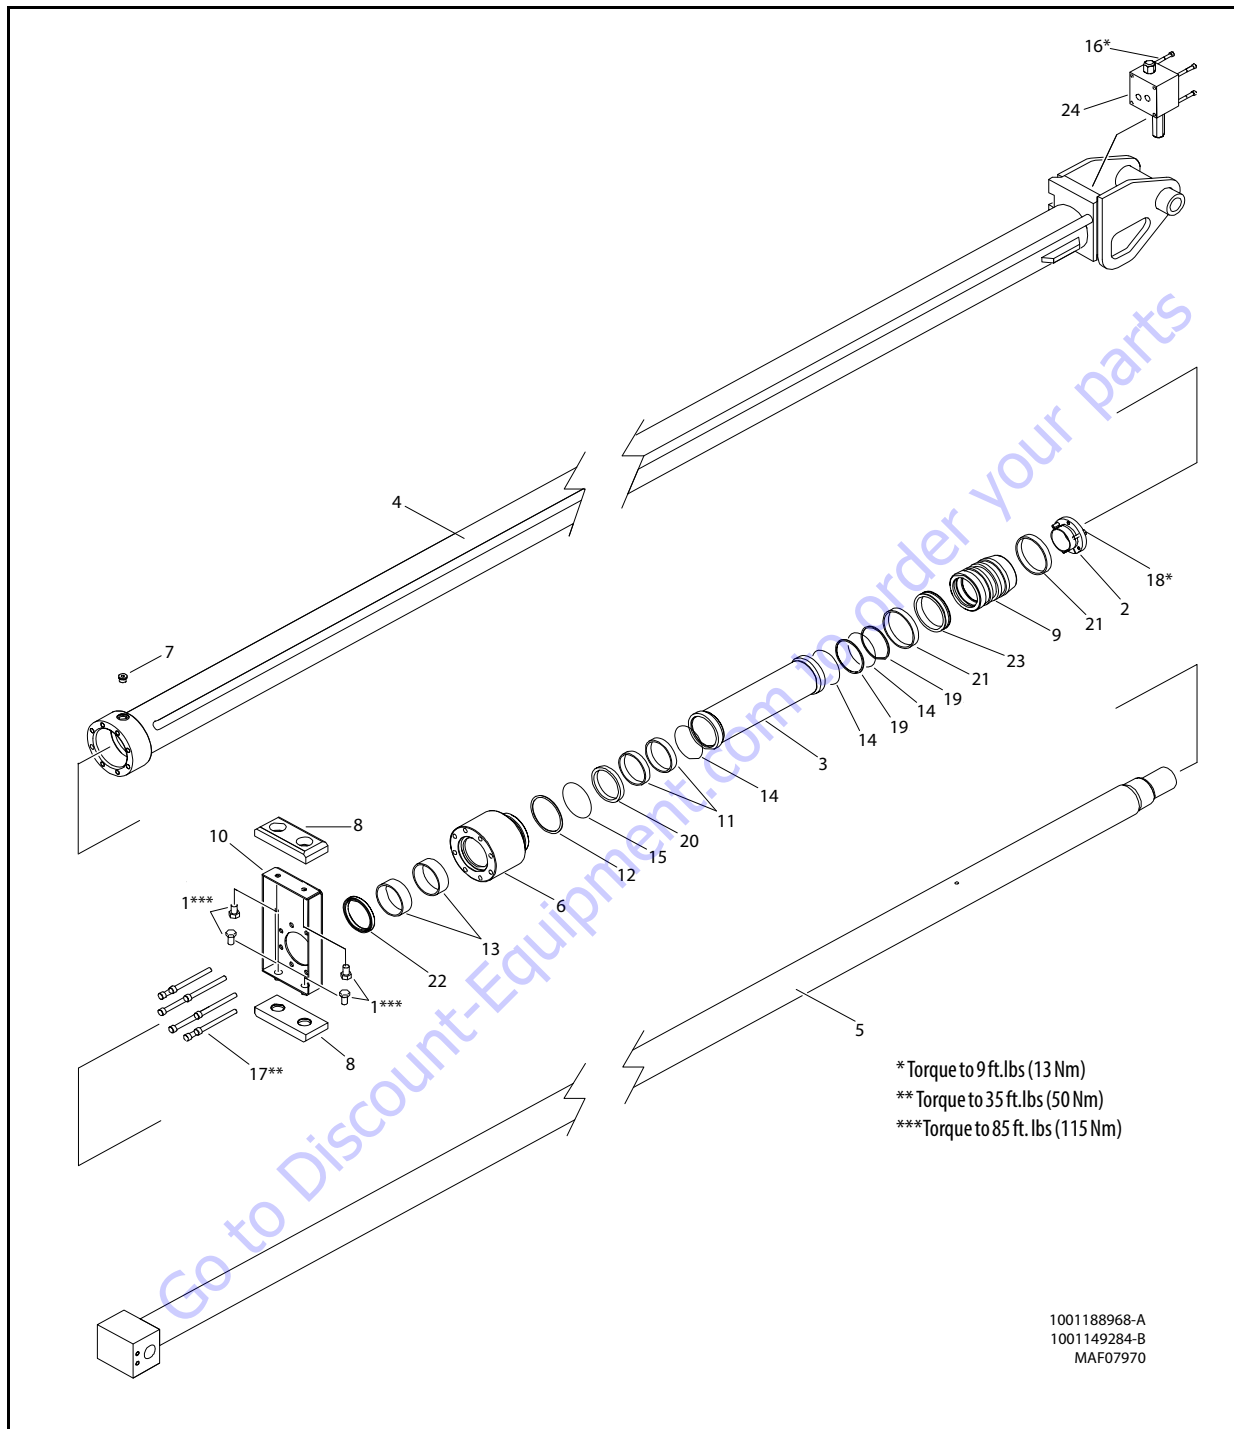

- |                    |                |                 |                 |                    |
|--------------------|----------------|-----------------|-----------------|--------------------|
| 1. Bolt            | 6. Head        | 11. Wear Ring   | 16. Capscrew    | 21. Wear Ring      |
| 2. Tapered Bushing | 7. O-ring Plug | 12. Backup Ring | 17. Capscrew    | 22. Wiper          |
| 3. Tube Spacer     | 8. Wear Pad    | 13. Wear Ring   | 18. Bolt        | 23. T-Seal         |
| 4. Barrel          | 9. Piston      | 14. O-ring      | 19. Backup Ring | 24. Valve Assembly |
| 5. Rod             | 10. Plate      | 15. O-ring      | 20. Rod Seal    |                    |


**Figure 5-148. Main Boom Telescopic Cylinder (800A SN 0300183034 through 0300245050, 800AJ SN 0300183034 through 0300243317)**

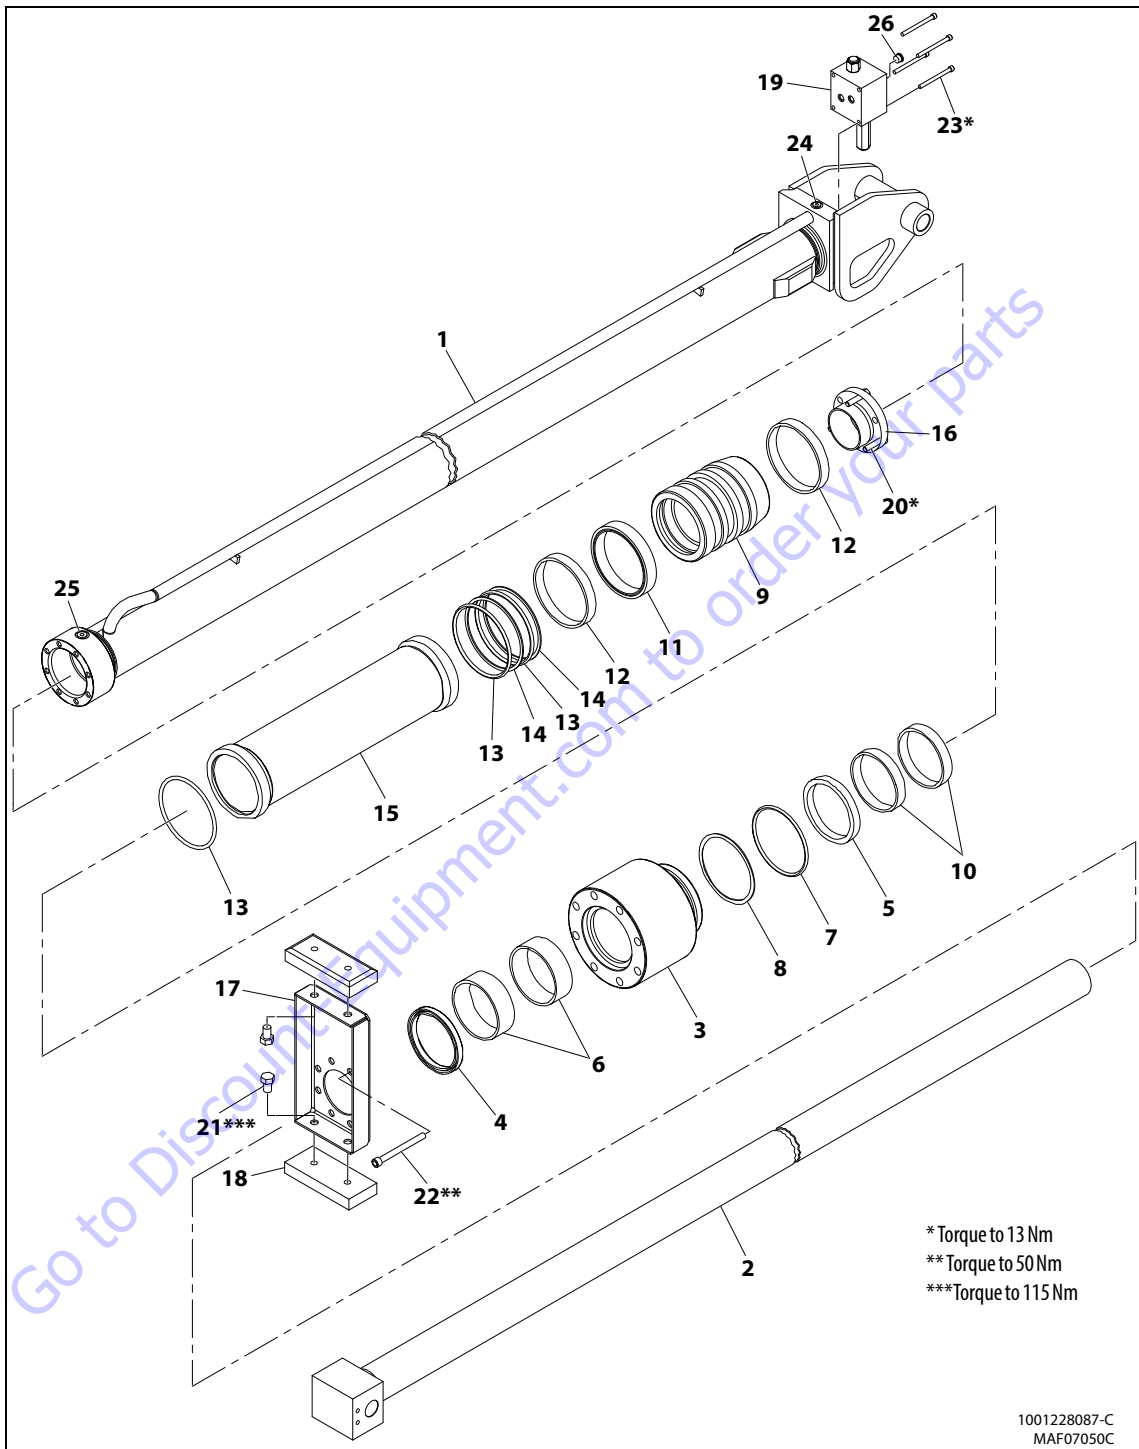

- |               |                |                 |                     |                 |                 |
|---------------|----------------|-----------------|---------------------|-----------------|-----------------|
| 1. Barrel     | 6. Wear Ring   | 11. Piston Seal | 16. Tapered Bushing | 21. Capscrew    | 25. O-ring Plug |
| 2. Rod        | 7. O-ring      | 12. Wear Ring   | 17. Plate           | 22. Capscrew    | 26. O-ring Plug |
| 3. Head       | 8. Backup Ring | 13. O-ring      | 18. Wear Pad        | 23. Capscrew    |                 |
| 4. Wiper Seal | 9. Piston      | 14. Backup Ring | 19. Valve Assembly  | 24. O-ring Plug |                 |
| 5. Rod Seal   | 10. Wear Ring  | 15. Spacer      | 20. Capscrew        |                 |                 |

Figure 5-149. Main Boom Telescopic Cylinder (800AJ SN 0300243318 to Present)

8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
10. Remove the bushing from the piston.

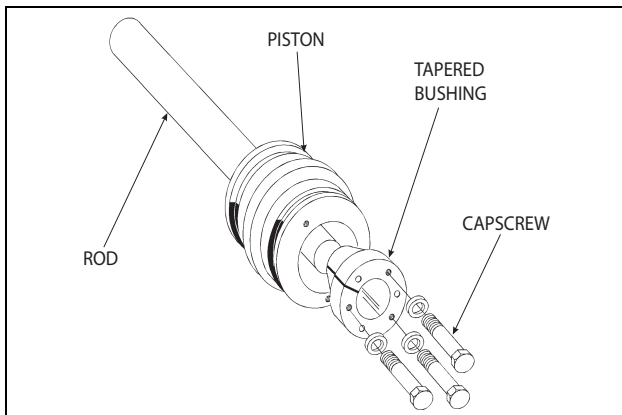


**Figure 5-150. Tapered Bushing Removal**

11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-rings, seal rings, and backup rings.
13. Remove o-rings from piston spacer. Remove piston spacer from the rod.
14. Remove capscrews to remove plate and wear pads.
15. Remove the rod from the holding fixture. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

**CLEANING AND INSPECTION**

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

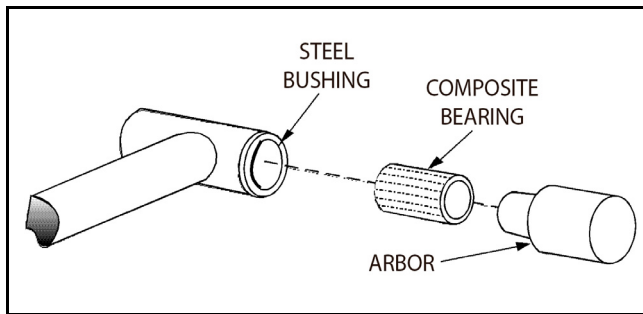

**Figure 5-151. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

**ASSEMBLY**

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

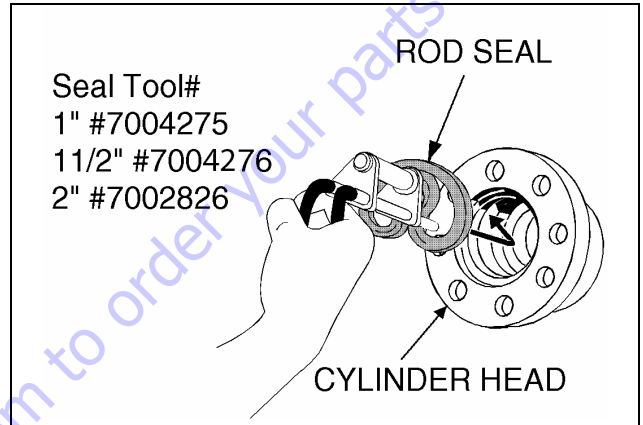

**Figure 5-152. Rod Seal Installation**

**NOTICE**

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

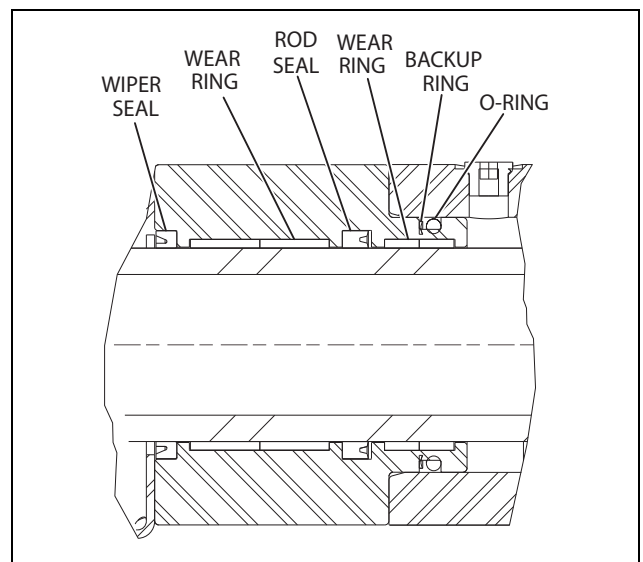

**Figure 5-153. Cylinder Head Seal Installation**

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

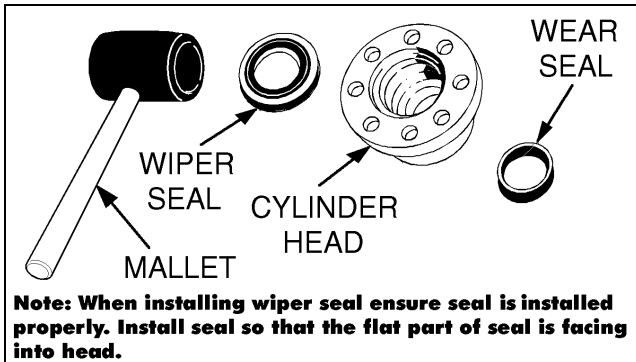


Figure 5-154. Wiper Seal Installation

3. Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

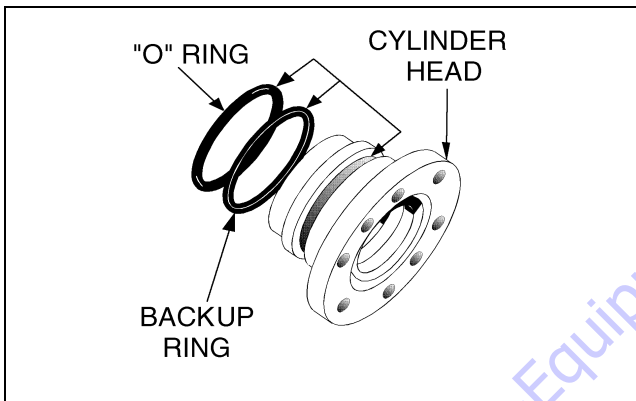


Figure 5-155. Installation of Head Seal Kit

4. Install plate on to the rod. Use capscrews to attach wear pads on the plate.
5. Carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
6. Install o-rings inside grooves of the piston spacer. Carefully slide the spacer on the rod.
7. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
8. Place a new o-ring and back-up rings in the inner piston diameter groove.
9. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
10. Thread piston onto rod until it abuts the spacer end and install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

11. Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

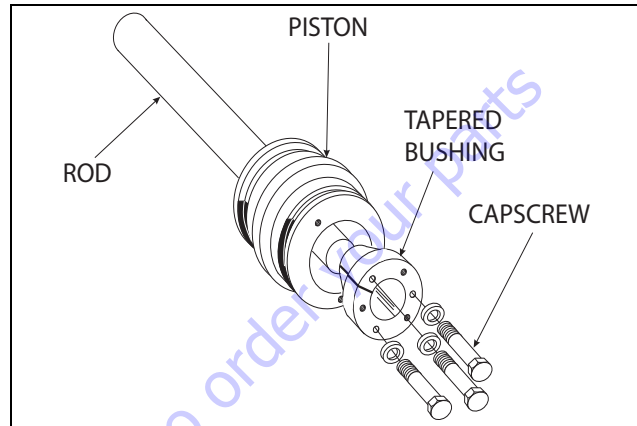


Figure 5-156. Tapered Bushing Installation

12. Tighten the capscrews evenly and progressively in rotation and torque as shown in Figure 5-148. and Figure 5-149.

13. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;

- a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
- b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

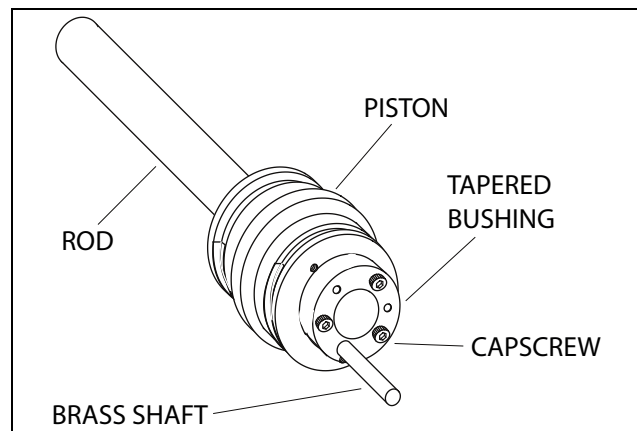


Figure 5-157. Seating the Tapered Bearing

14. Rotate the capscrews evenly and progressively in rotation and torque as shown in Figure 5-148. and Figure 5-149.
15. Remove the cylinder rod from the holding fixture.
16. Place new hydrolock seal and guidelock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

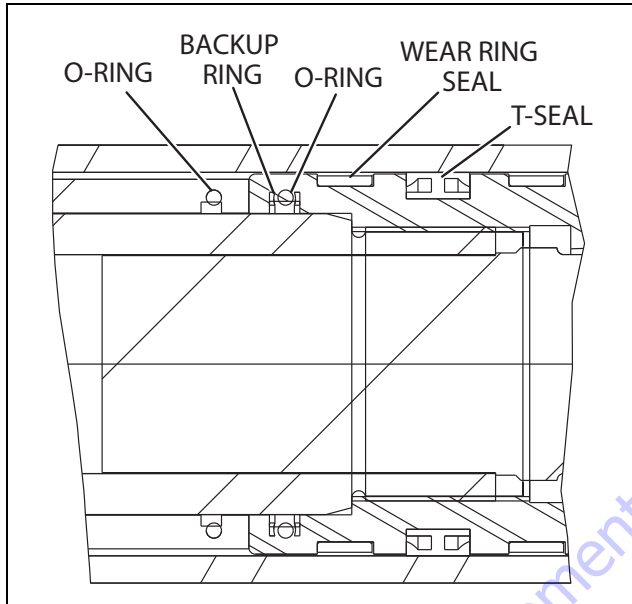


Figure 5-158. Piston Seal Kit Installation

17. Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

18. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
19. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

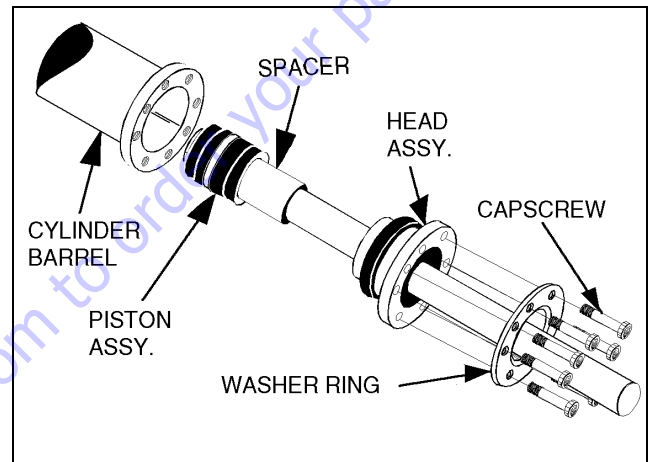


Figure 5-159. Rod Assembly Installation

20. Apply JLG Threadlocker as applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts as shown in Figure 5-148. and Figure 5-149.
21. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves.
22. Install the valve assembly. Torque capscrews as shown in Figure 5-148. and Figure 5-149.

## Main Boom Telescope Cylinder (SN 0300245051 to Present)

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. Remove the capscrews securing the valve block to the barrel end of the cylinder. Remove the valve assembly.
4. Remove the counterbalance valves and plugs from the valve block and cylinder port block. Discard o-rings.
5. Place the cylinder barrel into a suitable holding fixture.

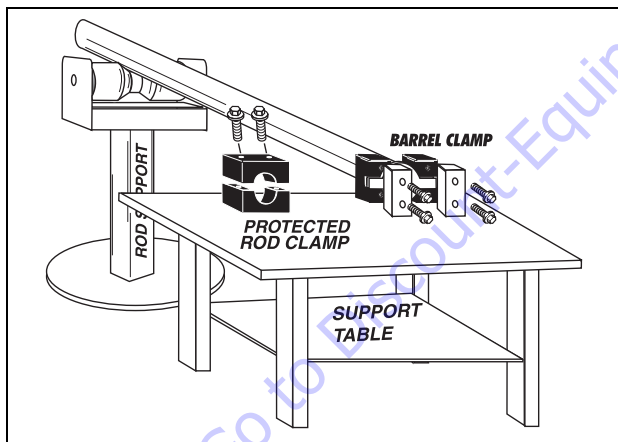


Figure 5-160. Cylinder Barrel Support

6. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen and remove the capscrews securing the wearpad plate and cylinder head to the barrel. Remove the hardware securing the wear pads to the plate. Remove the wear pads.

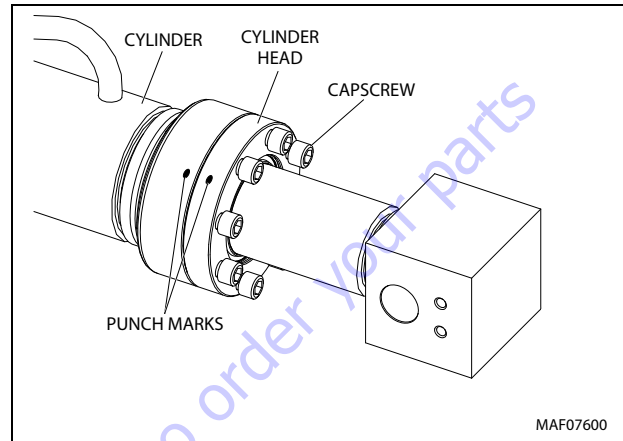


Figure 5-161. Cylinder Head Removal

7. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

8. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.


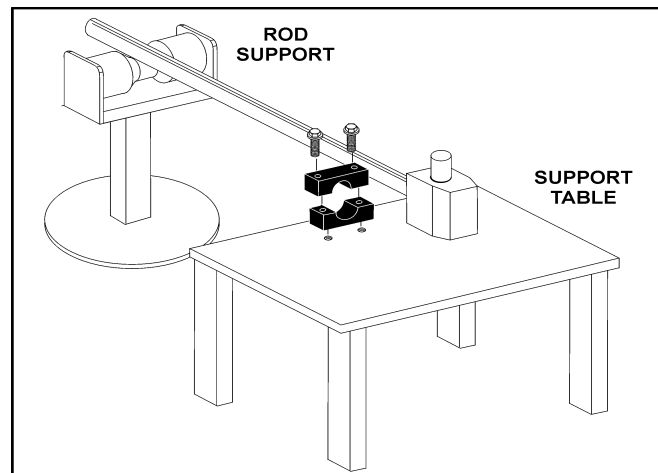


Figure 5-162. Cylinder Rod Support



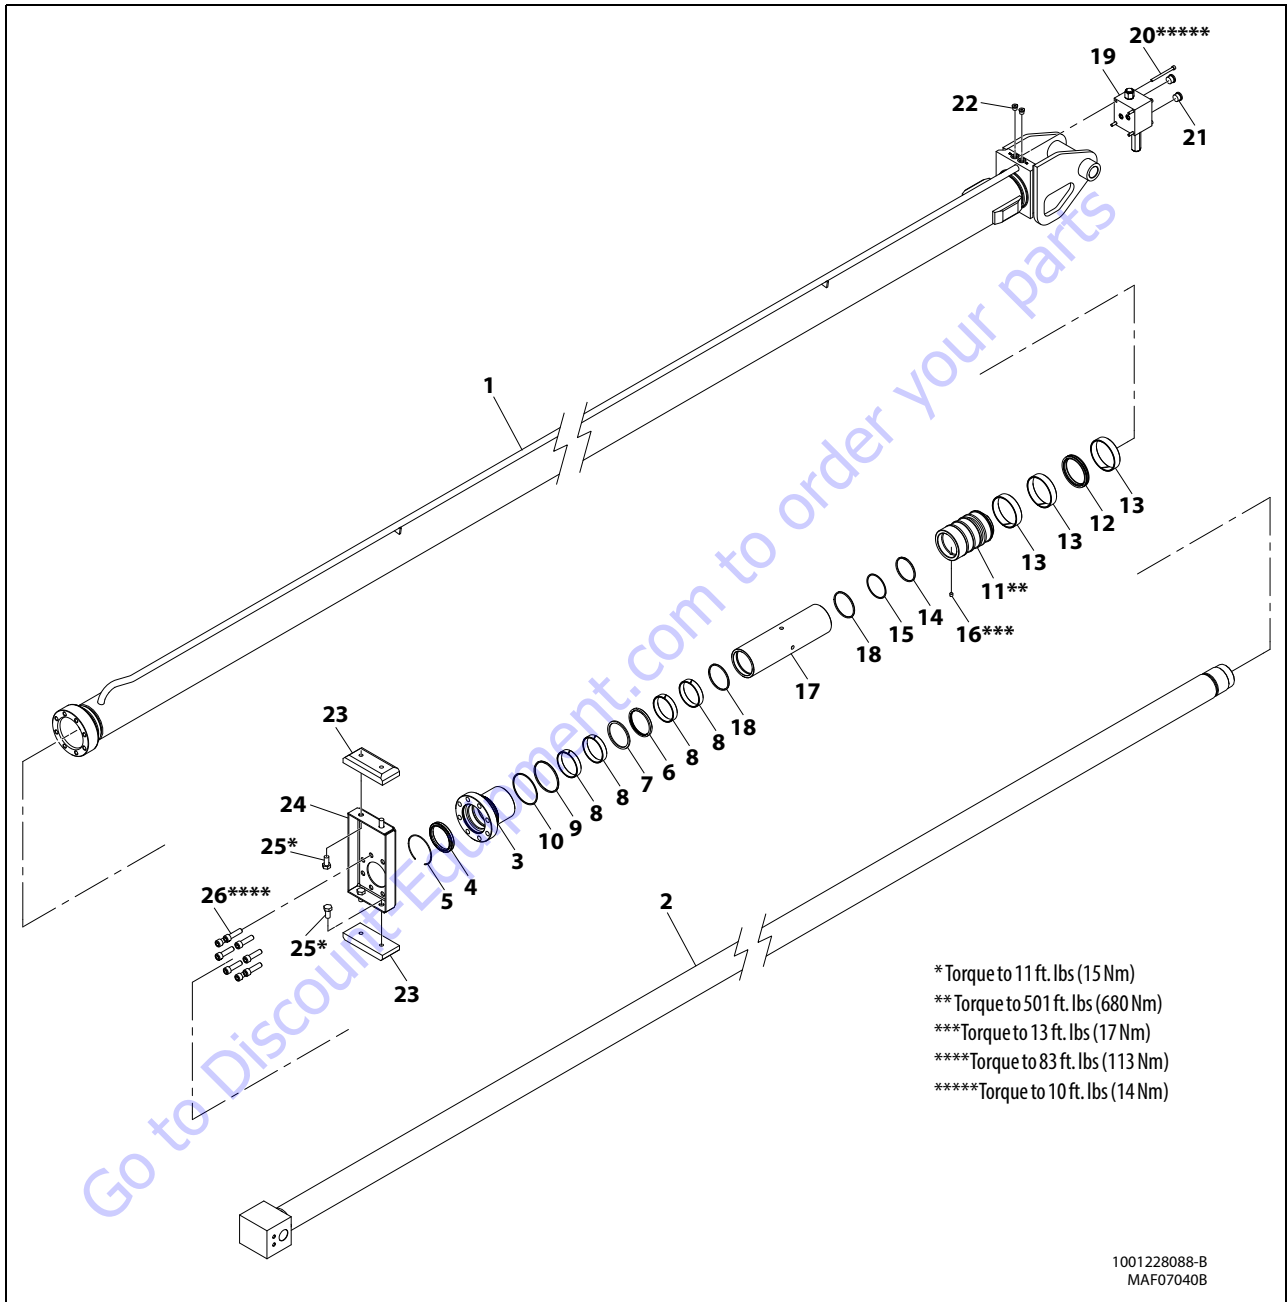

- |                   |                 |                 |                    |                 |              |
|-------------------|-----------------|-----------------|--------------------|-----------------|--------------|
| 1. Barrel         | 6. Rod Seal     | 11. Piston      | 16. Setscrew       | 21. O-ring Plug | 25. Capscrew |
| 2. Rod            | 7. Backup Ring  | 12. Seal        | 17. Tube Spacer    | 22. O-ring Plug | 26. Capscrew |
| 3. Head           | 8. Wear Ring    | 13. Wear Ring   | 18. O-ring         | 23. Wear Pad    |              |
| 4. Wiper Seal     | 9. O-ring       | 14. O-ring      | 19. Valve Assembly | 24. Plate       |              |
| 5. Retaining Ring | 10. Backup Ring | 15. Backup Ring | 20. Capscrew       |                 |              |


Figure 5-163. Main Boom Telescopic Cylinder (800A SN 0300245051 to Present)

9. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
10. Remove the setscrews from the piston.
11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-ring, seal rings, backup rings and wear rings.
13. Remove piston spacer from the rod. Remove and discard the o-rings from the spacer.
14. Remove the rod from the holding fixture. Remove cylinder head. Discard the o-rings, backup ring, wear rings, retaining ring rod seal and wiper seal.

### CLEANING AND INSPECTION

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect threaded portion of barrel for damage. Dress threads as necessary.
6. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
7. Inspect threaded portion of piston for damage. Dress threads as necessary.
8. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
9. Inspect cylinder head inside diameter for scoring, tapering, ovality or other damage. Replace if necessary.
10. Inspect threaded portion of head for damage. Dress threads as necessary.
11. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
12. Inspect cylinder head outside diameter for scoring, tapering, ovality or other damage. Replace if necessary.
13. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace if necessary.
  - a. Thoroughly clean hole (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inner side of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

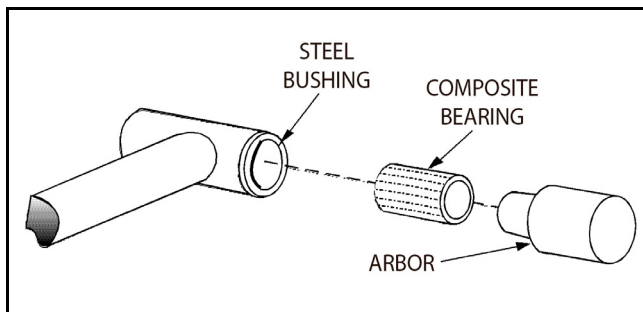

**Figure 5-164. Composite Bearing Installation**


14. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
15. Inspect o-ring groove in spacer for burrs and sharp edges. Dress applicable surfaces as necessary.
16. Inspect port block fittings and holding valve. Replace if necessary.
17. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair if necessary.
18. Inspect piston rings for cracks or other damage. Replace if necessary.

**ASSEMBLY**

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head groove.

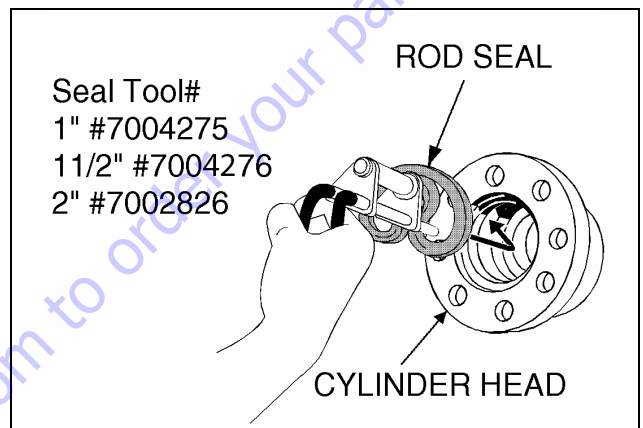

**Figure 5-165. Rod Seal Installation**

**NOTICE**

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

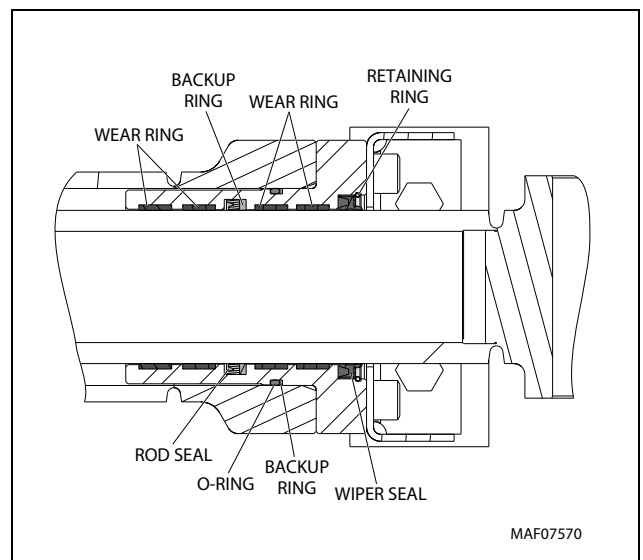

**Figure 5-166. Cylinder Head Seal Installation**

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head groove. Install new wear rings into the applicable inside diameter of the cylinder head groove.

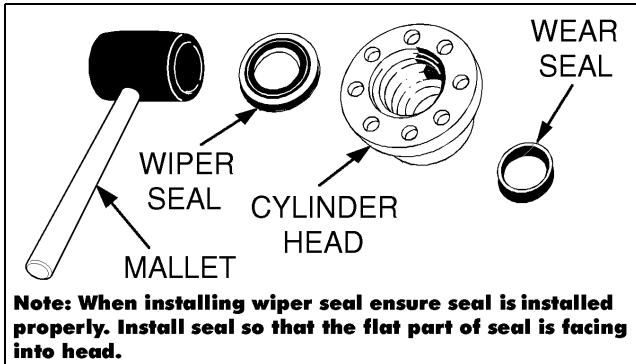


Figure 5-167. Wiper Seal Installation

3. Place new o-ring and backup ring in the applicable outside diameter groove of the cylinder head.

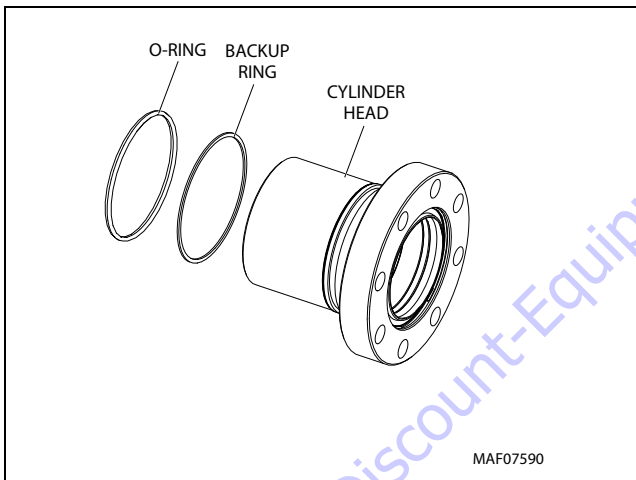


Figure 5-168. Installation of Head Seal Kit

4. Carefully install the cylinder head on the rod, ensuring that the wear ring, rod seal and wiper seal are not damaged or dislodged. Push the head along the rod to the rod end.

5. Place new o-rings in the applicable inside diameter groove of spacer.
6. Install the spacer tube onto the cylinder rod ensuring that the o-rings are not damaged or dislodged.
7. Place a new o-ring and backup rings in the inner piston diameter groove.
8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
9. Carefully thread the piston on the cylinder rod till it abuts the spacer, ensuring that the o-ring and backup ring is not damaged or dislodged. Torque piston to 501 ft. lbs (680 Nm).
10. Install the setscrew on the piston. Torque setscrew to 13 ft. lbs (17 Nm).

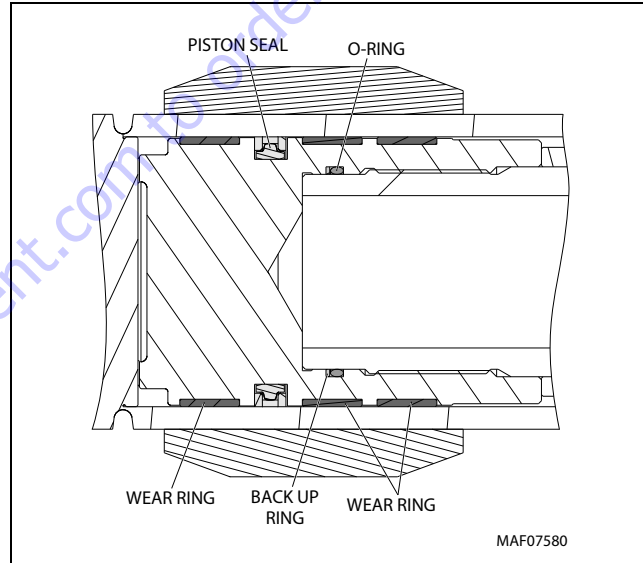


Figure 5-169. Piston Seal Kit Installation

11. Remove the cylinder rod from the holding fixture.
12. Place new piston seal and wear rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

13. Position the cylinder barrel in a suitable holding fixture.

**NOTICE**

**EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.**

14. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
15. Continue pushing the rod into the barrel until the cylinder head can be inserted into the barrel cylinder.
16. Install wear pads onto the wearpad plate using bolts, washers and nuts and torque bolts to 11 ft. lbs (15 Nm).
17. Secure the cylinder head to the barrel using the wearpad plate and capscrews. Torque capscrews to 83 ft. lbs (113 Nm).
18. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the reinstallation of any holding valve or valves.
19. Install new plugs in the cylinder port block.
20. Install the counterbalance valves onto the valve block.
21. Install the valve assembly at the barrel end of the cylinder and secure using capscrews. Torque to 10 ft. lbs (14 Nm).

## Tower Boom Telescope Cylinder

### DISASSEMBLY

#### NOTICE

DISASSEMBLY OF THE CYLINDER SHOULD BE PERFORMED ON A CLEAN WORK SURFACE IN A DIRT FREE WORK AREA.

1. Connect a suitable auxiliary hydraulic power source to the cylinder port block fitting.

#### WARNING

DO NOT FULLY EXTEND CYLINDER TO THE END OF STROKE. RETRACT CYLINDER SLIGHTLY TO AVOID TRAPPING PRESSURE.

2. Operate the hydraulic power source and extend the cylinder. Shut down and disconnect the power source. Adequately support the cylinder rod, if applicable.
3. If applicable, remove the cartridge-type holding valve and fittings from the cylinder port block. Discard o-rings.
4. Place the cylinder barrel into a suitable holding fixture.

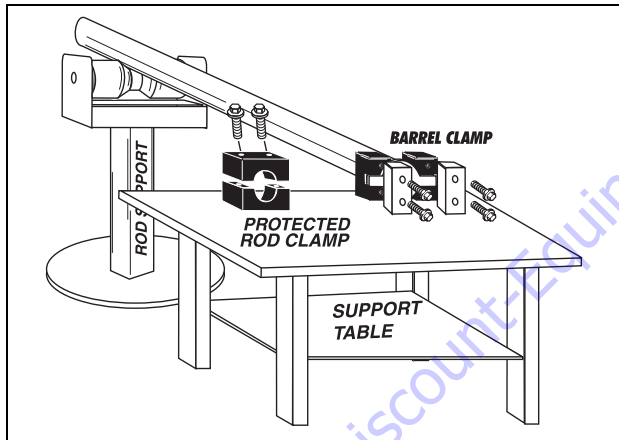


Figure 5-170. Cylinder Barrel Support

5. Mark cylinder head and barrel with a center punch for easy realignment. Using an allen wrench, loosen the cylinder head retainer capscrews, and remove capscrews from cylinder barrel.

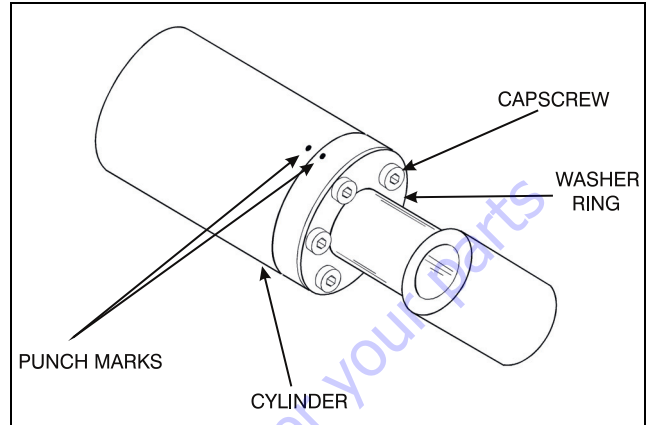


Figure 5-171. Capscrew Removal

6. Attach a suitable pulling device to the cylinder rod port block end or cylinder rod end, as applicable.

#### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN REMOVING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

7. With the barrel clamped securely, apply pressure to the rod pulling device and carefully withdraw the complete rod assembly from the cylinder barrel.



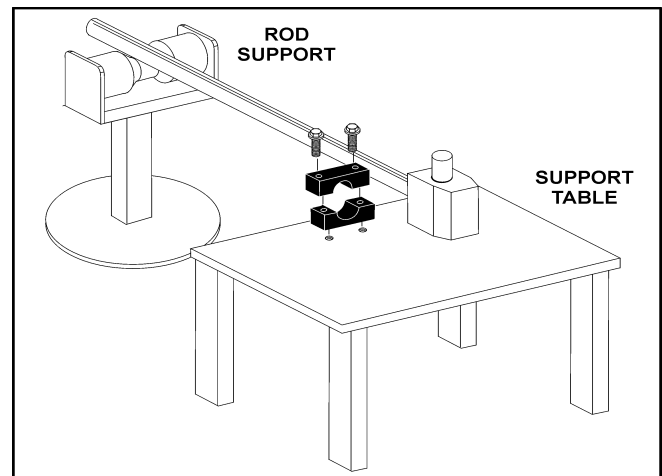


Figure 5-172. Cylinder Rod Support

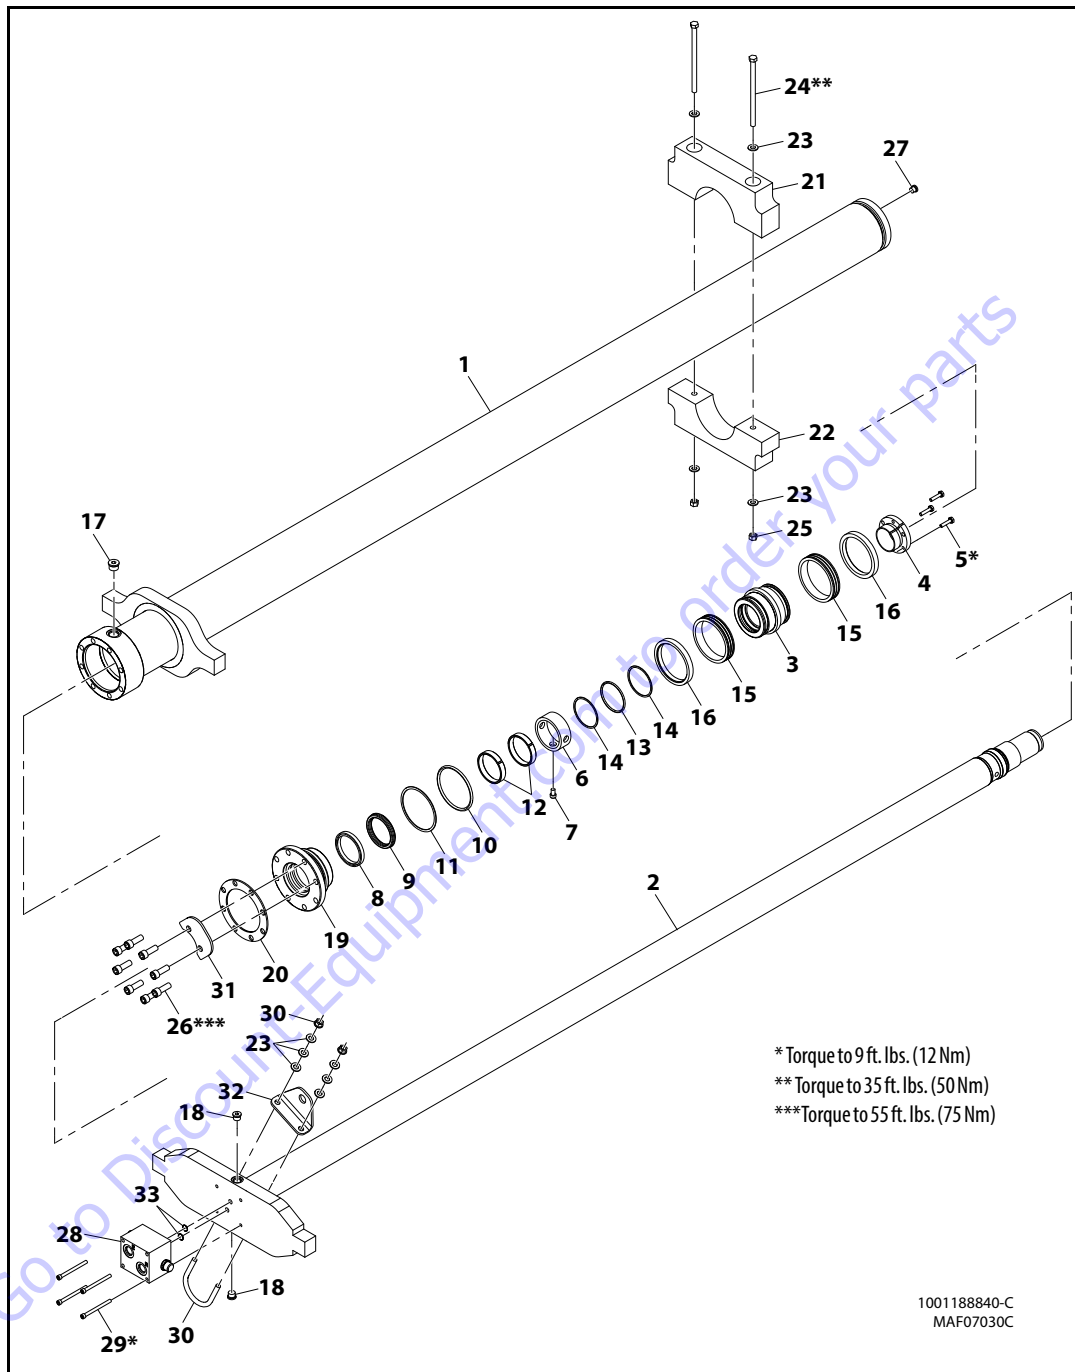

- |                    |                 |                  |                    |                  |
|--------------------|-----------------|------------------|--------------------|------------------|
| 1. Barrel          | 8. Wiper        | 15. Seal         | 22. SupportPad     | 29. Capscrew     |
| 2. Rod             | 9. Seal         | 16. Lock Ring    | 23. Washer         | 30. U Bolt       |
| 3. Piston          | 10. O-ring      | 17. Plug, O-ring | 24. Bolt           | 31. Target Plate |
| 4. Tapered Bushing | 11. Backup Ring | 18. Plug, O-ring | 25. Nut            | 32. Mount Plate  |
| 5. Bolt            | 12. Wear Ring   | 19. Head         | 26. Capscrew       | 33. O-ring       |
| 6. Tube Spacer     | 13. O-ring      | 20. Washer Ring  | 27. Plug           |                  |
| 7. Setscrew        | 14. Backup Ring | 21. Support Pad  | 28. Valve Assembly |                  |

Figure 5-173. Tower Boom Telescopic Cylinder (SN 0300183034 through 0300243317)

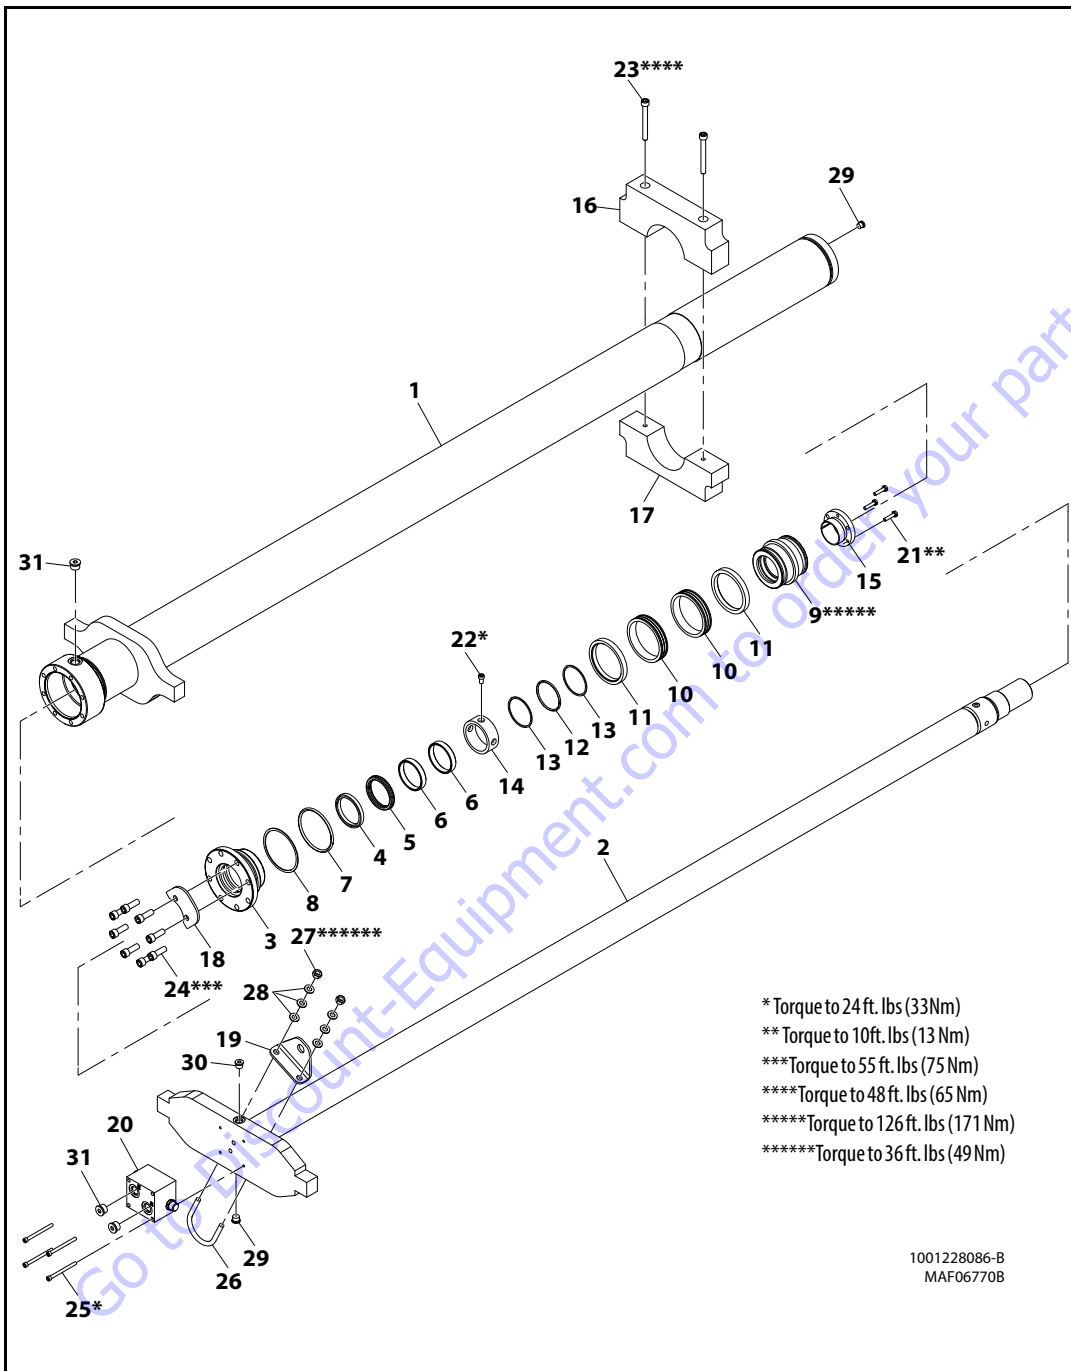


- |              |                 |                     |                |          |
|--------------|-----------------|---------------------|----------------|----------|
| 1. Barrel    | 8. Backup Ring  | 15. Tapered Bushing | 22. Setscrew   | 29. Plug |
| 2. Rod       | 9. Piston       | 16. Support Pad     | 23. Bolt       | 30. Plug |
| 3. Head      | 10. Seal        | 17. Support Pad     | 24. Capscrew   | 31. Plug |
| 4. Wiper     | 11. Lock Ring   | 18. Target Plate    | 25. Capscrew   |          |
| 5. Rod Seal  | 12. O-ring      | 19. Mount Plate     | 26. U Bolt     |          |
| 6. Wear Ring | 13. Backup Ring | 20. Valve Assembly  | 27. Nut        |          |
| 7. O-ring    | 14. Tube Spacer | 21. Bolt            | 28. Flatwasher |          |

Figure 5-174. Tower Boom Telescopic Cylinder (SN 0300243318 to Present)



8. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to the piston as possible.
9. Insert the capscrews in the threaded holes in the outer piece of the tapered bushing. Progressively tighten the capscrews until the bushing is loosen on the piston.
10. Remove the bushing from the piston.

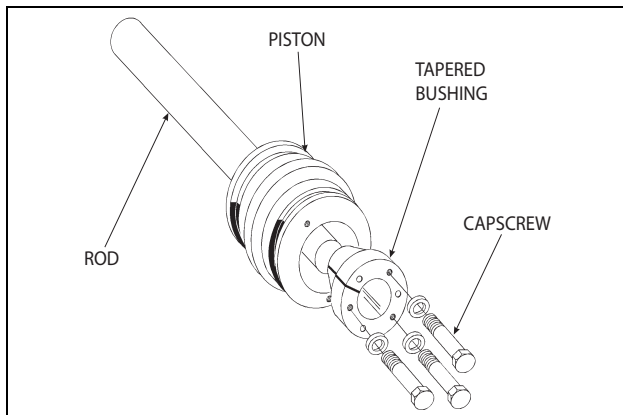

**Figure 5-175. Tapered Bushing Removal**


11. Screw the piston counterclockwise, by hand, and remove the piston from cylinder rod.
12. Remove and discard the piston o-rings, seal rings, and backup rings.
13. Remove setscrew from the piston spacer. Remove spacer from the rod.
14. Remove the rod from the holding fixture. Remove capscrews, target plate and washer ring if available. Remove the cylinder head gland. Discard the o-rings, back-up rings, rod seals, and wiper seals.

### CLEANING AND INSPECTION

1. Clean all parts thoroughly in an approved cleaning solvent.
2. Inspect the cylinder rod for scoring, tapering, ovality, or other damage. If necessary, dress rod with Scotch Brite or equivalent. Replace rod if necessary.
3. Inspect threaded portion of rod for excessive damage. Dress threads as necessary.
4. Inspect inner surface of cylinder barrel tube for scoring or other damage. Check inside diameter for tapering or ovality. Replace if necessary.
5. Inspect piston surface for damage and scoring and for distortion. Dress piston surface or replace piston as necessary.
6. Inspect threaded portion of piston for damage. Dress threads as necessary.
7. Inspect seal and o-ring grooves in piston for burrs and sharp edges. Dress applicable surfaces as necessary.
8. Inspect cylinder head inside diameter for scoring or other damage and for ovality and tapering. Replace as necessary.
9. Inspect seal and o-ring grooves in head for burrs and sharp edges. Dress applicable surfaces as necessary.
10. Inspect cylinder head outside diameter for scoring or other damage and ovality and tapering. Replace as necessary.
11. If applicable, inspect rod and barrel bearings for signs of correct excessive wear or damage. Replace as necessary.
  - a. Thoroughly clean hole, (steel bushing) of burrs, dirt etc. to facilitate bearing installation.
  - b. Inspect steel bushing for wear or other damage. If steel bushing is worn or damaged, rod/barrel must be replaced.
  - c. Lubricate inside of steel bushing prior to bearing installation.
  - d. Using an arbor of the correct size, carefully press the bearing into steel bushing.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**NOTE:** Install pin into the composite bearing dry. Lubrication is not required with nickel plated pins and bearings.

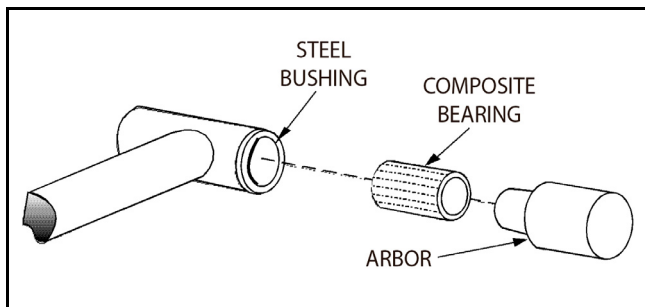

**Figure 5-176. Composite Bearing Installation**


12. Inspect spacer for burrs and sharp edges. If necessary, dress inside diameter surface with Scotch Brite or equivalent.
13. If applicable, inspect port block fittings and holding valve. Replace as necessary.
14. Inspect the oil ports for blockage or the presence of dirt or other foreign material. Repair as necessary.
15. If applicable, inspect piston rings for cracks or other damage. Replace as necessary.

### ASSEMBLY

**NOTE:** Prior to cylinder assembly, ensure that the proper cylinder seal kit is used. See your JLG Parts Manual.

**NOTE:** Apply a light film of hydraulic oil to all components prior to assembly.


1. A special tool is used to install a new rod seal into the applicable cylinder head gland groove.

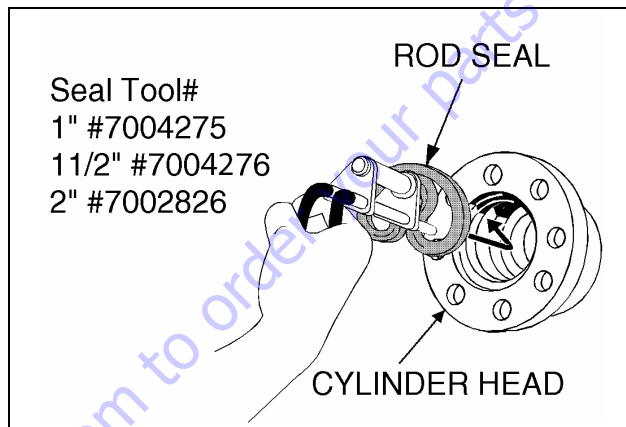

**Figure 5-177. Rod Seal Installation**

### NOTICE

**WHEN INSTALLING NEW SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.**

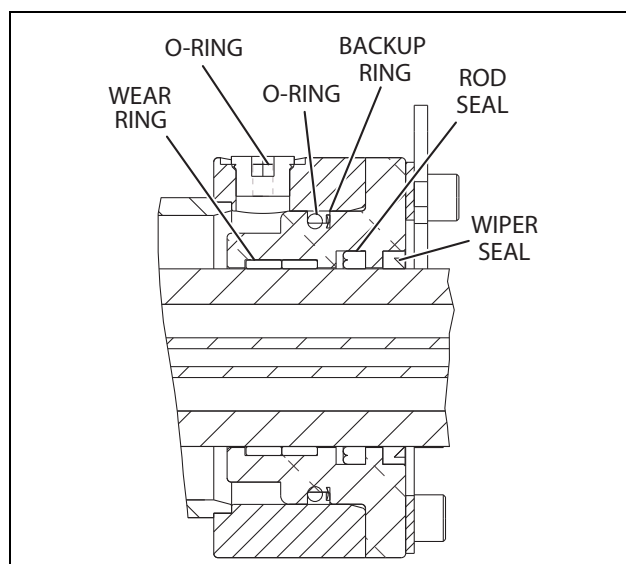

**Figure 5-178. Cylinder Head Seal Installation**

2. Use a soft mallet to tap a new wiper seal into the applicable cylinder head gland groove. Install a new wear ring into the applicable cylinder head gland groove.

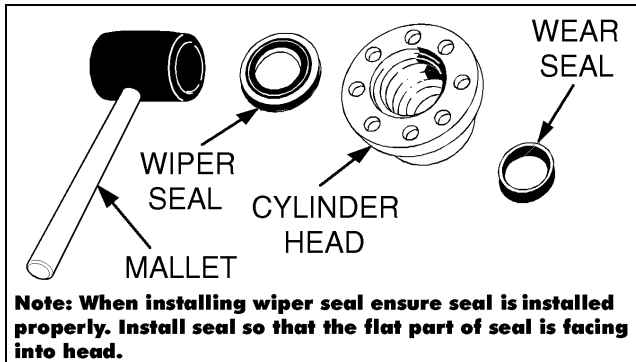


Figure 5-179. Wiper Seal Installation

3. Place a new o-ring and back-up seal in the applicable outside diameter groove of the cylinder head.

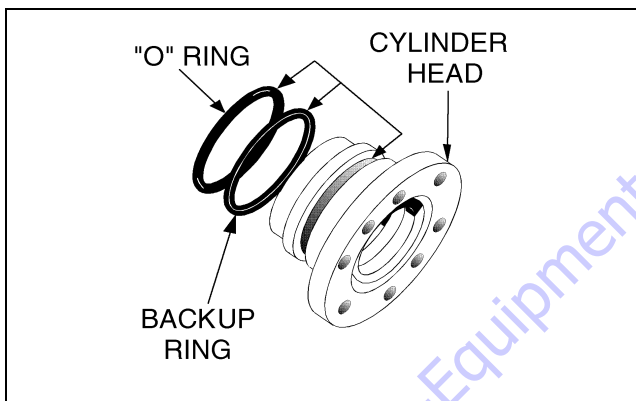


Figure 5-180. Installation of Head Seal Kit

4. Install washer ring onto rod if applicable, carefully install the head gland on the rod, ensuring that the wiper and rod seals are not damaged or dislodged. Push the head along the rod to the rod end, as applicable.
5. Carefully slide the piston spacer on the rod. Install setscrew on the spacer. Torque setscrew as shown in Figure 5-173, and Figure 5-174.
6. Using suitable protection, clamp the cylinder rod in a vise or similar holding fixture as close to piston as possible.
7. Place a new o-ring and back-up rings in the inner piston diameter groove.
8. Carefully thread the piston on the cylinder rod hand tight, ensuring that the o-ring and back-up rings are not damaged or dislodged.
9. Thread piston onto rod until it abuts the spacer end and torque piston as shown in Figure 5-173, and Figure 5-174. Install the tapered bushing.

**NOTE:** When installing the tapered bushing, piston and mating end of rod must be free of oil.

10. Assemble the tapered bushing loosely into the piston and insert capscrews through the drilled holes in the bushing and into the tapped holes in the piston.

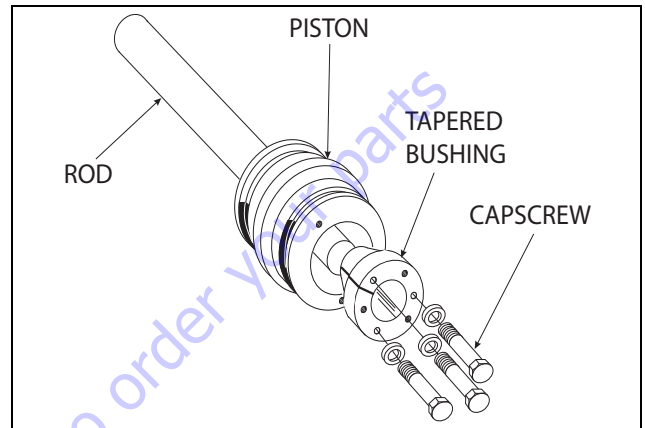


Figure 5-181. Tapered Bushing Installation

11. Tighten the capscrews evenly and progressively in rotation and torque capscrews as shown in Figure 5-173, and Figure 5-174.
12. After the screws have been torqued, tap the tapered bushing with a hammer (16 to 24 oz.) and brass shaft (approximately 3/4" in diameter) as follows;
  - a. Place the shaft against the cylinder rod and in contact with the bushing in the spaces between the capscrews.
  - b. Tap each space once; this means the tapered bushing is tapped 3 times as there are 3 spaces between the capscrews.

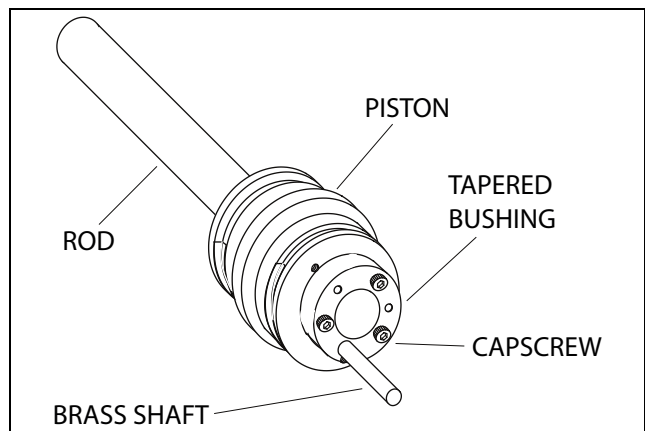


Figure 5-182. Seating the Tapered Bearing

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

13. Rotate the capscrews evenly and progressively in rotation and torque capscrews as shown in Figure 5-173. and Figure 5-174.
14. Remove the cylinder rod from the holding fixture.

### NOTICE

WHEN INSTALLING HYDROLOCK PISTON SEALS, ENSURE SEALS ARE INSTALLED PROPERLY. REFER TO HYDROLOCK PISTON SEAL INSTALLATION FOR CORRECT SEAL ORIENTATION. IMPROPER SEAL INSTALLATION COULD RESULT IN CYLINDER LEAKAGE AND IMPROPER CYLINDER OPERATION.

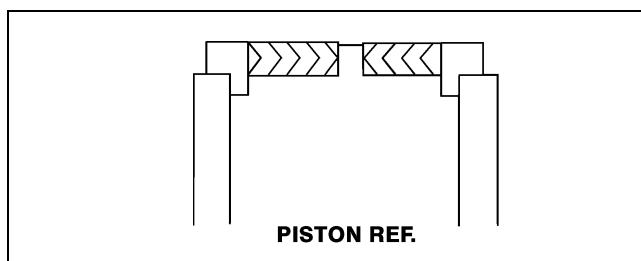


Figure 5-183. Hydrolock Piston Seal Installation

15. Place new hydrolock seal and guidelock rings in the outer piston diameter groove. (A tube, with I.D. slightly larger than the O.D. of the piston is recommended to install the solid seal).

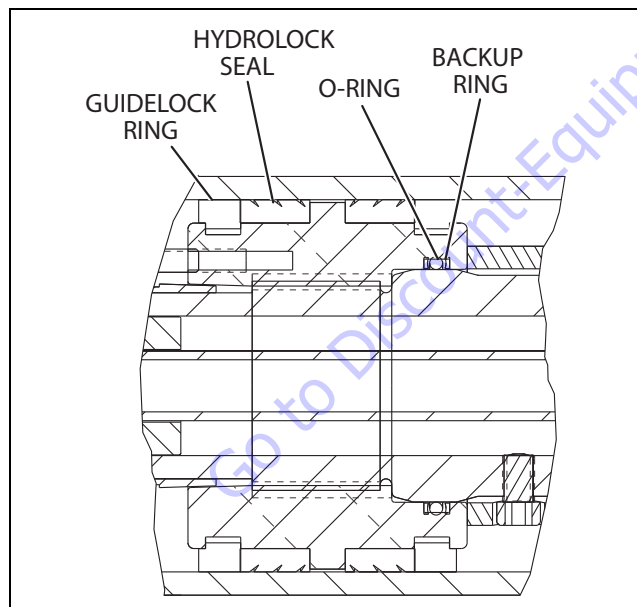


Figure 5-184. Piston Seal Kit Installation

16. Position the cylinder barrel in a suitable holding fixture.

### NOTICE

EXTREME CARE SHOULD BE TAKEN WHEN INSTALLING THE CYLINDER ROD, HEAD, AND PISTON. AVOID PULLING THE ROD OFF-CENTER, WHICH COULD CAUSE DAMAGE TO THE PISTON AND CYLINDER BARREL SURFACES.

17. With barrel clamped securely, and while adequately supporting the rod, insert the piston end into the barrel cylinder. Ensure that the piston loading o-ring and seal ring are not damaged or dislodged.
18. Continue pushing the rod into the barrel until the cylinder head gland can be inserted into the barrel cylinder.

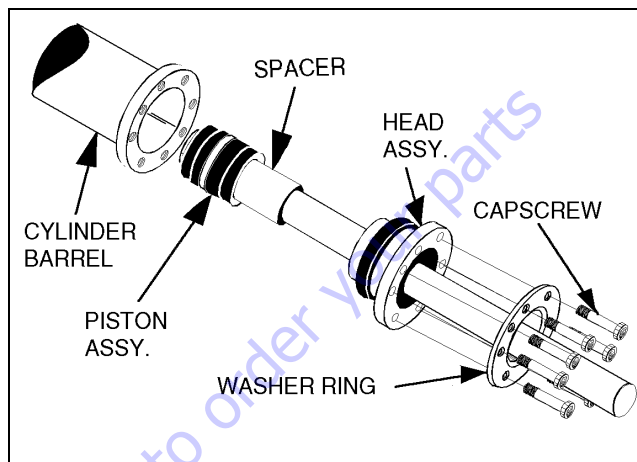


Figure 5-185. Rod Assembly Installation

19. Apply JLG Threadlocker if applicable to the socket head bolts and secure the cylinder head gland using the washer ring and bolts. Torque bolts as shown in Figure 5-173. and Figure 5-174.
20. After the cylinder has been reassembled, the rod should be pushed all the way in (fully retracted) prior to the re-installation of any holding valve or valves.
21. Install the valve assembly. Torque capscrews as shown in Figure 5-173. and Figure 5-174.

## 5.4 CYLINDER REMOVAL AND INSTALLATION

### Main Boom Telescope Cylinder Removal

1. Place machine on a flat and level surface, with main boom in the horizontal position.
2. Extend the boom to gain access to main fly boom telescope cylinder rod end pin.
3. Remove the hardware securing the telescope cylinder rod attach pin to the boom. Using a suitable brass drift, drive out the cylinder rod attach pin.

**NOTE:** The Main Boom weighs approximately 2528 lbs. (1147 kg).

4. Using a suitable sling and lifting device, secure the platform end of the boom.
5. Place blocking under the main lift cylinder to prevent it from falling when the attaching hardware is removed.
6. Remove the hardware securing the main lift cylinder rod attach pin to the boom. Using a suitable brass drift, drive out the cylinder rod attach pin.




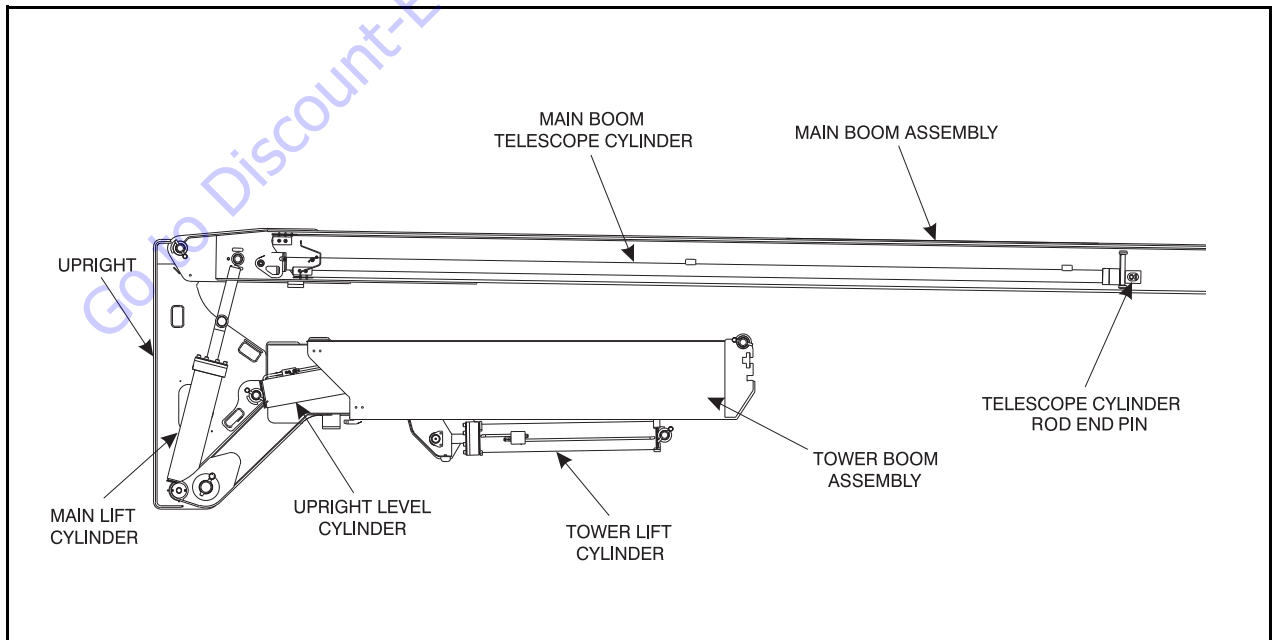


Figure 5-186. Components Main Boom and Tower Boom

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

7. Using auxiliary power from ground controls, retract the lift cylinder rod completely.
8. Remove hardware securing cover plate on the rear of the main boom. Remove cover plate.
9. Remove mounting hardware securing the telescope cylinder barrel to the main base boom.

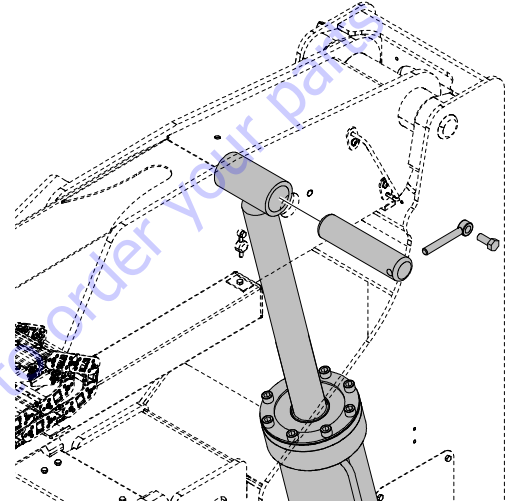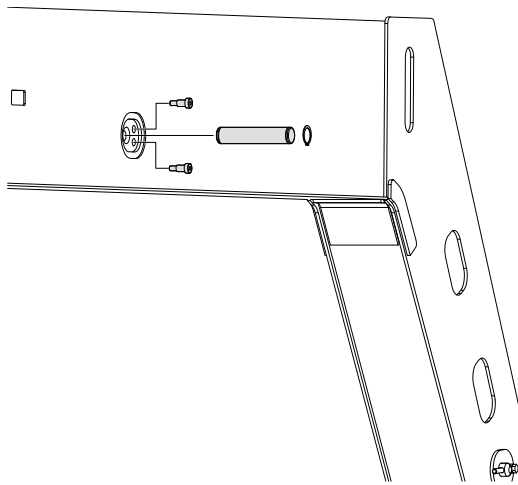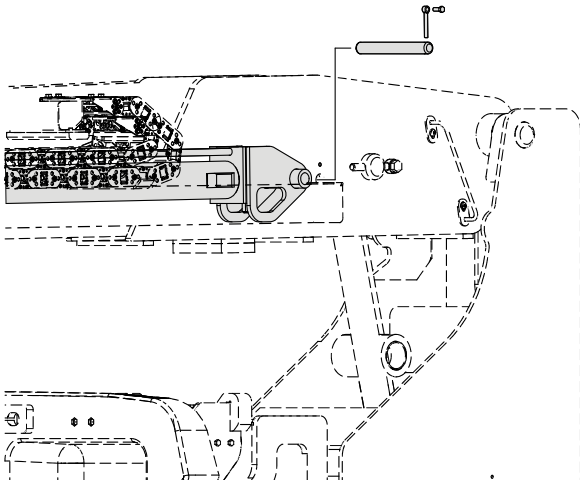

10. Using an external pump, extend the cylinder as far as the hydraulic lines will allow to enable a lifting device to be attached to the telescope cylinder.

### NOTICE

**HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID THE ENTRY OF CONTAMINANTS INTO THE SYSTEM**


11. Tag and disconnect hydraulic lines from telescope cylinder. Use suitable container to retain any residual hydraulic fluid. Cap hydraulic lines and ports.

**NOTE:** *The Telescope Cylinder weighs approximately 522 lbs. (237 kg).*


12. Secure the telescope cylinder with a suitable sling and lifting device.
13. Carefully remove the telescope cylinder from the main boom assembly and place in a suitable work area.

### Main Boom Telescope Cylinder Installation


1. Using suitable lifting equipment, carefully insert the cylinder into the boom assembly.
2. Carefully install main telescope cylinder rod pin through the fly boom and secure it with the retaining rings.

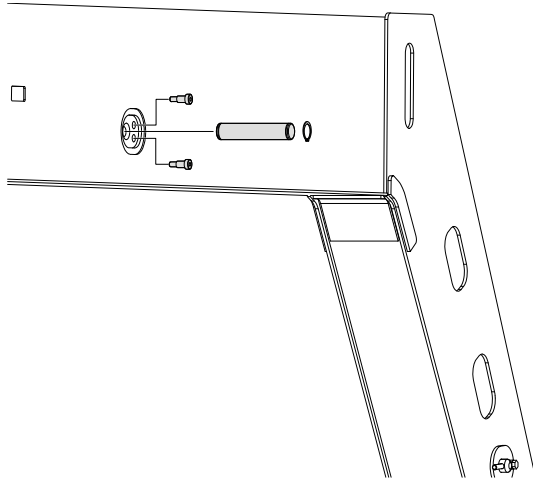

3. Remove applicable hydraulic line and port caps and properly connect the hydraulic lines to the telescope cylinder. Ensure all hoses are correctly routed.
4. Carefully install the telescope cylinder barrel end support into mounting block in base boom and secure with blocks and torque the bolts to 35 ft.lbs. (48 Nm). Use JLG Threadlocker P/N 0100011 on bolts. Shim as necessary.

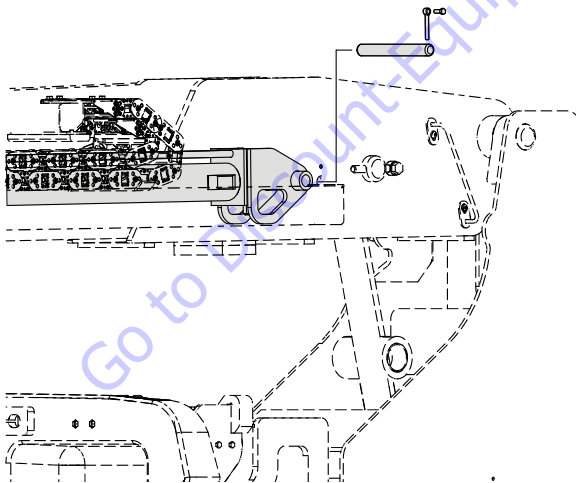

5. Remove the lifting device from the main telescope cylinder and retract the main telescope cylinder.
6. Extend the main lift cylinder using the auxiliary control from the ground controls to align with rod end hole in main base boom.
7. Carefully insert the main lift cylinder rod end pin through the base boom and install the mounting hardware.

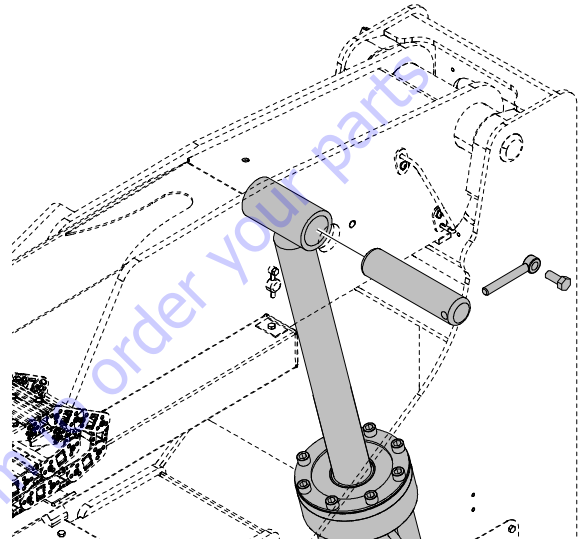


8. Using all applicable safety precautions, operate the boom functions. Check for proper operation and hydraulic leaks. Secure as necessary.
9. Check fluid level of hydraulic tank and adjust as necessary.

### Main Lift Cylinder Removal

**NOTE:** The Main Boom weighs approximately 2528 lbs. (1147 kg).


1. Place the machine on a flat and level surface. Attach a suitable lifting device and sling, sufficient to lift the main boom assembly, to the approximate center of the main boom assembly.
2. Place blocking under the cylinder to prevent it from falling when the attaching hardware is removed.
3. Remove the hardware securing the main lift cylinder rod attach pin to the boom. Using a suitable brass drift, drive out the cylinder rod attach pin.

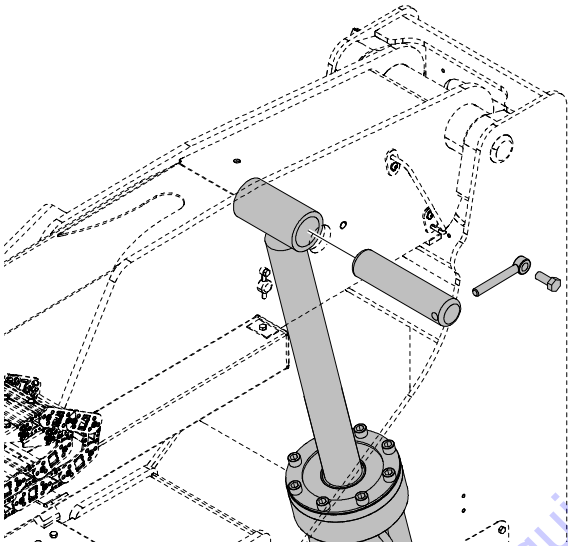

4. Using auxiliary power from ground controls, retract the lift cylinder rod completely.
5. Disconnect, cap, and tag the main boom lift cylinder hydraulic lines and ports.
6. Attach a suitable lifting device and sling to the main lift cylinder.
7. Remove hardware securing cover plate on the bottom of the upright. Remove cover plate.

**NOTE:** The Main Lift Cylinder weighs approximately 445 lbs. (202 kg).

8. Use a suitable brass drift and hammer to remove main lift cylinder barrel end pin from Upright.

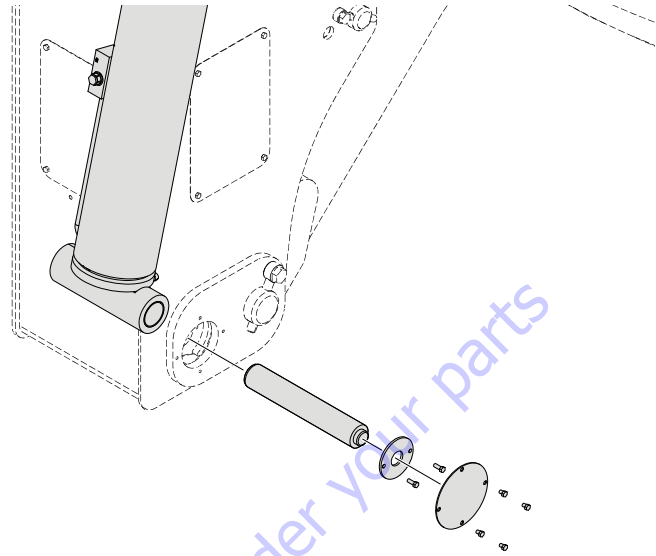


9. Using a suitable brass drift drive out the barrel end attach pin from the tower upright. Raise the main boom assembly with the lifting device and sling to allow enough space to remove the main lift cylinder from the upright top.
10. Carefully lift the cylinder clear of the boom assembly and lower to the ground or suitably supported work area.
11. Lower the boom assembly to the stowed position.




### Main Lift Cylinder Installation

1. Lift the main boom to allow enough space to lower the main boom lift cylinder to align with pin mounting holes of the tower fly boom and barrel end of main lift cylinder.
2. Using a suitable brass drift, drive barrel end attach pin through the mounting holes in the lift cylinder and the tower fly boom. Secure in place with the pin and torque the bolts to 35 ft. lbs. (48 Nm). Use Threadlocker P/N 0100011 on bolts.

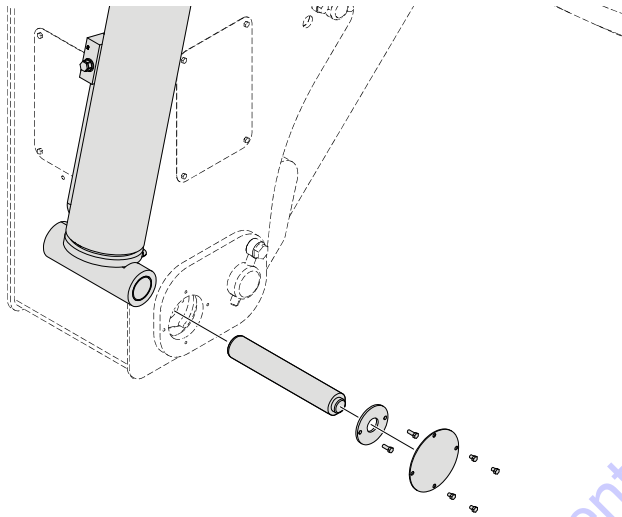

3. Remove cylinder port plugs and hydraulic line caps and attach lines to cylinder ports as tagged during removal.
4. Using auxiliary power extend the cylinder rod until the attach pin hole aligns with those in the main boom.

5. Using a suitable drift drive cylinder rod attach pin through the aligned holes, taking care to align the grooved pin holes. Secure the pin in place and torque the bolt to 285 ft. lbs. (388 Nm). Use JLG Threadlocker P/N 0100011 on bolts.

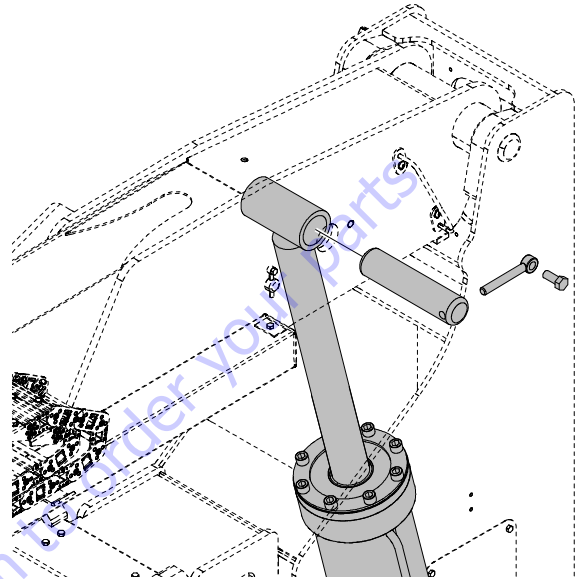



6. Remove lifting device and sling. Activate hydraulic system.
7. Using all applicable safety precautions, operate the boom functions. Check for proper operation and hydraulic leaks. Secure as necessary.
8. Check fluid level of hydraulic tank and adjust as necessary.

## Upright Level Cylinder Removal

### NOTICE

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID ENTRY OF CONTAMINANTS INTO SYSTEM.


1. Remove the Main Boom. Refer to Main Boom removal.
2. Tag and disconnect hydraulic lines to the main lift cylinder. Use suitable container to collect any residual hydraulic fluid. Cap hydraulic lines and ports.
3. Remove mounting hardware from the main boom lift cylinder barrel end. Use a suitable brass drift and hammer to remove main lift cylinder barrel end pin from Upright and remove main lift cylinder.
4. Disconnect the Upright Level Cylinder as follows:
  - a. Use a suitable lifting device to support the Upright.
  - b. Remove mounting hardware securing the Upright Level Cylinder to the upright. Use a suitable brass drift and hammer to remove upright level cylinder barrel end pin from upright and disconnect the upright level cylinder from the Upright.

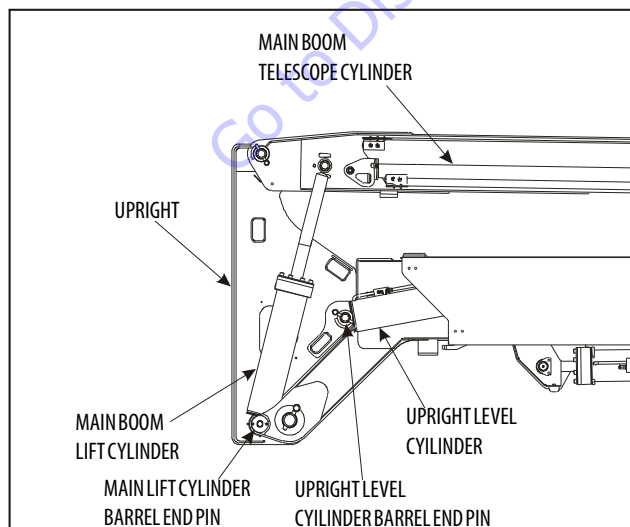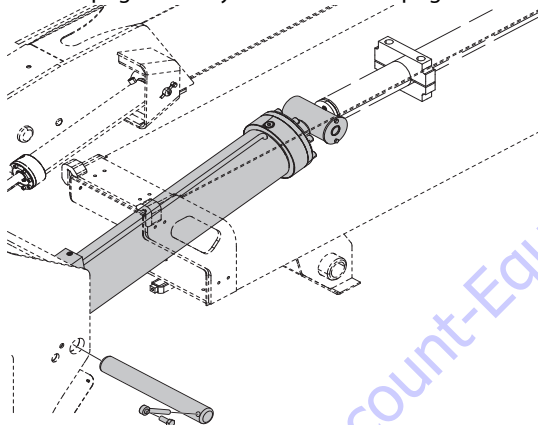

**NOTE:** The Upright weighs approximately 1136 lbs. (515 kg).




5. Before extending the tower boom, support the tower boom from the bottom.
6. Extend the Tower Boom to get access to the Upright level cylinder rod end pin by using an external auxiliary pump.
7. Tag, disconnect and cap the hydraulic lines of the Upright level Cylinder barrel.
8. Attach a suitable lifting device to support the Upright Level Cylinder.
9. Remove mounting hardware from the upright level cylinder rod end and remove the pin.

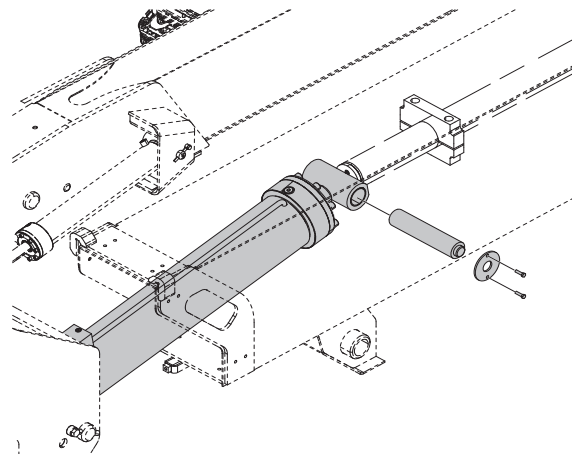


10. Remove the Upright Level Cylinder from the Tower Fly Boom. Place the Upright level Cylinder in a suitable work area.

### Upright Level Cylinder Installation

1. Put the leveling cylinder in position in the tower boom, align holes in the tower boom and leveling cylinder rod end.
2. Secure the leveling cylinder rod end pin to tower boom and torque the bolts to 35 ft. lbs. (48 Nm). Use JLG Threadlocker P/N 0100011 on bolts.

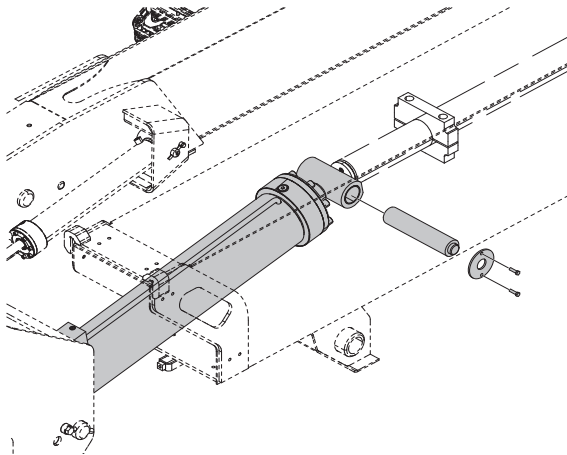

3. Remove Cylinder Port plugs and hydraulic line caps. Properly attach lines to Cylinder ports as tagged during removal.
4. Use all applicable safety precautions, operate the lifting device to move upright assembly into proper position.
5. Align holes in upright and barrel end of level cylinder. Use a suitable rubber mallet to install level barrel end pin. Secure pin and torque the bolt 285 ft. lbs. (388 Nm). Use JLG Threadlocker P/N 0100011 on bolts.

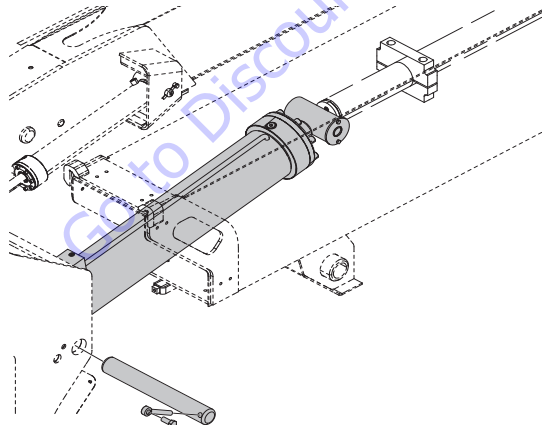

6. Install Main Lift Cylinder.
7. Install Main Boom. Refer to Main Boom installation.
8. Remove hydraulic line caps and attach all the hydraulic and electrical lines as tagged during removal.

9. Use all applicable safety precautions, operate the boom functions. Check for proper operation and hydraulic leaks.
10. Check fluid level of hydraulic tank and add fluid, if required.

### Tower Boom Lift Cylinder Removal


1. Place machine on a flat and level surface. Place the main boom in a horizontal position with the telescope cylinder fully retracted. Place the tower boom in a fully elevated and fully retracted position.

**NOTE:** The Main Boom weighs approximately 2528 lbs. (1147 kg), Upright weighs approximately 1136 lbs. (515 kg) & Tower Boom weighs approximately 2944 lbs. (1335 kg).

2. Support the main boom, upright and tower boom with adequate overhead crane.


**NOTE:** The Tower lift cylinder weighs approximately 544 lbs. (247 kg).

3. Adequately support the tower lift cylinder.
4. Remove mounting hardware securing the lift cylinder rod pin to the tower boom. Using a suitable brass drift, drive out the tower lift cylinder rod attach pin.

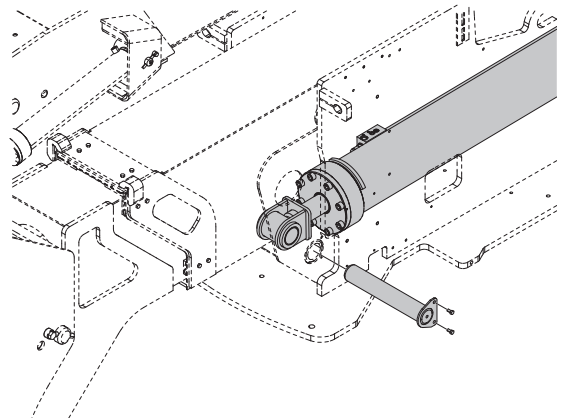

5. Using all applicable safety precautions, operate auxiliary power, activate tower lift down and fully retract lift cylinder.
6. Tag, disconnect, and cap the tower lift cylinder hydraulic lines and ports.


7. Remove mounting hardware securing the tower lift cylinder barrel pin to the turntable. Using a suitable brass drift, drive out the tower lift cylinder barrel pin.

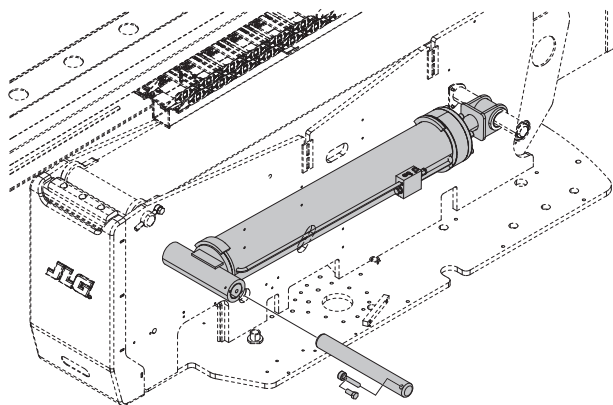

8. Carefully remove the tower lift cylinder from turntable. Place in a suitable work area.


**Tower Boom Lift Cylinder Installation**

1. Support the main boom and tower boom, place the tower lift cylinder on the turntable and align the holes. Install the cylinder barrel pin and torque the bolt to 285 ft. lbs. (388 Nm). Use JLG Threadlocker P/N 0100011 on bolts.

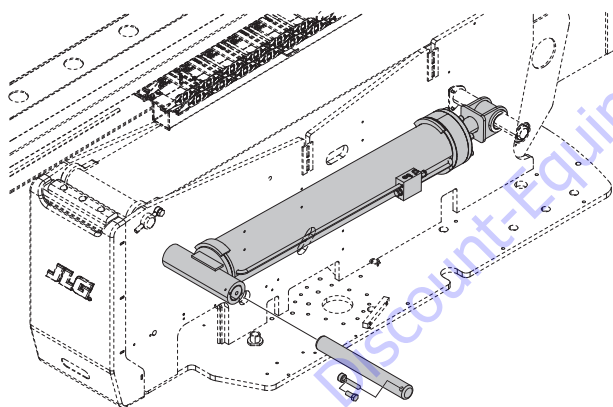

2. Remove caps from cylinder hydraulic lines properly and install lines to cylinder as previously tagged.
3. Using auxiliary power, activate tower lift function and extend cylinder rod until the cylinder rod bushing aligns with bushings on boom.

4. Using an appropriate brass drift, drive the tower lift cylinder rod end attach pin through the aligned bushings. Secure pin and torque the bolt 35 ft. lbs. (48 Nm). Use JLG Threadlocker P/N 0100011 on bolts.

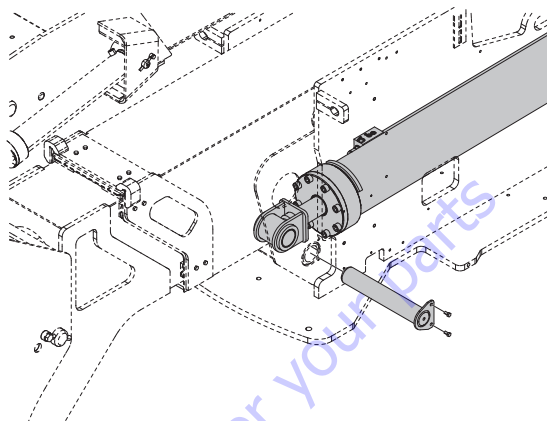

5. Remove main boom support and lifting device supporting the upright.
6. Using all applicable safety precautions, operate the boom functions. Check for proper operation and hydraulic leaks. Secure as necessary.
7. Check fluid level of hydraulic tank and add fluid, if required.

### Tower Telescope Cylinder Removal

1. Place machine on flat and level surface.
2. Remove the tower telescope cylinder rod end trunion hardware.
3. Using an external pump, extend the tower telescope cylinder as far enough to attach the lifting device.
4. Tag, disconnect and cap hydraulic hoses to Tower Telescope Cylinder. Plug cylinder ports. Remove the hoses.

**NOTE:** The Tower Telescope Cylinder weighs approximately 233 lbs. (105kg).

5. Properly secure the Tower Telescope Cylinder by using a suitable sling or support.
6. Remove the tower telescope cylinder barrel end trunion hardware.
7. Carefully remove the Tower Telescope Cylinder from the Boom. Place cylinder on a suitable work area.

### Tower Telescope Cylinder Installation

1. Slide the telescope cylinder into the boom, aligning the cylinder port block end with slotted holes in Base Boom.
2. Secure the telescope cylinder barrel end to the fly boom by using retaining plate and torque the bolts 35 ft. lbs. (48Nm). Use JLG Threadlocker P/N 0100011 on bolts.
3. Secure telescope cylinder rod end and torque the bolts to 35 ft. lbs. (48 Nm). Use JLG Threadlocker P/N 0100011 on bolts.
4. Remove caps and plugs from hydraulic lines and ports. Properly connect hydraulic lines to cylinder. Reinstall cover plate.
5. Using all applicable safety precautions, operate the boom functions. Check for correct operation and hydraulic leaks. Secure as necessary.
6. Check fluid level of hydraulic tank and add fluid, if required.

### Platform (Slave) Cylinder Removal

1. Place the machine on a flat surface and lower the main boom and tower boom to the lowest position.
2. Using auxiliary power, retract the platform (slave) cylinder rod completely.

**NOTE:** Step 3 is applicable for 800AJ models only.


3. Raise the jib to gain access to the Platform (Slave) Cylinder piston end Pin.

**NOTE:** The Platform (Slave) Cylinder weighs approximately 68 lbs (31 kg).

4. Using a suitable lifting device, properly secure the platform to prevent the platform from tilting backward or forward during removal of the platform (slave) cylinder.
5. Tag and disconnect the platform (slave) cylinder hydraulic hoses. Cap hoses to prevent the hydraulic system from being contaminated.
6. Properly secure the platform (slave) cylinder by using a suitable sling or support.

**NOTE:** The Platform (Slave) cylinder weighs approximately 68 lbs (31 kg).

7. Remove the platform (slave) cylinder pin retaining hardware. Using a suitable brass drift, remove the platform (slave) cylinder pins from the rod and barrel ends.

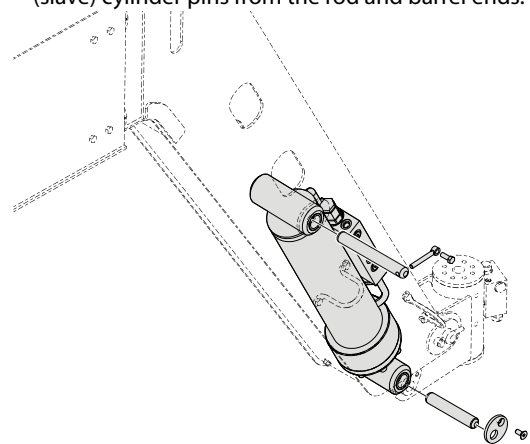


8. Carefully remove the platform (slave) cylinder.
9. Clean and inspect the cylinder pins and retaining hardware for reuse. Replace if necessary.

### Platform (Slave) Cylinder Installation

1. Remove caps from the hydraulic hoses and attach hoses to the proper cylinder ports.

**NOTE:** The Platform (Slave) cylinder weighs approximately 68 lbs (31 kg).

2. Use suitable slings or support to position the Platform (Slave) cylinder in place. Align barrel end mounting holes with the holes in main fly boom.
3. Use suitable mallet to install the barrel end attach pin and torque the bolts to 35 ft. lbs. (48 Nm).
4. Extend the platform (slave) cylinder rod until the rod attach pin hole aligns with holes in the platform pivot. Use suitable mallet and keeper to install the rod end pin.

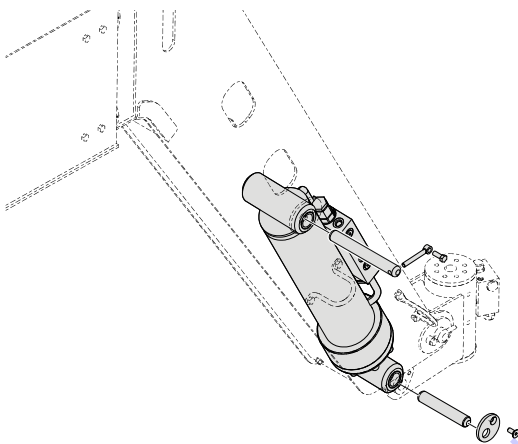

5. Remove lifting device from the platform (slave) cylinder and support from the platform.
6. Use all applicable safety precautions, start the machine from the ground control. Fully raise and lower the main boom through several cycles to bleed the platform level hydraulic circuit.
7. Check for proper operation and hydraulic leaks.
8. Check the fluid level of hydraulic tank. Fill the tank, if required.

### 5.5 HYDRAULIC PUMP W/HAYES PUMP DRIVE COUPLING LUBRICATION

Any time pump or pump drive coupling is removed coat, pump and drive coupling splines with Lithium Soap Base Grease (TEXACO CODE 1912 OR EQUIVALENT) coupling is greased prior to assembly.

### 5.6 PRESSURE SETTING PROCEDURES

Cold temperatures have a significant impact on pressure readings. JLG Industries Inc. recommends operating the machine until the hydraulic system has warmed to normal operating temperatures prior to checking pressures. JLG Industries Inc. also recommends the use of a calibrated gauge. Pressure readings are acceptable if they are within  $\pm 5\%$  of specified pressures.


To ensure all pressures are set correctly, the following procedures must be followed in order.

1. All applicable steps must be followed.
2. Set up of the function pump.
3. Adjustments Made at the Main Valve Block.
4. Adjustments Made at the Platform Valve Block

## Set Up the Function Pump

(the pump that is mounted on the back of the drive pump).


### 1. Set Stand by pressure or load sense pressure

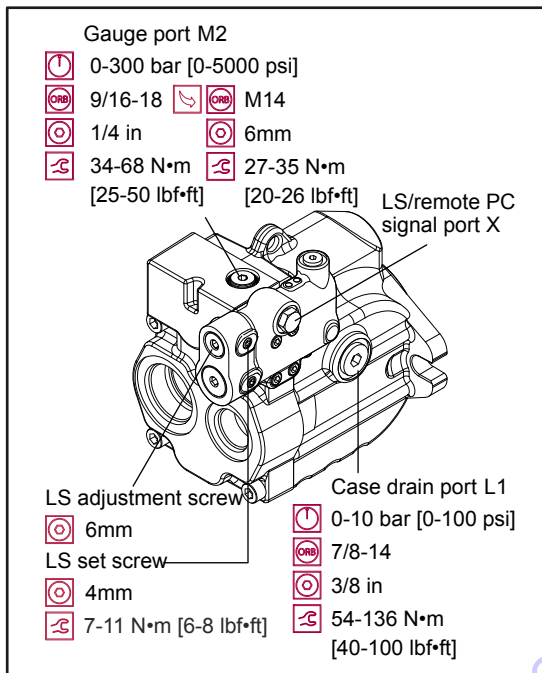

**Figure 5-187. Load Sensing Control Adjustment**

- Install a low pressure gauge at port "MP" of the main valve block. A gauge capable of reading **400 psi (28 bar)**.
- Start the engine and let it idle. The gauge should be reading between **400-440 psi (28-30 bar)**.
- To make an adjustment to this pressure, go to the engine compartment, locate the function pump. There are (2) adjustments at the top of the pump. They are located on the pump compensator which has (4) bolts mounting it to the pump. The stand by adjustment is at the top.
- To adjust this, a 4 mm and 6 mm Allen wrench will be needed. The adjustment screw is facing the front of the pump, or toward the engine. First, using the 4 mm wrench, loosen the setscrew on the side of the compensator which is in line with the adjustment screw. This is a jam nut screw which holds the main adjustment from turning. Loosen it by 1 turn.
- Using a 6 mm wrench adjust clockwise to increase or counterclockwise to decrease the pressure. The pressure should read between **400-440 psi (28-30 bar)**.

### 2. Set High pressure relief

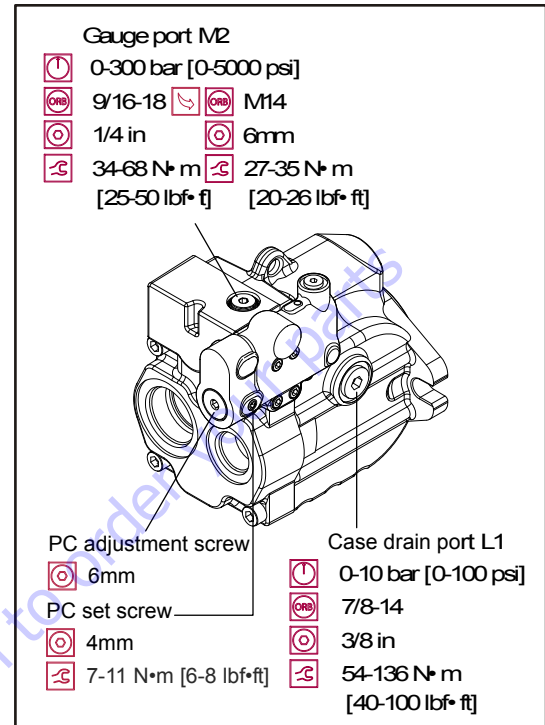

**Figure 5-188. Pressure Compensation Control Adjustment**

- Install a high pressure gauge at the "MP" port of the main valve block.
- Activate main boom telescope in. The gauge should read **2600-2700 psi (179-186 bar)**.
- To make an adjustment to this pressure, go to the engine compartment to the function pump. The high pressure relief adjustment is the lower one of the (2) on the compensator. To adjust this, a 4 mm and 6 mm Allen wrench will be needed. The adjustment screw is facing the front of the pump, or toward the engine.
- Using the 4 mm wrench, loosen the setscrew on the side of the compensator which is in line with the adjustment screw. This is a jam nut screw which holds the main adjustment from turning. Loosen it by 1 turn.
- Using the 6 mm wrench adjust the main adjustment clockwise to increase or counterclockwise to decrease. This is the **maximum** relief pressure for all functions governed by this pump.

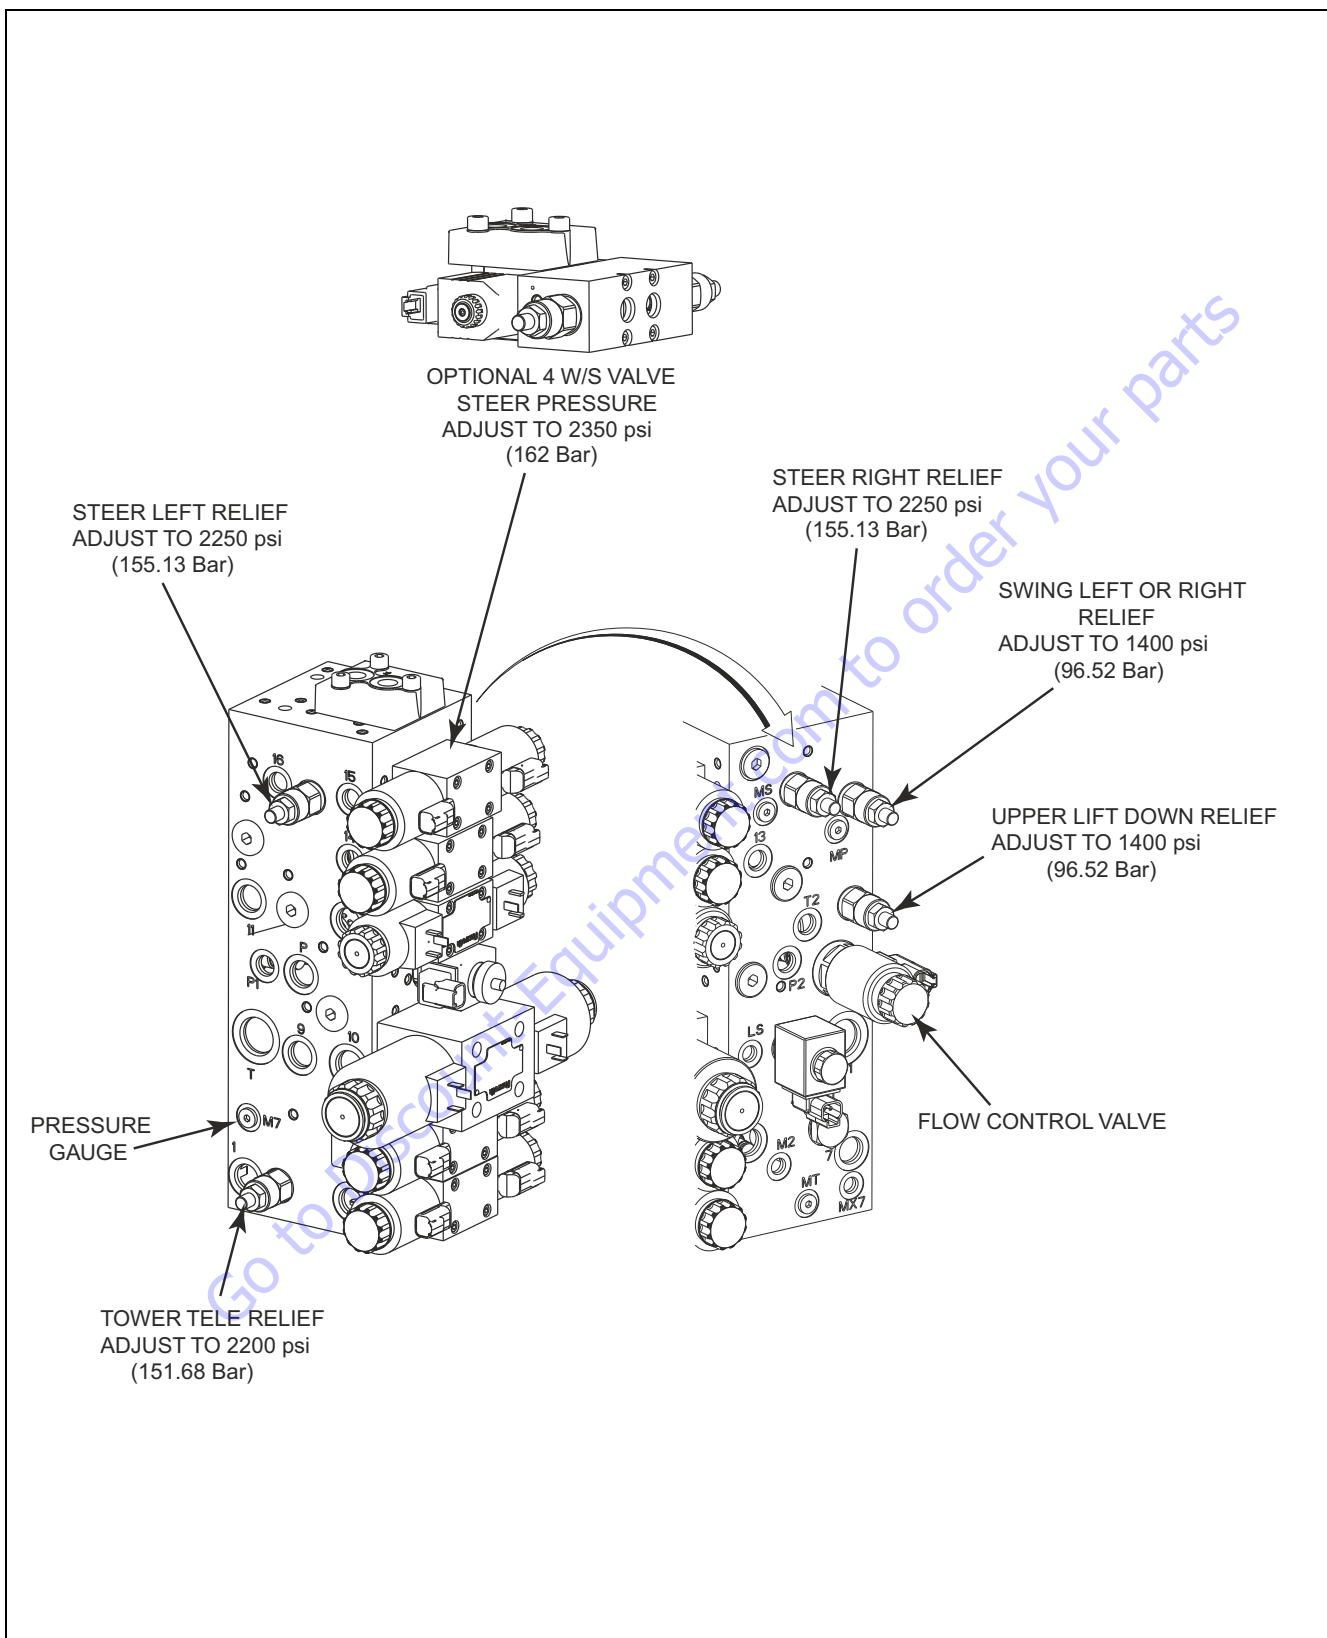


Figure 5-189. Main Control Valve Pressure Adjustments




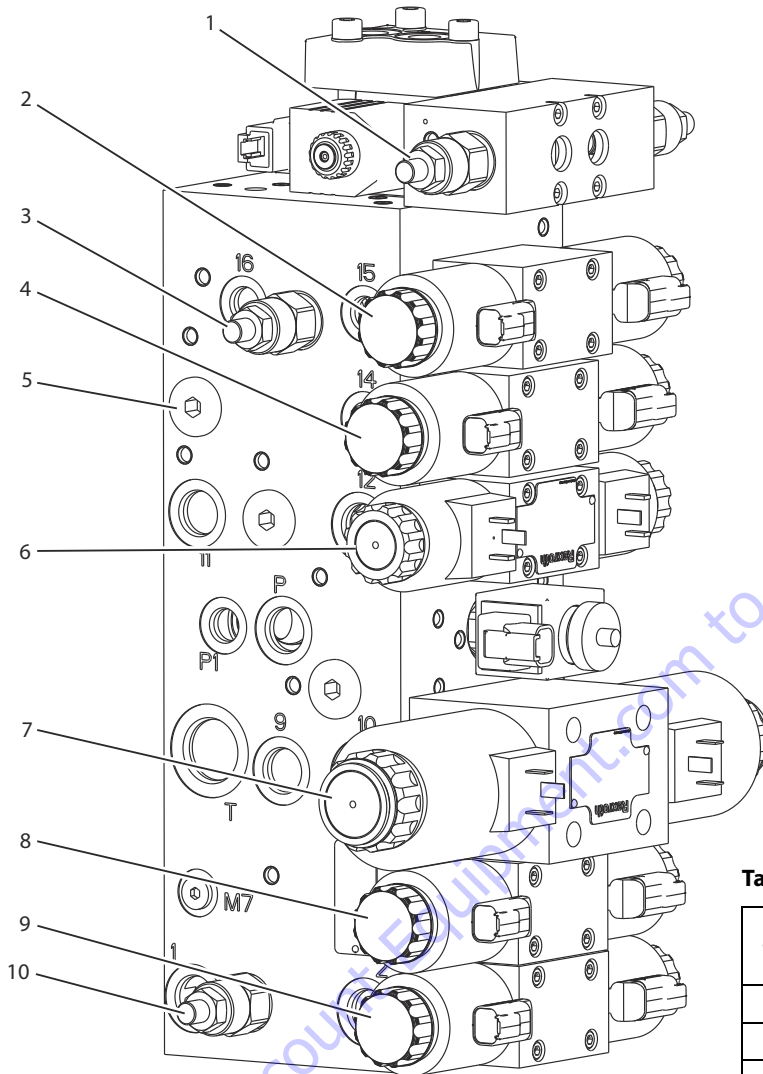


Table 5-33. Main Control valve Coil Resistance

#	Item	Coil Resistance @20°C (Ohms)
1	Rear Steer Right Solenoid	5.3
2	Front Steer Right Solenoid	5.3
4	Shuttle Valve	5.3
6	Main Lift Down Solenoid	2
7	Main Tele In Solenoid	5.3
8	Tower Lift Up Solenoid	4.1
9	Tower Tele In Solenoid	4.1


- |                               |                            |                           |                           |
|-------------------------------|----------------------------|---------------------------|---------------------------|
| 1. Rear Steer Right Solenoid  | 4. Shuttle Valve           | 7. Main Tele In Solenoid  | 9. Tower Tele In Solenoid |
| 2. Front Steer Right Solenoid | 5. Swing left Solenoid     | 8. Tower Lift Up Solenoid | 10. Tower Tele Relief     |
| 3. Front Steer left Solenoid  | 6. Main Lift Down Solenoid |                           |                           |

Figure 5-190. Main Valve Components - Sheet 1 of 2

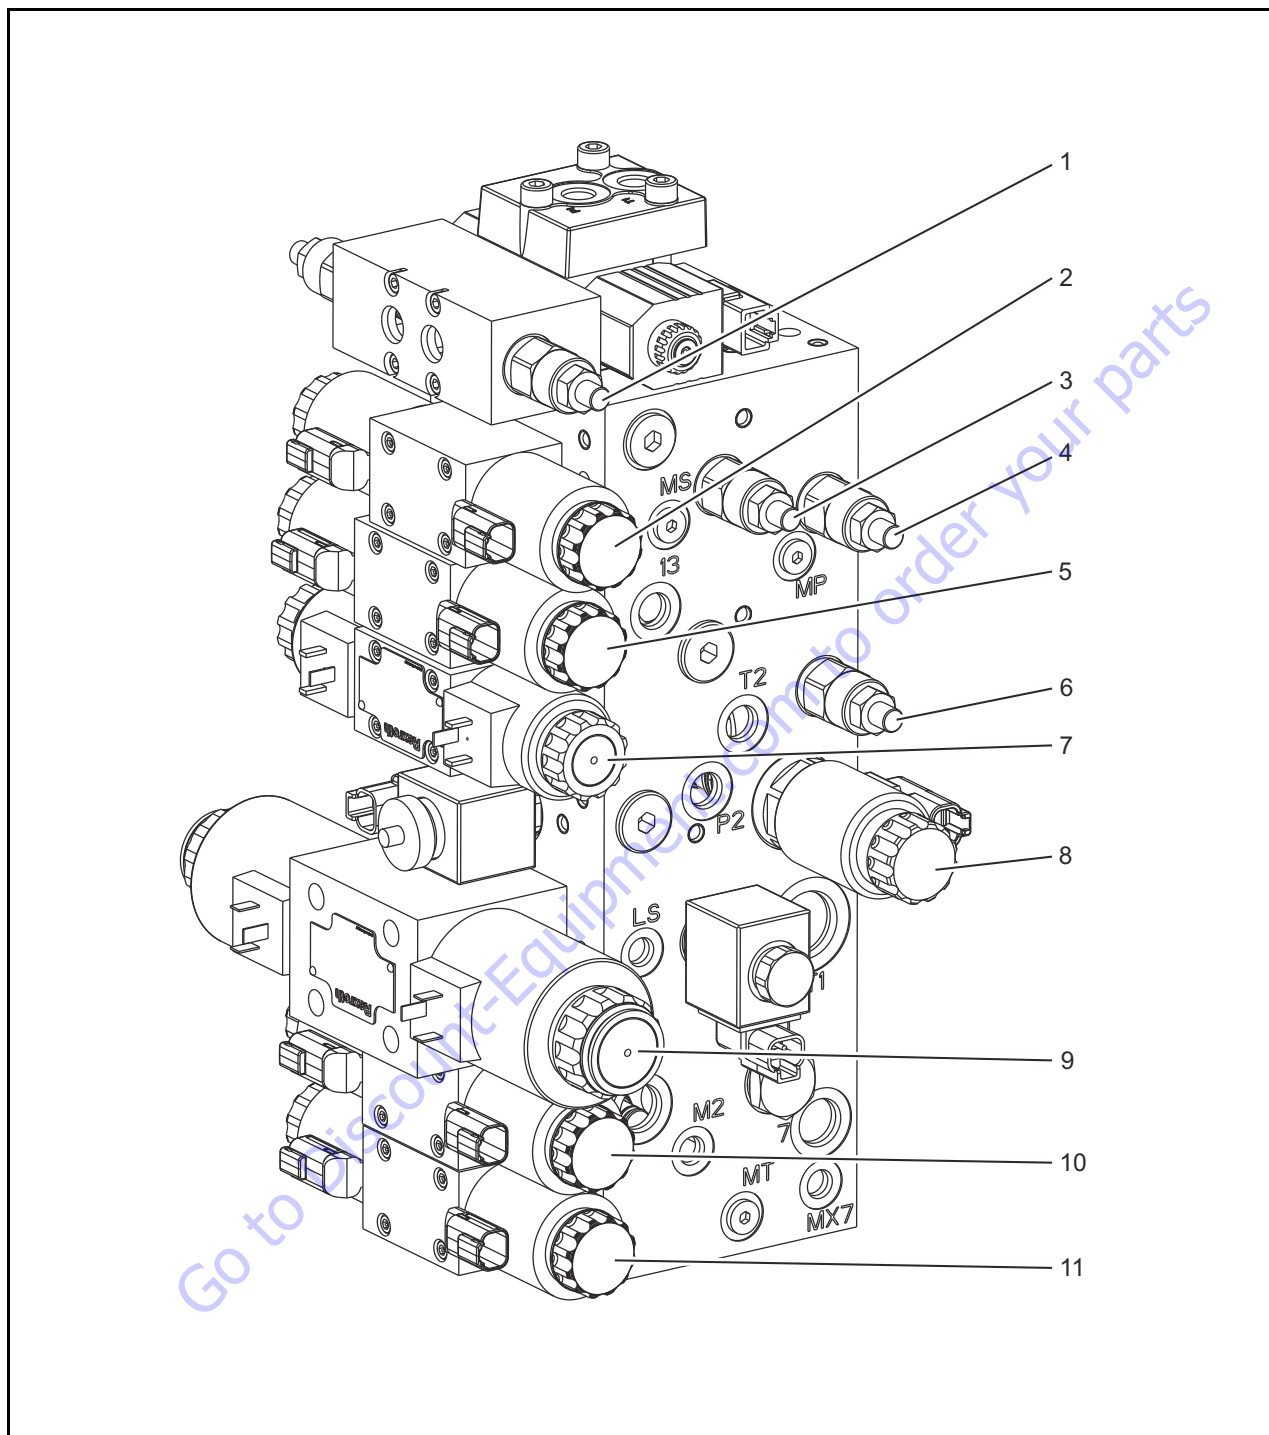

- |                              |                                 |                            |                              |
|------------------------------|---------------------------------|----------------------------|------------------------------|
| 1. Rear Steer Left Solenoid  | 4. Main Boom Lift Down Solenoid | 7. Main Lift Down Solenoid | 10. Tower Lift Down Solenoid |
| 2. Front Steer Left Solenoid | 5. Swing Left or Right Relief   | 8. Flow Control Valve      | 11. Tower Tele Out Solenoid  |
| 3. Front Steer Right Relief  | 6. Swing Right Solenoid         | 9. Main Tele Out Solenoid  |                              |


Figure 5-191. Main Valve Components - Sheet 2 of 2

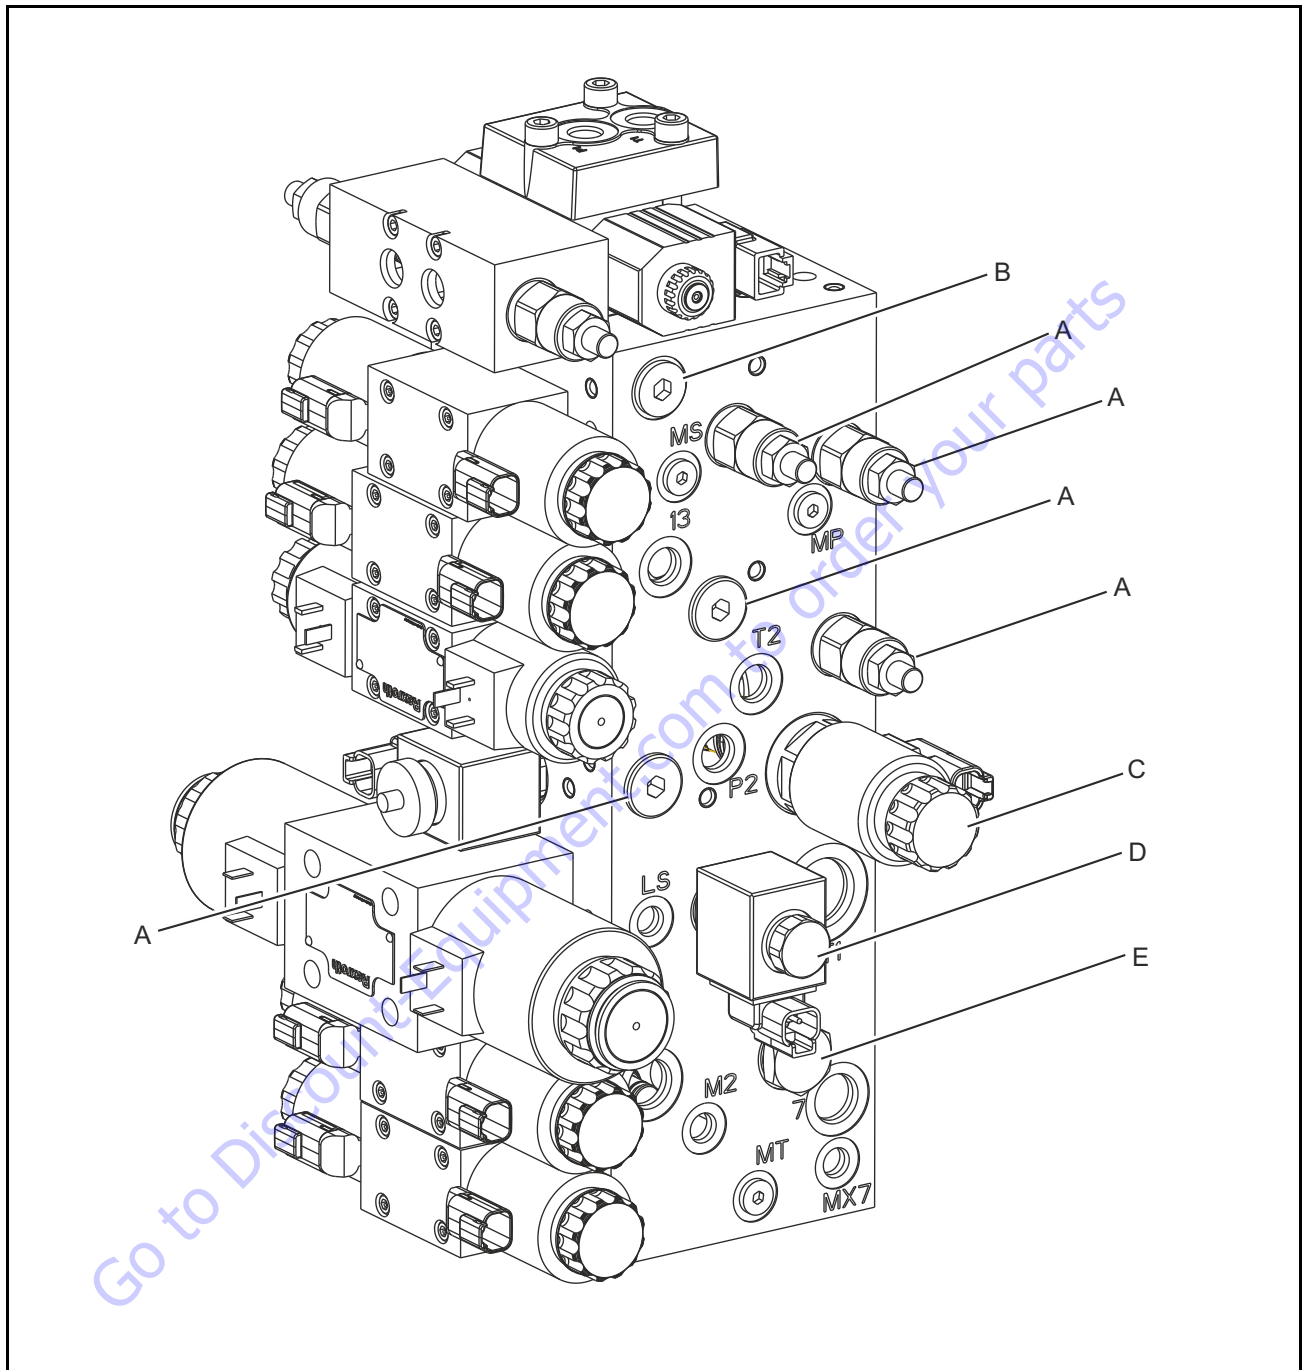

	Ft. Lbs.	Nm
A	25-30	33.8-40.6
B	25.1-30.2	34-41
C	121.1-132.8	164.2-180
D	28.8-37.6	39-51
E	30-35	40.6-47.5

**NOTE:** When removing control valves from the manifold, it is important to observe the tag on the face of the valve, as the new valve must be installed with the tag facing the same way as the tag on the valve that was removed. The bolt pattern on the control valves is not symmetrical, so if the bolts seem difficult to turn when installing, it would indicate the valve is upside down and forcing the bolts will result in cross-threading. Check the tag, and if necessary, rotate the valve 180 degrees.

Figure 5-192. Valve Component Torque - Sheet 1 of 2

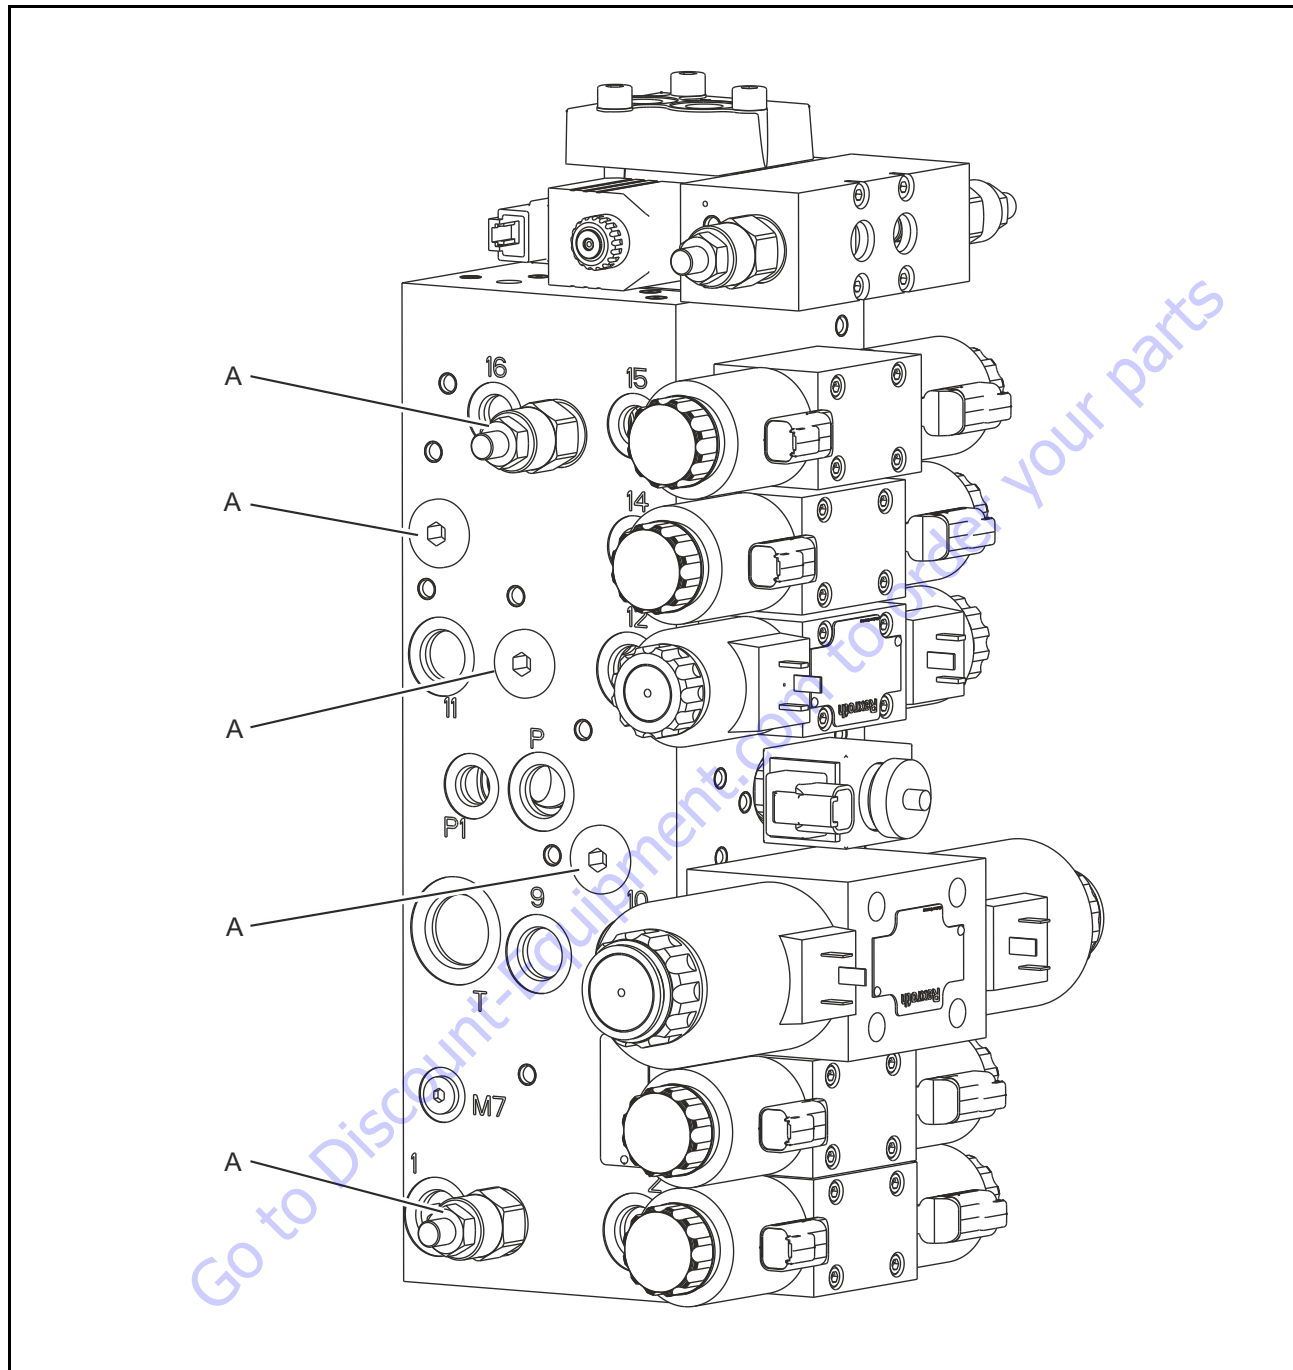

	Ft. Lbs.	Nm
A	25-30	33.8-40.6

**NOTE:** When removing control valves from the manifold, it is important to observe the tag on the face of the valve, as the new valve must be installed with the tag facing the same way as the tag on the valve that was removed. The bolt pattern on the control valves is not symmetrical, so if the bolts seem difficult to turn when installing, it would indicate the valve is upside down and forcing the bolts will result in cross-threading. Check the tag, and if necessary, rotate the valve 180 degrees.

Figure 5-193. Valve Component Torque - Sheet 2 of 2

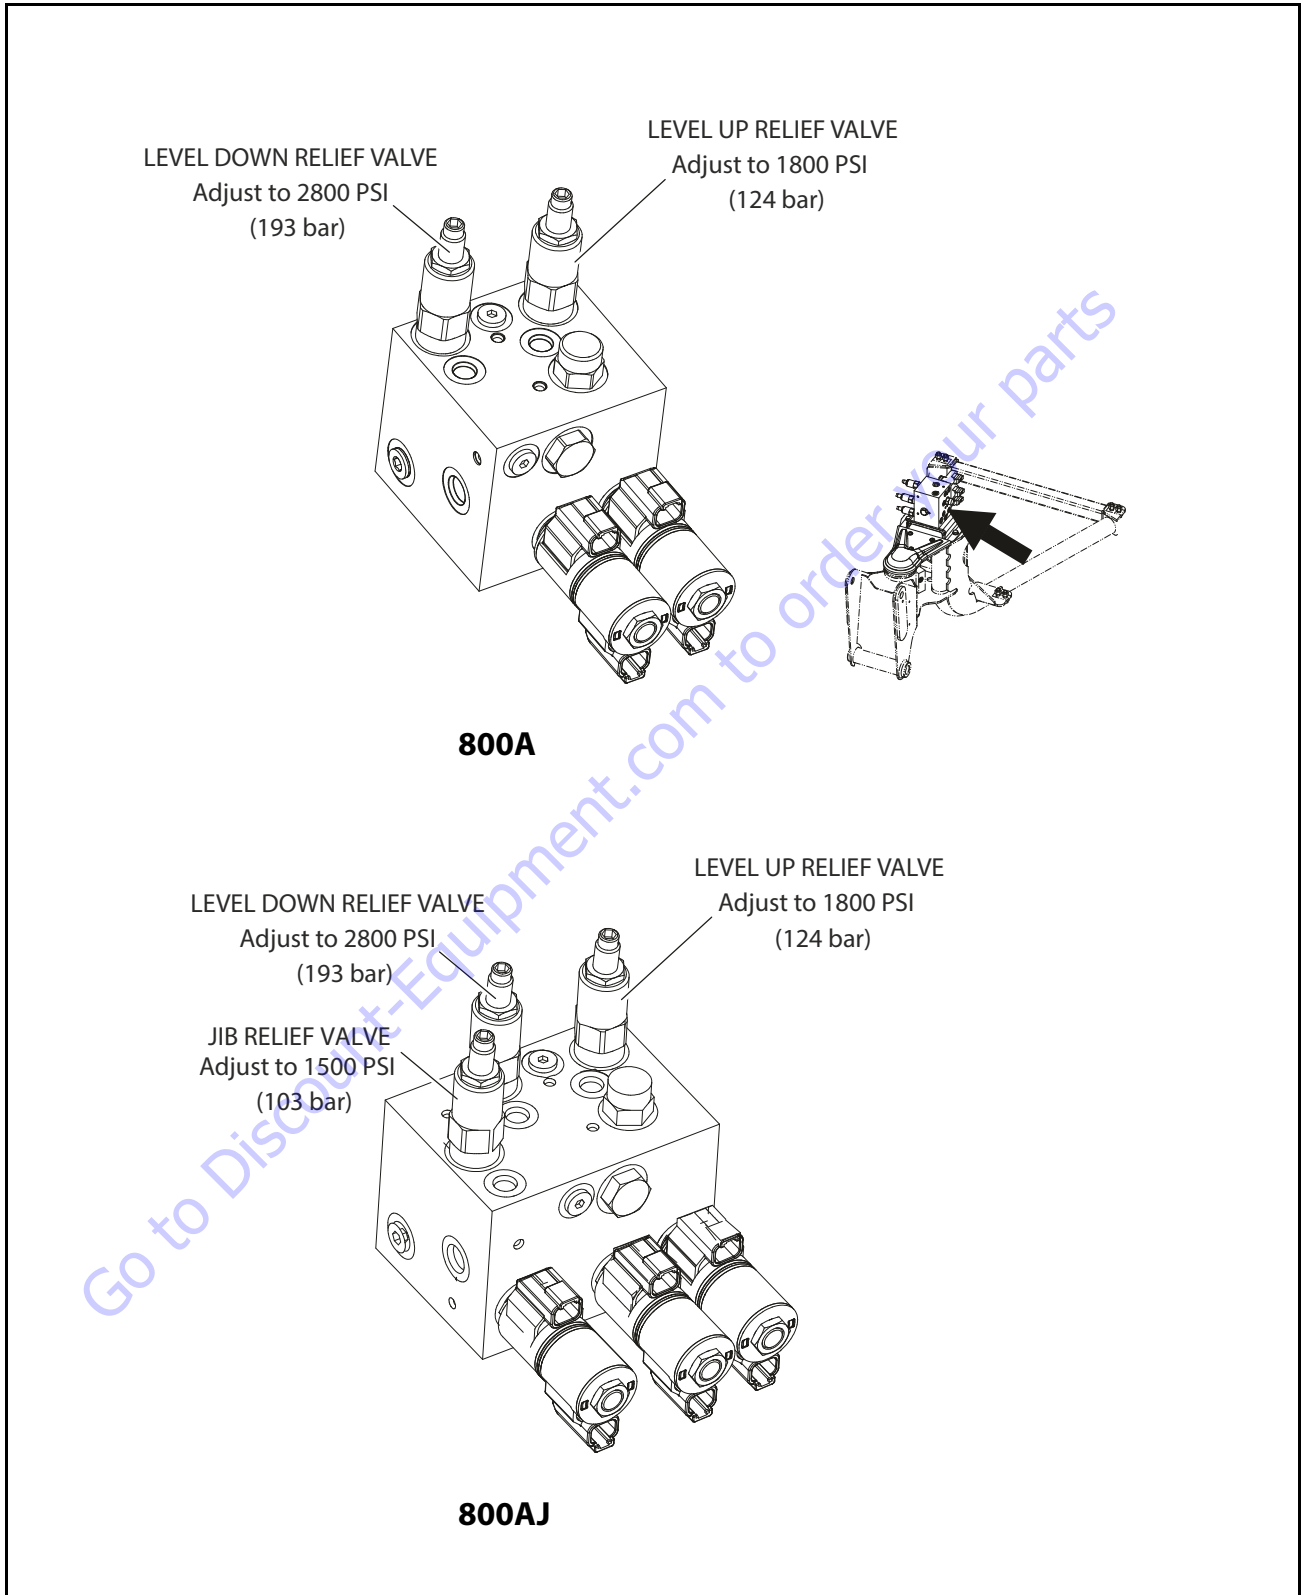


Figure 5-194. Platform Control Valve Pressure Adjustments

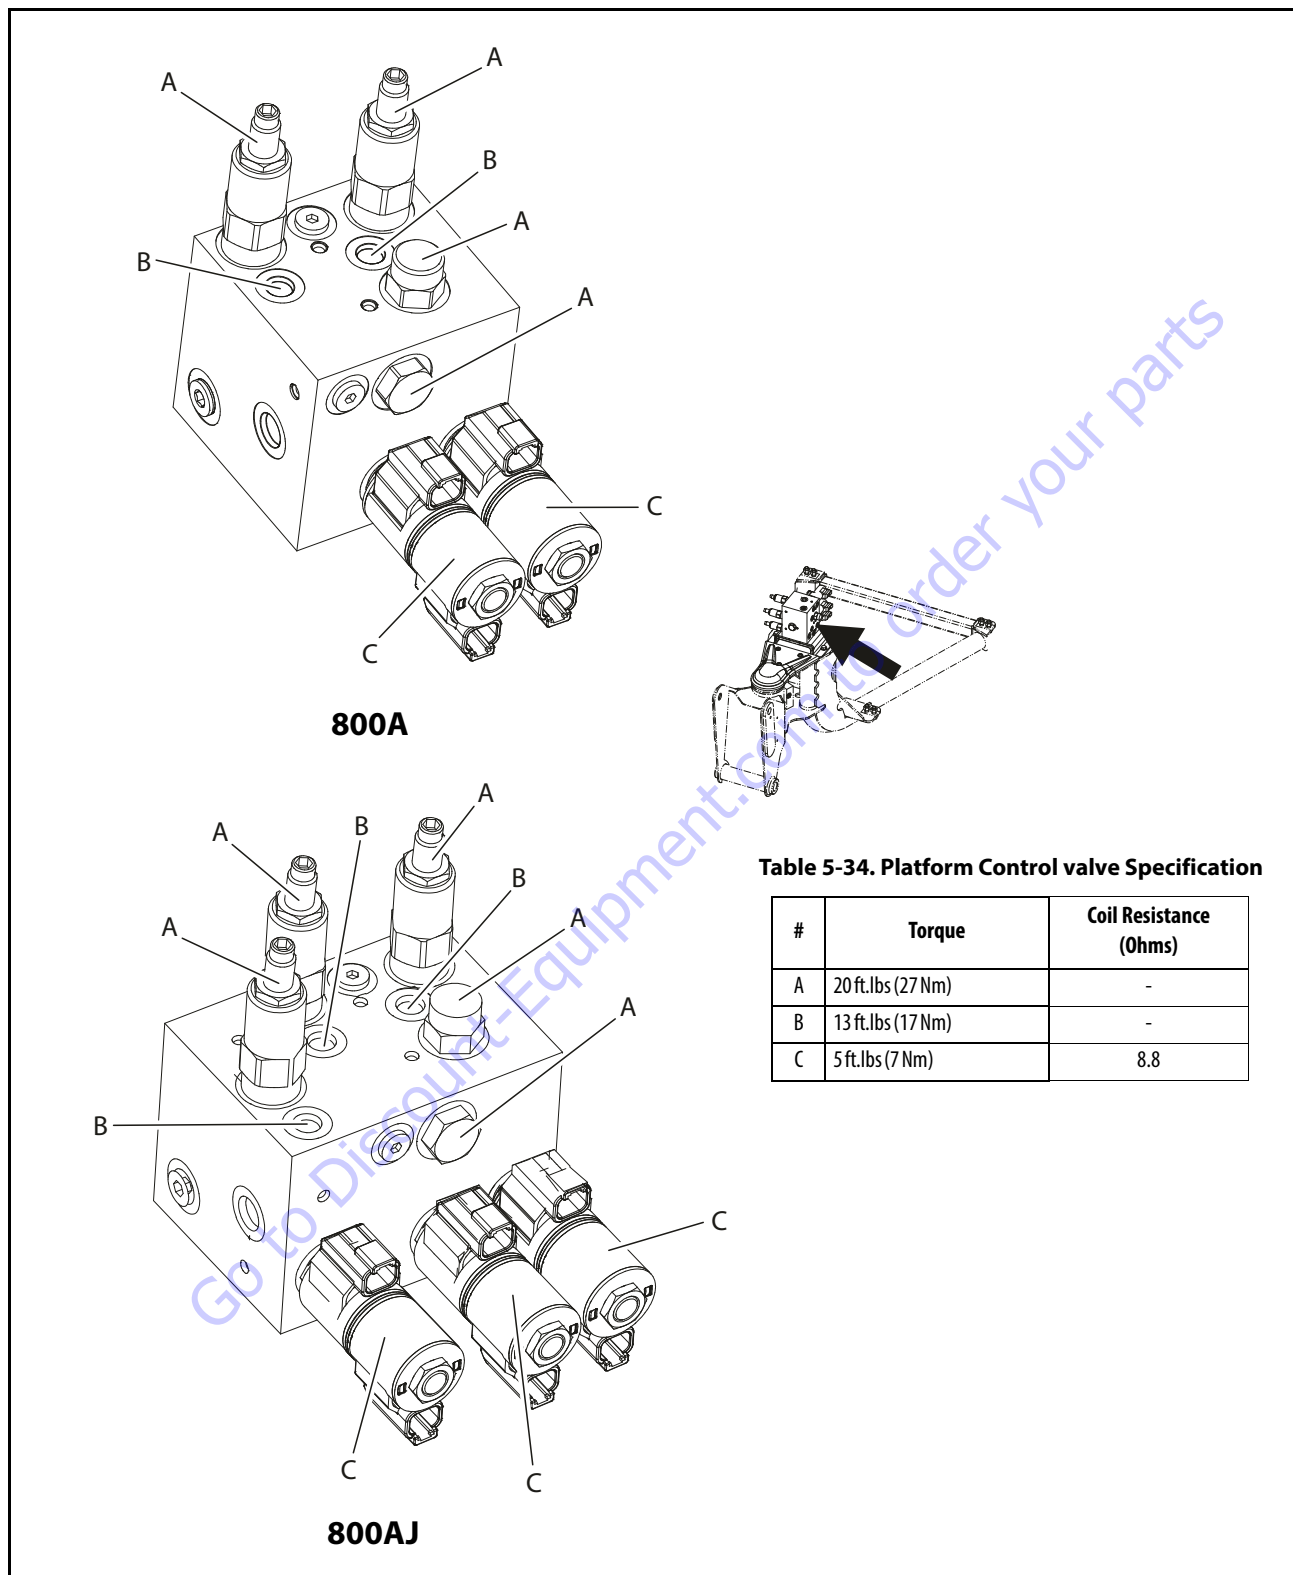


Figure 5-195. Platform Control Valve Component Torque

## Adjustments Made at the Main Valve Block

### MAIN LIFT DOWN

1. Install a high pressure gauge capable of reading **3000 psi** into the external pressure tap at the tee fitting in port "L.S" of main control valve, right side of manifold.
2. Activate main boom lift down. The gauge should read **2100 psi (145 bar)**.
3. The adjustment cartridge is located to the right of port #T2. Turn clockwise to increase, counterclockwise to decrease.

### SWING

**NOTE:** *left and right are done with one adjustment.*

1. Install a high pressure gauge at the "MP" port of the main valve block. Lock the turntable lock pin.
2. Activate swing, the gauge should read **1400 psi (97 bar)**. The adjustment cartridge is located on the right side of the block, right above port "MP".
3. Turn clockwise to increase, and counterclockwise to decrease.

### 2 WHEEL STEER

1. Install a high pressure gauge at the "MS" port of the main valve block. Activate steer left or right. The gauge should read **1800 psi (124 bar)** (2-wheel steer) both directions.
2. One relief cartridge is located on the right side of the block, above port "MS". The other one is located on the left side next to port #15.
3. Turn clockwise to increase, and counterclockwise to decrease.

### 4 WHEEL STEER

1. Install a high pressure gauge at the "MS" port of the main valve block.
2. Activate front wheel steer left or right. One relief cartridge is located on the right side of the block, above port "MS". The other one is located on the left side next to port #15. Turn clockwise to increase, counterclockwise to decrease.
3. Adjust to **2350 psi (162 bar)** front steer. Remove the coil from the front wheel steer directional valve.

4. Activate 4 wheel steer. Adjust the rear wheel steer reliefs to **2250 psi (155 bar)**. Those reliefs are located on the both sides of the 4-wheel steer block bolted on the top of the main control valve.]
5. There must be a minimum of 100 psi difference between the front axle relief pressure and rear axle relief pressure.

### TOWER TELESCOPE OUT

1. Install a high pressure gauge at gauge port "M2" located on the right side of the valve block, at the bottom.
2. Activate tower telescope out, the gauge should read **2200 psi (152 bar)**. This can be done with the tower lift down or up. If the tower lift is up, run the tower telescope out to the end of stroke.
3. The tower telescope out relief valve is located on the left side, at the bottom next to port #1. Turn clockwise to increase, counterclockwise to decrease.

## Adjustments Made at the Platform Valve Block

### PLATFORM LEVEL UP

1. Install a high pressure gauge at the gauge port "M1" of the platform valve. There is pressure trapped at this test port.
2. To release this Pressure, activate level down to the end of stroke (the pressure in the up side goes to 0). This will allow to snap a gauge on at this port.
3. Activate level up to the end of stroke, the gauge should read **2600-2700 psi (179-186 bar)**. The level up relief valve is located next to the port "M1".
4. Turn clockwise to increase, and counterclockwise to decrease.

### PLATFORM LEVEL DOWN

1. Install a high pressure gauge at the gauge port "M2" of the platform valve.
2. To get a gauge on this point activate level up to the end of stroke (the pressure in the down side will go to 0, allowing to snap a gauge on). Activate level down to the end of stroke, the gauge should read **1800psi. (124 bar)**.
3. The level down relief valve is located next to port "M2". Turn clockwise to increase and counterclockwise to decrease.

### ARTICULATING JIB DOWN

1. Install a high pressure gauge on port "M3" of the platform valve.
2. Activate jib down, the gauge should read **1500 psi. (103 bar)**.
3. The down relief valve is located next to port "M3". Turn clockwise to increase and counterclockwise to decrease.

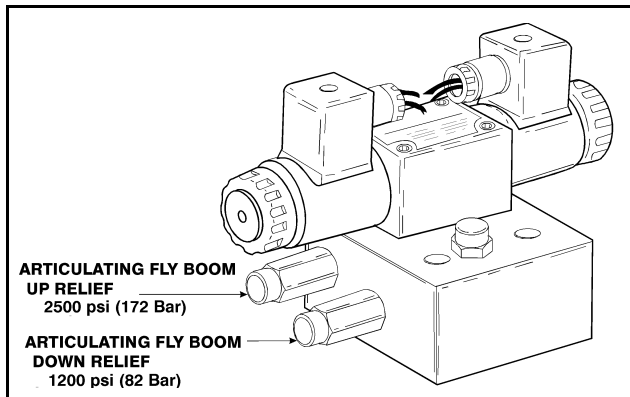


Figure 5-196. Articulating Jib Boom Pressure adjust.

### 4 WHEEL STEER (IF EQUIPPED)

1. At the platform console using the steer select switch activate "4 wheel steer".
2. Install a pressure gauge in port "G" on the control valve.
3. With the aid of an assistant, activate steer left and right, adjust front steer relief valve to **2500 psi (172.4 bar)**. This pressure only affects the front axle.
4. At the platform console using the steer select switch activate "crab" or "coordinated" steer.
5. At the main control valve block disconnect the wire din connectors on the front steer valve. When steer is activated only the rear steer will work.
6. Install a pressure gauge in port "G" on the control valve.
7. With the aid of an assistant, activate steer left and right, adjust rear steer relief valve to **2500 psi (172 bar)** Reading at the valve bank. **2500 psi (172 bar)** will give you **2000 psi (138 bar)** at the cylinders.
8. Re-connect the front steer din connectors at the valve bank.

## 5.7 HYDRAULIC COMPONENT START-UP PROCEDURES AND RECOMMENDATIONS

From a hydrostatic component standpoint, the goal at system start up is to put into functional operation, the hydrostatic system in such a way as to preserve the designed life span of the system. The following start-up procedure should be adhered

to whenever a new pump or motor is initially installed into a machine, or a system is restarted after either a pump or motor has been removed and/or replaced.

### **⚠ WARNING**

**THE FOLLOWING PROCEDURE MAY REQUIRE THE MACHINE TO BE DISABLED (WHEELS RAISED OFF THE GROUND, WORK FUNCTIONS DISCONNECTED, ETC.). WHILE PERFORMING THE PROCEDURE IN ORDER TO PREVENT INJURY. TAKE NECESSARY SAFETY PRECAUTIONS BEFORE MOVING THE VEHICLE/MACHINE.**

Prior to installing the pump and/or motor, inspect the unit(s) for damage that may have been incurred during shipping and handling. Make certain that all system components (reservoir, hoses, valves, fittings, heat exchanger, etc.) are clean prior to filling with fluid.

Fill the reservoir with recommended hydraulic fluid. This fluid should be passed through a 10 micron (nominal, no bypass) filter prior to entering the reservoir. The use of contaminated fluid will cause damage to the components, which may result in unexpected vehicle/machine movement.

**NOTE:** *If a pump or motor is being replaced due to internal damage, the remaining units (pump or motors) need to be inspected for damage and contamination, and the entire hydraulic system will need to be flushed and the fluid replaced. Failure to do so may cause considerable damage to the entire system.*

The inlet line leading from the reservoir to the pump must be filled prior to start-up. Check the inlet line for property tightened fittings and make sure it is free of restrictions and air leaks.

**NOTE:** *In most cases, the reservoir is above the pump inlet so that the pressure head created by the higher oil level helps to keep the inlet pressures within an acceptable range and prevent high vacuum levels. However, due to hose routing or low reservoir locations, there may be air trapped within this line. It is important to assure that the air is bled from this line. This can be accomplished by loosening the hose at the fitting closest the pump. When oil begins to flow, the line is full, the air has been purged, and the fitting can be retightened to its specified torque. If the tank needs to be pressurized in order to start the flow of oil, a vacuum reading should be taken at the inlet of the pump during operation in order to verify that the pump is not being asked to draw an inlet vacuum higher than it is capable of.*

Be certain to fill the pump and/or motor housing with clean hydraulic fluid prior to start up. Fill the housing by pouring filtered oil into the main case drain port.

**NOTE:** *It is highly recommended to use the highest possible case drain port, this ensures that the housing contains as much oil as possible and offers the greatest amount of lubrication to the internal components.*



**NOTE:** *In initial start-up conditions, it may be convenient to fill the housing, just prior to installing the case drain line. Component, (especially motor), location may be such that access to the case drain port after installation is not realistic.*

**NOTE:** *Make certain that the oil being used to fill the component housing is as clean as possible, and store the fill container in such a way as to prevent it from becoming contaminated.*

Install a 60 bar (or 1000 psi) pressure gauge in the charge pressure gauge port in order to monitor the charge pressure during start-up.

It is recommended that the external control input signal, (electrical connections for EDC), be disconnected at the pump control until after initial start-up. This will ensure that the pump remains in its neutral position.

**⚠ WARNING**

**DO NOT START THE ENGINE UNLESS PUMP IS IN THE NEUTRAL POSITION (0 DEGREES SWASHPLATE ANGLE). TAKE PRECAUTIONS TO PREVENT MACHINE MOVEMENT IN CASE PUMP IS ACTUATED DURING INITIAL START-UP.**

"Jog" or slowly rotate the engine until charge pressure starts to rise. Start the engine and run at the lowest possible RPM until charge pressure has been established. Excess air should be bled from the system lines as close to the motors as possible.

**NOTE:** *With the engine on low idle, "crack", (loosen-don't remove), the system lines at the motor(s). Continue to run the engine at low idle and tighten the system lines as soon as oil is observed to leak from them. When oil is observed to "leak" at the motor the line is full, the air has been purged, and the system hoses should be retightened to their specified torque.*

Once charge pressure has been established, increase speed to normal operating RPM. Charge pressure should be as indicated in the pump model code. If charge pressure is inadequate, shut down and determine the cause for improper pressure.

**⚠ WARNING**

**INADEQUATE CHARGE PRESSURE WILL AFFECT THE OPERATOR'S ABILITY TO CONTROL THE MACHINE.**

Shut down the engine and connect the external control input signal. Also reconnect the machine function(s), if disconnected earlier. Start the engine, checking to be certain the pump remains in neutral. With the engine at normal operating RPM, slowly check for forward and reverse machine operation.

Charge pressure may slightly decrease during forward or reverse operation. Continue to cycle slowly between forward and reverse for at least five minutes.

Shut down engine, remove gauges, and plug ports. Check reservoir level and add filtered fluid if needed.

The machine is now ready for operation.

## 5.8 HYDRAULIC DRIVE PUMP PRE-FILL PROCEDURE

**⚠ CAUTION**

**HYDRAULIC DRIVE PUMP MUST BE PRE-FILLED BEFORE STARTING THE ENGINE. FAILURE TO DO SO CAN CAUSE PREMATURE FAILURE OF THE PUMP.**

1. Fill the hydraulic reservoir.
2. Determine if the hydraulic oil tank sight level gauge is higher than other hydraulic components.
  - a. Determine if the hydraulic oil tank sight level gauge is higher than the hydraulic drive pump assembly.
  - b. Determine if the hydraulic oil tank sight level gauge is higher than all hydraulic hose loops and the routings between the hydraulic tanks and the hydraulic drive pump assembly.
  - c. If sight level gauge is the highest hydraulic oil level point, proceed to step 3.
  - d. If sight level gauge is NOT the highest oil level point, low pressure air may need to be applied to the hydraulic oil tank (fill cap via air regulator) in conjunction with step 4 to get hydraulic oil to move over the air locks created by these high spots.
3. If the machine is to be equipped with a hydraulic oil cooler option.
  - a. Determine if there is hydraulic "tee" fittings installed at the hydraulic drive pump that has a "cap" fittings attached to it. (this will generally be at or near the top of the hydraulic drive pump body). This "cap" fitting is to be used to manually fill the hydraulic drive pump case.
  - b. Remove "cap" fitting.
  - c. Fill hydraulic drive pump case with hydraulic oil.
  - d. Attach and torque "cap" fitting.
  - e. Pre-filling of hydraulic drive pump w/oil cooler option is complete. (Step #4 can be omitted at this point).
4. If machine is NOT equipped with a hydraulic oil cooler option.
  - a. Locate a case access port on the hydraulic drive pump. Preferably one located on at or near the top or under sides of the pump.
  - b. Using the proper wrench, Remove the O-ring plug to allow air to escape from the hydraulic drive pump case.
  - c. Hydraulic oil will flow by gravity from the hydraulic tank to the drive pump.
  - d. The pump is full, when hydraulic oil starts to flow out of this port.
  - e. Install the O-ring plug and torque.
5. Pre-filled of the hydraulic drive pump is complete.


## 5.9 FUNCTION PUMP

### Removal

1. Place machine on level surface and allow the engine and system fluids to cool.
2. Properly relieve any pressure in hydraulic system.
3. Tag and disconnect the hydraulic lines and fittings from the function pump. Use a suitable container to retain any residual hydraulic fluid. Immediately cap lines and ports.

**NOTE:** The function pump weighs approximately 35 lbs. (16 kg).

4. Use a suitable device to support the function pump.
5. Remove two bolts and washers attaching the function pump to the drive pump. Remove function pump from the machine as shown.

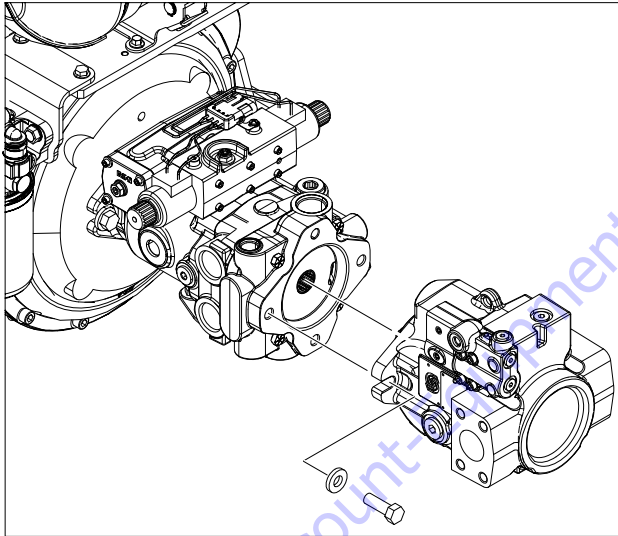

6. Remove and discard o-ring, if applicable.
7. Place function pump in the clean work area.

### Installation

**NOTE:** The function pump weighs approximately 35 lbs. (16 kg).


1. Use a suitable device to support the function pump.
2. If applicable, install the o-ring on to the function pump.
3. Align and install the function pump to the drive pump.

**NOTE:** Make sure that the pump shaft is properly aligned.

### CAUTION

**INCORRECT SHAFT ALIGNMENT MAY RESULT IN DAMAGE TO DRIVE SHAFT, BEARINGS, OR SEAL WHICH CAN CAUSE EXTERNAL OIL LEAKAGE.**

4. Secure function pump with two bolts and washers as shown. Apply JLG Threadlocker P/N 0100011 to the bolts before installation. Torque bolts to 85 ft. lbs. (116Nm).

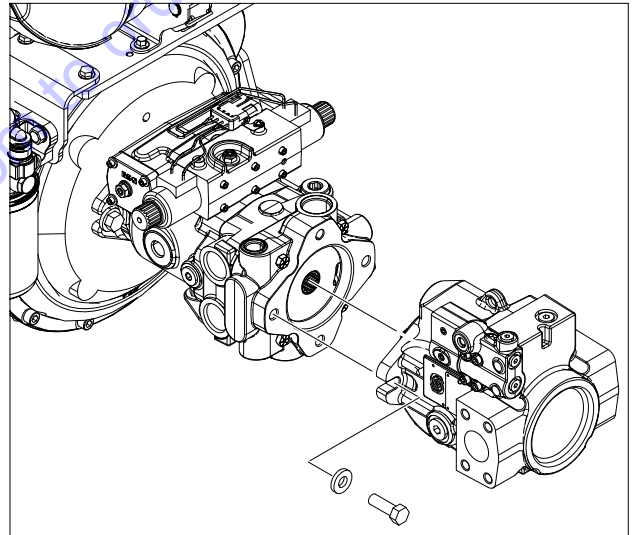


5. Remove tag and reconnect the hydraulic lines to the function pump.
6. Reconnect the battery power and make sure for proper working of the function pump.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**Table 5-35. Symbols Used**

Symbol	Meaning	Symbol	Meaning
	Non-reusable part, use a new part		Inspect for wear or damage
	Option - either part may exist		Note correct orientation
	Internal hex head		Torque specification
	O-ring boss port		Pull out with tool - press fit
	Lubricate with hydraulic fluid		Cover splines with installation sleeve
	Apply grease/petroleum jelly		Pressure measurement / gauge location or specification

The symbols above can be found in the pump illustrations. The legend above is provided to define each symbol and explain its purpose.

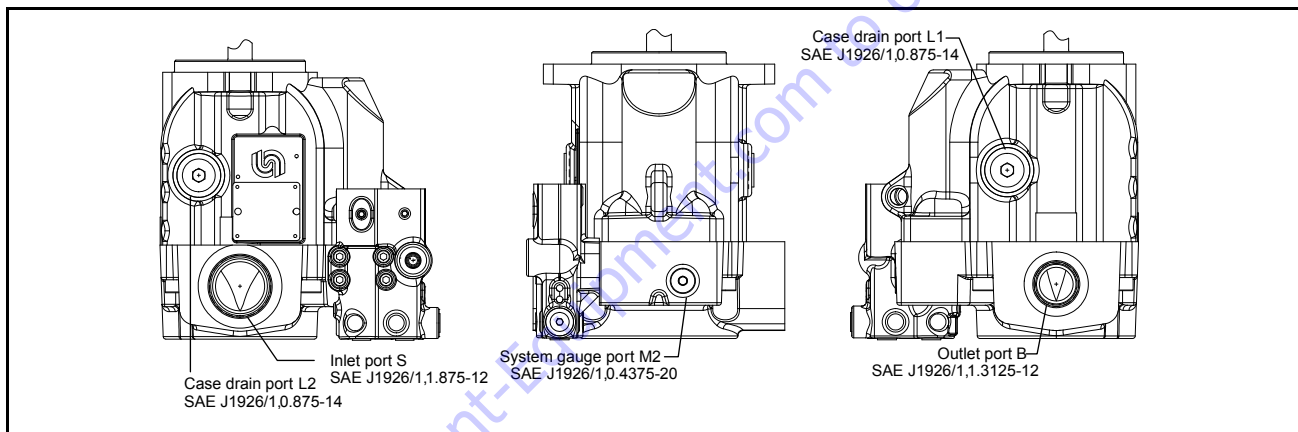

**Figure 5-197. Gauge Port Locations**

**Table 5-36. Gauge and Port information**

Port	Purpose	Range of Pump	Fitting
M2	System pressure	0-5000 psi [0-300 bar]	7/16 - 20 o-ring fitting
M4	Servo pressure	0-5000 psi [0-300 bar]	7/16 - 20 o-ring fitting
L1,L2	Case pressure	0-100 psi [0-10 bar]	7/8 - 14 o-ring fitting
X1	Load Sense signal	0-5000 psi [0-300 bar]	7/16 - 20 o-ring fitting (tee into Load Sense signal line)

## Initial Start-up Procedures

Follow this procedure when starting-up a new pump or when the pump has been removed.

1. Install the pump on the engine. Ensure the pump shaft is properly aligned.

### CAUTION

**INCORRECT SHAFT ALIGNMENT MAY RESULT IN DAMAGE TO DRIVE SHAFT, BEARINGS, OR SEAL WHICH CAN CAUSE EXTERNAL OIL LEAKAGE.**

2. Fill the main pump housing with clean hydraulic fluid. Pour filtered oil directly into the main most case drain port.
3. Fill the inlet line leading from the pump to the reservoir. Check the inlet line for properly tightened fittings and be certain it is free of restrictions and air leaks.
4. To ensure the pump stays filled with oil, install the case drain line in the main most case drain port.
5. Install a gauge at port M2 to monitor system pressure during start up.
6. While watching the pressure gauge installed at M2, jog the engine or run at the lowest possible speed until system pressure builds to normal levels (minimum 160 psi [11 bar]). Once system pressure is established, increase to full operating speed. If system pressure is not maintained, shutdown the engine, determine cause, and take corrective action. Refer to Troubleshooting.
7. Operate the hydraulic system for at least fifteen minutes under light load conditions.
8. Check and adjust control settings as necessary after installation. Refer to Adjustments.
9. Shut down the engine and remove the pressure gauge. Replace plug at port M2.
10. Check the fluid level in the reservoir; add clean filtered fluid if necessary. The pump is now ready for operation.

**Troubleshooting**

**Table 5-37. Excessive Noise and/ or Vibration**

Item	Description	Action
Check fluid level in reservoir.	Insufficient hydraulic fluid will cause cavitation.	Fill the reservoir to proper level.
Check for air in system.	Air in system will cause noisy, erratic control.	Purge air and tighten fittings. Check inlet for leaks.
Check pump inlet pressure / vacuum.	Improper inlet conditions will cause erratic behavior and low output flow.	Correct pump inlet pressure / vacuum conditions. Refer to Hydraulic parameters.
Inspect shaft couplings.	A loose or incorrect shaft coupling will cause excessive noise and/or vibration.	Repair or replace coupling and ensure that correct coupling is being used.
Check shaft alignment.	Misaligned shafts will create excessive noise and/or vibration.	Correct shaft misalignment.
Hydraulic fluid viscosity above acceptable limits.	Hydraulic fluid viscosity above acceptable limits or low fluid temperature will not allow the pump to fill or control to operate properly.	Allow system to warm up before operation or use fluid with the appropriate viscosity grade for expected operating temperatures.

**Table 5-38. Actuator Response Is Sluggish**

Item	Description	Action
Check external system relief valve setting.	Low external relief valve setting will slow down system.	Adjust external relief valve setting per manufacturer's recommendations. External relief setting must be above Pressure Compensator setting for proper operation.
Check Pressure Compensator and LS control setting.	Low Pressure Compensator setting will prevent the pump from achieving full stroke. Low Load Sense setting will limit output flow.	Adjust Pressure Compensator and Load Sense setting. Refer to Adjustments.
Check Load Sense control signal pressures.	Incorrect Load Sense signal will not allow pump to operate correctly.	Inspect system, ensure that proper Load Sense signal is transmitted to the pump.
Internal system leaks.	Worn internal parts will not allow the pump to operate properly.	Refer to Authorized Service Center for repairs as required.
Hydraulic fluid viscosity above acceptable limits.	Hydraulic fluid viscosity above acceptable limits or low fluid temperature will not allow the pump to fill or control to operate properly.	Allow system to warm up before operation or use fluid with the appropriate viscosity grade for expected operating temperatures.
Check external system valving.	Malfunctioning valving may not allow system to respond properly.	Repair or replace system valving as required.
Check pump case pressure.	High case pressure will cause the system to be sluggish.	Correct case drain line restrictions.
Check pump inlet pressure / vacuum.	High inlet vacuum will cause low output flow.	Correct inlet pressure conditions.

**Table 5-39. System Operating Hot**

Item	Description	Action
Check fluid level in reservoir.	Insufficient volume of hydraulic fluid will not meet cooling demands of system.	Fill reservoir to proper level. Verify proper size of reservoir.
Inspect heat exchanger. Check air flow and input air temperature for the heat exchanger.	Insufficient air flow, high input air temperature, or undersized heat exchanger will not meet cooling demands of the system.	Clean, repair, or replace heat exchanger as required. Verify proper size of heat exchanger.
Check external system relief valve setting.	Fluid passing through relief valve adds heat to system.	Adjust external system relief valve setting per manufacturer's recommendations. External relief valve setting must be above Pressure Compensator setting for proper operation.
Check pump inlet pressure / vacuum.	High inlet vacuum adds heat to system.	Correct inlet pressure / vacuum conditions.

**Table 5-40. Low Pump Output Flow**

Item	Description	Action
Check fluid level in reservoir.	Insufficient hydraulic fluid will limit output flow and cause internal damage to pump.	Fill the reservoir to proper level.
Hydraulic fluid viscosity above acceptable limits.	Fluid viscosity above acceptable limits or low fluid temperature will not allow the pump to fill or control to operate properly.	Allow system to warm up before operation or use fluid with the appropriate viscosity grade for expected operating temperatures.
Check external system relief valve setting.	External relief valve set below Pressure Compensator setting will cause low output flow.	Adjust external relief valve per manufacturer's recommendation. External relief valve setting must be above Pressure Compensator setting for proper operation.
Check Pressure Compensator and Load Sense control setting.	Low Pressure Compensator setting will prevent the pump from achieving full stroke. Low Load Sense setting will limit output flow.	Adjust Pressure Compensator and Load Sense setting. Refer to Adjustments.
Check pump inlet pressure / vacuum.	High inlet vacuum will cause low output flow.	Correct inlet pressure conditions.
Check input speed.	Low input speeds decrease flow.	Adjust input speed.
Check pump rotation.	Incorrect rotational configuration will cause low flow.	Use pump with appropriate rotational configuration.

## SECTION 5 - BASIC HYDRAULICS INFORMATION & SCHEMATICS

**Table 5-41. Pressure or Flow Instability**


Item	Description	Action
Check for air in system.	Air in system will cause erratic operation.	Activate Pressure Compensator, allowing system to bleed air. Check inlet line for leaks and eliminate source of air ingress.
Check control spools.	Sticking control spools will cause erratic operation.	Inspect spools for free movement in bore. Clean or replace as needed.
Check Load Sense setting.	Low Load Sense setting may cause instability.	Adjust Load Sense setting to proper level. See Adjustments.
Check Load Sense signal line.	Blocked Load Sense signal line will interfere with proper Load Sense operation.	Remove blockage.
Check external relief valve and Pressure Compensator setting.	Insufficient pressure differential between Pressure Compensator Pressure Compensator setting and external relief valve.	Adjust external relief valve or Pressure Compensator control settings to appropriate level. Relief valve setting must be above Pressure Compensator setting for proper operation.
Check external relief valve.	Chattering external relief valve may cause unstable feedback to pump control.	Adjust or replace relief valve.

**Table 5-42. System Pressure Not Reaching Pressure Compensator Setting**

Item	Description	Action
Check Pressure Compensator control setting.	System pressure will not rise above Pressure Compensator setting.	Adjust Pressure Compensator to appropriate setting.
Check external relief valve.	External relief valve setting below Pressure Compensator setting will prevent pressure compensation.	Adjust external relief valve per manufacturer's recommendations. External relief valve must be set above Pressure Compensator setting for proper operation.
Inspect Pressure Compensator control spring.	Broken, damaged, or missing spring will cause erratic operation.	Replace spring as required.
Inspect Pressure Compensator spool for wear.	Wear of the Pressure Compensator spool will cause internal leakage in the control.	Replace the spool as required.
Inspect Pressure Compensator spool for proper orientation.	Improper orientation will result in poor operation.	Correct orientation of spool.
Check Pressure Compensator control for contamination.	Contamination may interfere with movement of the Pressure Compensator Spool.	Clean Pressure Compensator control components, take appropriate action to eliminate contamination.



Table 5-43. High Inlet Vacuum

Item	Description	Action
 <b>CAUTION</b> <b>HIGH INLET VACUUM CAUSES CAVITATION WHICH CAN DAMAGE INTERNAL PUMP COMPONENTS.</b>		
Check fluid temperature.	Low temperature increases viscosity. High fluid viscosity causes high inlet vacuum.	Allow system to warm up before operation.
Inspect inlet screen.	Blocked or restricted inlet screen will cause high inlet vacuum.	Clean screen / remove blockage.
Check inlet piping.	Too many fittings, bends, or long piping will cause high inlet vacuum.	Eliminate fittings to make path more direct.
Hydraulic fluid viscosity above acceptable limits.	High fluid viscosity causes high inlet vacuum.	Select fluid with appropriate viscosity for expected operating temperature.

## Shaft Seal Replacement

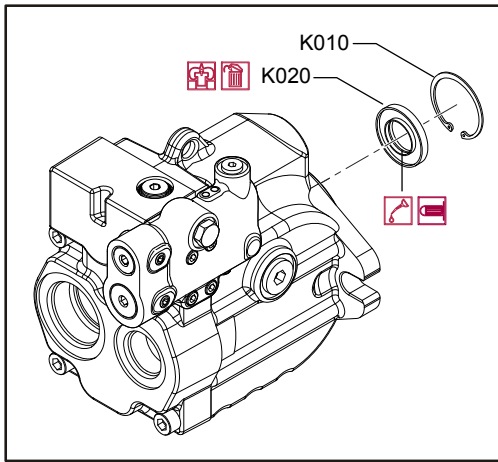


Figure 5-198. Shaft Seal and Retaining Ring

A lip type shaft seal is used in the pump and can be replaced without major disassembly of the unit. Replacement of the shaft seal requires removal of the pump from the machine.

### REMOVAL

1. Using the appropriate snap-ring pliers, remove the retaining ring (K010) from the housing.
2. Remove the shaft seal (K020) from the bore in the pump housing and discard. Avoid damaging the pump housing or shaft. Puncture the face of the seal with a packing hook, or use a slide-hammer type puller to remove the seal.

### INSTALLATION

1. Inspect the pump housing and new seal for damage. Inspect the sealing area on the shaft for rust, wear, or contamination. Polish the sealing area on the shaft if necessary.
2. Lubricate the lip of the new shaft seal with clean hydraulic fluid. Place a protective sleeve over the shaft end to prevent damage to the seal during installation.

### CAUTION

**PREMATURE BEARING FAILURE CAN RESULT IF THE SHAFT SEAL CONTACTS THE SHAFT BEARING. PRESS THE SEAL INTO THE HOUSING ONLY FAR ENOUGH TO CLEAR THE RETAINING RING GROOVE.**

3. Keeping the seal perpendicular to the shaft, press the new seal into the housing just far enough to clear the retaining ring groove. Install seal with the cupped side toward the shaft bearing. Do not damage the seal during installation.
4. Using the appropriate snap ring pliers, install the seal retaining ring.
5. Remove the installation sleeve.

## Control Assembly

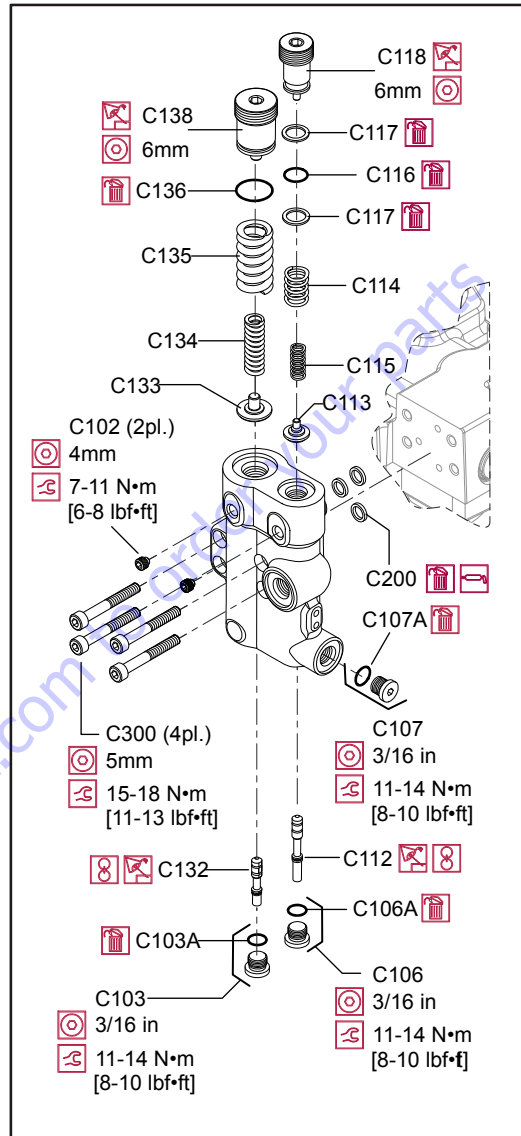


Figure 5-199. Control Assembly

**DISASSEMBLY**

1. Remove the four screws (C300) holding the control housing onto the end cap.
2. Remove the control and discard the three interface o-rings (C200).
3. Remove the Pressure Compensator set screw (C102), Pressure Compensator adjustment screw (C138), o-ring (C136), springs (C135, C134), and seat (C133). Discard the o-ring.
4. Remove the plug (C103), o-ring (C103A), and Pressure Compensator spool (C132) from the control housing; discard the o-ring. Note orientation of the spool for reassembly.
5. Remove the plug (C107) and o-ring (C107A); discard the o-ring.

**NOTE:** For Pressure Compensator only controls, skip steps 6 and 7.

6. Remove the Load Sense set screw (C102), Load Sense adjustment screw (C118), o-ring (C116), back-up rings (C117), springs (C114, C115), and seat (C113); discard the o-ring.
7. Remove the plug (C106), o-ring (C106A), and Load Sense spool (C112) from the control housing; discard the o-ring. Note orientation of the spool for reassembly.

**INSPECTION**

1. Inspect the adjustment screws for wear at the tips and where they contact the springs; replace as necessary.
2. Inspect the springs and spring guides for wear or damage; replace as necessary.
3. Carefully inspect the spools. Ensure the sealing lands are free of nicks and scratches. Check the ends that contact the spring guides for wear. Replace spools as necessary.
4. Inspect the control housing for damage. Check the spool bores for excessive wear.
5. Clean all parts and lubricate spools, springs, guides and new o-rings with clean hydraulic fluid.

**REASSEMBLY**

1. Install the Pressure Compensator spool, spherical end first, into the Pressure Compensator bore. The Pressure Compensator spool is the shorter of the two. Using a new o-ring, install the plug (C103). Torque to 8-10 ft.lb. [11-14 Nm].
2. Place the two Pressure Compensator springs onto the spring guide and install into the Pressure Compensator bore. Place a new o-ring onto the Pressure Compensator adjustment screw and thread it into the Pressure Compensator bore until flush, then make another full turn. Install and torque the set screw to 6-8 ft.lb. [7-11 Nm].

**NOTE:** For Pressure Compensator only controls, skip steps 15 and 16.

3. Install the Load Sense spool, spherical end first, into the Load Sense bore. The Load Sense spool is the longer of the two. Using a new o-ring, install the plug (C106). Torque to 8-10 ft.lb. [11-14 Nm].
4. Place the two Load Sense springs onto the spring guide and install into the Load Sense bore. Place a new o-ring and backup rings onto the Load Sense adjustment screw and thread it into the Load Sense bore until flush, then make another full turn. Install and torque the set screw to 6-8 ft.lb. [7-11 Nm].
5. Using a new o-ring, install the plug (C107). Torque to 8-10 ft.lb. [11-14 Nm].
6. Using petroleum jelly to retain them, install the three interface o-rings (C200) in the recesses on the control housing.
7. Install the control assembly onto the endcap using the four screws (C300). Torque to 11-13 ft.lb. [15-18 Nm]. Torque screws in a criss-cross pattern and re-torque the first screw to ensure proper torque retention.

### Plug and Fitting Sizes and Torques

If any plugs or fittings are removed from the unit during service, install and torque as indicated here. This drawing is a

composite. Your configuration may differ but the appropriate wrench size and torque can be found here.

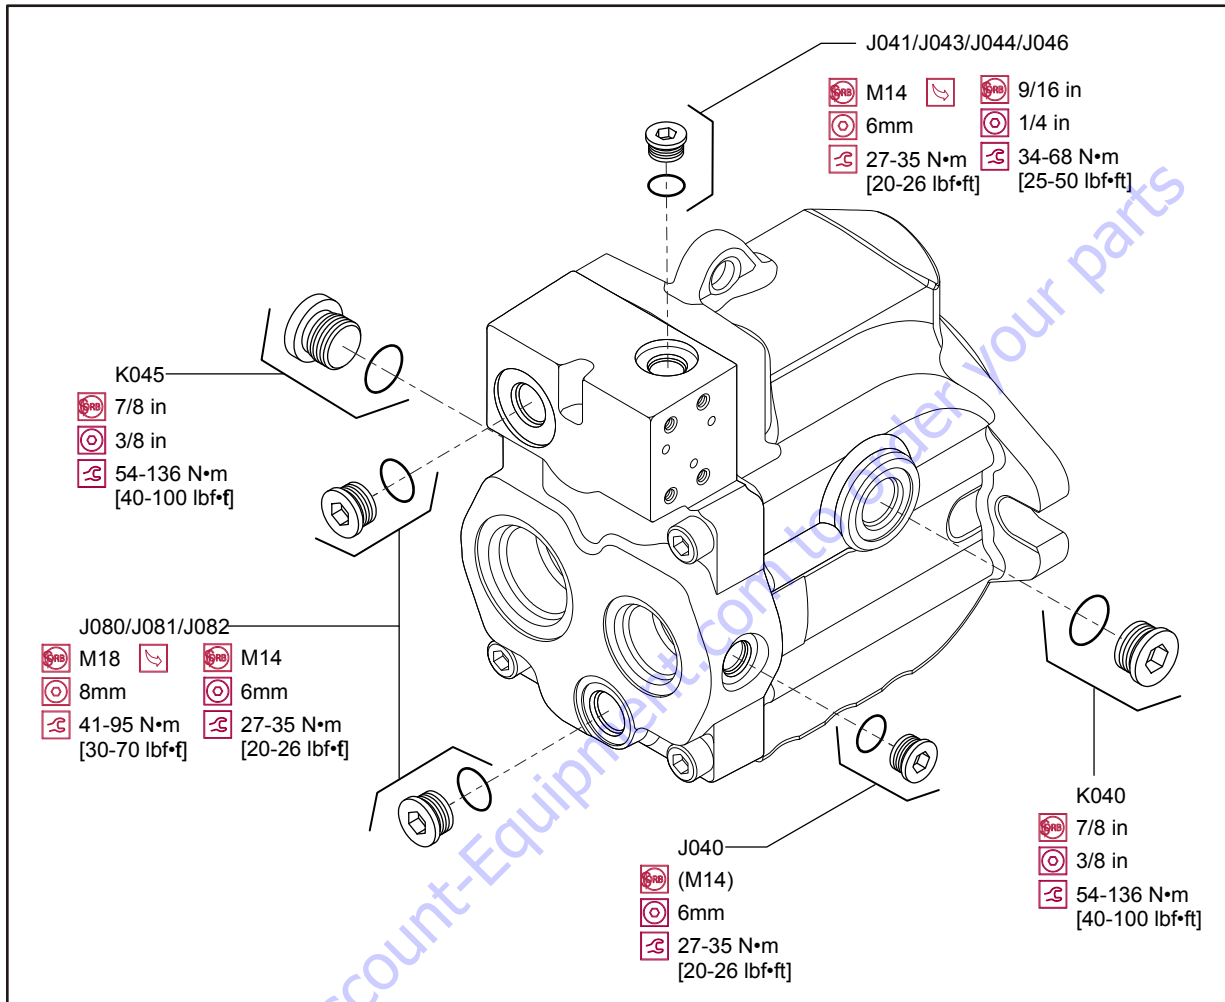


Figure 5-200. Plug Locations, Sizes, and Torques