



An Oshkosh Corporation Company



www.Discount-Equipment.com

Service and Maintenance Manual

Model 740AJ

SN 0300185828 to Present

3121651


January 07, 2019 - Rev D

ANSI

CE



AS/NZS



PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on one of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION A. INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS

A GENERAL

This section contains the general safety precautions which must be observed during maintenance of the aerial platform. It is of utmost importance that maintenance personnel pay strict attention to these warnings and precautions to avoid possible injury to themselves or others, or damage to the equipment. A maintenance program must be followed to ensure that the machine is safe to operate.

⚠ WARNING

MODIFICATION OR ALTERATION OF AN AERIAL WORK PLATFORM SHALL BE MADE ONLY WITH WRITTEN PERMISSION FROM THE MANUFACTURER.

The specific precautions to be observed during maintenance are inserted at the appropriate point in the manual. These precautions are, for the most part, those that apply when servicing hydraulic and larger machine component parts.

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

⚠ WARNING

SINCE THE MACHINE MANUFACTURER HAS NO DIRECT CONTROL OVER THE FIELD INSPECTION AND MAINTENANCE, SAFETY IN THIS AREA RESPONSIBILITY OF THE OWNER/OPERATOR.

B HYDRAULIC SYSTEM SAFETY

It should be noted that the machines hydraulic systems operate at extremely high potentially dangerous pressures. Every effort should be made to relieve any system pressure prior to disconnecting or removing any portion of the system.

Do not use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to help protect hands from spraying fluid.



C MAINTENANCE

⚠ WARNING

FAILURE TO COMPLY WITH SAFETY PRECAUTIONS LISTED IN THIS SECTION COULD RESULT IN MACHINE DAMAGE, PERSONNEL INJURY OR DEATH AND IS A SAFETY VIOLATION.

- ENSURE REPLACEMENT PARTS OR COMPONENTS ARE IDENTICAL OR EQUIVALENT TO ORIGINAL PARTS OR COMPONENTS.
- NO SMOKING IS MANDATORY. NEVER REFUEL DURING ELECTRICAL STORMS. ENSURE THAT FUEL CAP IS CLOSED AND SECURE AT ALL OTHER TIMES.
- REMOVE ALL RINGS, WATCHES AND JEWELRY WHEN PERFORMING ANY MAINTENANCE.
- DO NOT WEAR LONG HAIR UNRESTRAINED, OR LOOSE-FITTING CLOTHING AND NECKTIES WHICH ARE APT TO BECOME CAUGHT ON OR ENTANGLED IN EQUIPMENT.
- OBSERVE AND OBEY ALL WARNINGS AND CAUTIONS ON MACHINE AND IN SERVICE MANUAL.
- KEEP OIL, GREASE, WATER, ETC. WIPED FROM STANDING SURFACES AND HAND HOLDS.
- USE CAUTION WHEN CHECKING A HOT, PRESSURIZED COOLANT SYSTEM.
- NEVER WORK UNDER AN ELEVATED BOOM UNTIL BOOM HAS BEEN SAFELY RESTRAINED FROM ANY MOVEMENT BY BLOCKING OR OVERHEAD SLING, OR BOOM SAFETY PROP HAS BEEN ENGAGED.
- BEFORE MAKING ADJUSTMENTS, LUBRICATING OR PERFORMING ANY OTHER MAINTENANCE, SHUT OFF ALL POWER CONTROLS.
- BATTERY SHOULD ALWAYS BE DISCONNECTED DURING REPLACEMENT OF ELECTRICAL COMPONENTS.
- KEEP ALL SUPPORT EQUIPMENT AND ATTACHMENTS STOWED IN THEIR PROPER PLACE.
- USE ONLY APPROVED, NONFLAMMABLE CLEANING SOLVENTS.

REVISION LOG

Original Issue	A - September 1, 2017
Revised	B - October 6, 2017
Revised	C - June 29, 2018 - Revised Covers
Revised	D - January 07, 2019 - Revised pages 4-69, 4-71 through 4-74

Go to Discount-Equipment.com to order your parts

SECTION NO.	TITLE	PAGE NO.
SECTION A - INTRODUCTION - MAINTENANCE SAFETY PRECAUTIONS		
A	General	A-1
B	Hydraulic System Safety	A-1
C	Maintenance	A-1
SECTION 1 - SPECIFICATIONS		
1.1	Operating specifications	1-1
1.2	Dimensional Data	1-1
1.3	Capacities	1-1
1.4	Engine Data	1-1
1.5	Tires	1-2
1.6	Component Data	1-2
	Drive System	1-2
	Swing System	1-2
	Auxiliary Power Pump	1-2
1.7	Torque Requirements	1-3
1.8	Hydraulic Oil	1-3
1.9	Major Component Weights	1-5
	Critical Stability Weights	1-5
1.10	Operator Maintenance	1-7
	Propane Fuel Filter Replacement	1-11
	Propane Fuel System Pressure Relief	1-11
SECTION 2 - GENERAL		
2.1	Machine Preparation, Inspection, and Maintenance	2-1
	General	2-1
	Preparation, Inspection, and Maintenance	2-1
	Pre-Start Inspection	2-1
	Pre-Delivery Inspection and Frequent Inspection	2-1
	Annual Machine Inspection	2-1
	Preventative Maintenance	2-1
2.2	Service and Guidelines	2-2
	General	2-2
	Safety and Workmanship	2-2
	Cleanliness	2-2
	Components Removal and Installation	2-2
	Component Disassembly and Reassembly	2-2
	Pressure-Fit Parts	2-3
	Bearings	2-3
	Gaskets	2-3
	Bolt Usage and Torque Application	2-3
	Hydraulic Lines and Electrical Wiring	2-3
	Hydraulic System	2-3
	Lubrication	2-3
	Battery	2-3
	Lubrication and Servicing	2-3
2.3	Lubrication and Information	2-3
	Hydraulic System	2-3
	Hydraulic Oil	2-4
	Changing Hydraulic Oil	2-4
	Lubrication Specifications	2-4
2.4	Cylinder Drift Test	2-5
	Theory	2-5
	Cylinder Leakage Test	2-5
	Cylinder Thermal Drift	2-5
2.5	Pins and Composite Bearing Repair Guidelines	2-6

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
2.6	Welding on JLG Equipment	2-6
	Do the Following When Welding on JLG Equipment	2-6
	Do NOT Do the Following When Welding on JLG Equipment	2-6
SECTION 3	- CHASSIS & TURNTABLE	
3.1	Tires & Wheels	3-1
	Tire Inflation	3-1
	Tire Damage	3-1
	Tire Replacement	3-1
	Wheel Replacement	3-1
	Wheel Installation	3-1
3.2	Tow Bar (If Equipped)	3-2
3.3	Oscillating Axle Lockout Test (If Equipped)3-5	
3.4	Wheel Drive Assembly	3-8
	Removal	3-8
	Installation	3-8
3.5	Drive Hub	3-9
	Disassembly	3-9
	Cleaning and Inspection	3-9
	Repair	3-9
	Assembly	3-11
3.6	Drive Brake	3-17
	Disassembly	3-17
	Inspection	3-17
	Assembly	3-17
3.7	Drive Motor	3-19
	Description	3-19
	Disassembly	3-19
	Inspection	3-23
	Assembly	3-25
	Initial Start-up Procedures	3-30
	Troubleshooting	3-31
	Shaft Seal Replacement	3-32
	Loop Flushing Valve	3-33
3.8	Swing Hub	3-35
	Roll, Leak And Brake Testing	3-35
	Tightening and Torquing Bolts	3-35
	Motor Control Valve Disassembly	3-36
	Motor and Brake Disassembly	3-37
	Main Drive Disassembly	3-38
	Hub-Shaft Disassembly	3-39
	Carrier Disassembly	3-40
	Hub-Shaft Assembly	3-41
	Carrier Assembly	3-41
	Main Drive Assembly	3-42
	Motor and Brake Assembly	3-43
	Motor Control Valve Assembly	3-43
3.9	Swing Motor	3-46
	Disassembly and Inspection	3-46
	Assembly	3-53
	One Piece Stator Construction	3-61
3.10	Swing Hub Removal	3-62
3.11	Swing Hub Installation	3-62
	Procedure for Setting Swing Gear Backlash	3-62
	Swing Drive Lubrication	3-63

SECTION NO.	TITLE	PAGE NO.
3.12	Swing Bearing	3-64
	Turntable Bearing Mounting Bolt Condition Check	3-64
	Wear Tolerance	3-67
	Swing Bearing Replacement	3-67
	Swing Bearing Torque Values	3-68
3.13	Tilt Indicator System	3-70
3.14	Spark Arrester Cleaning Instructions	3-70
3.15	Rotary Coupling	3-71
3.16	Generator	3-76
	Maintenance Schedule	3-76
	Overload Protection	3-76
	Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings	3-76
	Troubleshooting	3-78
	Generator Disassembly and Assembly	3-79
	Lead Connection List for Generator	3-86
3.17	Auxiliary Power System	3-87
3.18	Deutz Engine	3-88
3.19	Deutz Engine - TD2011L04	3-95
	Glow Plugs	3-95
	Check Oil Level	3-95
	Replacing Engine Oil	3-96
	Replacing the Oil Filter	3-97
	Replacing the Primary Fuel Filter	3-97
3.20	Deutz Engine - TD2.9L4	3-98
	Glow Plugs	3-98
	Check Oil Level	3-98
	Replacing Engine Oil	3-98
	Replacing the Oil Filter	3-99
	Replacing the Primary Fuel Filters	3-99
3.21	Dual Fuel System	3-100
	Changing from Gasoline to LP Gas	3-100
	Changing from LP Gas to Gasoline	3-100
3.22	Deutz EMR 2	3-101
3.23	GM Engine General Maintenance	3-113
	Maintenance of the Drive Belt	3-113
	Engine Electrical System Maintenance	3-113
	Checking/Filling Engine Oil Level	3-113
	Changing the Engine Oil	3-114
	Coolant Fill Procedure - Dual Fuel Engine	3-114
3.24	GM Engine Dual Fuel System	3-115
	Fuel Filter	3-115
	Electric Lock Off	3-116
	EPR Assembly	3-116
	Low Pressure Regulator (LPR)	3-116
	Air Fuel Mixer	3-117
	Electronic Throttle Control (ETC)	3-117
	Engine Control Module	3-118
	Heated Exhaust Gas Oxygen Sensor	3-118
	Gasoline Multi Point Fuel Injection System (MPFI)	3-118
	Gasoline Fuel Pump	3-119
	Gasoline Pressure And Temperature Sensor Manifold	3-119
	Fuel Filter	3-119
	Fuel Injector Rail	3-119
	Fuel Injector	3-119

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
3.25	GM Engine Fuel System Repair	3-120
	Propane Fuel System Pressure Relief	3-120
	Propane Fuel System Leak Test	3-120
	Propane Fuel Filter Replacement	3-121
	Electronic Pressure Regulator (EPR) Assembly Replacement	3-122
	Electronic Throttle Control Replacement	3-123
	Mixer Replacement	3-125
	Coolant Hose Replacement	3-125
	Vapor Hose Replacement	3-125
	Engine Control Module Replacement	3-126
	Heated Exhaust Gas Oxygen Sensor Replacement	3-126
3.26	GM Engine LPG Fuel System Diagnosis	3-127
	Fuel System Description	3-127
	Diagnostic Aids	3-127
3.27	Air Compressor	3-210
	Description	3-210
	Oil Injection	3-210
	Inlet Valve and Control Valving	3-210
	Air Filter Unit	3-210
	Oil Reservoir and Primary Oil Separation	3-210
	Secondary Spin-On Oil Coalescer/Separator	3-210
	Spin-On Oil Filter	3-210
	Minimum Pressure Valve/Check Valve Assembly	3-212
	Hydraulic Drive System	3-212
	Compressor Cooling System	3-212
	Initial Startup	3-212
	Normal Startup Procedure	3-213
	Normal Shutdown Procedure	3-213
	Daily Operation	3-213
	General Maintenance	3-213
	Lubrication Guide	3-214
	Oil Filter Replacement	3-214
	Coalescer (Air/Oil Separator) Replacement	3-215
	Air Filter Replacement	3-215
	Belts - Tightening and Replacement	3-215
	Cooler Core Cleaning (Exterior)	3-216
	Adding/Changing Compressor Oil	3-216
	Pressure Adjustments	3-216
	Intake Control	3-217
	Minimum Pressure Valve	3-217
	Compressor Thermal Valve	3-217
	Safety Shutdown Systems	3-217
	Troubleshooting	3-217
3.28	Counterweight	3-220

SECTION NO.	TITLE	PAGE NO.
SECTION 4 - BOOM & PLATFORM		
4.1	Platform	4-1
	Platform Valve Removal	4-1
	Platform Valve Installation	4-1
	Support Removal	4-2
	Support Installation	4-3
4.2	Rotator and Slave Cylinder	4-5
	Removal	4-5
	Installation	4-5
4.3	Boom System	4-6
	Switch Systems	4-6
	Above Elevation (Above Horizontal) Cutout System	4-6
	Transport Position Interlock System (CE only)	4-6
	Platform Control Enable System	4-6
	Function Speed Control System	4-6
	Platform	4-6
	Main Lift End Stroke Dampening System	4-7
	QuikStick Lift System	4-7
	Tower Boom Sequence Valve System	4-7
	Upright Level Override System	4-7
	Ground Control Keyswitch System	4-7
4.4	Main Boom Powertrack	4-9
	Removal	4-9
	Installation	4-9
4.5	Powertrack Maintenance	4-14
	Flat Bar Removal	4-14
	Round Bar/Poly Bar Removal	4-14
	Removing and Installing Links	4-15
	Installing a New Flat Bar	4-18
	Installing a New Round Bar/Poly Roller	4-19
	Replacing a Fixed End Bracket	4-19
	Replacing a Moving End Bracket	4-20
	Replacing a One Piece Bracket	4-20
4.6	Boom Cleanliness Guidelines	4-21
4.7	Main Boom Assembly	4-22
	Removal	4-22
	Disassembly	4-23
	Inspection	4-23
	Assembly	4-23
	Installation	4-24
4.8	Upright	4-25
	Removal	4-25
	Installation	4-26
4.9	Tower Boom Assembly	4-27
	Removal	4-27
	Inspection	4-27
	Installation	4-28
	Tower Out of Sync	4-28
4.10	Articulating Jib	4-31
	Removal	4-31
	Disassembly	4-31
	Inspection	4-31
	Assembly	4-32
	Installation	4-32

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
4.11	Upright Monitoring System	4-32
	Re-Synchronizing Upright	4-32
	Calibration	4-34
	Calibration Faults	4-38
	Function Check	4-39
	Service Mode/Tower Boom Retrieval	4-40
4.12	UMS Troubleshooting and Fault Messages	4-46
	Backward Stability Concern Message	4-46
	Forward Stability Concern Message	4-46
	Auto Detection Input Low Message	4-46
	UMS Sensor Communications Lost	4-46
	Out of Usable Range Message	4-46
	UMS Sensor Not Calibrated Message	4-47
	UMS Sensor Faulted Message	4-47
	Incompatible Software Detected Message	4-47
	Calibration Faults	4-47
4.13	Sequence for Hose Replacement in the Tower Boom	4-47
4.14	Limit Switches Adjustment	4-48
	Main Boom Horizontal Limit Switch	4-48
	Tower Boom Horizontal Limit Switch	4-48
4.15	Boom Valve Adjustment	4-48
	Main Boom	4-48
4.16	Rotator Assembly	4-51
	Theory of Operation	4-51
	Required Tools	4-52
	Making a Seal Tool	4-52
	Before Disassembly	4-52
	Disassembly	4-55
	Inspection	4-59
	Assembly	4-59
	Installing Counterbalance Valve	4-65
	Greasing Thrust Washers	4-66
	Testing the Actuator	4-66
	Installation and Bleeding	4-67
4.17	Foot Switch Adjustment	4-67
	Troubleshooting	4-68
4.18	Bolt-On External Fall Arrest System	4-69
	Bolt-On External Fall Arrest System Types	4-69
	Inspection Before Use	4-69
	Inspecting Line Tenser	4-69
	Inspecting Slip Indicator	4-70
	Annual Inspection and Certification	4-70
	Installation	4-70
4.19	Skyguard	4-73
	Operation	4-73
	Function Test	4-73
	Diagnostics & Troubleshooting	4-74

SECTION NO.	TITLE	PAGE NO.
SECTION 5	- BASIC HYDRAULICS INFORMATION & SCHEMATICS	
5.1	Lubricating O-Rings in the Hydraulic System	5-1
	Cup and Brush	5-1
	Dip Method	5-2
	Spray Method	5-2
	Brush-on Method	5-2
5.2	Hydraulic cylinders	5-3
	Slave Cylinder	5-3
	Upright Level Cylinder	5-9
	Jib Lift Cylinder	5-15
	Main Boom Lift Cylinder	5-21
	Tower Boom Lift Cylinder	5-27
	Master Cylinder	5-33
	Steer Cylinder	5-39
	Main Boom Telescope Cylinder	5-44
5.3	Cylinder Removal and Installation	5-50
	Main Boom Telescope Cylinder Removal	5-50
	Main Boom Telescope Cylinder Installation	5-52
	Main Lift Cylinder Removal	5-53
	Main Lift Cylinder Installation	5-54
	Upright Level Cylinder Removal	5-55
	Upright Level Cylinder Installation	5-56
	Tower Boom Lift Cylinder Removal	5-56
	Tower Boom Lift Cylinder Installation	5-57
	Slave Cylinder Removal	5-58
	Slave Cylinder Installation	5-58
5.4	Hydraulic Pump W/hayes Pump Drive Coupling Lubrication	5-59
5.5	Pressure Setting Procedures	5-59
	Set Up the Function Pump	5-59
	Adjustments Made at the Main Valve Block	5-70
	Adjustments Made at the Platform Valve Block	5-70
5.6	Hydraulic Component Start-Up Procedures and Recommendations	5-71
5.7	Hydraulic Drive Pump Pre-fill Procedure	5-73
5.8	Function Pump	5-74
	Removal	5-74
	Installation	5-74
	Initial Start-up Procedures	5-76
	Fluid and Filter Maintenance	5-76
	Troubleshooting	5-77
	Set Up the Function Pump	5-81
	Shaft Seal Replacement	5-82
	Control Assembly	5-82
	Plug and Fitting Sizes and Torques	5-84
5.9	Hydrostatic Pump	5-85
	Removal	5-85
	Installation	5-85
	Servo Controlled Piston Pump	5-86
	Charge Pump Adapter Assembly	5-89
	Manual Servo Control Basic Assembly	5-90
	Manual Servo Control Assembly Options	5-91
	Rotating Kit Assembly	5-93
	Fault-logic Trouble Shooting	5-94
	Start-up Procedure	5-99
5.10	Hydraulic Schematics	5-100

TABLE OF CONTENTS

SECTION NO.	TITLE	PAGE NO.
SECTION 6 - JLG CONTROL SYSTEM		
6.1	JLG Control System Analyzer Kit Instructions	6-1
	Introduction	6-1
	To Connect the JLG Control System Analyzer	6-2
	Using the Analyzer	6-2
	Changing the Access Level of the Hand Held Analyzer	6-3
	Adjusting Configuration Using the Hand Held Analyzer	6-4
	Machine Setup	6-4
	Level Vehicle Description	6-5
6.2	Machine Personality Settings and Function Speeds	6-18
6.3	Machine Orientation When Setting Function Speeds	6-21
	Test Notes	6-21
6.4	LSS System	6-22
	Diagnostic Menu	6-23
	Calibration Procedure	6-24
	Testing & Evaluation	6-28
	Troubleshooting	6-29
6.5	Resetting The MSSO System	6-30
6.6	CANbus Communications	6-31
	Analyzer Diagnostics Menu Structure	6-47
SECTION 7 - BASIC ELECTRICAL INFORMATION & SCHEMATICS		
7.1	General	7-1
7.2	Multimeter Basics	7-1
	Grounding	7-1
	Backprobing	7-1
	Min/Max	7-1
	Polarity	7-1
	Scale	7-1
	Voltage Measurement	7-1
	Resistance Measurement	7-2
	Continuity Measurement	7-2
	Current Measurement	7-3
7.3	Applying Silicone Dielectric Compound to Electrical Connections	7-3
	Installation of Dielectric Grease	7-4
	Deutsch HD, DT, DTM, DRC Series	7-4
	AMP Seal	7-4
	AMP Mate-N-Lok	7-5
	DIN Connectors	7-5
	Exclusions	7-5
7.4	AMP Connector	7-8
	Assembly	7-8
	Disassembly	7-10
	Wedge Lock	7-10
	Service - Voltage Reading	7-10
7.5	Deutsch Connectors	7-12
	DT/DTP Series Assembly	7-12
	DT/DTP Series Disassembly	7-12
	HD30/HDP20 Series Assembly	7-13
	HD30/HDP20 Series Disassembly	7-13
7.6	Telematics Gateway	7-14
	Telematics-Ready (TCU) Plug	7-14
7.7	Electrical Schematics	7-20

FIGURE NO.	TITLE	PAGE NO.
1-1.	Maintenance and Lubrication Diagram	1-6
1-2.	Deutz 2011 Engine Dipstick	1-9
1-3.	Filter Lock Assembly	1-11
1-4.	Torque Chart (SAE Fasteners - Sheet 1 of 5).....	1-12
1-5.	Torque Chart (SAE Fasteners - Sheet 2 of 5).....	1-13
1-6.	Torque Chart (SAE Fasteners - Sheet 3 of 5).....	1-14
1-7.	Torque Chart (METRIC Fasteners - Sheet 4 of 5).....	1-15
1-8.	Torque Chart (METRIC Fasteners - Sheet 5 of 5).....	1-16
2-1.	Engine Operating Temperature Specifications - Deutz.....	2-10
2-2.	Engine Operating Temperature Specifications - GM	2-11
3-1.	Tow Bar	3-2
3-2.	Axle and Steering Installation without Tow Package.....	3-3
3-3.	Axle and Steering Installation with Tow Package	3-4
3-4.	Chassis Component Location	3-6
3-5.	Turntable Component Location	3-7
3-6.	Wheel Drive Installation	3-8
3-7.	Drive Hub	3-16
3-8.	Drive Brake	3-18
3-9.	Drive Motor Cross Section	3-19
3-10.	Loop Flushing Spool	3-19
3-11.	Plugs, Fittings, and Speed Sensor	3-20
3-12.	End Cap	3-20
3-13.	Valve Plate & Rear Shaft Bearing	3-21
3-14.	Cylinder Kit	3-21
3-15.	Shaft Seal	3-21
3-16.	Shaft & Front Bearing.....	3-22
3-17.	SwashPlate & Servo Piston.....	3-22
3-18.	Cylinder Kit Disassembly	3-23
3-19.	Servo Piston	3-25
3-20.	Cylinder Kit Assembly	3-26
3-21.	Swashplate and Journal Bearing	3-26
3-22.	Shaft and Front Bearing	3-27
3-23.	Cylinder Kit Installation.....	3-27
3-24.	Servo Spring and Minimum Angle Stop	3-27
3-25.	Valve Plate and Rear Bearing	3-28
3-26.	End Cap	3-28
3-27.	Shaft Seal	3-29
3-28.	Plugs and Fittings Installation	3-29
3-29.	Loop Flushing Spool	3-30
3-30.	Removing the Shaft Seal	3-32
3-31.	Loop Flushing Spool	3-33
3-32.	Swing System.....	3-34
3-33.	Motor Control Valve.....	3-36
3-34.	Motor and Brake	3-37
3-35.	Main Drive Assembly.....	3-38
3-36.	Hub-Shaft.....	3-39
3-37.	Carrier	3-40
3-38.	Swing Drive Assembly.....	3-44
3-39.	Swing Motor and Brake Assembly	3-45
3-40.	Swing Drive Motor	3-47
3-41.	Swing Bearing Tolerance Boom Placement (Sheet 1 of 2)	3-65
3-42.	Swing Bearing Tolerance Boom Placement (Sheet 2 of 2)	3-66
3-43.	Swing Bolt Feeler Gauge Check.....	3-67
3-44.	Swing Bearing Tolerance Measuring Point	3-67
3-45.	Swing Bearing Removal	3-69
3-46.	Swing Bearing Torque Sequence	3-70
3-47.	Rotary Coupling Seal Installation	3-71

LIST OF FIGURES

FIGURE NO.	TITLE	PAGE NO.
3-48.	Rotary Coupling Cutaway	3-72
3-49.	Rotary Coupling Port Location (9 Port)	3-73
3-50.	Rotary Coupling Installation	3-74
3-51.	Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings	3-77
3-52.	Generator Disassembly and Assembly	3-79
3-53.	Generator Troubleshooting Circuit Diagram (Sheet 1 of 2)	3-80
3-54.	Generator Troubleshooting Circuit Diagram (Sheet 2 of 2)	3-81
3-55.	Generator Electrical Circuit Diagram	3-82
3-56.	Power Board PC1 Electrical Circuit Diagram	3-83
3-57.	Power Board PC2 Electrical Circuit Diagram (Sheet 1 of 2)	3-84
3-58.	Power Board PC2 Electrical Circuit Diagram (Sheet 2 of 2)	3-85
3-59.	Auxiliary Power System	3-87
3-60.	Deutz D2011 Engine Installation - Sheet 1 of 2	3-88
3-61.	Deutz D2011 Engine Installation - Sheet 2 of 2	3-89
3-62.	Deutz 2.9 L4 Engine Installation - Sheet 1 of 5	3-90
3-63.	Deutz 2.9 L4 Engine Installation - Sheet 2 of 5	3-91
3-64.	Deutz 2.9 L4 Engine Installation - Sheet 3 of 5	3-92
3-65.	Deutz 2.9 L4 Engine Installation - Sheet 4 of 5	3-93
3-66.	Deutz 2.9 L4 Engine Installation - Sheet 5 of 5	3-94
3-67.	Deutz Engine Dipstick	3-95
3-68.	Engine Oil Viscosity	3-96
3-69.	Deutz Engine Dipstick	3-98
3-70.	Engine Oil Viscosity	3-98
3-71.	Location of the Oil Filter	3-99
3-72.	Location of the Primary Fuel Filter	3-99
3-73.	EMR 2 Engine Side Equipment	3-101
3-74.	Deutz EMR 2 Troubleshooting Flow Chart	3-102
3-75.	Deutz EMR 2 Vehicle Side Connection Diagram	3-103
3-76.	Deutz EMR 2 Engine Side Connection Diagram - Sheet 1 of 2	3-104
3-77.	Deutz EMR 2 Engine Side Connection Diagram - Sheet 2 of 2	3-105
3-78.	EMR 2 Engine Plug Pin Identification	3-106
3-79.	EMR 2 Vehicle Plug Pin Identification	3-107
3-80.	EMR2 Fault Codes - Sheet 1 of 5	3-108
3-81.	EMR2 Fault Codes - Sheet 2 of 5	3-109
3-82.	EMR2 Fault Codes - Sheet 3 of 5	3-110
3-83.	EMR2 Fault Codes - Sheet 4 of 5	3-111
3-84.	EMR2 Fault Codes - Sheet 5 of 5	3-112
3-85.	Engine Oil Dip Stick	3-113
3-86.	Electric Fuel Lock Off	3-116
3-87.	EPR Assembly	3-116
3-88.	Low Pressure Regulators	3-116
3-89.	Air Fuel Mixer	3-117
3-90.	ETC throttle control device	3-117
3-91.	LPG Engine Control Unit (ECM)	3-118
3-92.	ECM Assembly	3-118
3-93.	Heated Exhaust Gas Oxygen Sensor (HEGO)	3-118
3-94.	Gasoline Fuel Pressure and Temperature Manifold Assembly	3-119
3-95.	Filter Lock Assembly	3-121
3-96.	EPR Assembly	3-122
3-97.	Pressure Regulator Section	3-122
3-98.	(TMAP) Sensor & Electronic Throttle Control (ETC)	3-123
3-99.	Mixer Assembly	3-124
3-100.	EPR Assembly	3-127
3-101.	Air Compressor	3-211
3-102.	Counterweight	3-220
4-1.	Location of Components Platform Support	4-2
4-2.	Platform Support Torque Values	4-4

FIGURE NO.	TITLE	PAGE NO.
4-3.	Location of Components-Rotator and Slave Cylinder	4-5
4-4.	Boom Components Location	4-8
4-5.	Location of Components - Powertrack	4-9
4-6.	Powertrack Installation Main Boom (Sheet 1 of 2).....	4-10
4-7.	Powertrack Installation Main Boom (Sheet 2 of 2).....	4-11
4-8.	Hose and Cables Installation Tower Boom (Sheet 1 of 2)	4-12
4-9.	Hose and Cables Installation Tower Boom (Sheet 2 of 2)	4-13
4-10.	Location of Components - Upright.....	4-25
4-11.	Location of Components - Tower Boom.....	4-27
4-12.	Location of Components - Articulating Jib	4-31
4-13.	Releveling Valve	4-32
4-14.	Boom Upright Positioning	4-33
4-15.	UMS Sensor Location.....	4-43
4-16.	UMS Module Location.....	4-44
4-17.	UMS Module Pin Identification	4-45
4-18.	Boom Valve and Limit Switches Location (Sheet 1 of 2)	4-49
4-19.	Boom Valve and Limit Switches Location (Sheet 2 of 2)	4-50
4-20.	Rotator - Exploded View	4-53
4-21.	Rotator - Assembly Drawing	4-54
4-22.	Rotator Counterbalance Valve	4-65
4-23.	Bolt-On External Fall Arrest System Types	4-69
4-24.	Line Tenser - Transfastener Type.....	4-69
4-25.	Line Tenser - Shuttle Type	4-70
4-26.	Slip Indicator - System OK	4-70
4-27.	Bolt-On External Fall Arrest System Components - Transfastener Type	4-71
4-28.	Bolt-On External Fall Arrest System Components - Shuttle Type.....	4-72
5-1.	Cylinder Barrel Support.....	5-3
5-2.	Capscrew Removal	5-3
5-3.	Cylinder Rod Support	5-3
5-4.	Slave Cylinder.....	5-4
5-5.	Tapered Bushing Removal.....	5-5
5-6.	Composite Bearing Installation	5-6
5-7.	Rod Seal Installation.....	5-6
5-8.	Cylinder Head Seal Installation	5-6
5-9.	Wiper Seal Installation.....	5-7
5-10.	Installation of Head Seal Kit.....	5-7
5-11.	Tapered Bushing Installation	5-7
5-12.	Seating the Tapered Bearing	5-7
5-13.	Hydrolock Piston Seal Installation.....	5-8
5-14.	Piston Seal Kit Installation	5-8
5-15.	Rod Assembly Installation	5-8
5-16.	Cylinder Barrel Support.....	5-9
5-17.	Capscrew Removal	5-9
5-18.	Cylinder Rod Support	5-9
5-19.	Upright Level Cylinder	5-10
5-20.	Tapered Bushing Removal.....	5-11
5-21.	Composite Bearing Installation	5-12
5-22.	Rod Seal Installation.....	5-12
5-23.	Cylinder Head Seal Installation	5-12
5-24.	Wiper Seal Installation.....	5-13
5-25.	Installation of Head Seal Kit.....	5-13
5-26.	Tapered Bushing Installation	5-13
5-27.	Seating the Tapered Bearing	5-13
5-28.	Hydrolock Piston Seal Installation.....	5-14
5-29.	Piston Seal Kit Installation	5-14
5-30.	Rod Assembly Installation	5-14
5-31.	Cylinder Barrel Support.....	5-15

FIGURE NO.	TITLE	PAGE NO.
5-32.	Capscrew Removal	5-15
5-33.	Cylinder Rod Support	5-15
5-34.	Jib Lift Cylinder	5-16
5-35.	Tapered Bushing Removal	5-17
5-36.	Composite Bearing Installation	5-18
5-37.	Rod Seal Installation	5-18
5-38.	Cylinder Head Seal Installation	5-18
5-39.	Wiper Seal Installation	5-19
5-40.	Installation of Head Seal Kit	5-19
5-41.	Tapered Bushing Installation	5-19
5-42.	Seating the Tapered Bearing	5-19
5-43.	Hydrolock Piston Seal Installation	5-20
5-44.	Piston Seal Kit Installation	5-20
5-45.	Rod Assembly Installation	5-20
5-46.	Cylinder Barrel Support	5-21
5-47.	Capscrew Removal	5-21
5-48.	Cylinder Rod Support	5-21
5-49.	Main Boom Lift Cylinder	5-22
5-50.	Tapered Bushing Removal	5-23
5-51.	Composite Bearing Installation	5-24
5-52.	Rod Seal Installation	5-24
5-53.	Cylinder Head Seal Installation	5-24
5-54.	Wiper Seal Installation	5-25
5-55.	Installation of Head Seal Kit	5-25
5-56.	Tapered Bushing Installation	5-25
5-57.	Seating the Tapered Bearing	5-25
5-58.	Piston Seal Kit Installation	5-26
5-59.	Rod Assembly Installation	5-26
5-60.	Cylinder Barrel Support	5-27
5-61.	Capscrew Removal	5-27
5-62.	Cylinder Rod Support	5-27
5-63.	Tower Boom Lift Cylinder	5-28
5-64.	Tapered Bushing Removal	5-29
5-65.	Composite Bearing Installation	5-30
5-66.	Rod Seal Installation	5-30
5-67.	Cylinder Head Seal Installation	5-30
5-68.	Wiper Seal Installation	5-31
5-69.	Installation of Head Seal Kit	5-31
5-70.	Tapered Bushing Installation	5-31
5-71.	Seating the Tapered Bearing	5-31
5-72.	Hydrolock Piston Seal Installation	5-32
5-73.	Piston Seal Kit Installation	5-32
5-74.	Rod Assembly Installation	5-32
5-75.	Cylinder Barrel Support	5-33
5-76.	Capscrew Removal	5-33
5-77.	Cylinder Rod Support	5-33
5-78.	Master Cylinder	5-34
5-79.	Tapered Bushing Removal	5-35
5-80.	Composite Bearing Installation	5-36
5-81.	Rod Seal Installation	5-36
5-82.	Cylinder Head Seal Installation	5-36
5-83.	Wiper Seal Installation	5-37
5-84.	Installation of Head Seal Kit	5-37
5-85.	Tapered Bushing Installation	5-37
5-86.	Seating the Tapered Bearing	5-37
5-87.	Hydrolock Piston Seal Installation	5-38
5-88.	Piston Seal Kit Installation	5-38

FIGURE NO.	TITLE	PAGE NO.
5-89.	Rod Assembly Installation	5-38
5-90.	Cylinder Barrel Support	5-39
5-91.	Spanner Nut Removal	5-39
5-92.	Cylinder Rod Support	5-39
5-93.	Steer Cylinder	5-40
5-94.	Composite Bearing Installation	5-41
5-95.	Rod Seal Installation	5-42
5-96.	Cylinder Head Seal Installation	5-42
5-97.	Wiper Seal Installation	5-42
5-98.	Installation of Head Seal Kit	5-42
5-99.	Piston Seal Kit Installation	5-43
5-100.	Cylinder Barrel Support	5-44
5-101.	Capscrew Removal	5-44
5-102.	Cylinder Rod Support	5-44
5-103.	Main Boom Telescopic Cylinder	5-45
5-104.	Tapered Bushing Removal	5-46
5-105.	Composite Bearing Installation	5-47
5-106.	Rod Seal Installation	5-47
5-107.	Cylinder Head Seal Installation	5-47
5-108.	Wiper Seal Installation	5-48
5-109.	Installation of Head Seal Kit	5-48
5-110.	Tapered Bushing Installation	5-48
5-111.	Seating the Tapered Bearing	5-48
5-112.	Piston Seal Kit Installation	5-49
5-113.	Rod Assembly Installation	5-49
5-114.	Components Main Boom and Tower Boom	5-50
5-115.	Main Control Valve Pressure Adjustments (SN 0300185828 through 0300194175)	5-60
5-116.	Main Valve Components (SN 0300185828 through 0300194175) - Sheet 1 of 2	5-61
5-117.	Main Valve Components (SN 0300185828 through 0300194175) - Sheet 2 of 2	5-62
5-118.	Main Control Valve Pressure Adjustments (SN 0300194176 to Present)	5-63
5-119.	Main Valve Components (SN 0300194176 to Present) - Sheet 1 of 2	5-64
5-120.	Main Valve Components (SN 0300194176 to Present) - Sheet 2 of 2	5-65
5-121.	Valve Component Torque (SN 0300194176 to Present) - Sheet 1 of 2	5-66
5-122.	Valve Component Torque (SN 0300194176 to Present) - Sheet 2 of 2	5-67
5-123.	Platform Control Valve Identification	5-68
5-124.	Platform Control Valve Component Torque	5-69
5-125.	Gauge Port Locations	5-75
5-126.	Load Sensing Control Adjustment	5-81
5-127.	Pressure Compensation Control Adjustment	5-81
5-128.	Shaft Seal and Retaining Ring	5-82
5-129.	Control Assembly	5-82
5-130.	Plug Locations, Sizes, and Torques	5-84
5-131.	Endcover Inspection	5-86
5-132.	Housing Inspection	5-87
5-133.	Servo Piston Installation	5-87
5-134.	Bearing or Bushing Inspection	5-89
5-135.	Charge Pump Adapter Assembly	5-89
5-136.	Manual Servo Control Basic Assembly	5-90
5-137.	Manual Servo Control Basic Assembly Option	5-91
5-138.	Neutral Lockout Switch Assembly	5-92
5-139.	Rotating Kit Assembly	5-93
5-140.	Gauge Locations	5-94
5-141.	Fault- logic Troubleshooting	5-95
5-142.	Fault- logic Troubleshooting	5-96
5-143.	Fault- logic Troubleshooting	5-97
5-144.	Hydraulic Schematic - Sheet 1 of 6	5-100
5-145.	Hydraulic Schematic - Sheet 2 of 6	5-101

LIST OF FIGURES

FIGURE NO.	TITLE	PAGE NO.
5-146.	Hydraulic Schematic - Sheet 3 of 6	5-102
5-147.	Hydraulic Schematic - Sheet 4 of 6	5-103
5-148.	Hydraulic Schematic - Sheet 5 of 6	5-104
5-149.	Hydraulic Schematic - Sheet 6 of 6	5-105
6-1.	Hand Held Analyzer	6-1
6-2.	ADE Block Diagram	6-7
6-3.	Analyzer Flow Chart Version 6.X Software -Sheet 1 of 8	6-32
6-4.	Analyzer Flow Chart Version 6.X Software -Sheet 2 of 8	6-33
6-5.	Analyzer Flow Chart Version 6.X Software -Sheet 3 of 8	6-34
6-6.	Analyzer Flow Chart Version 6.X Software -Sheet 4 of 8	6-35
6-7.	Analyzer Flow Chart Version 6.X Software -Sheet 5 of 8	6-36
6-8.	Analyzer Flow Chart Version 6.X Software -Sheet 6 of 8	6-37
6-9.	Analyzer Flow Chart Version 6.X Software -Sheet 7 of 8	6-38
6-10.	Analyzer Flow Chart Version 6.X Software -Sheet 8 of 8	6-39
6-11.	Fault Code Light Location	6-40
6-12.	Analyzer Connecting Points	6-41
6-13.	Ground Control Module - Sheet 1 of 3	6-42
6-14.	Ground Control Module - Sheet 2 of 3	6-43
6-15.	Ground Control Module - Sheet 3 of 3	6-44
6-16.	Platform Control Module - Sheet 1 of 2	6-45
6-17.	Platform Control Module - Sheet 2 of 2	6-46
7-1.	Voltage Measurement (DC)	7-1
7-2.	Resistance Measurement	7-2
7-3.	Continuity Measurement	7-2
7-4.	Current Measurement (DC)	7-3
7-5.	Application to Female Contacts	7-4
7-6.	Use of Seal Plugs	7-5
7-7.	Brad-Harrison M12	7-6
7-8.	Phoenix Contact M12	7-6
7-9.	Connector Assembly Figure 1	7-8
7-10.	AMP Connector	7-8
7-11.	Connector Assembly Figure 2	7-9
7-12.	Connector Assembly Figure 3	7-9
7-13.	Connector Assembly Figure 4	7-9
7-14.	Connector Disassembly	7-10
7-15.	Connector Installation	7-11
7-16.	DT/DTP Contact Installation	7-12
7-17.	DT/DTP Contact Removal	7-12
7-18.	HD/HDP Contact Installation	7-13
7-19.	HD/HDP Locking Contacts Into Position	7-13
7-20.	HD/HDP Contact Removal	7-13
7-21.	HD/HDP Unlocking Contacts	7-13
7-22.	Telematics Gateway Harness - Sheet 1 of 3	7-15
7-23.	Telematics Gateway Harness - Sheet 2 of 3	7-16
7-24.	Telematics Gateway Harness - Sheet 3 of 3	7-17
7-25.	Electrical Components Installation - Sheet 1 of 2	7-18
7-26.	Electrical Components Installation - Sheet 2 of 2	7-19
7-27.	Electrical Schematic GM - Sheet 1 of 2	7-20
7-28.	Electrical Schematic GM - Sheet 2 of 2	7-21
7-29.	Electrical Schematic - Sheet 1 of 14	7-22
7-30.	Electrical Schematic - Sheet 2 of 14	7-23
7-31.	Electrical Schematic - Sheet 3 of 14	7-24
7-32.	Electrical Schematic - Sheet 4 of 14	7-25
7-33.	Electrical Schematic - Sheet 5 of 14	7-26
7-34.	Electrical Schematic - Sheet 6 of 14	7-27
7-35.	Electrical Schematic - Sheet 7 of 14	7-28
7-36.	Electrical Schematic - Sheet 8 of 14	7-29

FIGURE NO.	TITLE	PAGE NO.
7-37.	Electrical Schematic - Sheet 9 of 14	7-30
7-38.	Electrical Schematic - Sheet 10 of 14	7-31
7-39.	Electrical Schematic - Sheet 11 of 14	7-32
7-40.	Electrical Schematic - Sheet 12 of 14	7-33
7-41.	Electrical Schematic - Sheet 13 of 14	7-34
7-42.	Electrical Schematic - Sheet 14 of 14	7-35

Go to Discount-Equipment.com to order your parts

TABLE NO.	TITLE	PAGE NO.
1-1	Operating Specifications	1-1
1-2	Dimensional Data	1-1
1-3	Capacities	1-1
1-4	Deutz D2011L04 Specifications	1-1
1-5	Deutz TD 2.9 Specifications	1-2
1-6	GM 3.0L Specifications	1-2
1-7	Tire Specifications	1-2
1-8	Drive System Specifications	1-2
1-9	Swing System Specifications	1-2
1-10	Auxiliary Power Pump Specifications	1-2
1-11	Torque Requirements	1-3
1-12	Hydraulic Oil	1-3
1-13	Mobilfluid 424 Specs	1-3
1-14	Mobil DTE 10 Excel 32 Specs	1-4
1-15	Mobil EAL 224 H Specs	1-4
1-16	UCon Hydrolube HP-5046 Specs	1-4
1-17	Major Component Weights	1-5
1-18	Critical Stability Weights	1-5
1-19	Lubrication Specifications	1-7
2-1	Inspection and Maintenance	2-2
2-2	Cylinder Drift	2-5
2-3	Inspection and Preventive Maintenance Schedule	2-7
3-1	Wheel Torque Chart	3-2
3-2	Displacement Identifiers	3-21
3-3	Slipper Foot Thickness & End Play	3-23
3-4	Cylinder Block Measurements	3-24
3-5	Excessive Noise and/or Vibration	3-31
3-6	System Operating Hot	3-31
3-7	Won't Shift or Slow to Start	3-31
3-8	Coupling Port Information Table (9 port)	3-75
3-9	Troubleshooting	3-78
3-10	Lead Connection List for Generator	3-86
3-11	LPG Fuel System Diagnosis	3-128
3-12	Symptom Diagnosis	3-130
3-13	DTC to SPN/FMI Cross Reference Chart	3-138
3-14	Engine Fault Codes	3-140
3-15	Deutz Trouble Codes - EMR4 (TD2.9 Engine)	3-188
3-16	Prime Lubricant Characteristics	3-214
3-17	Air Compressor Troubleshooting	3-218
4-1	Troubleshooting	4-68
4-2	SkyGuard Function Table	4-74
5-1	Symbols Used	5-75
5-2	Gauge and Port information	5-75
5-3	Fluid and Filter Change Interval	5-76
5-4	Excessive Noise and/ or Vibration	5-77
5-5	Actuator Response is Sluggish	5-77
5-6	System Operating Hot	5-78
5-7	Low Pump Output Flow	5-78
5-8	Pressure or Flow Instability	5-79
5-9	System Pressure Not Reaching Pressure Compensator Setting	5-79
5-10	High Inlet Vacuum	5-80
6-1	Analyzer Abbreviations	6-5
6-2	Machine Configuration Programming Information	6-8
6-3	Machine Configuration Programming Settings	6-16
6-4	Machine Personality Settings	6-18
6-5	Function Speeds	6-21
6-6	Diagnostic Menu Descriptions	6-23

TABLE NO.	TITLE	PAGE NO.
6-7	Accessory Weights	6-25
6-8	SkyGlazier Capacity Reductions.....	6-27
6-9	Pipe Rack Capacity Reductions	6-27
6-10	LSS Troubleshooting Chart	6-29
6-11	ADJUSTMENTS - Personality Descriptions	6-47
6-12	Diagnostic Trouble Code Chart	6-50

Go to Discount-Equipment.com to order your parts

SECTION 1. SPECIFICATIONS

1.1 OPERATING SPECIFICATIONS

Table 1-1. Operating Specifications

Maximum Work Load (Capacity)	
ANSI Unrestricted:	500 lb. (227 kg)
CE/AUS Unrestricted:	507 lb. (230 kg)
Maximum Travel Grade with boom in stowed position (Gradeability) 4WD	45%
Maximum Travel Grade with boom in stowed position (Side Slope)	5° ANSI 3° CE/AUS
Maximum Vertical Platform Height	74 ft. (22.5 m)
Maximum Horizontal Platform Reach	51 ft. 10 in. (15.8 m)
Ground Clearance	12 in. (30 cm)
Wheelbase	10 ft. (3.05 m)
Maximum Tire Load	17,755 lb. (8060 kg)
Maximum Drive Speed	3.0 mph (4.8 kph)
Maximum Hyd. Operating Pressure	4500 psi (310 bar)
Electrical System Voltage	12 volts
Jet Blast Rating	90 mph (145 kph)
Max. Ground Bearing Pressure	84 psi (5.3 kg/cm ³)
Gross Machine Weight	37,400 lb. (16,964 kg)

1.2 DIMENSIONAL DATA

Table 1-2. Dimensional Data

Turning Radius (Outside)	14 ft. 6 in. (4.42 m)
Turning Radius (Inside)	11 ft. (2.13 m)
Boom Elevation:	
Above Grade	+80 ft. 3 in. (24.46 m)
Below Grade	-13 ft. 1 in. (3.99 m)
Machine Height Stowed	9 ft. 9.5 in. (2.98 m)
Machine Length (Stowed)	36 ft. 6 in. (11.13 m)
Machine Width	8 ft. (2.44 m)
Wheelbase	10 ft. (3.05 m)

1.3 CAPACITIES

Table 1-3. Capacities

Fuel Tank	Approx. 39 Gal. (147.6 L)
Hydraulic Tank	Approx. 40 Gal. (151.4 L)
Hydraulic System (Including Tank)	77 Gal. (291.4 L)
Drive Hub	44 ounces (1.3 L)
Drive Brake	2.7 ounces (80 ml)
Engine Crankcase	
Deutz D2011L04	11 Quarts (10.5 L)
Deutz TD 2.9L	2.4 Gal. (8.9 L) w/Filter
GM	4.5 Quarts (4.25 L) w/Filter
Air Compressor	4 Quarts (3.8 L)

1.4 ENGINE DATA

Table 1-4. Deutz D2011L04 Specifications

Type	Liquid Cooled (Oil)
Fuel	Diesel
Oil Capacity	
Cooling System	5 Quarts (4.5 L)
Crankcase	11 Quarts (10.5 L) w/Filter
Total Capacity	16 Quarts (15 L)
Idle RPM	1000
Low RPM	1800
High RPM	2600
Alternator	55 Amp, belt drive
Fuel Consumption	0.88 GPH (3.33 lph)
Battery	1000 Cold Cranking Amps, 210 minutes Reserve Capacity, 12 VDC
Horsepower	61.6 hp (46 kw) @ 2600 RPM, full load

Table 1-5. Deutz TD 2.9 Specifications

Fuel	Ultra Low Sulfur Diesel (15 ppm)
Output	67 hp (50 kw)
Torque	173 ft. lbs. (234 Nm) @ 1800rpm
Oil Capacity (Crankcase)	2.4 Gal. (8.9 L) w/Filter
Cooling System	0.8 Gal. (3 L)
Low RPM	1200 ± 50 rpm
High RPM	2600 ± 50 rpm
Alternator	95 Amp
Glow Plug	80 Amp
Starter	12 V (3.2 kw)
Fuel Consumption	0.65 GPH (2.48 lph)

Table 1-6. GM 3.0L Specifications

Fuel	Gasoline/LP Gas
No. of Cylinders	4
BHP	
Gasoline	80.5 hp @ 3000 rpm
LP	75 hp @ 3000 rpm
Bore	4 in. (101.6 mm)
Stroke	3.6 in. (91.44 mm)
Displacement	181 cu.in. (3.0 L, 2966 cc)
Oil Capacity w/filter	4.5 Quarts (4.25 L)
Minimum Oil Pressure	
at idle	6 psi (0.4 bar) @ 1000 rpm
Hot	18 psi (1.2 bar) @ 2000 rpm
Compression Ratio	9.2:1
Firing Order	1-3-4-2
High RPM	3000
Low RPM	1000
Oil Capacity	4.3 L (1.14 gal)
Cooling System	3.8 L (1 gal)
Alternator Rating	70 Amp
Torque	
Gasoline	149.2 ft. lbs. (202.2 Nm) @ 2200 rpm
LP	149.6 ft. lbs. (202.8 Nm) @ 1600 rpm

1.5 TIRES

Table 1-7. Tire Specifications

SIZE	TYPE	PLY RATING	LOAD RANGE	PRESSURE
15-625	pneumatic	16	H	95 psi (6.5 bar)
15-625	foam-filled	16	H	N/A
18-625	foam-filled	16	H	N/A

1.6 COMPONENT DATA

Drive System

Table 1-8. Drive System Specifications

Drive Motor Displacement	2.13 cu. in. (35 cc) max. 0.63 cu. in. (10.3 cc) min.
Drive Hub Ratio	87:1
Drive Brake	Automatic spring applied, hydraulically released multi-plate wet disc brakes.

Swing System

Table 1-9. Swing System Specifications

Swing Motor Displacement	4 cu. in. (66 cm ³)
Swing Brake	Automatic spring applied hydraulically released multi-plate wet disc brakes
Swing Hub Ratio	36.13:1

Auxiliary Power Pump

Table 1-10. Auxiliary Power Pump Specifications

Pump Output	1.43 GPM (5.6 lpm) @ 1800 psi. (124 bar)
Pump Displacement	0.273 cu. in. (4.48 cm ³)
Valving	Non-Adj. Unloader Preset to 230 psi Adjustable Relief Set at 1800 psi.
Motor	24V.D.C. 5.0 Extended Duty
Rotation	Counterclockwise

1.7 TORQUE REQUIREMENTS

Table 1-11. Torque Requirements

DESCRIPTION	TORQUE VALUE (DRY)	INTERVAL HOURS
Wheel Bolts	300 ft. lbs. (407 Nm)	150
Support to Rotator Bolts	40 ft. lbs. (55 Nm)	150
Rotator Center Bolt	586 ft. lbs. (795 Nm)	150
Swing Bearing Bolts	190 ft. lbs. (260 Nm)	50/600*
Starter or Aux Pump Solenoid Contacts Coil	95 in. lbs. (10.5 Nm) 40 in. lbs. (4.5 Nm)	As required
*Check swing bearing bolts for security after first 50 hours of operation and every 600 hours thereafter. (See Swing Bearing in Section 3.)		
NOTE: When maintenance becomes necessary or a fastener has loosened, refer to the Torque Chart to determine proper torque value.		

1.8 HYDRAULIC OIL

Table 1-12. Hydraulic Oil

HYDRAULIC SYSTEM OPERATING TEMPERATURE RANGE	S.A.E. VISCOSITY GRADE
+0° to +180°F (-18° to +83°C)	10W
+0° to +210°F (-18° to +99°C)	10W-20, 10W-30
+50° to +210°F (+10° to +99°C)	20W-20

NOTE: Hydraulic oils must have anti-wear qualities at least to API Service Classification GL-3, and sufficient chemical stability for mobile hydraulic system service. JLG Industries recommends Mobilfluid 424 hydraulic oil, which has an SAE viscosity index of 152.

NOTE: When temperatures remain consistently below 20 degrees F. (-7 degrees C.), JLG Industries recommends the use of Mobil DTE10.

Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. If use of hydraulic oil other than Mobilfluid 424 is desired, contact JLG Industries for proper recommendations.

Table 1-13. Mobilfluid 424 Specs

SAE Grade	10W30
ISO Grade	55
Gravity, API	29.0
Density, Lb/Gal. 60°F	7.35
Pour Point, Max	-46°F (-43°C)
Flash Point, Min.	442°F (228°C)
Viscosity	
Brookfield, cP at -18°C	2700
at 40°C	55 cSt
at 100°C	9.3 cSt
Viscosity Index	152

SECTION 1 - SPECIFICATIONS

Table 1-14. Mobil DTE 10 Excel 32 Specs

ISO Viscosity Grade	32
Pour Point, °C Max.	-54
Flash Point, °C Min.	250
Viscosity	
cSt @ 40°C	32.7
cSt @ 100°C	6.63
cSt @ 100°F	32.7
cSt @ 212°F	6.63
Viscosity Index	164
Density (Kg/l) @ 15°C	0.8468
Density (lb/in ³) @ 60°F	0.0305

Table 1-16. UCon Hydrolube HP-5046 Specs

pH	9.1
Specific Gravity, 20/20°F	1.082
Pour Point, °C(°F)	<-50(<58)
Appearance	Red Liquid
Viscosity	
at 0°C (32°F)	340cST(1600SUS)
at 40°C (104°F)	46cST(215SUS)
at 65°C (150°F)	22cST(106SUS)
Viscosity Index	170

Table 1-15. Mobil EAL 224 H Specs

Type	Biodegradable Vegetable Oil
ISO Viscosity Grade	32/46
Specific Gravity	0.922
Pour Point °C(°F)	-32°(-25°)
Flash Point °C(°F)	220°(428°)
Rust Protection, ASTM D 665A & BB	Pass Color, ASTM D 1500 Max 2.0
Operating Temp	-17° to 82°C (0 to 180°F)
Stored Temp	Must be Above 14°C (32°F)
Viscosity	
ASTM D445 cST 40°C	37
ASTM D445 cST 100°C	8.4
Viscosity Index, ASTM D 2270	213

1.9 MAJOR COMPONENT WEIGHTS

Table 1-17. Major Component Weights

MAJOR COMPONENTS	LBS.	KG.
Platform & Control Console	250	113
Main Boom (Inc. Slave Cylinder Rotator, Support)	3185	1445
Main Lift Cylinder	444.7	202
Main Telescope Cylinder	459	208
Upright	1175	535
Upright Level Cylinder	529.5	240
Tower Boom Complete	3450	1565
Tower Lift Cylinder	544	247
Jib Level Cylinder	77.2	35
Jib Lift Cylinder	63	29
Master Cylinder	58	26
Steer Cylinder	32.4	15
Turntable Counterweight	4805	2180
Turntable Complete (Including Engine)	10625	4820
Chassis Complete (Pneumatic Tires)	13350	6060
Chassis Complete (Foam Filled Tires)	12220	5545
Machine Complete (GVW) w/ Pneumatic Tires	34200	15513
Machine Complete (GVW) w/ Foam Filled Tires	33100	15014

NOTE: The above components are separate assemblies. Example: "TURNTABLE COMPLETE" does not include booms, upright, lift cylinders or platform. The weights of these components must be added for the total weight.

Critical Stability Weights

⚠ WARNING

DO NOT REPLACE ITEMS CRITICAL TO STABILITY WITH ITEMS OF DIFFERENT WEIGHT OR SPECIFICATION (FOR EXAMPLE: BATTERIES, FILLED TIRES, COUNTER WEIGHT, ENGINE, AND PLATFORM) DO NOT MODIFY UNIT IN ANY WAY TO EFFECT STABILITY.

Table 1-18. Critical Stability Weights

COMPONENTS		LBS.	KG.
Tire & Wheel Size (Foam Filled Only)	15-625	544	247
	18-625	601	273
Engine	Deutz	534	242
	GM w/pumps	1030	468
Counterweight	Turntable	4805	2180
Wheel Hubs	Front&Rear	218	99
Platform	6ft. (1.83 m)	205	93
	8ft. (2.44 m)	230	105

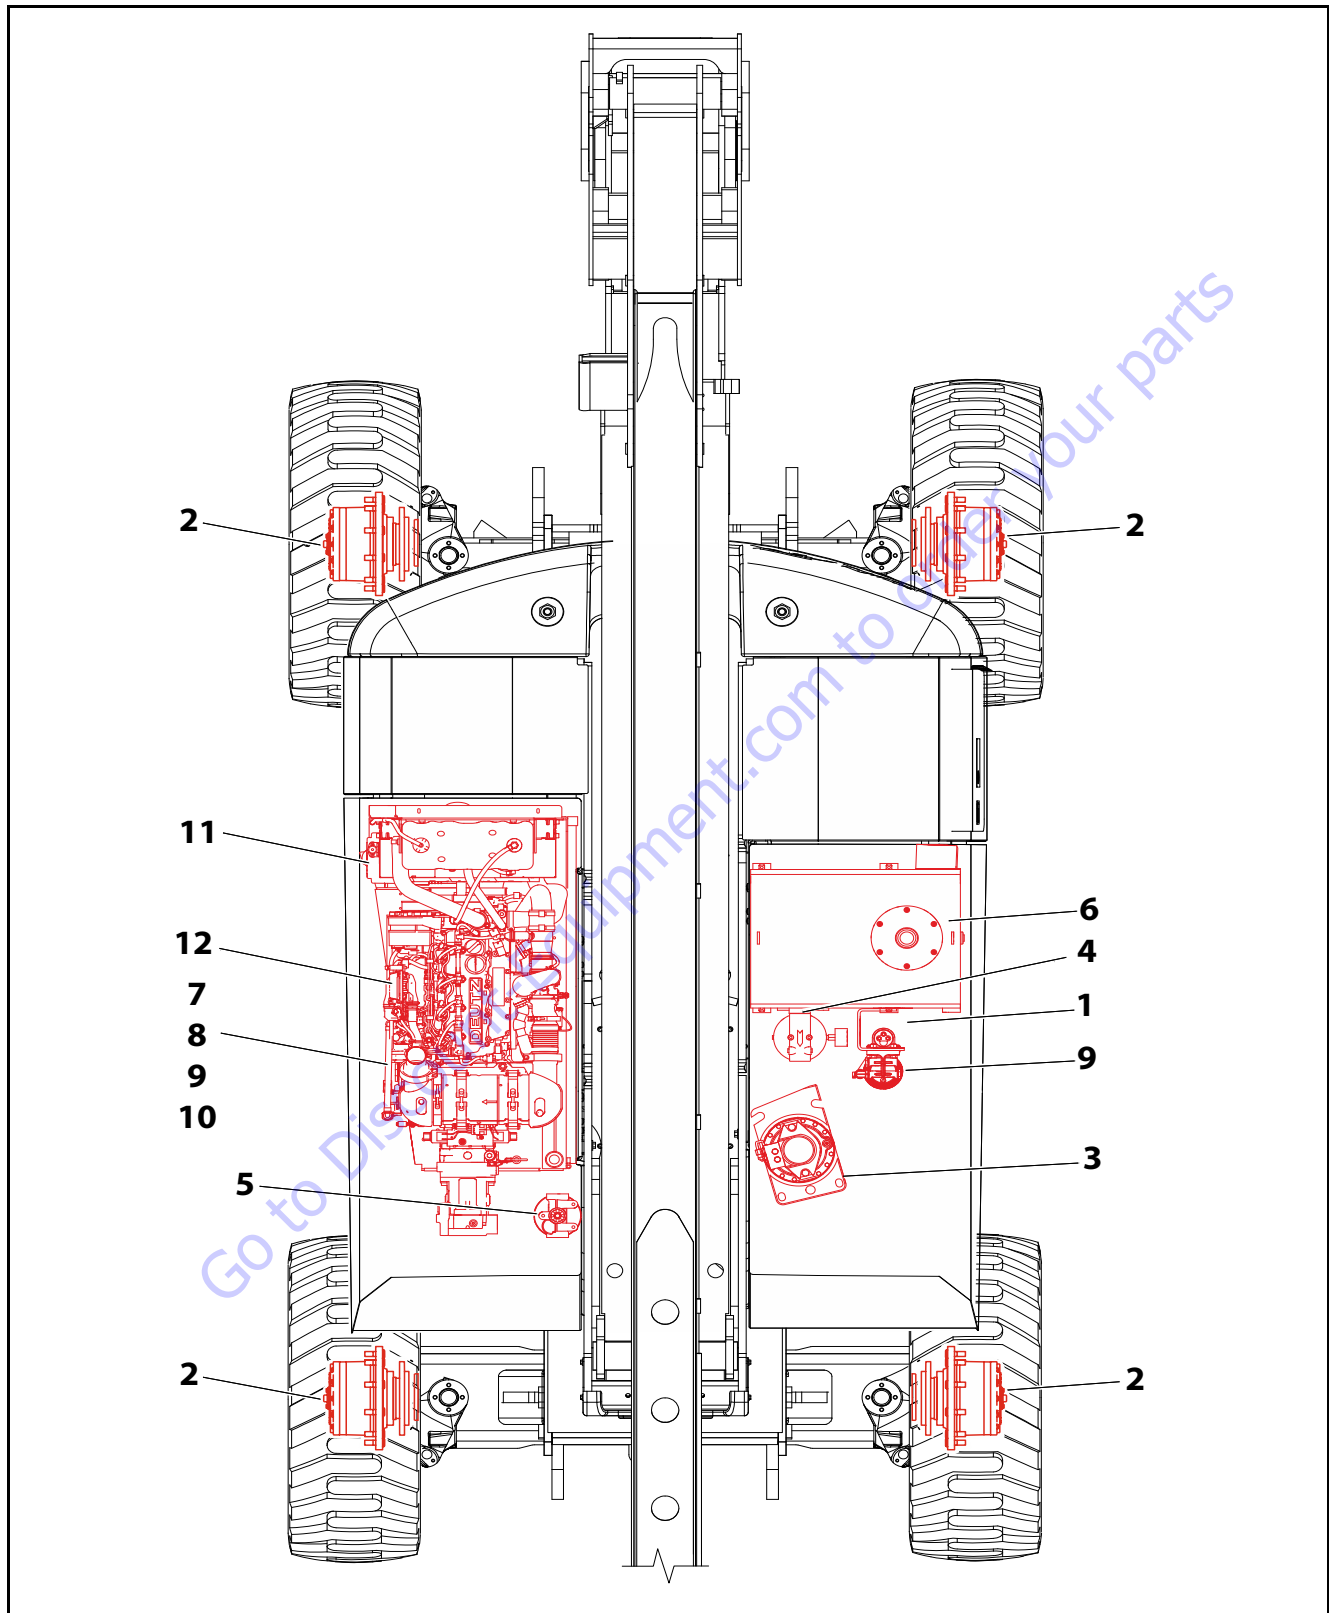


Figure 1-1. Maintenance and Lubrication Diagram

1.10 OPERATOR MAINTENANCE

NOTE: The following numbers correspond to those in Figure 1-1., Maintenance and Lubrication Diagram.

Table 1-19. Lubrication Specifications.

KEY	SPECIFICATIONS
MPG	Multipurpose Grease having a minimum dripping point of 350°F (177°C). Excellent water resistance and adhesive qualities, and being of extreme pressure type. (Timken OK 40 pounds minimum.)
EPGL	Extreme Pressure Gear Lube (oil) meeting API service classification GL-5 or MIL-Spec MIL-L-2105
HO	Hydraulic Oil. API service classification GL-3, e.g. Mobilfluid 424
EO	Engine (crankcase) Oil. Gas - API SF, SH, SG class, MIL-L-2104. Diesel - API CC/CD class, MIL-L-2104B/MIL-L-2104C

NOTICE

LUBRICATION INTERVALS ARE BASED ON MACHINE OPERATION UNDER NORMAL CONDITIONS. FOR MACHINES USED IN MULTI-SHIFT OPERATIONS AND/OR EXPOSED TO HOSTILE ENVIRONMENTS OR CONDITIONS, LUBRICATION FREQUENCIES MUST BE INCREASED ACCORDINGLY.


NOTE: It is recommended as a good practice to replace all filters at the same time.

1. Swing Bearing - Internal Ball Bearing



Lube Point(s) - 2 Grease Fittings
 Capacity - A/R
 Lube - MPG
 Interval - Every 3 months or 150 hours of operation.
 Comments - Remote Access.


2. Wheel Drive Hub

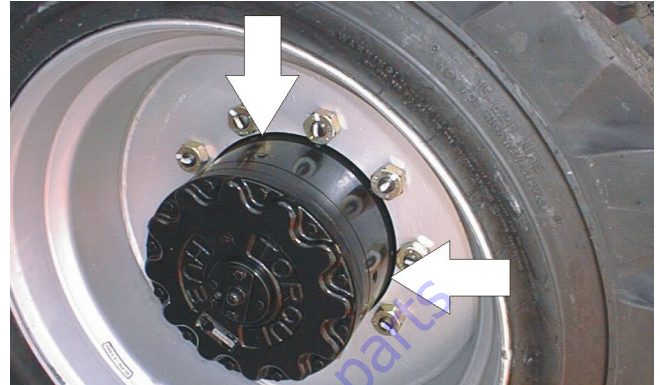

Lube Point(s) - Level/Fill Plug
 Capacity - 17 oz. (0.5 L) - 1/2 Full
 Lube - EPGL
 Interval - Check level every 3 months or 150 hours of operation; change every 2 years or 1200 hours of operation.
 Comments - Place Fill port at 12 o'clock position and check port at 3 o'clock position. Pour lubricant into fill port until it just starts to flow out of check port.


SECTION 1 - SPECIFICATIONS

3. Swing Drive Hub

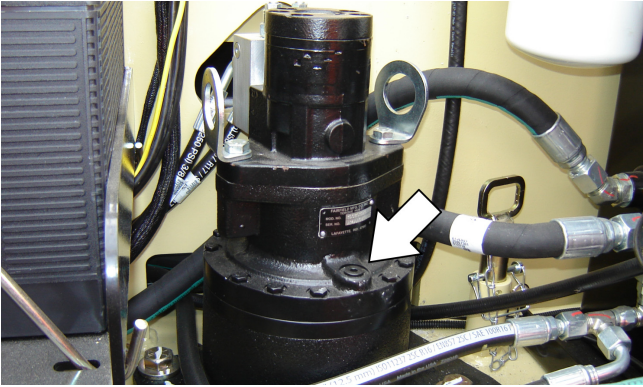

Lube Point(s) - Level/Fill Plug
Capacity - 43 oz. (1.3 L)
Lube - 90w80 Gear oil
Interval - Check level every 3 months or 150 hours of operation; change every 2 years or 1200 hours of operation.

4. Hydraulic Return Filter

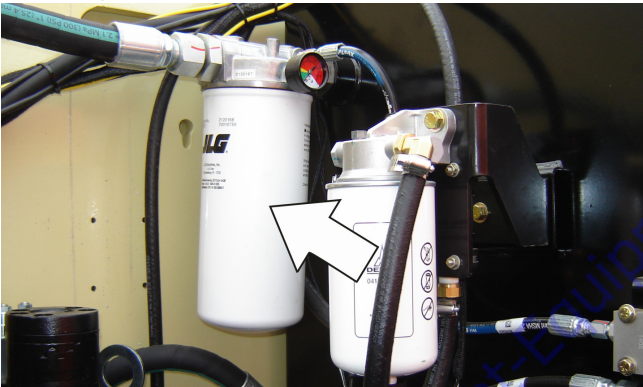


Interval - Change after first 50 hours and every 6 months or 300 hours. Thereafter or as indicated by Condition Indicator.

5. Hydraulic Charge Filter




Interval - Change after first 50 hours and every 6 months or 300 hours. Thereafter or as indicated by Condition Indicator.

6. Hydraulic Tank

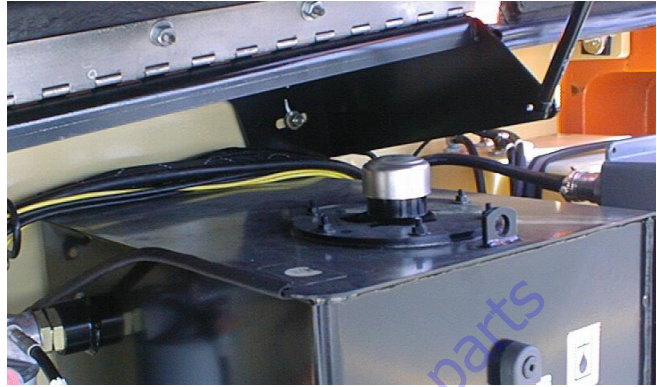

Lube Point(s) - Fill Cap
Capacity - 40 Gal. (151 L) Tank; 77 Gal. (291.4 L) System
Lube - HO
Interval - Check Level daily; Change every 2 years or 1200 hours of operation.

7. A. Oil Change w/Filter - Deutz D2011

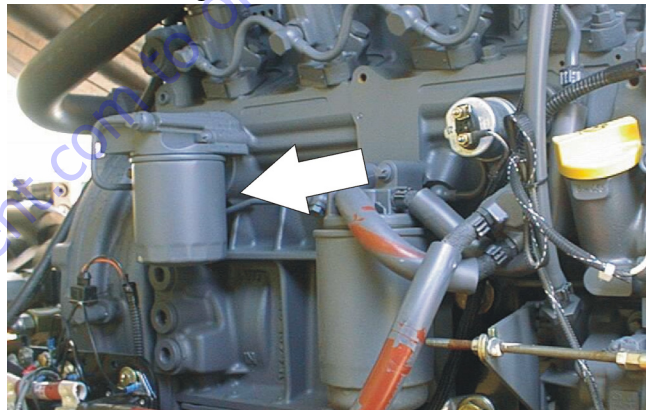

Lube Point(s) - Fill Cap/Spin-on Element
Capacity - 11 Quarts (10.5 L) Crankcase
Lube - EO
Interval - Every Year or 1200 hours of operation.
Comments - Check level daily/Change in accordance with engine manual. Refer to Figure 1-2., Deutz 2011 Engine Dipstick.

B. Oil Change w/Filter - Deutz TD2.9



Lube Point(s) - Fill Cap/Spin-on Element
 Capacity - 9.6 Quarts (9.0 L)
 Lube - EO
 Interval - Every Year or 600 hours of operation.
 Comments - Check level daily/Change in accordance with engine manual.

8. Oil Change w/Filter - GM



Lube Point(s) - Fill Cap/Spin-on Element
 (JLG P/N 7027965)
 Capacity - 4.5 Quarts (4.25 L) w/filter
 Lube - EO
 Interval - 3 Months or 150 hours of operation.
 Comments - Check level daily/Change in accordance with engine manual.


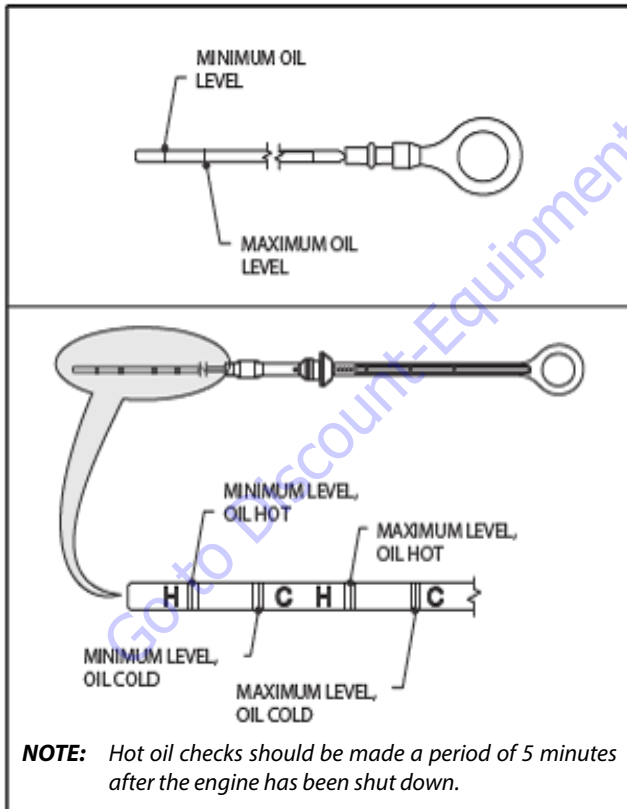


Figure 1-2. Deutz 2011 Engine Dipstick


9. A. Fuel Filter - Deutz D2011

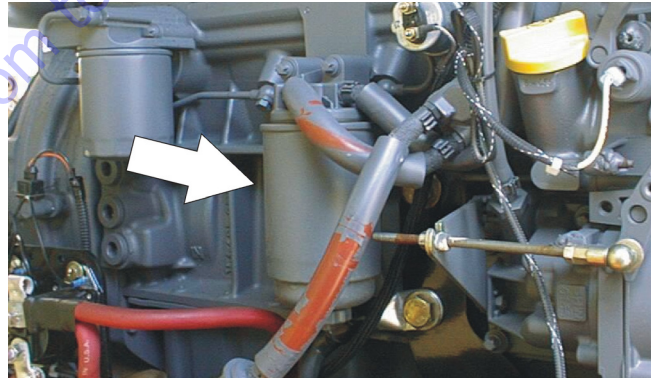

Lube Point(s) - Replaceable Element
 Interval - Every Year or 600 hours of operation.


SECTION 1 - SPECIFICATIONS

B. Fuel Filter - Deutz TD2.9 (On Hydraulic Tank)

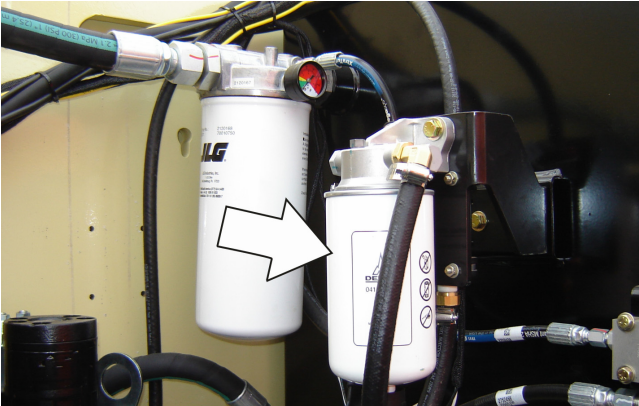

Lube Point(s) - Replaceable Element
Interval - Change in accordance with engine manual.

C. Fuel Filter - Deutz TD2.9 (On Engine)

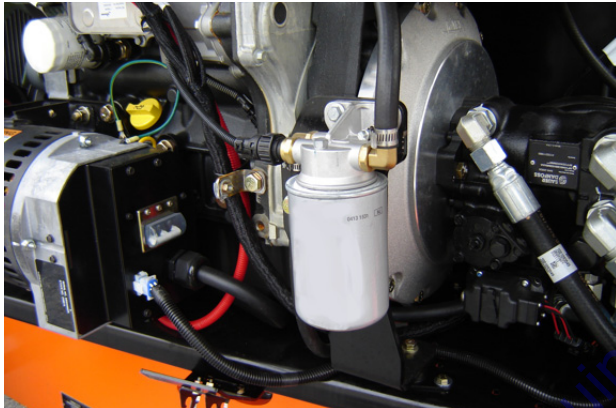


Lube Point(s) - Replaceable Element
Interval - Change in accordance with engine manual.

10. Fuel Filter (Gasoline) - GM


Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation.

11. A. Air Filter

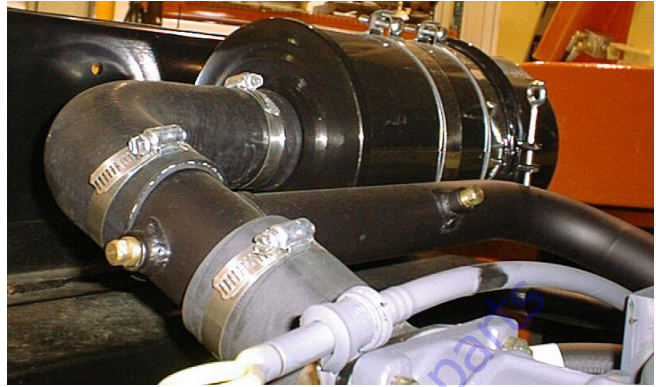


Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation
or as indicated by the condition indicator.

B. Air Filter (Deutz TD 2.9)

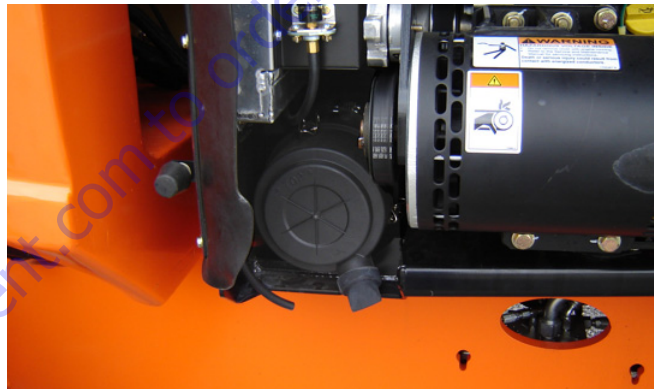


Lube Point(s) - Replaceable Element
Interval - Every 6 months or 300 hours of operation
or as indicated by the condition indicator.

12. Fuel Filter (Propane) - GM Engine

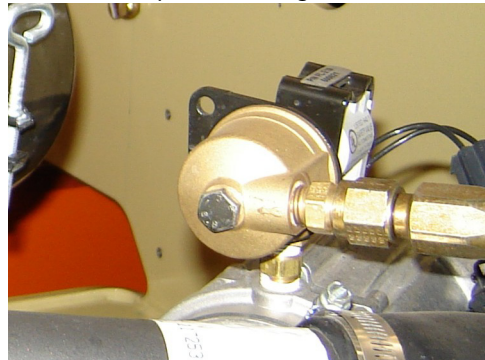

Interval - 3 Months or 150 hours of operation.
Comments - Replace filter. Refer to Propane Fuel Filter
Replacement.

Propane Fuel Filter Replacement

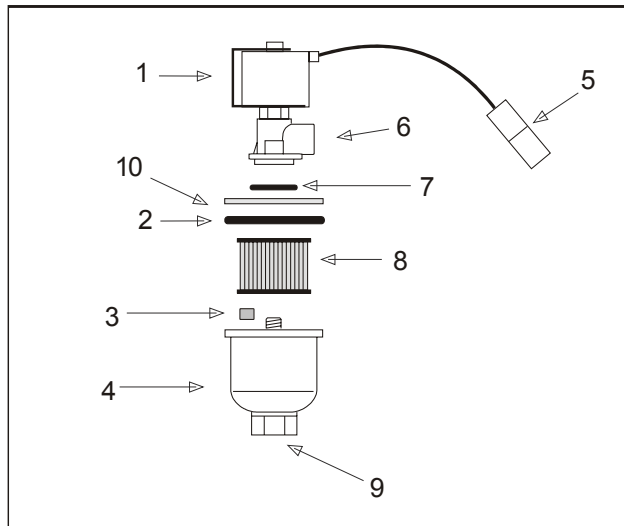

- | | |
|-------------------------------|----------------|
| 1. Electric Lock Off Solenoid | 6. Fuel Outlet |
| 2. Housing Seal | 7. O-ring |
| 3. Filter Magnet | 8. Filter |
| 4. Filter Housing | 9. Fuel Inlet |
| 5. Electrical Connector | 10. Ring |

Figure 1-3. Filter Lock Assembly

REMOVAL

1. Relieve the propane fuel system pressure. Refer to Propane Fuel System Pressure Relief.
2. Disconnect the negative battery cable.
3. Slowly loosen the Filter housing and remove it.
4. Pull the filter housing from the Electric lock off assembly.
5. Remove the filter from the housing.
6. Locate Filter magnet and remove it.
7. Remove and discard the housing seal.
8. Remove and discard the retaining bolt seal.
9. Remove and discard mounting plate to lock off O-ring seal.

INSTALLATION

NOTICE

BE SURE TO REINSTALL THE FILTER MAGNET INTO THE HOUSING BEFORE INSTALLING NEW SEAL.

1. Install the mounting plate to lock off O-ring seal.
2. Install the retaining bolt seal.
3. Install the housing seal.
4. Drop the magnet into the bottom of the filter housing.
5. Install the filter into the housing.
6. Install the retaining bolt into the filter housing.
7. Install the filter up to the bottom of the electric lock off.
8. Tighten the filter bowl retainer to 106 in. lbs. (12 Nm).
9. Open manual shut-off valve. Start the vehicle and leak check the propane fuel system at each serviced fitting.

Propane Fuel System Pressure Relief

CAUTION

THE PROPANE FUEL SYSTEM OPERATES AT PRESSURES UP TO 312 PSI (21.5 BAR). TO MINIMIZE THE RISK OF FIRE AND PERSONAL INJURY, RELIEVE THE PROPANE FUEL SYSTEM PRESSURE (WHERE APPLICABLE) BEFORE SERVICING THE PROPANE FUEL SYSTEM COMPONENTS.

To relieve propane fuel system pressure:

1. Close the manual shut-off valve on the propane fuel tank.
2. Start and run the vehicle until the engine stalls.
3. Turn the ignition switch OFF.

CAUTION

RESIDUAL VAPOR PRESSURE WILL BE PRESENT IN THE FUEL SYSTEM. ENSURE THE WORK AREA IS WELL VENTILATED BEFORE DISCONNECTING ANY FUEL LINE.

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)													
SAE GRADE 5 BOLTS & GRADE 2 NUTS						SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS*							
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load	Torque (Dry)		Torque Lubricated		Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140)		Torque (Loctite® 262™ or Vibra-TITE™ 131)		Torque (Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or K=0.15)
					IN-LB	IN-LB	IN-LB	IN-LB	IN-LB	IN-LB	IN-LB	IN-LB	
4	40	0.1120	0.00604	380	8	0.9	6	0.7					
4.8	48	0.1120	0.00661	420	9	1.0	7	0.8					
6	32	0.1380	0.00909	580	16	1.8	12	1.4					
6	40	0.1380	0.01015	610	18	2.0	13	1.5					
8	32	0.1640	0.01400	900	30	3.4	22	2.5					
8	36	0.1640	0.01474	940	31	3.5	23	2.6					
10	24	0.1900	0.01750	1120	43	4.8	32	3.5					
10	32	0.1900	0.02000	1285	49	5.5	36	4					
1/4	20	0.2500	0.0318	2020	96	10.8	75	9	105	12			
1/4	28	0.2500	0.0364	2320	120	13.5	86	10	135	15			
5/16	18	0.3125	0.0624	3340	17	23	13	18	19	26			
5/16	24	0.3125	0.0680	3700	19	26	14	19	21	29			
3/8	16	0.3750	0.0775	4940	30	41	23	31	35	48			
3/8	24	0.3750	0.0878	5600	35	47	25	34	40	54			
7/16	14	0.4375	0.1063	6800	50	68	35	47	55	75			
7/16	20	0.4375	0.1187	7550	55	75	40	54	60	82			
1/2	13	0.5000	0.1419	9050	75	102	55	75	85	116			
1/2	20	0.5000	0.1599	10700	90	122	65	88	100	136			
9/16	12	0.5625	0.1820	11600	110	149	80	108	120	163			
9/16	18	0.5625	0.2030	12950	120	163	90	122	135	184			
5/8	11	0.6250	0.2280	14400	150	203	110	149	165	224			
5/8	18	0.6250	0.2560	16300	170	230	130	176	190	258			
3/4	10	0.7500	0.3340	21300	260	353	200	285	330	449			
3/4	16	0.7500	0.3730	23800	300	407	220	298	330	449			
7/8	9	0.8750	0.4620	29400	430	583	320	434	475	646			
7/8	14	0.8750	0.5090	32400	470	637	350	475	520	707			
1	8	1.0000	0.6060	38600	640	868	480	651	719	918			
1	12	1.0000	0.6630	42200	700	949	530	719	785	1000			
1 1/8	7	1.1250	0.7630	42300	800	1085	600	813	840	1142			
1 1/8	12	1.1250	0.8560	47500	880	1193	660	895	925	1238			
1 1/4	7	1.2500	0.9690	53800	1120	1518	840	1139	1175	1598			
1 1/4	12	1.2500	1.0730	59600	1240	1681	920	1247	1300	1768			
1 3/8	6	1.3750	1.1550	64100	1460	1979	1100	1491	1525	2074			
1 3/8	12	1.3750	1.3150	73000	1680	2278	1260	1708	1750	2380			
1 1/2	6	1.5000	1.4050	78000	1940	2630	1460	1979	2025	2754			
1 1/2	12	1.5000	1.5800	87700	2200	2983	1640	2224	2300	3128			

NO. 5000059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

REFERENCE JLG THREAD LOCKING COMPOUND		
JLG P/N	Loctite® P/N	ND Industries P/N
		Description
0100011	242™	Vibra-TITE™ 121 Medium Strength (Blue)
0100019	271™	Vibra-TITE™ 140 High Strength (Red)
0100071	262™	Vibra-TITE™ 131 Medium - High Strength (Red)

Values for Magni Coating Fasteners (Ref 4150701)																		
SAE GRADE 5 BOLTS & GRADE 2 NUTS							SAE GRADE 8 (HEX HD) BOLTS & GRADE 8 NUTS*											
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load	Torque (Dry) K=0.17		Torque (Locite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K=0.16		Torque (Locite® 262™ or VIBRA-TITE™ 131) K=0.15		Clamp Load	Torque (Dry or Locite® 263) K=0.17		Torque (Locite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K=0.16		Torque (Locite® 262™ or VIBRA-TITE™ 131) K=0.15		
					IN-LB	IN-LB	IN-LB	IN-LB	IN-LB	IN-LB		IN-LB	IN-LB	IN-LB	IN-LB	IN-LB	IN-LB	IN-LB
4	40	0.1120	0.00604	380	7	0.8												
	48	0.1120	0.00661	420	8	0.9												
6	32	0.1380	0.00909	580	14	1.5												
	40	0.1380	0.01015	610	14	1.6												
8	32	0.1640	0.01400	900	25	2.8					1320							
	36	0.1640	0.01474	940	26	2.9					1580							
10	24	0.1900	0.01750	1120	36	4.1					1800							
	32	0.1900	0.02000	1285	42	4.7					2860							
1/4	20	0.2500	0.0318	2020	86	9.7	80	9			3280							
	28	0.2500	0.0364	2320	99	11.1	95	11										
		In	Sq In		FT-LB	[N.m]	FT-LB	[N.m]			LB	FT-LB	[N.m]	FT-LB	[N.m]			
5/16	18	0.3125	0.0524	3340	15	20	14	19			4720							
	24	0.3125	0.0580	3700	15	20	15	21			5220							
3/8	16	0.3750	0.0775	4940	25	35	25	34			7000							
	24	0.3750	0.0878	5600	30	40	28	38			7900							
7/16	14	0.4375	0.1063	6800	40	55	40	54			9550							
	20	0.4375	0.1187	7550	45	60	44	60			10700							
1/2	13	0.5000	0.1419	9050	65	90	60	82			12750							
	20	0.5000	0.1599	10700	75	100	71	97			14400							
9/16	12	0.5625	0.1820	11600	90	120	87	118			16400							
	18	0.5625	0.2030	12950	105	145	97	132			18250							
5/8	11	0.6250	0.2260	14400	130	175	120	163			20350							
	18	0.6250	0.2560	16300	145	195	136	185			23000							
3/4	10	0.7500	0.3340	21300	225	305	213	290			30100							
	16	0.7500	0.3730	23800	255	345	238	324			33600							
7/8	9	0.8750	0.4620	29400	365	495	343	466			41600							
	14	0.8750	0.5090	32400	400	545	378	514			45800							
1	8	1.0000	0.6060	38600	545	740	515	700			51500							
	12	1.0000	0.6630	42200	600	815	563	765			59700							
1 1/8	7	1.1250	0.7630	42300	675	920	635	863			68700							
	12	1.1250	0.8560	47500	755	1025	713	969			77000							
1 1/4	7	1.2500	0.9690	53800	955	1300	897	1219			87200							
	12	1.2500	1.0730	59600	1055	1435	993	1351			96600							
1 3/8	6	1.3750	1.1550	64100	1250	1700	1175	1598			104000							
	12	1.3750	1.3150	73000	1420	1930	1338	1820			118100							
1 1/2	6	1.5000	1.4050	78000	1660	2260	1560	2122			126500							
	12	1.5000	1.5800	87700	1865	2535	1754	2385			142200							

NO. 500059 REV. K

- NOTES:
1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 3. * ASSEMBLY USES HARDENED WASHER

Figure 1-5. Torque Chart (SAE Fasteners - Sheet 2 of 5)

SOCKET HEAD CAP SCREWS																			
Magni Coating (Ref 4150701)*							Zinc Yellow Chromate Fasteners (Ref 4150707)*												
Size	TPI	Bolt Dia	Tensile Stress Area	Clamp Load See Note 4	Torque (Dry) K = .17		Torque (Locitite® 242™ or 271™ OR Vibra-TITE™ 111 or 140 OR Precoat 85®) K=0.16		Torque (Locitite® 262™ or TITE™ 131) K=0.15		Clamp Load See Note 4		Torque (Dry) K = .20		Torque (Locitite® 242™ or 271™ OR Vibra-TITE™ 111 or 140 OR Precoat 85®) K=0.18		Torque (Locitite® 262™ or TITE™ 131) K=0.15		
					IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]	LB	IN-LB	[N.m]	IN-LB	[N.m]	IN-LB	[N.m]
4																			
		In	Sq In	LB															
		0.1120	0.00604																
		0.1120	0.00661																
		0.1380	0.00909																
		0.1380	0.01015																
		0.1640	0.01400																
		0.1640	0.01474																
		0.1900	0.01750																
		0.1900	0.02000																
1/4		0.2500	0.0318	2860	122	14	114	13				2860	143	16	129	15			
		0.2500	0.0364	3280	139	16	131	15				3280	164	19	148	17			
		In	Sq In	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]	LB	FT-LB	[N.m]	FT-LB	[N.m]	FT-LB	[N.m]		
5/16	18	0.3125	0.0524	4720	20	25	20	25	20	25	4720	25	25	20	25	20	25		
		0.3125	0.0580	5220	25	35	20	25	20	25	5220	35	35	20	35	20	25		
3/8	16	0.3750	0.0775	7000	35	50	35	50	35	50	7000	45	60	40	55	35	50		
		0.3750	0.0878	7900	40	55	40	55	35	50	7900	50	70	45	60	35	50		
7/16	14	0.4375	0.1063	9550	60	80	55	75	50	70	9550	70	95	65	90	50	70		
		0.4375	0.1187	10700	65	90	60	80	60	80	10700	80	110	70	95	60	80		
1/2	13	0.5000	0.1419	12750	90	120	85	115	80	110	12750	105	145	95	130	80	110		
		0.5000	0.1599	14400	100	135	95	130	90	120	14400	120	165	110	150	90	120		
9/16	12	0.5625	0.1820	16400	130	175	125	170	115	155	16400	155	210	140	190	115	155		
		0.5625	0.2030	18250	145	195	135	185	130	175	18250	170	230	155	210	130	175		
5/8	11	0.6250	0.2260	20350	180	245	170	230	160	220	20350	210	285	190	260	160	220		
		0.6250	0.2560	23000	205	280	190	260	180	245	23000	240	325	215	290	180	245		
3/4	10	0.7500	0.3340	30100	320	435	300	300	280	380	30100	375	510	340	460	280	380		
		0.7500	0.3730	33600	355	485	335	455	315	430	33600	420	570	380	515	315	430		
7/8	9	0.8750	0.4620	41600	515	700	485	660	465	620	41600	605	825	545	740	465	620		
		0.8750	0.5090	45800	570	775	535	730	500	680	45800	670	910	600	815	500	680		
1	8	1.0000	0.6060	51500	730	995	685	930	645	875	51500	860	1170	775	1055	645	875		
		1.0000	0.6630	59700	845	1150	795	1080	745	1015	59700	995	1355	895	1215	745	1015		
1 1/8	7	1.1250	0.7630	68700	1035	1490	1030	1400	965	1310	68700	1290	1755	1160	1580	965	1310		
		1.1250	0.8560	77000	1225	1665	1155	1570	1085	1475	77000	1445	1965	1300	1770	1085	1475		
1 1/4	7	1.2500	0.9690	87200	1545	2100	1455	1980	1365	1855	87200	1815	2470	1635	2225	1365	1855		
		1.2500	1.0730	96600	1710	2325	1610	2190	1510	2055	96600	2015	2740	1810	2460	1510	2055		
1 3/8	6	1.3750	1.1550	104000	2025	2755	1905	2590	1785	2430	104000	2385	3245	2145	2915	1785	2430		
		1.3750	1.3150	118100	2300	3130	2165	2945	2030	2760	118100	2705	3680	2435	3310	2030	2760		
1 1/2	6	1.5000	1.4050	126500	2690	3660	2530	3440	2370	3225	126500	3165	4305	2845	3870	2370	3225		
		1.5000	1.5800	142200	3020	4105	2845	3870	2665	3625	142200	3555	4835	3200	4350	2665	3625		

NO. 500059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-6. Torque Chart (SAE Fasteners - Sheet 3 of 5)

Values for Zinc Yellow Chromate Fasteners (Ref 4150707)											
CLASS 8.8 METRIC (HEX/SOCKET HEAD) BOLTS CLASS 8 METRIC NUTS					CLASS 10.9 METRIC (HEX HEAD) BOLTS CLASS 10 METRIC NUTS CLASS 12.9 SOCKET HEAD CAP SCREWS M3 - M5*						
Size	PITCH	Tensile Stress Area	Clamp Load	Torque (Dry or Locite@263™)	Torque (Lub)	Torque (Locite@262™ OR Vibra-TITE™ 131)	Torque (Locite@242™ or 271™ OR Vibra-TITE™ 111 or 140)	Clamp Load	Torque (Dry or Locite@263™) K = 0.20	Torque (Lub OR Locite@242™ or 271™ OR Vibra-TITE™ 111 or 140) K = 0.18	Torque (Locite@262™ OR Vibra-TITE™ 131) K=0.15
		Sq mm	KN	[N.m]	[N.m]	[N.m]	[N.m]	KN	[N.m]	[N.m]	[N.m]
3	0.5	5.03	2.19	1.3	1.0	1.2	1.4	3.13			
3.5	0.6	6.78	2.95	2.1	1.6	1.9	2.3	4.22			
4	0.7	8.78	3.82	3.1	2.3	2.8	3.4	5.47			
5	0.8	14.20	6.18	6.2	4.6	5.6	6.8	8.85			
6	1	20.10	8.74	11	7.9	9.4	12	12.5			
7	1	28.90	12.6	18	13	16	19	18.0	25	23	19
8	1.25	36.60	15.9	26	19	23	28	22.8	37	33	27
10	1.5	58.00	25.2	50	38	45	55	36.1	70	65	55
12	1.75	84.30	36.7	88	66	79	97	52.5	125	115	95
14	2	115	50.0	140	105	126	154	71.6	200	180	150
16	2	157	68.3	219	164	197	241	97.8	315	280	235
18	2.5	192	83.5	301	226	271	331	119.5	430	385	325
20	2.5	245	106.5	426	320	383	469	152.5	610	550	460
22	2.5	303	132.0	581	436	523	639	189.0	830	750	625
24	3	353	153.5	737	553	663	811	222.0	1065	960	800
27	3	459	198.5	1080	810	970	1130	286.0	1545	1390	1160
30	3.5	561	244.0	1460	1100	1320	1530	349.5	2095	1885	1575
33	3.5	694	302.0	1990	1490	1790	2090	432.5	2855	2570	2140
36	4	817	355.5	2560	1920	2300	2690	509.0	3665	3300	2750
42	4.5	1120	487.0	4090	3070	3680	4290	698.0	5865	5275	4395

NO. 5000059 REV. K

NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-7. Torque Chart (METRIC Fasteners - Sheet 4 of 5)

Values for Magni Coated Fasteners (Ref 4150701)										
CLASS 8.8 METRIC (HEX/SOCKET HEAD) BOLTS CLASS 8 METRIC NUTS					CLASS 10.9 METRIC (HEX HEAD) BOLTS CLASS 10 METRIC NUTS CLASS 12.9 SOCKET HEAD CAP SCREWS M6 AND ABOVE*					
Size	PITCH	Tensile Stress Area	Clamp Load	Torque (Dry or Loctite® 263™, K=0.17)	Torque (Loctite® 262™ OR Vibra-TITE™, 131) K=0.16	Torque (Loctite® 242™ or 271™ OR Vibra-TITE™, 111 or 140) K=0.15	Clamp Load	Torque (Dry or Loctite® 263™, K = 0.17)	Torque (Lub OR Loctite® 242™ or 271™ OR Vibra-TITE™ 111 or 140) K= 0.16	Torque (Loctite® 262™ OR Vibra-TITE™, 131) K=0.15
		Sq mm	KN	[N.m]	[N.m]	[N.m]	KN	[N.m]	[N.m]	[N.m]
3	0.5	5.03	2.19	1.1	1.1	1.0	3.13			
3.5	0.6	6.78	2.95	1.8	1.7	1.5	4.22			
4	0.7	8.78	3.82	2.6	2.4	2.3	5.47			
5	0.8	14.20	6.18	5.3	4.9	4.6	8.85			
6	1	20.10	8.74	9	8.4	7.9	12.5	13	12	11
7	1	28.90	12.6	15	14	13	18.0	21	20	19
8	1.25	36.60	15.9	22	20	19	22.8	31	29	27
10	1.5	58.00	25.2	43	40	38	36.1	61	58	55
12	1.75	84.30	36.7	75	70	66	52.5	105	100	95
14	2	115	50.0	119	110	105	71.6	170	160	150
16	2	157	68.3	186	175	165	97.8	265	250	235
18	2.5	192	83.5	256	240	225	119.5	365	345	325
20	2.5	245	106.5	362	340	320	152.5	520	490	460
22	2.5	303	132.0	494	465	435	189.0	705	665	625
24	3	353	153.5	627	590	555	222.0	905	850	800
27	3	459	199.5	916	860	810	286.0	1315	1235	1160
30	3.5	561	244.0	1245	1170	1100	349.5	1780	1680	1575
33	3.5	694	302.0	1694	1595	1495	432.5	2425	2285	2140
36	4	817	355.5	2176	2050	1920	509.0	3115	2930	2750
42	4.5	1120	487.0	3477	3275	3070	698.0	4985	4690	4395

NO. 5000059 REV. K

- NOTES: 1. THESE TORQUE VALUES DO NOT APPLY TO CADMIUM PLATED FASTENERS
 2. ALL TORQUE VALUES ARE STATIC TORQUE MEASURED PER STANDARD AUDIT METHODS TOLERANCE = ±10%
 *3. ASSEMBLY USES HARDENED WASHER OR FASTENER IS PLACED AGAINST PLATED STEEL OR RAW ALUMINUM
 4. CLAMP LOAD LISTED FOR SHCS IS SAME AS GRADE 8 OR CLASS 10.9 AND DOES NOT REPRESENT FULL STRENGTH CAPABILITY OF SHCS. IF HIGHER LOAD IS REQUIRED, ADDITIONAL TESTING IS REQUIRED.

Figure 1-8. Torque Chart (METRIC Fasteners - Sheet 5 of 5)

SECTION 2. GENERAL

2.1 MACHINE PREPARATION, INSPECTION, AND MAINTENANCE

General

This section provides the necessary information needed by those personnel that are responsible to place the machine in operation readiness and maintain its safe operating condition. For maximum service life and safe operation, ensure that all the necessary inspections and maintenance have been completed before placing the machine into service. With proper care, maintenance and inspections performed per JLG's recommendations with any and all discrepancies corrected, this product will be fit for continued use.

Preparation, Inspection, and Maintenance

It is important to establish and conform to a comprehensive inspection and preventive maintenance program. The following table outlines the periodic machine inspections and maintenance recommended by JLG Industries, Inc. Consult your national, regional, or local regulations for further requirements for aerial work platforms. The frequency of inspections and maintenance must be increased as environment, severity and frequency of usage requires.

Pre-Start Inspection

It is the User's or Operator's primary responsibility to perform a Pre-Start Inspection of the machine prior to use daily or at each change of operator. Reference the Operator's and Safety Manual for completion procedures for the Pre-Start Inspection. The Operator and Safety Manual must be read in its entirety and understood prior to performing the Pre-Start Inspection.

Pre-Delivery Inspection and Frequent Inspection

The Pre-Delivery Inspection and Frequent Inspection shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

The Pre-Delivery Inspection and Frequent Inspection procedures are performed in the same manner, but at different times. The Pre-Delivery Inspection shall be performed prior to each sale, lease, or rental delivery. The Frequent Inspection shall be accomplished for each machine in service for 3 months or 150 hours (whichever comes first); out of service for a period of more than 3 months; or when purchased used. The frequency of this inspection must be increased as environment, severity and frequency of usage requires.

Reference the JLG Pre-Delivery and Frequent Inspection Form and the Inspection and Preventive Maintenance Schedule for items requiring inspection during the performance of these inspections. Reference the appropriate areas of this manual for servicing and maintenance procedures.

Annual Machine Inspection

The Annual Machine Inspection must be performed on an annual basis, no later than thirteen (13) months from the date of the prior Annual Machine Inspection. JLG Industries recommends this task be performed by a Factory-Trained Service Technician. JLG Industries, Inc. recognizes a Factory-Trained Service Technician as a person who has successfully completed the JLG Service Training School for the subject JLG product model. Reference the machine Service and Maintenance Manual and appropriate JLG inspection form for performance of this inspection.

Reference the JLG Annual Machine Inspection Form and the Inspection and Preventive Maintenance Schedule for items requiring inspection during the performance of this inspection. Reference the appropriate areas of this manual for servicing and maintenance procedures.

For the purpose of receiving safety-related bulletins, it is important that JLG Industries, Inc. has updated ownership information for each machine. When performing each Annual Machine Inspection, notify JLG Industries, Inc. of the current machine ownership.

Preventative Maintenance

In conjunction with the specified inspections, maintenance shall be performed by a qualified JLG equipment mechanic. JLG Industries, Inc. recognizes a qualified JLG equipment mechanic as a person who, by possession of a recognized degree, certificate, extensive knowledge, training, or experience, has successfully demonstrated the ability and proficiency to service, repair, and maintain the subject JLG product model.

Reference the Preventive Maintenance Schedule and the appropriate areas of this manual for servicing and maintenance procedures. The frequency of service and maintenance must be increased as environment, severity and frequency of usage requires.

Table 2-1. Inspection and Maintenance

Type	Frequency	Primary Responsibility	Service Qualification	Reference
Pre-Start Inspection	Before using each day; or whenever there's an Operator change.	User or Operator	User or Operator	Operator and Safety Manual
Pre-Delivery Inspection (See Note)	Before each sale, lease, or rental delivery.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form.
Frequent Inspection (See Note)	In service for 3 months or 150 hours, whichever comes first; or Out of service for a period of more than 3 months; or purchased used.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual and applicable JLG inspection form.
Annual Machine Inspection (See Note)	Annually, no later than 13 months from the date of the prior inspection.	Owner, Dealer, or User	Factory Trained Service Technician (Recommended)	Service and Maintenance Manual and applicable JLG inspection form.
Preventative Maintenance	At intervals as specified in the Service and Maintenance Manual.	Owner, Dealer, or User	Qualified JLG Mechanic	Service and Maintenance Manual

NOTE: Inspections forms are available from JLG. Use the Service and Maintenance Manual to perform inspections.

2.2 SERVICE AND GUIDELINES

General

The following information is provided to assist you in the use and application of servicing and maintenance procedures contained in this book.

Safety and Workmanship

Your safety, and that of others, is the first consideration when engaging in the maintenance of equipment. Always be conscious of weight. Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. When raising a portion of the equipment, ensure that adequate support is provided.

Cleanliness

1. The most important single item in preserving the long service life of a machine is to keep dirt and foreign materials out of the vital components. Precautions have been taken to safeguard against this. Shields, covers, seals, and filters are provided to keep air, fuel, and oil supplies clean; however, these items must be maintained on a scheduled basis in order to function properly.
2. At any time when air, fuel, or oil lines are disconnected, clear adjacent areas as well as the openings and fittings themselves. As soon as a line or component is disconnected, cap or cover all openings to prevent entry of foreign matter.
3. Clean and inspect all parts during servicing or maintenance, and assure that all passages and openings are

unobstructed. Cover all parts to keep them clean. Be sure all parts are clean before they are installed. New parts should remain in their containers until they are ready to be used.

Components Removal and Installation

1. Use adjustable lifting devices, whenever possible, if mechanical assistance is required. All slings (chains, cables, etc.) should be parallel to each other and as near perpendicular as possible to top of part being lifted.
2. Should it be necessary to remove a component on an angle, keep in mind that the capacity of an eyebolt or similar bracket lessens, as the angle between the supporting structure and the component becomes less than 90 degrees.
3. If a part resists removal, check to see whether all nuts, bolts, cables, brackets, wiring, etc., have been removed and that no adjacent parts are interfering.

Component Disassembly and Reassembly

When disassembling or reassembling a component, complete the procedural steps in sequence. Do not partially disassemble or assemble one part, then start on another. Always recheck your work to assure that nothing has been overlooked. Do not make any adjustments, other than those recommended, without obtaining proper approval.

Pressure-Fit Parts

When assembling pressure-fit parts, use a molybdenum disulfide base compound or equivalent to lubricate the mating surface.

Bearings

1. When a bearing is removed, cover it to keep out dirt and abrasives. Clean bearings in nonflammable cleaning solvent and allow to drip dry. Compressed air can be used but do not spin the bearing.
2. Discard bearings if the races and balls (or rollers) are pitted, scored, or burned.
3. If bearing is found to be serviceable, apply a light coat of oil and wrap it in clean (waxed) paper. Do not unwrap reusable or new bearings until they are ready to install.
4. Lubricate new or used serviceable bearings before installation. When pressing a bearing into a retainer or bore, apply pressure to the outer race. If the bearing is to be installed on a shaft, apply pressure to the inner race.

Gaskets

Check that holes in gaskets align with openings in the mating parts. If it becomes necessary to hand-fabricate a gasket, use gasket material or stock of equivalent material and thickness. Be sure to cut holes in the right location, as blank gaskets can cause serious system damage.

Bolt Usage and Torque Application

NOTICE

SELF LOCKING FASTENERS, SUCH AS NYLON INSERT AND THREAD DEFORMING LOCKNUTS, ARE NOT INTENDED TO BE REINSTALLED AFTER REMOVAL.

1. Always use new replacement hardware when installing locking fasteners. Use bolts of proper length. A bolt which is too long will bottom before the head is tight against its related part. If a bolt is too short, there will not be enough thread area to engage and hold the part properly. When replacing bolts, use only those having the same specifications of the original, or one which is equivalent.
2. Unless specific torque requirements are given within the text, standard torque values should be used on heat-treated bolts, studs, and steel nuts, in accordance with recommended shop practices. (See Torque Chart Section 1).

Hydraulic Lines and Electrical Wiring

Clearly mark or tag hydraulic lines and electrical wiring, as well as their receptacles, when disconnecting or removing them from the unit. This will assure that they are correctly reinstalled.

Hydraulic System

1. Keep the system clean. If evidence of metal or rubber particles are found in the hydraulic system, drain and flush the entire system.
2. Disassemble and reassemble parts on clean work surface. Clean all metal parts with non-flammable cleaning solvent. Lubricate components, as required, to aid assembly.

Lubrication

Service applicable components with the amount, type, and grade of lubricant recommended in this manual, at the specified intervals. When recommended lubricants are not available, consult your local supplier for an equivalent that meets or exceeds the specifications listed.

Battery

Clean battery using a non-metallic brush and a solution of baking soda and water. Rinse with clean water. After cleaning, thoroughly dry battery and coat terminals with an anti corrosion compound.

Lubrication and Servicing

Components and assemblies requiring lubrication and servicing are shown in the Lubrication Chart in Section 1.

2.3 LUBRICATION AND INFORMATION

Hydraulic System

1. The primary enemy of a hydraulic system is contamination. Contaminants enter the system by various means, e.g., using inadequate hydraulic oil, allowing moisture, grease, filings, sealing components, sand, etc., to enter when performing maintenance, or by permitting the pump to cavitate due to insufficient system warm-up or leaks in the pump supply (suction) lines.
2. The design and manufacturing tolerances of the component working parts are very close, therefore, even the smallest amount of dirt or foreign matter entering a system can cause wear or damage to the components and generally results in faulty operation. Every precaution must be taken to keep hydraulic oil clean, including reserve oil in storage. Hydraulic system filters should be checked, cleaned, and/or replaced as necessary, at the specified intervals required in the Lubrication Chart in Section 1. Always examine filters for evidence of metal particles.
3. Cloudy oils indicate a high moisture content which permits organic growth, resulting in oxidation or corrosion. If this condition occurs, the system must be drained, flushed, and refilled with clean oil.

4. It is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. Good grade mineral oils, with viscosities suited to the ambient temperatures in which the machine is operating, are recommended for use.

NOTE: *Metal particles may appear in the oil or filters of new machines due to the wear-in of meshing components.*

Hydraulic Oil

1. Refer to Section 1 for recommendations for viscosity ranges.
2. JLG recommends Mobilfluid 424 hydraulic oil, which has an SAE viscosity of 10W-30 and a viscosity index of 152.

NOTE: *Start-up of hydraulic system with oil temperatures below -15 degrees F (-26 degrees C) is not recommended. If it is necessary to start the system in a sub-zero environment, it will be necessary to heat the oil with a low density, 100VAC heater to a minimum temperature of -15 degrees F (-26 degrees C).*

3. The only exception to the above is to drain and fill the system with Mobil DTE 10 oil or its equivalent. This will allow start up at temperatures down to -20 degrees F (-29 degrees C). However, use of this oil will give poor performance at temperatures above 120 degrees F (49 degrees C). Systems using DTE 10 oil should not be operated at temperatures above 200 degrees F (94 degrees C) under any condition.

Changing Hydraulic Oil

1. Filter elements must be changed after the first 50 hours of operation and every 300 hours (unless specified otherwise) thereafter. If it is necessary to change the oil, use only those oils meeting or exceeding the specifications appearing in this manual. If unable to obtain the same type of oil supplied with the machine, consult local supplier for assistance in selecting the proper equivalent. Avoid mixing petroleum and synthetic base oils.
2. Use every precaution to keep the hydraulic oil clean. If the oil must be poured from the original container into another, be sure to clean all possible contaminants from the service container. Always clean the mesh element of the filter and replace the cartridge any time the system oil is changed.
3. While the unit is shut down, a good preventive maintenance measure is to make a thorough inspection of all hydraulic components, lines, fittings, etc., as well as a functional check of each system, before placing the machine back in service.

Lubrication Specifications

Specified lubricants, as recommended by the component manufacturers, are always the best choice, however, multi-purpose greases usually have the qualities which meet a variety of single purpose grease requirements. Should any question arise, regarding the use of greases in maintenance stock, consult your local supplier for evaluation. Refer to Section 1 for an explanation of the lubricant key designations appearing in the Lubrication Chart.

2.4 CYLINDER DRIFT TEST

Theory

When a hydraulic cylinder is supporting a load, cylinder drift may occur as a result of any of the circumstances below:

- Normal leakage of load holding valves or malfunction of load holding valves. See Cylinder Leakage Test and "Cylinder Drift" below for evaluation.
- Damaged or worn piston seals.
- Normal thermal expansion or contraction of the hydraulic oil within cylinders (See Cylinder Thermal Drift below).

The first two circumstances may result in cylinder movement due to oil leaking out of the cylinder externally or by leaking back to tank or due to oil leaking internally from one cylinder chamber to the other.

Thermal expansion or contraction of oil in hydraulic cylinders is a normal occurrence and does not result in oil leaking out of the cylinder or leaking internally from one cylinder chamber to the other. Thermal expansion or contraction is the tendency for materials to change size in response to a change in temperature.

Cylinder Leakage Test

Cylinder oil must be at stabilized ambient temperature before beginning this test.

Measure drift at cylinder rod with a calibrated dial indicator.

In an area free of obstructions, cylinder must have load applied and appropriately positioned to detect drift.

Cylinder leakage is acceptable if it passes this test.

Table 2-2. Cylinder Drift

Cylinder Bore Diameter		Max. Acceptable Drift in 10 Minutes	
inches	mm	inches	mm
3	76.2	0.026	0.66
3.5	89	0.019	0.48
4	101.6	0.015	0.38
5	127	0.009	0.22
6	152.4	0.006	0.15
7	177.8	0.005	0.13
8	203.2	0.004	0.10
9	228.6	0.003	0.08

NOTE: The information is based on 6 drops per minute cylinder leakage.

Cylinder Thermal Drift

The oil in all hydraulic cylinders will expand or contract due to thermal effects over time and may result in changes to the boom and/or platform position while the machine is stationary. These effects occur as the cylinder oil changes temperature, usually from a higher oil temperature as it cools and approaches the ambient air temperature. Results of these effects are related to several factors including cylinder length and change in temperature over the time the cylinder remains stationary.

2.5 PINS AND COMPOSITE BEARING REPAIR GUIDELINES

Filament wound bearings.

1. Pinned joints should be disassembled and inspected if the following occurs:
 - a. Excessive sloppiness in joints.
 - b. Noise originating from the joint during operation.
2. Filament wound bearings should be replaced if any of the following is observed:
 - a. Frayed or separated fibers on the liner surface.
 - b. Cracked or damaged liner backing.
 - c. Bearings that have moved or spun in their housing.
 - d. Debris embedded in liner surface.
3. Pins should be replaced if any of the following is observed (pin should be properly cleaned prior to inspection):
 - a. Detectable wear in the bearing area.
 - b. Flaking, peeling, scoring, or scratches on the pin surface.
 - c. Rusting of the pin in the bearing area.
4. Re-assembly of pinned joints using filament wound bearings.
 - a. Housing should be blown out to remove all dirt and debris. Bearings and bearing housings must be free of all contamination.
 - b. Bearing/pins should be cleaned with a solvent to remove all grease and oil. Filament wound bearing are a dry joint and should not be lubricated unless otherwise instructed (i.e. sheave pins).
 - c. Pins should be inspected to ensure it is free of burrs, nicks, and scratches which would damage the bearing during installation and operation.

2.6 WELDING ON JLG EQUIPMENT

NOTE: This instruction applies to repairs, or modifications to the machine and to welding performed from the machine on an external structure, or component.

Do the Following When Welding on JLG Equipment

- Disconnect the battery.
- Disconnect the moment pin connection (where fitted).
- Ground only to structure being welded.

Do NOT Do the Following When Welding on JLG Equipment

- Ground on frame and weld on any other area than the chassis.
- Ground on turntable and weld on any other area than the turntable.
- Ground on the platform/support and weld on any other area than the platform/support.
- Ground on a specific boom section and weld on any other area than that specific boom section.
- Allow pins, wear pads, wire ropes, bearings, gearing, seals, valves, electrical wiring, or hoses to be between the grounding position and the welded area.

NOTICE

FAILURE TO COMPLY WITH THE ABOVE REQUIREMENTS MAY RESULT IN COMPONENT DAMAGE (I.E. ELECTRONIC MODULES, SWING BEARING, COLLECTOR RING, BOOM WIRE ROPES ETC.).

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	INTERVAL		
	Pre-Delivery ¹ or Frequent ² Inspection	Annual ³ (Yearly) Inspection	Every 2 Years
Boom Assembly			
Boom Weldments	1,2,4	1,2,4	
Hose/Cable Carrier Installations	1,2,9,12	1,2,9,12	
Pivot Pins and Pin Retainers	1,2	1,2	
Sheaves, Sheave Pins	1,2	1,2	
Bearings	1,2	1,2	
Wear Pads	1,2	1,2	
Covers or Shields	1,2	1,2	
Extend/Retract Chain or Cable Systems	1,2,3	1,2,3	
Boom Assembly	1,2,3,4,5	1,2,3,4,5,7,9,14	
Platform Assembly			
Platform		1,2	
Railing	1	1,2	
Gate	1,5	1,5	
Floor	1	1,2	
Rotator	5,9,15	5,9,15	
Lanyard Anchorage Point	1,2,10	1,2,10	
Turntable Assembly			
Swing Bearing or Worm Gear	1,2,14	1,2,3,13,14	
Oil Coupling	9	9	
Swing Drive System	11	11	
Turntable Lock	1,2,5	1,2,5	
Hood, Hood Props, Hood Latches	5	1,2,5	
Chassis Assembly			
Tires	16,17,18	16,17,18	
Wheel Nuts/Bolts	15	15	
Wheel Bearings			14,24
Oscillating Axle/Lockout Cylinder Systems	5,8	5,8	
Extendable Axle Systems	5,8	5,8	
Steer Components	1,2	1,2	
Spindle Thrust Bearing/Washers	1,2	1,2	
Drive Hubs	11	11	

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	INTERVAL		
	Pre-Delivery ¹ or Frequent ² Inspection	Annual ³ (Yearly) Inspection	Every 2 Years
Functions/Controls			
Platform Controls	5,6	6	
Ground Controls	5,6	6	
Function Control Locks, Guards, or Detents	1,5	5	
Footswitch	5	5	
Emergency Stop Switches (Ground & Platform)	5	5	
Function Limit or Cutout Switch Systems	5	5	
Drive Brakes	5	5	
Swing Brakes	5	5	
Auxiliary Power	5	5	
Power System			
Engine Idle, Throttle, and RPM	3	3	
Engine Fluids (Oil, Coolant, Fuel)	9,11	11	
Air/Fuel Filter	1,7	7	
Exhaust System	1,9	9	
Batteries	1,9	19	
Battery Fluid	11	11	
Battery Charger	5	5	
Fuel Reservoir, Cap, and Breather	1,2,5	1,5	
Hydraulic/Electric System			
Hydraulic Pumps	1,2,9	1,2,9	
Hydraulic Cylinders	1,2,7,9	1,2,9	
Cylinder Attachment Pins and Pin Retainers	1,2,9	1,2	
Hydraulic Hoses, Lines, and Fittings	1,2,9,12	1,2,9,12	
Hydraulic Reservoir, Cap, and Breather	1,2,5,9	1,5	24
Hydraulic Filter	1,7,9	7	
Hydraulic Fluid	7,11	7,11	
Electrical Connections	1,20	20	
Instruments, Gauges, Switches, Lights, Horn	1	5,23	
General			
Operation and Safety Manuals in Storage Box	21	21	
ANSI and AEM Manuals/Handbooks Installed (ANSI Markets Only)		21	
Capacity Decals Installed, Secure, Legible	21	21	
All Decals/Placards Installed, Secure, Legible	21	21	

Table 2-3. Inspection and Preventive Maintenance Schedule

AREA	INTERVAL		
	Pre-Delivery ¹ or Frequent ² Inspection	Annual ³ (Yearly) Inspection	Every 2 Years
Annual Machine Inspection Due		21	
No Unauthorized Modifications or Additions	21	21	
All Relevant Safety Publications Incorporated	21	21	
General Structural Condition and Welds	2,4	2,4	
All Fasteners, Pins, Shields, and Covers	1,2	1,2	
Grease and Lubricate to Specifications	22	22	
Function Test of All Systems	21	21,22	
Paint and Appearance	7	7	
Stamp Inspection Date on Frame		22	
Notify JLG of Machine Ownership		22	
Footnotes:			
¹ Prior to each sale, lease, or delivery			
² In service for 3 months or 150 Hours; or Out of service for 3 months or more; or Purchased used			
³ Annually, no later than 13 months from the date of the prior inspection			
Performance Codes:			
1 - Check for proper and secure installation			
2 - Visual inspection for damage, cracks, distortion or excessive wear			
3 - Check for proper adjustment			
4 - Check for cracked or broken welds			
5 - Operates Properly			
6 - Returns to neutral or "off" position when released			
7 - Clean and free of debris			
8 - Interlocks function properly			
9 - Check for signs of leakage			
10 - Decals installed and legible			
11 - Check for proper fluid level			
12 - Check for chafing and proper routing			
13 - Check for proper tolerances			
14 - Properly lubricated			
15 - Torqued to proper specification			
16 - No gouges, excessive wear, or cords showing			
17 - Properly inflated and seated around rim			
18 - Proper and authorized components			
19 - Fully charged			
20 - No loose connections, corrosion, or abrasions			
21 - Verify			
22 - Perform			
23 - Sealed Properly			
24 - Drain, Clean, Refill			

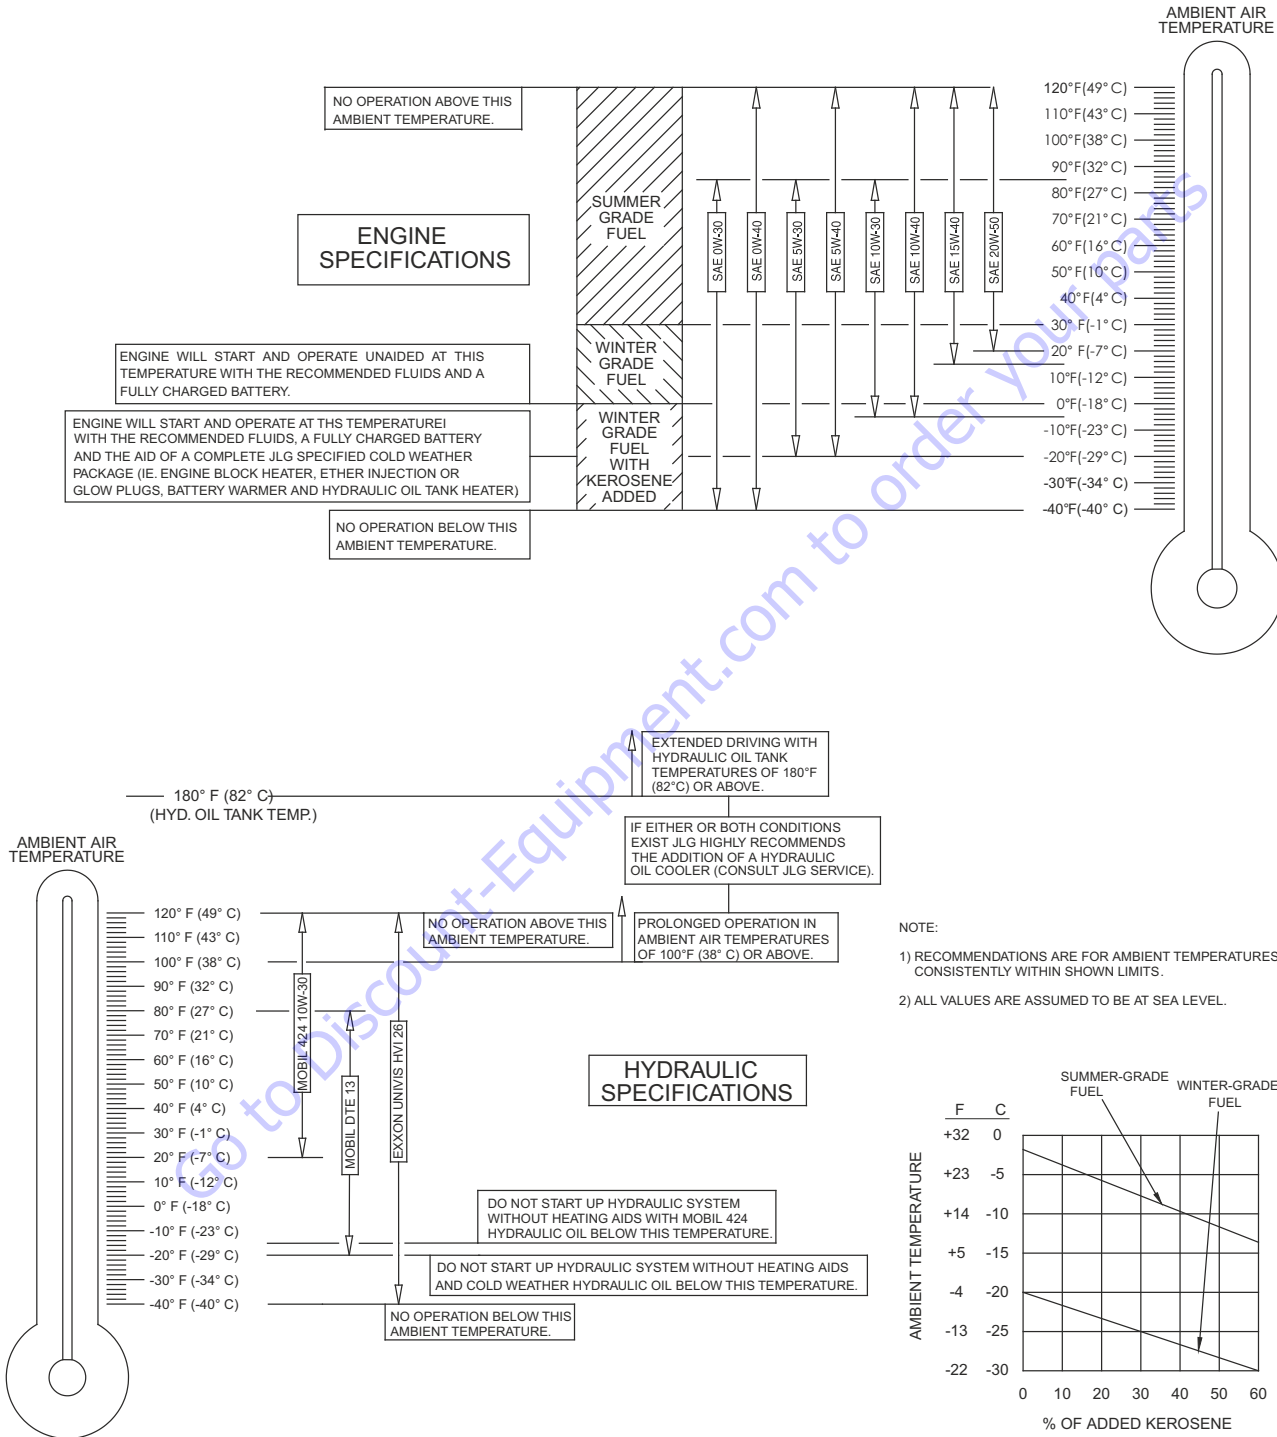


Figure 2-1. Engine Operating Temperature Specifications - Deutz

4150548 E

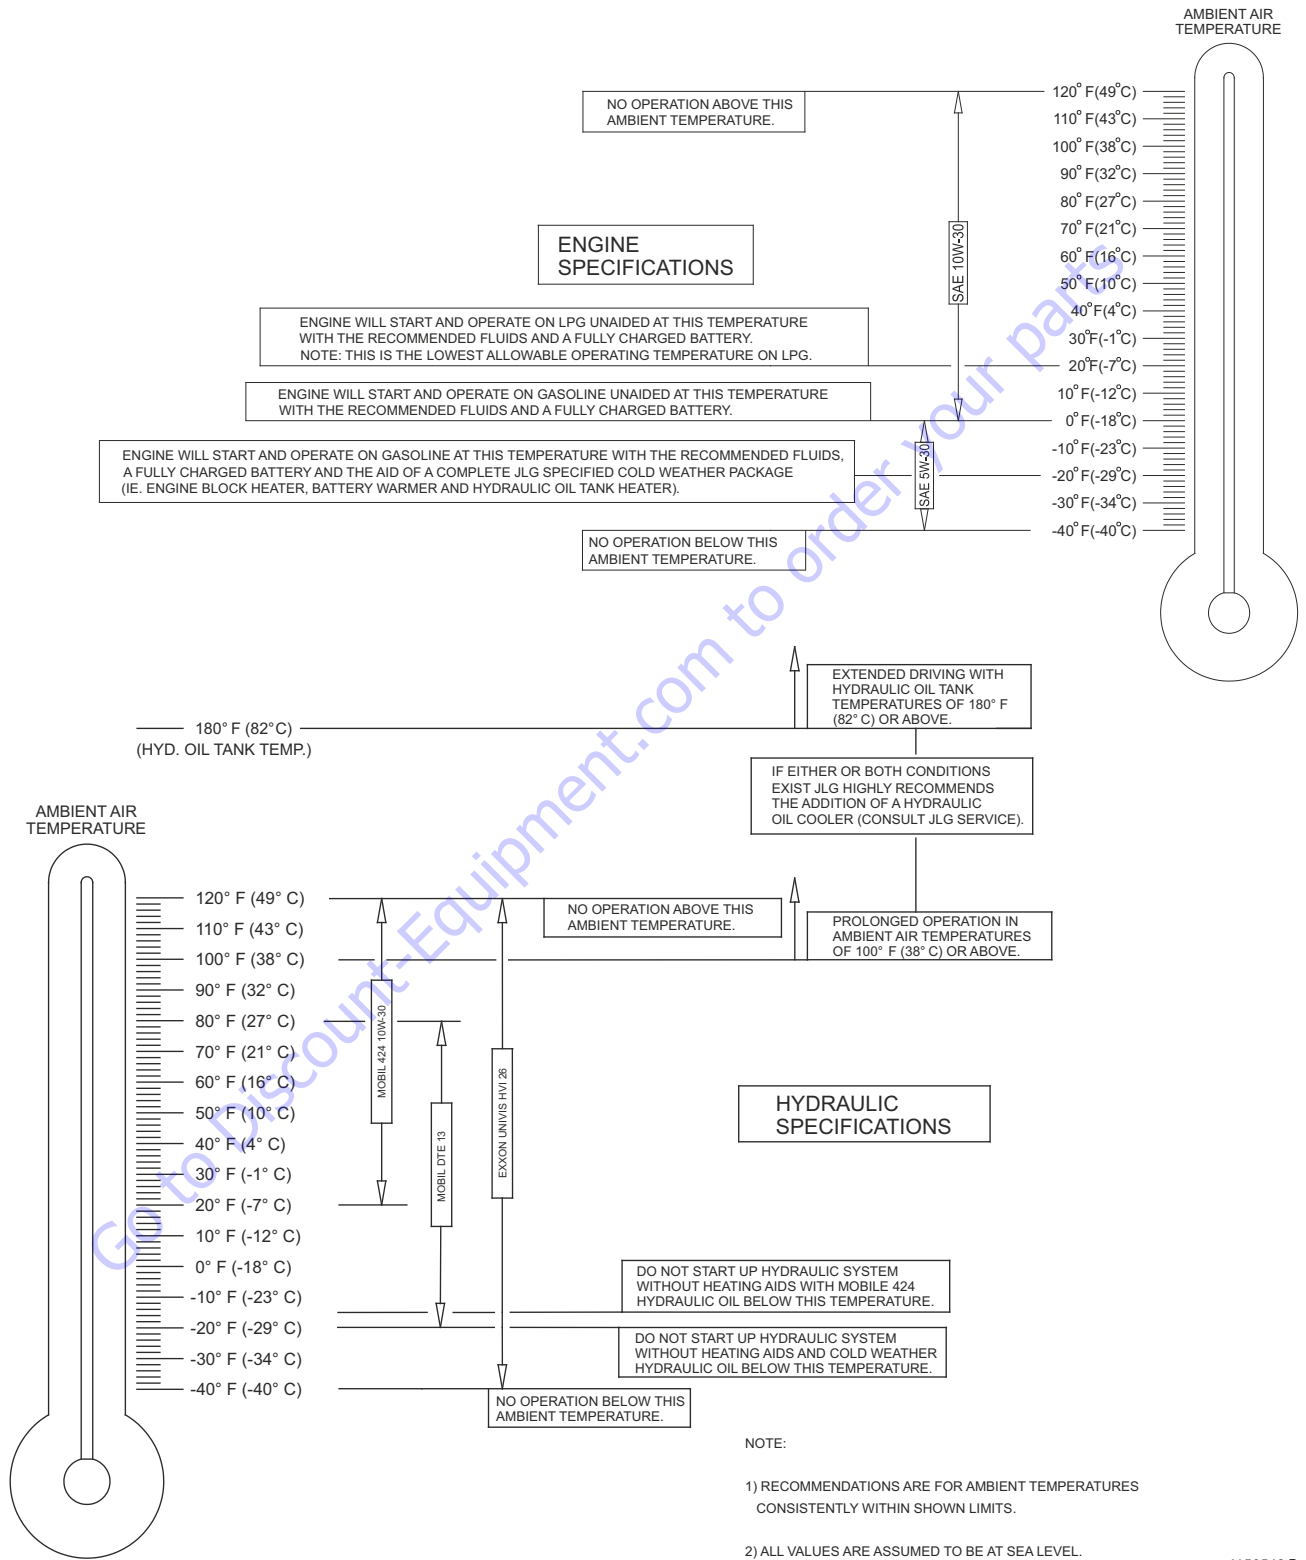


Figure 2-2. Engine Operating Temperature Specifications - GM

PARTS FINDER

**Search Website
by Part Number**



**Search Manual
Library For Parts
Manual & Lookup Part
Numbers – Purchase
or Request Quote**

Search Manuals

Enter the model number and serial number to search for parts.

* Brand:

* Model:

* Serial:

SEARCH

**Can't Find Part or
Manual? Request Help
by Manufacturer,
Model & Description**

Parts Order Form

Please fill in the following information:

Manufacturer:

Model:

Description:

Quantity:

Part Number:

Part Name:

Part Description:

Part Category:

Part Location:

Part Status:

Part Color:

Part Material:

Part Weight:

Part Dimensions:

Part Notes:

Submit

Discount-Equipment.com is your online resource for quality parts & equipment.

Florida: **561-964-4949** Outside Florida TOLL FREE: **877-690-3101**

Need parts?

Click on this link: <http://www.discount-equipment.com/category/5443-parts/> and choose one of the options to help get the right parts and equipment you are looking for. Please have the machine model and serial number available in order to help us get you the correct parts. If you don't find the part on the website or on once of the online manuals, please fill out the request form and one of our experienced staff members will get back to you with a quote for the right part that your machine needs.

We sell worldwide for the brands: Genie, Terex, JLG, MultiQuip, Mikasa, Essick, Whiteman, Mayco, Toro Stone, Diamond Products, Generac Magnum, Airman, Haulotte, Barreto, Power Blanket, Nifty Lift, Atlas Copco, Chicago Pneumatic, Allmand, Miller Curber, Skyjack, Lull, Skytrak, Tsurumi, Husquvarna Target, , Stow, Wacker, Sakai, Mi-T- M, Sullair, Basic, Dynapac, MBW, Weber, Bartell, Bennar Newman, Haulotte, Ditch Runner, Menegotti, Morrison, Contec, Buddy, Crown, Edco, Wyco, Bomag, Laymor, Barreto, EZ Trench, Bil-Jax, F.S. Curtis, Gehl Pavers, Heli, Honda, ICS/PowerGrit, IHI, Partner, Imer, Clipper, MMD, Koshin, Rice, CH&E, General Equipment, ,AMida, Coleman, NAC, Gradall, Square Shooter, Kent, Stanley, Tamco, Toku, Hatz, Kohler, Robin, Wisconsin, Northrock, Oztec, Toker TK, Rol-Air, Small Line, Wanco, Yanmar

SECTION 3. CHASSIS & TURNTABLE

3.1 TIRES & WHEELS

Tire Inflation

The air pressure for pneumatic tires must be equal to the air pressure that is stenciled on the side of the JLG product or rim decal for safe and proper operational characteristics.

Tire Damage

For pneumatic tires, JLG Industries, Inc. recommends that when any cut, rip, or tear is discovered that exposes sidewall or tread area cords in the tire, measures must be taken to remove the JLG product from service immediately. Arrangements must be made for replacement of the tire or tire assembly.

For polyurethane foam filled tires, JLG Industries, Inc. recommends that when any of the following are discovered, measures must be taken to remove the JLG product from service immediately and arrangements must be made for replacement of the tire or tire assembly.

- a smooth, even cut through the cord plies which exceeds 3 in. (7.5 cm) in total length.
- any tears or rips (ragged edges) in the cord plies which exceeds 1 in. (2.5 cm) in any direction.
- any punctures which exceed 1 in. in diameter.
- any damage to the bead area cords of the tire.

If a tire is damaged but is within the above noted criteria, the tire must be inspected on a daily basis to insure the damage has not propagated beyond the allowable criteria.

Tire Replacement

JLG recommends a replacement tire be the same size, ply and brand as originally installed on the machine. Please refer to the JLG Parts Manual for the part number of the approved tires for a particular machine model. If not using a JLG approved replacement tire, we recommend that replacement tires have the following characteristics:

- Equal or greater ply/load rating and size of original.
- Tire tread contact width equal or greater than original.
- Wheel diameter, width, and offset dimensions equal to the original.
- Approved for the application by the manufacturer (including inflation pressure and maximum tire load).

Unless specifically approved by JLG Industries Inc. do not replace a foam filled or ballast filled tire assembly with a pneumatic tire. When selecting and installing a replacement tire, ensure that all tires are inflated to the pressure recommended by JLG. Due to size variations between tire brands, both tires on the same axle should be the same.

Wheel Replacement

The rims installed on each product model have been designed for stability requirements which consist of track width, tire pressure, and load capacity. Size changes such as rim width, center piece location, larger or smaller diameter, etc., without written factory recommendations, may result in an unsafe condition regarding stability.

Wheel Installation

It is extremely important to apply and maintain proper wheel mounting torque.


WARNING

WHEEL NUTS MUST BE INSTALLED AND MAINTAINED AT THE PROPER TORQUE TO PREVENT LOOSE WHEELS, BROKEN STUDS, AND POSSIBLE DANGEROUS SEPARATION OF WHEEL FROM THE AXLE. BE SURE TO USE ONLY THE NUTS MATCHED TO THE CONE ANGLE OF THE WHEEL.

Tighten the lug nuts to the proper torque to prevent wheels from coming loose. Use a torque wrench to tighten the fasteners. If you do not have a torque wrench, tighten the fasteners with a lug wrench, then immediately have a service garage or dealer tighten the lug nuts to the proper torque. Over-tightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels. The proper procedure for attaching wheels is as follows:

1. Start all nuts by hand to prevent cross threading. DO NOT use a lubricant on threads or nuts.

2. Tighten nuts in the following sequence:

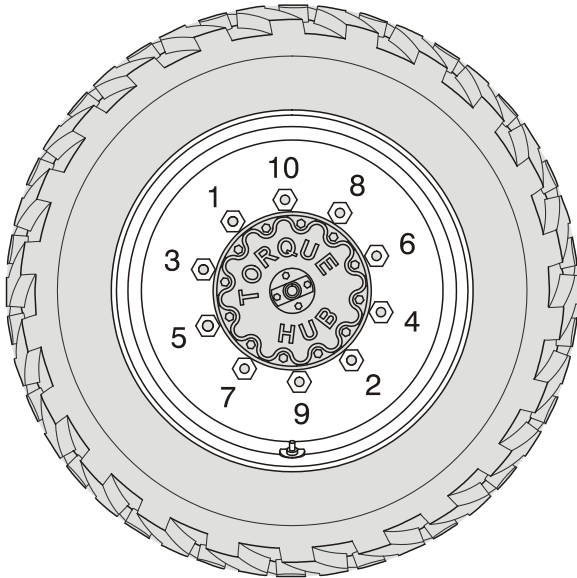

3. The tightening of the nuts should be done in stages. Following the recommended sequence, tighten nuts per wheel torque chart.

Table 3-1. Wheel Torque Chart

TORQUE SEQUENCE		
1st Stage	2nd Stage	3rd Stage
70 ft. lbs. (95 Nm)	170 ft. lbs. (225 Nm)	300 ft. lbs. (405 Nm)

4. Wheel nuts should be torqued after first 50 hours of operation and after each wheel removal. Check torque every 3 months or 150 hours of operation.

3.2 TOW BAR (IF EQUIPPED)

⚠ WARNING

RUNAWAY VEHICLE/MACHINE HAZARD. MACHINE HAS NO TOWING BRAKES. TOWING VEHICLE MUST BE ABLE TO CONTROL MACHINE AT ALL TIMES. ON-HIGHWAY TOWING NOT PERMITTED. FAILURE TO FOLLOW INSTRUCTIONS COULD CAUSE SERIOUS INJURY OR DEATH.

MAXIMUM TOWING SPEED 5 M.P.H. (8 K.M.H.)

MAXIMUM TOWING GRADE 25%.

Prior to towing the machine, complete the following:

⚠ CAUTION

DO NOT TOW MACHINE WITH ENGINE OPERATING OR DRIVE HUBS ENGAGED.

1. Retract, lower and position boom in travel position; lock turntable.
2. Lower tow bar and connect to towing vehicle.
3. Disconnect drive hubs by inverting disconnect cap.
4. Position steer/tow selector valve for towing; pull valve knob out for towing. The machine is now in the towing mode.

After towing the machine, complete the following:

1. Actuate steer/tow selector valve for steering; push valve knob in to the actuated position.
2. Reconnect drive hubs by inverting disconnect cap.
3. Disconnect tow bar from towing vehicle and place it in the stowed position as shown in Figure 3-1. The machine is now in the driving mode.


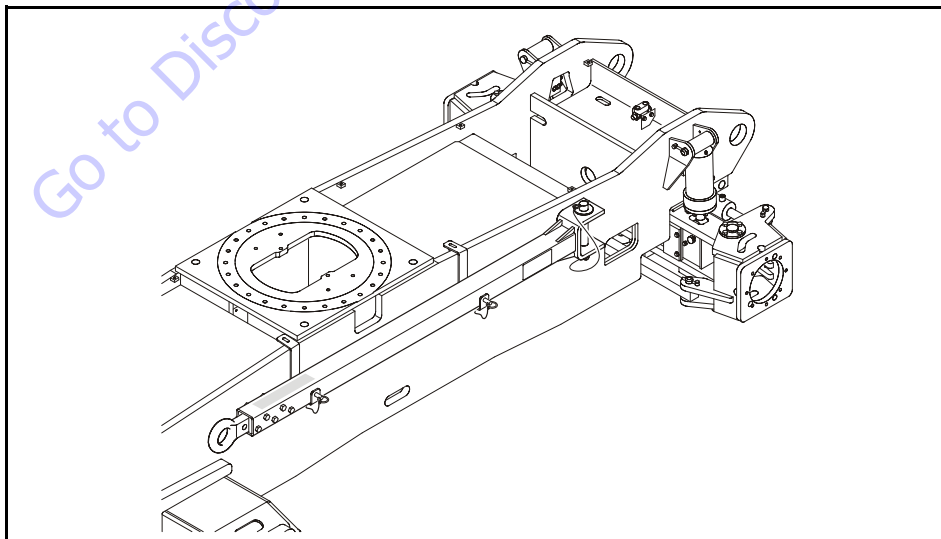


Figure 3-1. Tow Bar

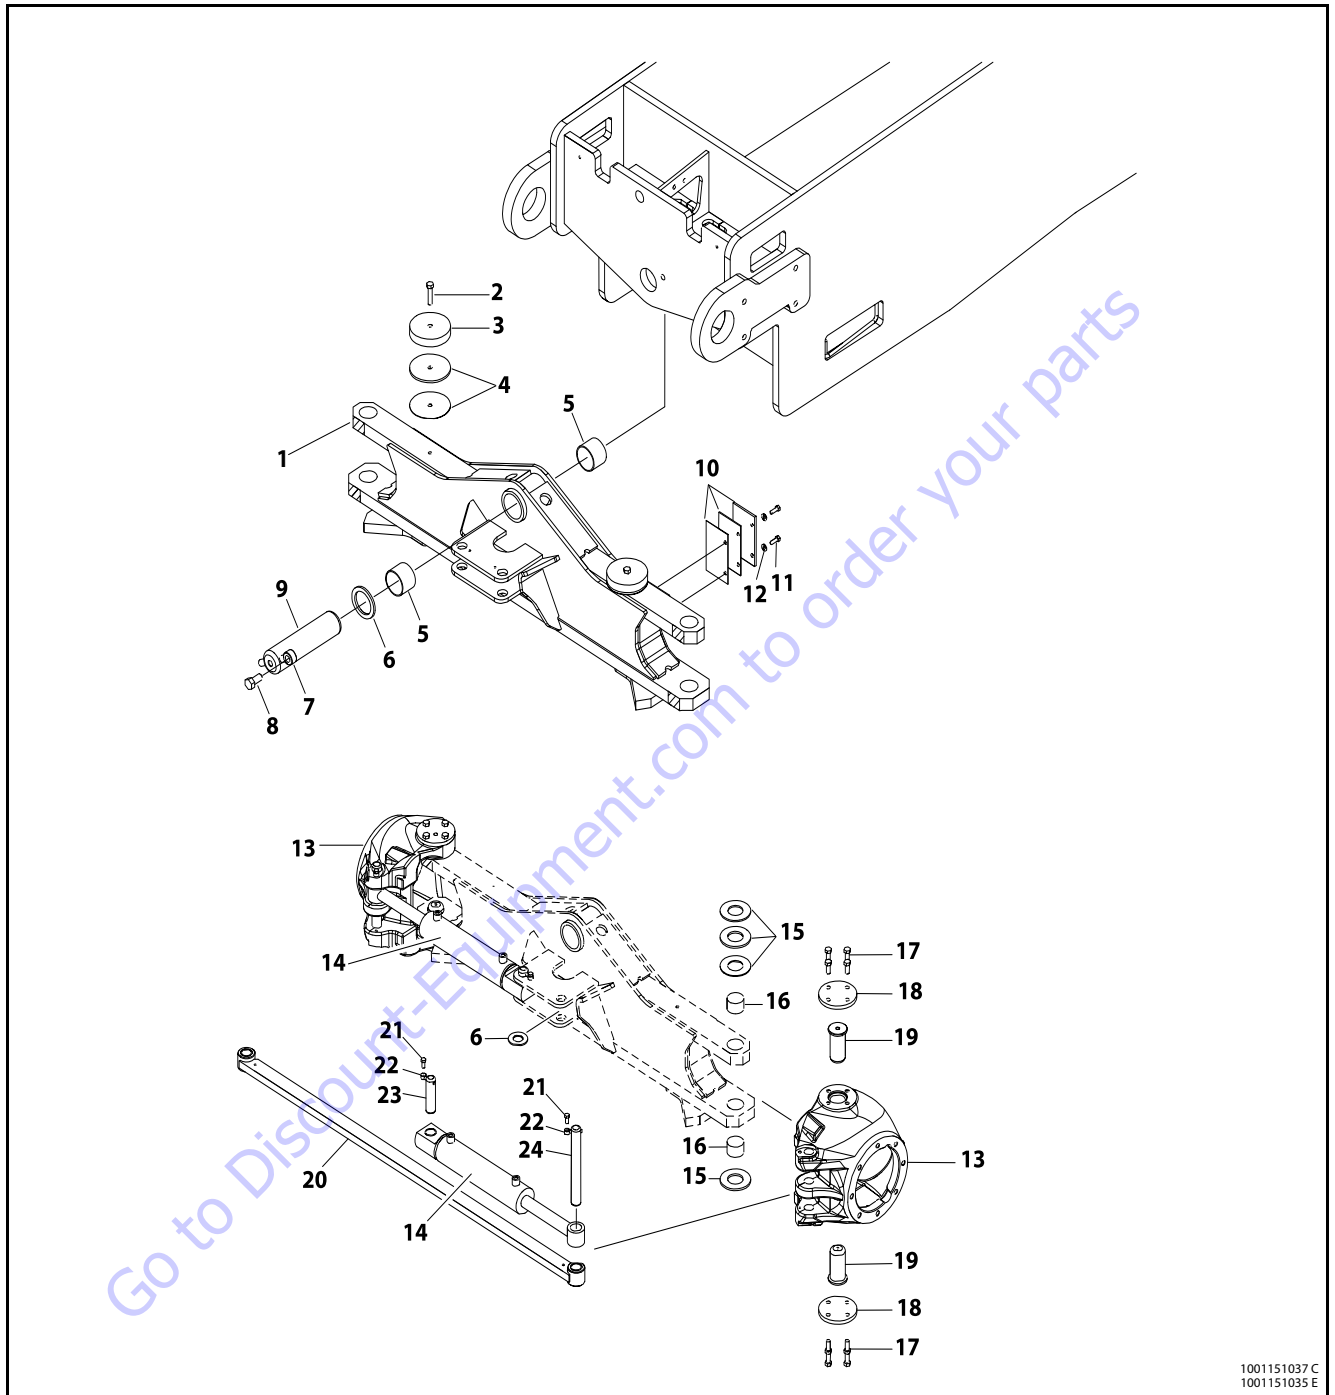


1001151037 C
1001151035 E

- | | | | |
|-------------------|---------------|-----------------------------|----------------|
| 1. Axle | 7. Keeper Pin | 13. Spindle | 19. Kingpin |
| 2. Bolt | 8. Bolt | 14. Steer Cylinder Assembly | 20. Tie-Rod |
| 3. Stop Plate | 9. Pin | 15. Thrust Washer | 21. Bolt |
| 4. Shim | 10. Shim | 16. Bearing | 22. Keeper Pin |
| 5. Bushing | 11. Bolt | 17. Bolt | 23. Pin |
| 6. Special Washer | 12. Washer | 18. Plate | 24. Pin |

Figure 3-2. Axle and Steering Installation without Tow Package

SECTION 3 - CHASSIS & TURNTABLE

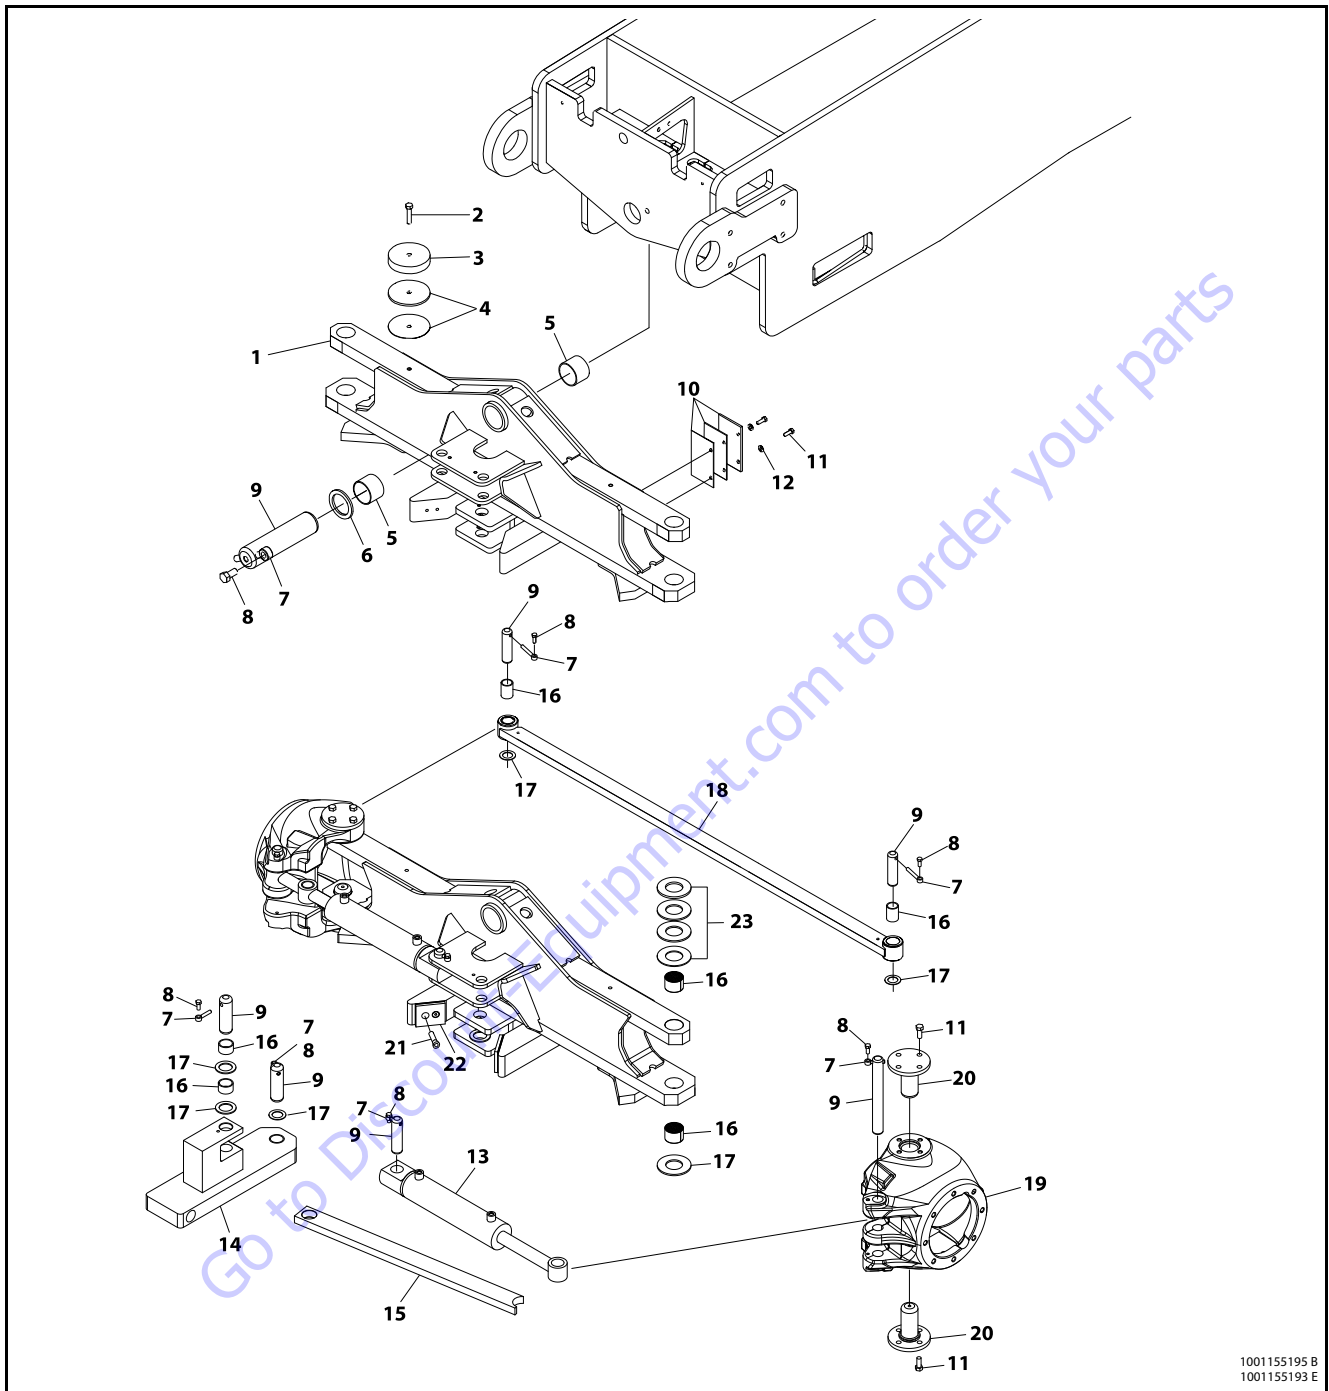

1001155195 B
1001155193 E

- | | | | | | |
|--------------|-------------------|------------|-----------------------------|-------------------|--------------------|
| 1. Axle | 5. Bushing | 9. Pin | 13. Steer Cylinder Assembly | 17. Thrust Washer | 21. Bolt |
| 2. Bolt | 6. Special Washer | 10. Shim | 14. Pivot Bar | 18. Tie-Rod | 22. StopPad |
| 3. StopPlate | 7. KeeperPin | 11. Bolt | 15. Link | 19. Spindle | 23. Special Washer |
| 4. Shim | 8. Bolt | 12. Washer | 16. Bushing | 20. Kingpin | |

Figure 3-3. Axle and Steering Installation with Tow Package


3.3 OSCILLATING AXLE LOCKOUT TEST (IF EQUIPPED)

NOTICE

LOCKOUT SYSTEM TEST MUST BE PERFORMED QUARTERLY, ANY TIME A SYSTEM COMPONENT IS REPLACED, OR WHEN IMPROPER SYSTEM OPERATION IS SUSPECTED.


NOTE: *Ensure boom is fully retracted, lowered, and centered between drive wheels prior to beginning lockout cylinder test.*

1. Place a 6 in. (15.2 cm) high block with ascension ramp in front of left front wheel.
2. From platform control station, Start Engine.
3. Position Drive Speed/Torque Select switch to slow.
4. Place DRIVE control lever to FORWARD position and carefully drive machine up ascension ramp until left front wheel is on top of block.
5. Carefully activate SWING control lever and position boom over right side of machine.
6. With boom over right side of machine, place DRIVE control lever to REVERSE and drive machine off of block and ramp.
7. Have an assistant check to see that left front or right rear wheel remains elevated in position off of ground.
8. Carefully activate SWING control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary activate DRIVE to release cylinders.
9. Place the 6 in. (15.2 cm) high block with ascension ramp in front of right front wheel.
10. Place DRIVE control lever to FORWARD and carefully drive machine up ascension ramp until right front wheel is on top of block.
11. Carefully activate SWING control lever and position boom over left side of machine.
12. With boom over left side of machine, place DRIVE control lever to REVERSE and drive machine off of block and ramp.
13. Have an assistant check to see that right front or left rear wheel remains elevated in position off of ground.
14. Carefully activate SWING control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary activate DRIVE to release cylinders.
15. If lockout cylinders do not function properly, have qualified personnel correct the malfunction prior to any further operation.

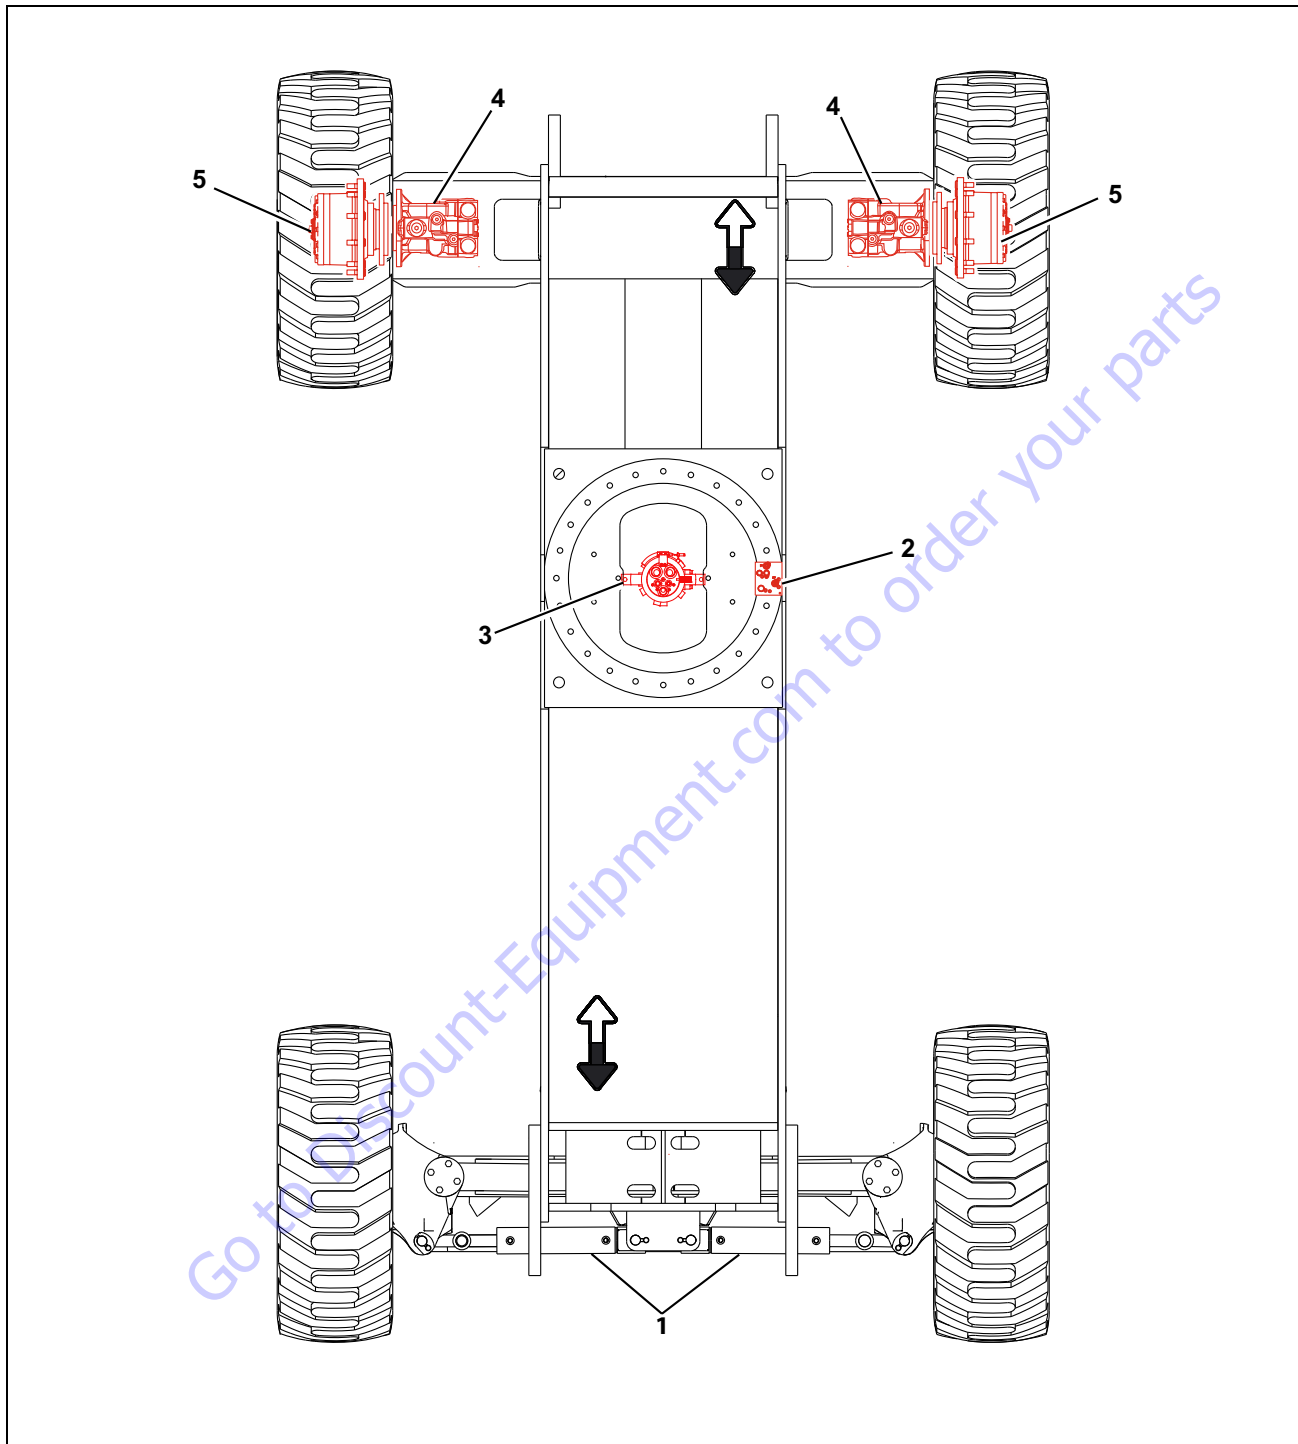

- 1. Steer Cylinder Assembly
- 2. Flow Divider Valve
- 3. Swivel
- 4. Drive Motor
- 5. Drive Hub

Figure 3-4. Chassis Component Location

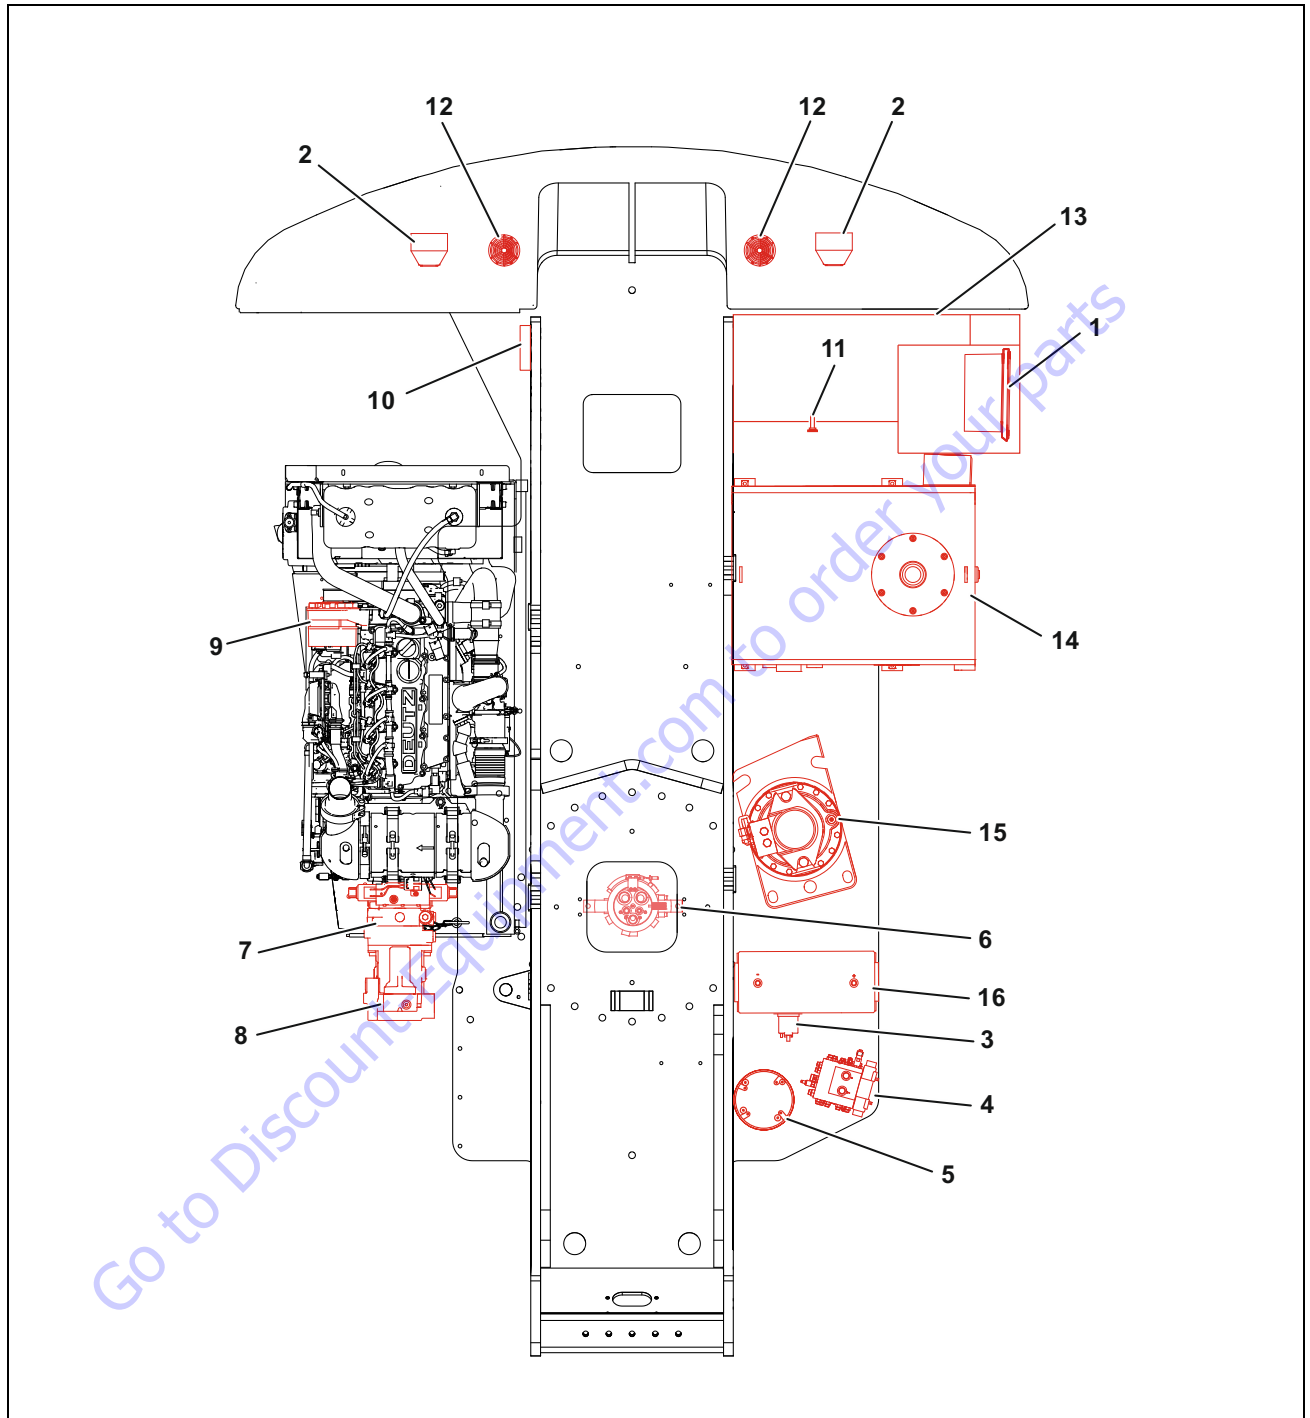

- | | | | |
|--------------------------|-------------------------|---|------------------------|
| 1. Ground Control Box | 5. Auxiliary Power Pump | 9. Generator | 13. Fuel Tank |
| 2. Headlight | 6. Swivel | 10. Deutz Module & Diagnostic Connector | 14. Hydraulic Oil Tank |
| 3. Auxiliary Power Relay | 7. Drive Pumps | 11. Fuel Level Sensor | 15. Swing Drive |
| 4. Main Control Valve | 8. Function Pump | 12. Strobe | 16. Battery |

Figure 3-5. Turntable Component Location

3.4 WHEEL DRIVE ASSEMBLY

Removal

NOTE: The drive motor can be removed through the axle flange as part of the wheel drive assembly or they can be removed separately through the bottom of the frame while leaving the torque hub bolted to the axle.

1. Use a jack to lift the frame enough so the tire and wheel assembly is off of the ground. Place blocking strong enough to support the weight of the machine under the frame and remove the jack.

NOTE: The foam-filled tire & wheel assembly weighs approximately 601 lbs. (272.5 kg).

2. Remove hardware securing wheel and remove wheel assembly. Using suitable lifting device lift the wheel assembly and place in a suitable area.
3. Through the access holes in the axle, tag and disconnect the hydraulic lines running to the drive motor. Cap or plug all openings to ensure no dirt enters the hydraulic system.

NOTE: The drive hub and drive motor assembly weighs approximately 256 lbs. (116.1 kg).

4. Use a supporting device capable of handling the weight of the drive hub, and drive motor, and unbolt the torque hub from the frame. Remove the entire assembly from the machine.
5. Remove the nuts and washers that secure the drive motor to the torque hub and remove the drive motor.

Installation

1. Install the washers and nuts to secure the torque hub and drive motor and torque to 70 ft. lbs. (102 Nm).
2. Place the torque hub flange against the mounting flange on the axle and fasten it in place with the bolts and washers. Torque the bolts to 165 ft. lbs. (224 Nm).
3. Using adequate support, install wheel into wheel assembly and secure with bolts and nuts. Torque the nuts to 300 ft. lbs. (407 Nm).

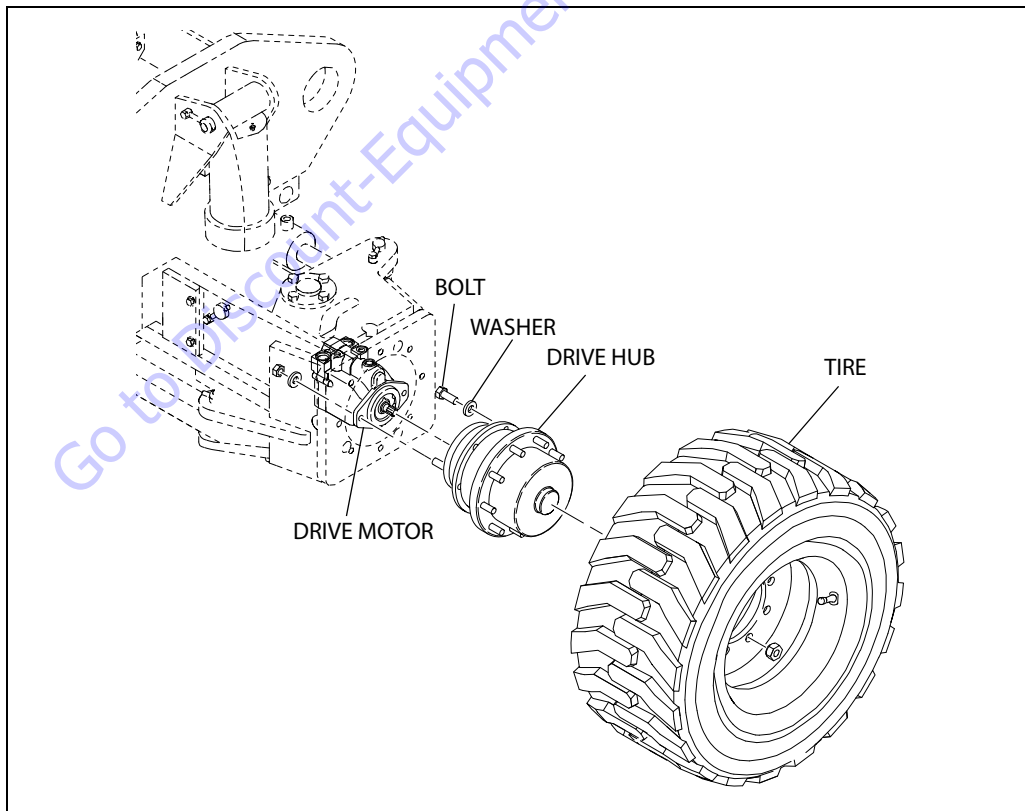


Figure 3-6. Wheel Drive Installation

3.5 DRIVE HUB

Disassembly

1. Position hub over suitable container and remove drain plugs (10) from unit. Allow oil to completely drain, then replace drain plugs.
2. Remove bolts (41) securing cover assembly to hub (7). Remove cover assembly (23) and discard o-ring seal (22).
3. Lift carrier assembly and top thrust washer and thrust bearing(39, 40) from hub. Thrust washer may stick inside cover.
4. Pry ring gear (21) loose from hub and remove it. Remove o-ring seal (22) from hub counterbore and discard it.
5. Remove input gear (37) and thrust spacer (36) from input shaft assembly and remove input shaft assembly from hub.
6. Lift internal gear (12) and thrust washer and thrust bearing (39, 40) from hub. Thrust washer may stick to bottom of carrier.
7. Remove retaining ring (9) from spindle (1) and discard; lift hub from spindle.

CAUTION

EYE PROTECTION SHOULD BE WORN DURING RETAINING RING REMOVAL.

8. Remove inside bearing cone (6) and bearing shim (8).
9. If necessary, pry seal (2) out of hub using screwdriver or pry bar. With seal removed, outside bearing cone (4) can be removed.
10. If necessary, remove inner and outer bearing cups (3, 5) using a suitable slide hammer puller or driven out with a punch.
11. To remove the cluster gears from the carrier, drive the anti-roll pin into the planet shaft of the cluster gear. After the planet shaft is removed, the roll pin should be driven out of the planet shaft.

NOTICE

WHEN REBUILDING TORQUE HUB, REMOVE AND REPLACE ALL O-RINGS AND RETAINING RINGS.

Cleaning and Inspection

1. Thoroughly clean all parts in an approved cleaning solvent.
2. Inspect bearing cups and cones for damage, pitting, corrosion, or excessive wear. If necessary, replace bearings as a complete set ensuring that they remain covered until use.


3. Inspect bearing mounting surfaces on spindle, hub, input shaft and carrier. Replace components as necessary.
4. Inspect all geared components for chipped or broken teeth and for excessive or uneven wear patterns.
5. Inspect carrier for damage, especially in anti-roll pin and planet shaft hole areas.
6. Inspect all planet shafts for scoring or other damage.
7. Inspect all threaded components for damage including stretching, thread deformation, or twisting.
8. Inspect seal mounting area in hub for burrs or sharp edges. Dress applicable surfaces or replace components as necessary.
9. Inspect cover for cracks or other damage, and o-ring sealing area for burrs or sharp edges. Dress applicable surfaces or replace cover as necessary.

Repair

1. Cover Assembly.
 - a. Remove two bolts (25) securing disconnect cap (26) to cover (23) and remove cap.
 - b. Remove two bolts (25) securing cover cap (24) to cover and remove cap.
 - c. Remove disconnect rod (27) from cap and remove o-rings (28, 29) from cover cap. Discard o-rings.
 - d. If necessary, remove pipe plug (30) from cover.
 - e. Clean and inspect parts in accordance with Cleaning and Inspection procedures. Replace parts as necessary.
 - f. If removed, screw pipe plug into cover.
 - g. Slip o-ring (29) over cover cap and against face.
 - h. Place o-ring (28) into cover cap internal groove. Disconnect rod may be used to push o-ring into groove.
 - i. Place cover cap into cover with large hole located over pipe plug. Secure cover cap to cover with two bolts. Torque bolts to 70-80 in. lbs. (7.9-9.0 Nm).
 - j. Place disconnect cap over cover cap with nipple facing out and secure with two bolts. Torque bolts to 70-80 in. lbs. (7.9-9.0 Nm).
 - k. Turn cover over and push disconnect rod into cover cap. Rod will be held in place by friction from o-ring.
2. Carrier Assembly.
 - a. Drive anti-roll pin (19) into planet shaft (17) using a suitable punch.
 - b. Using a suitable press, press planet shaft from carrier (13). After planet shaft is removed, drive anti-roll pin from shaft.
 - c. Remove cluster gear (18) and thrust washers (14) from carriers.

SECTION 3 - CHASSIS & TURNTABLE


- d. Remove needle rollers (15) from cluster gear bore.
- e. Remove spacer (16) from cluster gear bore and remove second set of needle rollers (15).
- f. Repeat steps (a) through (e) for remaining two cluster gears.
- g. Clean and inspect all parts in accordance with Cleaning and Inspection procedures. Replace parts as necessary.
- h. Apply a coat of grease or petroleum jelly to cluster gear bore.

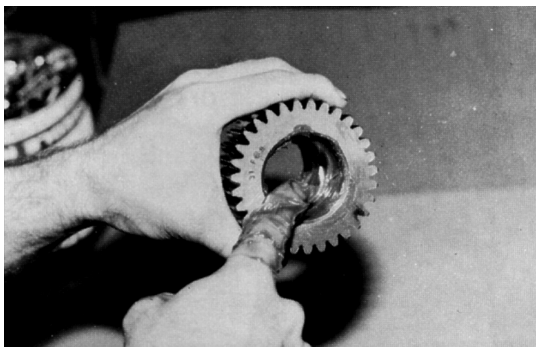

- i. Place needle rollers into cluster gear bore.




- j. Place spacer into opposite side of cluster gear and against needle rollers.

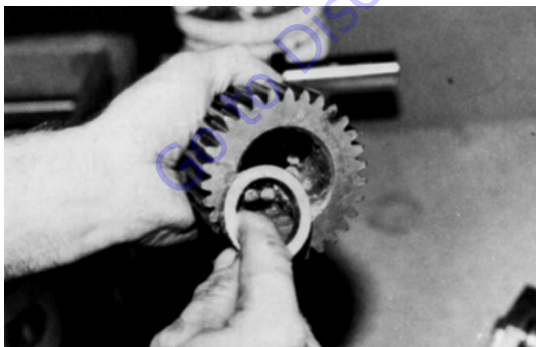


- k. Place second set of needle rollers into cluster gear.
- l. Apply grease or petroleum jelly to tang side of two thrust washers. Place thrust washers against bosses in carrier with washer tang fitting into slot in carrier outside diameter.




- m. While keeping thrust washers in place, slide cluster gear into carrier with larger gear on side with small pin hole.

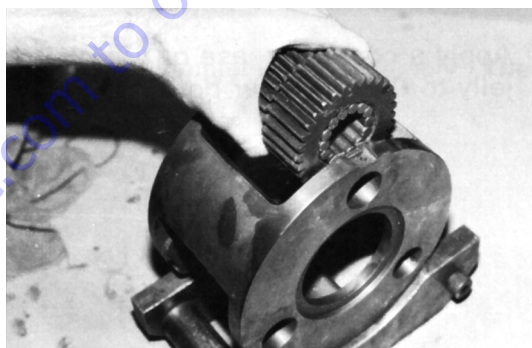

- n. Line up cluster gear and thrust washers with hole in carrier and slide planet shaft through. Ensure chamfered side of hole in planet shaft is lined up with pin hole in carrier.

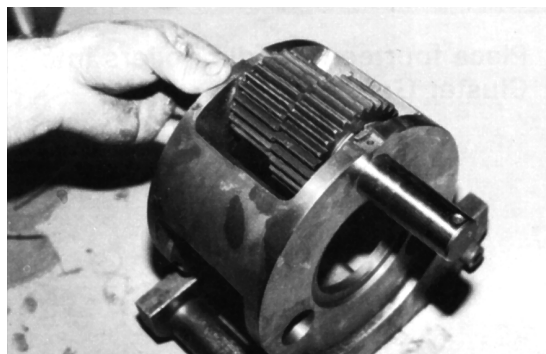

- o. Drive anti-roll pin flush into carrier hole, locking planet shaft into place.

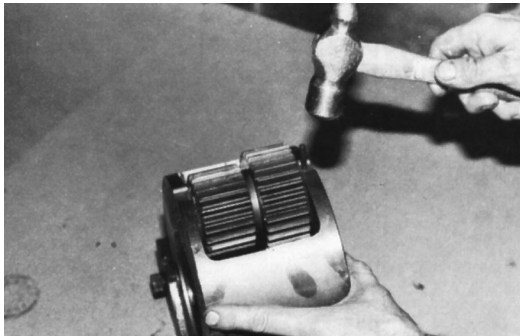

- p. Repeat steps (h) through (o) for remaining two cluster gears.

3. Input Shaft Assembly.

⚠ CAUTION

EYE PROTECTION SHOULD BE WORN DURING RETAINING RING REMOVAL AND INSTALLATION


- a. Carefully remove retaining ring (33) from counterbore in the spindle (1) and discard retaining ring.
- b. Remove two washers (31) and spring (32) from input shaft.
- c. Clean and inspect all parts in accordance with Cleaning and Inspection procedures. Replace parts as necessary.
- d. Place washer (31), spring (32), and washer (31), in that order, onto input shaft.

Assembly


- 1. Using a suitable press, press new bearing cups (3, 5), with large inside diameters facing out, into hub (7) counterbores.




- 2. Place bearing cone (4) into bearing cup (3) in small end of hub.

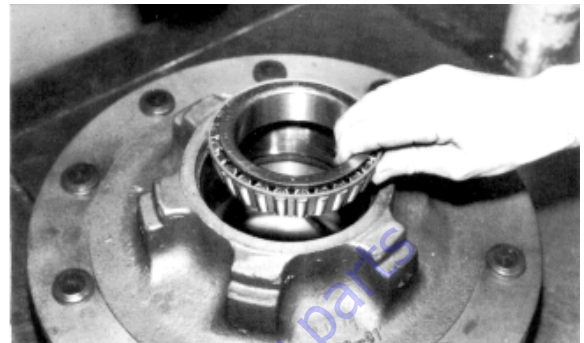

- 3. Press new seal (2) into hub counterbore with flat metal side facing in. Use a flat object to ensure that seal is pressed evenly and is flush with hub face.

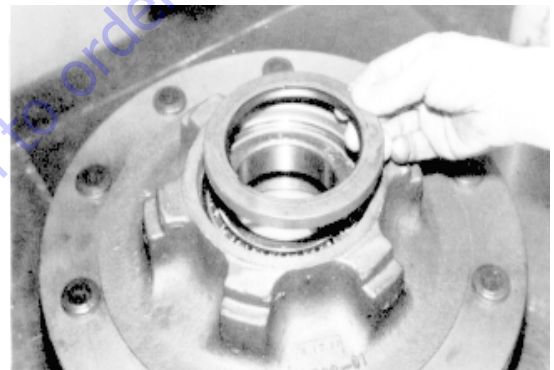

- 4. Lower hub onto spindle (1) with large open end up.

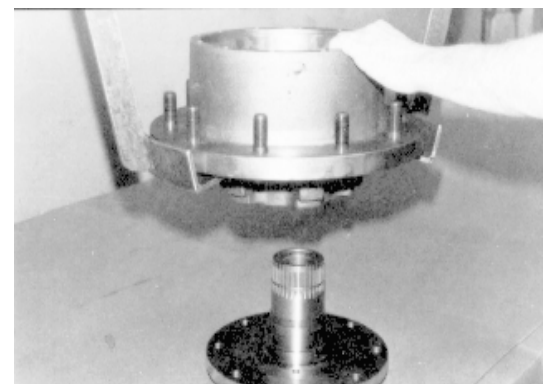


SECTION 3 - CHASSIS & TURNTABLE

5. Place bearing cone (6) over end of spindle and into bearing cup.



6. Place bearing shim (8) over end of spindle and against bearing cone.

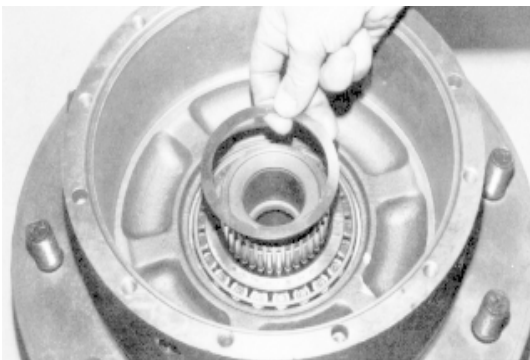

8. The disengage spacer and spring are installed into the counterbore of the spindle.




9. Install retaining ring into input shaft groove to secure spacers and spring to shaft.




CAUTION

EYE PROTECTION SHOULD BE WORN DURING RETAINING RING INSTALLATION.


7. Install retaining ring (9) completely into spindle groove and against bearing shim. Ensure retaining ring is entirely in groove.

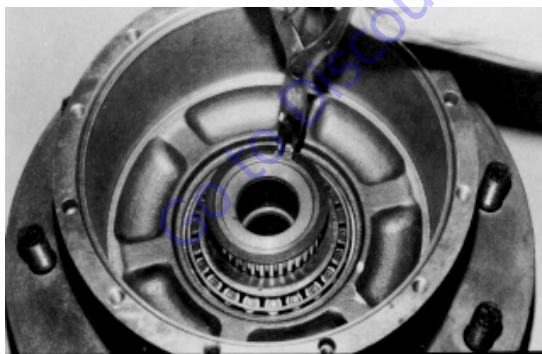


10. Place the internal gear (12) onto end of spindle by matching the bore spline, the spindle spline.

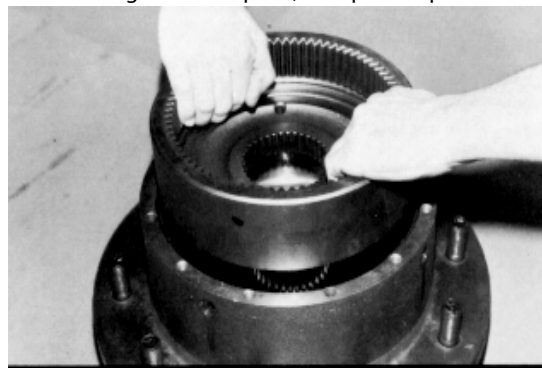

- 11.** Install thrust washers and thrust bearing (39, 40) on the portion of the spindle which extends into the internal gear.

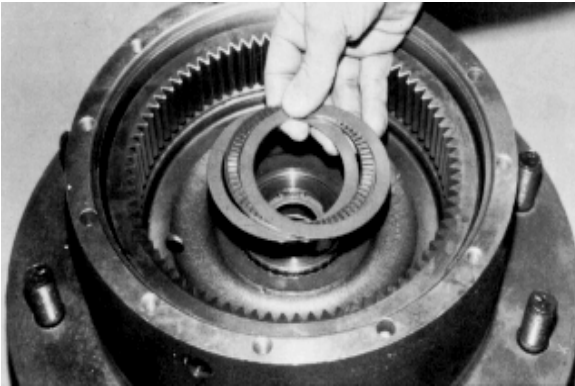


- 12.** The o-ring is placed into the counterbore provided in the hub. Slight stretching may be necessary. Use sufficient grease or petroleum jelly to hold in place.

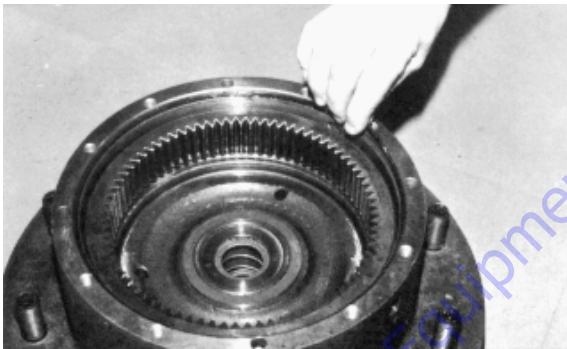


- 13.** Install retaining ring (34) into input shaft retaining ring groove.




- 14.** Place input shaft assembly (35) into spindle bore with unsplined end facing out. The action of the spring should be checked at this point.

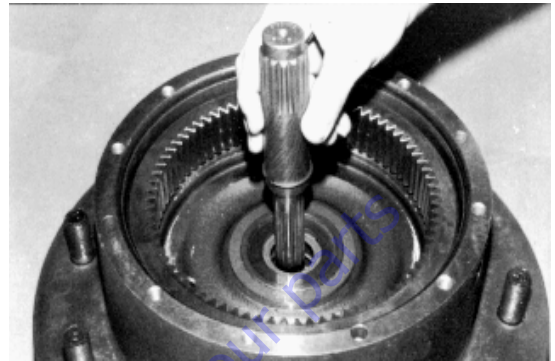

- 15.** Place thrust spacer (36) over input shaft (35) with counterbore side facing spindle.

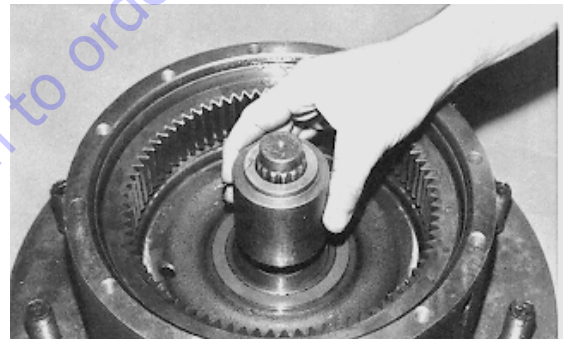


- 16.** Locate the four counter reamed holes in the face of the hub, mark them for later identification.

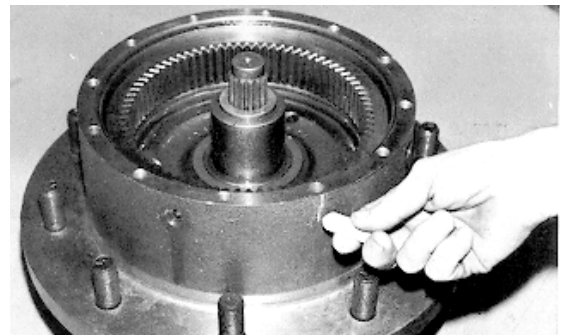


SECTION 3 - CHASSIS & TURNTABLE


17. Place o-ring (22) into cover assembly counterbore. Use petroleum jelly or grease to hold o-ring in place. Slight stretching of o-ring may be necessary to insure proper seating.

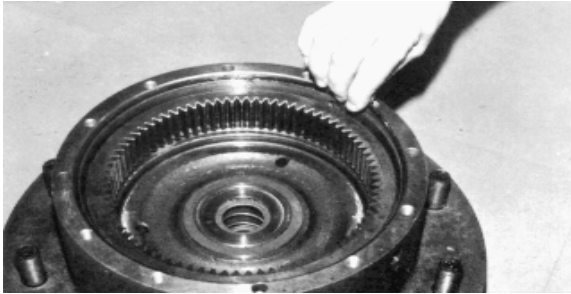


18. Place carrier assembly on a flat surface with large gears up and positioned as shown. Find punch marked tooth on each large gear and locate at 12 o'clock (straight up) from each planet pin. Marked tooth will be located just under carrier on upper two gears.

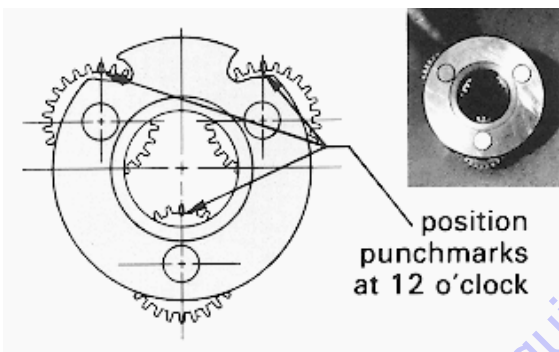

19. With shoulder side of ring gear (21) facing down, place ring gear over (into mesh with) large gears. Ensure punch marks remain in correct location during ring gear installation. The side of the ring gear with 'X' stamped on it should be up.

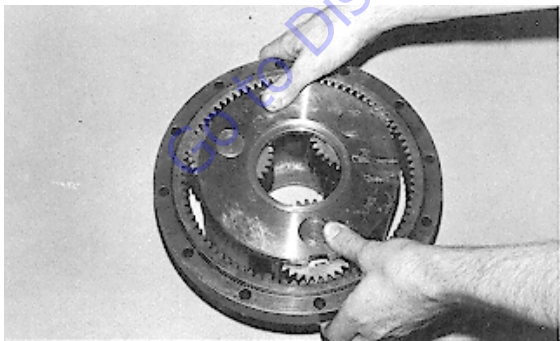


20. While holding ring gear, and cluster gears in mesh, place small side of cluster gears into mesh with internal gear. On ring gear, locate hole marked 'X' over one of the marked counterbore holes in hub.

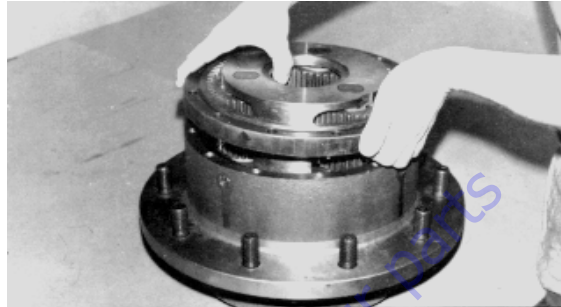

NOTE: If gears do not mesh easily or carrier assembly does not rotate freely, then remove carrier and ring gear and check cluster gear timing.


21. Install input gear (37) into the carrier assembly, meshing with large diameter cluster gears (18). Counterbore in bore of input gear must be to outside of carrier assembly.

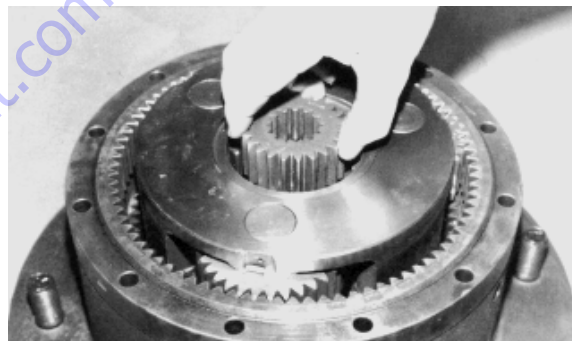


22. After inserting at least one bolt in the proper location, rotate the carrier. Check freedom of rotation and timing.



- 23.** Install thrust washers and thrust bearing (39, 40) into carrier counterbore.

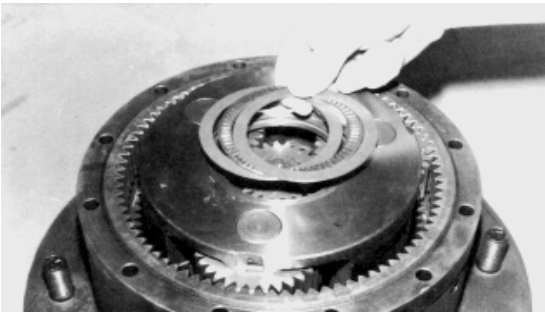


- 27.** Install bolts (41) in remaining holes. Torque bolts to 47 ft. lbs. (64 Nm).

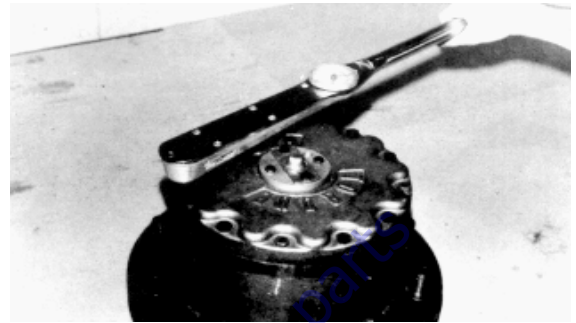

- 24.** Place o-ring (22) into cover assembly counterbore. Use petroleum jelly or grease to hold o-ring in place.



- 28.** Place coupling (1) into spindle and onto input shaft.

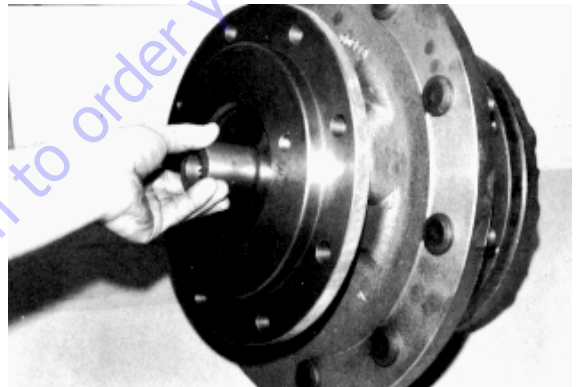

- 25.** Place cover assembly over ring gear with oil level check plug in cover located approximately 90 degrees from oil fill plug in hub.

- 26.** Locate four bolts (42), 90 degrees apart into counterbore holes in hub marked in step (16). Torque bolts to 47 ft. lbs. (64 Nm).



- 29.** Fill hub one-half full of EPGL 90 lubricant before operation.

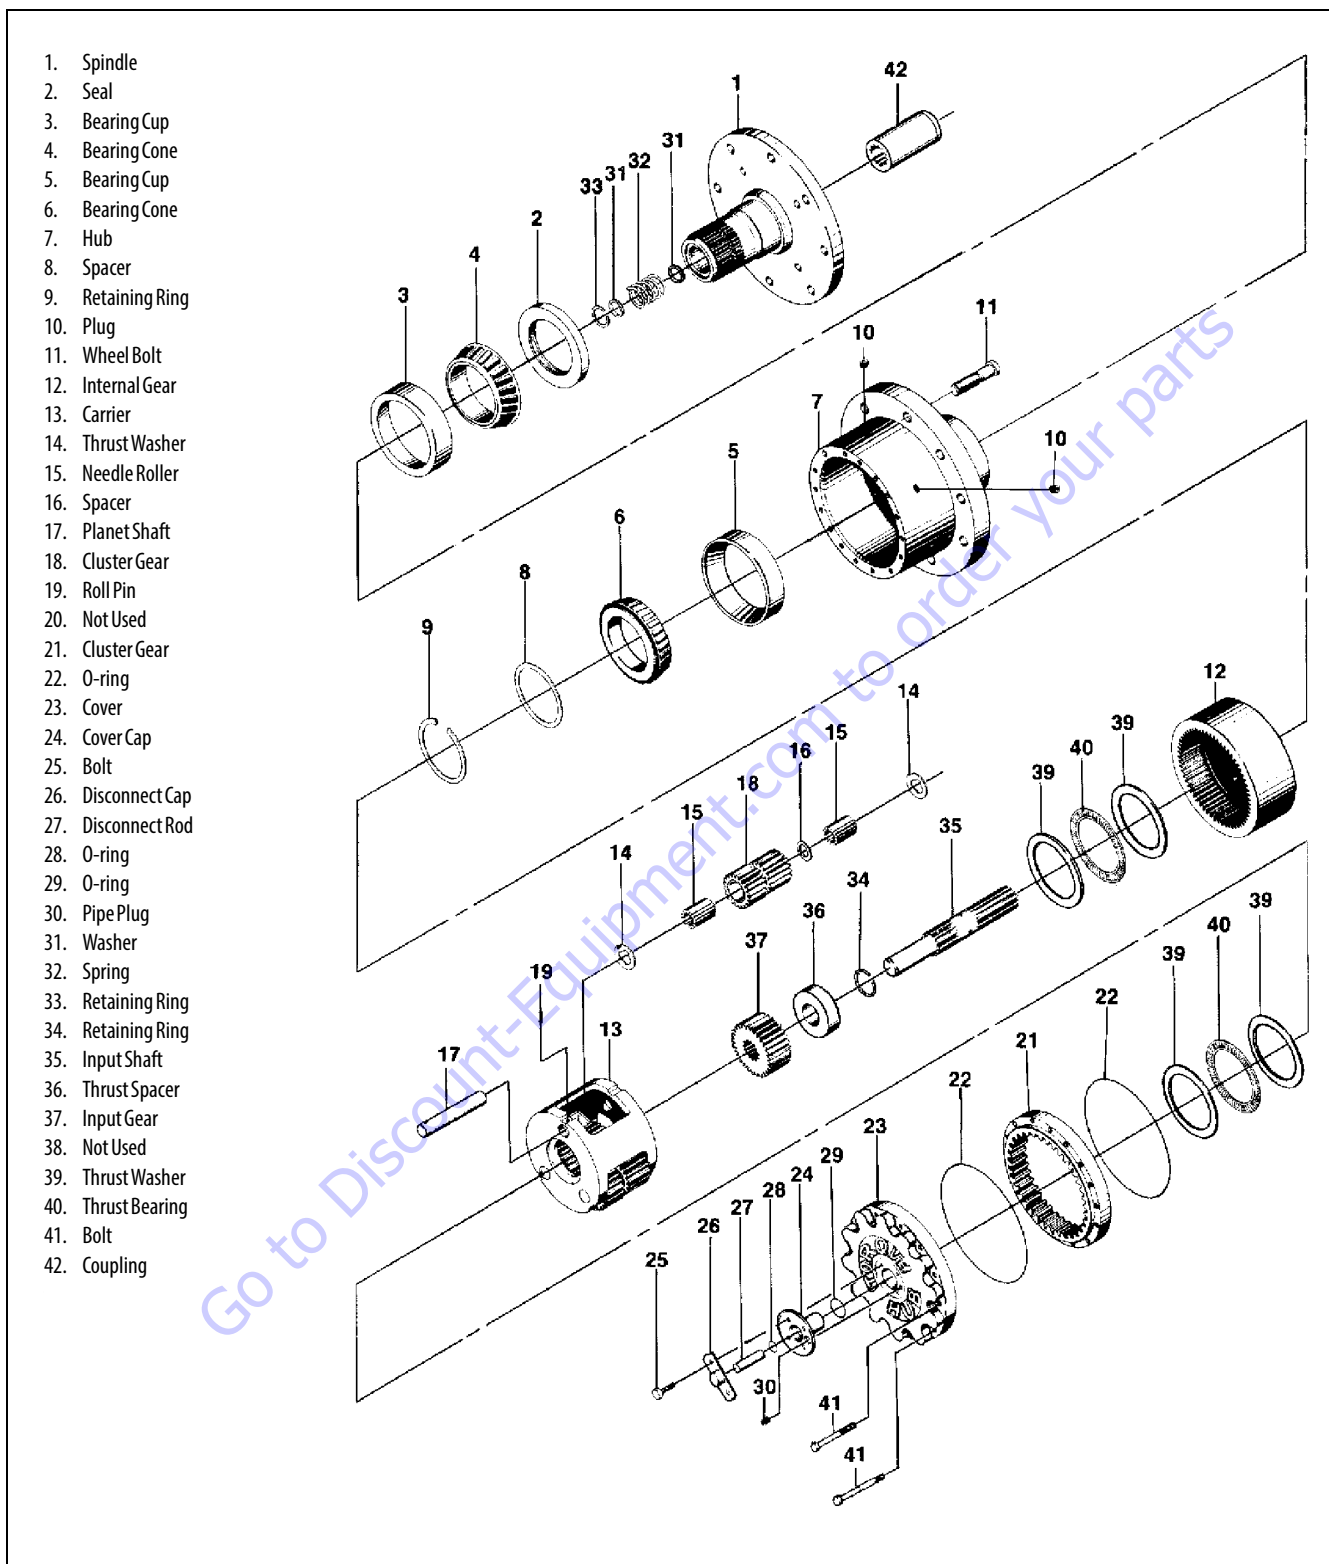


Figure 3-7. Drive Hub

3.6 DRIVE BRAKE

Disassembly

1. Supporting brake: remove the socket head capscrews and washers (13 & 14) in equal increments to ensure the spring pressure within the brake is reduced gradually and evenly.

If a press is available, the cylinder housing (8) can be restrained while removing the capscrews and washers (13 & 14).

The brake assembly can now be fully dismantled and the parts examined.

2. Remove cylinder housing (8) and piston (9) subassembly and dismantle if required, removing o-ring seals (15 & 17) and backing rings (16 & 18) as necessary.
3. Remove gasket (7) from housing (2).
4. Remove friction plates (3 & 6) and pressure plate (4).
5. Remove two dowel pins (19).
6. Remove springs (22 & 23).
7. Should it be necessary to replace ball bearing (10) or shaft seal (12), reverse remainder of brake subassembly, supporting on face C of housing (2).
8. Remove internal retaining ring (11).
9. Using arbor press or similar to break Loctite seal, remove brake shaft (1) from housing (2) and lay aside.
10. Reverse housing (2) and press out ball bearing (10). Shaft seal (12) can also be removed if necessary.

Inspection

1. Inspect friction plates (3 & 6) and friction surface on pressure plate (4) for wear or damage.
2. Examine friction plates (3) and brake shaft (1) for wear or damage to the splines.
3. Examine input and output splines of brake shaft (1) for wear or damage.
4. Examine compression springs (22 & 23) for damage or fatigue.
5. Check ball bearing (10) for axial float or wear.
6. Examine o-ring seals (15 & 17) and backing rings (16 & 18) for damage.

Assembly


1. Lightly lubricate rotary shaft seal (12) and assemble to housing (2) taking care not to damage seal lip.
2. Apply ring of Loctite 641 or equivalent adhesive to full circumference of housing (2) bearing recess adjacent to shoulder.

Apply complete coverage of Loctite 641 to outside diameter of bearing (10) and assemble fully in housing (2), retaining with internal retaining ring (11). Remove excess adhesive with a clean cloth.

Press shaft (1) through bearing (10), ensuring bearing inner ring is adequately supported.

3. Assemble correct quantity of springs (22 & 23) in orientation required.
4. Lubricate o-ring seals (15 & 17) with Molykote 55M (or equivalent) silicon grease and assemble together with backing rings (16 & 18) to piston (9). To ensure correct brake operation. It is important that the backing rings are assembled opposite to the pressurized side of piston.
5. Correctly orientate piston (9) aligning spaces with the two dowel pin holes and, assemble into cylinder housing (8) taking care not to damage seals and carefully lay aside.
6. Locate 2-off pins (19) in housing (2) followed by pressure plate (4) and friction plates i.e. an inner (3) followed by an outer (6) in correct sequence.
7. Position gasket (7) in correct orientation.
8. Align two holes in cylinder with dowel pins (19) and assemble piston & cylinder sub-assembly to remainder of brake securing with 6 capscrews and washers (13 & 14). Torque to 55 ft. lbs. (75 Nm).

NOTE: The use of a suitable press (hydraulic or arbor) pressing down on cylinder end face B will ease assembly of the capscrews (13).

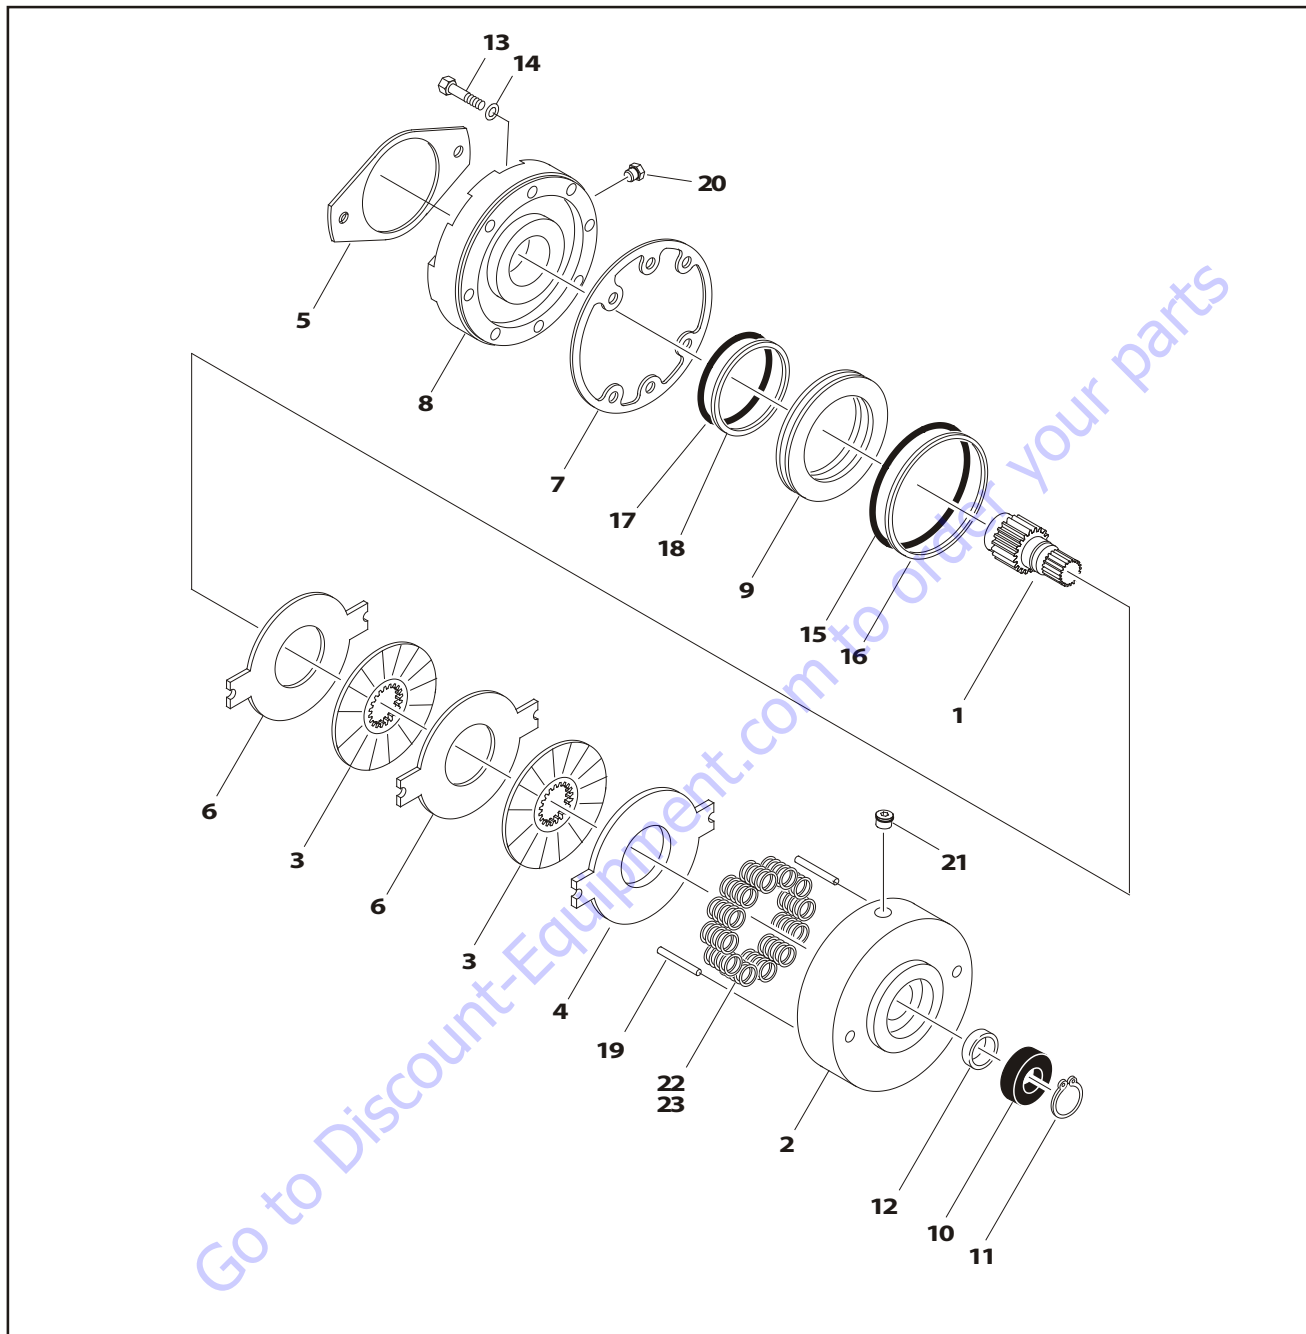

- | | | | | |
|-------------------|---------------------|--------------------|-----------------|----------------------|
| 1. Shaft | 6. Outer Plate | 11. Retaining Ring | 16. Backup Ring | 21. Plug |
| 2. Housing | 7. Gasket | 12. Shaft Seal | 17. O-ring | 22. Spring (Natural) |
| 3. Friction Plate | 8. Cylinder Housing | 13. Capscrew | 18. Backup Ring | 23. Spring (Blue) |
| 4. Pressure Plate | 9. Piston | 14. Lockwasher | 19. Dowel Pin | |
| 5. Gasket | 10. Ball Bearing | 15. O-ring | 20. Plug | |

Figure 3-8. Drive Brake

3.7 DRIVE MOTOR

Description

The drive motors are low to medium power, two-position axial piston motors incorporating an integral servo piston. They are designed for operation in both open and closed circuit applications. The standard control is a direct acting single line hydraulic control. The integral servo piston controls motor displacement.

The motors are spring biased to maximum displacement and hydraulically shifted to minimum displacement. Minimum and maximum displacement can be set with fixed internal stops. The large diameter servo piston allows smooth acceleration and deceleration with relatively large circuit orificing.

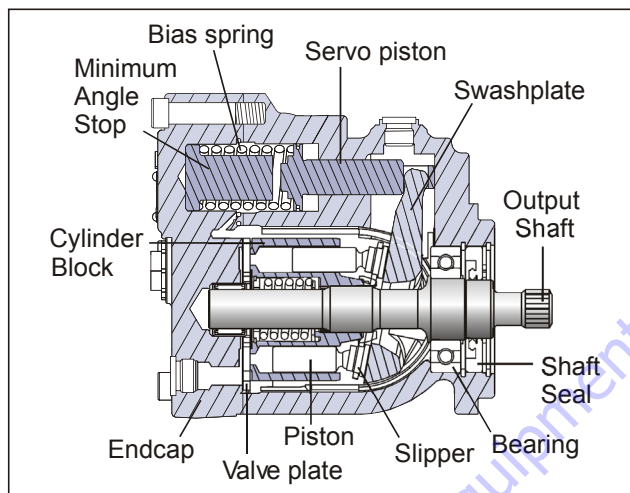


Figure 3-9. Drive Motor Cross Section


Disassembly

NOTE: Removal of the endcap voids warranty.

During assembly, coat all moving parts with a film of clean hydraulic oil. This assures that these parts will be lubricated during start-up.

Replace all o-rings and gaskets.


It is recommended that all o-rings be replaced. Lightly lubricate all o-rings with clean petroleum jelly prior to assembly.

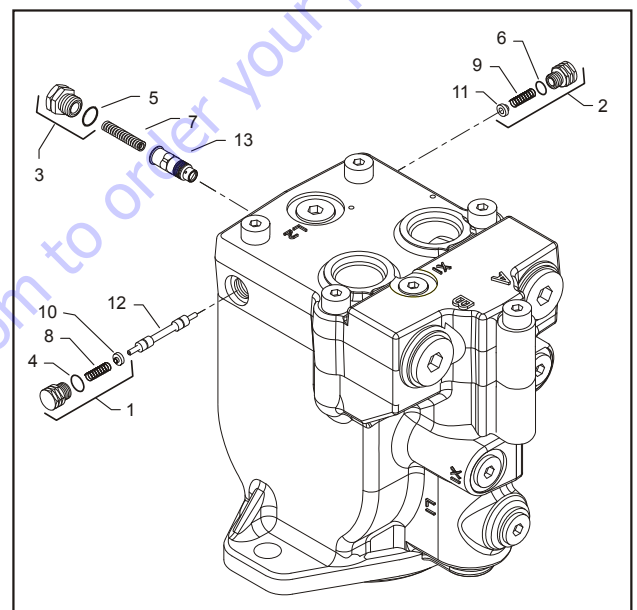

- | | | | |
|-----------|-----------|------------|--------------------|
| 1. Plug | 5. O-ring | 9. Spring | 12. Shift Spool |
| 2. Plug | 6. O-ring | 10. Washer | 13. Orifice Poppet |
| 3. Plug | 7. Spring | 11. Washer | |
| 4. O-ring | 8. Spring | | |

Figure 3-10. Loop Flushing Spool


1. Using a 11/16 in. wrench remove plug (1) and (2).
2. Using a 5/8 in. hex wrench remove plug (3).
3. Remove o-rings (4, 5, and 6).
4. Using pliers, remove centering springs (7, 8, and 9).
5. Remove spring retaining washers (10 and 11).
6. Remove shift spool (12).
7. Remove orifice poppet (13).

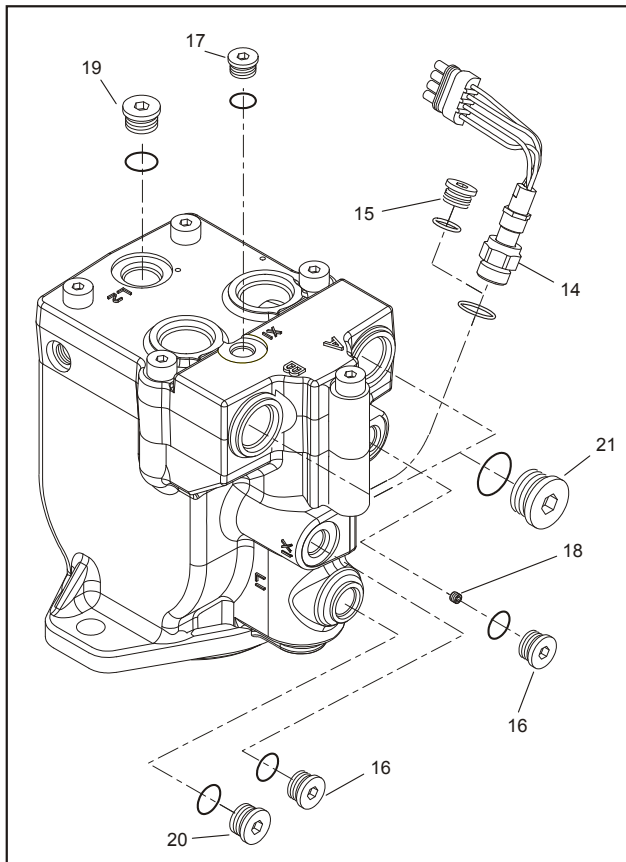

- | | |
|-----------------------|--------------------|
| 14. Lock Nut | 18. Cavity Plug |
| 15. O-ring Plug | 19. Drain Plug |
| 16. Control Line Plug | 20. Drain Plug |
| 17. Control Line Plug | 21. Work Port Plug |

Figure 3-11. Plugs, Fittings, and Speed Sensor

8. Remove all fittings from the unit. Discard o-rings on the fittings.
9. Using an 11/16 in. hex wrench, loosen the speed sensor lock nut (14) if equipped. Then remove the speed sensor using a 1/16 in. hex wrench. Units without speed sensor have an o-ring plug (15) installed in that location; remove it with a 1/16 inch internal hex wrench.
10. Using a 1/4 in. internal hex wrench, remove control line plugs (16, 17). Discard o-rings. Using a 3 mm hex wrench, remove cavity plug (18, if equipped with two-line control) from X2 cavity.
11. Using a 5/16 in. internal hex wrench, remove drain plugs (19, 20). Discard o-rings.
12. Using a 9/16 in. internal hex wrench, remove work port plugs (21, if equipped with axial ports). Discard o-rings.

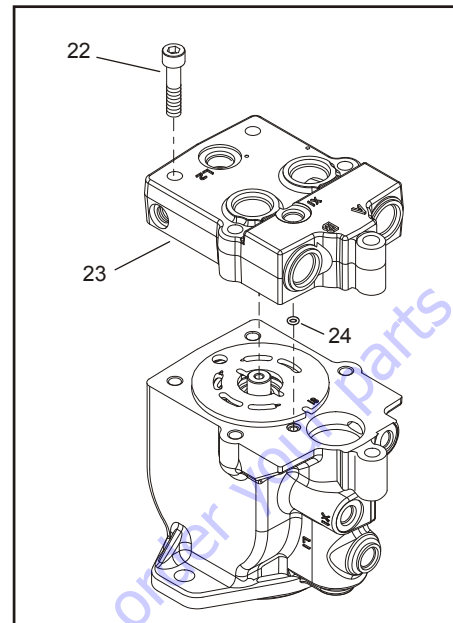


- | |
|-------------|
| 22. Screw |
| 23. End Cap |
| 24. O-ring |

Figure 3-12. End Cap

13. Using an 8 mm internal hex wrench, remove the endcap screws (22).
14. Remove the endcap (23). Remove o-ring (24) from the housing or endcap.

When the endcap screws are removed, pressure from the servo spring will cause the endcap to bind on the shaft. Press down on the portion of the endcap covering the servo piston and hold the endcap level while removing.

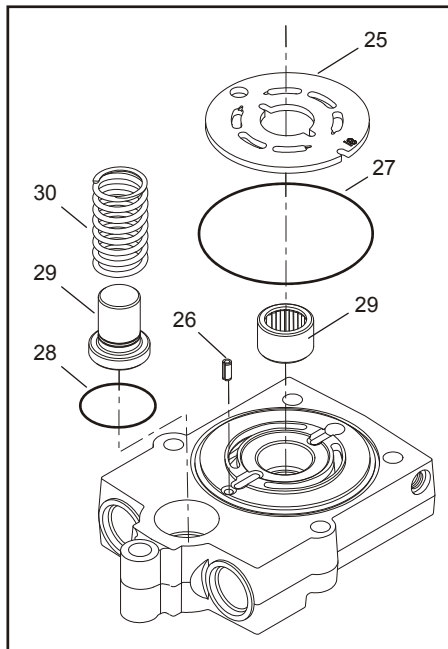

- 25. Valve Plate
- 26. End Cap
- 27. O-ring
- 28. O-ring
- 29. Angle Stop
- 30. Servo Spring

Figure 3-13. Valve Plate & Rear Shaft Bearing

NOTICE

TAKE CARE NOT TO SCRATCH THE SURFACE OF THE VALVE PLATE.


15. Remove the valve plate (25) and timing pin (26) from the endcap.

Each displacement has a unique valve plate. For identification, the last two digits of the valve plate part number are stamped on its surface.

16. Remove and discard the o-rings (27 and 28).
17. Remove the rear shaft bearing (29) from the endcap with a bearing puller.

The bearing may be difficult to remove with a puller. Try this as an alternative: Pack the bearing cavity with heavy grease. After the shaft is removed, insert it into the bearing cavity and tap lightly with a soft mallet on the splined end. The grease will force the bearing out. Use caution not to drive the bearing past the rear shaft journal as the bearing may become trapped on the shaft and damaged.

18. Remove minimum angle stop (29) and servo spring (30) from the housing.

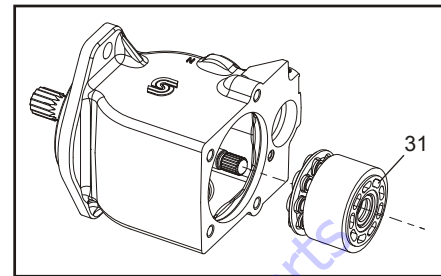

31. Cylinder Kit Assembly


Figure 3-14. Cylinder Kit

19. Turn the housing on its side and remove the cylinder kit assembly (31). Set the assembly aside, being careful not to scratch the running surface.

NOTE: Grooves on the surface of the cylinder kit identify its displacement:

Table 3-2. Displacement Identifiers

# of Grooves	Frame L	Frame K
1	25	38
2	30	45
3	35	--

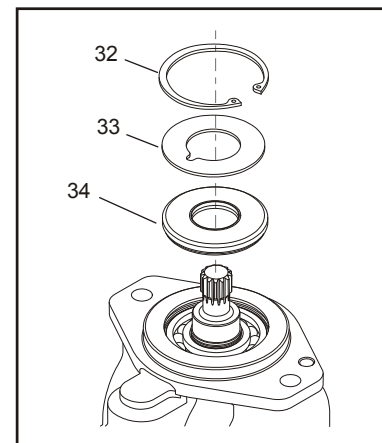


- 32. Snap Ring
- 33. Support Washer
- 34. Shaft Seal

Figure 3-15. Shaft Seal

SECTION 3 - CHASSIS & TURNTABLE

20. Turn the housing over and remove the snap ring (32) retaining the shaft seal and support washer. Remove the support washer (33) and carefully pry out the shaft seal (34). Discard the seal.


To avoid damaging the shaft during seal removal. Install a large sheet metal screw into the chuck of a slide hammer. Drive the screw into the seal surface and use the slide hammer to pull the seal.

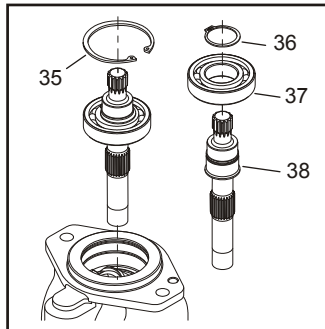

- 35. Inner Snap Ring
- 36. Snap Ring
- 37. Bearing
- 38. Shaft

Figure 3-16. Shaft & Front Bearing


21. Remove the inner snap ring (35) and the shaft / bearing assembly.
22. Remove the snap-ring (36) retaining the shaft front bearing. Pull the bearing (37) off of the shaft (38).

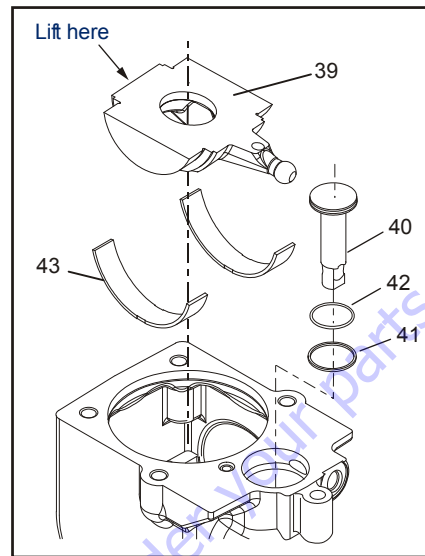

- 39. Swashplate
- 40. Servo Piston
- 41. Piston Seal
- 42. O-ring
- 43. Journal Bearings

Figure 3-17. SwashPlate & Servo Piston

23. Turn housing over and remove the swashplate (39) by lifting on the end opposite the servo lever.
24. Remove the servo piston (40). Remove the piston seal (41) and o-ring (42) from the servo piston. Discard the seal and o-ring.
25. Remove the journal bearings (43) from the housing. If the bearings are to be reused, note the location and orientation of each bearing for reassembly.

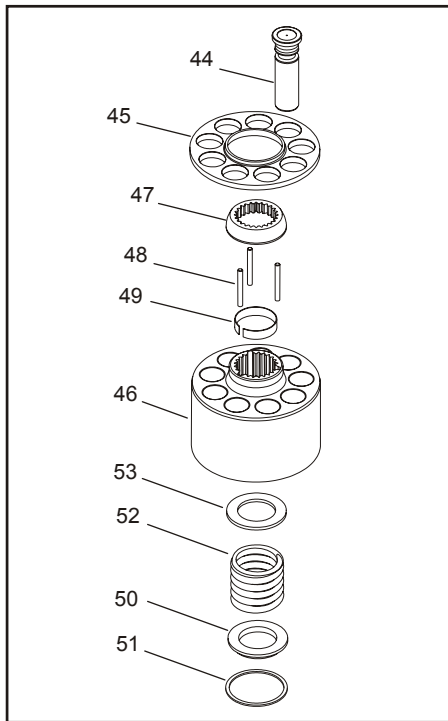

- | | |
|----------------------|-------------------------------|
| 44. Piston | 49. Retaining Ring |
| 45. Slipper Retainer | 50. Block Spring Washer |
| 46. Cylinder Block | 51. Spiral Retaining Ring |
| 47. Ball Guide | 52. Block Spring |
| 48. Holddown Pins | 53. Inner Block Spring Washer |

Figure 3-18. Cylinder Kit Disassembly

- 26.** Remove pistons (44) and slipper retainer (45) from the cylinder block (46).

The pistons are not selectively fitted, however units with high hourly usage may develop wear patterns. Number the pistons and bores for reassembly if they are to be reused.

- 27.** Remove the ball guide (47), hold-down pins (48), and retaining ring (49) from the cylinder block.

NOTE: Most repairs do not require block spring removal. Perform this procedure only if you suspect problems with the block spring.

⚠ WARNING

RISK OF PERSONAL INJURY: COMPRESSING THE BLOCK SPRING REQUIRES FORCE OF ABOUT 80 TO 90 LBF (350 TO 400 N). USE A PRESS SUFFICIENT TO MAINTAIN THIS FORCE WITH REASONABLE EFFORT. ENSURE THE SPRING IS SECURE BEFORE ATTEMPTING TO REMOVE THE SPIRAL RETAINING RING. RELEASE THE PRESSURE SLOWLY AFTER THE RETAINING RING IS REMOVED.


- 28.** Turn the block over. Using a press, apply pressure on the block spring washer (50) to compress the block spring. Compress the spring enough to safely remove the spiral retaining ring (51). While maintaining pressure, unwind the spiral retaining ring (51). Carefully release the pressure and remove the outer block spring washer (50), block spring (52), and inner block spring washer (53) from the cylinder block.

Inspection

After disassembly, wash all parts (including the end-cap and housing) thoroughly with clean solvent and allow to air dry. Blow out oil passages in the housing and endcap with compressed air. Conduct inspection in a clean area and keep all parts free from contamination. Clean and dry parts again after any rework or resurfacing.

PISTON

Inspect the pistons for damage and discoloration. Discolored pistons may indicate excessive heat; do not reuse.

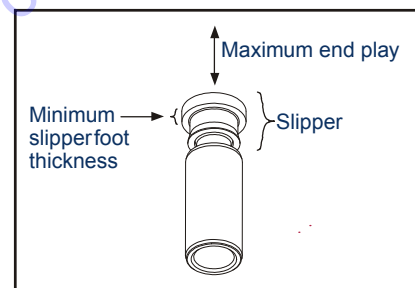

SLIPPERS

Inspect the running surface of the slippers. Replace any piston assemblies with scored or excessively rounded slipper edges. Measure the slipper foot thickness. Replace any piston assemblies with excessively worn slippers. Check the slipper axial end-play. Replace any piston assemblies with excessive end-play.

Minimum slipper foot thickness and maximum axial end-play are given in the table below.

Table 3-3. Slipper Foot Thickness & End Play

Measurement	L Frame mm (in.)	K Frame mm (in.)
Slipper Foot Thickness	2.71 (0.11)	4.07 (0.16)
Piston/Slipper End Play	0.15 (0.006)	


CYLINDER BLOCK

Measure the cylinder block height. Replace blocks worn beyond the minimum height specification. Inspect the running surface of the cylinder block. Replace or resurface worn

or scratched blocks. Blocks may be resurfaced to the specifications shown in the drawing, provided resurfacing will not reduce the block height below the minimum specification. See Table 3-4, Cylinder Block Measurements.


Table 3-4. Cylinder Block Measurements

Measurement	L25 mm (in.)	L30 mm (in.)	L35 mm (in.)	K38 mm (in.)	K45 mm (in.)
Minimum Cylinder Block Height (A)	50.8 (2.00)	50.8 (2.00)	50.8 (2.00)	54.4 (2.14)	54.4 (2.14)
Cylinder Block Surface Flatness	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)	0.002 (0.0000079)

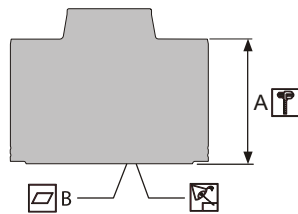


BALL GUIDE AND SLIPPER RETAINER

Inspect the ball guide and slipper retainer for damage, discoloration, or excessive wear. A discolored ball guide or slipper retainer indicates excessive heat. Do not reuse.

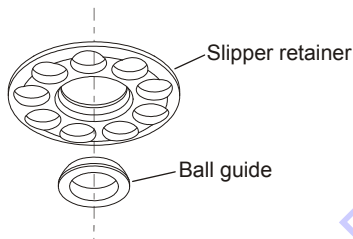


SWASHPLATE AND JOURNAL BEARINGS

Inspect the running face, servo ball-joint, and swashplate journal surfaces for damage or excessive wear. Some material transfer may appear on these surfaces and is acceptable providing the surface condition meets specifications shown. Measure the swashplate thickness from the journals to the running face. Replace swashplate if damaged or worn beyond minimum specification. Replace swashplate if the difference in thickness from one side to the other exceeds specification.

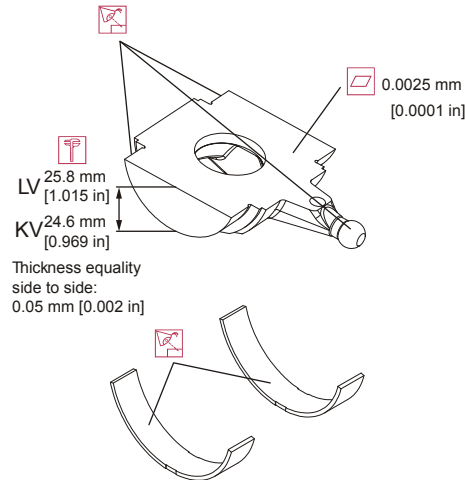

VALVE PLATE


The condition of the valve plate is critical to the efficiency of the motor. Inspect the valve plate surfaces carefully for excessive wear, grooves, or scratches. Replace or resurface grooved or scratched valve plates. Measure the valve plate thickness and replace if worn beyond the minimum specification. Valve plates may be resurfaced to the specifications shown in the drawing, provided resurfacing will not reduce the thickness below the minimum specification.

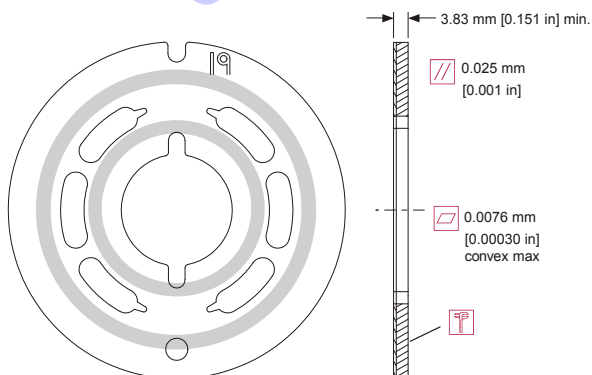

Inspect the journal bearings for damage or excessive wear. Replace journal bearings if scratched, warped, or excessively worn. The polymer wear layer must be smooth and intact.

SHAFT BEARINGS

Inspect bearings for excessive wear or contamination. Rotate the bearings while feeling for uneven movement. Bearings should spin smoothly and freely. Replace bearings that appear worn or do not rotate smoothly.

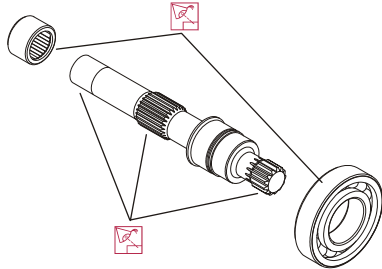


SHAFT

Inspect the motor shaft. Look for damage or excessive wear on the output and block splines. Inspect the bearing surfaces and sealing surface. Replace shafts with damaged or excessively worn splines, bearing surfaces, or sealing surfaces.


SERVO PISTON AND MINIMUM ANGLE STOP

Inspect the minimum angle stop, servo piston head, and servo piston ball-socket for damage or excessive wear. Replace if necessary.

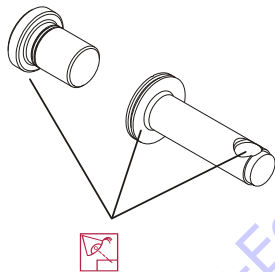

LOOP FLUSHING SPOOL


Inspect the loop flushing spool. Check for cracks or damage. Replace if necessary.

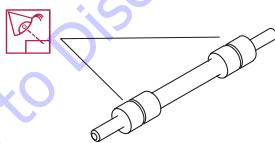

Assembly

1. Install new o-ring (1) and piston seal (2) to the servo piston (3). Install the piston seal over the o-ring.

Installing the piston seal stretches it, making it difficult to install the servo piston in its bore. Allow 30 minutes for the seal to relax after installation. To speed up seal relaxation, compress the seal by installing the piston head into the servo cavity in the end-cap and let it stand for at least five minutes.

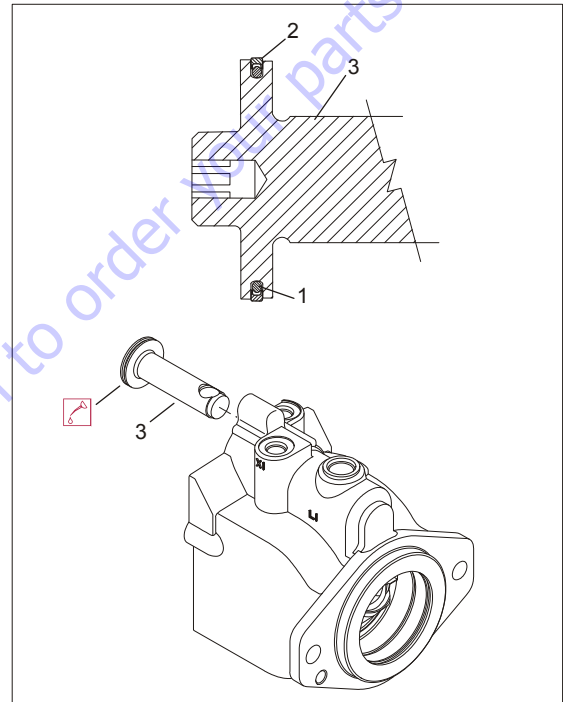

1. O-ring
2. Piston Seal
3. Servo Piston


Figure 3-19. Servo Piston

2. After piston seal has relaxed, lubricate and install servo piston into the housing bore. Align the piston with the ball socket facing the inside of the housing.

⚠ WARNING

RISK OF PERSONAL INJURY: COMPRESSING THE BLOCK SPRING REQUIRES ABOUT 80 TO 90 LBF (350 TO 400 N) OF FORCE. USE A PRESS SUFFICIENT TO MAINTAIN THIS FORCE WITH REASONABLE EFFORT. ENSURE THE SPRING IS SECURE BEFORE ATTEMPTING TO INSTALL THE SPIRAL RETAINING RING. RELEASE THE PRESSURE SLOWLY AFTER THE RETAINING RING IS INSTALLED.


3. Install the inner block spring washer (4), block spring (5), and outer washer (6) into the cylinder block. Using a press, compress the block spring enough to expose the retaining ring groove. Wind the spiral retaining ring (7) into the groove in the cylinder block.

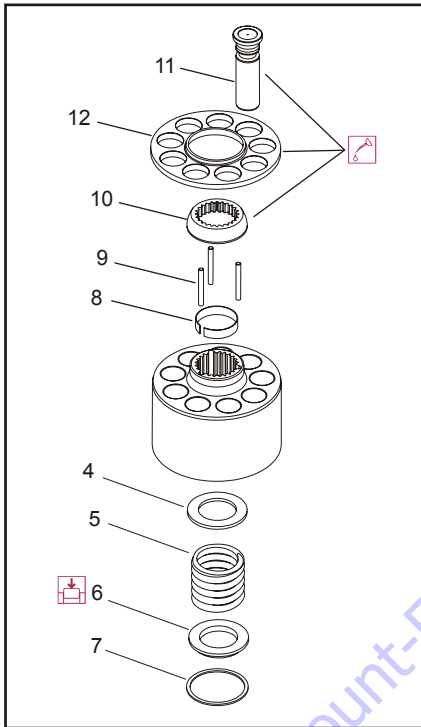

- | | |
|--------------------------|----------------------|
| 4. Block Spring Washer | 9. Holddown Pins |
| 5. Block Spring | 10. Ball Guide |
| 6. Outer Washer | 11. Piston |
| 7. Spiral Retaining Ring | 12. Slipper Retainer |
| 8. Retaining Ring | |

Figure 3-20. Cylinder Kit Assembly

4. Turn the block over and install the retaining ring (8), hold-down pins (9), and ball guide (10) to the cylinder block.
5. Install the pistons (11) to the slipper retainer (12). Install the piston/retainer assembly into the cylinder block. Ensure the concave surface of the retainer seats on the ball guide. If reusing the pistons, install them to the original block bores. Lubricate the pistons, slippers, retainer, and ball guide before assembly. Set the cylinder kit aside on a clean surface until needed.
6. Install the journal bearings (13) into the housing seats. Use assembly grease to keep the bearings seated during assembly. Ensure the locating nubs drop into the cavities in the seats. If reusing the bearings, install them in the original location and orientation. Lubricate the journal bearings.

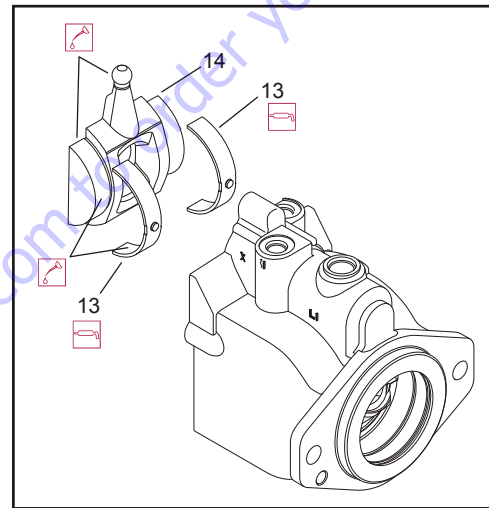


- 13. Journal Bearings
- 14. Swashplate

Figure 3-21. Swashplate and Journal Bearing

7. Install the swashplate (14) into the housing. Tilt the swashplate and guide the servo lever ball into its socket in the servo piston rod. Ensure the swashplate seats into the journal bearings and moves freely. Lubricate the running surface of the swashplate.

8. Press front shaft bearing (15) onto shaft (16). Press bearing onto shaft with lettering facing out. Lubricate bearing rollers. Install snap-ring (17) onto shaft.

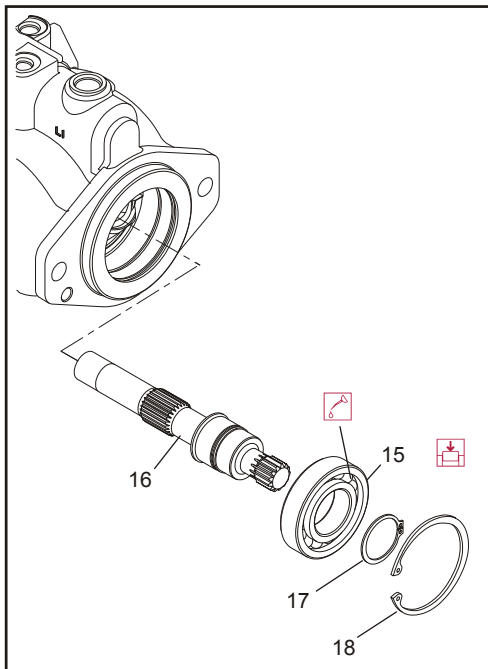


- 15. Front Shaft Bearing
- 16. Shaft
- 17. Snap Ring
- 18. Snap Ring

Figure 3-22. Shaft and Front Bearing

9. While holding the swashplate in place, turn the housing on its side. Install the install shaft/bearing assembly into housing from the flange end. Install the snap-ring (18).


10. Verify swashplate and bearings are properly seated. Install the cylinder kit (19) onto the shaft. Install with the slippers facing the swashplate. Rock the shaft to align the block splines and slide the cylinder kit into place. Orient the motor with the shaft pointing downward and verify the cylinder kit, swashplate, journal bearings, and servo piston are all secure and properly installed.

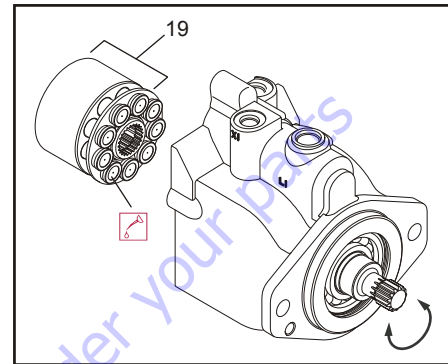

19. Cylinder Kit

Figure 3-23. Cylinder Kit Installation


11. Lubricate and install the servo spring (20), and minimum angle stop (21) into the housing bore.

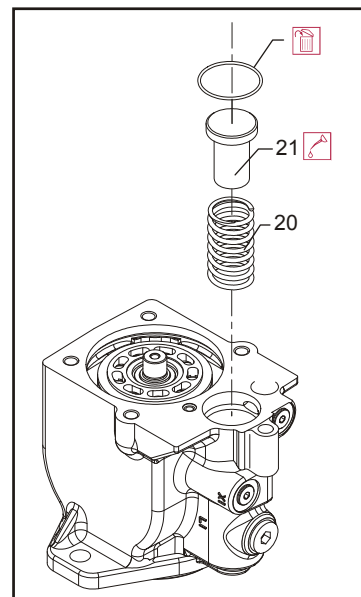

- 20. Servo Spring
- 21. Minimum Angle Stop

Figure 3-24. Servo Spring and Minimum Angle Stop

12. Press the rear shaft bearing (22) into the endcap. Install the bearing with letters facing out. Press until bearing surface is 0.08 ± 0.01 in. (2 ± 0.25 mm) above endcap surface.

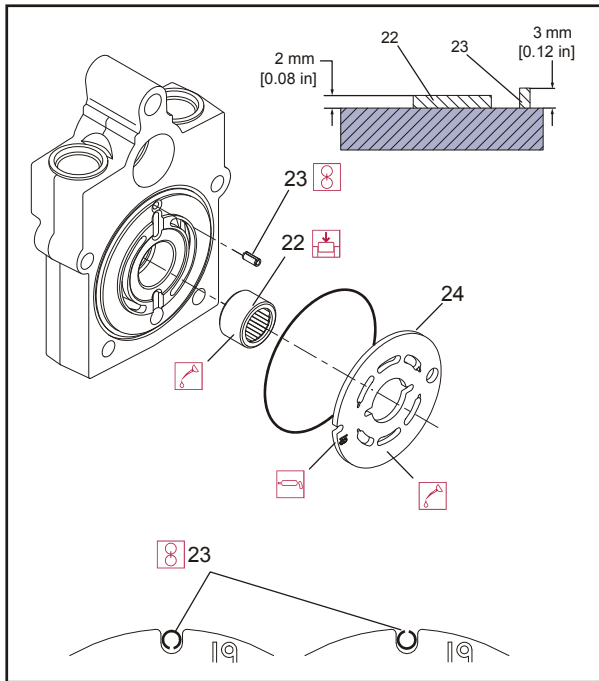


22. Rear Shaft Bearing
23. Timing Pin
24. Valve Plate

Figure 3-25. Valve Plate and Rear Bearing

13. Install timing pin (23) into its bore in the endcap. Install the pin with its groove facing toward or away from the shaft. Press the pin until the end protrudes 0.12 ± 0.01 in (3 ± 0.25 mm) above endcap surface.
14. Install the valve plate (24) onto the endcap. Install the valve plate with the yellow surface toward the cylinder block. Align the slot in the valve plate with the timing pin. Apply a liberal coat of assembly grease to the endcap side of the valve plate to keep it in place during installation.

15. Install the endcap (25) onto the housing with the endcap screws (26). Check to ensure the endcap will properly seat onto the housing without interference. Improper assembly of the internal components may prevent the endcap from seating properly. Ensure the o-rings seat properly when installing the endcap.

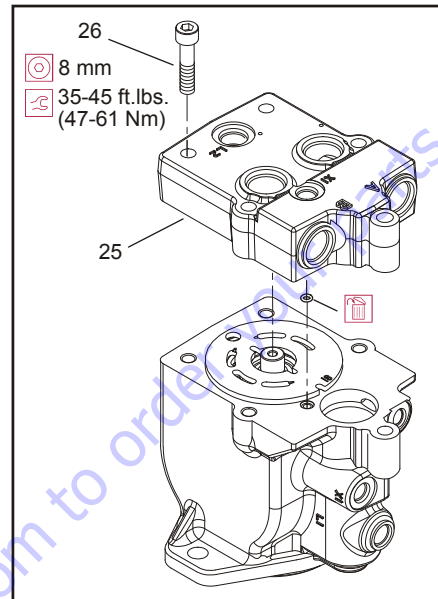


25. End Cap
26. Screw

Figure 3-26. End Cap

16. Using an 8 mm internal hex wrench, tighten the endcap screws. Tighten the screws in opposite corners slowly and evenly to compress the servo spring and properly seat the endcap. Torque endcap screws 35-45 ft. lbs. (47-61 Nm).
17. Before installing the shaft seal, ensure the shaft turns smoothly with less than 120 in. lbs. (13.5 Nm) of force. If the shaft does not turn smoothly within the specified maximum force, disassemble and check the unit.

18. Cover shaft splines with an installation sleeve. Install a new shaft seal (27) with the cup side facing the motor. Press seal into housing until it bottoms out. Press evenly to avoid binding and damaging the seal. Install seal support washer (28) and snap ring (29).

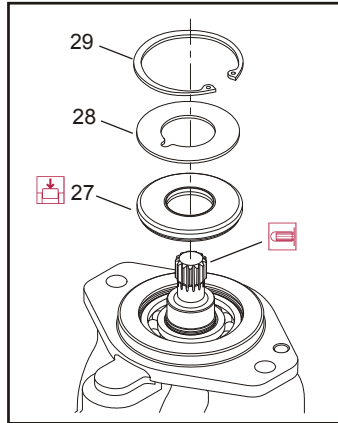

- 27. Shaft Seal
- 28. Seal Support Washer
- 29. Snap Ring

Figure 3-27. Shaft Seal

19. Install remaining plugs and fittings to the housing. Refer to the drawing below for wrench sizes and installation torques.


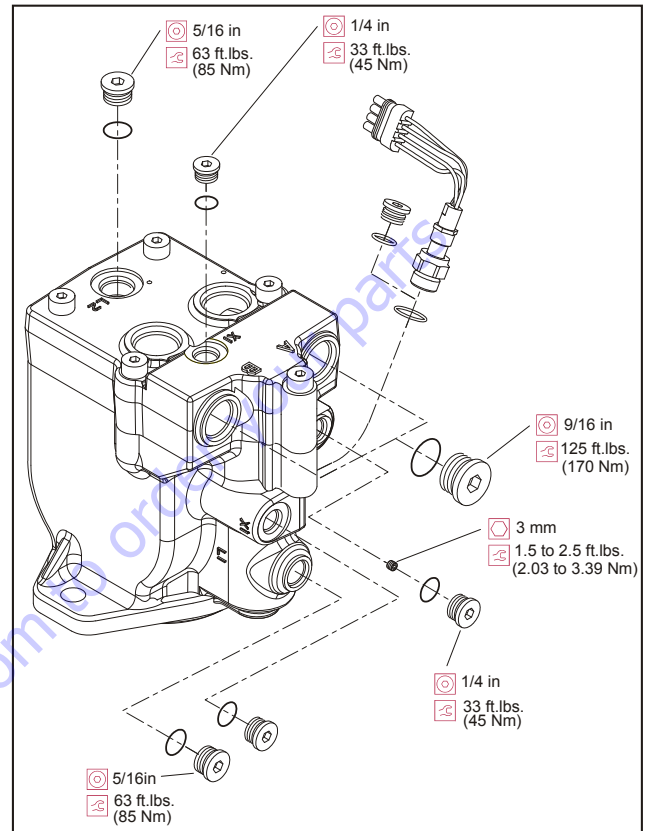


Figure 3-28. Plugs and Fittings Installation

20. Install orifice poppet (30).

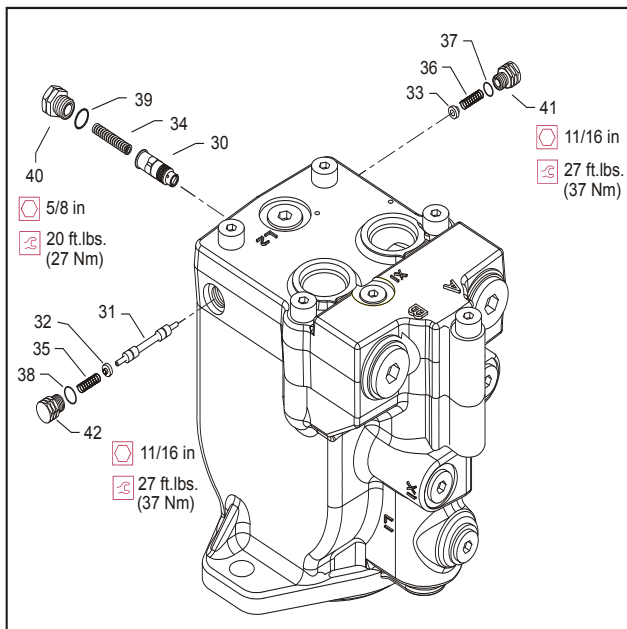

- | | | | |
|--------------------|------------|------------|----------|
| 30. Orifice Poppet | 34. Spring | 37. O-ring | 40. Plug |
| 31. Shift Spool | 35. Spring | 38. O-ring | 41. Plug |
| 32. Spring | 36. Spring | 39. O-ring | 42. Plug |
| 33. Spring | | | |

Figure 3-29. Loop Flushing Spool

21. Install shift spool (31).
22. Install spring retaining washers onto springs (32 and 33).
23. Carefully install centering springs (34, 35, and 36).
24. Install new o-rings (37, 38, and 39).
25. Using a 5/8 in. wrench torque plug (40) to 20 ft. lbs. (27 Nm).
26. Using a 11/16 in. wrench, torque plugs (41 and 42) to 27 ft. lbs. (37 Nm).

Initial Start-up Procedures

Follow this procedure when starting-up a new motor or when installing a motor that has been removed.

Prior to installing the motor, inspect for damage incurred during shipping. Make certain all system components (reservoir, hoses, valves, fittings, heat exchanger, etc.) are clean prior to filling with fluid.

1. Fill the reservoir with recommended hydraulic fluid. Always filter fluid through a 10 micron filter when pouring into the reservoir. Never reuse hydraulic fluid.
2. Fill the inlet line leading from the pump to the reservoir. Check the inlet line for properly tightened fittings and be certain it is free of restrictions and air leaks.
3. Fill the pump and motor housing with clean hydraulic fluid. Pour filtered oil directly into the upper most case drain port.
4. To ensure the pump and motor stay filled with oil, install case drain lines into the upper most case drain ports.
5. Install a 0 to 500 psi (0 to 35 bar) gauge in the charge pressure gauge port of the pump to monitor system pressure during start up.
6. While watching the pressure gauge, run the engine at the lowest possible speed until system pressure builds to normal levels (minimum 160 psi (11 bar)). Once system pressure is established, increase to full operating speed. If system pressure is not maintained, shut down the prime mover, determine cause, and take corrective action.
7. Operate the hydraulic system for at least fifteen minutes under light load conditions.
8. Check and adjust control settings as necessary after installation.
9. Shut down the prime mover and remove the pressure gauge. Replace plug at the charge pressure gauge port.
10. Check the fluid level in the reservoir; add clean filtered fluid if necessary. The motor is now ready for operation.

Troubleshooting

Table 3-5. Excessive Noise and/or Vibration

Item	Description	Action
Check oil level in reservoir and oil supply to the motor.	Insufficient hydraulic fluid could lead to cavitation that would cause system noise.	Fill the reservoir to the proper level and ensure that oil supply to the motor is adequate and the lines are unobstructed.
Check for air in the system.	Air trapped within the system lines, or the motor itself, could result in cavitation that would cause system noise.	Ensure that all of the system lines and components are purged of air.
Inspect the output shaft couplings.	A loose or incorrect shaft coupling will produce vibrations that could result in system noise.	Ensure that the correct coupling is used and that it fits properly onto the shaft.
Inspect the output shaft alignment.	Misaligned shafts create excessive frictional vibration that could result in system noise.	Ensure that the shafts are properly aligned.
Hydraulic oil viscosity above limits.	Viscosity above acceptable limits will result in cavitation that would lead to system noise.	Replace hydraulic oil with appropriate fluid for operating conditions.

Table 3-6. System Operating Hot

Item	Description	Action
Check oil level in reservoir and oil supply to the pump.	Insufficient amount of hydraulic fluid will not meet the cooling demands of the system.	Fill the reservoir to the proper level.
Inspect the heat exchanger, (if so equipped).	If the heat exchanger fails, or becomes obstructed, it may not meet the cooling demands of the system.	Ensure that heat exchanger is receiving adequate air flow and that the heat exchanger is in good operating condition. Repair or replace as necessary.
Check the system relief valves.	If a system relief valve becomes unseated for an extended period of time or fails for any other reason, the system could become overheated.	Repair or replace any malfunctioning relief valves as applicable and verify that the loads on the machine are not excessive.


Table 3-7. Won't Shift or Slow to Start

Item	Description	Action
Check the signal line to the servo control port.	Obstructed or restricted flow through the servo control signal lines could result in slow shift or no shift conditions within the motor.	Ensure that the signal lines are not obstructed or restricted and that signal pressure is adequate to shift the motor.
Check that the correct supply and drain orifices are properly installed, and are not obstructed.	Supply and drain orifices determine the shift rate of the motor. The smaller the orifice, the longer the time it takes to shift the motor. Obstruction will also increase shift times.	Ensure that the proper control orifices are installed in the motor and verify that they are not obstructed. Clean or replace as necessary.

Shaft Seal Replacement

REMOVAL

1. Remove the snap ring (1) retaining the shaft seal and support washer.

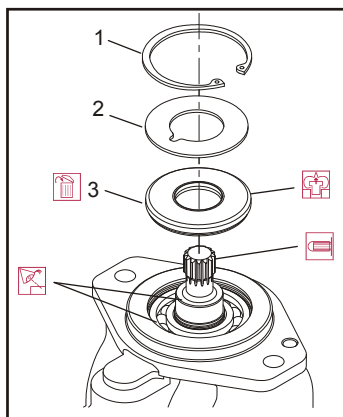

1. Snap Ring
2. Support Washer
3. Shaft Seal

Figure 3-30. Removing the Shaft Seal

2. Remove the support washer (2).
3. Carefully pry out the shaft seal (3).

To avoid damaging the shaft during removal, install a large sheet metal screw into the chuck of a slide hammer. Drive the screw into the seal surface and use the slide hammer to pull the seal.

4. Discard the seal.

INSPECT THE COMPONENTS

Inspect the new seal, the motor housing seal bore, and the sealing area on the shaft for rust, wear, and contamination. Polish the shaft and clean the housing if necessary.


INSTALLATION

1. Cover the shaft splines with an installation sleeve to protect the shaft seal during installation.
2. Install a new shaft seal with the cupped side facing the motor. Press seal into housing until it bottoms out. Press evenly to avoid binding and damaging the seal.
3. Install seal support washer.
4. Install snap ring.
5. Remove the installation sleeve.

Loop Flushing Valve

REMOVAL

- Using a 11/16 in. internal hex wrench remove plug (1) and (2).

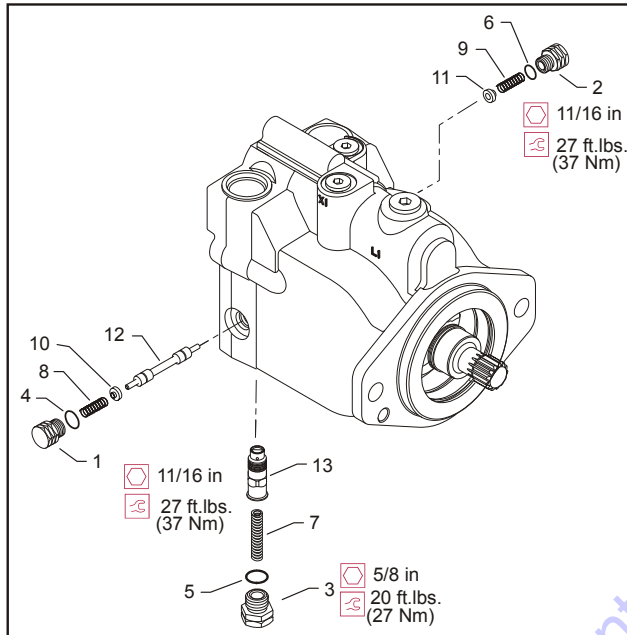

- | | | |
|-----------|------------|--------------------|
| 1. Plug | 6. O-ring | 11. Washer |
| 2. Plug | 7. Spring | 12. Shift Spool |
| 3. Plug | 8. Spring | 13. Orifice Poppet |
| 4. O-ring | 9. Spring | |
| 5. O-ring | 10. Washer | |

Figure 3-31. Loop Flushing Spool


- Using a 1/4 in. hex wrench remove plug (3).
- Remove o-rings (4, 5, and 6).
- Using pliers, remove centering springs (7, 8, and 9).
- Remove spring retaining washers (10 and 11).
- Remove shift spool (12).
- Remove orifice poppet (13).

INSPECT THE COMPONENTS

Inspect new o-rings and the sealing area for rust, wear, or contamination. Also check springs and poppet for wear.

INSTALLATION

- Install orifice poppet (13).
- Install shift spool (12).
- Install spring retaining washers onto springs (10 and 11).
- Carefully install centering springs (7, 8, and 9).
- Install new o-rings (6, 4, and 5).
- Using a 1/4 in. hex wrench torque plug (3) to 20 ft. lbs. (27 Nm).
- Using a 11/16 in. internal hex, torque plugs (2 and 1) to 27 ft. lbs. (37 Nm).

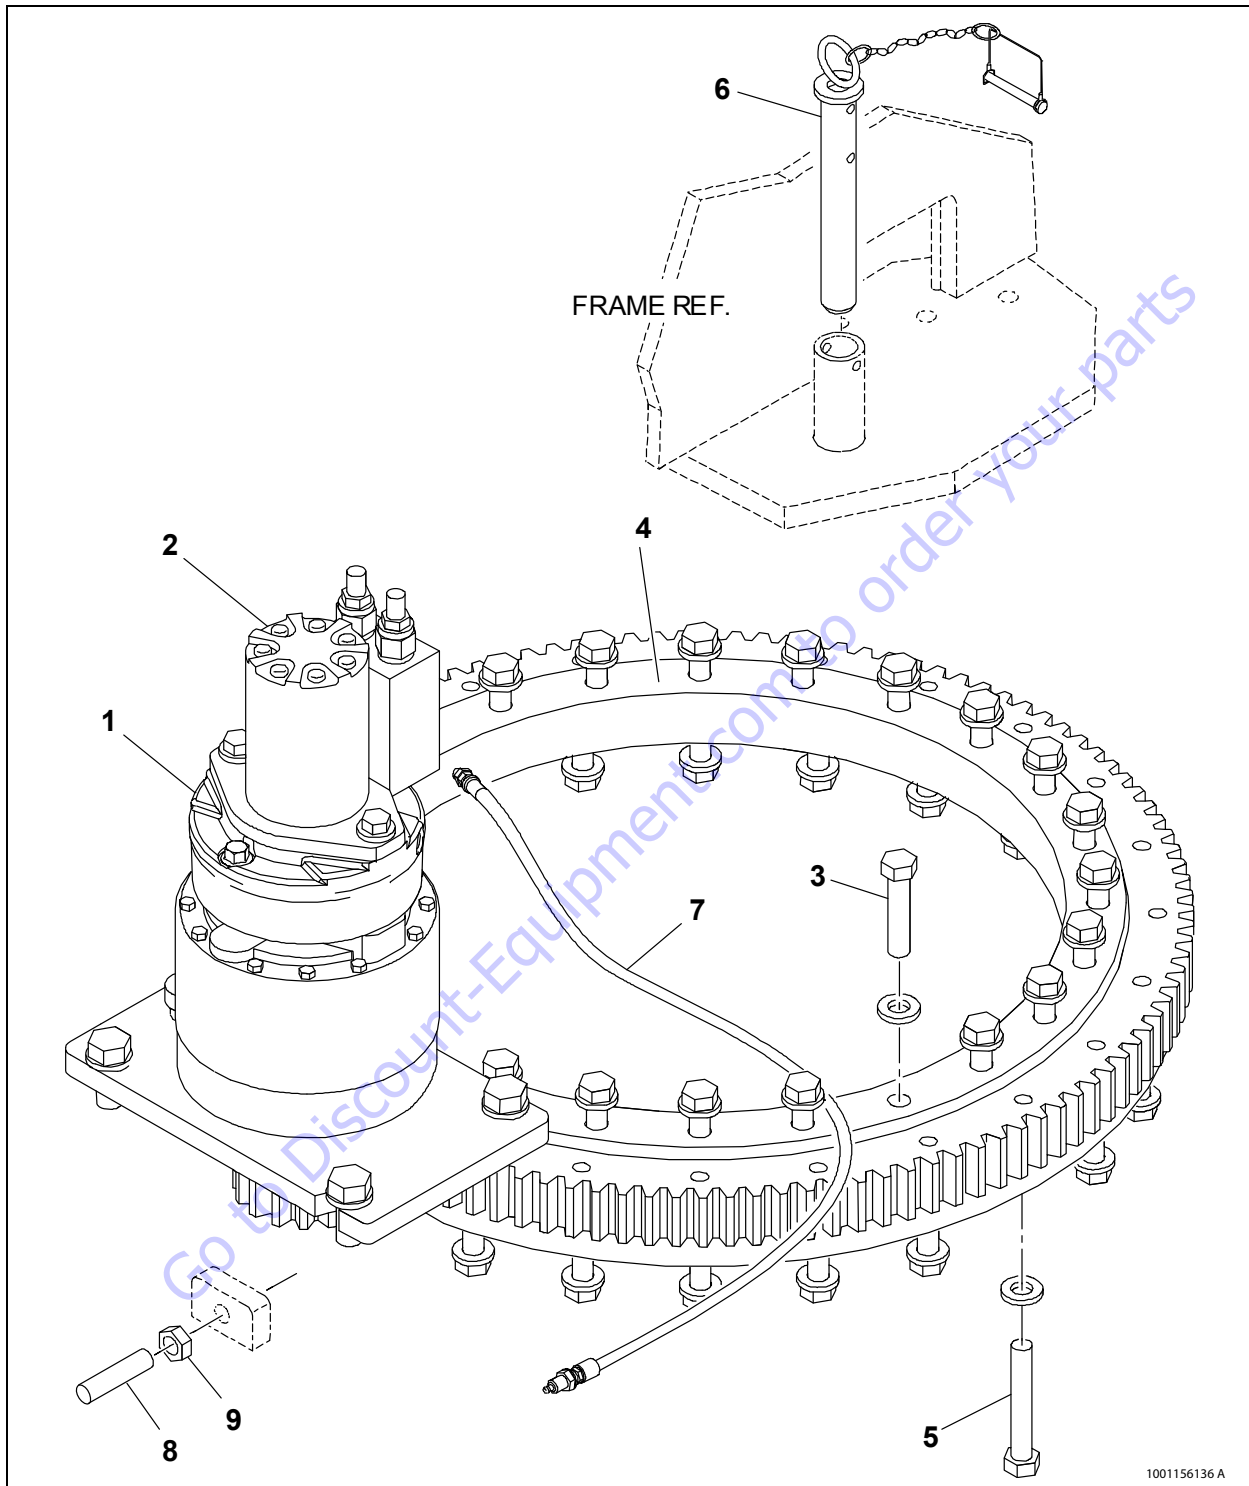

- | | | |
|----------------------------|----------------------------|----------------|
| 1. Swing Drive | 4. Swing Bearing | 7. Grease Line |
| 2. Swing Motor | 5. Outer Race Bearing Bolt | 8. Bolt |
| 3. Inner Race Bearing Bolt | 6. Turntable Lock Pin | 9. Jam Nut |

Figure 3-32. Swing System

3.8 SWING HUB

Roll, Leak And Brake Testing

Torque-Hub units should always be roll and leak tested before disassembly and after assembly to make sure that the unit's gears, bearings and seals are working properly. The following information briefly outlines what to look for when performing these tests.

Roll Test

The purpose of the roll test is to determine if the unit's gears are rotating freely and properly. You should be able to rotate the gears in your unit by applying constant force to the roll checker. If you feel more drag in the gears only at certain points, then the gears are not rolling freely and should be examined for improper installation or defects. Some gear packages roll with more difficulty than others. Do not be concerned if the gears in your unit seem to roll hard as long as they roll with consistency. Release the pressure at the Brake Housing (6) and remove the test fixtures.

Leak Test (Main Unit)

The purpose of a leak test is to make sure the unit is air tight. You can tell if your unit has a leak if the pressure gauge reading on your air checker starts to fall after the unit has been pressurized and allowed to equalize. Leaks will most likely occur at the pipe plugs, the main seal or wherever o-rings or gaskets are located. The exact location of a leak can usually be detected by brushing a soap and water solution around the main seal and where the o-rings or gaskets meet on the exterior of the unit, then checking for air bubbles. If a leak is detected in a seal, o-ring or gasket, the part must be replaced, and the unit rechecked. Leak test at 10 psi (0.7 bar) for 20 minutes.

Brake Test

The brake test must be performed with the Motor removed and the Brake Test Plate (T-214404) installed. Install the Hex Bolts through Brake Test Plate and torque to 80 - 100 ft. lbs. (108-135 Nm). Install Roll Checking Tool (T-212731) and apply 210 psi (14 bar) to the o-ring port in the side of the Brake Housing. The roll checking fixture should roll freely. Increase the pressure to 3000 psi (207 bar) and perform the Roll Test.


NOTE: Failure to perform this test may result in damaged or ineffective brake parts.

Tightening and Torquing Bolts

If an air impact wrench is used to tighten bolts, extreme care should be taken to ensure that the bolts are not tightened beyond their specified torque.

The following steps describe how to tighten and torque bolts or socket head capscrews in a bolt circle.

BOLT A

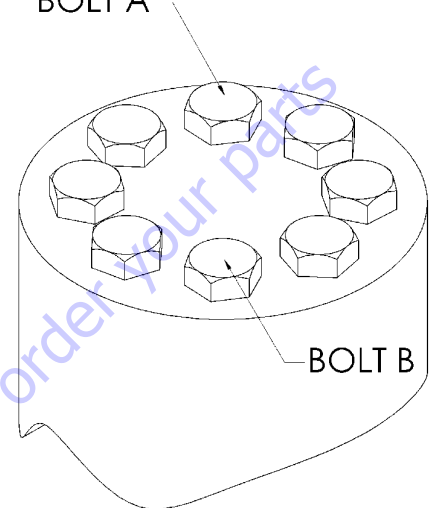


1. Tighten (but do not torque) bolt "A" until snug.
2. Go to the opposite side of the bolt circle and tighten bolt "B" until equally snug.
3. Crisscross around the bolt circle and tighten remaining bolts.
4. Now use a torque wrench to apply the specified torque to bolt "A".
5. Using the same sequence, crisscross around the bolt circle and apply an equal torque to the remaining bolts.

Motor Control Valve Disassembly

NOTE: Refer to Figure 3-33.

1. Place unit on bench with the motor end up.
2. Remove O-ring Plug (1P) and drain the oil from the gear-box.
3. Remove Hydraulic Tubing Assembly (35) by loosening fittings on both ends of tube with a wrench.
4. Using a wrench, loosen jam nuts on Elbow Fittings (30) and remove fittings from Brake (6) and Motor Control Valve (32).
5. Remove O-ring Plugs (23) from Motor Control Valve (32).
6. Remove Motor Control Valve (32) from Motor (31) by removing the four Bolts (21) and washers (22).

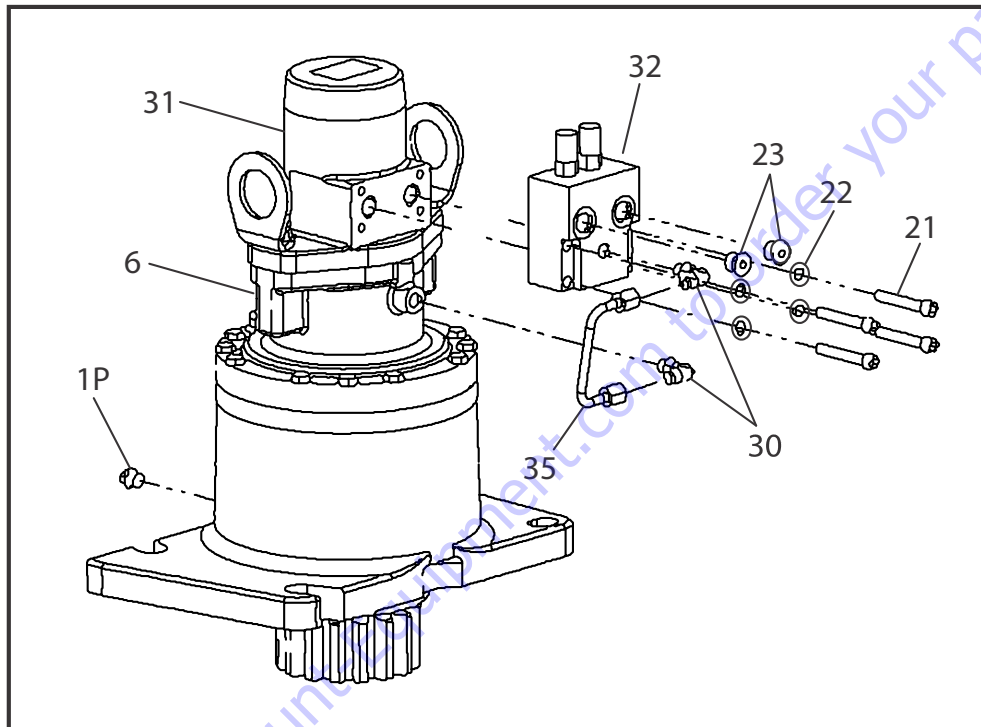

- | | |
|--------------------|-------------------------|
| 1P. O-ring Plug | 30. Elbow Fitting |
| 6. Hydraulic Brake | 31. Hydraulic Motor |
| 21. Hex Bolt | 32. Motor Control Valve |
| 22. Lockwasher | 35. Hydraulic Tubing |
| 23. Plug | |

Figure 3-33. Motor Control Valve

Motor and Brake Disassembly

NOTE: Refer to Figure 3-34.


1. With unit resting on bench with Motor (31) end up, loosen Hex Bolts (29) and remove Lift Lugs (28) from the Motor (31).
2. Pull Motor (31) straight up and remove Motor (31) from Brake Housing (6).
3. Remove O-ring (26) from between Motor (31) and Brake Housing (6).

4. Remove the Springs (8L) from the piston.
5. Apply less than 50 psi (3.45 bar) air to the "brake port" to remove Brake Piston (8A).

CAUTION

THE PISTON MAY MOVE QUICKLY. EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

6. Remove Rotors (8J) and Stators (8K) from Brake Housing (6).

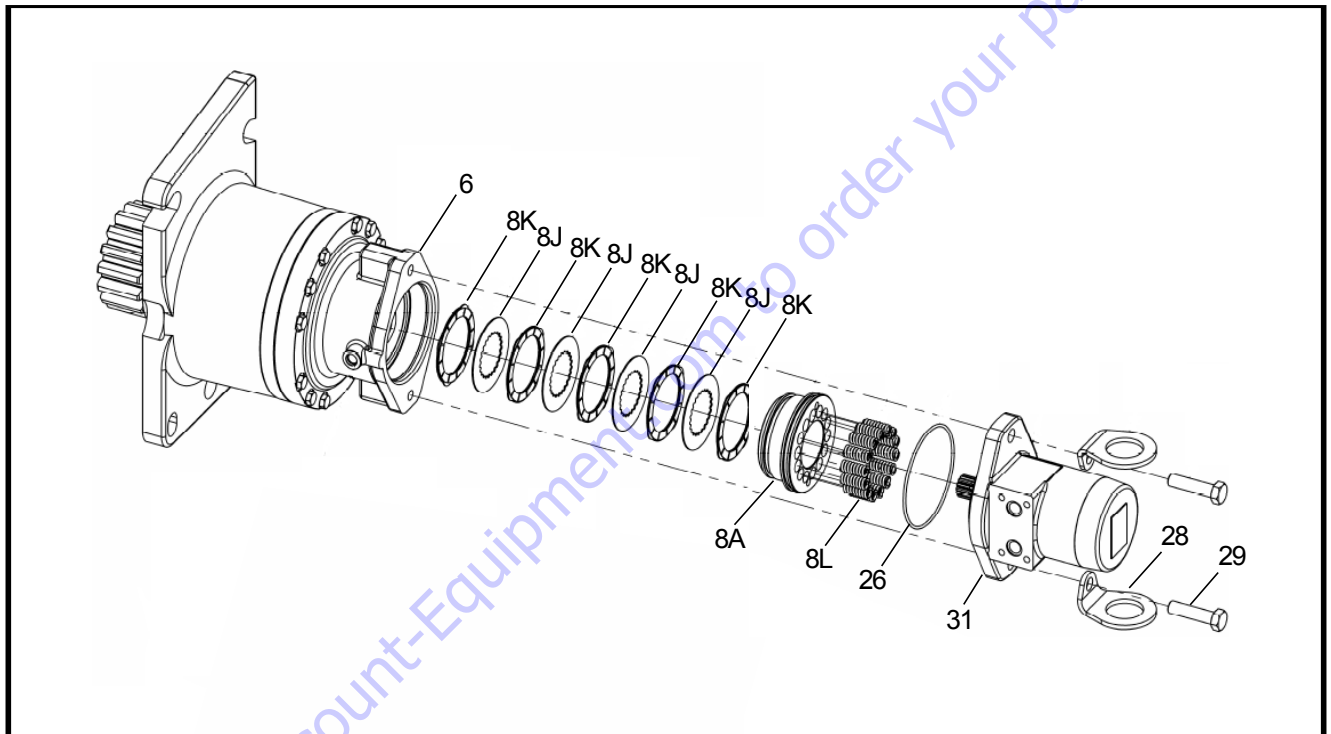


- | | |
|------------------|--------------|
| 6. Brake Housing | 26. O-ring |
| 8A. Brake Piston | 28. Lift Lug |
| 8L. Spring | 29. Hex Bolt |
| 8J. Rotors | 31. Motor |
| 8K. Stator | |

Figure 3-34. Motor and Brake

Main Drive Disassembly

NOTE: Refer to Figure 3-35.

1. Remove Sun Gear (8) with Retaining Ring (44) inside.
2. With the unit resting on the Output Shaft (Pinion) (1A), remove the Bolts (12) from the Brake Housing (6).
3. Remove the Brake Housing (6) from the main assembly.
4. Remove O-ring (5A) from between Brake Housing (6) and Ring Gear (4).
5. Remove Thrust Washer (11) from between Brake Housing (6) and Carrier Subassembly.
6. Remove Ring Gear (4) from Housing (1G).
7. Remove O-ring (5) from between Ring Gear (4) and Housing (1G).
8. Remove Carrier Sub-Assembly.
9. Remove Thrust Washer (11) from between Carrier Sub-Assembly and Internal Gear (2).
10. Remove Internal Gear (2).

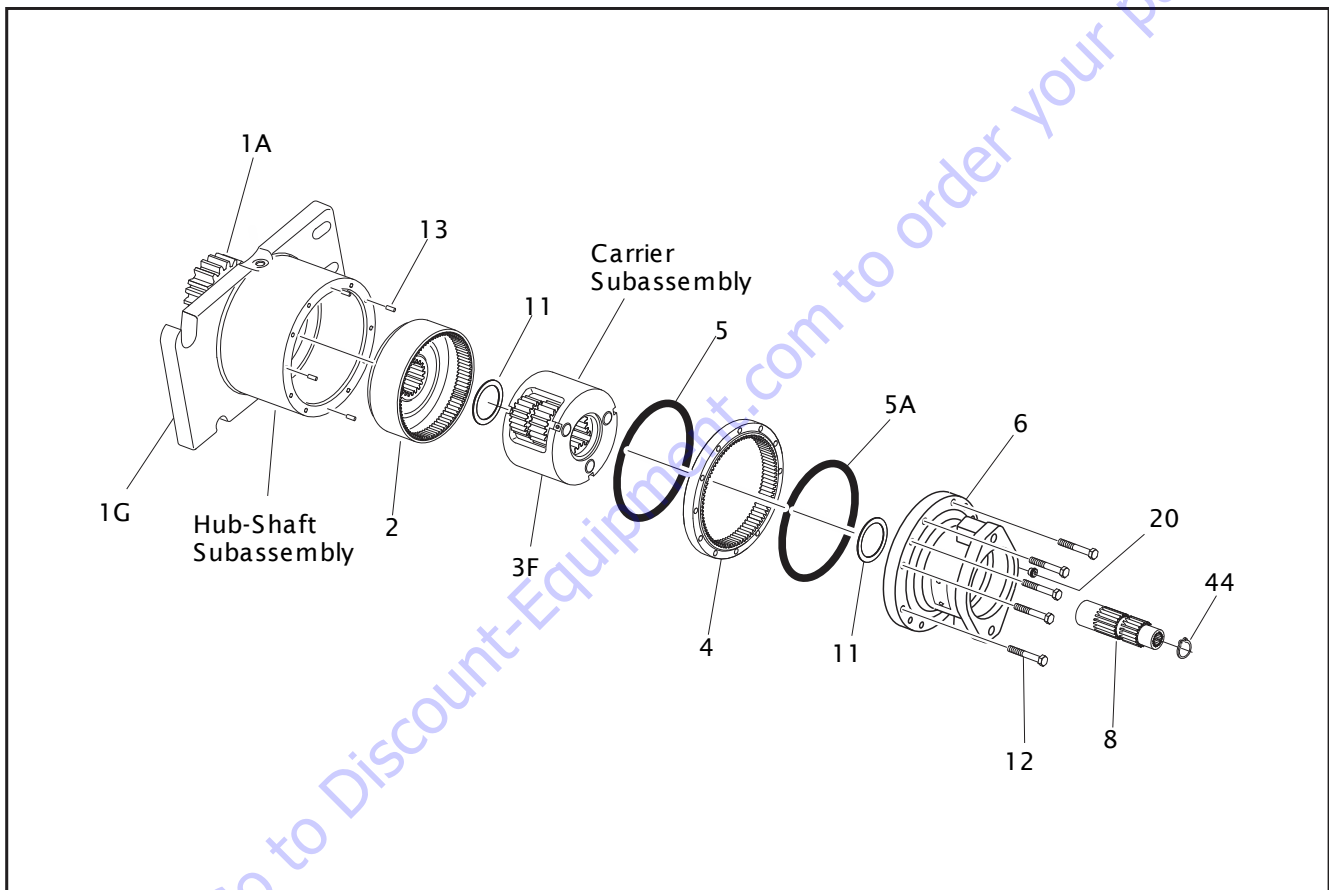

- | | | |
|---------------------------|-------------------|---------------|
| 1A. Output Shaft (Pinion) | 5. O-ring | 12. Bolt |
| 1G. Housing | 5A. O-ring | 13. Dowel Pin |
| 2. Internal Gear | 6. Brake Housing | 20. Pipe Plug |
| 3F. Carrier subassembly | 8. Sun Gear | 44. Ring |
| 4. Ring Gear | 11. Thrust Washer | |

Figure 3-35. Main Drive Assembly

Hub-Shaft Disassembly

NOTE: Refer to Figure 3-36.

1. Using retaining ring pliers remove Retaining Ring (1I) from groove in Output Shaft (1A) and discard.

⚠ CAUTION


EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

2. Remove Thrust Washer (1H).

3. While supporting the Housing (1G) on the Output Shaft (1A) end, press the Output Shaft (1A) out of the Housing (1G).

NOTE: The Lip Seal (1B) will be pressed out of the Housing (1G) by the Bearing Cone (1D) during this step.

4. Remove the Bearing Cone (1E) from the Housing (1G).
5. Use a bearing puller to remove the Bearing Cone (1D) from the Shaft (1A).
6. Bearing Cups (1C & 1F) will remain in Housing (1G).

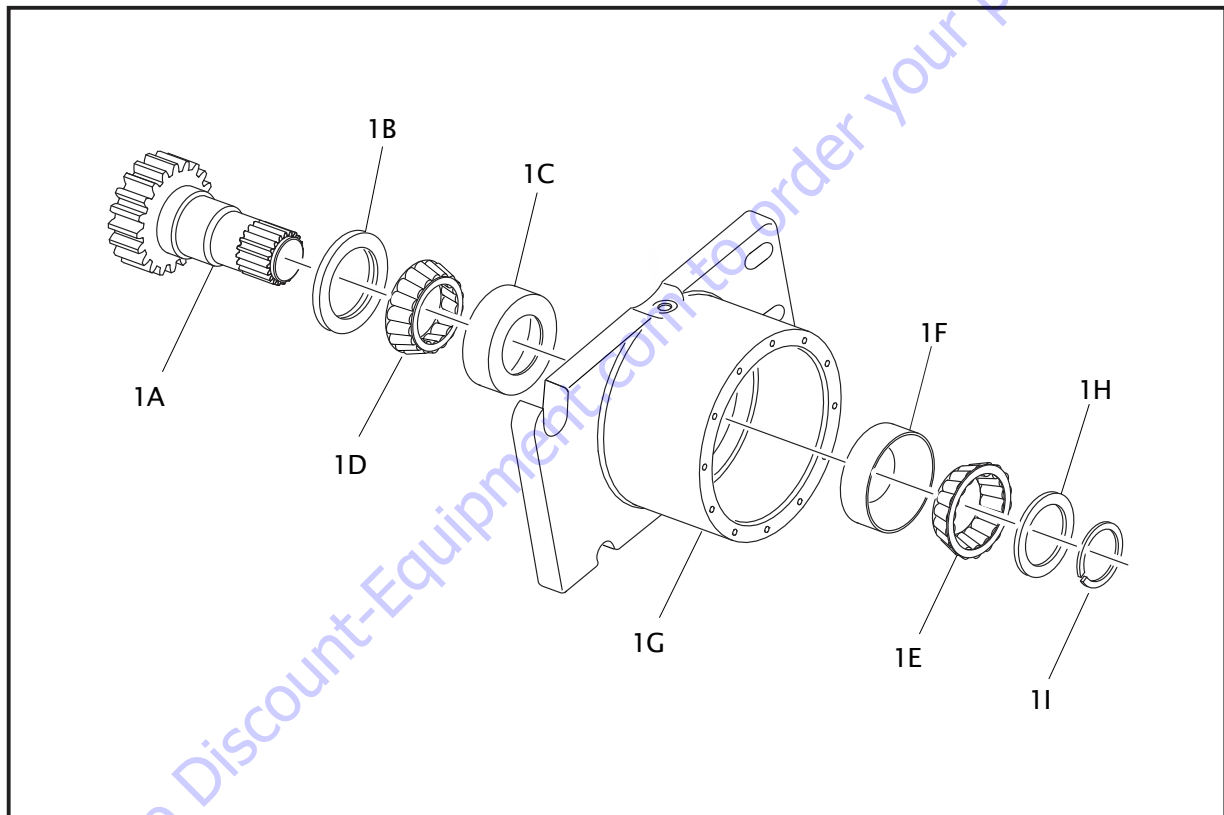

- | | |
|------------------|--------------------|
| 1A. Output Shaft | 1F. Bearing Cup |
| 1B. Lip Seal | 1G. Housing |
| 1C. Bearing Cup | 1H. Thrust Washer |
| 1D. Bearing Cone | 1I. Retaining Ring |
| 1E. Bearing Cone | |

Figure 3-36. Hub-Shaft


Carrier Disassembly

NOTE: Refer to Figure 3-37.

1. Using a 3/16 in. punch drive the Roll Pin (3G) which holds the Planet Shaft (3E) in the Carrier (3A) down into the Planet Shaft (3E) until it bottoms.

NOTE: Make sure that the Roll Pin has bottomed. Otherwise, damage to the carrier could occur when the Planet Shaft is removed.

2. Remove the Planet Shaft (3E) from the Carrier (3A). Use a small punch to remove the Roll Pin (3D) from the Planet Shaft (3E).
3. Slide the Planet Gear (3F), the two Thrust Washers (3B) out of the Carrier (3A).
4. Remove both rows of Needle Bearings (3C) and the Spacer (3D) from the bore of the Planet Gear (3F).
5. Repeat Steps 1 through 4 for the remaining two Cluster Gears (3F).

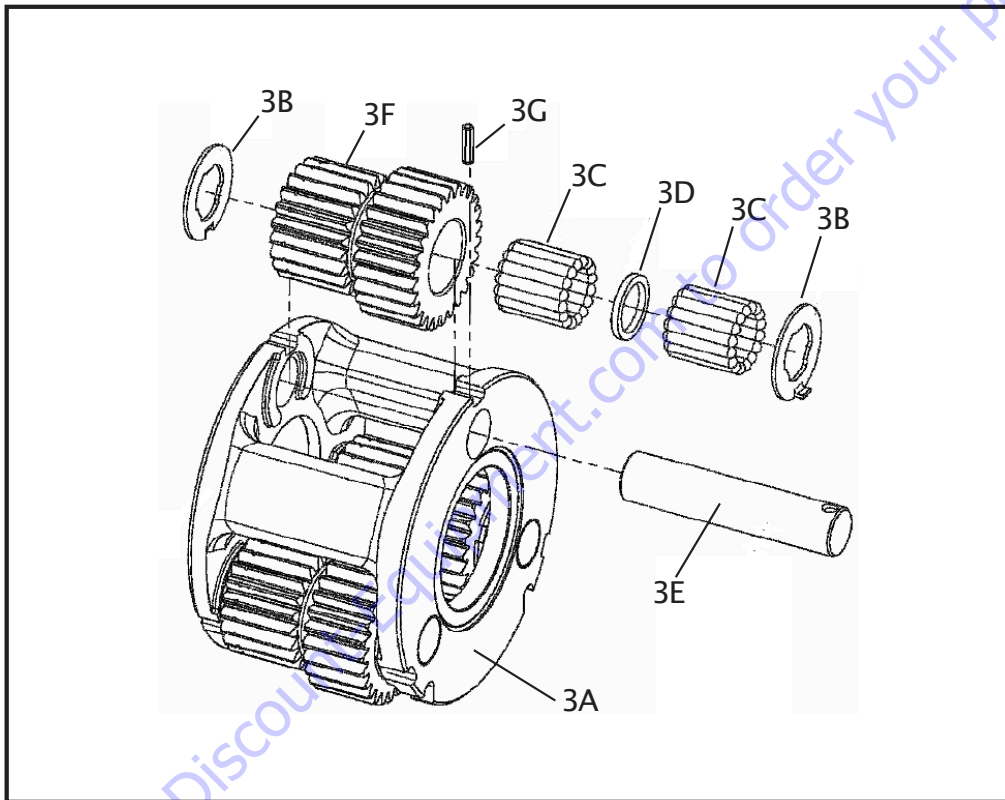

- | | |
|--------------------|------------------|
| 3A. Carrier | 3E. Planet Shaft |
| 3B. Thrust Washers | 3F. Cluster Gear |
| 3C. Needle Bearing | 3G. Roll Pin |
| 3D. Spacer | |

Figure 3-37. Carrier

Hub-Shaft Assembly

NOTE: Refer to Figure 3-36.

1. Press Bearing Cup (1C) into Housing (1G) taking care to insure cup starts square with the bore of Hub (1G).
2. Place Bearing Cone (1D) in Bearing Cup (1C) in Housing (1G).
3. Press or tap Seal (1B) Into the counterbore of Housing (1G) to the point where it becomes flush with the Housing (1G) face. Care should be taken to insure Seal (1B) is being correctly installed (smooth face up). Apply grease to the rubber portion of the seal bore.
4. Invert Hub (1G) and press Bearing Cup (1E) into counterbore of Housing (1G).
5. Carefully lower Housing (1G) onto the Output Shaft (1A) until Bearing Cone (1D) contacts the Output Shaft (1A).
6. Press on the small end of the Bearing Cone (1D), being careful not to contact the bearing cage, until the Bearing Cone (1D) seats on the shoulder of the Output Shaft (1A).
7. Start the Bearing Cone (1F) onto the Output Shaft (1A).
8. Press or tap the Bearing Cone (1F) onto the Output Shaft (1A) until it is just seated in the Bearing Cup (1E). while rotating the Housing (G).
9. Install Bearing Spacer (1H) onto Output Shaft (1A) and against Bearing Cone (1F).
10. Install Retaining Ring (1I) into the groove in the Output Shaft (1A). This Retaining Ring (1I) should never be reused in a repair or rebuild.

WARNING

EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

11. Tap the Retaining Ring (1I) with a soft metal punch to ensure that the Retaining Ring (1I) is completely seated in the groove of the Output Shaft (1A).

WARNING

EYE PROTECTION SHOULD BE WORN DURING THIS PROCEDURE.

12. Install O-ring Plug (1P) and torque to 23 to 24 ft. lbs. (31 to 32 Nm).

Carrier Assembly

NOTE: Refer to Figure 3-37.

1. Apply a liberal Coat of grease to the bore of Cluster Gear (3F). This will enable the Needle Rollers (3C) to be held in place during assembly.
2. Install the first row of Needle Rollers (3C) into the bore of Cluster Gear (3F).
3. Insert Spacer (3D) into bore of Cluster Gear (3F) on top of the Needle Rollers (3C).
4. Place second row of Needle Rollers (3C) into bore of Cluster Gear (3F) against Spacer (3D).
5. Place Carrier (3A) so that one of the roll pin holes is straight up.
6. Start Planet Shaft (3E) through the hole in Carrier (3A). Using ample grease to hold it in position, slide one Thrust Washer (3B) over the Planet Shaft (3E) with the tang resting in the cast slot of the Carrier (3A).
7. With large end of Cluster Gear (3F) facing the roll pin hole in the Carrier, place the Cluster Gear into position in carrier (3A) and push Planet Shaft (3E) through the Cluster Gear (3F) without going all the way through.
8. Slide the second Thrust Washer (3B) between the Cluster Gear (3F) and the Carrier (3A) with the tang of the washer located in the cast slot of the Carrier (3A). Finish sliding the Planet Shaft (3E) through the Thrust Washer (3B) and into the Carrier (3A).
9. Position the non-chamfered side on the Planet Shaft (3E) roll pin hole so that it is in line with the hole in the Carrier (3A) using a 1/8 in. (3 mm) diameter punch.
10. After using a 3/16 in. (5 mm) punch to align the two roll pin holes. Drive the Roll Pin (3G) through Carrier (3A) and into the Planet Shaft (3E) until the Roll Pin (3G) is flush with the bottom of the cast slot in the Carrier (3A) outside diameter at the thrust washer (3B) tang. Use a 1/4 in. (6 mm) pin punch to make sure the Roll Pin (3G) is flush in the slot.
11. Repeat Steps 1 through 10 for the remaining two Cluster Gears (3F).

Main Drive Assembly

NOTE: Refer to Figure 3-35.

1. With the Hub Shaft Sub-Assembly resting on the Shaft (1A) install Internal Gear (2). The spline of the Internal Gear (2) bore will mesh with the spline of the Output Shaft (1A). This will be a tight fit.
2. Inspect the location of the Internal Gear (2) on the Output Shaft (1A). The portion of the Output Shaft (1A) should protrude through the Internal Gear (2) bore.
3. Install 4 Dowel Pins (13) into counterbore holes in Hub (1G).
4. Install Thrust Washer (11) in counterbore of Carrier Sub-Assembly (Small Cluster-Gear end) Use grease to hold in place.
5. Place O-ring (5) into Hub counter-bore. Use grease to hold O-ring in place.

⚠ WARNING

BEWARE OF SHARP EDGES OF THE COUNTERBORE WHILE SEATING THIS O-RING.

6. Place Carrier Sub-Assembly on bench with the large end of Cluster Gears (3F) facing up with one at the 12 o'clock position. Find the punch marked tooth on each gear at the large end and locate at 12 o'clock (straight up) from each planet pin. Marked tooth will be located just under the Carrier on upper two gears. Check the timing through the slots in the carrier (See Carrier Sub-Assembly).
7. With large shoulder side of Ring Gear (4) facing down, place Ring Gear (4) over (into mesh with) cluster gears (3F). Be sure that cluster gear timing marks (punch marks) remain in correct location during Ring Gear (4) installation. The side of the Ring Gear (4) with an "X" or punch mark stamped on it should be up.
8. While holding Ring Gear (4) and Cluster Gears (3F) in mesh, place small end of Cluster Gears (3F) into mesh with the Internal Gear (2). On the Ring Gear (4) locate the hole marked "X", or punch marked, over one of the marked counter-bored holes (Step 5) in Hub (1G). Check timing through the slots in the carrier. Rotate carrier in assembly to check for freedom of rotation.

NOTE: If gears do not mesh easily or Carrier Assembly does not rotate freely, then remove the Carrier and Ring Gear and check the Cluster Gear timing.

9. Install Thrust Washer (11) into the counterbore on the face of the carrier. Use grease to hold in place.
10. Place O-ring (5A) into counter-bore or Brake Housing (6). Use grease to hold O-Ring in place.

⚠ CAUTION

BEWARE OF SHARP EDGES OF THE COUNTERBORE WHILE SEATING THIS O-RING.

11. Install the Brake Housing (6), taking care to correctly align Pipe Plug (20) with those in the Hub (1G).
12. Install Bolts (12) through the Brake Housing (6) into the Hub (1G) and torque to 23-27 ft. lbs. (31-37 Nm).
13. With gearbox standing on the pinion end fill gearbox with 43 oz. of ISO VG150/VG220 gear Oil.
14. Install Retaining Ring (44) into the groove in the Sun Gear (8).
15. Install the Sun Gear (8) into mesh with the Planet Gears (3F).
16. Install Pipe Plug (20) into Cover (6) torque to 23 to 24 ft. lbs. (31-32 Nm).

Motor and Brake Assembly

NOTE: Refer to Figure 3-34.

1. Alternate Stators (8K) (O.D. lobes) with Rotors (8J) (I.D. splines) into bore of Brake Housing (6). starting with a Stator (8K) and ending with a Stator (8K).
2. Grease the O-rings (8F) & (8D) and Backup rings (8H) & (8E). and place them in their respective grooves in the Brake Housing (6) and Piston (8A). Make sure the Backup rings are correctly positioned.
3. Apply grease sparingly to the Piston O.D. (8A) and the bore of the Brake Housing (6). Insert Piston (8A) into Brake Housing (6) be sure not to damage the O-rings.
4. Install Springs (8L) into the spring pockets of the Piston (8A).
5. Test the brake and perform the roll test. Remove the Brake Test Plate.
6. Install the O-ring (26) onto the pilot of the Motor (31), use grease to keep the O-ring in place.
7. Place Motor (31) into Brake pilot, and line up holes.
8. Assemble Lift Lugs (28) onto Hex Bolts (29). Assemble Hex Bolts (29) with Lift Lugs (28) through the Motor (31) and Brake (6) against Motor flange. Torque to 80-100 ft. lbs. (108-136 Nm).


Motor Control Valve Assembly

NOTE: Refer to Figure 3-33.

1. Lay assembly down with motor ports facing up. Remove the two plastic plugs in the motor ports, being careful not to lose the O-ring in each port. Assemble the Motor control Valve (32) onto the Motor (31) with Bolt (21) and Lock Washers (22). Torque Bolts (21) to 23-27 ft. lbs. (31-37 Nm).

NOTE: Be sure to align the holes in the control valve with the motor ports.


2. Install Elbow Fittings (30) into Brake (6). Do not tighten jam nuts.
3. Install Elbow Fittings (30) into Motor Control Valve (32). Do not tighten jam nuts.
4. Assemble Tube (35) into Elbow Fittings (30) and torque to 13-15 ft. lbs. (18-20 Nm). Tighten the jam nuts on the Elbow Fittings (30) and torque to 13-15 ft. lbs. (18-20 Nm).
5. Install one O-ring Plug (23) into Motor Control Valve (32) and torque to 30-31 ft. lbs. (41-42 Nm).
6. Pressure test brake, tube and control valve connections by applying 3000 psi (207 bar) pressure to the open port in the Motor Control Valve (32) and holding for 1 minute. Check for leaks at the control-valve-motor interface and the tube connections. Release pressure and install the remaining O-ring Plug (23) into Motor Control Valve (32) and torque to 30-31 ft. lbs. (41-42 Nm).

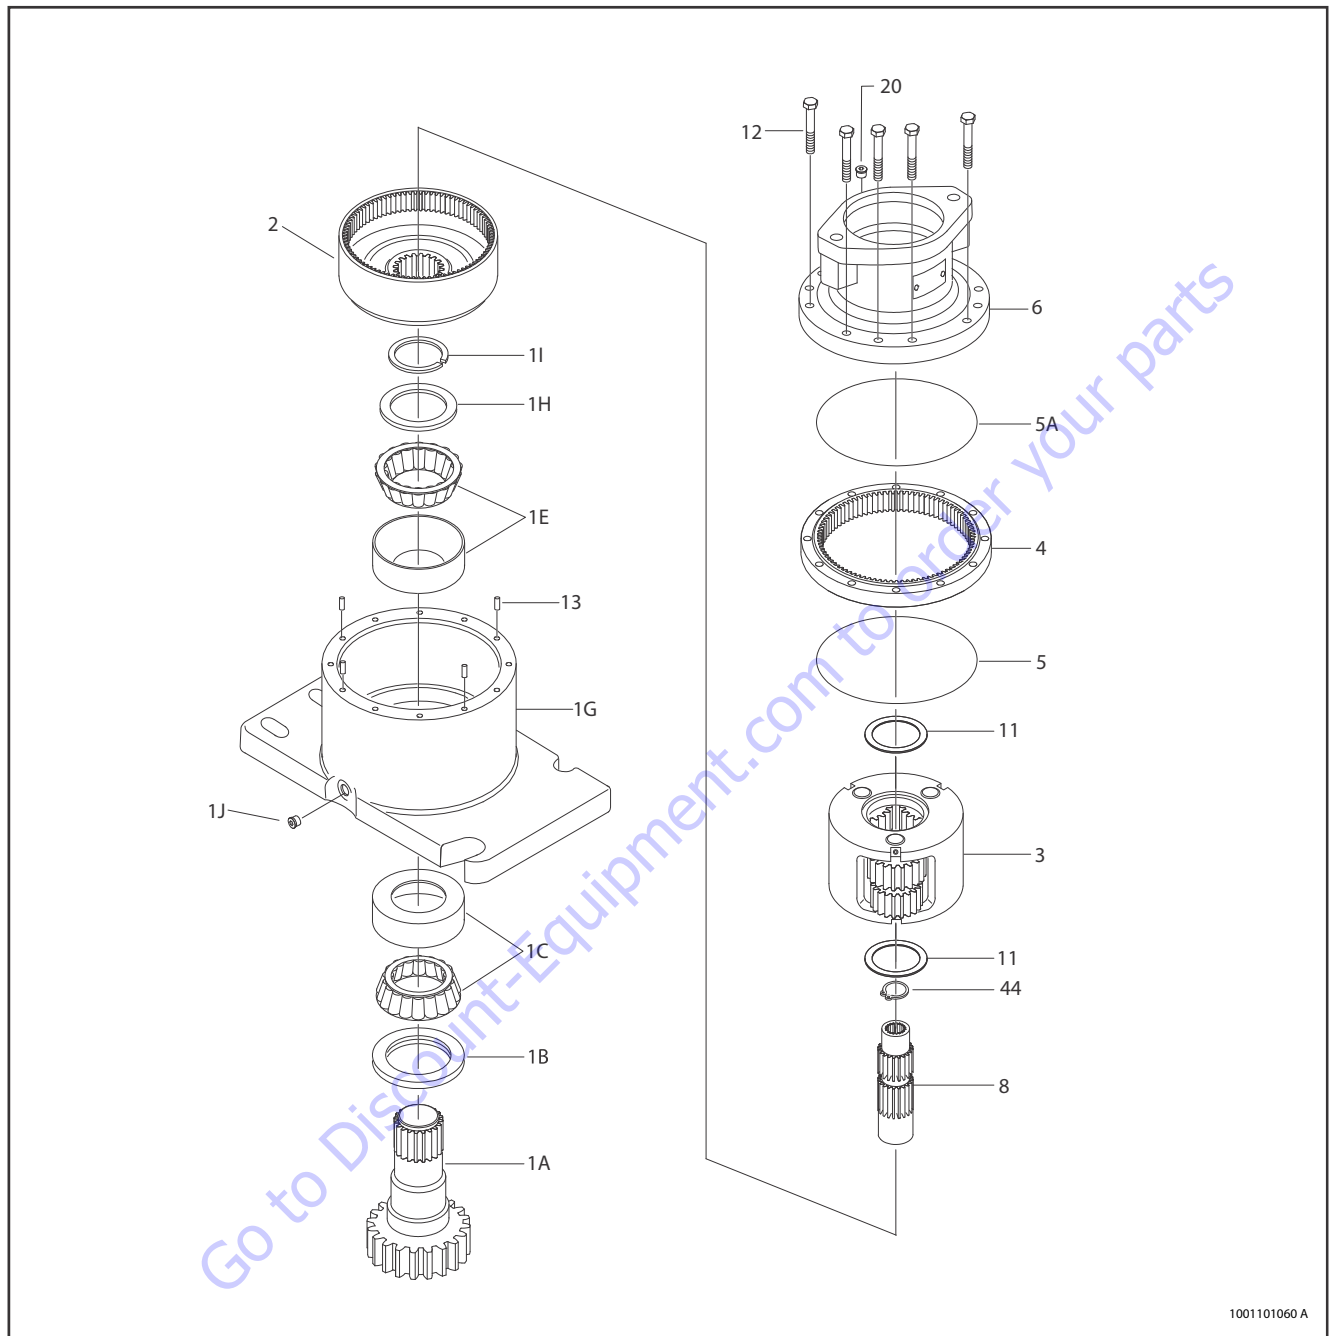

1001101060 A

- | | | | | |
|------------------|--------------------|---------------------|-------------------|-----------------------------|
| 1A. Output Shaft | 1G. Housing | 2. Internal Gear | 5A. O-Ring | 12. Bolt |
| 1B. Lip Seal | 1H. Thrust Washer | 3. Carrier Assembly | 6. Brake Housing | 13. Dowel Pin |
| 1C. Bearing | 1I. Retaining Ring | 4. Ring Gear | 8. Sun Gear | 20. Pipe Plug |
| 1D. Bearing | 1J. Pipe Plug | 5. O-Ring | 11. Thrust washer | 44. Internal Retaining Ring |

Figure 3-38. Swing Drive Assembly

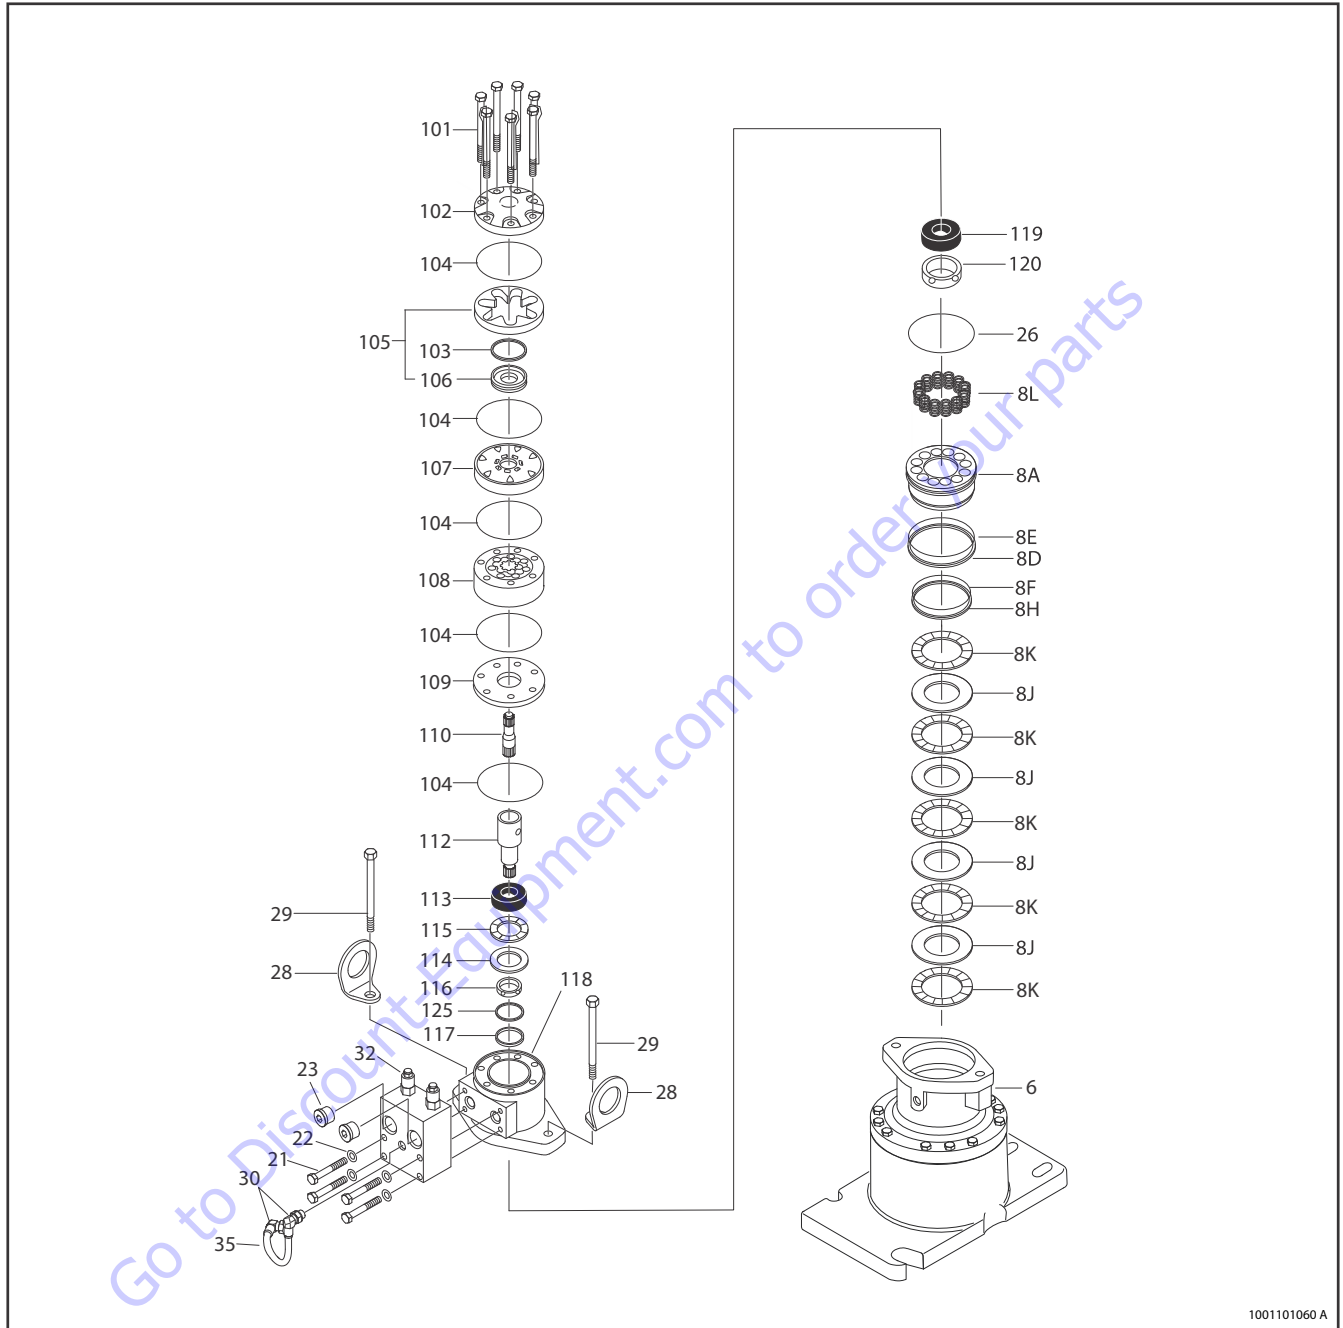

1001101060 A


- | | | | | |
|------------------|-------------------|-------------------------------|---------------------|--------------------|
| 6. Brake Housing | 8L. Spring | 35. Tube | 108. Rotor Set | 117. Backup Washer |
| 8A. Piston | 21. Thrust Washer | 101. Bolt | 109. Wear Plate | 118. Housing |
| 8D. O-Ring | 22. Lock washer | 102. End Cover | 110. Drive Link | 119. Outer Bearing |
| 8E. Backup Ring | 23. Pipe Plug | 103. Commutator Seal | 112. Coupling Shaft | 120. Seal |
| 8F. O-Ring | 26. O-Ring | 104. Ring Seal | 113. Inner Bearing | 125. Backup Washer |
| 8H. Backup Ring | 28. Lifting lug | 105. Commutator and Ring Assy | 114. Thrust Washer | |
| 8J. Rotor Disc | 29. Bolt | 106. Ring | 115. Thrust Bearing | |
| 8K. Stator Disc | 30. Elbow | 107. Manifold | 116. Inner Seal | |

Figure 3-39. Swing Motor and Brake Assembly

3.9 SWING MOTOR

Disassembly and Inspection



1. Place the Torqmotor™ in a soft jawed vice, with coupling shaft (12) pointed down and the vise jaws clamping firmly on the sides of the housing (18) mounting flange or port bosses. Remove manifold port O-rings (18A) if applicable.

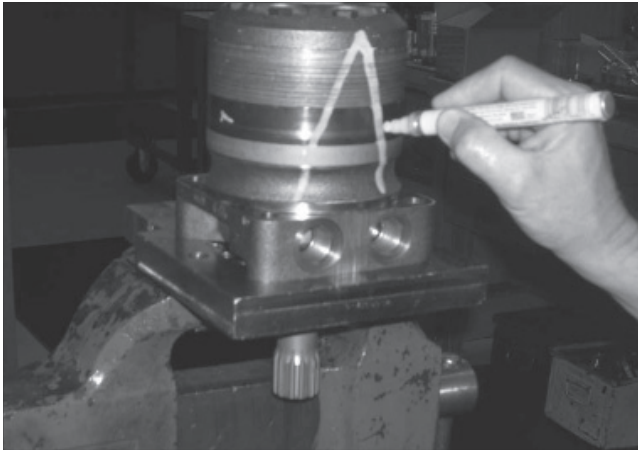

⚠ WARNING

IF THE TORQMOTOR™ IS NOT FIRMLY HELD IN THE VISE, IT COULD BE DISLODGED DURING THE SERVICE PROCEDURES, CAUSING INJURY.

2. Scribe an alignment mark down and across the Torqmotor™ components from end cover (2) to housing (18) to facilitate reassembly orientation where required. Loosen two shuttle or relief valve plugs (21) for disassembly later if included in end cover. 3/16 or 3/8 in. Allen wrench or 1 in. hex socket required.

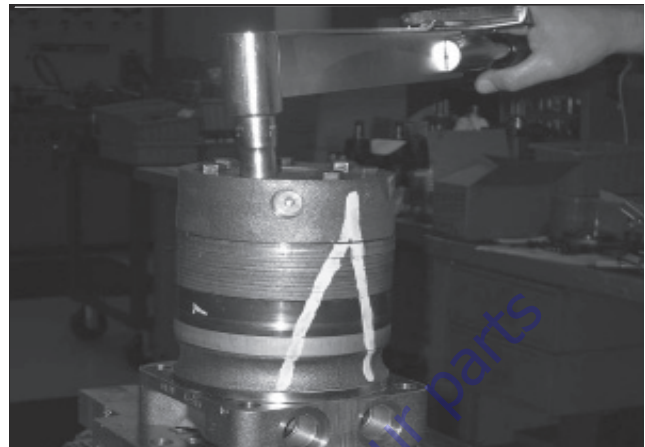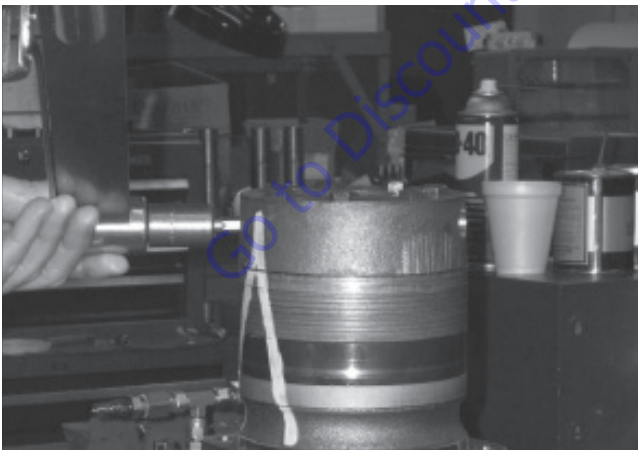


3. Remove the five, six, or seven special ring head bolts (1) using an appropriate 1/2 or 9/16 in. size socket. Inspect bolts for damaged threads, or sealing rings, under the bolt head. Replace damaged bolts.



4. Remove end cover assembly (2) and seal ring (4). Discard seal ring.



NOTE: Refer to the appropriate "alternate cover construction" on the exploded view to determine the end cover construction being serviced.

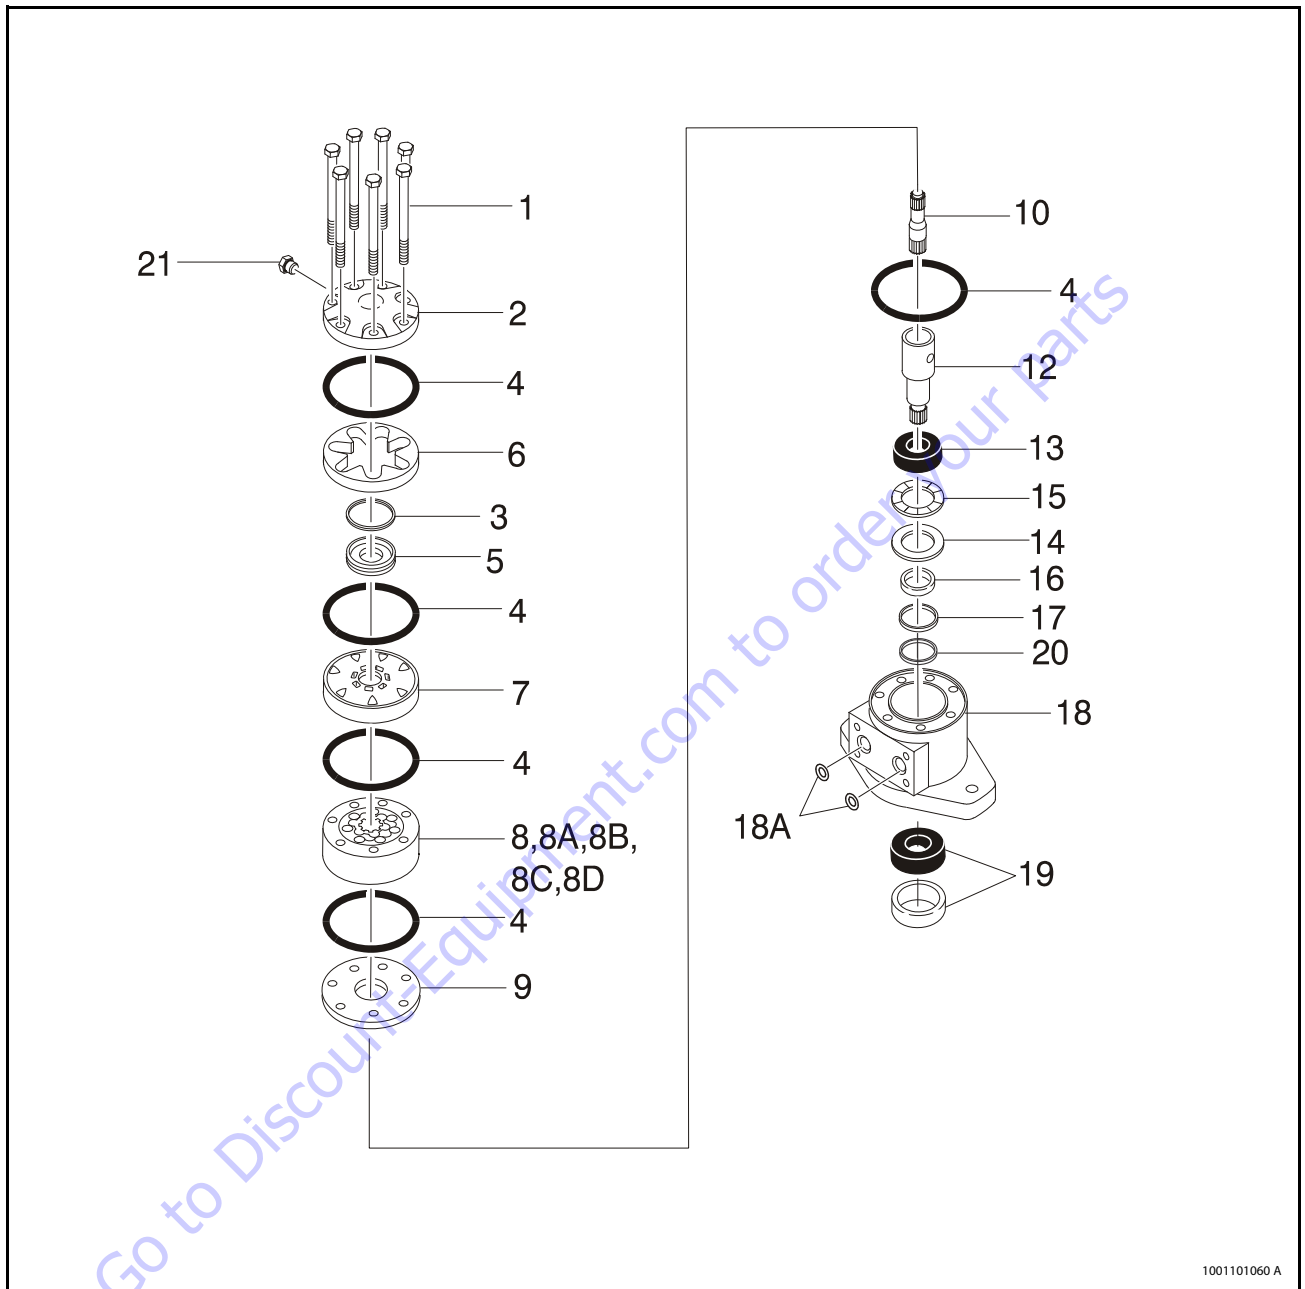


1001101060 A

- | | | | |
|-------------------------|---------------------------|----------------------------|----------------------------|
| 1. Special Bolts | 8. Rotor Set | 12. Coupling Shaft | 18A. O-Ring |
| 2. End Cover | 8A. Rotor | 13. Bearing/Bushing, Inner | 19. Bearing/Bushing, Outer |
| 3. Seal Ring-Commutator | 8B. Stator or Stator Vane | 14. Thrust Washer | 20. Backup Washer |
| 4. Seal Ring | 8D. Stator Half | 15. Thrust Bearing | 21. Plug |
| 5. Commutator Ring | 9. Wear Plate | 16. Seal | |
| 6. Commutator Ring | 10. Drive Link | 17. Backup Washer | |
| 7. Manifold | 11. Not Used | 18. Housing | |

Figure 3-40. Swing Drive Motor

SECTION 3 - CHASSIS & TURNTABLE

5. If the end cover (2) is equipped with shuttle valve components, remove the two previously loosened plugs (21).

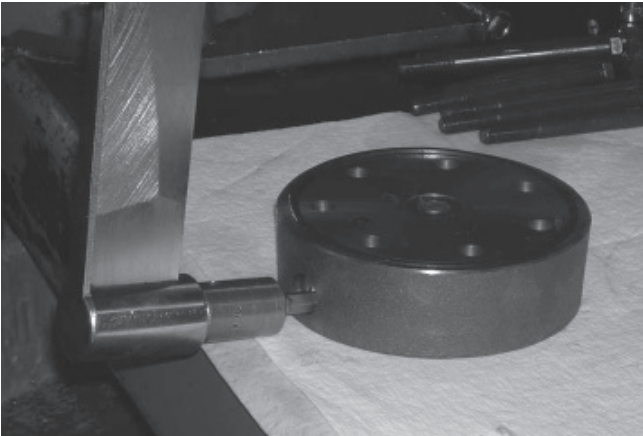


NOTICE

BE READY TO CATCH THE SHUTTLE VALVE OR RELIEF VALVE COMPONENTS THAT WILL FALL OUT OF THE END COVER VALVE CAVITY WHEN THE PLUGS ARE REMOVED.

NOTE: O- ring is not included in seal kit but serviced separately, if required.


NOTE: The insert and if included the orifice plug in the end cover (2) must not be removed as they are serviced as an integral part of the end cover.

6. Thoroughly wash end cover (2) in proper solvent and blow dry. Be sure the end cover valve apertures, including the internal orifice plug, are free of contamination. Inspect end cover for cracks and the bolt head recesses for good bolt head sealing surfaces. Replace end cover as necessary.

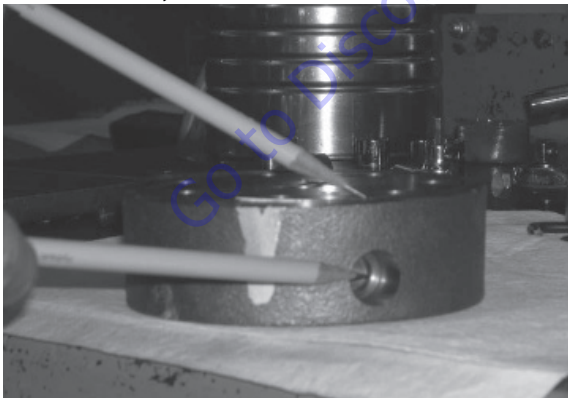

NOTE: A polished pattern (not scratches) on the cover from rotation of the commutator (5) is normal. Discoloration would indicate excess fluid temperature, thermal shock, or excess speed and require system investigation for cause and close inspection of end cover, commutator, manifold, and rotor set.


7. Remove commutator ring (6). Inspect commutator ring for cracks, or burrs.

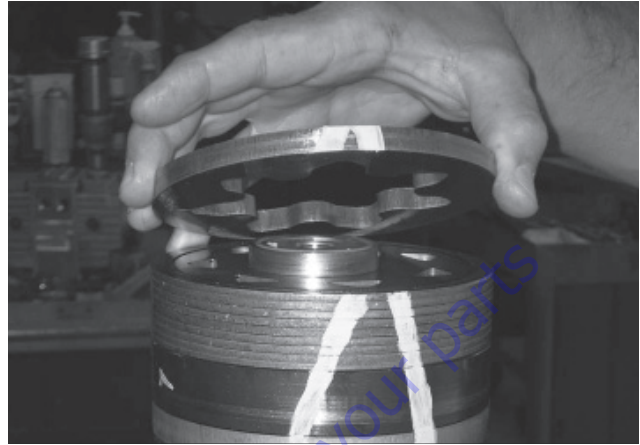

8. Remove commutator (5) and seal ring (3) Remove seal ring from commutator, using an air hose to blow air into ring groove until seal ring is lifted out and discard seal ring. Inspect commutator for cracks or burrs, wear, scoring, spalling or brinelling. If any of these conditions exist, replace commutator and commutator ring as a matched set.



9. Remove manifold (7) and inspect for cracks surface scoring, brinelling or spalling. Replace manifold if any of these conditions exist. A polished pattern on the ground surface from commutator or rotor rotation is normal. Remove and discard the seal rings (4) that are on both sides of the manifold.

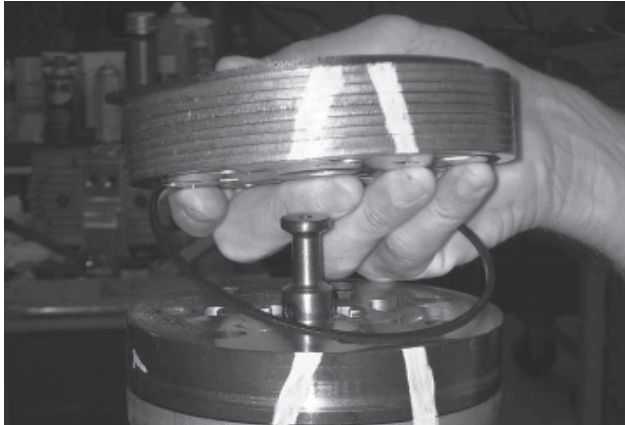

NOTE: The manifold is constructed of plates bonded together to form an integral component not subject to further disassembly for service. Compare configuration of both sides of them as if old to ensure that same surface is reassembled against the rotor set.

10. Remove rotor set (8) and warplane (9), together to retain the rotor set in its assembled form, maintaining the same rotor vane (8C) to stator (8B) contact surfaces. The drive link (10) may come away from the coupling shaft (12) with the rotor set, and wear plate. You may have to shift the rotor set on the warplane to work the drive link out of the rotor (8A) and warplane. Inspect the rotor set in its assembled form for nicks, scoring, or spalling on any surface and for broken or worn splines. If the rotor set component requires replacement, the complete rotor set must be replaced as it is a matched set. Inspect the warplane for cracks, brinelling, or scoring. Discard seal ring (4) that is between the rotor set and wear plate.




NOTE: The rotor set (8) components may become disassembled during service procedures. Marking the surface of the rotor and stator that is facing UP, with etching ink or grease pencil before removal from Torqmotor™ will ensure correct reassembly of rotor into stator and rotor set into Torqmotor™. Marking all rotor components and mating spline components for exact repositioning at assembly will ensure maximum wear life and performance of rotor set and Torqmotor™.



NOTE: Series TG and TH may have a rotor set with two stator halves (8B & 8D) with a seal ring (4) between them and two sets of seven vanes (8C & 8E). Discard seal ring only if stator halves become disassembled during the service procedures.

NOTE: A polished pattern on the wear plate from rotor rotation is normal.


11. Place rotor set (8) and wear plate (9) on a flat surface and center rotor (8A) in stator (8B) such that two rotor lobes (180 degrees apart) and a roller vane (8C) centerline are on the same stator centerline. Check the rotor lobe to roller vane clearance with a feeler gage at this common centerline. If there is more than 0.005 in. (0.13 mm) of clearance, replace rotor set.

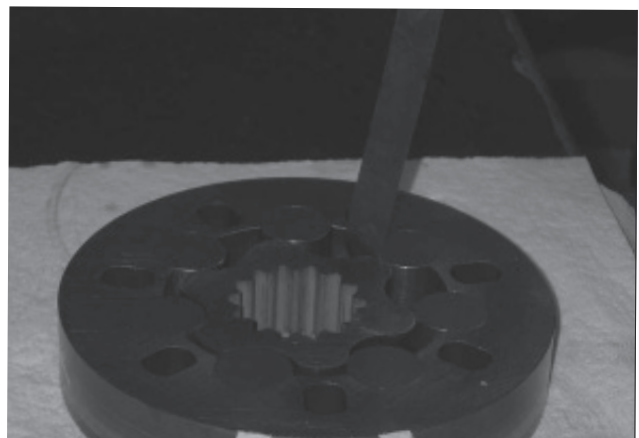


SECTION 3 - CHASSIS & TURNTABLE

NOTE: If rotor set (8) has two stator halves (8B & 8D) and two sets of seven vanes (8C & 8E) as shown in the alternate construction TG rotor set assembly view, check the rotor lobe to roller vane clearance at both ends of rotor.


12. Remove drive link (10) from coupling shaft (12) if it was not removed with rotor set and wear plate. Inspect drive link for cracks and worn or damaged splines. No perceptible lash (play) should be noted between mating spline parts. Remove and discard seal ring (4) from housing (18).

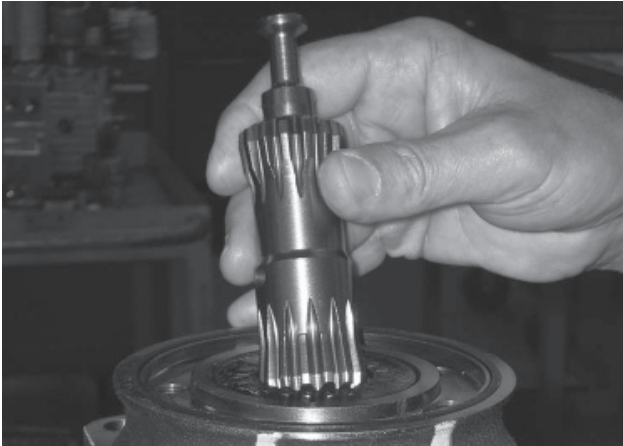


13. Remove thrust bearing (11) from top of coupling shaft (12). Inspect for wear, brinelling, corrosion and a full complement of retained rollers.

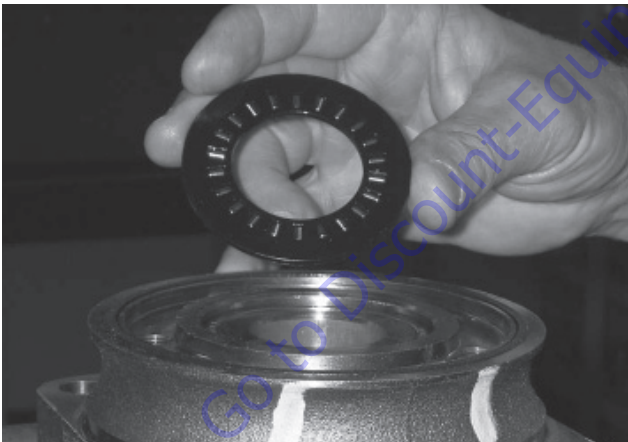

14. Check exposed portion of coupling shaft (12) to be sure you have removed all signs of rust and corrosion which might prevent its withdrawal through the seal and bearing. Crocus cloth or fine emery paper may be used. Remove any key (12A), nut (12B), washer (12C), bolt (12D), lock washer (12E), or retaining ring (12F).

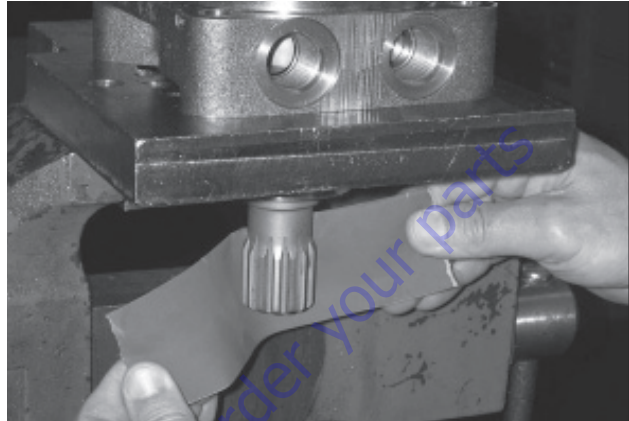

15. Remove coupling shaft (12), by pushing on the output end of shaft. Inspect coupling shaft bearing and seal surfaces for spalling, nicks, grooves, severe wear or corrosion and discoloration. Inspect for damaged or worn internal and external splines or keyway. Replace coupling shaft if any of these conditions exist.

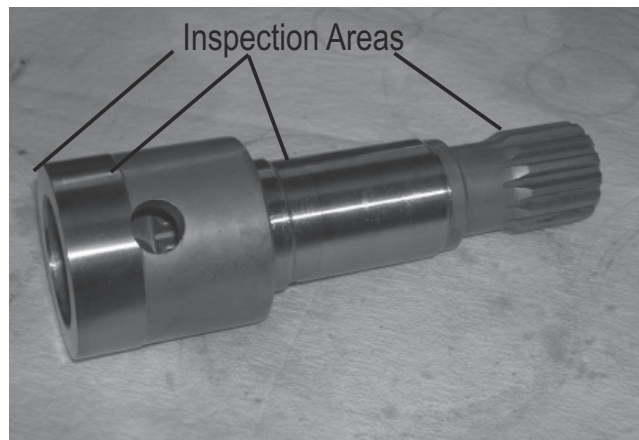

NOTE: Minor shaft wear in seal area is permissible. If wear exceeds 0.020 in. (0.51 mm) diametrically, replace coupling shaft.

NOTE: A slight "polish" is permissible in the shaft bearing areas. Anything more would require coupling shaft replacement.

- 16. Remove and discard seal ring (4) from housing (18).
- 17. Remove thrust bearing (15) and thrust washer (14) Inspect for wear, brinelling, corrosion and a full complement of retained rollers.




- 18. Remove seal (16) and backup washer (17) from Small Frame, housing (18). Discard both.





- 19. Remove housing (18) from vise, invert it and remove and discard seal.
- 20. A blind hole bearing or seal puller is required.



- 21. Inspect housing (18) assembly for cracks, the machined surfaces for nicks, burrs, brinelling or corrosion. Remove burrs that can be removed without changing dimensional characteristics. Inspect tapped holes for thread damage. If the housing is defective in these areas, discard the housing assembly.

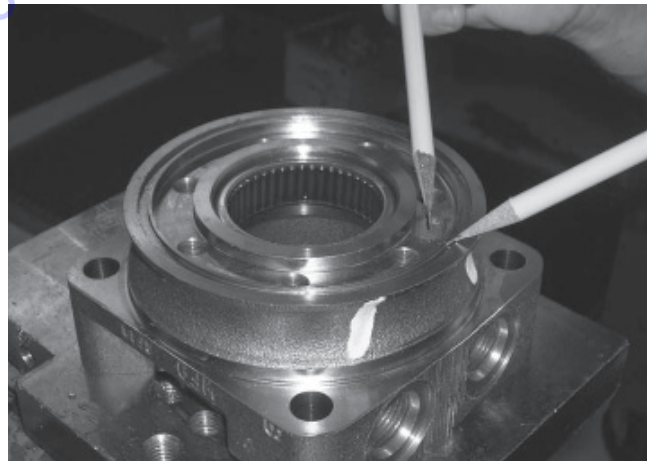


22. If the housing (18) assembly has passed inspection to this point, inspect the housing bearings/bushings (19) and (13) and if they are captured in the housing cavity the two thrust washers (14) and thrust bearing (15). The bearing rollers must be firmly retained in the bearing cages, but must rotate and orbit freely. All rollers and thrust washers must be free of brinelling and corrosion. The bearing rollers must be firmly retained in the bearing cages, but must rotate and orbit freely. All rollers and thrust washers must be free of brinelling and corrosion. The bushing (19) or (13) to coupling shaft diameter clearance must not exceed 0.010 in. (0.025 mm). A bearing, bushing, or thrust washer that does not pass inspection must be replaced. If the housing has passed this inspection the disassembly of the Torqmotor™ is completed.

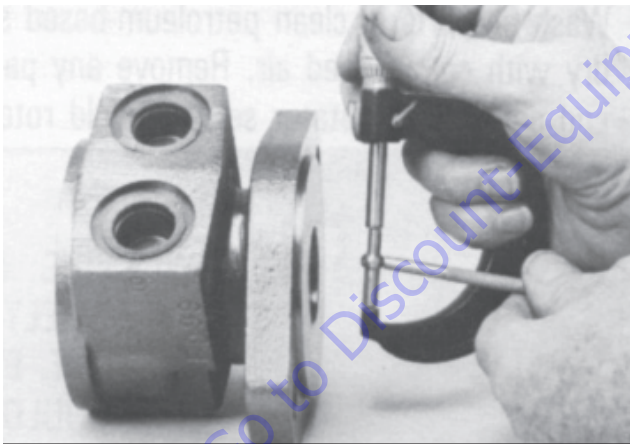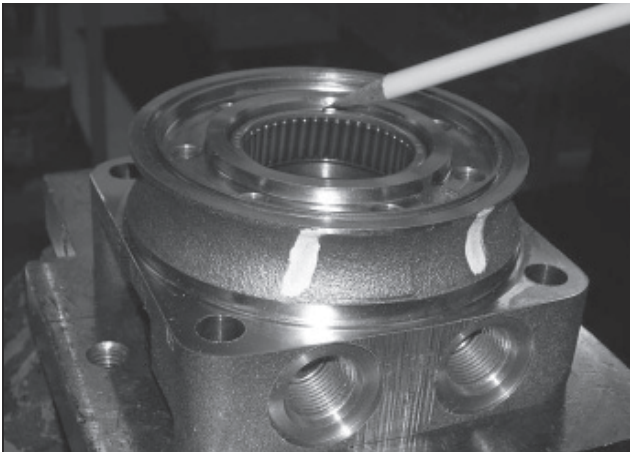

NOTE: The depth or location of bearing/bushing (13) in relation to the housing wear plate surface and the depth or location of bearing/bushing (19) in relation to the beginning of bearing/bushing counterbore should be measured and noted before removing the bearings/ bushings. This will facilitate the correct reassembly of new bearings/bushings.



23. If the bearings, bushing or thrust washers must be replaced use a suitable size bearing puller to remove bearing/bushings (19) and (13) from housing (18) without damaging the housing. Remove thrust washers (14) and thrust bearing (15) if they were previously retained in the housing by bearing (13).

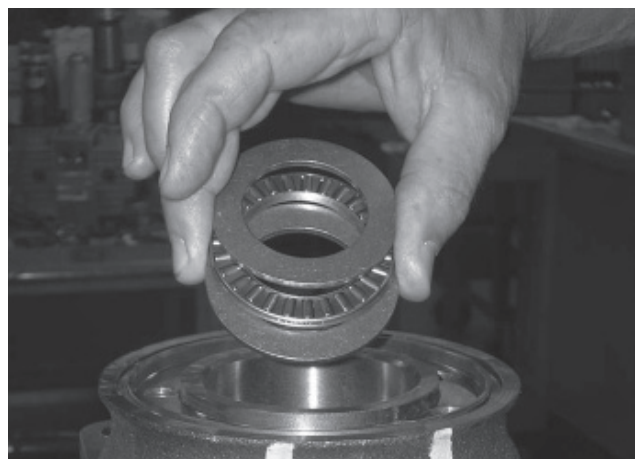

Assembly

Replace all seals and seal rings with new ones each time you reassemble the Torqmotor™ unit. Lubricate all seals and seal rings with SAE 10W40 oil or clean grease before assembly.

NOTE: Individual seals and seal rings as well as a complete seal kit are available. The parts should be available through most OEM parts distributors or Parker approved Torqmotor™ distributors. (Contact your local dealer for availability).

NOTE: Unless otherwise indicated, do not oil or grease parts before assembly.

Wash all parts in clean petroleum-based solvents before assembly. Blow them dry with compressed air. Remove any paint chips from mating surfaces of the end cover, commutator set, manifold rotor set, wear plate and housing and from port and sealing areas.

⚠ DANGER



SINCE THEY ARE FLAMMABLE, BE EXTREMELY CAREFUL WHEN USING ANY SOLVENT. EVEN A SMALL EXPLOSION OR FIRE COULD CAUSE INJURY OR DEATH.

⚠ WARNING

WEAR EYE PROTECTION AND BE SURE TO COMPLY WITH OSHA OR OTHER MAXIMUM AIR PRESSURE REQUIREMENTS.

1. If the housing (18) bearing components were removed for replacement, thoroughly coat and pack a new outer bearing/bushing (19) with clean corrosion resistant grease recommended in the material section. Press the new bearing/bushing into the counterbore at the mounting flange end of the housing, using the appropriate sized bearing mandrel, which will control the bearing/ bushing depth.

Torqmotor™ housings require the use of bearing mandrel to press bearing/ bushing (19) into the housing to a required depth of 0.151/0.161 in. (3.84/4.09 mm) from the end of the bearing counterbore.

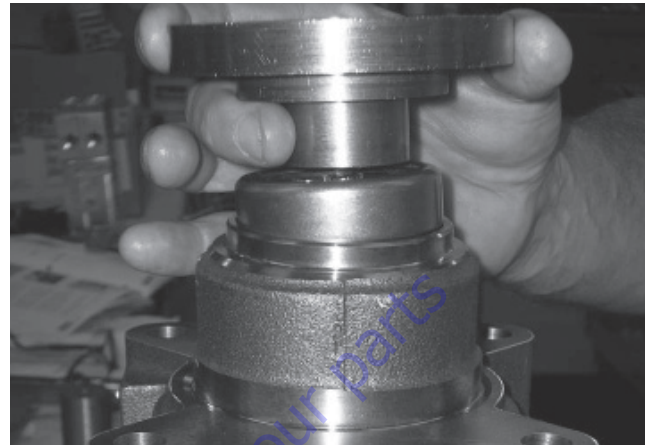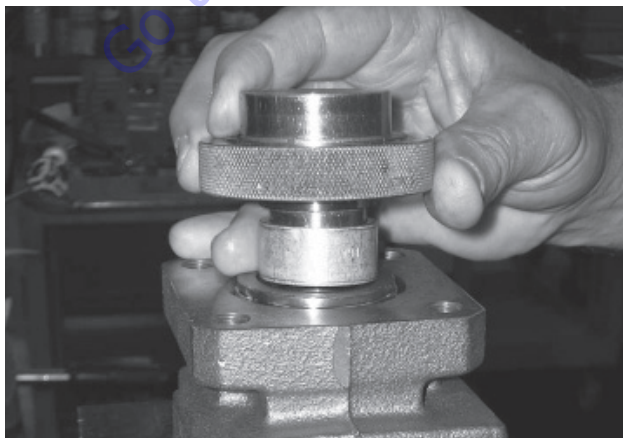


NOTE: Bearing mandrel must be pressed against the lettered end of bearing shell. Take care that the housing bore is square with the press base and the bearing/bushing is not cocked when pressing a bearing/bushing into the housing.

NOTICE

IF THE BEARING MANDREL SPECIFIED IN THE "TOOLS AND MATERIALS REQUIRED FOR SERVICING" SECTION IS NOT AVAILABLE AND ALTERNATE METHODS ARE USED TO PRESS IN BEARING/BUSHING (13) AND (19) THE BEARING/BUSHING DEPTHS SPECIFIED MUST BE ACHIEVED TO INSURE ADEQUATE BEARING SUPPORT AND CORRECT RELATIONSHIP TO ADJACENT COMPONENTS WHEN ASSEMBLED.


NOTICE

BECAUSE THE BEARING/BUSHINGS (13) AND (19) HAVE A PRESS FIT INTO THE HOUSING THEY MUST BE DISCARDED WHEN REMOVED. THEY MUST NOT BE REUSED.

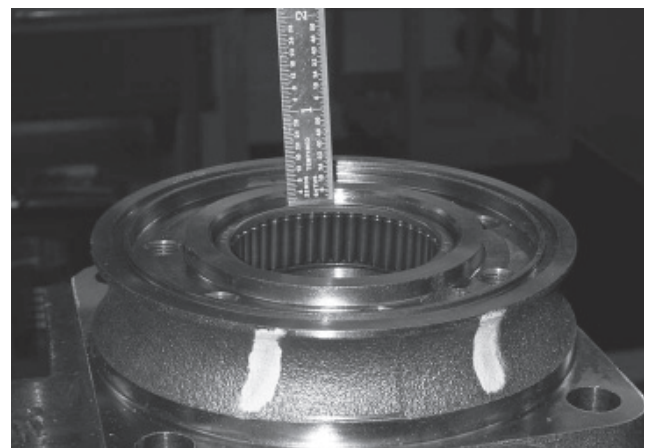

SECTION 3 - CHASSIS & TURNTABLE

2. The Torqmotor™ inner housing bearing/bushing (13) can now be pressed into its counterbore in housing (18) flush to 0.03 in. (0.76 mm) below the housing wear plate contact face. Use the opposite end of the bearing mandrel that was used to press in the outer bearing/ bushing (19).

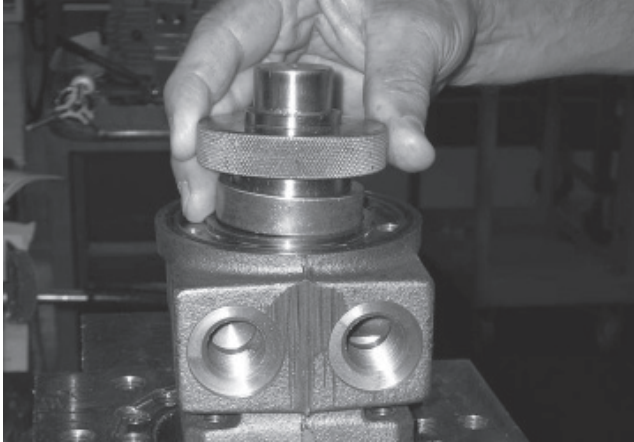


3. Press a new dirt and water seal (20) into the housing (18) outer bearing counterbore.


The Torqmotor™ dirt and water seal (20) must be pressed in until its flange is flush against the housing.



- Place housing (18) assembly into a soft jawed vise with the coupling shaft bore down, clamping against the mounting flange.

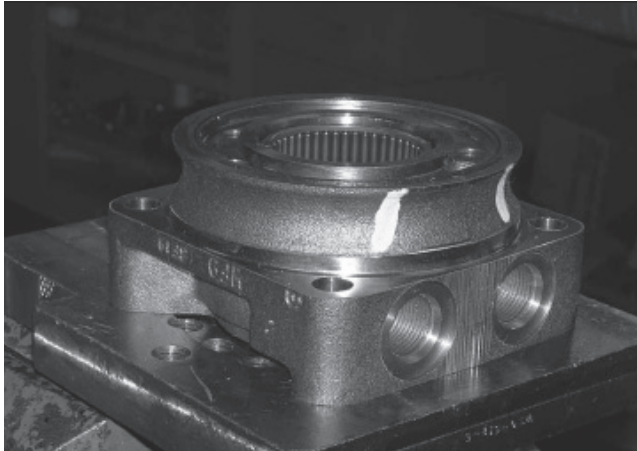

- On the Torqmotor™ assemble a new backup washer (17) and new seal (16) with the seal lip facing toward the inside of Torqmotor™, into their respective counterbores in housing (18) if they were not assembled in procedure 2.

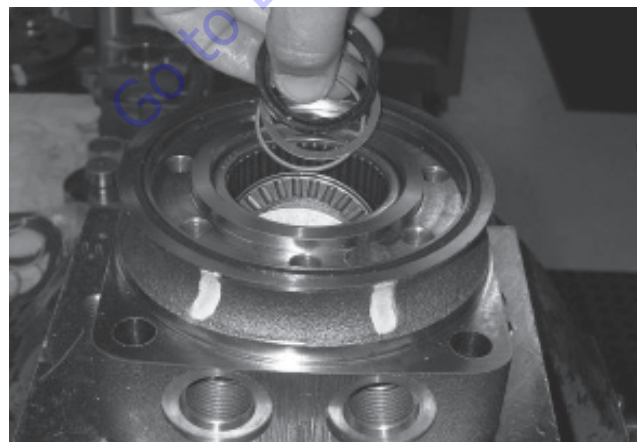

NOTICE


ORIGINAL DESIGN LARGE FRAME, TF & TG TORQMOTORS™ THAT DO NOT HAVE BACKUP WASHER (25) WHEN DISASSEMBLED MUST BE ASSEMBLED WITH A NEW BACKUP WASHER (17), NEW BACKUP WASHER (25), AND NEW SEAL (16).

- Assemble thrust washer (14) then thrust bearing (15) that was removed from the Torqmotor™.




NOTE: Torqmotors™ require one thrust washer (14) with thrust bearing (15). The coupling shaft will be seated directly against the thrust.

- Apply masking tape around splines or keyway on shaft (12) to prevent damage to seal.

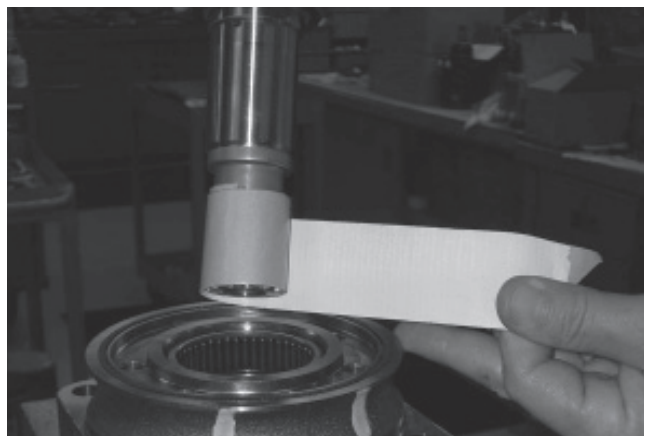

SECTION 3 - CHASSIS & TURNTABLE

8. Be sure that a generous amount of clean corrosion resistant grease has been applied to the lower (outer) housing bearing/bushing (19). Install the coupling shaft (12) into housing (18), seating it against the thrust bearing (15) in the housings.

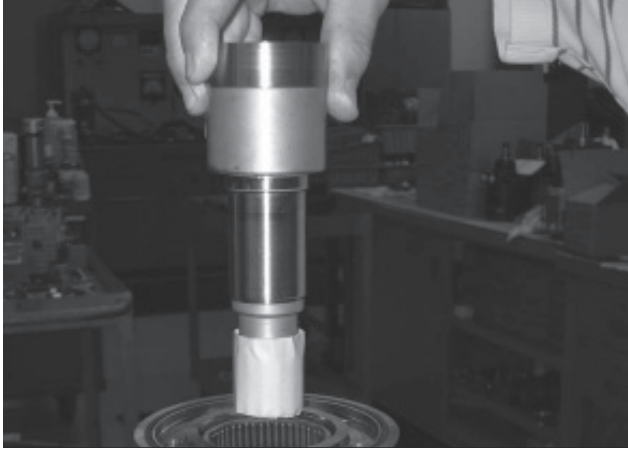

NOTICE

THE OUTER BEARING (19) IS NOT LUBRICATED BY THE SYSTEM'S HYDRAULIC FLUID. BE SURE IT IS THOROUGHLY PACKED WITH THE RECOMMENDED GREASE, PARKER GEAR GREASE SPECIFICATION #045236, E/M LUBRICANT #K-70M.


NOTE: Mobil Mobilith SHC® 460.

NOTE: A 102Tube (P/N 406010) is included in each seal kit.

NOTE: The coupling shaft (12) will be flush or just below the housing wear plate surface on Torqmotors™ when properly seated. The coupling shaft must rotate smoothly on the thrust bearing package.




9. Apply a small amount of clean grease to a new seal ring (4) and insert it into the housing (18) seal ring groove.

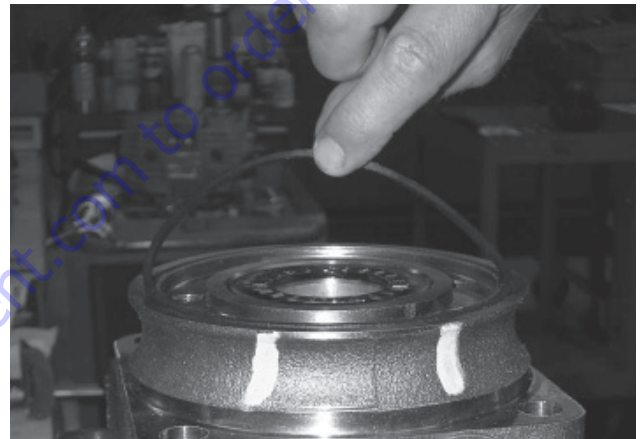


NOTE: One or two alignment studs screwed finger tight into housing (18) bolt holes, approximately 180 degrees apart, will facilitate the assembly and alignment of components as required in the following procedures. The studs can be made by cutting off the heads of either 3/8-24 UNF 2A or 5/16-24 UNF 2A bolts as required that are over 0.5 in. (12.7 mm) longer than the bolts (1) used in the Torqmotor™.

- 10.** Install drive link (10) the long splined end down into the coupling shaft (12) and engage the drive link splines into mesh with the coupling shaft splines.

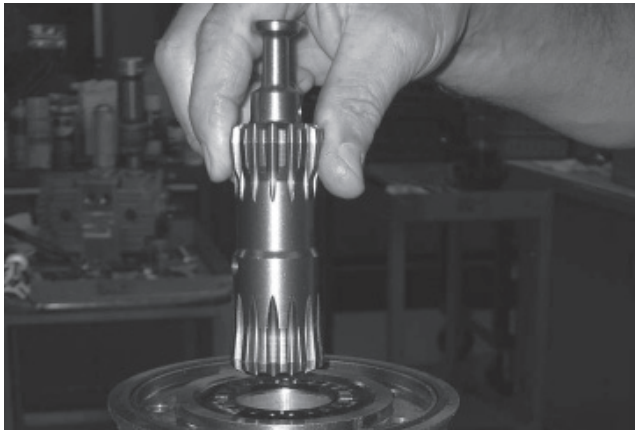


NOTE: Use any alignment marks put on the coupling shaft and drive link before disassembly to assemble the drive link splines in their original position in the mating coupling shaft splines.

- 11.** Assemble wear plate (9) over the drive link (10) and alignment studs onto the housing (18).

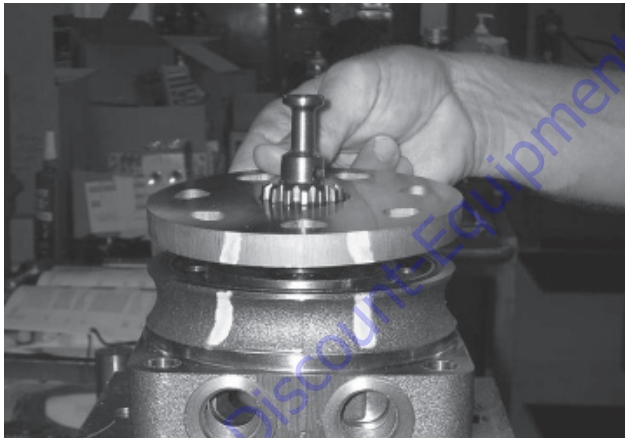

- 12.** Apply a small amount of clean grease to a new seal ring (4) and assemble it into the seal ring groove on the wear plate side of the rotor set stator (8B).

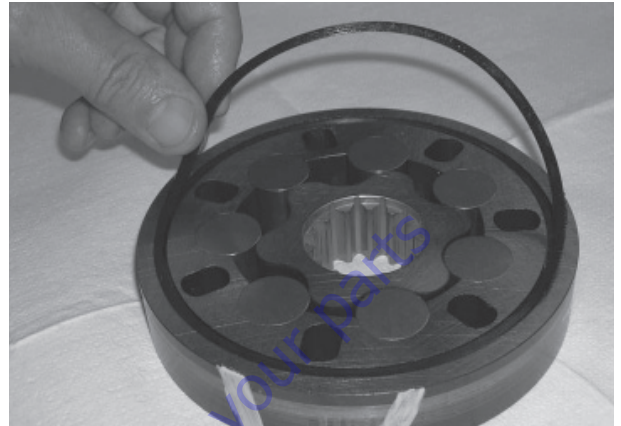

- 13.** Install the assembled rotor set (8) onto wear plate (9) with rotor (8A) counterbore and seal ring side down and the splines into mesh with the drive link splines.




NOTE: It may be necessary to turn one alignment stud out of the housing (18) temporarily to assemble rotor set (8) or manifold (7) over the drive link.

NOTE: If necessary, go to the appropriate, "Rotor Set Component Assembly Procedure."

NOTE: The rotor set rotor counterbore side must be down against wear plate for drive link clearance and to maintain the original rotor-drive link spline contact. A rotor set without a counterbore and that was not etched before disassembly can be reinstalled using the drive link spline pattern on the rotor splines if apparent, to determine which side was down. The rotor set seal ring groove faces toward the wear plate (9).

14. Apply clean grease to a new seal ring (4) and assemble it in the seal ring groove in the rotor set contact side of manifold (7).

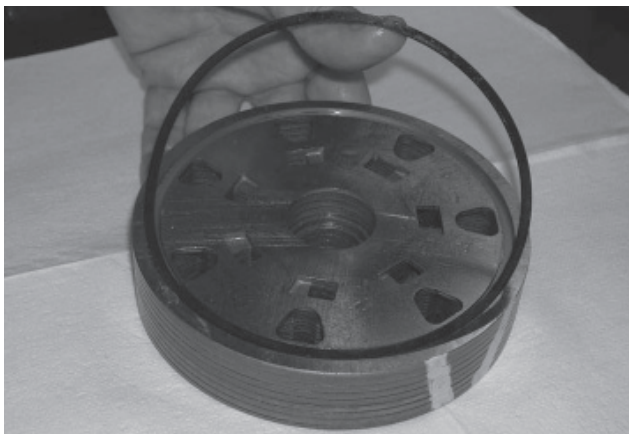

NOTE: The manifold (7) is made up of several plates bonded together permanently to form an integral component. The manifold surface that must contact the rotor set has it's series of irregular shaped cavities on the largest circumference or circle around the inside diameter. The polished impression left on the manifold by the rotor set is another indication of which surface must contact the rotor set.

15. Assemble the manifold (7) over the alignment studs and drive link (10) and onto the rotor set. Be sure the correct manifold surface is against the rotor set.




16. Apply grease to a new seal ring (4) and insert it in the seal ring groove exposed on the manifold.




17. Assemble the commutator ring (6) over alignment studs onto the manifold.






18. Assemble a new seal ring (3) flat side up, into commutator (5) and assemble commutator over the end of drive link (10) onto manifold (7) with seal ring side up.

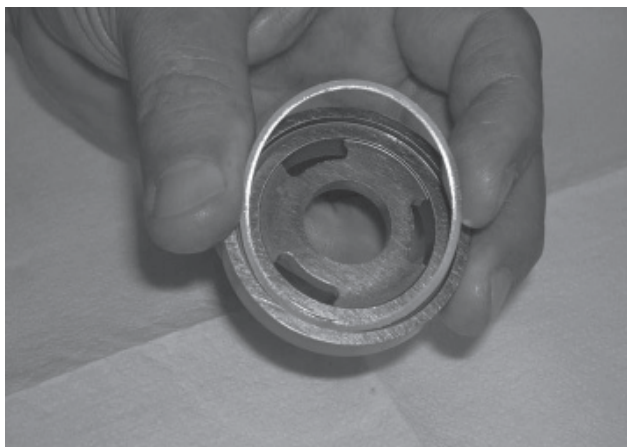



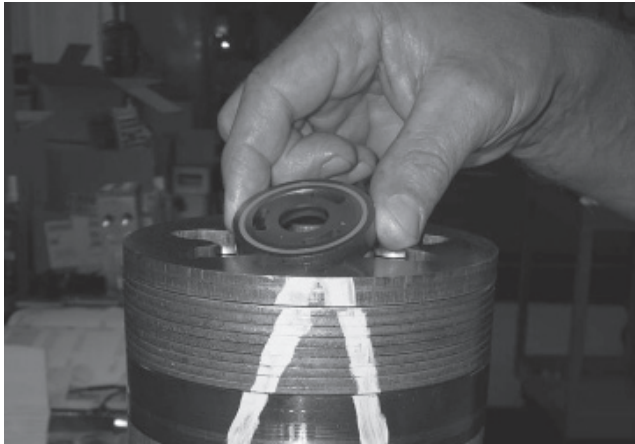


19. Assemble a new seal ring (4) into end cover (2) and assemble end cover over the alignment studs and onto the commutator set. If the end cover has only 5 bolt holes be sure the cover holes are aligned with the 5 threaded holes in housing (18). The correct 5 bolt end cover bolt hole relationship to housing port bosses.

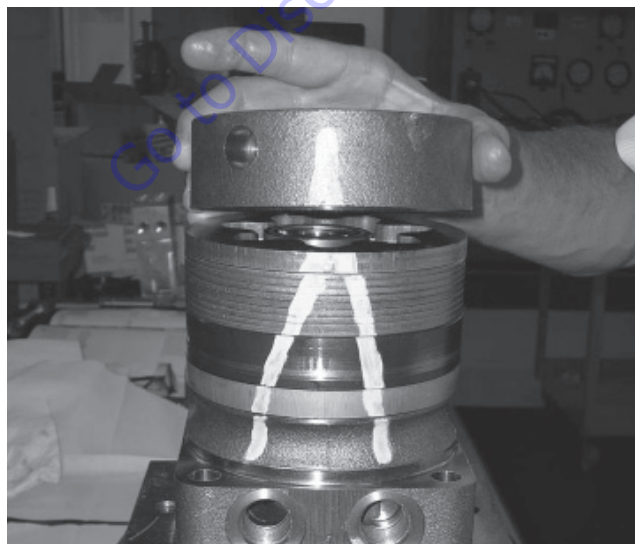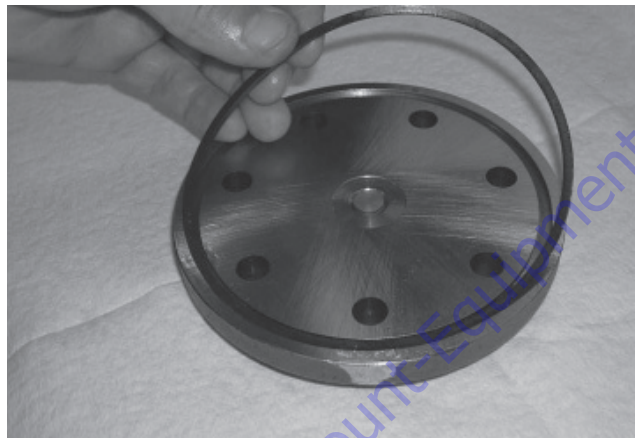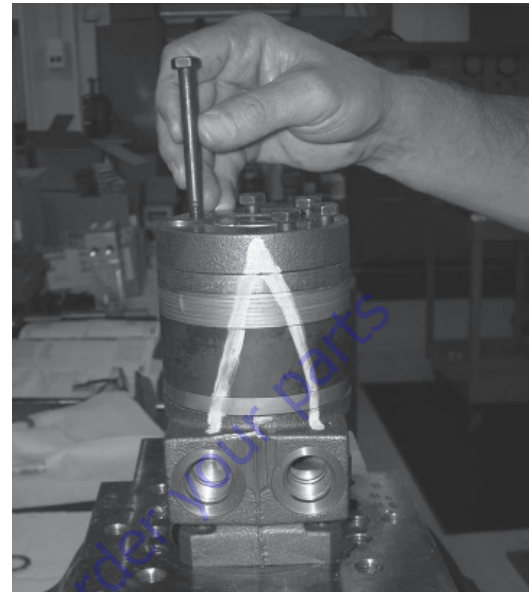

SECTION 3 - CHASSIS & TURNTABLE



20. Assemble the 5 or 7 special bolts (1) and screw in finger tight. Remove and replace the two alignment studs with bolts after the other bolts are in place. Alternately and progressively tighten the bolts to pull the end cover and other components into place with a final torque of 50-55 ft. lbs. (68-75 Nm) for the seven 3/8-24 threaded bolts.

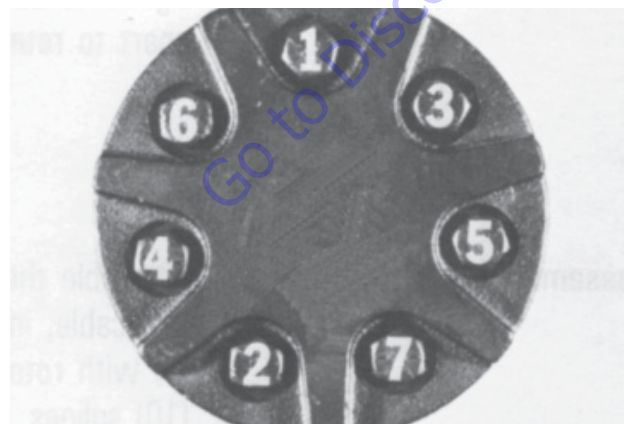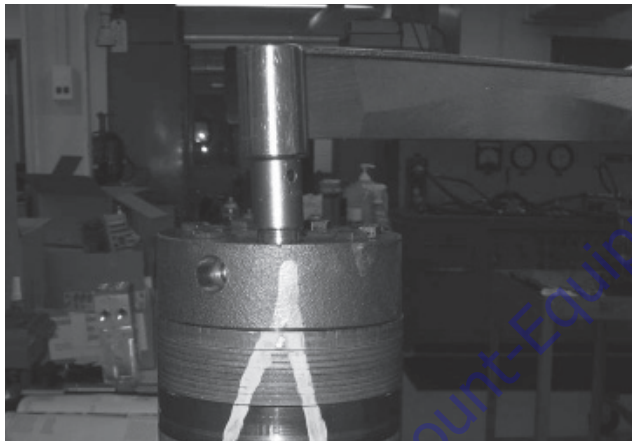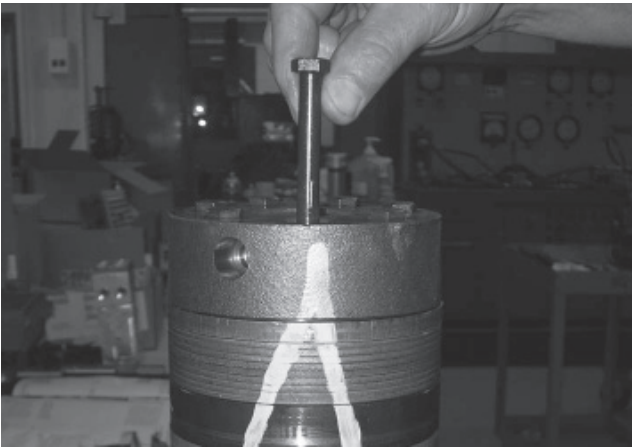

NOTE: The special bolts required for use with the relief or shuttle valve (24) end cover assembly (2) are longer than the bolts required with standard and cover assembly. Refer to the individual service parts lists or parts list charts for correct service part number if replacement is required.

21. Torque the two shuttle valve plug assemblies (21) in end cover assembly to 9-12 ft. lbs. (12-16 Nm) if cover is so equipped.

Torque the two relief valve plug assemblies (21) in end cover assembly to 45-55 ft. lbs. (61-75 Nm) if cover is so equipped.

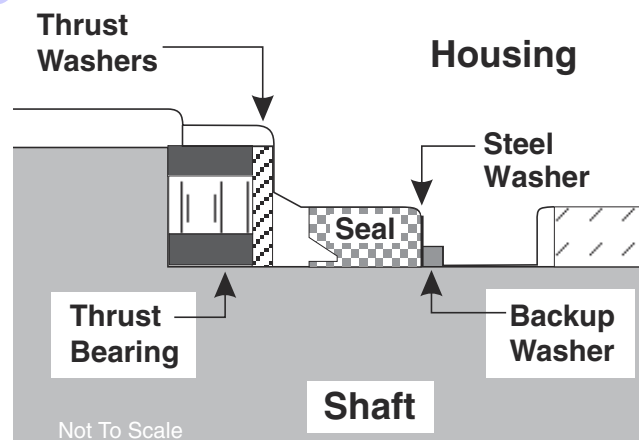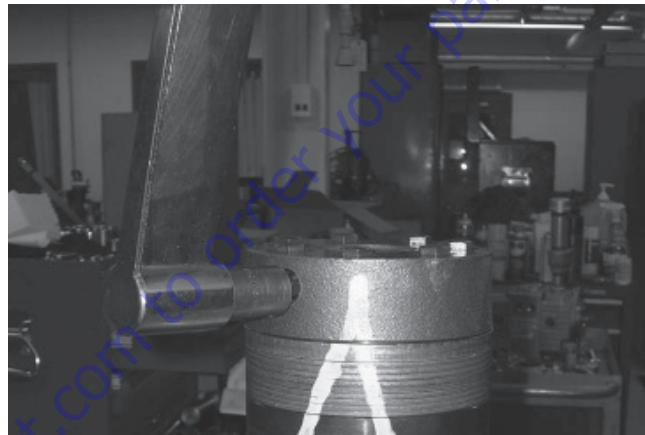


One Piece Stator Construction

A disassembled rotor (8A) stator (8B) and vanes (8C) that cannot be readily assembled by hand can be assembled by the following procedures.

1. Place stator (8B) onto wear plate (9) with seal ring (4) side down, after following Torqmotor™ assembly procedures 1 through 13. Be sure the seal ring is in place.



2. If assembly alignment studs are not being utilized, align stator bolt holes with wear plate and housing bolt holes and turn two bolts (1) finger tight into bolt holes approximately 180 degrees apart to retain stator and wear plate stationary.
3. Assemble the rotor (8A), counterbore down if applicable, into stator (8B), and onto wear plate (9) with rotor splines into mesh with drive link (10) splines.

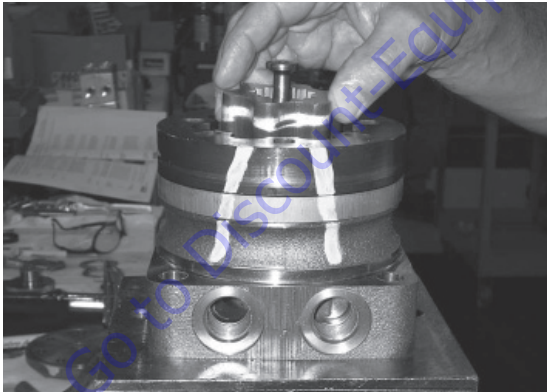

NOTE: If the manifold side of the rotor was etched during Torqmotor disassembly, this side should be up. If the rotor is not etched and does not have a counterbore, use the drive link spline contact pattern apparent on the rotor splines to determine the rotor side that must be against the wear plate.


4. Assemble six vanes (8C), or as many vanes that will readily assemble into the stator vane pockets.



NOTICE

EXCESSIVE FORCE USED TO PUSH THE ROTOR VANES INTO PLACE COULD SHEAR OFF THE COATING APPLIED TO THE STATOR VANE POCKETS.


5. Grasp the output end of coupling shaft (12) with locking pliers or other appropriate turning device and rotate coupling shaft, drive link and rotor to seat the rotor and the assembled vanes (8C) into stator (8B), creating the necessary clearance to assemble the seventh or full complement of seven vanes. Assemble the seven vanes using minimum force.

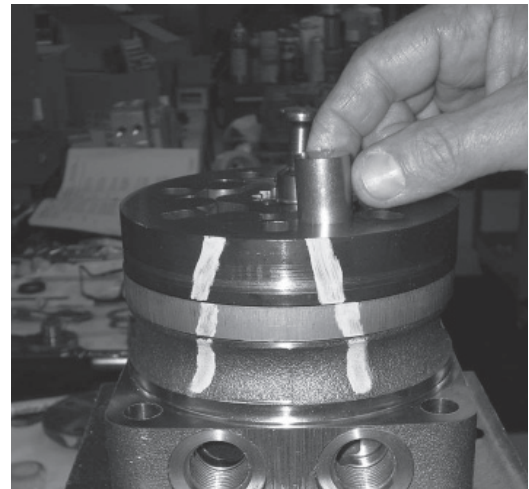

6. Remove the two assembled bolts (1) if used to retain stator and wear plate.

3.10 SWING HUB REMOVAL

1. Disconnect all wiring harness terminals connected to the swing motor.
2. Gently loosen the jack bolt. Do not remove.
3. Remove the pivot bolt using allen wrench.

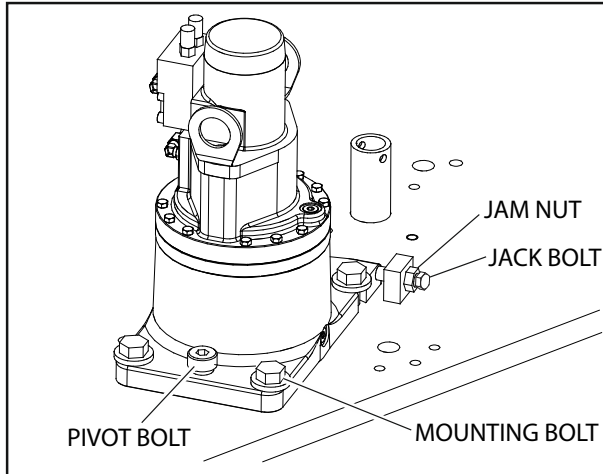

4. Remove the mounting bolts securing swing drive hub to the turntable.
5. Using the suitable lifting device, remove the swing drive hub from mounting plate without damaging the swing gear.
6. Place swing drive hub in the clean area.
7. Refer to Section 3.8, Swing Hub for swing drive maintenance.

3.11 SWING HUB INSTALLATION


Ensure mounting plate and mounting location of the turntable baseplate are clean and painted with a uniform coating of minimum thickness (no runs, drips, etc.).

Procedure for Setting Swing Gear Backlash


Set backlash to 0.010 - 0.015 in. (0.254 - 0.381 mm) using the following procedure:

1. Place the machine on firm, level ground.
2. Place shim between pinion and bearing at bearing high spot (shown below).

NOTE: High spot will be marked with yellow paint.

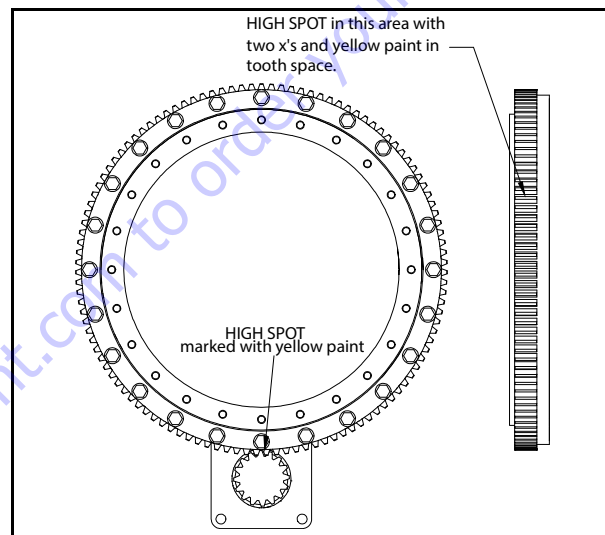


3. Apply JLG Threadlocker P/N 0100019 and torque pivot bolt to 205 ft. lbs. (280 Nm) (shown below).

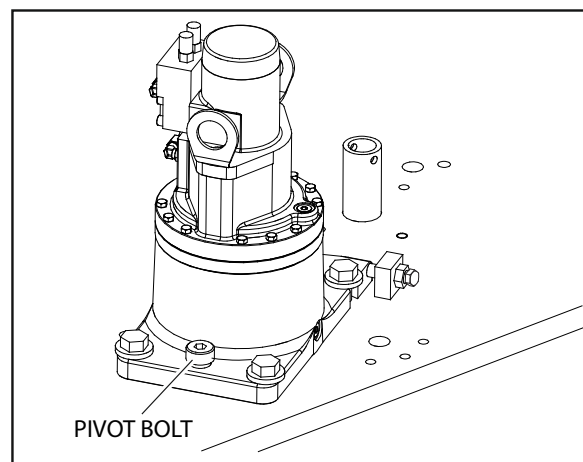


NOTE: Make sure the turntable is properly supported during the following step. The turntable can swing a few degrees when the turntable lock is removed if the turntable is not balanced properly.

4. Remove turntable lock pin.
5. Apply JLG Threadlocker P/N 0100019 and pre-torque swing drive mounting bolts to 30 ft. lbs. (40 Nm).

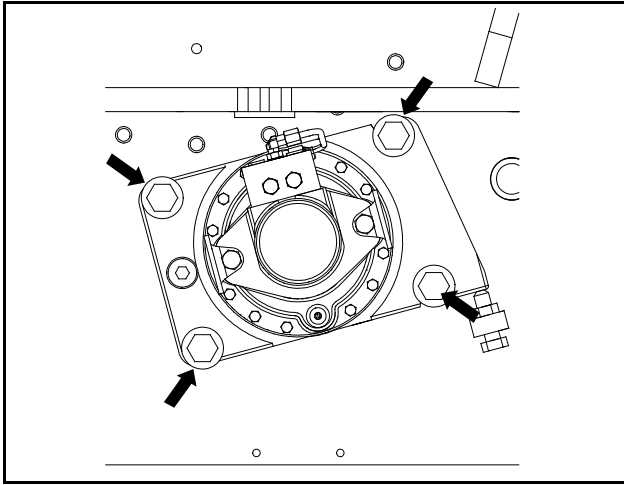


6. Tighten jack bolt until pinion is completely snug against shim and bearing then loosen jack bolt.

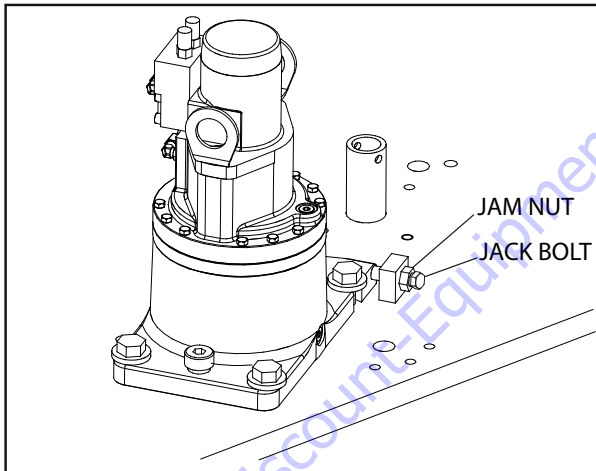


7. Apply JLG Threadlocker P/N 0100019 and torque jack bolt 50 ft. lbs. (68 Nm).
8. Apply JLG Threadlocker P/N 0100019 and tighten jam nut.

9. Torque mounting bolts to 340 ft. lbs. (460 Nm).

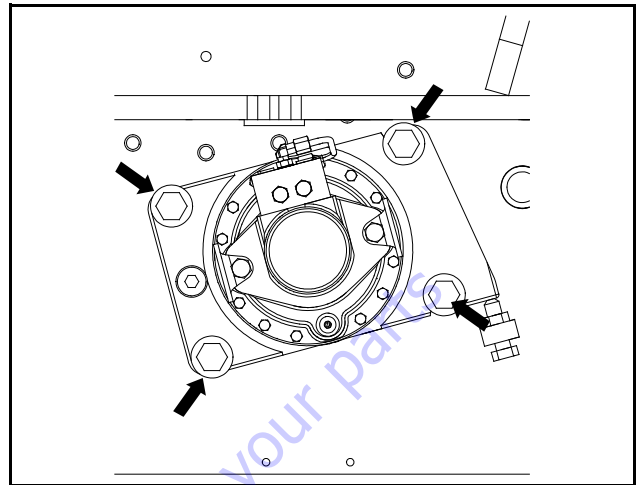


10. Remove shim and discard.

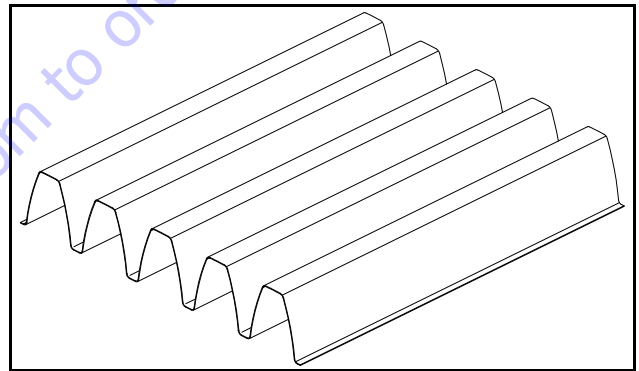

Swing Drive Lubrication

Fill Swing Drive Gearbox with 43 oz (1.27 L) 90w80gear oil with EP additives. Oil should cover the ring gear. Torque pipe plug to 23-25 ft. lbs. (31- 33 Nm).

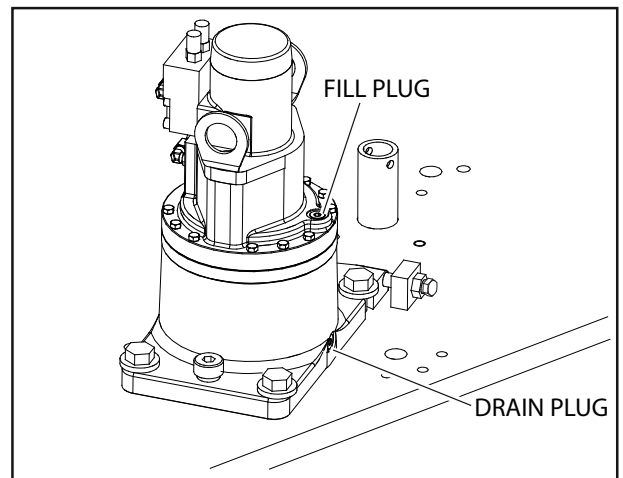

3.12 SWING BEARING

Turntable Bearing Mounting Bolt Condition Check

NOTICE

THE SWING BEARING IS ONE OF THE MOST CRITICAL POINTS ON AN AERIAL LIFT. IT IS HERE THAT THE STRESSES OF LIFTING ARE CONCENTRATED, AT THE CENTER OF ROTATION. BECAUSE OF THIS, PROPER MAINTENANCE OF THE SWING BEARING BOLTS IS A MUST FOR SAFE OPERATION.

NOTE: This check is designed to replace the existing bearing bolt torque checks on JLG Lifts in service. This check must be performed after the first 50 hours of machine operation and every 600 hours of machine operation thereafter. If during this check any bolts are found to be missing or loose, replace missing or loose bolts with new bolts and torque to the value specified in the torque chart, after lubricating the bolt threads with JLG Threadlocker P/N 0100019. After replacing and retorquing bolt or bolts recheck all existing bolts for looseness.

1. Check the frame to bearing attach bolts as follows:
 - a. Elevate the fully extended main boom to horizontal. (See Figure 3-42.)
 - b. At the positions indicated on Figure 3-43., try to insert a 0.0015 in. feeler gauge between the bolt and hardened washer at the arrow indicated position.
 - c. Ensure that the 0.0015 in. feeler gauge will not penetrate under the bolt head to the bolt shank.
 - d. Swing the turntable 90 degrees, and check some selected bolts at the new position.
 - e. Continue rotating the turntable at 90 degree intervals until a sampling of bolts have been checked in all quadrants.
2. Check the turntable to bearing Attach bolts as follows:
 - a. Elevate the fully retracted main boom to full elevation.
 - b. At the position indicated on Figure 3-41., try to insert the 0.0015 in. feeler gauge between the bolt head and hardened washer at the arrow indicated position.
 - c. Lower the boom to horizontal and fully extend the boom.
 - d. At the position indicated on Figure 3-43., try and insert the 0.0015 in. feeler gauge between the bolt head and hardened washer at the arrow indicated position.

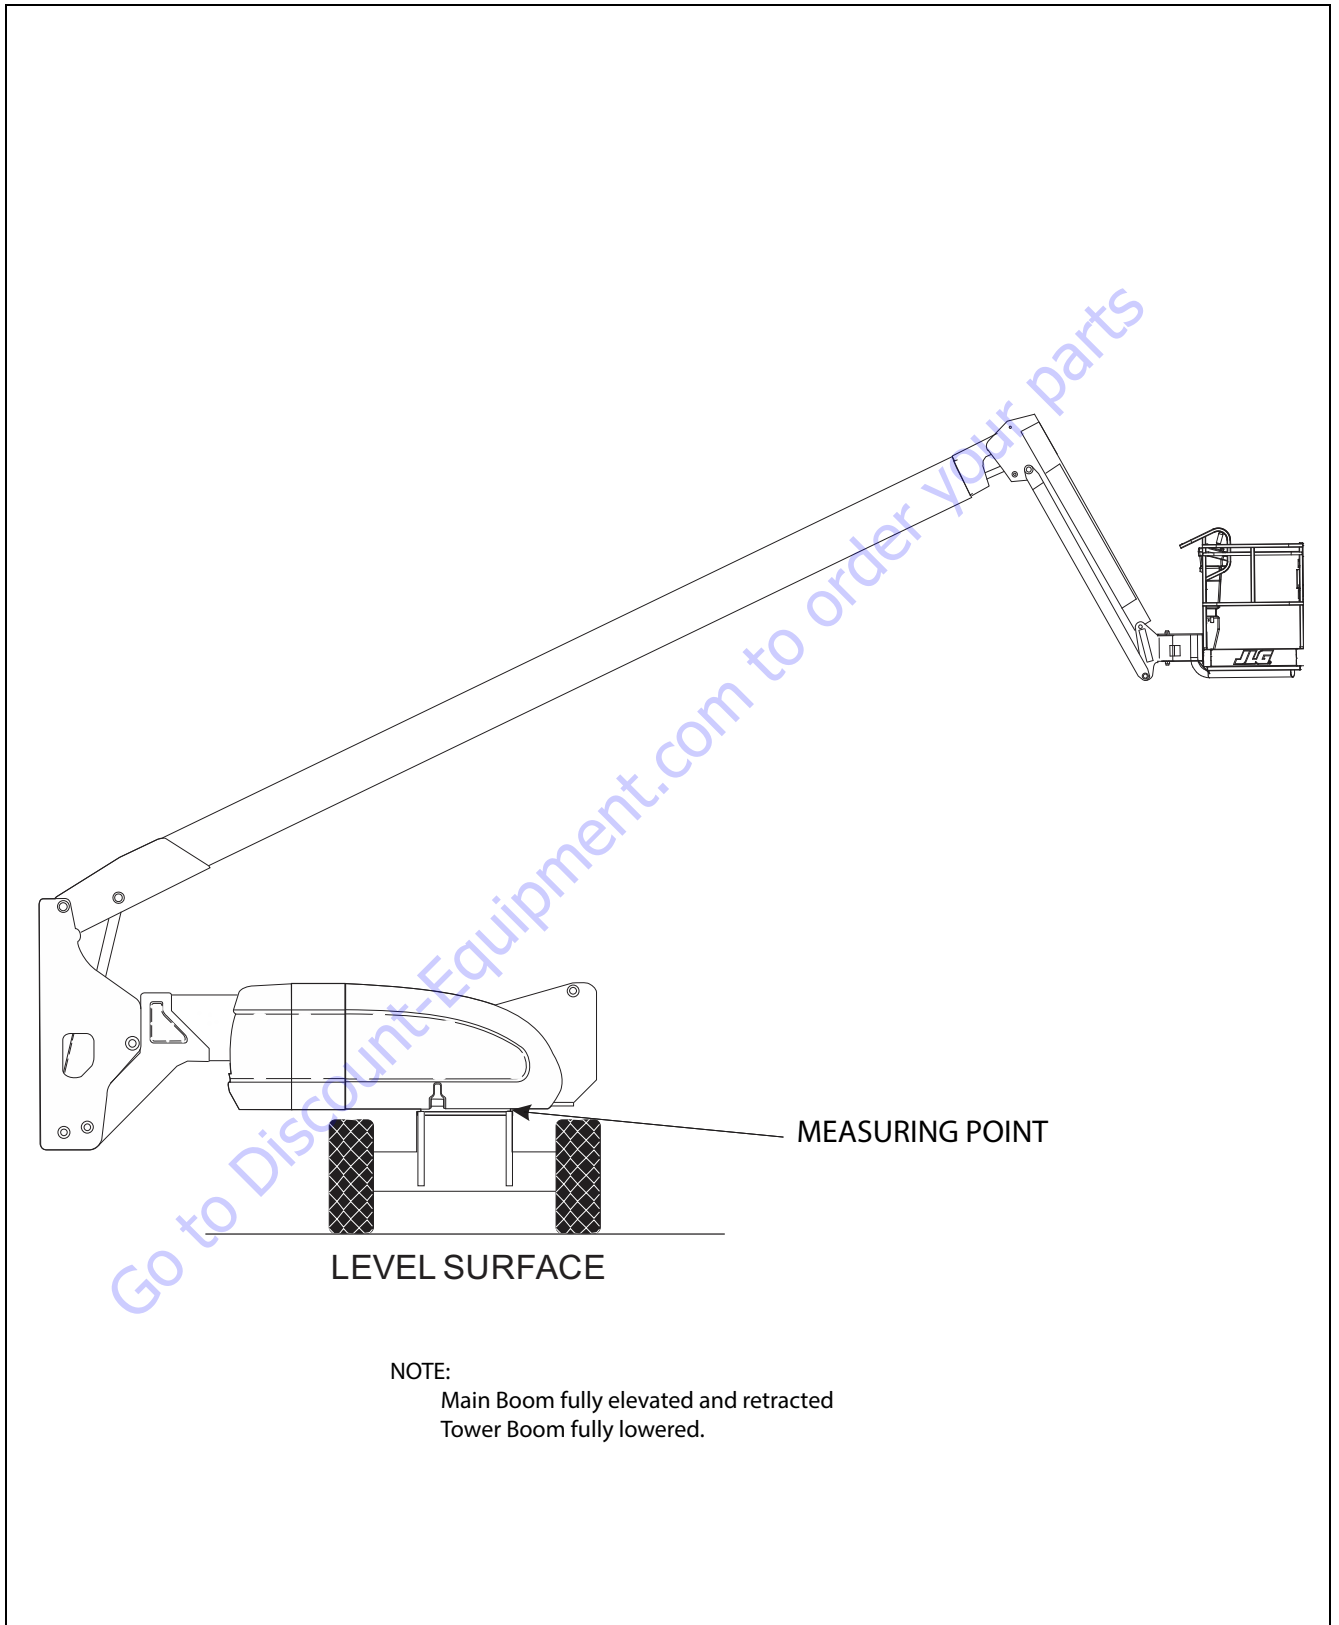


Figure 3-41. Swing Bearing Tolerance Boom Placement (Sheet 1 of 2)

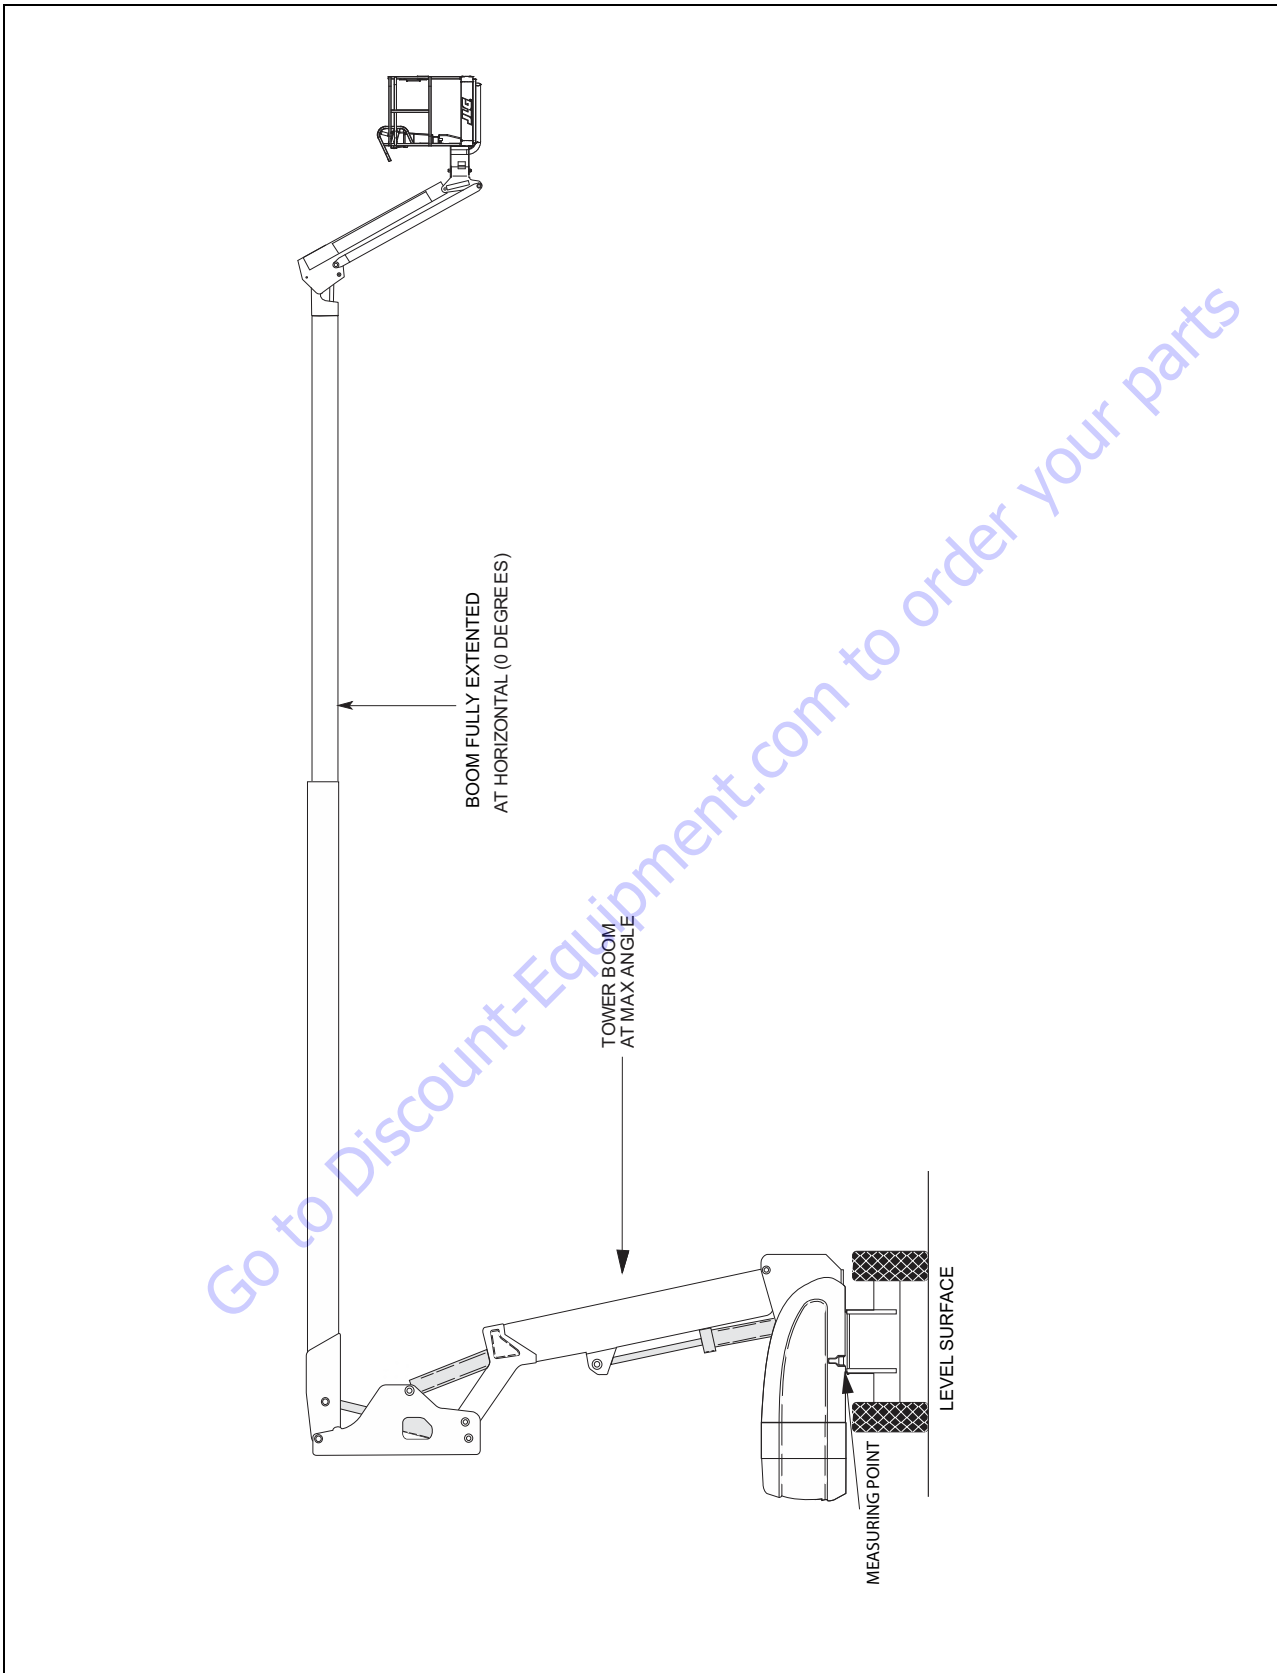


Figure 3-42. Swing Bearing Tolerance Boom Placement (Sheet 2 of 2)

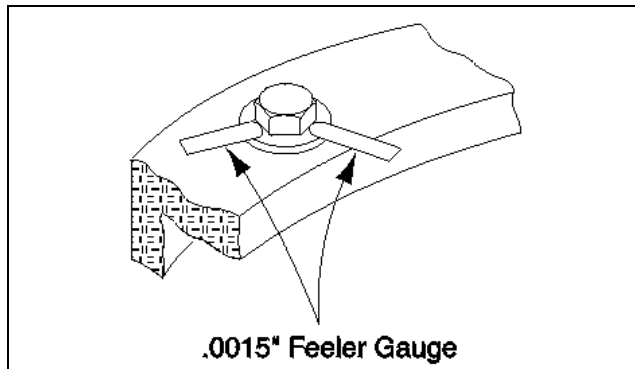


Figure 3-43. Swing Bolt Feeler Gauge Check

Wear Tolerance

1. From the underside of the machine, at rear center, with the main boom fully elevated and fully retracted, and tower boom stowed, as shown in Figure 3-41., Swing Bearing Tolerance Boom Placement (Sheet 1 of 2), using a magnetic base dial indicator, measure and record the distance between the swing bearing and turntable. See Figure 3-44., Swing Bearing Tolerance Measuring Point.
2. At the same point, with the main boom at horizontal and fully extended, and the tower boom fully elevated and fully retracted as shown in Figure 3-42., Swing Bearing Tolerance Boom Placement (Sheet 2 of 2). Using a magnetic base dial indicator, measure and record the distance between the swing bearing and turntable. See Figure 3-44., Swing Bearing Tolerance Measuring Point.
3. If a difference greater than 0.079 in. (2.00 mm) is determined, the swing bearing should be replaced.
4. If a difference less than 0.079 in. (2.00 mm) is determined, and any of the following conditions exist, the bearing should be removed, disassembled, and inspected for the following:
 - a. Metal particles in the grease.
 - b. Increased drive power required.
 - c. Noise.
 - d. Rough rotation.
5. If bearing inspection shows no defects, reassemble and return to service.

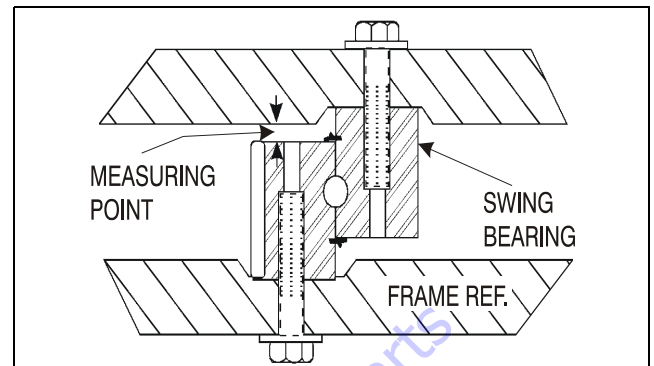


Figure 3-44. Swing Bearing Tolerance Measuring Point

Swing Bearing Replacement

REMOVAL

1. From Ground Control station, operate the boom adequately to provide access to frame opening to rotary coupling.

⚠ WARNING

NEVER WORK BENEATH THE BOOM WITHOUT FIRST ENGAGING BOOM SAFETY PROP OR PROVIDING ADEQUATE OVERHEAD SLING SUPPORT AND/OR BLOCKING.

2. Attach an adequate support sling to the boom and draw all slack from sling. Prop or block the boom if feasible.
3. From inside turntable, remove mounting hardware which attach rotary coupling retaining yoke brackets to turntable.

NOTICE

HYDRAULIC LINES AND PORTS SHOULD BE CAPPED IMMEDIATELY AFTER DISCONNECTING LINES TO AVOID THE ENTRY OF CONTAMINANTS INTO THE SYSTEM.

4. Tag and disconnect the hydraulic lines from the fittings on the top of the rotary coupling. Use a suitable container to retain any residual hydraulic fluid. Immediately cap lines and ports.
5. Attach suitable overhead lifting equipment to the base of the turntable weldment.
6. Use a suitable tool to scribe a line on the inner race of the swing bearing and on the underside of the turntable. This will aid in aligning the bearing upon installation. Remove the bolts and washers which attach the turntable to the bearing inner race. Discard the bolts.
7. Use the lifting equipment to carefully lift the complete turntable assembly from the bearing. Ensure that no damage occurs to the turntable, bearing or frame-mounted components.

8. Carefully place the turntable on a suitably supported trestle.
9. Use a suitable tool to scribe a line on the outer race of the swing bearing and the frame. This line will aid in aligning the bearing upon installation. Remove the bolts and washers which attach the outer race of the bearing to the frame. Discard the bolts. Use suitable lifting equipment to remove the bearing from the frame, then move the bearing to a clean, suitably supported work area.

INSTALLATION

1. Using suitable lifting equipment, carefully lower the swing bearing into position on the frame. Ensure the scribed line of the outer race of the bearing aligns with the scribed line on the frame. If a new swing bearing is used, ensure that the filler plug fitting is at 90 degrees from the fore and aft center line of the frame.

⚠ CAUTION

JLG INDUSTRIES RECOMMENDS THAT ALL REMOVED BEARING BOLTS BE DISCARDED AND REPLACED WITH NEW BOLTS. SINCE THE SWING BEARING IS THE ONLY STRUCTURAL LINK BETWEEN THE FRAME AND TURNTABLE, IT IS IMPERATIVE THAT SUCH REPLACEMENT HARDWARE MEETS JLG SPECIFICATIONS. USE OF GENUINE JLG HARDWARE IS HIGHLY RECOMMENDED.

2. Apply a light coating of JLG Threadlocker P/N 0100019 to the new bearing bolts, and loosely install the bolts and washers through the frame and outer race of bearing.

NOTICE

IF COMPRESSED AIR OR ELECTRICALLY OPERATED IMPACT WRENCH IS USED FOR TIGHTENING THE BEARING ATTACHMENT BOLTS, THE TORQUE SETTING ACCURACY OF THE TOOL SHOULD BE CHECKED PRIOR TO USE.

3. Refer to the Torque Sequence diagram as shown in Figure 3-46., Swing Bearing Torque Sequence. Clean any residue off the new bearing bolts, then apply a light coating of JLG Threadlocker P/N 0100019 and install the bolts and washers through the frame and outer race of the bearing. Tighten the bolts to an initial torque of 190 Ft. lbs. (260 Nm) w/JLG Threadlocker P/N 0100019.
4. Remove the lifting equipment from the bearing.
5. Using suitable lifting equipment, carefully position the turntable assembly above the machine frame.
6. Carefully lower the turntable onto the swing bearing, ensuring that the scribed line of the inner race of the bearing aligns with scribed line on the turntable. If a new swing bearing is used, ensure that the filler plug fitting is at 90 degrees from the fore and aft center line of the turntable.

7. Clean any residue off the new bearing bolts, then apply a light coating of JLG Threadlocker P/N 0100019 and install the bolts and washers through the turntable and inner race of the bearing.
8. Following the Torque Sequence diagram shown in Figure 3-46., Swing Bearing Torque Sequence, tighten the bolts to a torque of 190 ft. lbs. (260 Nm) w/Loctite.
9. Remove the lifting equipment.
10. Install the rotary coupling retaining yoke brackets, apply a light coating of JLG Threadlocker P/N 0100011 to the attaching bolts and secure the yoke to the turntable with the mounting hardware.
11. Connect the hydraulic lines to the rotary coupling as tagged prior to removal.
12. At ground control station, use boom lift control to lower boom to stowed position.
13. Using all applicable safety precautions, activate the hydraulic system and check the swing system for proper and safe operation.

Swing Bearing Torque Values

1. Outer Race - 190 ft. lbs. (260 Nm) w/JLG Threadlocker P/N 0100019.
2. Inner Race - 190 ft. lbs. (260 Nm) w/JLG Threadlocker P/N 0100019.
3. See Swing Bearing Torquing Sequence.

⚠ WARNING

CHECK THE INNER AND OUTER SWING BEARING BOLTS FOR MISSING OR LOOSENESS AFTER FIRST 50 HOURS OF OPERATION, AND EVERY 600 HOURS THEREAFTER.

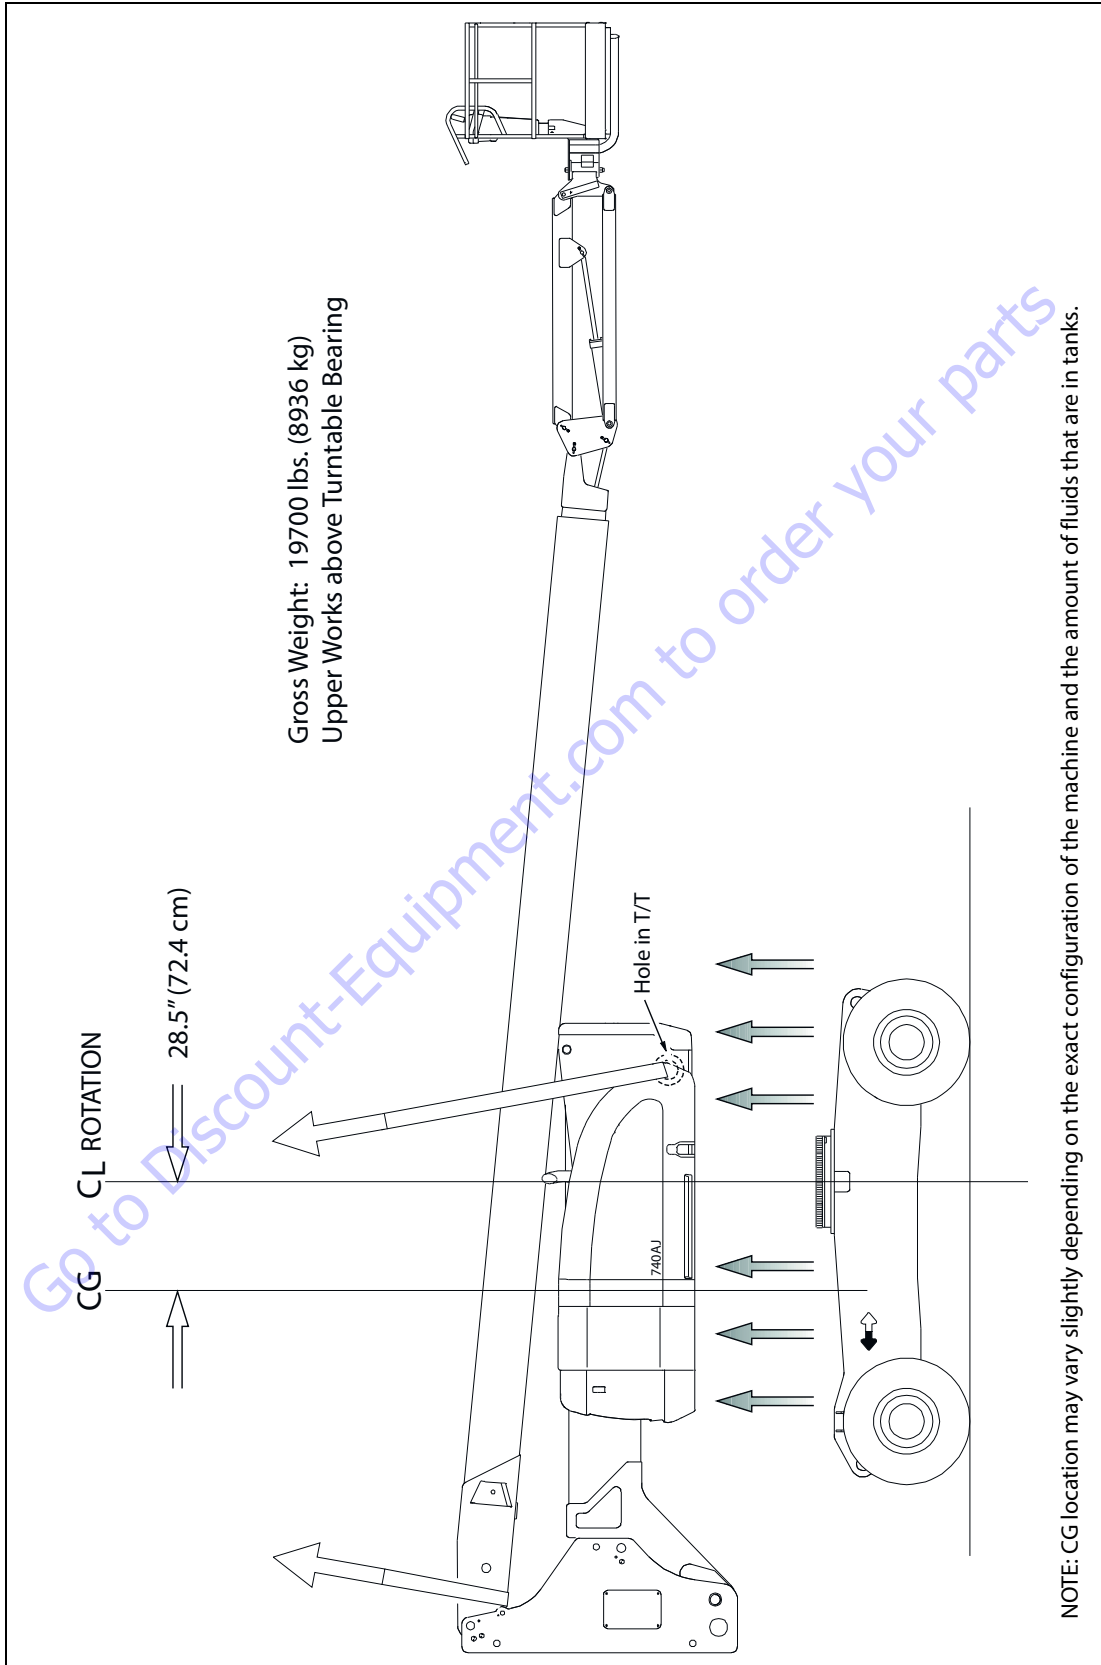


Figure 3-45. Swing Bearing Removal

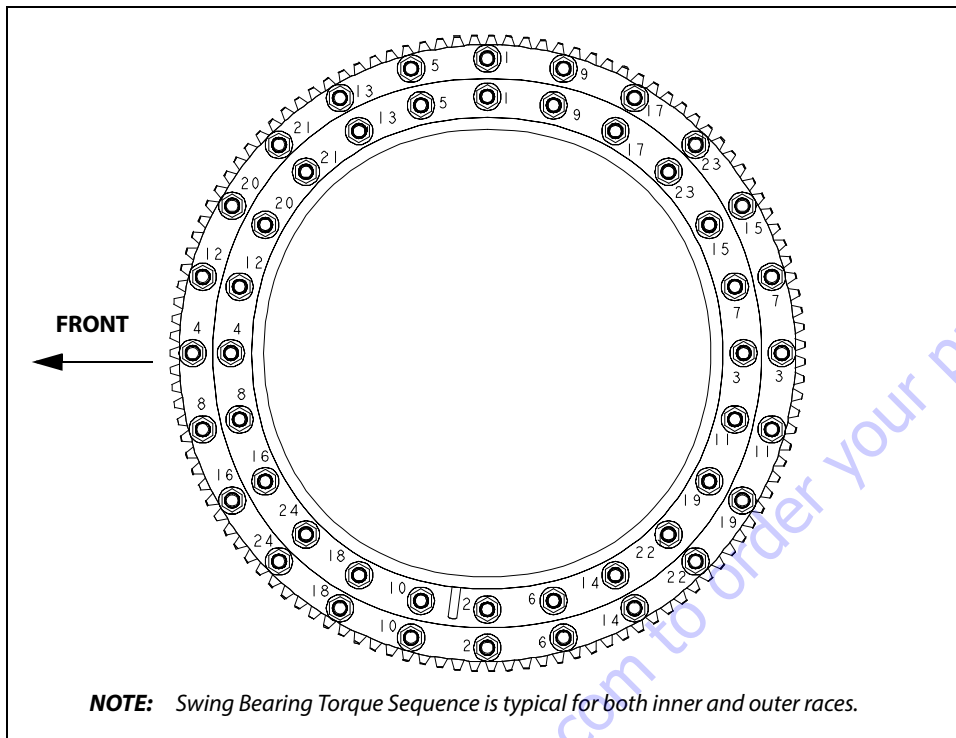


Figure 3-46. Swing Bearing Torque Sequence

3.13 TILT INDICATOR SYSTEM

1. The tilt indicator system measures the turntable angle with respect to level ground. The tilt switch itself has two settings; 5 (or 4 degree dependent upon market) and 8.5 degrees.
2. The smaller angle is used for the purpose of warning the operator by means of the tilt light in the platform display panel.
3. Additionally when used in conjunction with the "above elevation cutout system" or the "transport position interlock system", the tilt switch will cause an alarm to sound, and automatically put the machine in the creep speed mode. With the exception of the speed cutback, this is a warning system only.
4. The machine will continue to function. The operator is responsible to prevent the machine from attaining an unstable position. The 8.5 degree angle is used exclusively for the purpose of automatically shifting the drive motors to the maximum displacement position (slow speed).

3.14 SPARK ARRESTER CLEANING INSTRUCTIONS

1. Remove the cleanout plug in the bottom of spark arrester (muffler).
2. Without causing deformation (or any type of damage to the spark arrester) repeatedly tap on the arrester near the cleanout plug. This may be enough to begin drainage of the spark trap.
3. An industrial vacuum cleaner can do a complete job at this point.
 - a. Start the engine in a safe area. Then alternate between low idle and high idle for two to three minutes.
 - b. Operate the engine as required by the application for two to three minutes.
 - c. Install the cleanout plug.

3.15 ROTARY COUPLING

Use the following procedure to install the seal kit.

1. If not already removed, remove the axle oscillation valve from the cylinder barrel. The spool of the valve protrudes into the barrel and will damage the spool and seals if left in place.
2. Remove snap ring (7) from end.
3. Remove thrust ring (6) from the same end.
4. Remove center body (1) from housing (3).
5. Cut off old seals (2, 4, 5).
6. Remove proximity switch.
7. Assemble lip seals (2) in direction shown in Figure 3-47., Rotary Coupling Seal Installation.
8. Reassemble O-ring (4).
9. Heat cap seals (5) in hydraulic oil for 5 minutes at 300° F (149° C).
10. Assemble cap seals over O-rings.
11. Reinsert center body into housing (lube with hydraulic oil).
12. Replace thrust ring and snap ring.
13. Install proximity switch as shown in Figure 3-50.


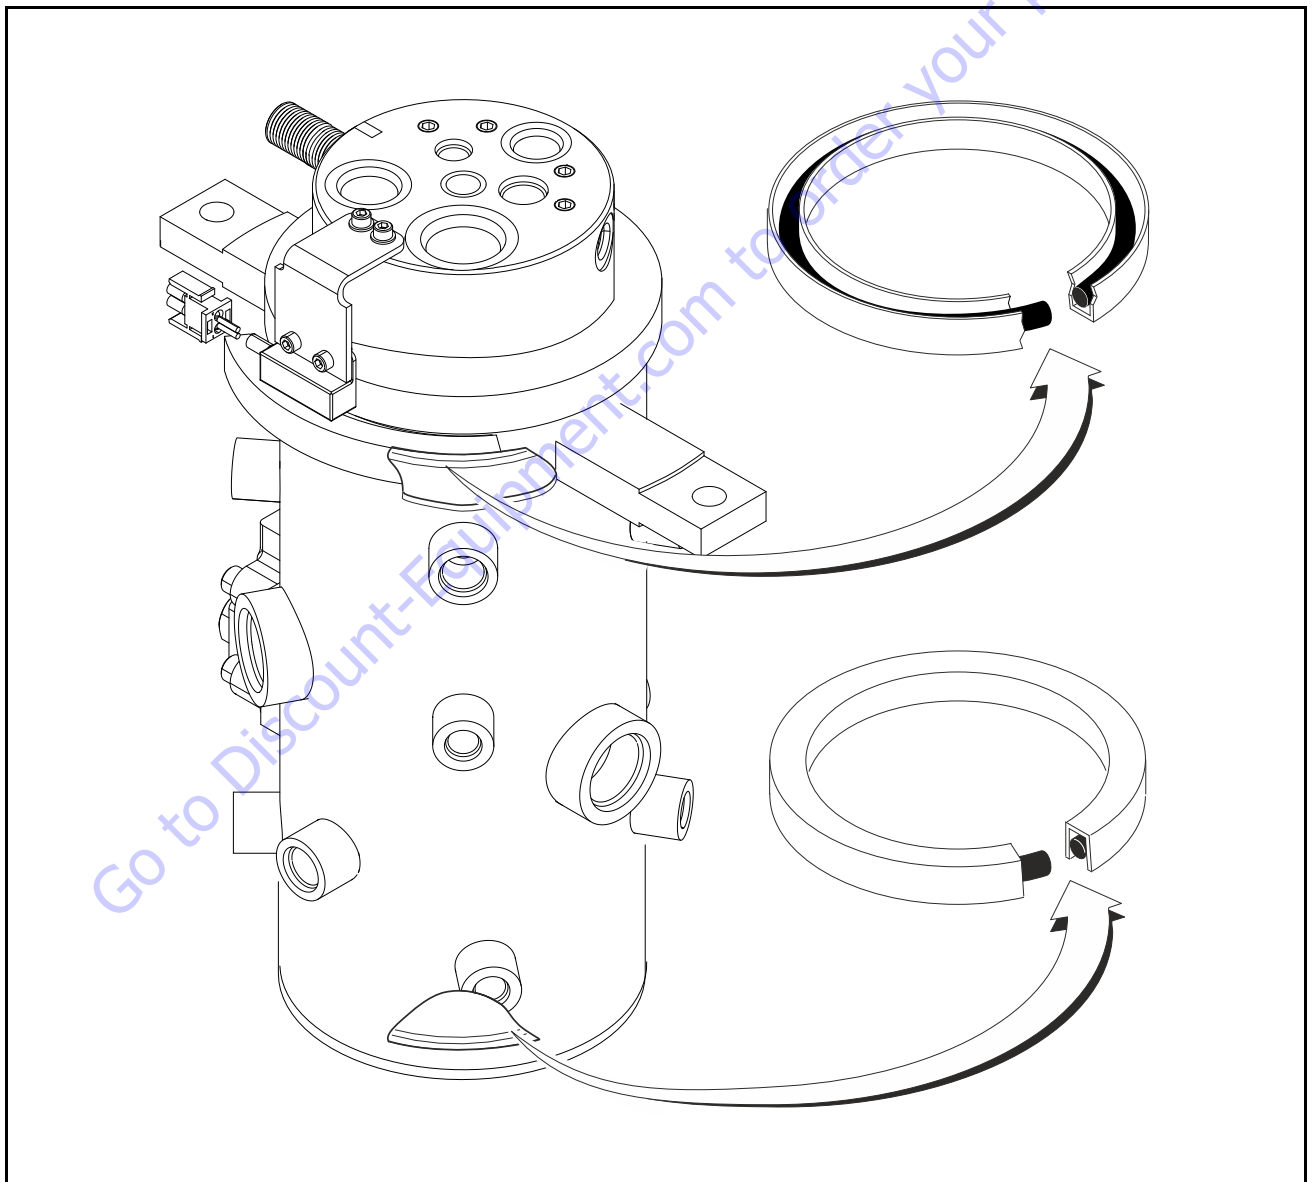


Figure 3-47. Rotary Coupling Seal Installation

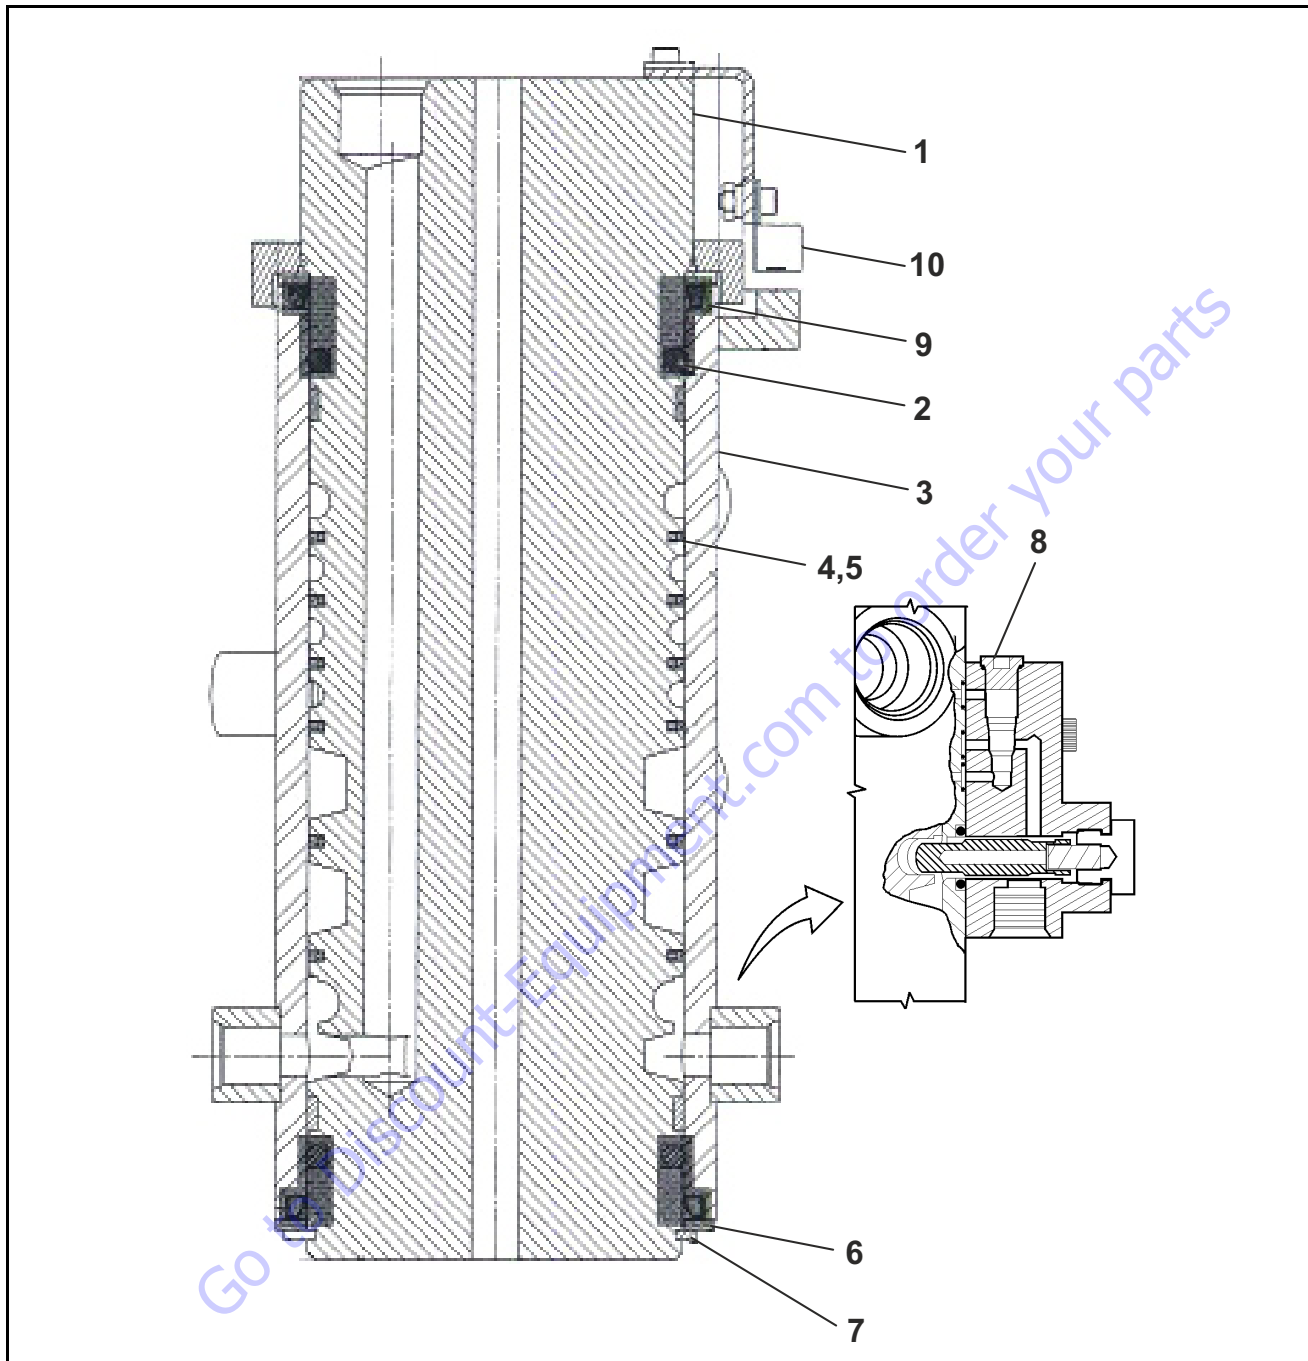

- | | |
|----------------|-----------------------------------|
| 1. Center Body | 6. Thrust Ring |
| 2. Seal | 7. Snap Ring |
| 3. Housing | 8. Valve Block (Axle Oscillation) |
| 4. O-ring | 9. O-ring |
| 5. Seal | 10. Proximity Switch |

Figure 3-48. Rotary Coupling Cutaway


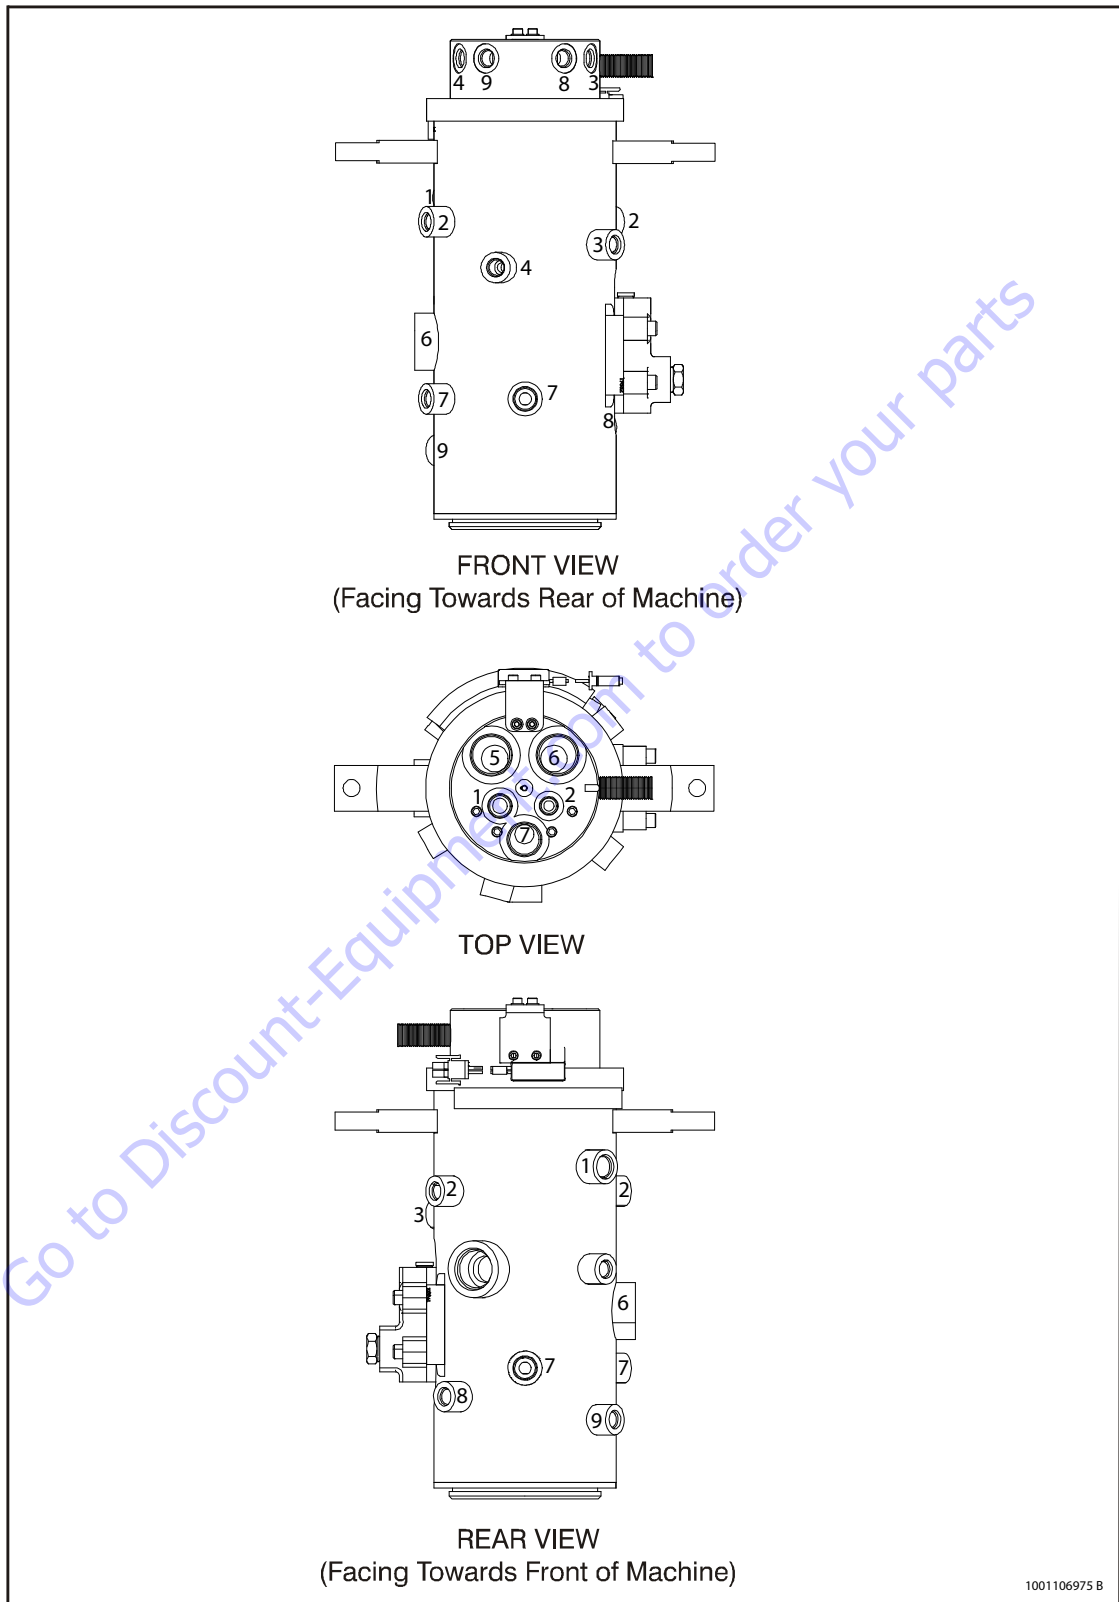


Figure 3-49. Rotary Coupling Port Location (9 Port)

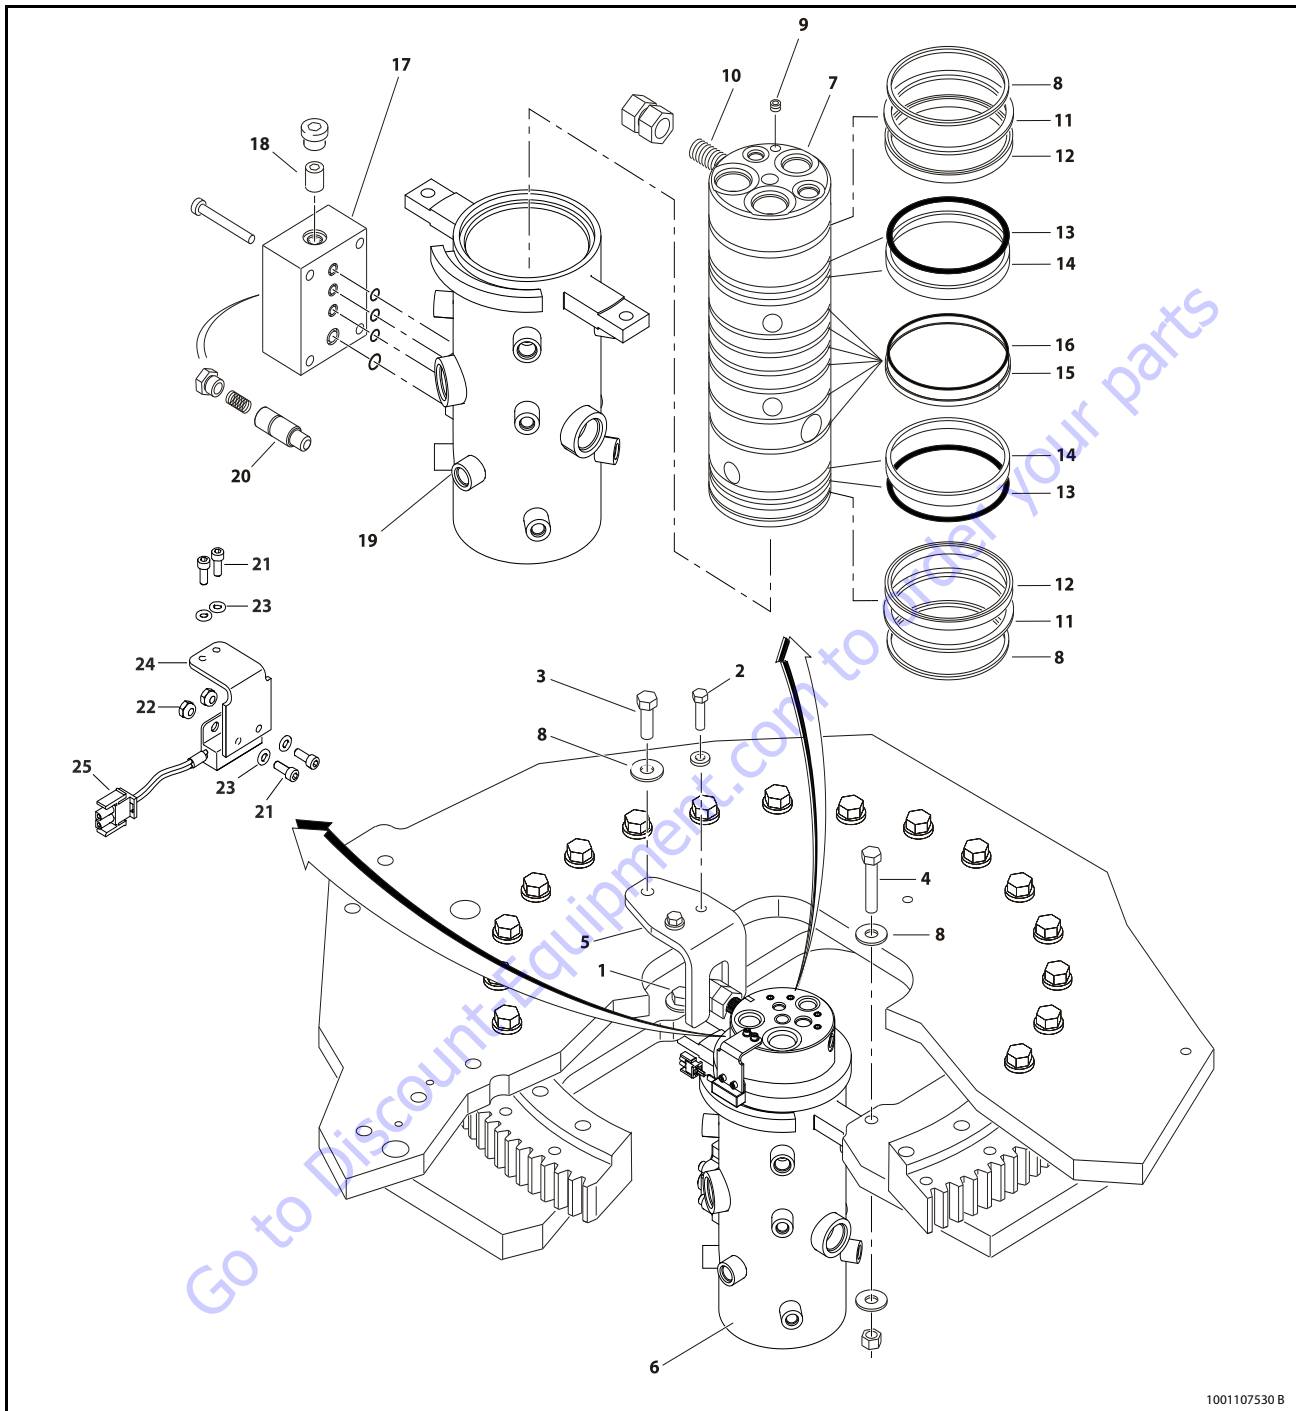

- | | | | | |
|---------------------|--------------------|--------------|-------------------|----------------------|
| 1. JLG Threadlocker | 6. Rotary Coupling | 11. Ring | 16. O-ring | 21. Bolt |
| 2. Bolt | 7. Spool | 12. Seal | 17. Valve | 22. Nut |
| 3. Bolt | 8. Retaining Ring | 13. O-ring | 18. Check Valve | 23. Washer |
| 4. Bolt | 9. Plug | 14. Bearing | 19. Case | 24. Bracket |
| 5. Bracket | 10. Torque Lug | 15. Cap Seal | 20. Plunger Valve | 25. Proximity Switch |

Figure 3-50. Rotary Coupling Installation

Table 3-8. Coupling Port Information Table (9 port)

Port No.	Outlets	Port Size	Description	Operating Pressure PSI (Bar)	Proof Pressure PSI (Bar)
1	1	-8	Brake	450 (31)	675 (46.5)
2	2	-6	2 Speed	4500 (310)	6750 (465)
3	1	-6	Steer	2500 (172)	3750 (258.5)
4	1	-6	Steer	2500 (172)	3750 (258.5)
5	2	1-6, 1-16	Drive Reverse	4500 (310)	6750 (465)
6	1	-16	Drive Forward	4500 (310)	6750 (465)
7	3	2-8, 1-6	Drain	250 (17)	375 (26)
8	1	-6	Steer	2500 (172)	3750 (258.5)
9	1	-6	Steer	2500 (172)	3750 (258.5)


Go to Discount-Equipment.com to order your parts

3.16 GENERATOR

Maintenance Schedule


EVERY 250 HOURS

Every 250 hours of operation, check the drive belt for proper tension.

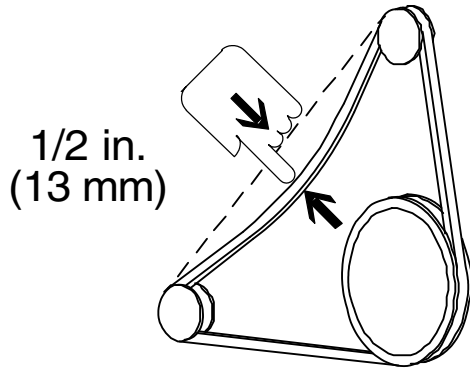


EVERY 500 HOURS

Every 500 hours of operation, service the generator brushes and slip rings. Hostile environments may require more frequent service.

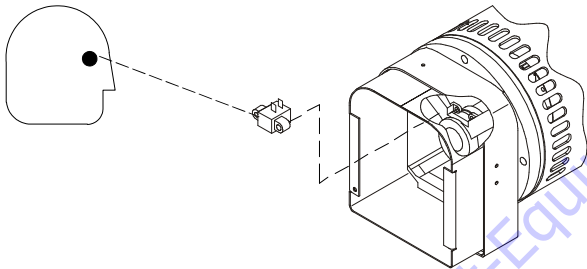

Every 500 hours of service, blow out the inside of the generator. If operating in a hostile environment, clean monthly.

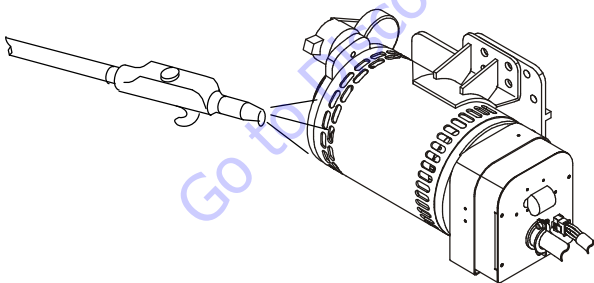


Overload Protection

CAUTION

STOP THE ENGINE WHENEVER CHECKING OR INSPECTING THE CIRCUIT BREAKER.

The circuit breaker protects the generator windings from overload. If the circuit breaker opens, generator output stops. If the circuit breaker continues to open, check for faulty equipment connected to the platform receptacles.

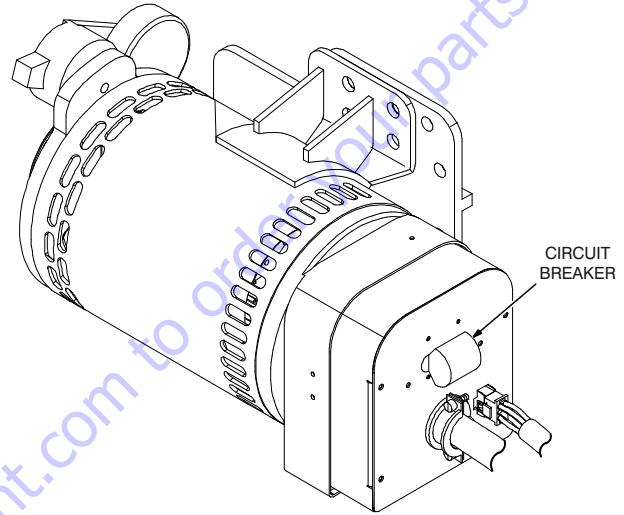

Inspecting Brushes, Replacing Brushes, and Cleaning Slip Rings

Refer to Figure 3-51., *Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings.*

INSPECTING BRUSH POSITION

Inspect brush alignment with slip rings. View alignment through the air vents in the stator barrel. The brushes must ride completely on the slip rings.

INSPECTING BRUSHES

Remove the end panel. Inspect the wires. Remove the brush holder assembly. Pull the brushes from the holders.

Replace the brushes if damaged, or if the brush is at or near minimum length.

CLEANING SLIP RINGS

Visually inspect the slip rings. Under normal use, the rings turn dark brown.

If the slip rings are corroded or their surface is uneven, remove the belt to turn the shaft by hand for cleaning.

Clean the rings with 220 grit emery paper. Remove as little material as possible. If the rings are deeply pitted and do not clean up, consult generator factory service.

Reinstall the belt, brush holder assembly, and end panel.

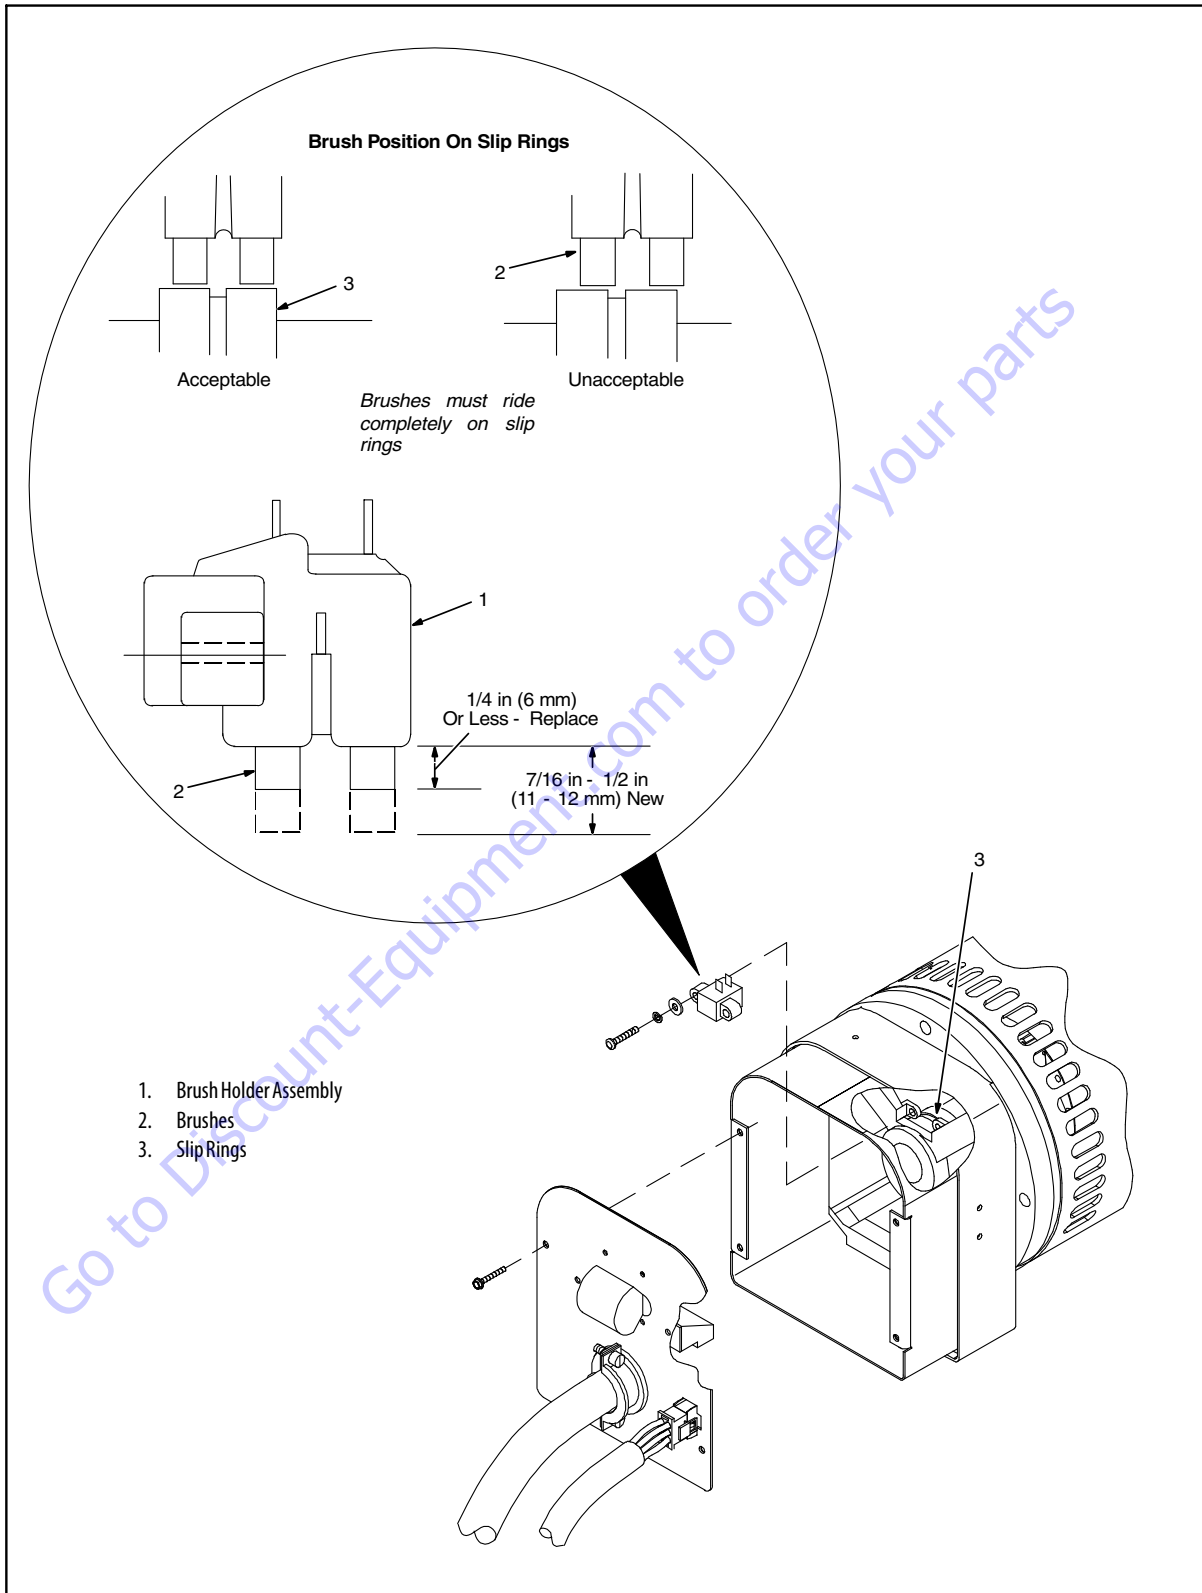


Figure 3-51. Inspecting Generator Brushes, Replacing Brushes, and Cleaning Slip Rings

Troubleshooting

Table 3-9. Troubleshooting

Trouble	Remedy
No generator output at platform AC receptacles.	Be sure generator control switch is turned on at platform.
	Check and secure electrical connections at platform, generator, and control box.
	Be sure all equipment is turned off when starting unit.
	Reset circuit breaker CB1.
	Check plug PLG3 connection and/or connections at receptacles RC3 and RC5.
	Be sure + 12 volts DC input voltage is being supplied to control box.
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Disconnect leads 12 and 13 from brushes, and check continuity across slip rings (nominal reading is 26 ohms). Replace generator if rotor is open.
	Disconnect stator weld leads 1, 2, and 3 from circuit breaker CB1, and check continuity between leads. Replace generator if necessary.
	Disconnect plug PLG4 and check continuity between exciter leads 5 and 6. Replace generator if necessary.
	Check power board PC1 and connections, and replace if necessary.
Check control board PC2 and connections, and replace if necessary.	
Low generator output at platform AC receptacles.	Verify generator is running at 3600 rpm (60 Hz) or 3000 rpm (50 Hz).
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Disconnect leads 12 and 13 from brushes, and check continuity across slip rings nominal reading is 26 ohms). Replace generator if rotor is open.
	Disconnect stator weld leads 1, 2, and 3 from circuit breaker CB1, and check continuity between leads. Replace generator if necessary.
	Disconnect plug PLG4 and check continuity between exciter leads 5 and 6. Replace generator if necessary.
	Check power board PC1 and connections, and replace if necessary.
Check control board PC2 and connections, and replace if necessary.	
High generator output at platform AC receptacles.	Verify generator is running at 3600 rpm (60 Hz) or 3000 rpm (50 Hz).
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Check power board PC1 and connections, and replace if necessary.
	Check control board PC2 and connections, and replace if necessary.
Erratic generator output at platform AC receptacles.	Check and secure electrical connections at platform, generator, and control box.
	Verify generator is running at 3600 rpm (60 Hz) or 3000 rpm (50 Hz).
	Check slip rings, wiring to brushes, and brush position on slip rings. Install new brushes if necessary.
	Disconnect leads 12 and 13 from brushes, and check continuity across slip rings nominal reading is 26 ohms). Replace generator if rotor is open.
	Check power board PC1 and connections, and replace if necessary.
Check control board PC2 and connections, and replace if necessary.	

Generator Disassembly and Assembly

Refer to Figure 3-53. and Figure 3-54. to determine if trouble is in stator, rotor, control box, or combination of these components.

1. Rotor
2. Stator Assembly

⚠ CAUTION

DO NOT DAMAGE ROTOR OR STATOR WINDINGS DURING DISASSEMBLY AND ASSEMBLY PROCEDURE.

DISASSEMBLY

1. Mark and disconnect all electrical leads, secure using cable ties.

2. Remove brush holder assembly.
3. Disassemble generator parts shown in Figure 3-52.
4. Clean all parts with approved solvent and dry with compressed air, if applicable.
5. Inspect all part for damage. Replace if necessary.

ASSEMBLY

1. Assemble generator parts using torque values in table.
2. Reconnect all leads. Use cable ties to secure leads away from moving or hot parts.

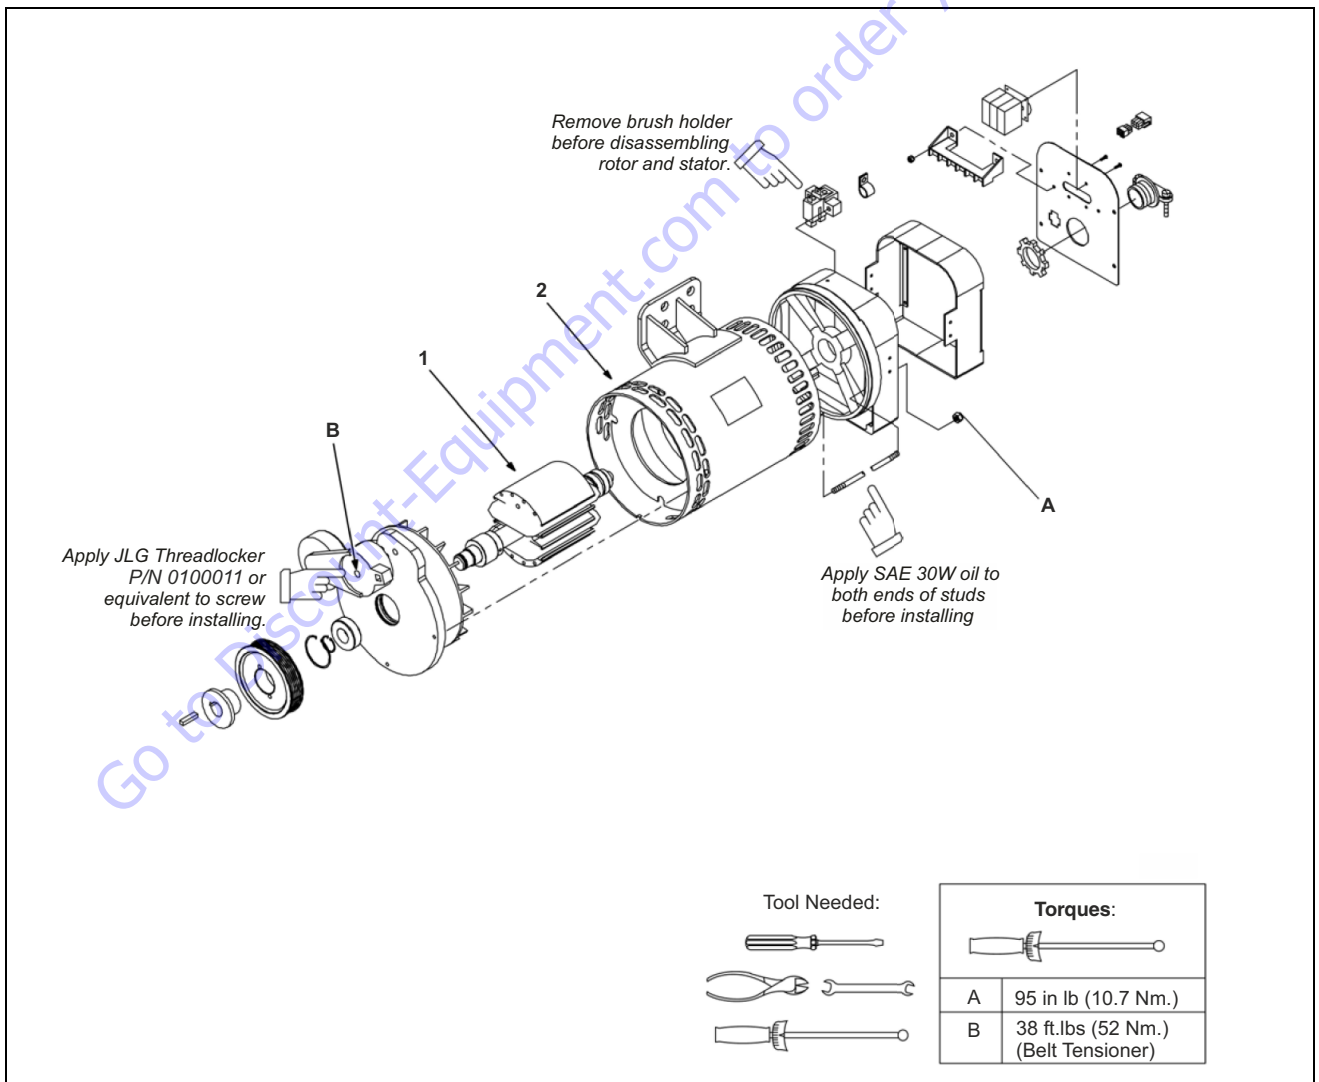


Figure 3-52. Generator Disassembly and Assembly

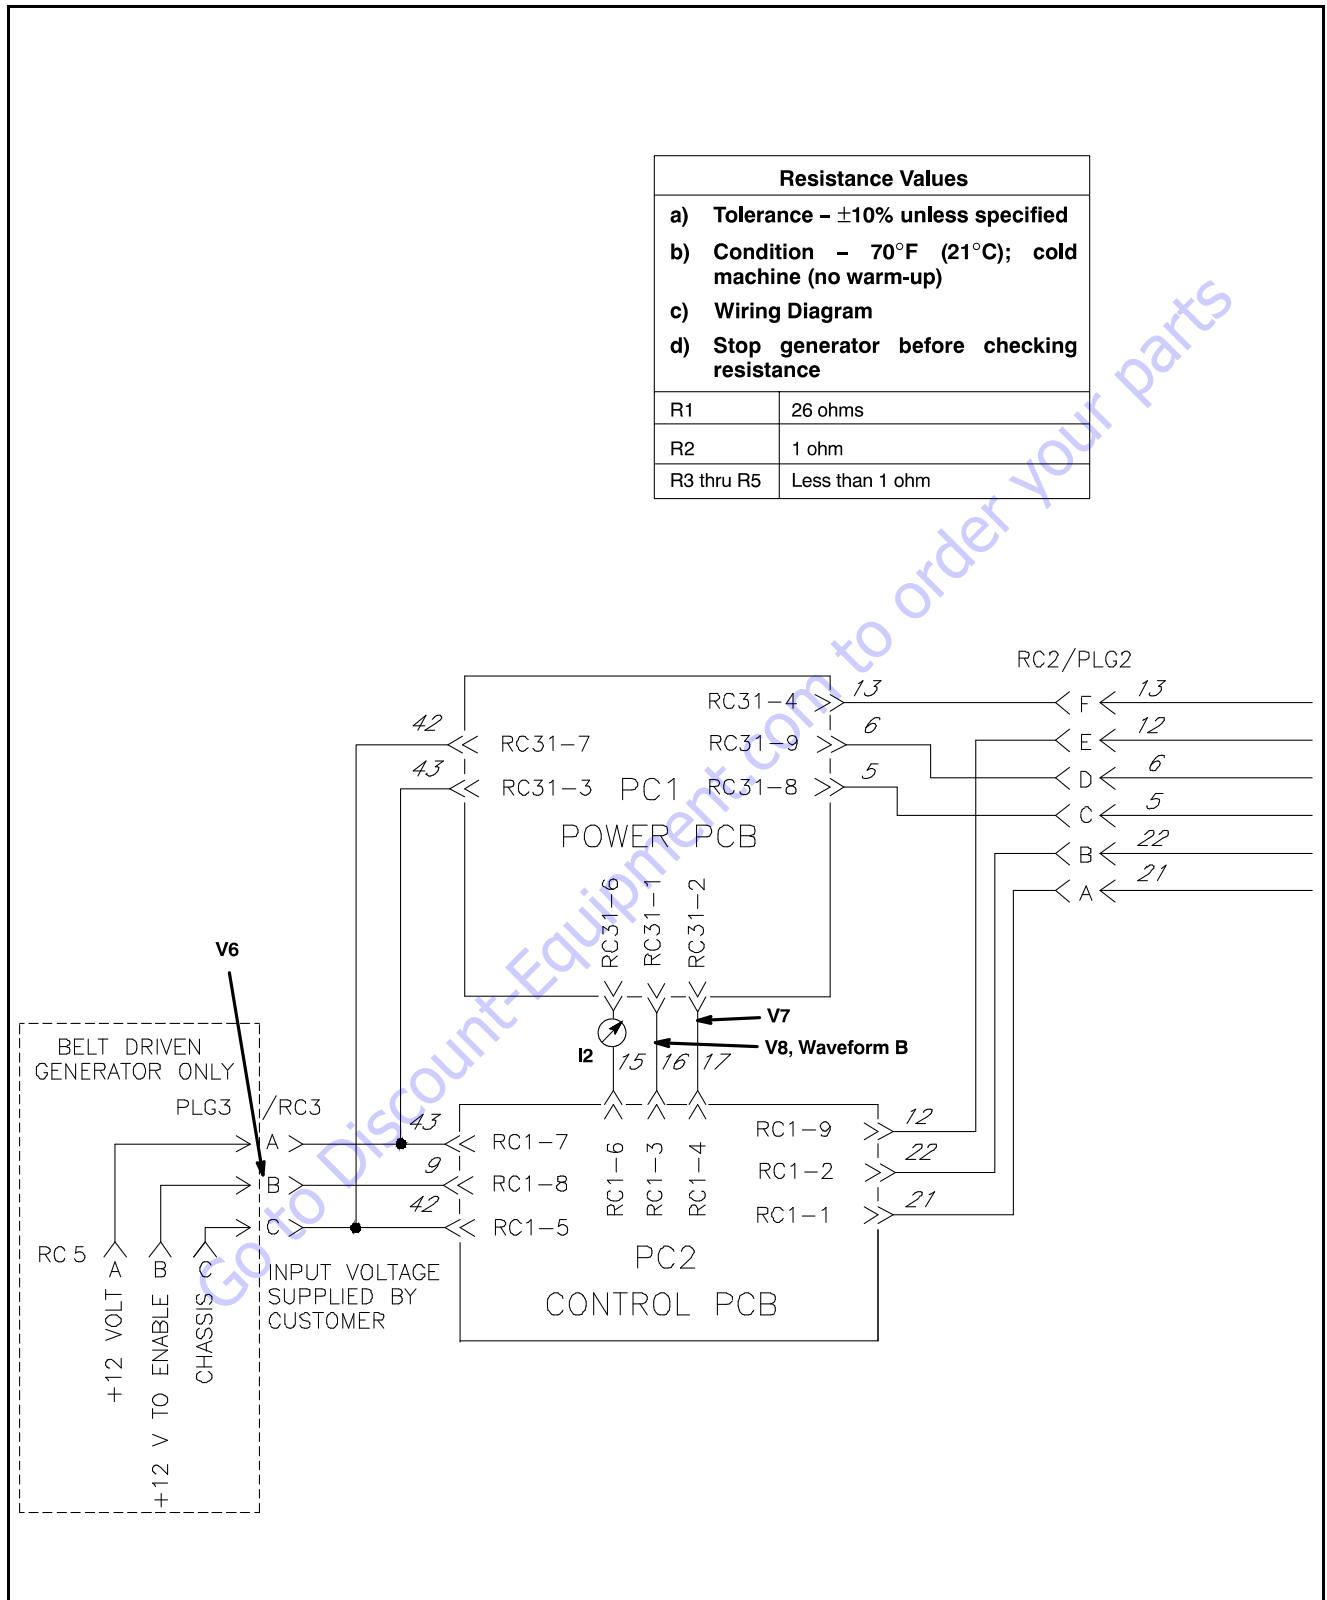


Figure 3-53. Generator Troubleshooting Circuit Diagram (Sheet 1 of 2)

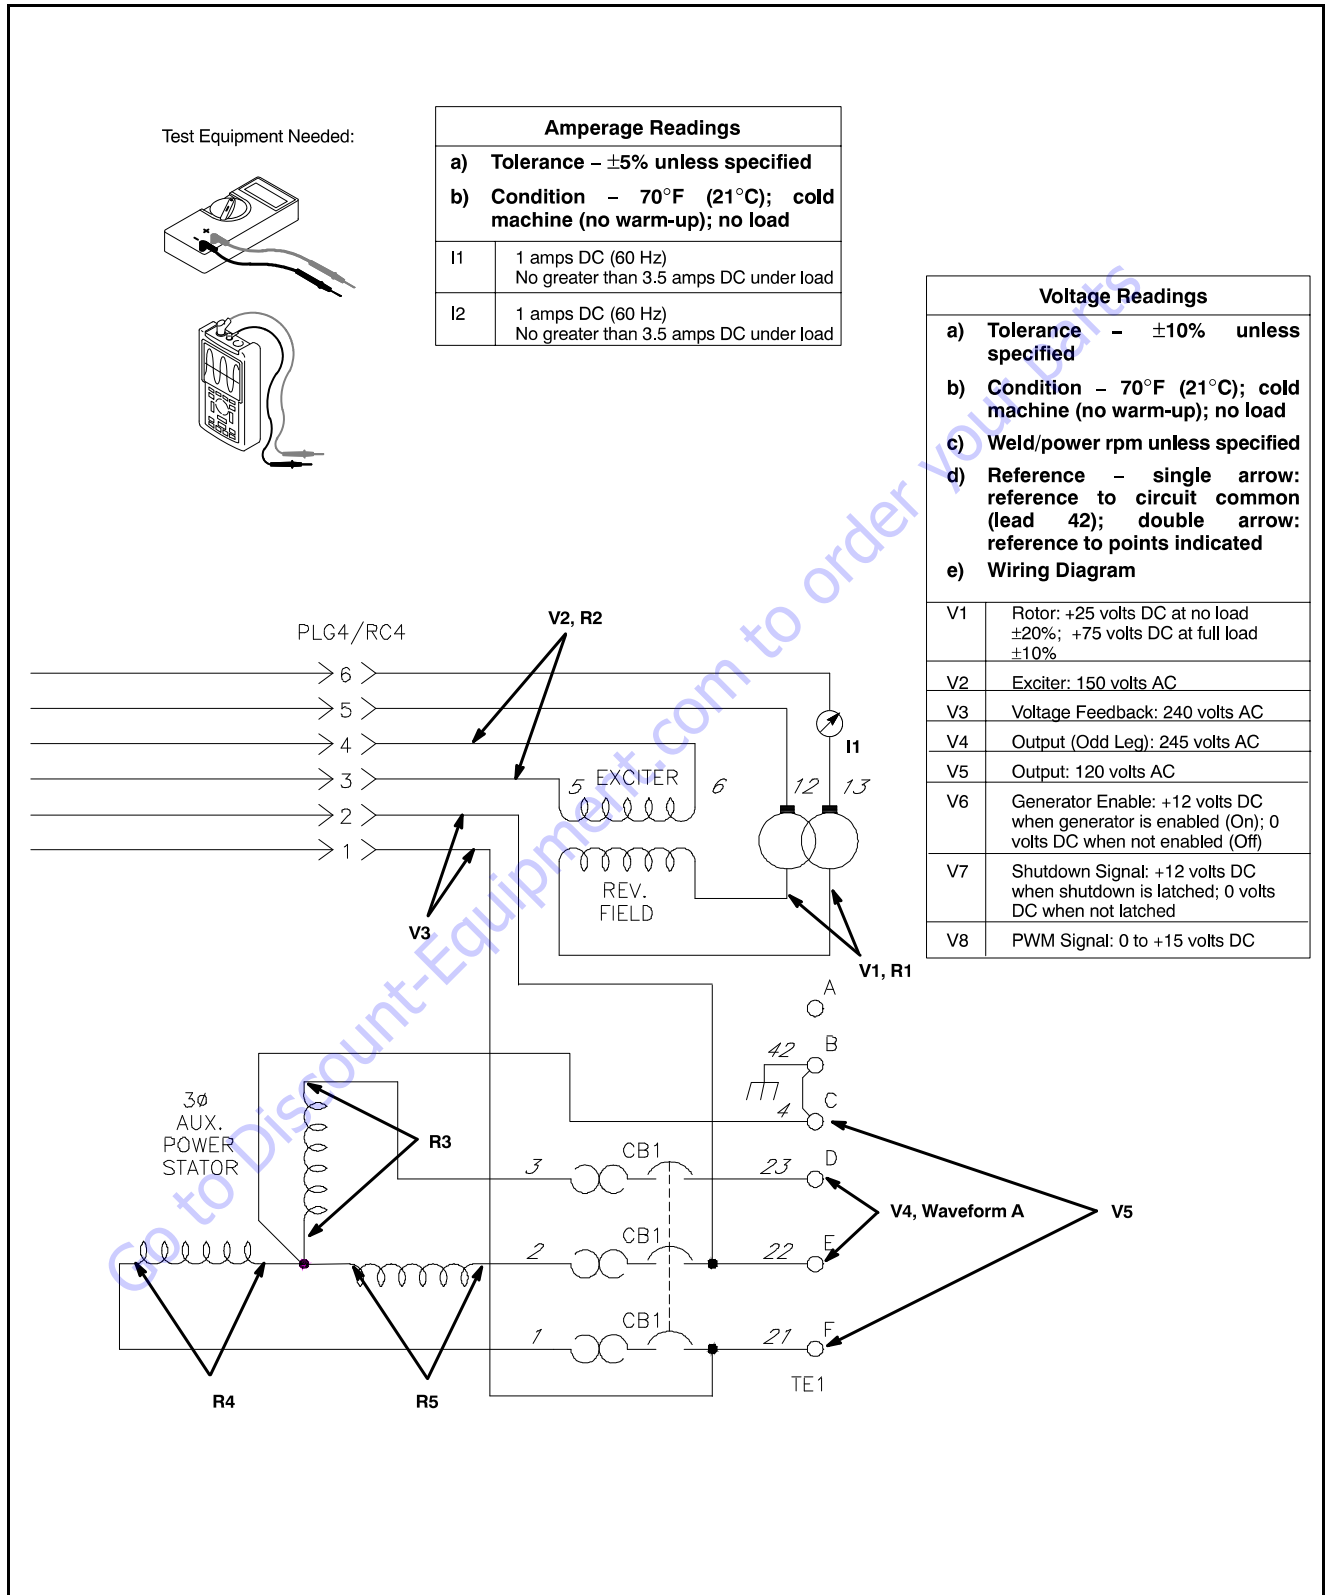


Figure 3-54. Generator Troubleshooting Circuit Diagram (Sheet 2 of 2)

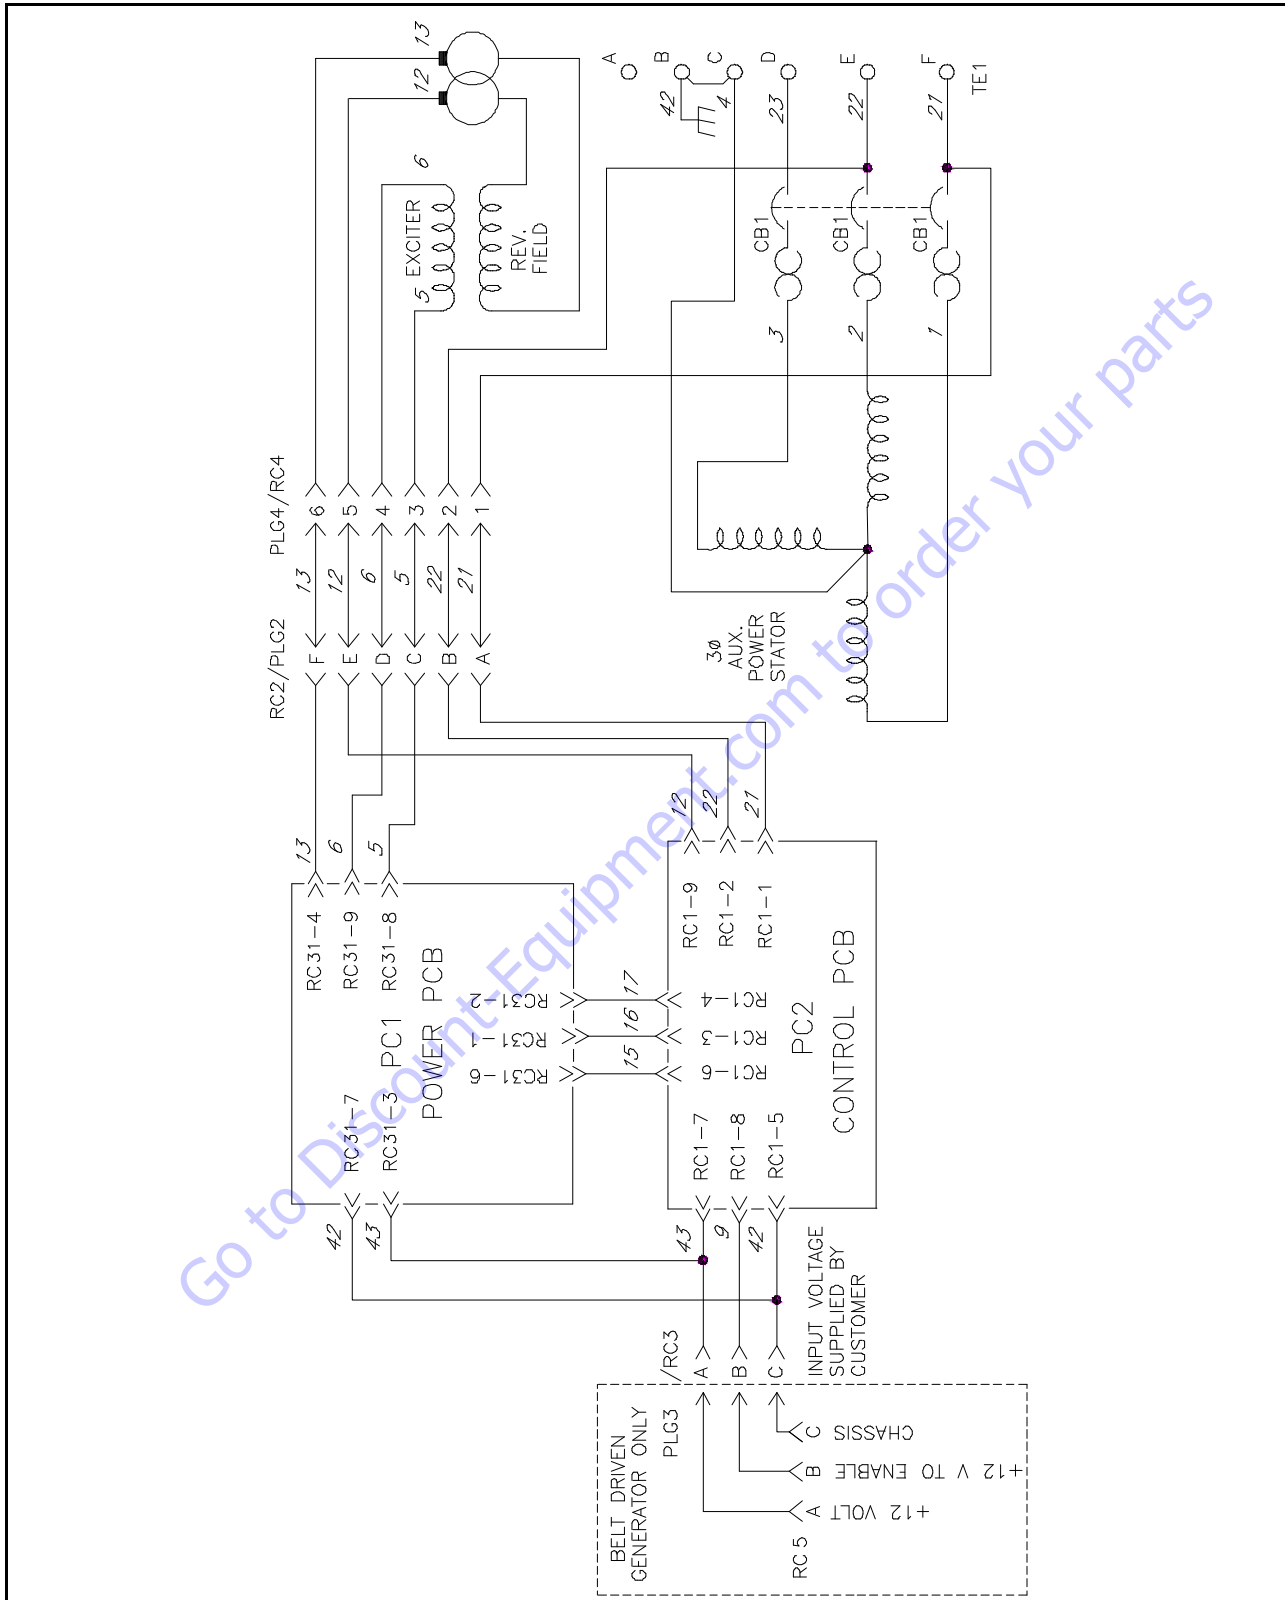


Figure 3-55. Generator Electrical Circuit Diagram

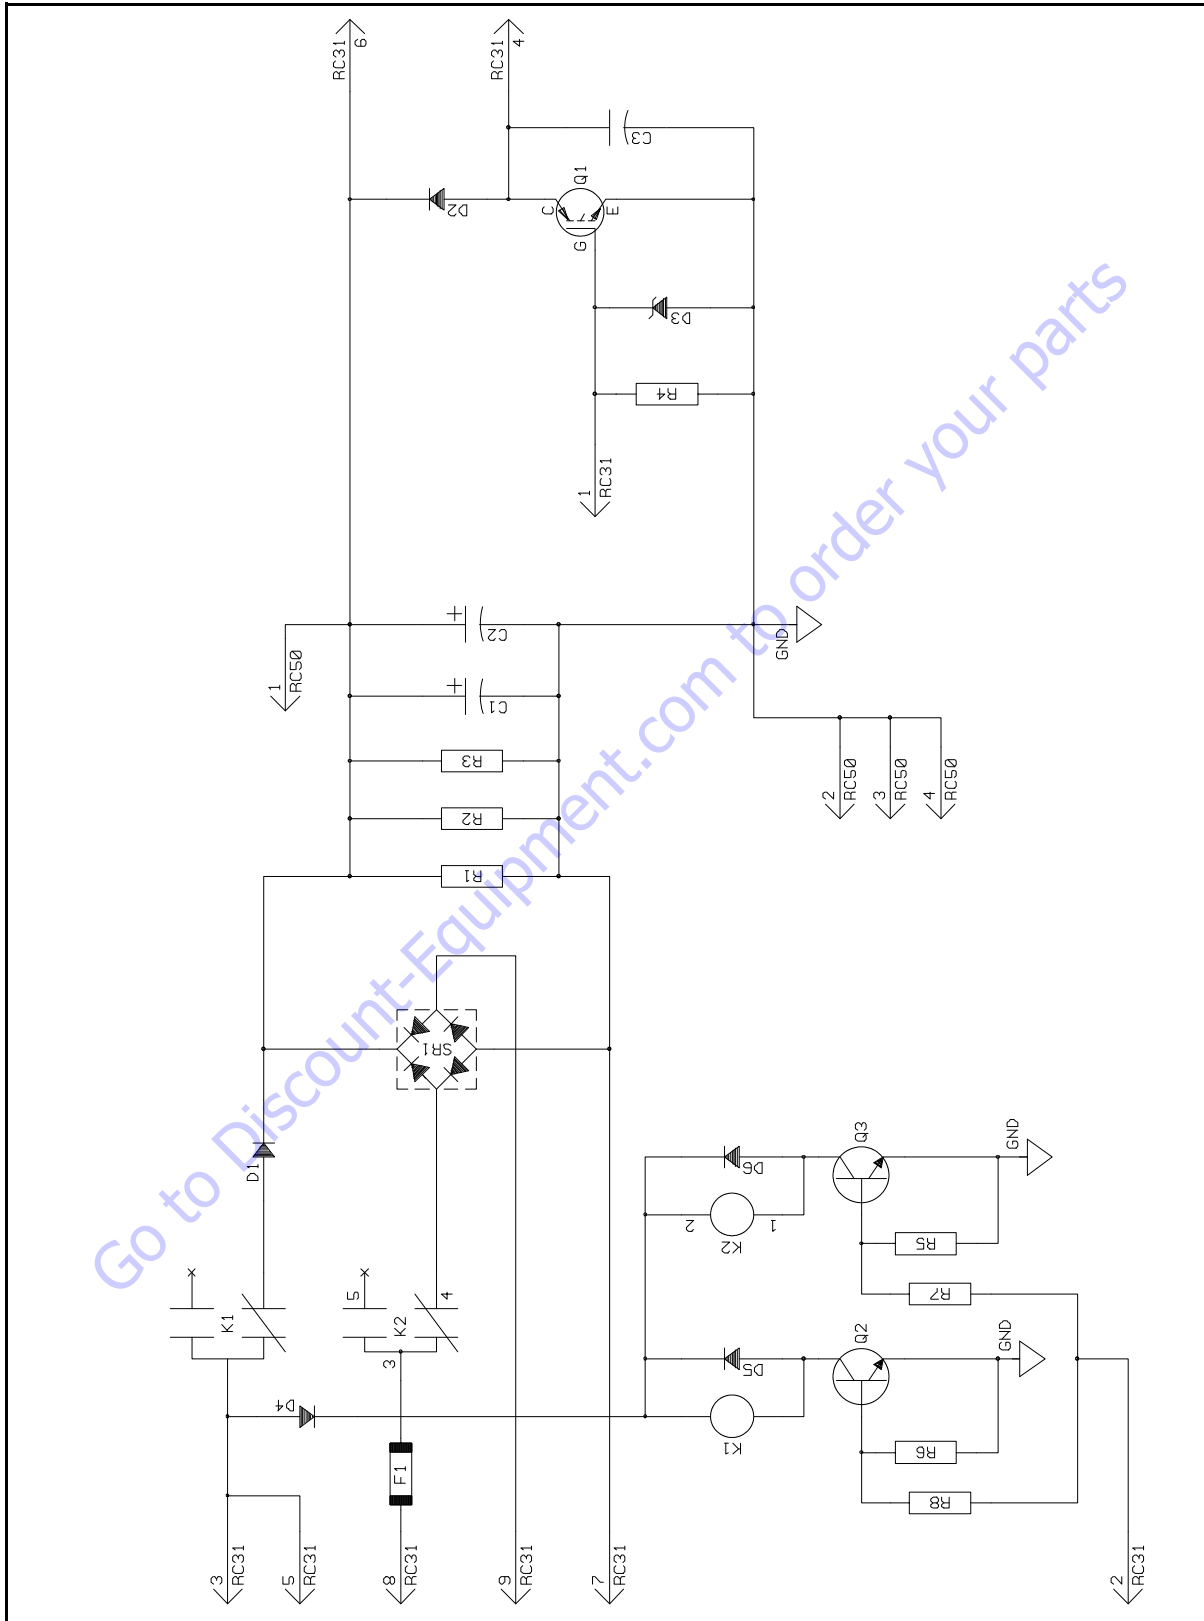


Figure 3-56. Power Board PC1 Electrical Circuit Diagram

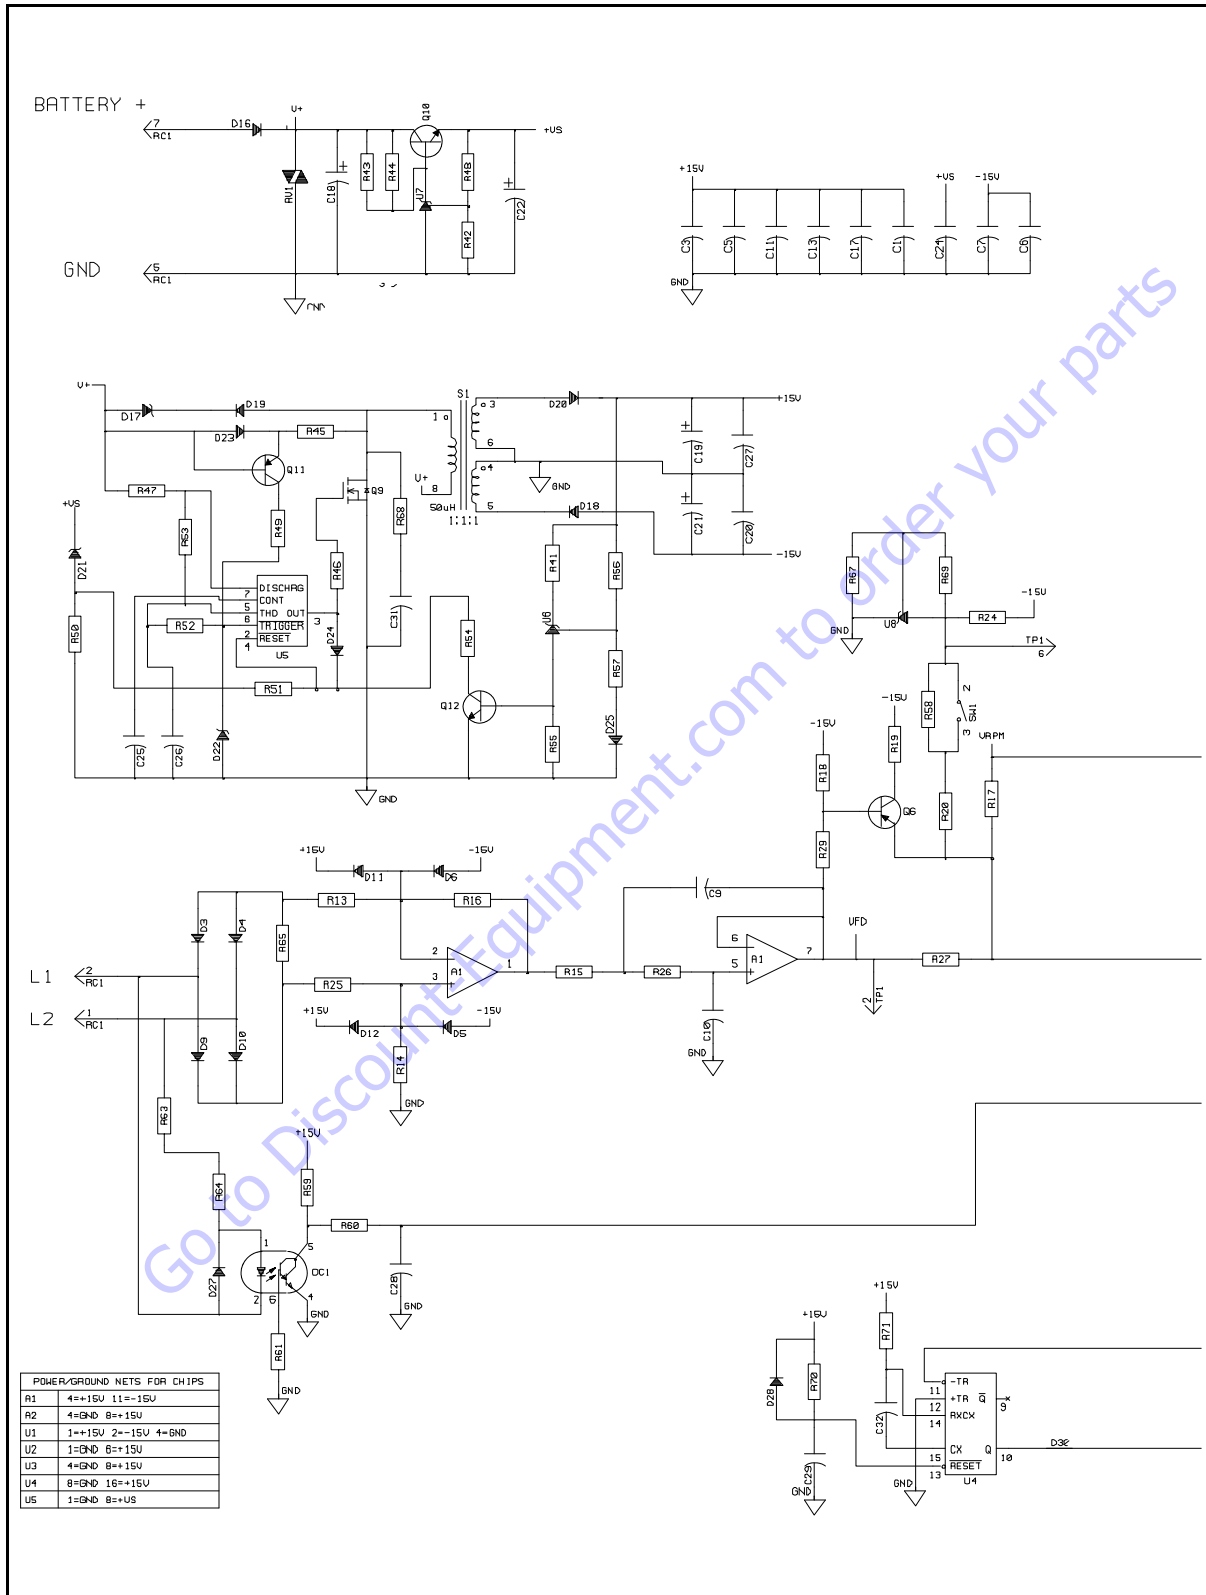


Figure 3-57. Power Board PC2 Electrical Circuit Diagram (Sheet 1 of 2)

Lead Connection List for Generator

NOTE: Apply small amount of dielectric grade, nonconductive electric grease to connectors where factory-applied grease had been present.

NOTE: Table shows physical lead connections and should be used with circuit diagram (table replaces wiring diagram).


Table 3-10. Lead Connection List for Generator

Leads	Connections
1A	STATOR TO CB1
2A	STATOR TO CB1
3A	STATOR TO CB1
4A	STATOR TO TE1 (C)
5A	STATOR TO RC4 (3)
5B	PLG2 (C) TO PLG4 (3)
5C	RC2 (C) PLG31 (8)
6A	STATOR TO RC4 (4)
6B	PLG2 (D) TO PLG4 (4)
6C	RC2 (D) PLG31 (9)
9A	RC5 (B) TO PLG3 (B) (Customer Supplied)
9B	RC3 (B) PLG1 (8)
12A	PLG2 (E) TO PLG4 (5)
12B	RC2 (E) PLG1 (9)
12C	RC4 (5) TO BRUSH
13A	PLG2 (F) TO PLG4 (6)
13B	RC2 (F) PLG31 (4)
13C	RC4 (6) TO BRUSH
15A	PLG1 (6) TO PLG31 (6)
16A	PLG1 (3) TO PLG31 (1)
17A	PLG1 (4) TO PLG31 (2)
21A	CB1 TO TE1 (F)
21B	PLG2 (A) TO PLG4 (1)
21C	PLG1 (1) TO RC2 (A)
21D	RC4 (1) TO CB1
22A	CB1 TO TE1 (E)
22B	PLG2 (B) TO PLG4 (2)
22C	PLG1 (2) TO RC2 (B)
22D	RC4 (2) TO CB1
23A	CB1 TO TE1 (D)
42A	RC5 (C) TO PLG3 (C) (Customer Supplied)
42B	RC3 (C) TO CONNECTION POINT 1
42C	PLG31 (7) TO CONNECTION POINT 1
42D	PLG1 (5) TO CONNECTION POINT 1
42F	END BELL SHROUD TO ENGINE MOUNT
42G	CHASSIS TO TE1 (B)
43A	RC5 (A) TO PLG3 (A) (Customer Supplied)
43B	RC3 (A) TO CONNECTION POINT 2
43C	PLG31 (3) TO CONNECTION POINT 2
43D	PLG1 (7) TO CONNECTION POINT 2

3.17 AUXILIARY POWER SYSTEM

The auxiliary power system is intended as a secondary means of moving the boom in the event of primary power loss. This system uses an electric motor/pump unit powered by a 12V (extended upto 24V DC) battery.


The auxiliary pump functions to provide sufficient oil flow to operate the basic machine functions should the main pump or engine fail. The auxiliary pump will operate tower boom lift, tower telescope, main boom lift, main telescope and swing. The Auxiliary Power control switch energizes the electrically operated hydraulic pump.

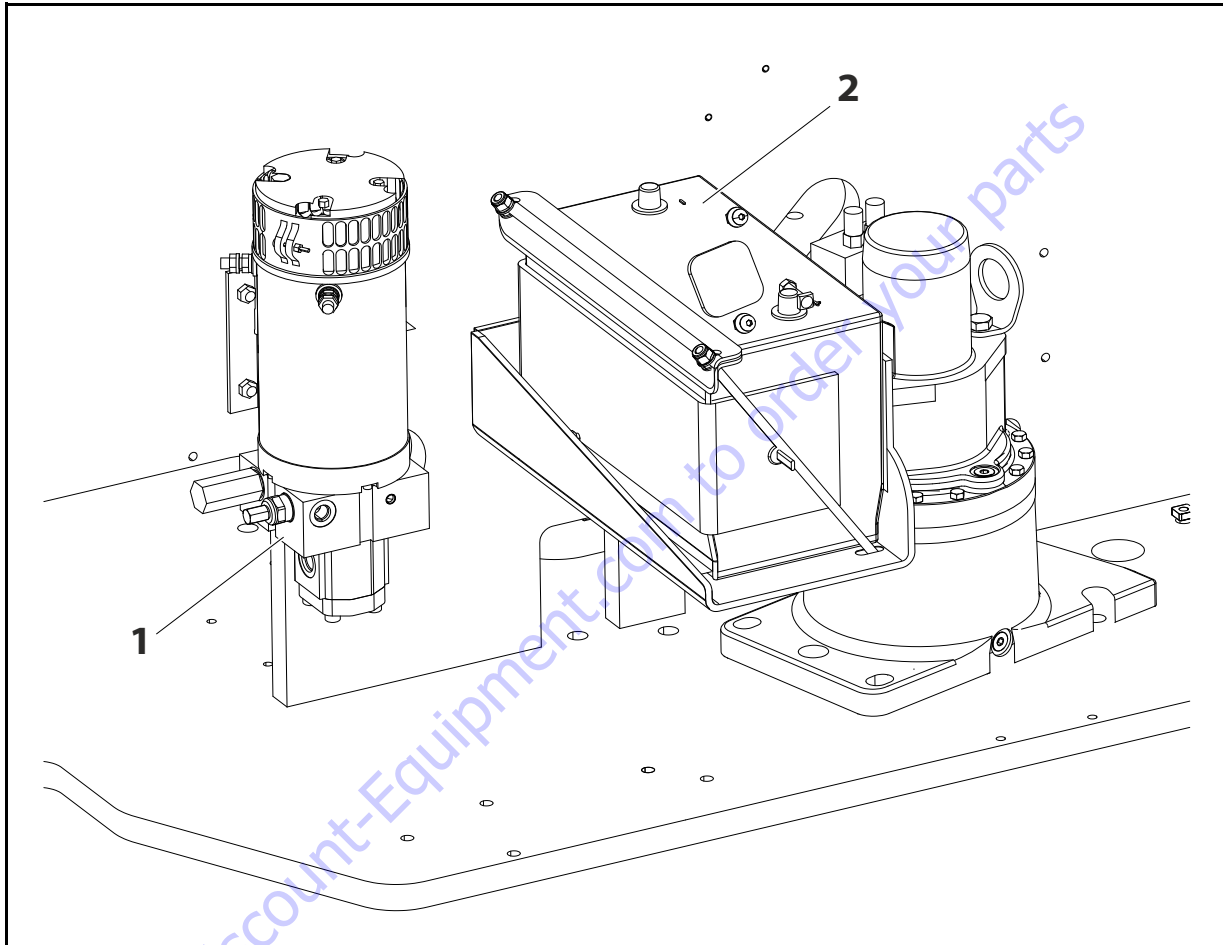

1. Auxiliary Pump
2. Battery


Figure 3-59. Auxiliary Power System

3.18 DEUTZ ENGINE

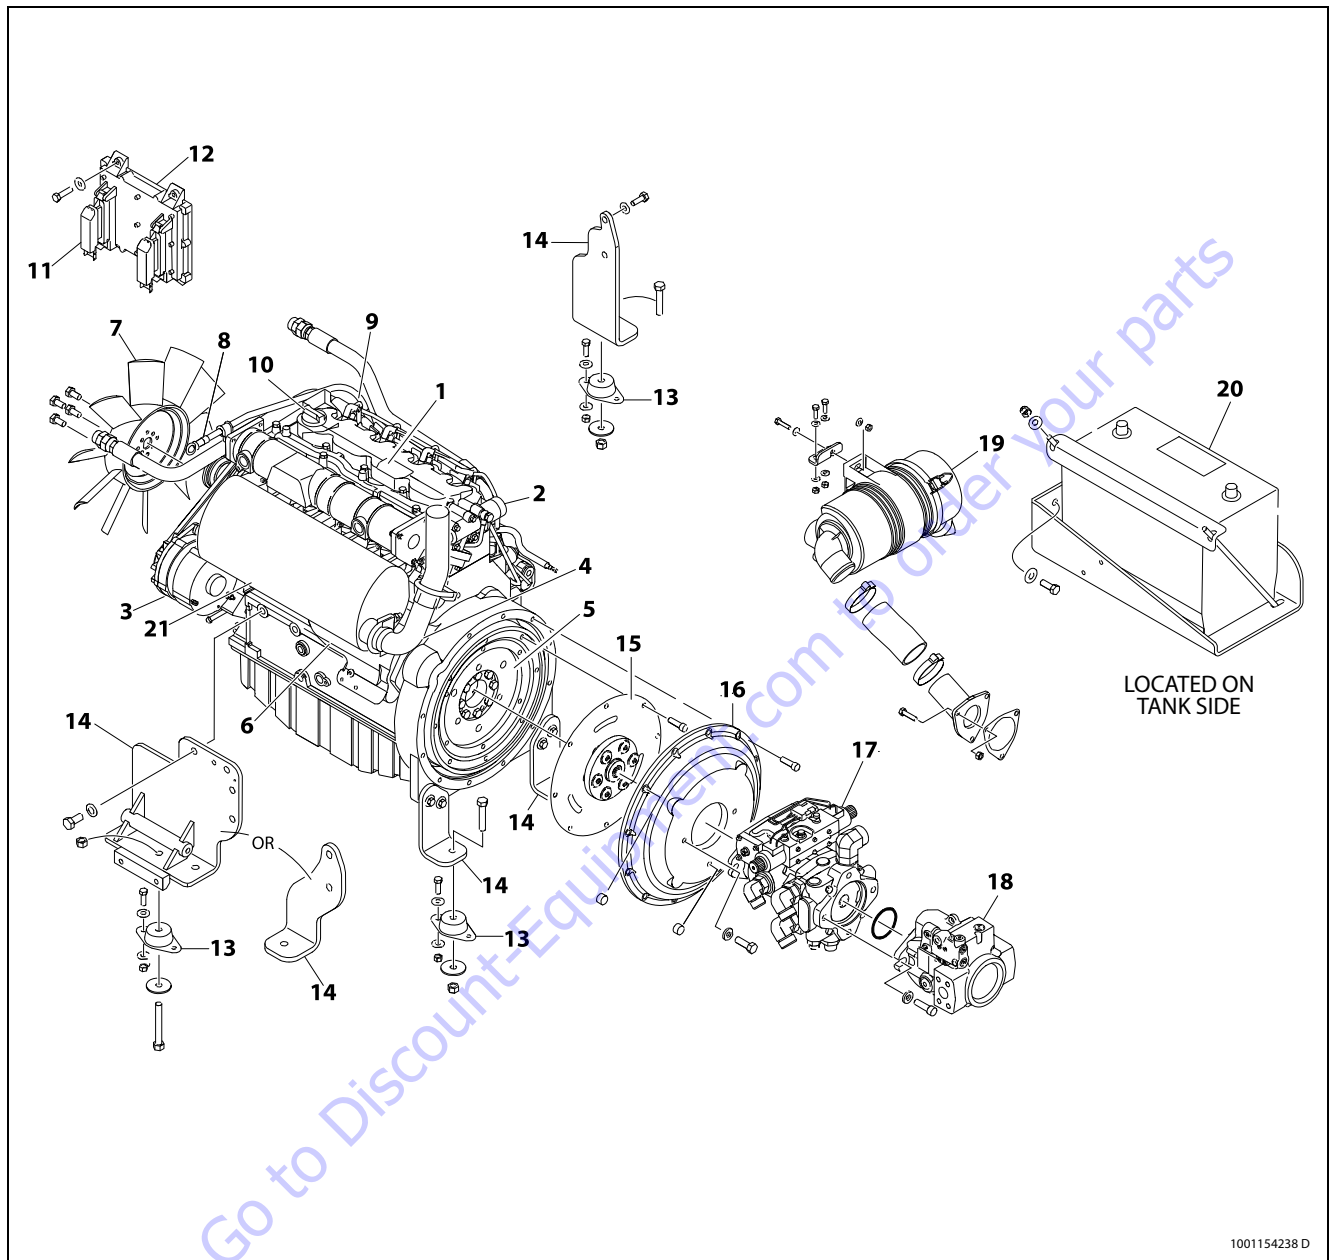

- | | | | | |
|-----------------------|--------------|--------------------|-------------------------------|--------------------------|
| 1. Deutz D2011 Engine | 6. Starter | 10. Filler cap | 14. Support Engine | 18. Variable Pump |
| 2. Thermostat | 7. Fan | 11. Engine Harness | 15. Coupling | 19. Air Cleaner Assembly |
| 3. Alternator | 8. Dipstick | 12. Control Module | 16. Adapter Pump Plate | 20. Battery |
| 4. Exhaust Pipe | 9. Glow Plug | 13. Mount Motor | 17. Hydrostatic Pump Assembly | 21. Muffer |
| 5. Flywheel | | | | |

Figure 3-60. Deutz D2011 Engine Installation - Sheet 1 of 2

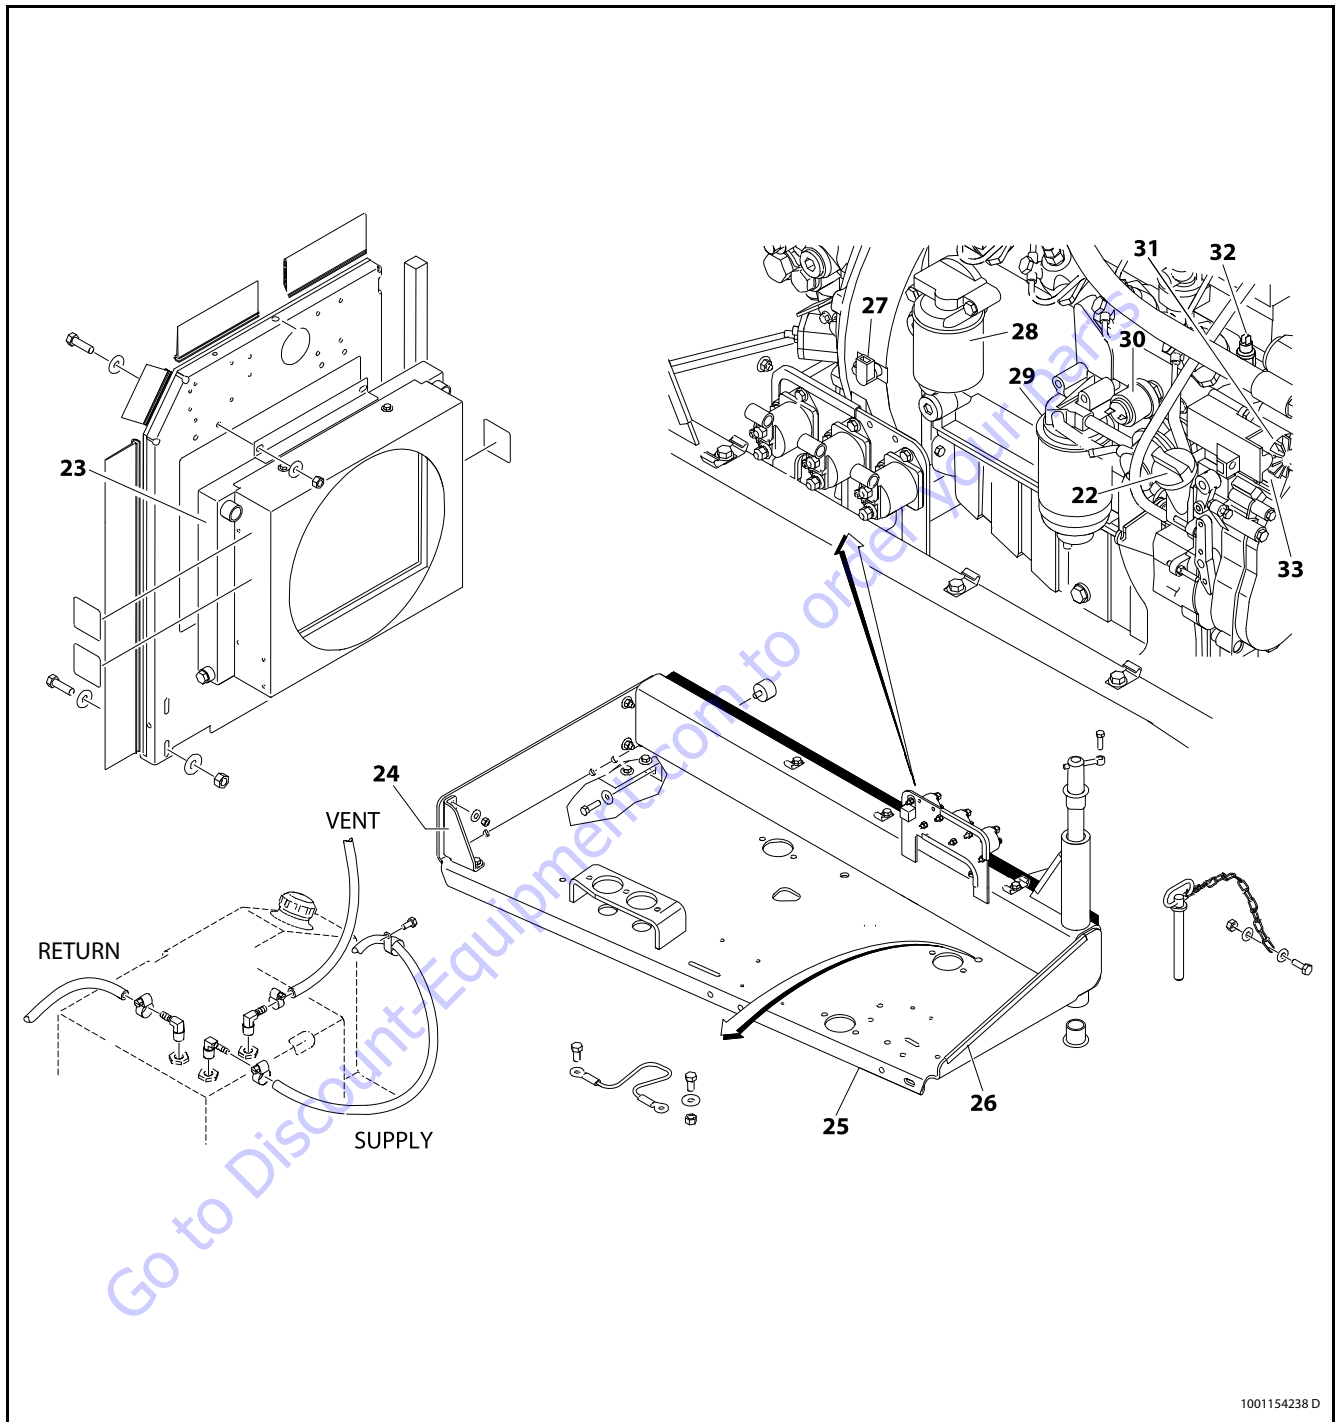

- | | | | |
|----------------|------------------|-------------------------|-----------------------------|
| 22. Filler Cap | 25. Tray Engine | 28. Oil filter | 31. Throttle Actuator |
| 23. Radiator | 26. Flex-Trim | 29. Fuel Filter | 32. Temperature Transmitter |
| 24. Gusset | 27. Speed Sensor | 30. Oil Pressure Sensor | 33. Glow Plug |

Figure 3-61. Deutz D2011 Engine Installation - Sheet 2 of 2

SECTION 3 - CHASSIS & TURNTABLE

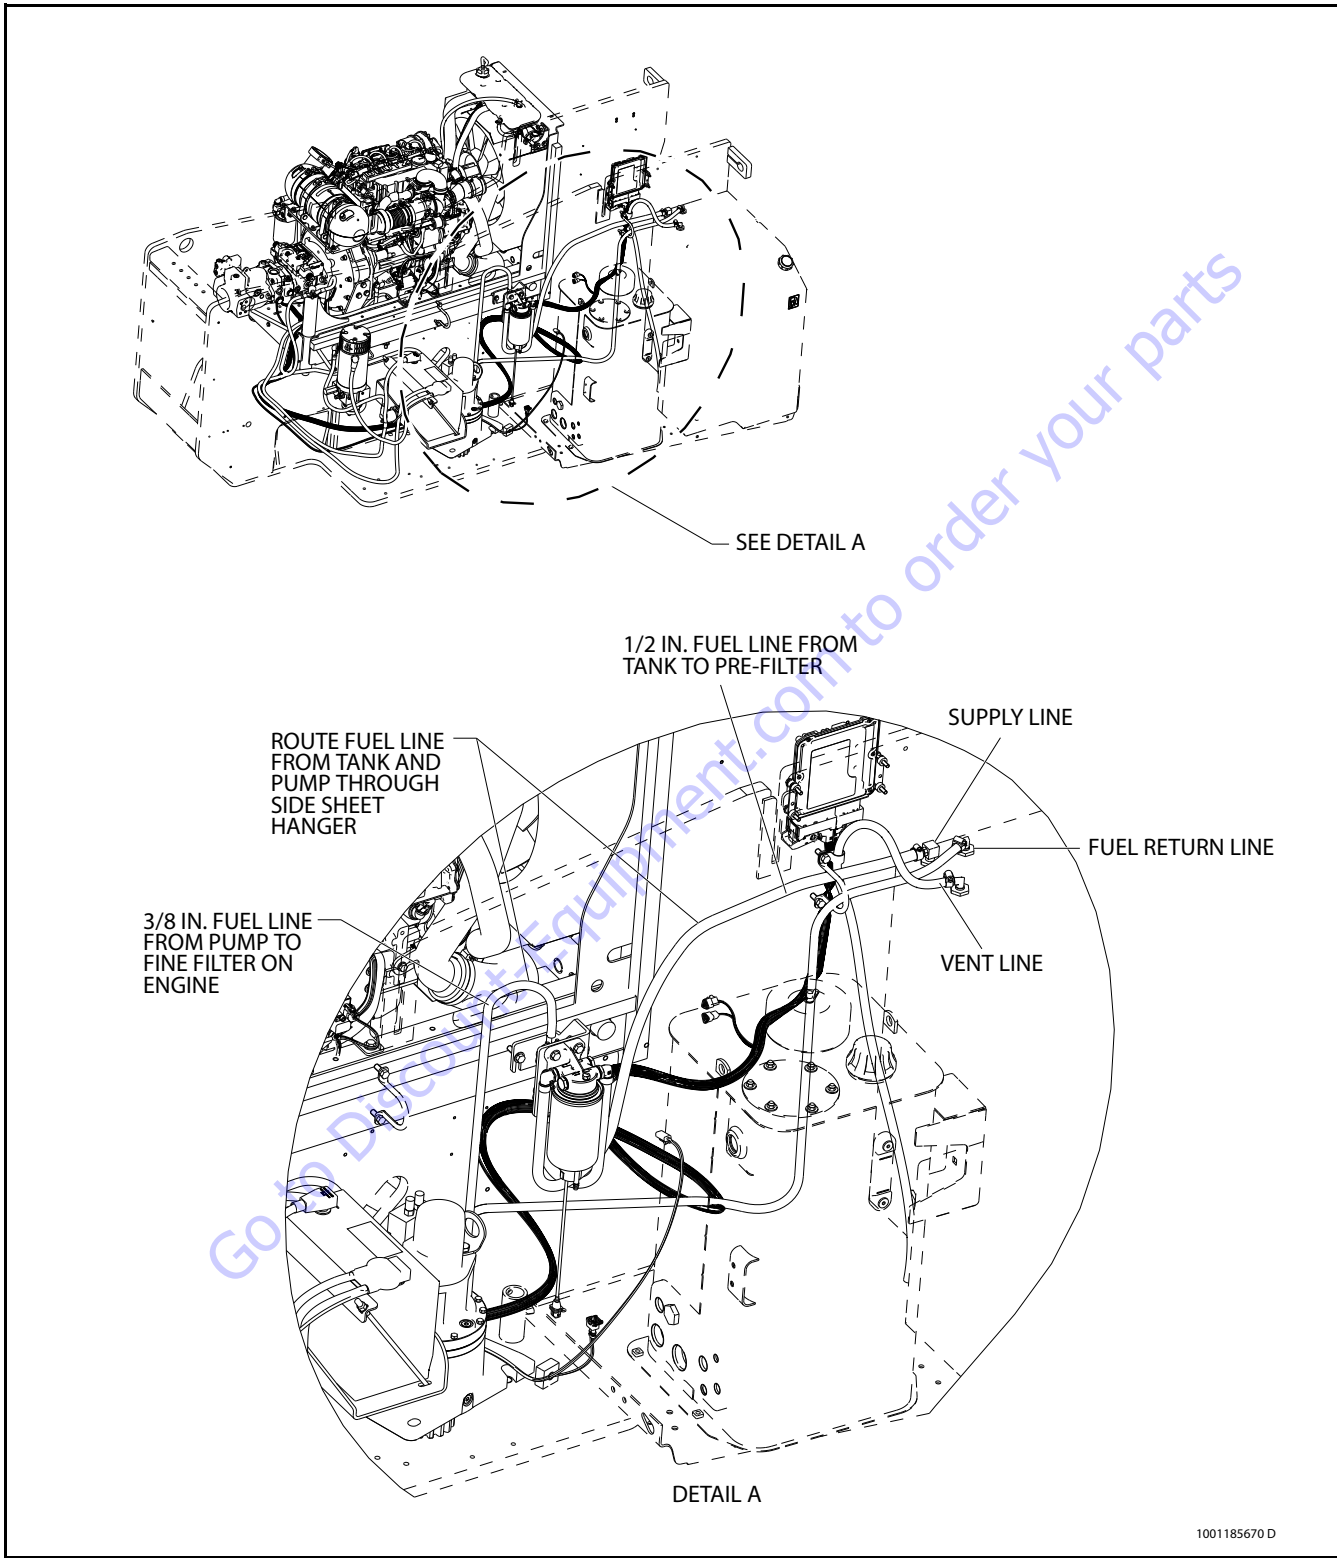


Figure 3-62. Deutz 2.9 L4 Engine Installation - Sheet 1 of 5

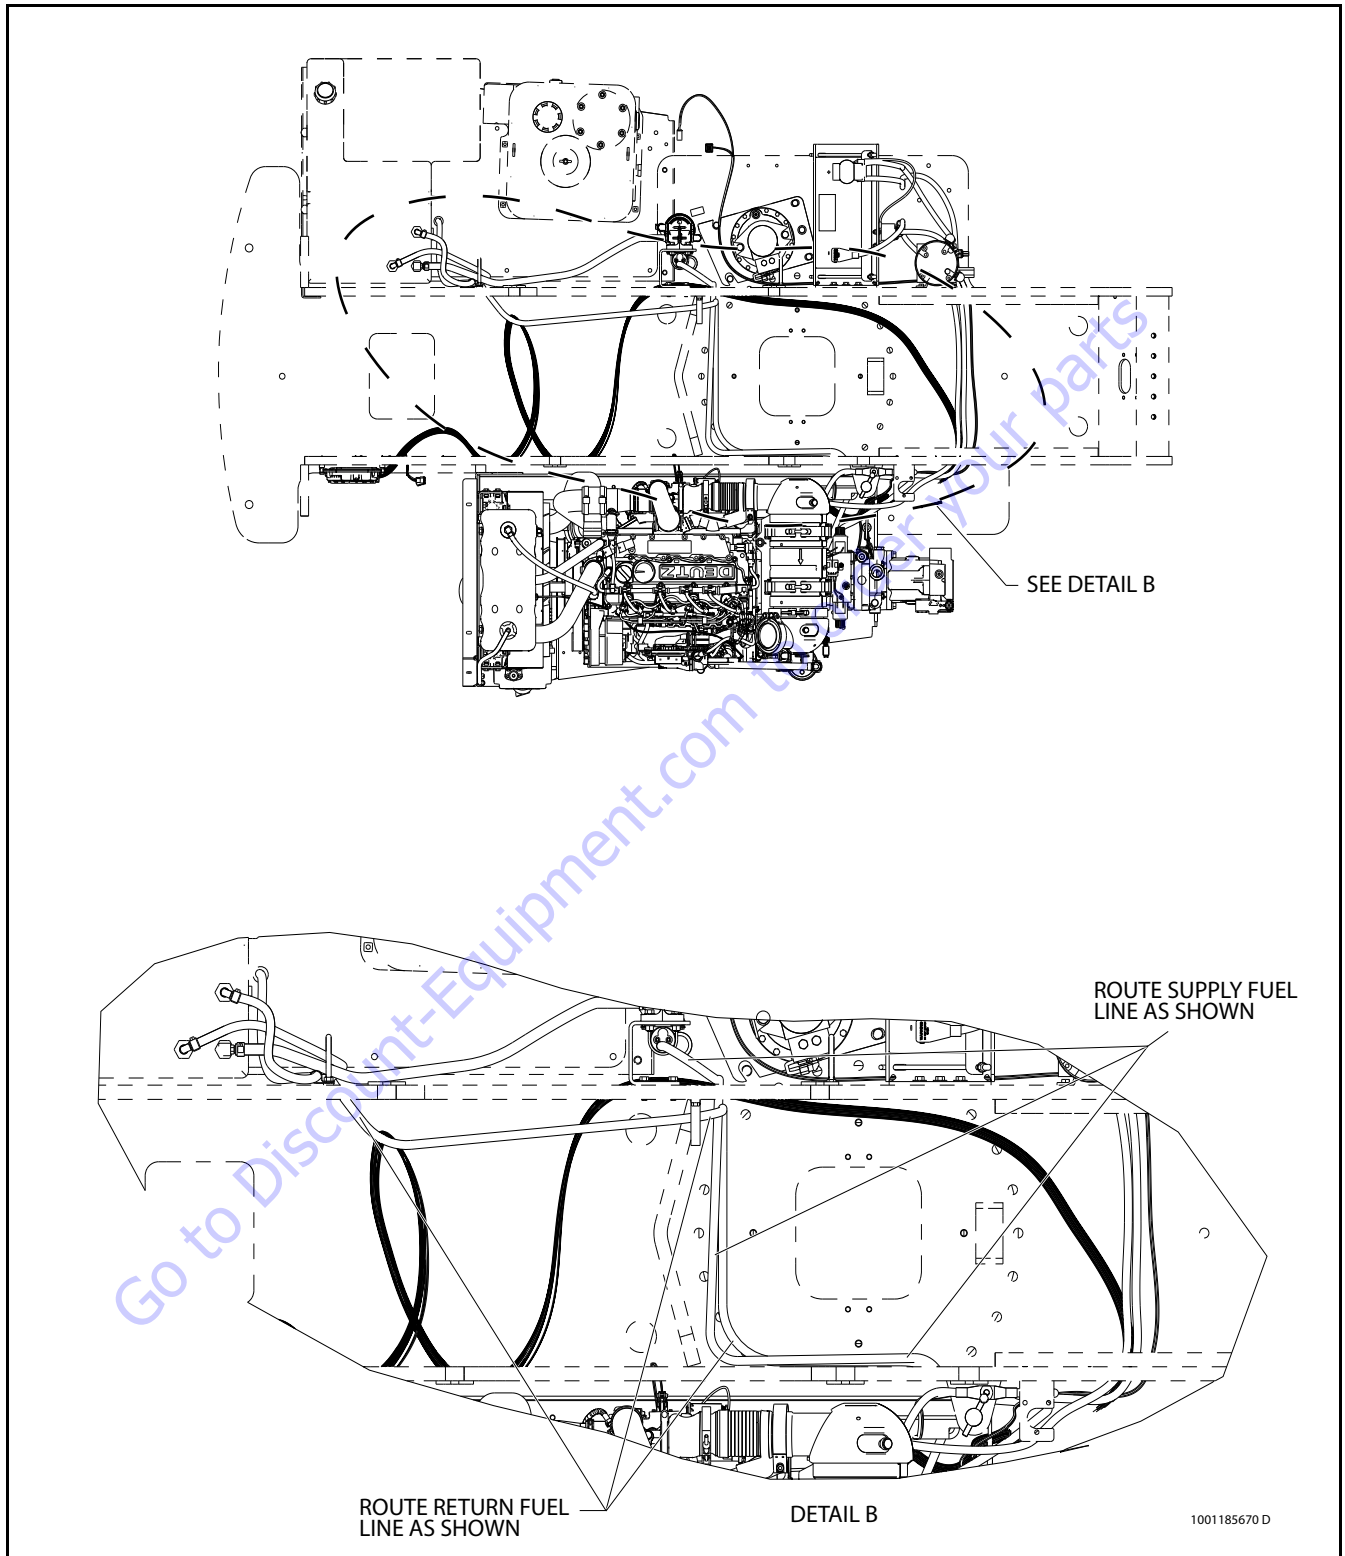


Figure 3-63. Deutz 2.9 L4 Engine Installation - Sheet 2 of 5

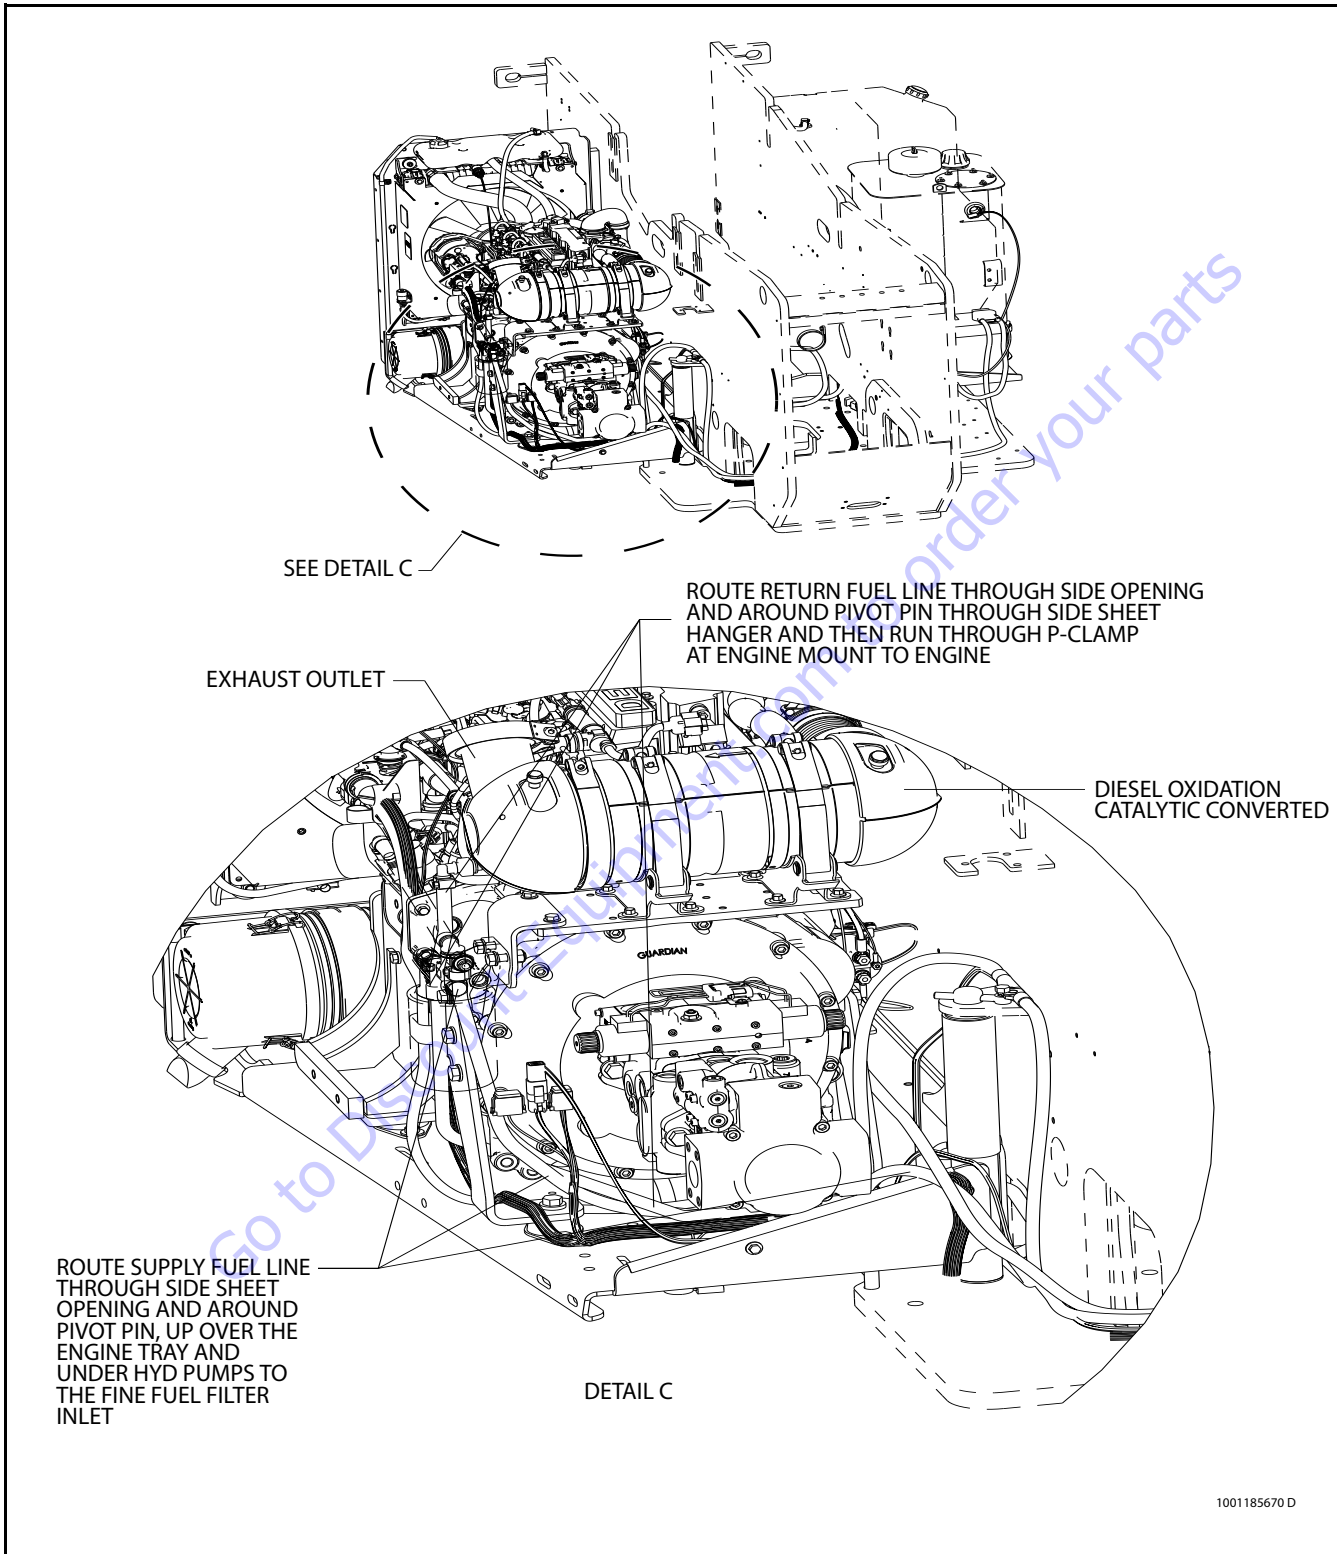


Figure 3-64. Deutz 2.9 L4 Engine Installation - Sheet 3 of 5

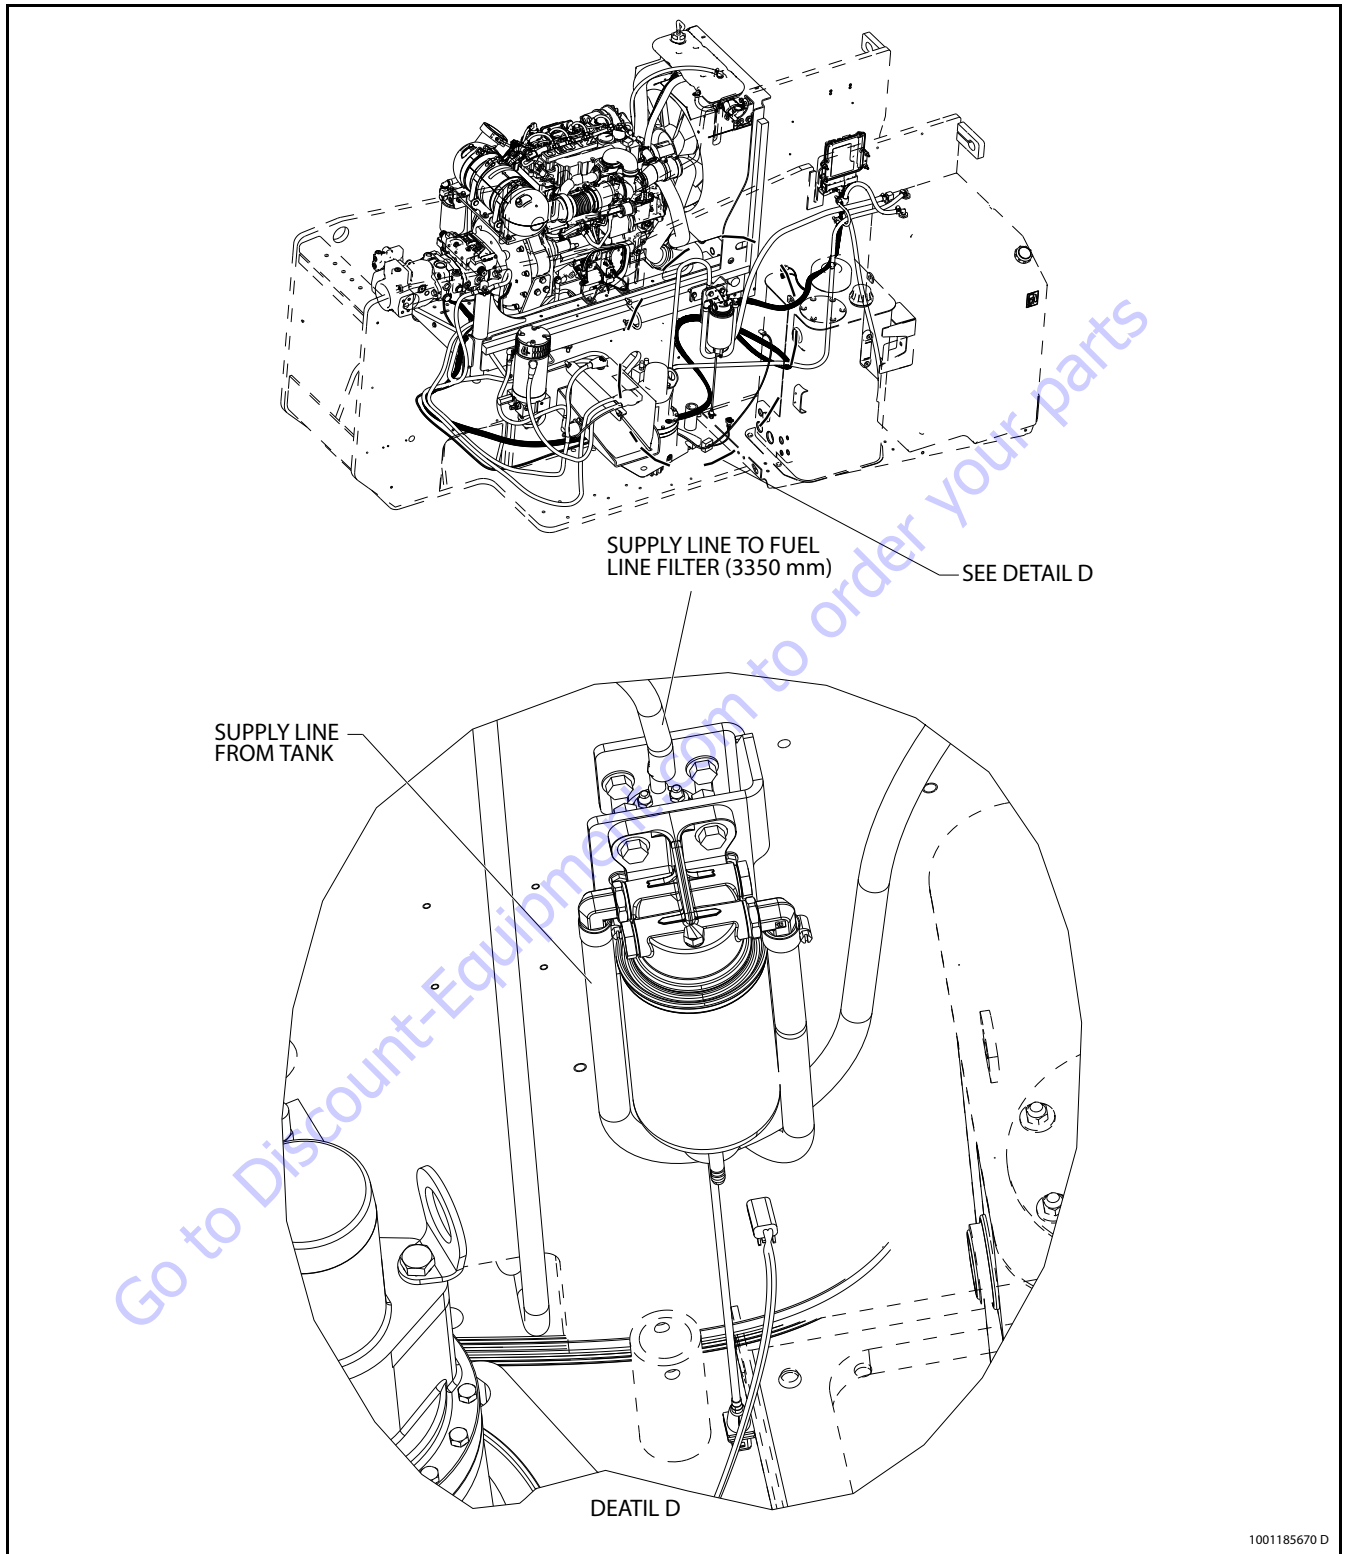


Figure 3-65. Deutz 2.9 L4 Engine Installation - Sheet 4 of 5

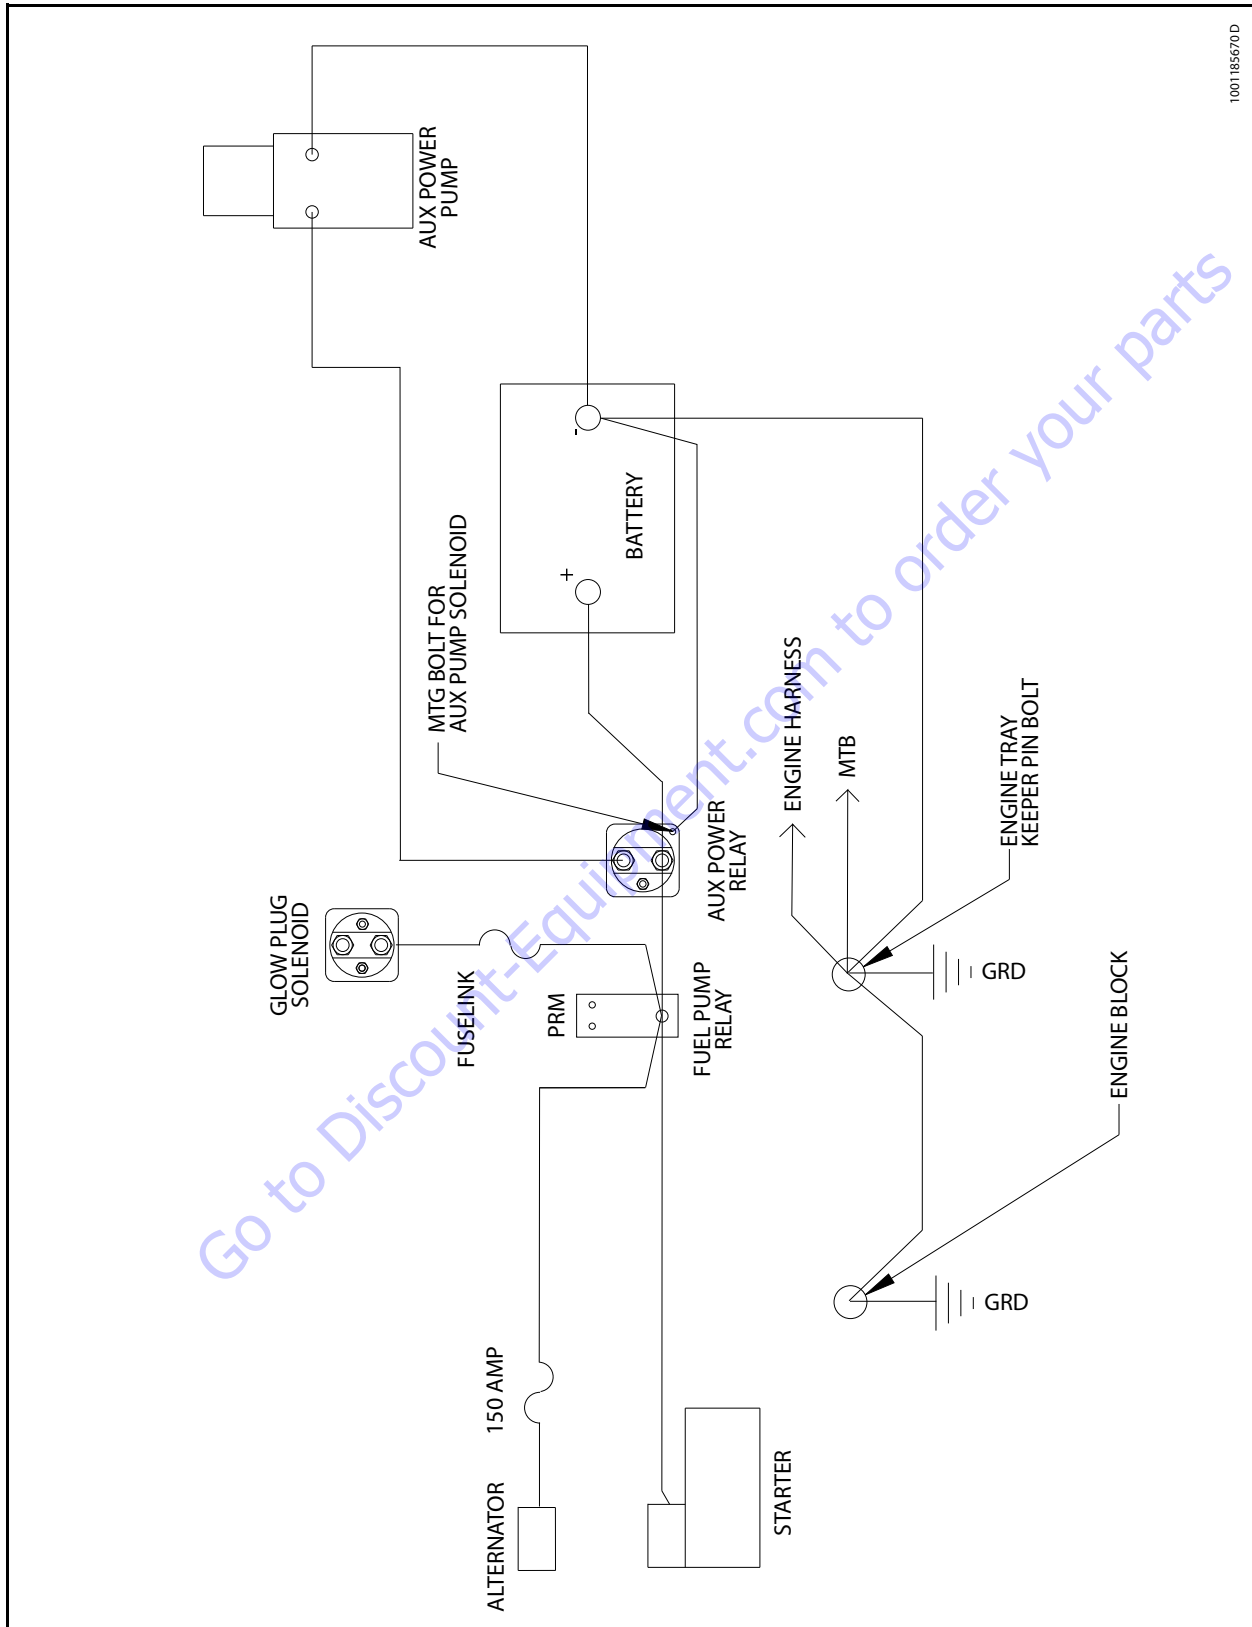


Figure 3-66. Deutz 2.9 L4 Engine Installation - Sheet 5 of 5

3.19 DEUTZ ENGINE - TD2011L04


NOTE: Refer to engine manufacturer's manual for detailed operating and maintenance instructions. Limited engine maintenance items are presented here for convenience but detailed engine maintenance items and schedule are included in the engine manufacturer's manual.

Glow Plugs

If the glow plug option is enabled in the JLG Control System, the glow plug and indicator lamp will be energized when the Power/Emergency Stop switch is pulled on if the ambient air temperature is less than 50° F (10° C) and the engine coolant temperature is less than 140° F (60° C). This determination will occur one second after the Power/Emergency Stop switch has been pulled on. The lamp and glow plugs will remain energized for the period of time specified by the setting in the JLG Control System. Engine start shall be disabled during this period. On Deutz engines, the glow plugs will continue (post glow) after the engine has started for three times the machine digit setting.

Check Oil Level

1. Switch the engine off before checking oil level.
2. Make sure the machine and engine are level.
3. Remove the oil dipstick.
4. Wipe the dipstick with non-fibrous, clean cloth.
5. Insert the dipstick to the stop and remove again. Check

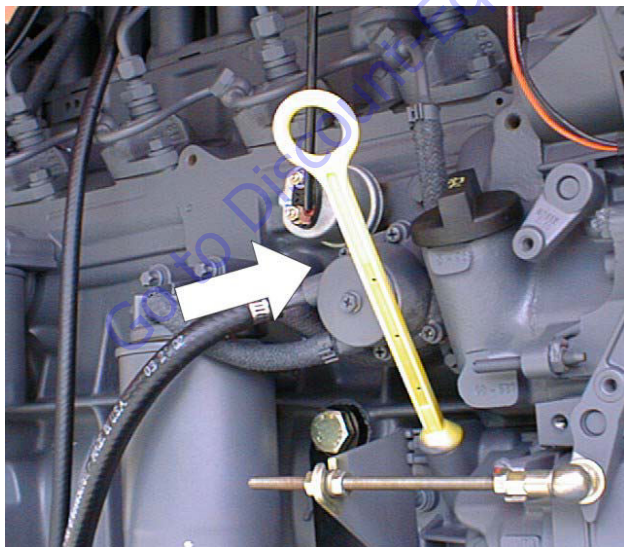

the oil level, and if necessary, top the oil level up to the MAX mark with an approved grade and type of oil as outlined in the engine manufacturer's operator's manual. Refer to Figure 3-67., Deutz Engine Dipstick.

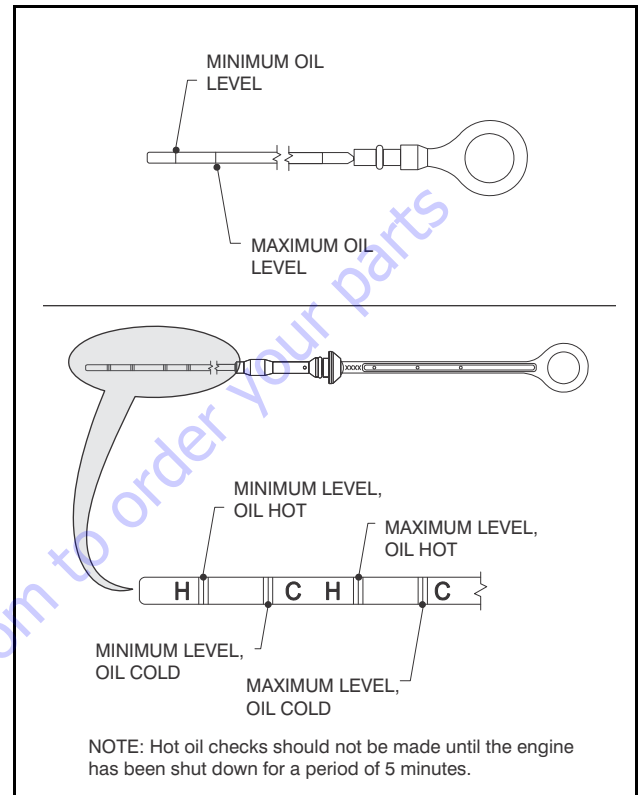


Figure 3-67. Deutz Engine Dipstick

6. Replace the dipstick making sure that it is fully seated in the dipstick tube to seal off the crankcase.

Replacing Engine Oil

1. Allow the engine to warm up. The engine oil should reach approximately 176° F (80° C).
2. Make sure the machine and engine are level.
3. Switch off the engine.
4. Place an oil tray under the engine.

CAUTION

HOT ENGINE OIL CAN CAUSE BURNS, AVOID CONTACT WITH HOT OIL WHEN DRAINING.

NOTICE

COLLECT USED OIL IN A CONTAINER SUITABLE FOR DISPOSAL OR RECYCLING. DISPOSE OF USED ENGINE OIL IN ACCORDANCE WITH ENVIRONMENTAL REGULATIONS.



5. Open the oil drain valve.
6. Drain the oil.
7. Close the oil drain valve.

8. Pour in new engine oil. Refer to Section 1 for capacity and refer to Figure 3-68., Engine Oil Viscosity for the proper grade.



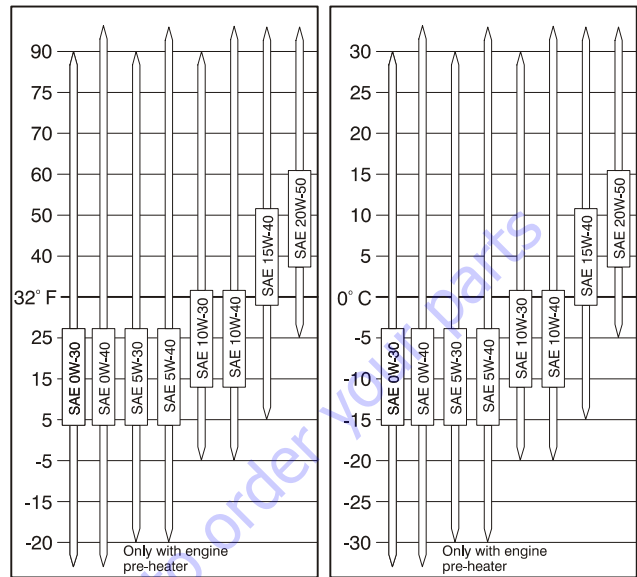


Figure 3-68. Engine Oil Viscosity


Replacing the Oil Filter

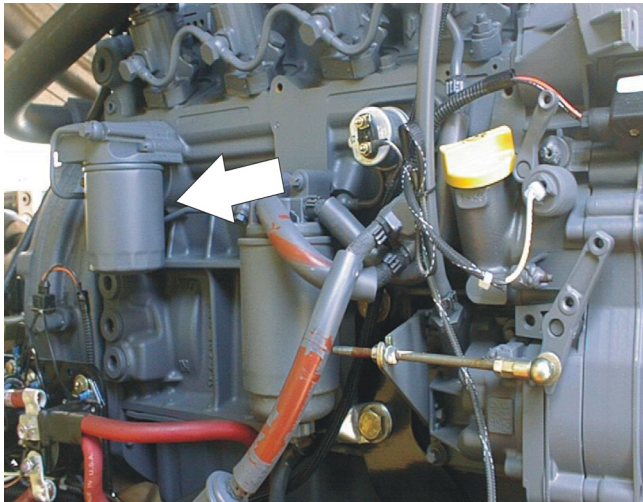


1. Wipe the area around the filter to clean any dirt from the area.
2. Using a suitable oil filter removal tool, loosen lube oil filter element and spin off.

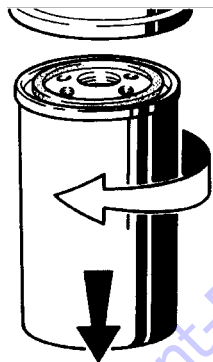

3. Catch any escaping oil.
4. Clean any dirt from filter carrier sealing surface.
5. Lightly coat new oil filter rubber gasket with clean oil.

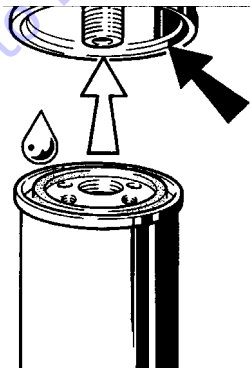


6. Manually screw in the new filter until the gasket is flush.

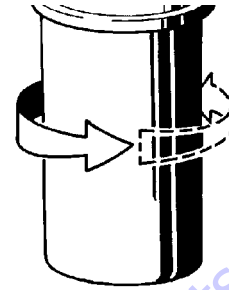

7. Hand-tighten filter another half-turn.
8. Check oil level.
9. Check oil pressure.
10. Check the oil filter cartridge and make sure there are no leaks.

Replacing the Primary Fuel Filter

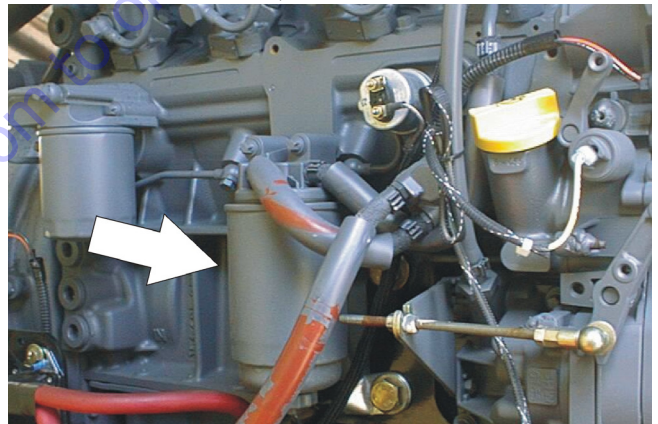

⚠ WARNING

FUEL IS FLAMMABLE AND CAN CAUSE DEATH OR SERIOUS INJURY. MAKE SURE NO OPEN FLAMES OR SPARKS ARE IN THE AREA WHEN WORKING ON FUEL SYSTEM. DO NOT SMOKE WHEN WORKING ON THE FUEL SYSTEMS.

1. Wipe the area around the filter to clean any dirt from the area.
2. Fuel supply from the fuel tank may need to be blocked to prevent fuel flow from the tank.
3. Undo the fuel filter cartridge and spin off.
4. Catch any escaping fuel.
5. Clean any dirt from the filter carrier sealing surface.
6. Apply a light film of oil or diesel fuel to the rubber gasket of the new filter cartridge.
7. Manually screw in the new filter until the gasket is flush.
8. Tighten the fuel filter cartridge with a final half-turn.
9. Check for leaks.

3.20 DEUTZ ENGINE - TD2.9L4

NOTE: Refer to engine manufacturer's manual for detailed operating and maintenance instructions. Limited engine maintenance items are presented here for convenience but detailed engine maintenance items and schedule are included in the engine manufacturer's manual.

Glow Plugs

If the glow plug option is enabled in the JLG Control System, the glow plug and indicator lamp will be energized when the Power/Emergency Stop switch is pulled on if the ambient air temperature is less than 50° F (10° C) and the engine coolant temperature is less than 140° F (60° C). This determination will occur one second after the Power/Emergency Stop switch has been pulled on. The lamp and glow plugs will remain energized for the period of time specified by the setting in the JLG Control System. Engine start shall be disabled during this period. On Deutz engines, the glow plugs will continue (post glow) after the engine has started for three times the machine digit setting.

Check Oil Level

1. Make sure machine and engine are level and switch engine OFF before checking oil level.
2. Remove oil dipstick and wipe with clean cloth.
3. Insert dipstick to the stop and remove again.
4. Check oil level. Top oil level as shown in figure below with an approved grade and type of oil outlined in engine manufacturer's operator's manual.

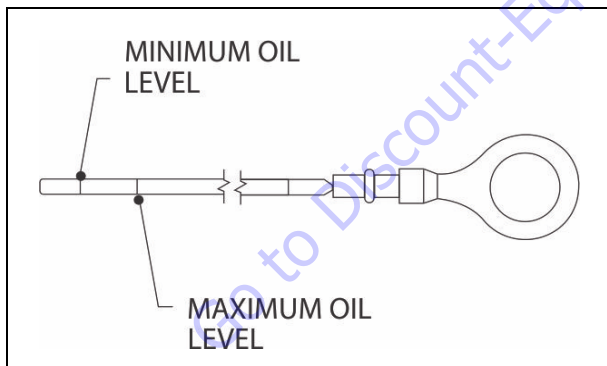


Figure 3-69. Deutz Engine Dipstick

5. Replace dipstick until fully seated.

Replacing Engine Oil

1. Allow engine to warm up. Engine oil should reach approximately 176° F (80° C).
2. Make sure machine and engine are level.
3. Switch off engine.
4. Place oil tray under engine.

CAUTION

HOT ENGINE OIL CAN CAUSE BURNS. AVOID CONTACT WITH HOT OIL WHEN DRAINING.

NOTICE

COLLECT USED OIL IN A CONTAINER SUITABLE FOR DISPOSAL OR RECYCLING. DISPOSE OF USED ENGINE OIL IN ACCORDANCE WITH ENVIRONMENTAL REGULATIONS.

5. Open oil drain valve and drain oil.
6. Close oil drain valve.
7. Pour in new engine oil. Refer to Section 1 for capacity and Figure 3-70., Engine Oil Viscosity.

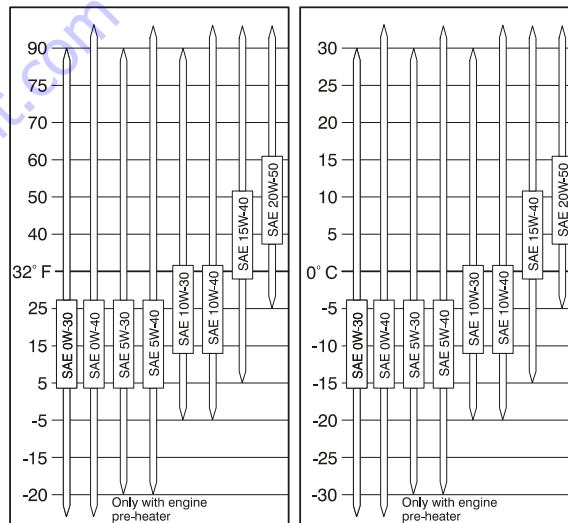



Figure 3-70. Engine Oil Viscosity

Replacing the Oil Filter




Figure 3-71. Location of the Oil Filter

1. Wipe area around filter to clean any dirt from area.
2. Using a suitable oil filter removal tool, loosen lube oil filter element and spin off.

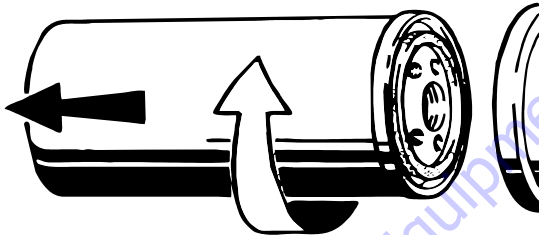

3. Catch any escaping oil.
4. Clean any dirt from filter carrier sealing surface.
5. Lightly coat new oil filter rubber gasket with clean oil.
6. Screw in new filter by hand until gasket is flush.
7. Hand-tighten filter another half-turn.

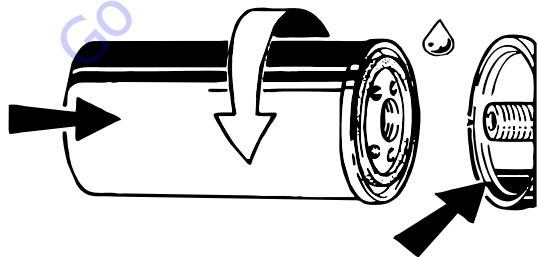

8. Check oil level.
9. Check oil pressure.
10. Check oil filter cartridge for leaks.

Replacing the Primary Fuel Filters

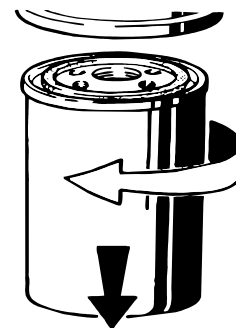


Figure 3-72. Location of the Primary Fuel Filter

⚠ WARNING


FUEL IS FLAMMABLE AND CAN CAUSE DEATH OR SERIOUS INJURY. MAKE SURE NO OPEN FLAMES OR SPARKS ARE IN THE AREA WHEN WORKING ON FUEL SYSTEM. DO NOT SMOKE WHEN WORKING ON THE FUEL SYSTEMS.

1. Wipe area around filter to clean any dirt from area.
2. Fuel supply from the fuel tank may need to be blocked to prevent flow from the fuel tank.
3. Remove fuel filter cartridge.
4. Catch any escaping fuel.



5. Clean dirt from filter carrier sealing surface.
6. Apply light film of oil or diesel fuel to rubber gasket of new filter cartridge.

7. Screw in new filter by hand until gasket is flush. Hand-tighten filter another 3/4 turn.

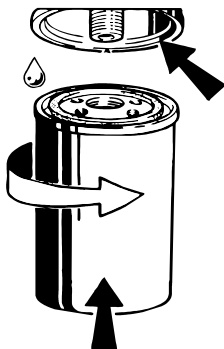

8. Check for leaks.

3.21 DUAL FUEL SYSTEM

The dual fuel system enables the standard gasoline engine to run on either gasoline or LP gas. The system includes pressurized cylinders mounted on the frame, and the valves and switches needed to switch the fuel supply from gasoline to LP gas or from LP gas to gasoline.

A two position, Fuel Select switch at the platform control station supplies electrical power to open the gasoline shut-off solenoid and close the LP gas shut off solenoid when positioned to the Gasoline position. This switch also allows electrical power to open the LP gas shut-off solenoid and close the gasoline shut-off solenoid when positioned to the LP position.

⚠ CAUTION

IT IS POSSIBLE TO SWITCH FROM ONE FUEL SOURCE TO THE OTHER WITHOUT ALLOWING THE ENGINE TO STOP. EXTREME CARE MUST BE TAKEN AND THE FOLLOWING INSTRUCTIONS MUST BE FOLLOWED.

Changing from Gasoline to LP Gas

1. Start the engine from the ground control station.
2. Open the hand valve on the LP gas supply tank by turning counterclockwise.

⚠ CAUTION

BE SURE ALL GASOLINE IS EXHAUSTED BEFORE SWITCHING TO LP GAS.

3. While the engine is operating, place the two position LPG/Gasoline switch at the platform control station to the LP position. Allow the engine to operate without load until the engine regains smoothness.

Changing from LP Gas to Gasoline

1. With engine operating on LP under a no load condition, throw the LPG/Gasoline switch at the platform control station to the "Gasoline" position. Allow the engine to operate with no load until the engine regains smoothness.
2. Close hand valve on LP gas supply tank by turning clockwise.

3.22 DEUTZ EMR 2

The EMR2 consists of the sensors, the control unit and the actuator. Engine-side controls as well as the JLG Control System are connected by means of separate cable harnesses to the EMR control unit.

The sensors attached to the engine provide the electronics in the control unit with all the relevant physical parameters. In accordance with the information of the current condition of the engine and the preconditions (throttle position etc.), the EMR2 controls an actuator that operates the control rod of the injection pump and thus doses the fuel quantity in accordance with the performance requirements.

The exact position of the regulating rod is reported back and, if necessary, is corrected, by means of the control rod travel sensor, situated together with the rotation magnets in a housing of the actuator.

The EMR2 is equipped with safety devices and measures in the hardware and software in order to ensure emergency running (Limp home) functions.

In order to switch the engine off, the EMR2 is switched in a de-energized fashion over the ignition switch. A strong spring in the actuator presses the control rod in the de-energized condition into the zero position. As a redundancy measure, an additional solenoid serves for switching off and this, independently of the actuator, also moves the control rod in the de-energized condition into the zero position.

After the programming, that is carried out over the ISO9141 interface, the EMR2 possesses a motor-specific data set and this is then fixedly assigned to the engine. Included in this are the various application cases as well as the customer's wishes regarding a particular scope of function.

Each EMR2 module is matched by serial number to the engine. Modules cannot be swapped between engines.

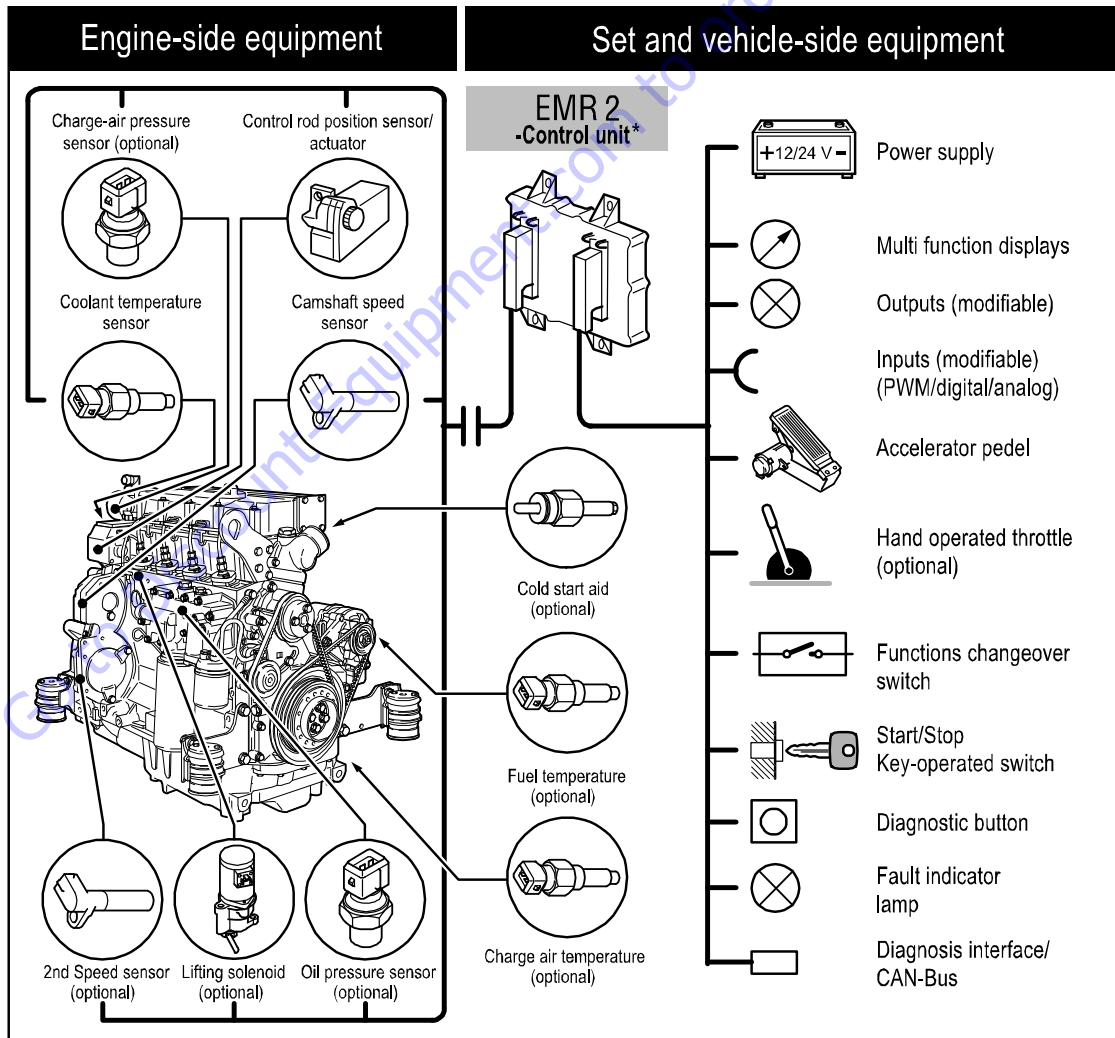


Figure 3-73. EMR 2 Engine Side Equipment

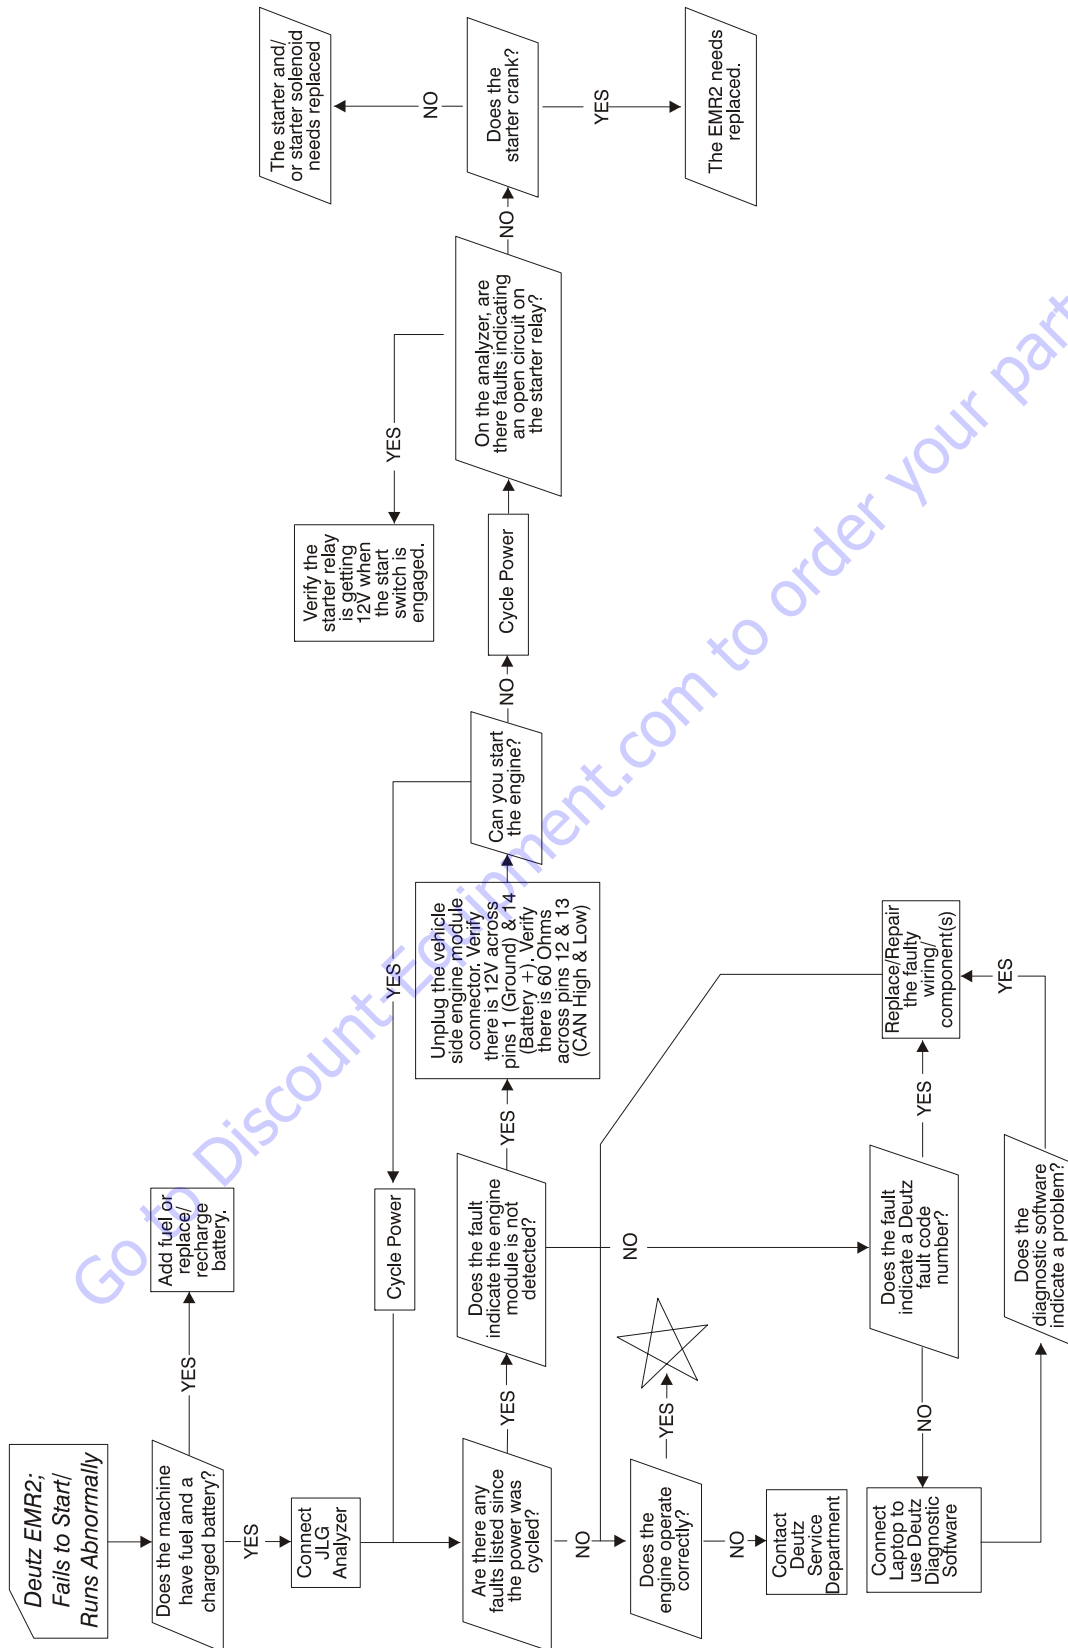


Figure 3-74. Deutz EMR 2 Troubleshooting Flow Chart


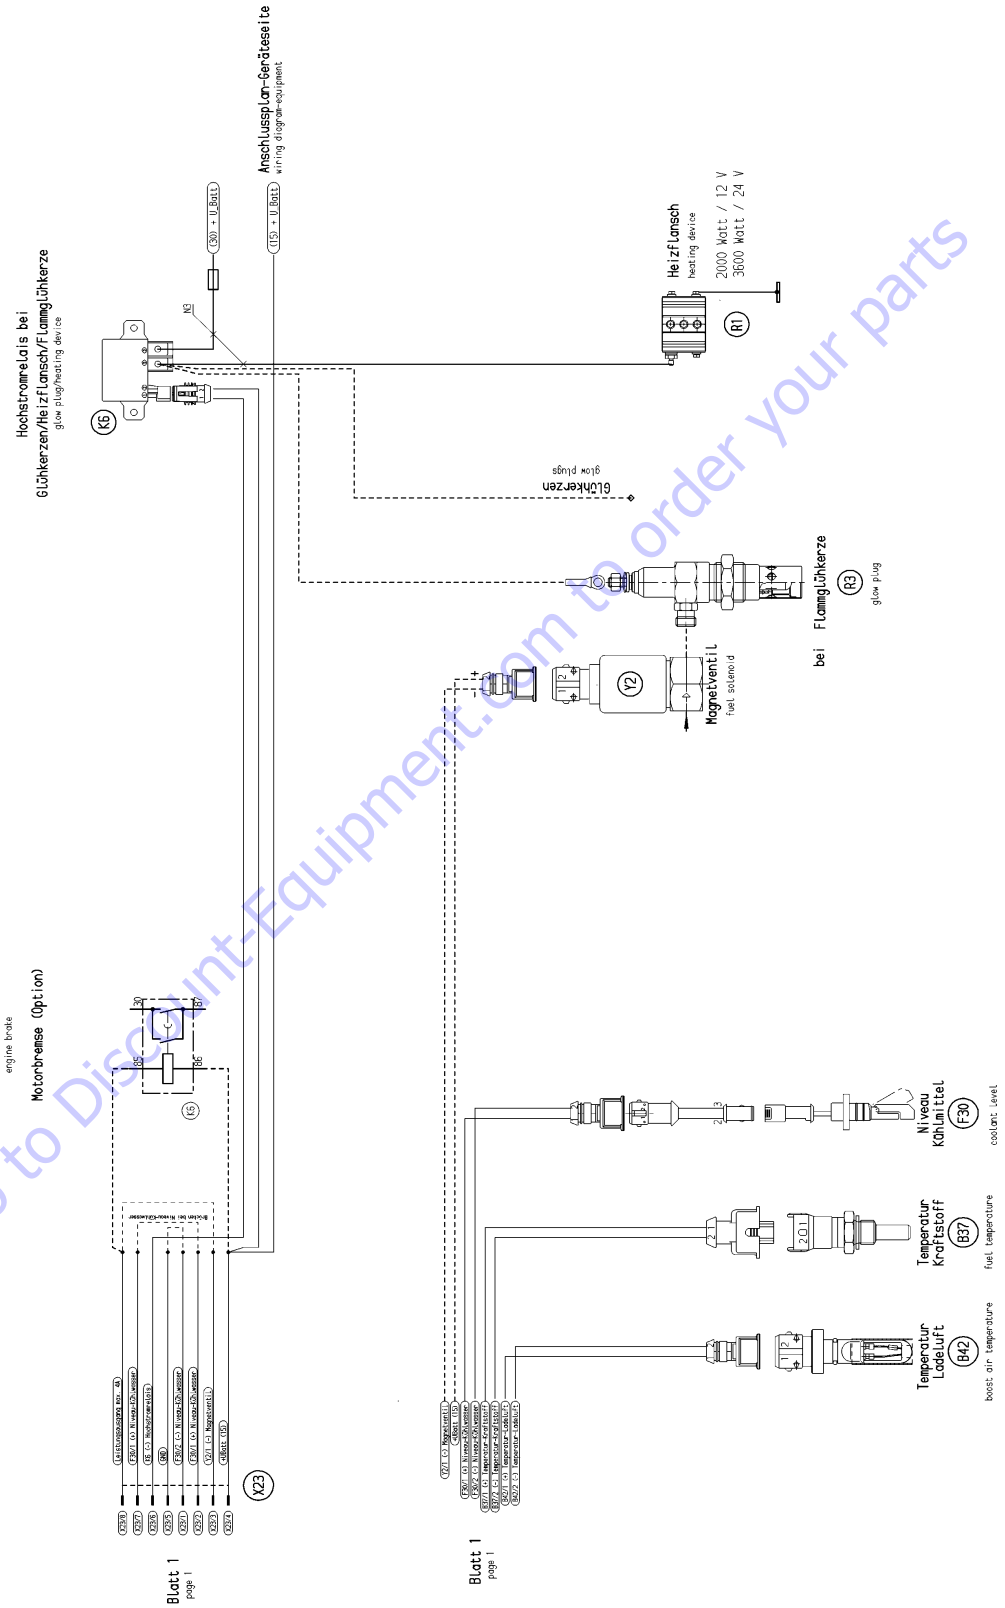


Figure 3-77. Deutz EMR 2 Engine Side Connection Diagram - Sheet 2 of 2

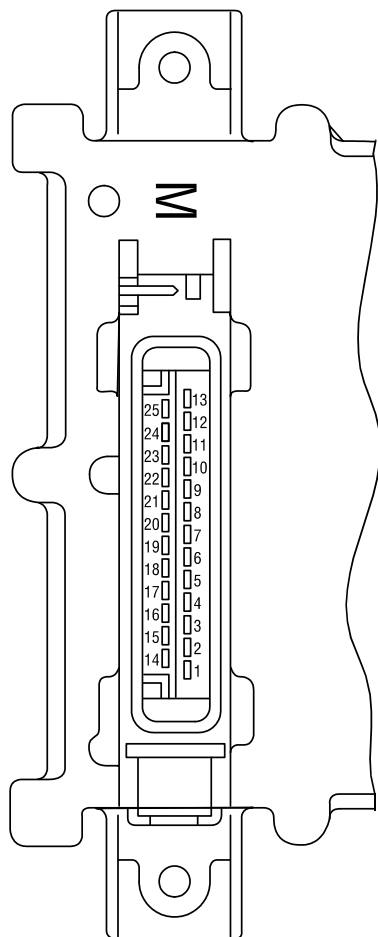


Pin No.	Designation	Description
1	Reserve	Reserve
2	Output: digital 3	Digital output for solenoid ¹⁾
3	Output: digital 4	For heating flange (optional)/ glow plug (optional)
4	Input (optional) Temp 1	Fuel temperature ²⁾
5	Input (optional) Temp 2	Charge air temperature
6	Input (optional) DigIn 5	Coolant level / oil level
7	Output: PWM2/digital 6	
8	GND	Reference potential for analog signal at pin 9
9	Input: analog 7	Analog input for Coolant temperature sensor (NTC)
10	GND	Reference potential for analog signal at pin 11
11	Multi-function input: speed 2/DigIn 2	Digital input second engine speed (crankshaft) (optional) and speed signal (optional)
12	GND	Reference potential for analog signal at pin 13
13	Input: speed 1	Digital input first engine speed (camshaft)
14	STG -	PWM output, signal for actuator coil
15	STG +	PWM output, signal for actuator coil
16	Screen	Screening regulating rod travel sensor (for lines 17, 18, 19)
17	RF -	General connection for reference and measuring coil
18	RF REF	Analog input, reference signal of the reference coil
19	RF MESS	Analog input, measuring signal of the measuring coil
20	GND	Reference potential for signal at pin 21
21	Input: analog 4/digital 9	Analog input 4 (sensor signal oil pressure sensor) or digital input 9
22	+5 V REF	+5 V Reference voltage for signal at pin 21 (max. 15 mA)
23	GND	Reference potential for signal at pin 24
24	Input: analog 2/digital 7	Analog input 2 (sensor signal charge air) or digital input 7
25	+5 V LDA	+5 V Reference potential for signal at pin 24 (max. 15 mA)

1) For continuous power: < 4 A

2) Corresponds to special function "fuel temperature compensation at the EMR (0211 2571)

Figure 3-78. EMR 2 Engine Plug Pin Identification

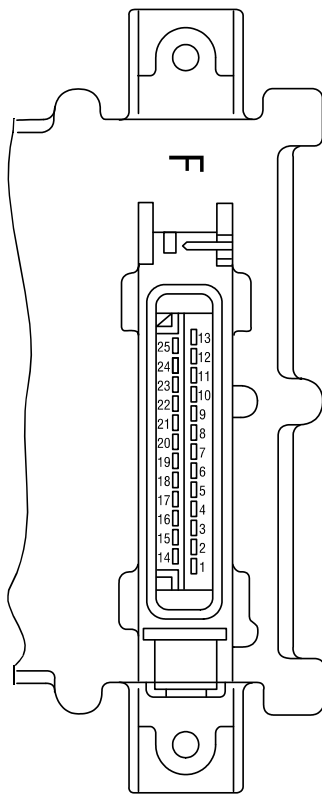

Pin-No.	Designation	Description
1	U Batt -	Negative pole at battery (clamp 31)
2	GND	Reference potential for signal
3	Output: digital 2	PWM or digital output, various functions
4	Input / output: DigInOut	Fault lamp and diagnostic button
5	Output: PWM 1/Dig 1	PWM or digital output, various functions
6	Multi-function input: DigIn 3	Genset applications/gear shift/motor brake
7	Input: digital 10/velocity	Speed signal (tacho input)
8	NC	Not occupied
9	NC	Not occupied
10	L-line	Serial ISO 9141 interface
11	K-line	Serial ISO 9141 interface
12	CAN high	Interface for CAN-Bus
13	CAN low	Interface for CAN-Bus
14	U Batt +	Positive pole for battery (clamp 15)
15	Output: digital 5	Digital output, various functions
16	Output: digital 7/Frequency	Frequency, PWM or digital output, various functions
17	Ground	Reference potential for signal at pins 18, 19 and 21
18	Input: digital 1 / PWM 1	PWM 1 or digital input 1, various functions
19	Multi-function input: DigIn 4	Performance curve switching/genset applications
20	Multi-function input: digital 8 / analog 3	Hand hand throttle/genset applications, Digital (8) or analog input (3)
21	Input: digital 2 / PWM 2	PWM 2 or digital input 2, various functions
22	Screen	Screening (e.g. for lines hand throttle or PWG)
23	GND	Reference potential for signal at pin 24
24	Input: analog 1 / digital 6	Analog input 1 (pedal value sensor, PWG) or digital input 6
25	+5 V REF	+5 V Reference voltage for signal at pin 24

Figure 3-79. EMR 2 Vehicle Plug Pin Identification

SECTION 3 - CHASSIS & TURNTABLE

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Zero error display	-	No faults	524287	31	No active faults present		
Revolutions / speed acquisition	01	Speed sensor 1	190	8	Sensor failure. Distance from gear too far. Additional fault impulses. Cable joint interrupted.	Governor in emergency operation (if sensor 2 available). Emergency switch-off (if sensor 2 not available or failed). Governor in emergency operation (with sensor 1). Emergency switch-off (if sensor 1 not available or failed).	Check distance. Check cable connection. Check sensor and replace if required.
	03	Speed sensor	84	8	Tacho failed. Additional fault impulses. Cable connection interrupted.	Governor in emergency operation.	Check cable connection and Tacho. Replace if required.
	04	Excess speed switch-off	190	0	Speed was/is in excess of limit.e. Check PID setting. Check rods. Check actuator and replace if required. Check cable to actuator (impulse on incorrect speed). Check No. of teeth. For vehicles check for possible thrust mode.	Engine stop.	Check parameter (21). Check speed settings.
	07	Charge air pressure	102	2			
Sensors	08	Oil pressure	100	2			
	09	Coolant temperature	110	2	Fault at corresponding sensor entry (e.g. short circuit or cable break).	With failure of the sensor, the associated monitoring function is de-activated.	Check sensor cable. Check sensor and replace if required. Check fault limits for sensor.
	10	Charge air temperature	105	2			
	11	Fuel temperature	174	2			

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-80. EMR2 Fault Codes - Sheet 1 of 5

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Functional fault warning	30	Oil pressure warning	100	1	Oil pressure below speed-dependent warning line characteristic	Fault message (disappears when oil pressure is again above recovery limit). After a delay time - fill limitation.	Check engine (oil level, oil pump). Check oil pressure sensor and cable. Check oil pressure warning line characteristic.
	31	Coolant temperature warning	110	0	Coolant temperature has exceeded warning level.	Fault message (disappears when coolant temperature again drops below recovery level). After a delay time - fill limitation.	Check coolant. Check coolant temperature sensor and cable.
	32	Charge air temperature warning	105	0	Charge air temperature has exceeded warning level.	Fault message (disappears when charge air temperature again drops below recovery level). After a delay time - fill limitation.	Check charge air. Check charge air-temperature sensor and cable.
	34	Coolant level warning	111	1	Switch input "Low coolant level" is active.	Fault message.	Check coolant level. Check coolant level sensor and cable.
	35	Speed warning (with thrust mode operation).	SID 190	14	revolutions was/is above (top) revolution speed limit. "Thrust mode" function is active.		Check parameters. Check speed settings.
	36	Fuel temperature warning	174	0	Fuel-temperature has exceeded warning level.	Fault message (disappears when fuel temperature again drops below recovery level).	Check fuel. Check fuel temperature sensor and cable.

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-81. EMR2 Fault Codes - Sheet 2 of 5

SECTION 3 - CHASSIS & TURNTABLE

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Functional fault, switch-off	42	Charge air temperature switch-off	105	0	Charge air temperature has exceeded switch-off limit.	Emergency stop	Check charge air. Check charge air-temperature sensor and cable. Check switch-off limit.
	44	Coolant level switch-off	111	1	Switch input "Low coolant level" is active.	Emergency stop. Start lock.	Check coolant level. Check coolant level sensor and cable.
Actuator	50	Feedback	SID 24	12	Actuator not connected. Fault in actuator confirmation.	Emergency switch-off. Actuator cannot be operated.	Check actuator, replace if required. Check cable, check fault limits for "Confirmation".
	52	Reference feedback	SID 24	13			Check actuator, replace if required. Check cable, check fault limits for "Rifeness confirmation".
	53	Control travel difference	SID 23	7	Injection pump/actuator jammed or not connected. Difference between nominal/actual control travel is > 10 % of the overall control path.	Fault message (disappears when difference is < 10 %).	Check actuator/actuator rods / injection pump, replace if required. Check actuator cable.
	59	Auto calibration BOSCH-EDC pumps faulty operation	SID 23	13	No automatic actuator equalization possible. Incorrect input of the actuator reference values.	Engine stop / start lock. Governor cannot be taken into use. EDC actuator calibration required.	Check actuator and replaced if required. Check feedback cable. Check fault limits and reference values of the feedback. Program the fault limits for feedback, save the values. Switch ignition off and on again. Check again. If faulty inform DEUTZ-Service and carry out automatic equalization again. Set fault limits again.

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-82. EMR2 Fault Codes - Sheet 3 of 5

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help
Hardware inputs/outputs	60	Digital output 3 (Switch-off solenoid, pin M 2)	SID 51	2	Fault (short circuit / cable break) at digital output.	Driver level is switched off.	Check cable of digital output (cable break or short circuit).
				2		Fault message.	
	62	Digital output 6, pin M 7	SID 60	6			
	63	Excess voltage switch-off solenoid	SID 51	11			
	67	Error Hand Setp1	91	2			
	68	Error CAN Setp1	898				
Communication	70	CAN-Bus controller	SID 231	12	CAN-controller for CAN-bus is faulty. Fault removal despite re-initialising continuously not possible	Application-dependent.	Check CAN connection, terminating resistor (see Chapter 12.4), Check control unit.
	71	CAN interface SAE J 1939	SID 231	9	Overflow in input buffer or a transmission cannot be placed on the bus.		Check CAN connection, cable connection. Check sensor and replace if required.
	74	Cable break, short circuit or bus-error	SID 231	14			
Memory	76	Parameter programming (write EEPROM)	SID 253	12	Fault in parameter programming in the governor fixed value memory.		Switch ignition off and on again. Check again. If faulty inform DEUTZ Service
	77	Cyclic program test	SID 240	12	Constant monitoring of program memory shows error (so-called "Flash-test").	Emergency switch-off. engine cannot be started.	Note values of parameters (3895 and 3896). Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
	78	Cyclic RAM test	SID 254	2	Constant monitoring of working memory shows error.		

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-83. EMR2 Fault Codes - Sheet 4 of 5

Fault group	Fault no. (in SERDIA)	Fault locality/ Fault description	SPN	FMI	Cause	Remarks	Help	
Control unit hardware	80	Power supply (Actuator)	SID 254	2	Power supply for actuator not in the permissible range.	Fault message (disappears when power again in the normal range).	Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.	
	83	Reference voltage 1	SID 254	2	Reference voltage for actuator not in the permissible range.	Fault message (disappears when power again in the normal range). Auxiliary value 5 V	Check voltage supply. Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.	
	84	Reference voltage 2	SID 254	2				
	85	Reference voltage 4	SID 254	2				
	86	Internal temperature	171	12	Internal temperature for control unit not in permissible range.	Fault message (disappears when power again in the normal range).	Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.	
	87	Atmospheric pressure	108	12	Atmospheric pressure not in permissible range.	Fault message (disappears when power again in normal range). Atmospheric pressure monitoring function de-activated.		
	Program logic	90	Parameter fault (EEPROM retrieval or checksum faulty).	SID 253	2	No data found or checksum of data is faulty (note: fault only occurs during setting of parameter / saving or reset.).	Engine cannot be started.	Check data for correct settings. Save parameters. Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
		93	Stack overflow	SID 240	2	Internal calculation fault (so-called "Stack overflow" fault).	Emergency switch-off. Engine cannot be started.	Note parameters (3897 and 3898). Switch ignition off and on again. Check again. If faulty inform DEUTZ Service.
94		Internal fault	SID 254	2				

NOTE: SID is equal to 512. To get SPN #, add 512 + number. For example, SID 254 would be 512+254 or an SPN of 766.

Figure 3-84. EMR2 Fault Codes - Sheet 5 of 5

3.23 GM ENGINE GENERAL MAINTENANCE

Maintenance of the Drive Belt

The serpentine drive belt utilizes a spring loaded tensioner which keeps the belt properly adjusted. The drive belt is an integral part of the cooling and charging systems and should be inspected frequently.

When inspecting the belts check for:

- Cracks or breaks
- Chunking of the belt
- Splits
- Material hanging from the belt
- Glazing and hardening
- Damaged or improperly aligned pulleys
- Improperly performing tensioner

Check the belt tensioner by pressing down on the midway point of the longest stretch between pulleys. The belt should not depress beyond 1/2 in. (13 mm). If the depression is more than allowable adjust the tension.

NOTICE

THE ENGINE MANUFACTURER DOES NOT RECOMMEND THE USE OF "BELT DRESSING" OR "ANTI SLIPPING AGENTS" ON THE DRIVE BELT.

Engine Electrical System Maintenance

The engine electrical system incorporates computers and microprocessors to control the engine ignition, fuel control, and emissions. Due to the sensitivity of the computers to good electrical connections periodic inspection of the electrical wiring is necessary. When inspecting the electrical system use the following:

- Check and clean the battery terminal connections and insure the connections are tight.
- Check the battery for any cracks or damage to the case.
- Check the Positive and Negative battery cables for any corrosion build up, rubbing or chafing, check connection on the chassis to insure they are tight.
- Check the entire engine wire harness for rubbing chafing, cuts or damaged connections, repair if necessary.
- Check all wire harness connectors to insure they are fully seated and locked.

- Check ignition coil and spark plug cables for hardening, cracking, chafing, separation, split boot covers and proper fit.
- Replace spark plugs at the proper intervals as prescribed in the engine manufacturer's manual.
- Check to make sure all electrical components are fitted securely.
- Check the ground and platform control stations to insure all warning indicator lights are functioning.

Checking/Filling Engine Oil Level

NOTICE

AN OVERFILLED CRANKCASE (OIL LEVEL OVER THE SPECIFIED FULL MARK) CAN CAUSE AN OIL LEAK, A FLUCTUATION OR DROP IN THE OIL PRESSURE, AND ROCKER ARM "CLATTER" IN THE ENGINE.

NOTICE

CARE MUST BE TAKEN WHEN CHECKING THE ENGINE OIL LEVEL. OIL LEVEL MUST BE MAINTAINED BETWEEN THE "ADD" MARK AND "FULL" MARK ON THE DIPSTICK.

To ensure that you are not getting a false reading, make sure the following steps are taken to before check the oil level.

1. Stop the engine if in use.
2. Allow sufficient time (approximately 5 minutes) for the oil to drain back into the oil pan.
3. Remove the dipstick. Wipe with a clean cloth or paper towel and reinstall. Push the dipstick all the way into the dipstick tube.
4. Remove the dipstick and note the oil level.
5. Oil level must be between the "FULL" and "ADD" marks.

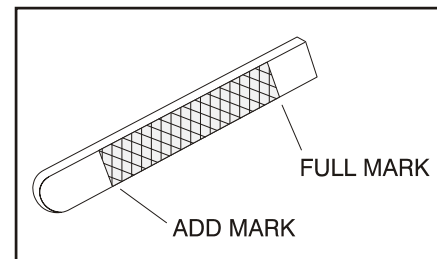


Figure 3-85. Engine Oil Dip Stick

6. If the oil level is below the "ADD" mark, proceed to Step 7 and 8 and reinstall the dipstick into the dipstick tube.
7. Remove the oil filter cap from the valve rocker arm cover.
8. Add the required amount of oil to bring the level up to but not over "FULL" mark on the dipstick.
9. Reinstall the oil fill cap to the valve rocker cover and wipe away any excess oil.

Changing the Engine Oil

NOTICE

WHEN CHANGING THE OIL, ALWAYS CHANGE THE OIL FILTER. CHANGE OIL WHEN THE ENGINE IS WARM FROM OPERATION AS THE OILS WILL FLOW FREELY AND CARRY AWAY MORE IMPURITIES.

To change the oil use the following steps:

1. Start the engine and run until it reaches normal operating temperature.
2. Stop the engine.
3. Remove the drain plug and allow the oil to drain.
4. Remove and discard the oil filter and its sealing ring.
5. Coat the sealing ring on the filter with clean engine oil and wipe the sealing surface on the filter mounting surface to remove any dust, dirt and debris. Tighten the filter securely (follow the filter manufacturers instructions). Do not over tighten.
6. Check the sealing ring on drain plug for any damage, replace if necessary, wipe the plug with a clean rag, and wipe the sealing surface on the pan and reinstall the pan plug. Do not over tighten.
7. Fill the crankcase with oil.
8. Start the engine and check for oil leaks.
9. Stop the engine and check the oil level to insure the oil level is at "FULL".
10. Dispose of the oil and filter in a safe manner.

Coolant Fill Procedure - Dual Fuel Engine

NOTICE

DAMAGE TO THE ENGINE COULD OCCUR IF NOT PROPERLY FILLED WITH COOLANT. LPG FUELED ENGINES ARE MOST PRONE TO CREATING AN AIR LOCK DURING A COOLANT FILL OPERATION DUE TO THE ELECTRONIC PRESSURE REGULATOR (EPR) BEING THE HIGHEST POINT IN THE COOLING SYSTEM. AN EPR THAT APPEARS TO HAVE FROST FORMING ON IT IS A SIGN THAT THE ENGINE COOLING SYSTEM CONTAINS AIR. THE APPEARANCE AND TEMPERATURE OF THE EPR SHOULD BE MONITORED DURING THE COOLANT FILL OPERATION. A WARM EPR IS AN INDICATION THAT THE COOLING SYSTEM IS PROPERLY FILLED AND FUNCTIONING.


CAUTION

MAKE SURE ENGINE IS COOL BEFORE PERFORMING ANY MAINTENANCE WORK.

1. Loosen the worm gear clamp on the coolant line running into the EPR as shown below and remove the hose from the EPR. Place a rag under the hose to prevent coolant from running onto the engine/machine.



2. Remove the radiator cap. Fill the radiator with coolant until coolant starts to appear from the previously removed hose at the EPR. Reinstall the hose back onto the EPR and continue to fill radiator with coolant.

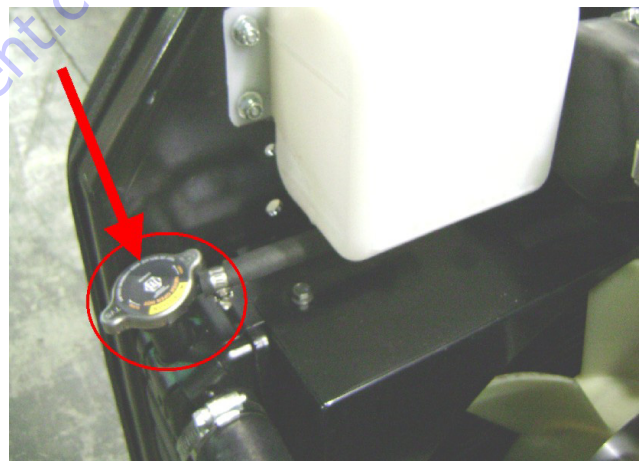

3. With the radiator cap still removed, start the engine and run until the thermostat opens. The thermostat opens at 170° F (77° C), which can be checked using the JLG handheld analyzer.

NOTICE

WHILE ENGINE IS RUNNING, AIR AND/OR STEAM MAY BE PRESENT COMING FROM THE RADIATOR. THIS IS NORMAL.

- After running the engine for 5 minutes after it has reached operating temperature, shut the engine off and continue to step 5.

⚠ CAUTION

WITH THE ENGINE RUNNING OR WHEN SHUTTING OFF THE ENGINE, SOME HEATED COOLANT MAY SPILL OUT DUE TO AIR "BURPING" OUT OF THE SYSTEM WITH THE RADIATOR CAP OFF.

- Next, verify that the 2 coolant hoses on the EPR are warm. If they are not warm repeat step 3 and 4, otherwise continue to step 6.

NOTICE

A PROPERLY PURGED COOLING SYSTEM WILL YIELD A WARM UPPER RADIATOR HOSE AND A WARM EPR HOSE. IF THE UPPER RADIATOR HOSE AND/OR EPR HOSE ARE NOT WARM TO THE TOUCH AFTER THE ENGINE HAS RUN FOR 5-8 MINUTES AFTER REACHING OPERATING TEMPERATURE, THE SYSTEM MAY STILL CONTAIN AIR. IT MAY BE NECESSARY TO REPEAT THE ABOVE STEPS.

- Fill radiator with coolant as needed and install the radiator cap. Next, remove the cap off the coolant recovery bottle and fill just below the HOT FULL line and reinstall the caps.



3.24 GM ENGINE DUAL FUEL SYSTEM

NOTE: +20° F (-6.6° C) is the low temperature limit for LP gas, for both starting and operation. This applies to all LP gas powered engines.

The Dual Fuel system allows the operator to operate the vehicle on either gasoline or LPG by positioning a selector switch in the operator's platform. When the operator places the selector switch in the gasoline mode the gasoline fuel pump is energized. While in the gasoline mode the LPG fuel lock-off is isolated and will not energize. In addition the gasoline injector circuit is enabled and injector pulses are provided to each injector and the ECM calibration for gasoline is also enabled. When the operator selects the LPG mode the Low Pressure LPG lock-off is energized and fuel from the LPG tank flows to the Electronic Pressure Regulator (EPR). The EPR receives an electronic signal to position the secondary lever for the start or run positions and when the engine begins to crank the mixer air valve will rise and fuel will begin flowing to engine. During this mode the gasoline fuel pump is isolated and will not be activated. The primary components of the gasoline dual fuel system are the gasoline tank, electric fuel pump and filter, fuel supply line, injector rail and injectors and the fuel pressure regulator. The primary components of the LPG dual fuel system are the LPG fuel tank, in-fuel filter, LPG Low Pressure lock-off, Electronic Pressure Regulator (EPR) and the fuel mixer module. The LPG fuel system operates at pressures which range from 14.0 in. (355.60 mm) of water column up to 312 psi (21.5 bar).

Components which are shared by both systems include the Electronic Throttle Control and the ECM. The ECM contains a dual calibration; one controls the gasoline fuel system during gasoline operation and one controls the LPG fuel system during LPG operation.

Fuel Filter

Propane fuel like all other motor fuels is subject to contamination from outside sources. Refueling of the equipment's tank and removal of the tank from the equipment can inadvertently introduce dirt and other foreign matter into the fuel system. It is therefore necessary to filter the fuel prior to entering the fuel system components downstream of the tank. An inline fuel filter has been installed in the fuel system to remove the dirt and foreign matter from the fuel. The inline filter is replaceable as a unit only. Maintenance of the filter is critical to proper operation of the fuel system and should be replaced as Section 1. In severe operating condition more frequent replacement of the filter may be necessary.

Electric Lock Off

The Electric Lock Off device is an integrated assembly. When energized the solenoid opens the valve and allows the Propane fuel to flow through the device. The valve opens during cranking and run cycles of the engine. The lock off supply voltage is controlled by the engine control module (ECM).


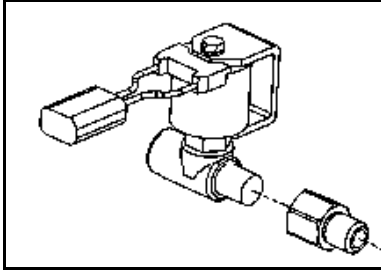


Figure 3-86. Electric Fuel Lock Off

EPR Assembly

The EPR assembly is a combination Low Pressure Regulator and a Voice Coil Assembly. The Voice coil is an electronic actuator which is controlled by an internal microprocessor. The microprocessor provides output data to the ECM and receives input data over a CAN BUS connection. The internal microprocessor receives electrical signals from the Fuel Pressure Sensor FPS and the Fuel Temperature Pressure FTP and communicates the data to the ECM. The ECM uses the FPS and FTP data to calculate the location of the secondary lever in the LPR and sends that data back to the EPR via the CAN BUS. The internal microprocessor in the EPR will then output a signal, which causes the voice coil to move and position the secondary lever to the correct location.

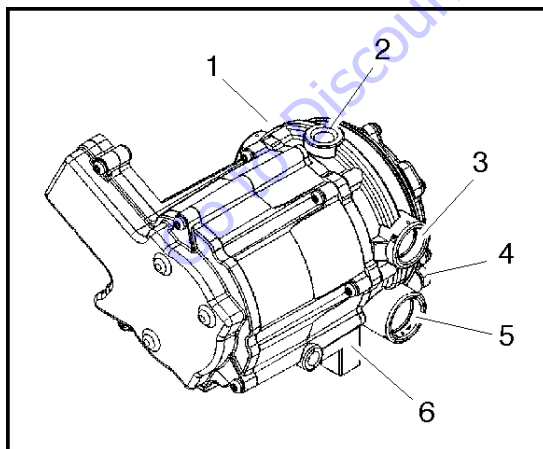

- | | |
|-------------------------------|------------------------|
| 1. Pressure Regulator Section | 4. Primary Test Port |
| 2. Fuel Inlet | 5. Secondary Test Port |
| 3. Coolant Passage | 6. Voice Coil Section |

Figure 3-87. EPR Assembly

Low Pressure Regulator (LPR)

The LPR is a combination vaporizer, pressure regulating device. The LPR is a negative pressure, two stage regulator that is normally closed when the engine is not running. When the engine is cranking or running, a partial vacuum is created in the fuel line which connects the regulator to the mixer. This partial vacuum opens the regulator permitting fuel to flow to the mixer.

Propane fuel enters the primary port of the LPR and passes through the primary jet and into the primary/ exchanger chamber. As the propane passes through the heat exchanger the fuel expands and creates pressure inside the chamber. The pressure rises as the fuel expands when the pressure rises above 1.5 psi (10.34 kpa), sufficient pressure is exerted on the primary diaphragm to cause the diaphragm plate to pivot and press against the primary valve pin thus closing off the flow of fuel. This action causes the flow of fuel into the regulator to be regulated.

When the engine is cranking, sufficient vacuum will be introduced into the secondary chamber from the mixer drawing the secondary diaphragm down onto the spring loaded lever and opening the secondary valve allowing vaporized fuel to pass to the mixer. This mechanical action in conjunction with the EPR reactions causes the downward action on the secondary lever causing it to open wider allowing more fuel to flow to the mixer.

⚠ WARNING

THE VOICE COIL SECTION OF THE EPR ASSEMBLY IS AN EMISSIONS CONTROL DEVICE AND CANNOT BE REBUILT. IF THE COIL ASSEMBLY FAILS TO OPERATE PROPERLY, REPLACE IT WITH AN OEM REPLACEMENT PART ONLY.

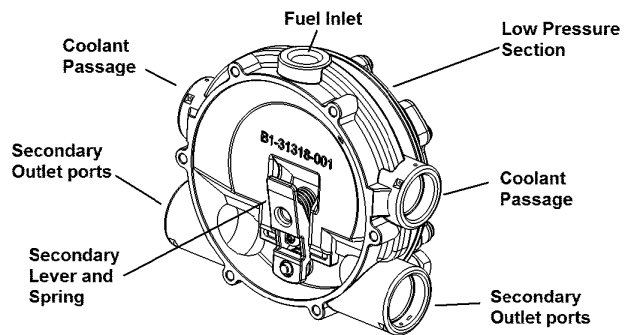


Figure 3-88. Low Pressure Regulators

Air Fuel Mixer

The air valve mixer is an air-fuel metering device and is completely self-contained. The mixer is an air valve design, utilizing a relatively constant pressure drop to draw fuel into the mixer from cranking to full load. The mixer is mounted in the air stream ahead of the throttle control device.

When the engine begins to crank, it draws in air with the air valve covering the inlet, negative pressure begins to build. This negative pressure signal is communicated to the top of the air valve chamber through 4 vacuum ports in the air valve assembly. A pressure/force imbalance begins to build across the air valve diaphragm between the air valve vacuum chamber and the atmospheric pressure below the diaphragm. The air valve vacuum spring is calibrated to generate from 4.0 in. (101.6 mm) of water column at start to as high as 14.0 in. (355.60 mm) of water column at full throttle. The vacuum being created is referred to as Air Valve Vacuum (AVV). As the air valve vacuum reaches 4.0 in. (101.6 mm) of water column, the air valve begins to lift against the air valve spring. The amount of AVV generated is a direct result of the throttle position. At low engine speed the air valve vacuum is low and the air valve position is low thus creating a small venturi for the fuel to flow. As the engine speed increase the AVV increases and the air valve is lifted higher thus creating a much larger venturi. This air valve vacuum is communicated from the mixer venturi to the LPR secondary chamber via the low pressure fuel supply hose. As the AVV increases in the secondary chamber the secondary diaphragm is drawn further down forcing the secondary valve lever to open wider.

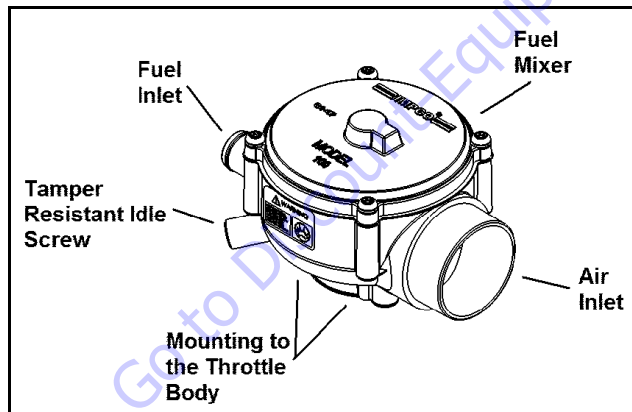


Figure 3-89. Air Fuel Mixer

Electronic Throttle Control (ETC)

Engine speed and load control is maintained by an ETC device. Speed and load control are determined by the ECM. Defaults programmed into the ECM software and throttle position sensors allow the ECM to maintain safe operating control over the engine. The Electronic Throttle Control device or "throttle body assembly" is connected to the intake manifold of the engine. The electronic throttle control device utilizes an electric motor connected to the throttle shaft. When the engine is running electrical signals are sent from the equipment controls to the engine ECM when the operator depresses an equipment function switch. The ECM then sends an electrical signal to the motor on the electronic throttle control to increase or decrease the angle of the throttle blade thus increasing or decreasing the air/fuel flow to the engine.

The electronic throttle control device also incorporates two internal Throttle Position Sensors (TPS) which provide output signals to the ECM as to the location of the throttle shaft and blade. The TPS information is used by the ECM to correct speed and load control as well as emission control.

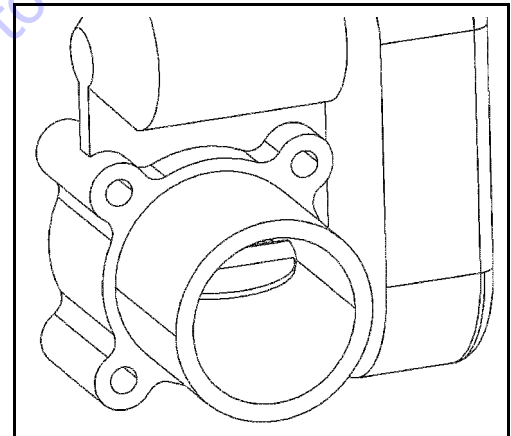


Figure 3-90. ETC throttle control device

Engine Control Module

To obtain maximum effect from the catalyst and accurate control of the air fuel ratio the emission certified engine is equipped with an onboard computer or Engine Control Unit (ECM). The ECM is a 32 bit controller which receives input data from sensors fitted to the engine and fuel system and then outputs various signals to control engine operation.

One specific function of the controller is to maintain "closed loop fuel control". Closed loop fuel control is accomplished when the exhaust gas oxygen sensor (HEGO) mounted in the exhaust system sends a voltage signal to the controller. The controller then calculates any correction that may need to be made to the air fuel ratio. The controller then outputs signals to the EPR to correct the amount of fuel being supplied to the mixer. At the same time the ECM may correct the throttle blade position to correct speed and load of the engine.

The controller also performs diagnostic functions on the fuel system and notifies the operator of malfunctions by turning on a Malfunction Indicator Light (MIL) mounted in the Ground Control Station and the Platform Control Station. Malfunctions in the system are identified by a Diagnostic Code number. In addition to notifying the operator of the malfunction in the system the controller also stores the information about the malfunction in its memory.

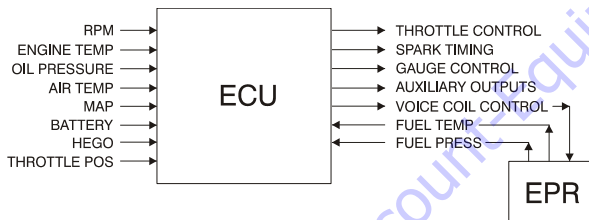


Figure 3-91. LPG Engine Control Unit (ECM)

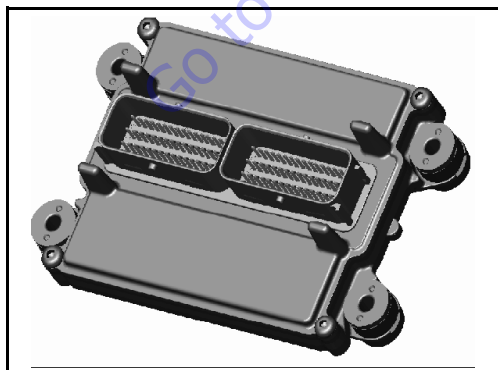


Figure 3-92. ECM Assembly

Heated Exhaust Gas Oxygen Sensor

There are two Heated Exhaust Gas Oxygen Sensors (HEGO). The first HEGO is mounted in the exhaust system downstream of the engine. It is used to measure the amount of oxygen present in the exhaust stream and communicate that to the ECM via an electrical signal. The amount of oxygen present in the exhaust stream indicates whether the fuel/air ratio is too rich or too lean. If the HEGO sensor signal indicates that the exhaust stream is too rich the ECM will decrease or lean the fuel mixture during engine operation, if the mixture is too lean the ECM will richen the mixture. The ECM continuously monitors the HEGO sensor output. If a rich or lean condition is present for an extended period of time, and the ECM cannot correct the condition, the ECM will set a diagnostic code and turn on the MIL light in control box.

The second HEGO is mounted in the exhaust system after the muffler. It measures the amount of oxygen in the exhaust system after the catalyst treatment has been completed in the muffler. If the ECM detects that the catalytic action in the muffler is not sufficient and fuel correction cannot correct the malfunction the MIL light is illuminated in the control box and a DTC code will be stored in the computer.

NOTICE

THE HEATED EXHAUST GAS OXYGEN SENSOR IS AN EMISSION CONTROL DEVICE. IF THE HEGO FAILS TO OPERATE, REPLACE IT WITH AN OEM REPLACEMENT PART. THE HEGO SENSOR IS SENSITIVE TO SILICONE OR SILICONE BASED PRODUCTS AND CAN BECOME CONTAMINATED. AVOID USING SILICONE SEALERS OR HOSES TREATED WITH SILICONE LUBRICANTS IN THE AIR STREAM OR FUEL LINES.



Figure 3-93. Heated Exhaust Gas Oxygen Sensor (HEGO)

Gasoline Multi Point Fuel Injection System (MPFI)

The primary components of the Gasoline Multi Point Fuel Injection (MPFI) fuel system are the fuel tank, electric fuel pump, fuel pressure and temperature sensor manifold, fuel filter and fuel rail.

Gasoline Fuel Pump

The Gasoline is stored as a liquid in the fuel tank and is drawn into the fuel system by an electric fuel pump. The fuel pump will receive a signal from the ECM to prime the fuel system for approximately 2 seconds prior to start. Priming of the fuel system provides for a quicker start, when the engine begins to crank.

Gasoline Pressure And Temperature Sensor Manifold

This engine is equipped with a fuel injector rail that does not have a pressure regulator or a return circuit to the fuel tank. Fuel pressure for this engine is regulated by the engine's ECM. The ECM receives fuel pressure and temperature feedback from the gasoline fuel sensor manifold and uses this information to control the ground side of the fuel pump. Fuel pressure is regulated by the ECM pulse width modulating (PWM) the fuel pump. The fuel pressure and temperature sensor manifold has a return or "bleed" circuit that connects back to the fuel tank. This circuit is used to bleed off any vapor that develops in the line and return a small amount of fuel to the tank. The fuel comes from the fuel tank and passes through the fuel pump. Fuel exits the fuel pump, passes through the filter and then enters the fuel pressure and temperature manifold assembly. Fuel flows through the feed circuit and is delivered to the fuel injector rail. Fuel that enters the bleed circuits through the bypass valve in the manifold is returned to the fuel tank.

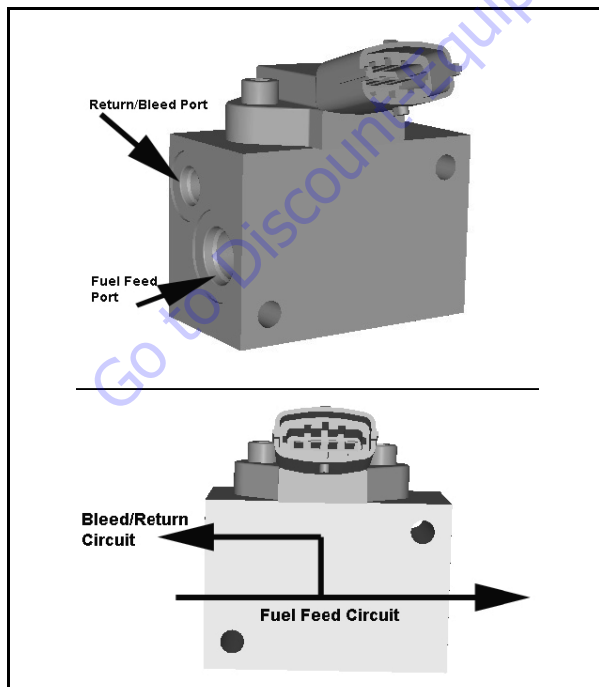


Figure 3-94. Gasoline Fuel Pressure and Temperature Manifold Assembly

Fuel Filter

After the fuel is drawn into the fuel pump, the fuel flows through the gasoline fuel filter. The fuel filter will trap small particles as the fuel passes through the filter to remove debris and prevents the fuel pressure and temperature manifold and fuel injectors from becoming damaged. Maintenance of the fuel filter is required as indicated in Section 1.

Fuel Injector Rail

Fuel flows from the fuel pressure and temperature manifold assembly to the fuel rails where the fuel is delivered to the fuel injectors. The fuel rail also contains a Schrader valve which is utilized to test the regulated pressure of the fuel system.

Fuel Injector

The fuel supply is maintained on the top of the injector from the injector rail. The injector is fed a "pulse" signal through the wire harness which causes the injector to open. During regular operating conditions the ECM controls the opening and duration of opening of the injector. During lower RPM operation the injector signals or "pulses" are less frequent than when the engine is operating at higher RPMs. The engine has been calibrated to deliver the precise amount of fuel for optimum performance and emission control.

3.25 GM ENGINE FUEL SYSTEM REPAIR

Propane Fuel System Pressure Relief

⚠ CAUTION

THE PROPANE FUEL SYSTEM OPERATES AT PRESSURES UP TO 312 PSI (21.5 BAR). TO MINIMIZE THE RISK OF FIRE AND PERSONAL INJURY, RELIEVE THE PROPANE FUEL SYSTEM PRESSURE (WHERE APPLICABLE) BEFORE SERVICING THE PROPANE FUEL SYSTEM COMPONENTS.

To relieve propane fuel system pressure:

1. Close the manual shut-off valve on the propane fuel tank.
2. Start and run the vehicle until the engine stalls.
3. Turn the ignition switch OFF.

NOTICE

RESIDUAL VAPOR PRESSURE WILL BE PRESENT IN THE FUEL SYSTEM. ENSURE THE WORK AREA IS WELL VENTILATED BEFORE DISCONNECTING ANY FUEL LINE.

Propane Fuel System Leak Test


⚠ CAUTION

NEVER USE AN OPEN FLAME OF ANY TYPE TO CHECK FOR PROPANE FUEL SYSTEM LEAKS.

Always inspect the propane fuel system for leaks after performing service. Check for leaks at the fittings of the serviced or replaced component. Use a commercially available liquid leak detector or an electronic leak detector. When using both methods, use the electronic leak detector first to avoid contamination by the liquid leak detector.

Go to Discount-Equipment.com to order your parts

Propane Fuel Filter Replacement

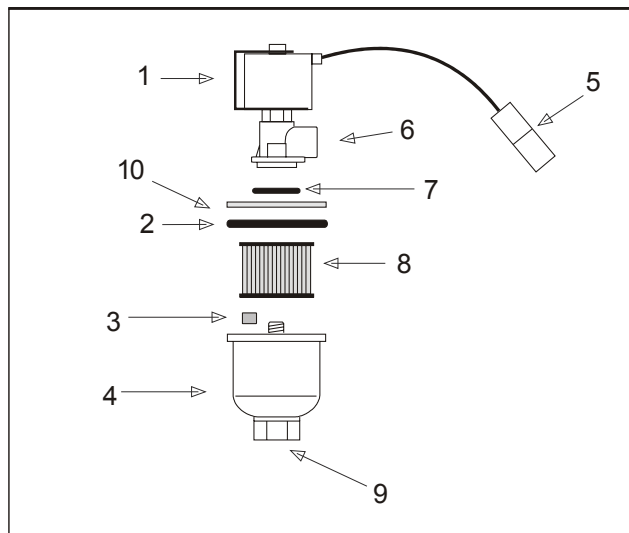

- | | |
|-------------------------------|----------------|
| 1. Electric Lock Off Solenoid | 6. Fuel Outlet |
| 2. Housing Seal | 7. O-ring |
| 3. Filter Magnet | 8. Filter |
| 4. Filter Housing | 9. Fuel Inlet |
| 5. Electrical Connector | 10. Ring |

Figure 3-95. Filter Lock Assembly

INSTALLATION

NOTICE


BE SURE TO REINSTALL THE FILTER MAGNET INTO THE HOUSING BEFORE INSTALLING NEW SEAL

1. Install the mounting plate to lock off o-ring seal.
2. If equipped, install the retaining bolt seal.
3. Install the housing seal.
4. Drop the magnet into the bottom of the filter housing.
5. Install the filter into the housing.
6. If equipped, install the retaining bolt into the filter housing.
7. Install the filter up to the bottom of the electric lock off.
8. Tighten the filter bowl retainer to 106 in. lbs. (12 Nm).
9. Open manual shut-off valve. Start the vehicle and leak check the propane fuel system at each serviced fitting. Refer to Propane Fuel System Leak Test.

REMOVAL

1. Relieve the propane fuel system pressure. Refer to Propane Fuel System Pressure Relief.
2. Disconnect the negative battery cable.
3. Slowly loosen the Filter housing and remove it.
4. Pull the filter housing from the Electric lock off assembly.
5. Remove the filter from the housing.
6. Locate Filter magnet and remove it.
7. Remove and discard the housing seal.
8. If equipped, remove and discard the retaining bolt seal.
9. Remove and discard mounting plate to lock off O-ring seal.

Electronic Pressure Regulator (EPR) Assembly Replacement

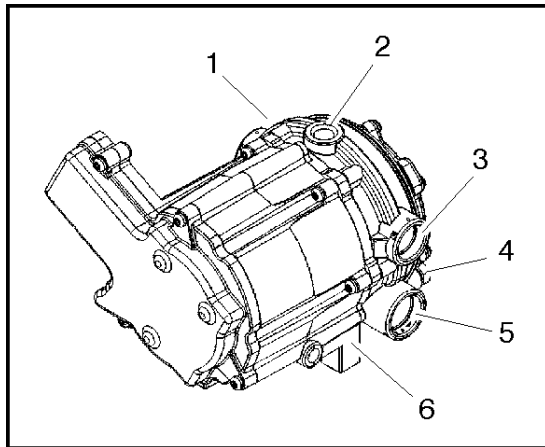

- | | |
|-------------------------------|------------------------|
| 1. Pressure Regulator Section | 4. Primary Test Port |
| 2. Fuel Inlet | 5. Secondary Test Port |
| 3. Coolant Passage | 6. Voice Coil Section |

Figure 3-96. EPR Assembly

The EPR assembly is made up of two separate components. The Voice Coil Section is not serviceable and can only be replaced as an assembly. The pressure regulator section is serviceable and will be detailed in this section.

REMOVAL

1. Relieve the propane fuel system pressure. Refer to Propane Fuel System Pressure Relief.
2. Disconnect the negative battery cable.
3. Slowly remove the fuel inlet fitting at the Electric Lock Off.

NOTE: Residual vapor pressure will be present in the fuel system.

4. Disconnect the electrical connector to the Electric Lock off.
5. Remove the Electric Lock Off from the regulator.
6. Remove the lock pin from the vapor fitting on the regulator housing and remove the fitting and hose and retain the pin.
7. Remove the lock pin from the pressure sensor on the regulator housing and remove the Sensor and retain the pin.
8. Using a clamp pliers pinch off the hoses on the coolant lines to the regulator.
9. Remove the lock pin from both the water fittings on the regulator housing and remove the fittings and hoses and retain the pin.
10. Disconnect the EPR electrical connector.

11. Remove the (3) three nuts from the EPR isolators and the EPR mounting bracket.
12. Remove the EPR from the bracket.
13. Remove the (3) three mounting isolators.

INSTALLATION

NOTICE

DO NOT USE TEFLON TAPE ON ANY FUEL FITTING. USE A LIQUID PIPE THREAD SEALANT WHEN INSTALLING FITTINGS.

CHECK ALL THE O-RINGS ON THE VAPOR AND WATER FITTINGS FOR ANY DAMAGE REPLACE IF NECESSARY.

LUBE ALL THE O-RINGS WITH AN O-RING LUBE BEFORE INSTALLING.

1. Install the three (3) rubber isolators to the bottom of the EPR
2. Install the EPR assembly to the bracket and tighten the retaining nuts.

NOTE: Do not over tighten the isolators and cause a separation of the isolators.

3. Install the fuel temperature sensor into the regulator opening and lock in place with the locking pin, connect the electrical connector.
4. Insert the fuel vapor line and fitting into the regulator port and lock in place with the locking pin.
5. Install both the water hoses and fittings into the regulator and lock in place with the locking pin remove the clamp pliers from the hoses.
6. Install the electric lock off into the regulator inlet and tighten into proper location, connect the electrical connector.
7. Connect the fuel supply line and tighten until fully seated.
8. Connect the EPR electrical connector.
9. Open the manual valve.
10. Start the vehicle and leak check the propane fuel system at each serviced fitting Refer to Propane Fuel System Leak Test.

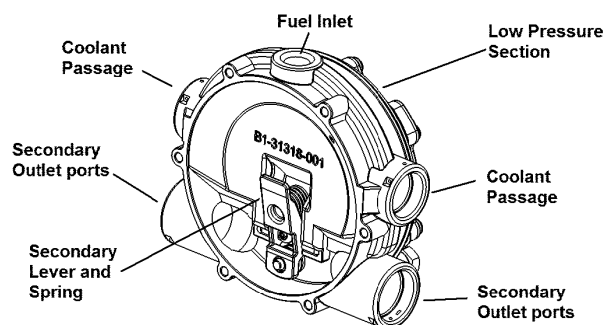


Figure 3-97. Pressure Regulator Section